

ORDNANCE SUPPLY CATALOG

Group G

Technical Reference TM 9-775

(Standard Nomenclature List No. G-214)

LIST OF ALL PARTS

for

Vehicle, Landing, Tracked (Armored)

MK I; LVT (A) (1) (37mm. Gun)

Vehicle, Landing, Tracked (Armored)

MK IV; LVT (A) (4) (75mm. Howitzer)

Distribution: See inside front cover.

©TM-WW2.com

HEADQUARTERS, ARMY SERVICE FORCES, 10 JANUARY 1945

ORDNANCE SUPPLY CATALOG

Group G

Technical Reference TM 9-775

(Standard Nomenclature List No. G-214)

List of All Parts

for

Vehicle, Landing, Tracked (Armored)

Mk I; LVT (A) (1) (37mm. GUN)

Vehicle, Landing, Tracked (Armored)

Mk IV; LVT (A) (4) (75mm. Howitzer)

Distribution: See inside front cover.

HEADQUARTERS, ARMY SERVICE FORCES, 10 JANUARY 1945

QUICK REFERENCE INDEX

GENERAL INFORMATION

01 ENGINE

02 CLUTCH

03 FUEL SYSTEM

04 EXHAUST SYSTEM

05 COOLING SYSTEM

06 ELECTRICAL

07 TRANSMISSION

09 PROPELLER SHAFT & UNIVERSAL JOINTS

10 DIFFERENTIAL AND FINAL DRIVE

13 TRACK SUSPENSION

15 FRAME AND BRACKETS

15A CONTROLS

17 FENDERS, SPLASH DEFLECTORS & TRACK COVERS

18 HULL

19 TURRET

20 POWER TAKE-OFF

21 GUARDS

22 MISCELLANEOUS HULL & ACCESSORIES

23 GENERAL USE STANDARDIZED PARTS

24 FIRE EXTINGUISHER SYSTEM

26 RADIO and INTERNAL COMMUNICATION SYSTEM

MAINTENANCE PARTS FOR ARMAMENT, SIGHTING AND FIRE CONTROL EQUIPMENT

INDEXES

©TM-WW2 GENERAL INFORMATION

For full information relative to Standard Nomenclature Lists, the procedure followed and principles employed in the compilation, together with the purposes and uses thereof, see the Introduction to the Ordnance Catalog (ORD 1 IOC), the Ordnance Provision System Regulations (OPSR) and the Ordnance Publications for Supply Index (ORD 2 OPSI).

The Standard Nomenclature Lists for major items consists of three main parts: The Organizational Spare Parts and Equipment (ORD 7), the Higher Echelon Spare Parts and Equipment (Addendum) (ORD 8), and the List of All Parts (ORD 9). These three subdivisions may be published separately or may be combined. In this publication the ORD 9 is printed separately.

SCOPE

This List of All Parts contains information for the identification of all parts which are considered items of service for the vehicles listed below:

VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1) (37 MM. GUN) VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4) (75 MM. HOWITZER)

THIS PUBLICATION IS NOT TO BE USED FOR THE REQUISITIONING OF PARTS. IT IS TO BE USED ONLY FOR INFORMATION AND IDENTIFICATION.

FEATURES OF THIS PUBLICATION

The following paragraphs explain important features of this catalog.

STANDARDIZED GOVERNMENT GROUPING:

The parts listed in the catalog are divided into groups and sub-groups in accordance with the Standardized Government Grouping. This division into groups facilitates the location and identification of each part. The Standardized Government Grouping as adapted to this catalog is outlined on pages 8, 9 and 10.

ILLUSTRATIONS:

Each illustration is identified by a figure number and title, and an index of all figures and the pages on which they appear will be found in the back of the book. Items appearing on the illustrations are identified in the accompanying legend by noun, number and group.

COMPONENTS OF KITS, SETS AND ASSEMBLIES:

Whenever any doubt might exist as to what items are included as components of kits, sets or assemblies, an explanatory note or complete listing of such components is shown.

ATTACHING PARTS:

Attaching parts, such as bolts, nuts, rivets, screws, washers, etc., are indented immediately under the item which they attach. Whenever two similar items, having the same attaching parts, such as right and left fenders, are listed, they are placed one immediately following the other and the attaching parts for both are covered by a single listing under the second part. The quantities shown for the attaching parts are those necessary to attach both items.

BULK MATERIAL:

A complete resume of bulk materials will be found in Group 23.

Indexes are listed in the back of the book in the following sequence: Illustrations, Alphabetical, Numerical (Ordnance Drawing Numbers, Manufacturers' and Vendors' Part Numbers, and Official Stock Numbers).

OFFICIAL STOCK NUMBER:

The prefix letter and number of the official stock number (i.e. G104-XXXXXXX, G103-XXXXXXX or G167-XXXXXXX) signifies that the particular part of component was originally coded under the major item designation for that SNL, and does NOT mean that the part is used ONLY in that major item. All subsequent list for different vehicles will include the same official stock number for this same part.

The major item covered by this catalog is designated as a combat vehicle as defined in paragraph 3, AR 850-15, dated 28 August 1943.

INTERCHANGEABILITY OF COMPONENTS

The engine, clutch, transmission and differential used in these vehicles are similar to units used in Vehicle, Landing, Tracked (Unarmored) MK II, LVT (2) (SNL G-167); Vehicle, Landing, Tracked (Armored) MK II, LVT (A) (2) (SNL G-168); Vehicle, Landing, Tracked, (Unarmored) MK IV, LVT (4) (SNL G-209); Tank, Light, M3 (SNL G-103, Vol. 1); Tank, Light, M3A1 (SNL G-103, Vol. 5) and Tank, Light, M3A3 (SNL G-103, Vol. 7).

The accessories to the engine such as the cranking motor, generator, carburetor, etc., are either the same or interchangeable with the units used in vehicles listed above.

PUBLICATIONS PERTAINING TO THIS VEHICLE

TECHNICAL MANUAL (1st & 2nd ECHELON).....	TM 9-775
TECHNICAL MANUAL (3rd & 4th ECHELON)	
Ordnance Maintenance: Carburetors (Stromberg).....	TM 9-1826 B
Ordnance Maintenance: Clutch, power take-off, bilge pump, tracks and suspension and hull for tracked landing vehicles.....	TM 9-1775
Ordnance Maintenance: Continental engine, Model W670-9A.....	TM 9-1726
Ordnance Maintenance: Electrical equipment (Delco-Remy).....	TM 9-1825A
Ordnance Maintenance: Fire extinguishers.....	TM 9-1799
Ordnance Maintenance: Fuel and lubrication systems for light tanks M3 and M3A1.....	TM 9-1726F
Ordnance Maintenance: Generators, starting and ignition systems for light tanks M3 and modifications.....	TM 9-1726A
Ordnance Maintenance: Hull and turret for light tanks M5, M5A1 and 75 mm. howitzer motor carriage M8.....	TM 9-1727C
Ordnance Maintenance: Hydraulic traversing mechanism for light tank M5 (Oilgear).....	TM 9-1727K
Ordnance Maintenance: Power train for light tank M3 and M3A1-1.....	TM 9-1728

IDENTIFICATION PLATES

NAME OF UNIT	LOCATION
Vehicle	Inside of the Cab Bulkhead Behind the Driver's Seat
Engine	Rear of Engine, Top Center of Accessory Case
Hydra-matic Transmission	Top Center Vertical Surface, Forward to Breather
Blowers	Motor Side of Volute Outlet
Auxiliary Generator	Forward and Right Side of Generator
Traversing Mechanism Variable Displacement Pump	Face of Pump Head Beneath the Turret Basket
Traversing Mechanism Hydraulic Gear Box Motor	Face of Hydraulic Motor End Head in Rear of Turret
Gyro-Stabilizer Motor and Pump	Outside Rim of Pump Beneath Turret Basket

DEFINITION OF LOCATIONAL TERMS

All like parts pertinent to the vehicle which are not interchangeable are designated by **LEFT** and **RIGHT** in respect to the vehicle when it is viewed from the rear facing forward. All like parts pertinent to the engine which are not interchangeable are designated by **LEFT** and **RIGHT** in respect to the engine when it is viewed from the magneto end. The magneto end faces the rear of the vehicle and is considered the rear of the engine.

MANUFACTURERS' IDENTIFICATION SYMBOL

Identification symbols have been assigned to manufacturers part numbers. These symbols are prefixed to the part numbers in this book and a list of manufacturers is shown on pages 6 and 7.

LIST OF ABBREVIATIONS

A list of the abbreviations appearing in this book is shown on page 5.

HOW TO FIND PARTS

This catalog is arranged and cross-indexed so that parts can be found easily even though only one of the several identifying factors is known. The various ways in which parts can be located are as follows:

If the nomenclature (basic name) only is known, and the sub-group is not, refer to the alphabetical index in the back of the book. This index will give the sub-group in which the part is listed. As the part names are arranged in alphabetical order within this sub-group, the complete listing of the part can readily be found.

If any one of the Part Numbers—Ordinance Number, Official Stock Number, or Manufacturer's Number—is known, refer to the appropriate numerical index in the back of the book. This index will give the sub-group number from which the part can be found by following the procedure given in the previous paragraph.

If the use, or function, or location of the part is known, refer to the illustration index to determine in which figure or figures the part is likely to appear; then turn to these figures until a picture of the part is found. The arrow pointing to the part will lead out to a listing of the name, part number and sub-group number, which will permit locating the complete listing of the part.

LIST OF ABBREVIATIONS

adj.	adjustable	I.D.	inner diameter
al.	aluminum	in.	inch
alloy-S.	alloy steel	int.	internal
amp.	ampere	int-teeth	internal teeth
anld.	annealed	jt.	joint
as req.	as required	lb.	pound
b-hd.	button-head	lg.	long
br.	brass	lgh.	length
bz.	bronze	lgt.	light
c-pin	cotter pin	lin. ft.	linear foot or feet
cal.	caliber	lkg.	locking
cd.	cadmium	mach.	machine
cd-pltd.	cadmium plated	machs.	machinists
chamf.	chamfered	M.I.	malleable iron
chr.	chromium	m-screw	machine screw
chr-S.	chrome steel	mm.	millimeter
C.I.	cast iron	mtg.	mounting
cir-mils.	circular mils	NC.	national course
ck.	countersunk	NF.	national fine
ck-hd.	countersunk head	ni.	nickel
cm.	centimeter	No.	number
comb.	combination	NPT	National Pipe Thread
cont'd.	continued	NS.	National Form Special
cop.	copper	O.D.	outer diameter
corr-res-S.	corrosion-resistant- steel (stainless)	oval-hd.	oval head
cp.	candlepower	oz.	ounce
cup-pt.	cup point	ph-bz.	phosphor bronze
dbl.	double	pltd.	plated
deg.	degree	pt.	point
diam.	diameter	reg.	regular
dld.	drilled	rd.	round
dld. f/c-pin	drilled for cotter pin	rd-hd.	round head
dld. f/lkg-wire	drilled for locking wire	rd-pt.	round point
engrs.	engineers	rpm.	revolutions per minute
ext.	external	rvrs.	reversible
ext-hv.	extra heavy	S.	steel
ext-teeth	external teeth	SAE	Society of Automotive Engineers
f/	for	s-fin.	semi-finished
fil-hd.	fillister head	sgle.	single
fin.	finished	socket-hd.	socket head
fl-hd.	flat head	sq.	square
fl-pt.	flat point	sq-hd.	square-head
ft.	foot or feet	std.	standard
ga.	gage	stght.	straight
gal.	gallon	T.	teeth
glvd.	galvanized	thd.	thread
hd.	head	thk.	thick
hdl.	handle	thkns.	thickness
hdls.	headless	unfin.	unfinished
hex.	hexagon	w/	with
hex-hd.	hexagonal head	w/o	without
hp.	horsepower	zn.	zinc
hv.	heavy		

MANUFACTURER'S IDENTIFICATION SYMBOLS

<i>Symbol</i>	<i>Manufacturer</i>	<i>Address</i>
AC	A. C. SPARK PLUG DIV. (GENERAL MOTORS CORP.)	1300 N. Dort Hwy., Flint 2, Mich.
ACH	AMERICAN CABINET HARDWARE CO.	416 S. Main St., Rockford, Ill.
AD	ALEMITE DIVISION	1826 Diversey Pkwy., Chicago 14, Ill.
AH	ARROW-HART & HEGEMAN ELECTRIC CO.	103 Hawthorne St., Hartford 6, Conn.
AIR	AIR CORPS STANDARD	
ASC	AMERICAN SEATING CO.	9th E. Broadway, Grand Rapids, Mich.
BF	BONNEY FORGE & TOOL WORKS	Meadow & Tilghman St., Allentown, Pa.
BKE	BLACKSTONE MFG. CO.	226 S. Morgan, Chicago, Ill.
BN	BANTAM BEARING DIV.	South Bend 21, Ind.
BS	BENDIX-STROMBERG CARBURETOR CO.	South Bend, Ind.
BUN	BURNDY ENGINEERING CO., INC.	107 Eastern Blvd., New York 54, N. Y.
BZ	BREEZE CORPORATION INC.	24 S. 6th St., Newark 7, N. J.
CAD	CADILLAC MOTOR CAR DIV. (GENERAL MOTORS CORP.)	2860 Clark Ave., Detroit 32, Mich.
CAN	CANDLER-HILL CORP.	405 Midland Ave., Detroit 3, Mich.
CC	CHRYSLER CORP.	Highland Park, 341 Mass Ave., Detroit 31, Mich.
CED	CANNON ELECTRIC DEVELOPMENT CO.	3209 Humboldt, Los Angeles 31, Calif.
CGB	CLEVELAND GRAPHITE BRONZE CO.	880 E. 72nd St., Cleveland, Ohio
CHB	CHAIN BELT CO.	1600 W. Bruce St., Milwaukee 4, Wis.
CM	CHICAGO RAWHIDE MFG. CO. (THE)	1301 Elston Ave., Chicago 22, Ill.
CO	CONTINENTAL MOTORS CORP.	205 Market S., Muskegon, Mich.
CP	CHAMPION SPARK PLUG CO.	900 Upton Ave., Toledo 1, Ohio
CRA	COLLINS RADIO CO.	Cedar Rapids, Iowa
CU	CUNO ENGINEERING CORP.	80 So. Vine St., Meriden, Conn.
CV	CHEVROLET MOTOR DIVISION (GENERAL MOTORS CORP.)	Detroit, Mich.
DA	DELCO APPLIANCE DIV.	P. O. Box 230, 391 Lyell Ave., Rochester 1, N. Y.
DR	DELCO-REMY DIV.	Anderson, Ind.
DV	DOLE VALVE CO. (THE)	1901 Carroll Ave., Chicago 12, Ill.
DZ	DIETZ, R. E. CO.	60 Laight St., New York 13, N. Y.
ES	ELECTRIC STORAGE BATTERY CO.	1900 Allegheny Ave., Philadelphia, Pa.
FOM	FOOD MACHINERY CORP.	P. O. Box 760, San Jose 5, Calif.
GM	GENERAL MOTORS CORP.	3044 W. Grand Blvd., Detroit 2, Mich.
GPC	GARLOCK PACKING CO. (THE)	114 Liberty St., New York 6, N. Y.
GRV	GROOV-PIN CORP.	2017 Kerrigan Ave., Union City, N. J.
HY	HYATT BEARING DIVISION (GENERAL MOTORS CORP.)	P. O. Box 71, Harrison, N. J.

IB	IMPERIAL BRASS MFG. CO. (THE).....	1200 W. Harrison St., Chicago 7, Ill.
KAS	KAUSTINE COMPANY INC.....	1936 Thomas St., Perry, N. Y.
KD	K-D LAMP CO.....	610 W. Court St., Cincinnati 3, Ohio
LE	LEACH RELAY CO.....	5915 Avalon Blvd., Los Angeles 3, Calif.
MJ	MECHANICS UNIVERSAL JOINT DIV.....	2020 Harrison Ave., Rockford, Ill.
MN	MAGNAVOX CO. (THE).....	Fort Wayne 4, Ind.
MRC	MARLIN-ROCKWELL CORP.....	402 Chandler St., Jamestown, N. Y.
MZ	"MAZDA"—GENERAL ELECTRIC CO.....	Schenectady, N. Y.
ND	NEW DEPARTURE DIV.....	Bristol, Conn.
NVS	NAVY DEPARTMENT—BUREAU OF SHIPS	
OG	OILGEAR CO. (THE).....	1403 W. Bruce St., Milwaukee 4, Wis.
PC	PACKARD ELECTRIC DIV.....	Dana Ave., Warren, Ohio
PG	PIERCE GOVERNOR CO.....	1605-35 Ohio St., Anderson, Ind.
PP	PEERLESS PUMP DIV.....	301 West Ave. 26, Los Angeles 31, Calif.
RO	ROLLWAY BEARING CO., INC.....	541 Seymour St., Syracuse, N. Y.
SCI	SCINTILLA MAGNETO DIV.....	Sherman Ave., Sidney, N. Y.
SK	SHAKEPROOF LOCK WASHER CO.....	2501 N. Keeler Ave., Chicago, Ill.
SKF	SKF INDUSTRIES, INC.....	Front St. & Erie Ave., Philadelphia, Pa.
SLY	STANLEY WORKS (THE).....	8 Elm St., New Britain, Conn.
SP	SPICER MFG. CORP.....	4100 Bennett Rd., Toledo 1, Ohio
SPR	SPRAGUE SPECIALTIES CO.....	Beaver St., North Adams, Mass.
SSG	SAGINAW STEERING GEAR DIV. (GENERAL MOTORS CORP.).....	Holmes St., Saginaw, Mich.
SW	STEWART-WARNER CORP.....	1826 Diversey Pkwy., Chicago 14, Ill.
TB	THOMAS & BETTS CO., INC. (THE).....	36 Butler St., Elizabeth 1, N. J.
TR	TORRINGTON CO. (THE).....	59 Field St., Torrington, Conn.
TRU	"TRU-STOP" AMERICAN CHAIN & CABLE CO.....	81 E. Ross St., Wilkes-Barre, Pa.
TWF	TRADE-WIND MOTORFANS, INC.....	5725 S. Main St., Los Angeles 37, Calif.
UN	UNIVERSAL OIL-SEAL CO.....	34 W. Kennett Rd., Pontiac 12, Mich.
VR	VORTOX MFG. CO.....	215 Montgomery Ave., Claremont, Calif.
WE	WESTINGHOUSE ELECTRIC & MFG. CO.....	East Pittsburgh, Pa.
WH	WEATHERHEAD CO. (THE).....	300 E. 131st St., Cleveland 8, Ohio
WIL	WILCOX-RICH.....	9771 French Rd., Detroit 13, Mich.
WIS	WISCONSIN AXLE DIV.....	567 High St., Oshkosh, Wis.
WK	KIDDE & CO. INC., WALTER.....	675 Main St., Belleville 9, N. J.
WT	WHITAKER BATTERY SUPPLY CO.....	1301 Burlington St., Kansas City 16, Mo.
YR	YOUNG RADIATOR CO.....	709 S. Marquette St., Racine, Wis.

STANDARDIZED GOVERNMENT GROUPING

01—ENGINE GROUP

- 0100 Engine Assembly
- 0101 Crankcase
- 0101A Cylinder and Head
- 0102 Crankshaft
- 0102A Crankshaft Bearings
- 0103 Pistons
- 0103A Piston Rings
- 0103B Piston Pins
- 0104 Connecting Rods and Bearings
- 0105 Valves, Seats, Guides, and Springs
- 0105A Tappets
- 0105B Rockers, Shafts, and Housings
- 0105C Valve Rocker Box Covers and Gaskets
- 0106 Cam
- 0107 Oil Pressure and Scavenger Pump
(also known as Duplex Pump)
- 0107A Crankcase Oil Sump
- 0107B Oil Cooler
- 0107C Valve Rocker Oil Scavenger Pump
and Strainer
- 0107D Oil Reservoir
- 0107E Oil Filter and Oil Screen Assembly
- 0107E-1 Oil Filter
- 0107E-2 Oil Screen
- 0107J Oil Distribution System
- 0107K Oil Pressure Relief Valve
- 0108A Intake Pipe
- 0108B Exhaust Manifold and Elbows
- 0109 Flywheel
- 0109A Fan
- 0110 Mountings
- 0111 Lifting Eye
- 0113B Accessory Case and Accessory Drive
Assembly
- 0113B-1 Accessory Case
- 0113B-2 Cam Drive
- 0113B-3 Cranking Motor Drive
- 0113B-4 Generator Drive
- 0113B-5 Magneto Drive
- 0113B-6 Oil Pressure and Scavenger Pump
Drive
- 0113B-7 Valve Rocker Oil Scavenger Pump
Drive
- 0113B-8 Tachometer Drive

02—CLUTCH GROUP

- 0200 Clutch Assembly
- 0201 Clutch Driving Plate
- 0201A Facings
- 0201B Driven Plate
- 0202 Pressure Plate and Springs
- 0203 Release Yoke and Bearings
- 0205 Pilot Bearing
- 0208B Spindle

03—FUEL SYSTEM GROUP

- 0300 Fuel Tanks
- 0300-1 Fuel Shut-Off Valve Assembly
- 0301 Carburetor
- 0301-1 Carburetor Air Horn
- 0301C Air Cleaners and Intake Tubes
- 0302 Fuel Pump
- 0304 Fuel Lines
- 0305 Governor
- 0305A Governor Controls
- 0306 Fuel Filter
- 0308A-1 Primer Pump
- 0308A-2 Priming Distributor and Tubes

04—EXHAUST GROUP

- 0401 Muffler
- 0402 Exhaust Tubes

05—COOLING GROUP

- 0500 Baffles and Fan Shroud
- 0503B Fan and Generator Belts

06—ELECTRICAL GROUP

- 0601 Engine Generator
- 0601A Engine Generator Attaching Parts
- 0601B Engine Generator Regulator
- 0602 Cranking Motor
- 0603A Magneto-Scintilla
- 0604 Booster Coil
- 0604A Ignition Wiring
- 0604B Spark Plugs
- 0605 Instruments
- 0605B Instrument Lines and Fittings
- 0605C Panel Light
- 0606 Switches
- 0606C Hull Wiring
- 0606D Circuit Breaker
- 0606E Terminal Boxes
- 0607 Headlights
- 0607A Lamp-Units (Sealed Beam)
- 0607B Lamps
- 0607C Fuses
- 0608 Tail Lights
- 0608A Auxiliary Lamps
- 0610 Battery
- 0610A Battery Supports
- 0610B Starting Cables, Connections and
Relays
- 0610B-1 Starting Cables and Connections
- 0610B-2 Relay Assembly
- 0611 Auxiliary Generator Assembly and
Mountings
- 0611A Auxiliary Generator
- 0611B Auxiliary Generator Engine
- 0611B-1 Auxiliary Generator Engine Crank-
case and Cylinder Block
- 0611B-2 Auxiliary Generator Engine
Cylinder Head

STANDARDIZED GOVERNMENT GROUPING

0611B-3 Auxiliary Generator Engine Crankshaft
 0611B-4 Auxiliary Generator Pistons, Pins, and Rings
 0611B-5 Auxiliary Generator Engine Connecting Rods
 0611B-6 Auxiliary Generator Engine Valves, Seats, Guides, and Springs
 0611B-7 Auxiliary Generator Engine Valve Covers and Gaskets
 0611B-8 Auxiliary Generator Engine Camshaft and Parts
 0611B-9 Auxiliary Generator Engine Oil Filler
 0611C Auxiliary Generator Engine Fuel Tank and Lines
 0611D Auxiliary Generator Engine Carburetor and Air Cleaner
 0611E Auxiliary Generator Governor and Breather Housing
 0611F Auxiliary Generator Engine Exhaust
 0611G Auxiliary Generator Engine Cooling
 0611H Auxiliary Generator Electrical Group
 0611H-1 Auxiliary Generator Panel Board and Parts
 0611H-2 Auxiliary Generator Engine Ignition Housing
 0611H-3 Auxiliary Generator Cables and Conduits
 0611H-4 Auxiliary Generator Engine Spark Plugs and Suppressors
 0612 Interior Ventilating Equipment
 0613 Turret Electrical Parts (MK I; LVT (A) (1) only)
 0613 Turret Electrical Parts (MK IV; LVT (A) (4) only)
 0613A Dome Light (MK I; LVT (A) (1) only)
 0613B Slip Ring (MK I; LVT (A) (1) only)
 0613C Disengaging Switch (MK I; LVT (A) (1) only)
 0613D Gyro Switch (MK I; LVT (A) (1) only)
 0613E Master Switch (MK I; LVT (A) (1) only)
 0613F Wiring and Connections (MK I; LVT (A) (1) only)

07—TRANSMISSION GROUP

0700 Transmission Assembly
 0701 Case
 0701A Covers, Caps, and Gaskets
 0703A Input Shaft and Bearings
 0704A Output Shaft and Bearings
 0704B Gears and Synchronizers
 0704C First Speed Gear Shaft and Reverse Shaft

0705 Speedometer Drive Parts
 0706A Gearshift Lever and Parts
 0706B Gear Shifter Rods and Parts
 0706C Gear Shifter Forks
 0709 Transmission Oil Cooler
 0709A Transmission Oil Pump
 0709B Transmission Oil Screen
 0709C Transmission Oil Strainer
 0709D Transmission Oil Piping and Pressure Regulator
 0713 Mountings

09—PROPELLER SHAFT AND UNIVERSAL JOINT GROUP

0901 Propeller Shaft
 0901A Hangers and Supports
 0902 Universal Joints

10—DIFFERENTIAL AND FINAL DRIVE GROUP

1002 Differential Assembly
 1003 Differential Gears, Pinions, and Bearings
 1008 Final Drive Assembly
 1008A Gears, Bearings, and Shafts
 1009 Steering Brake Equipment (Internal)

13—TRACK SUSPENSION GROUP

1303 Bogie Assembly
 1304 Track Idler
 1305 Tracks
 1306 Return Idlers
 1307 Sprockets

15—FRAME AND BRACKETS GROUP

1501 Towing Attachment

15A—CONTROLS GROUP

15A1 Steering Brake Controls
 15C1-A Foot Controls
 15C1-B Hand Controls
 15D1 Clutch Controls

17—FENDERS, SPLASH DEFLECTORS, AND TRACK COVERS

1701 Fenders, Splash Deflectors, and Track Covers

18—HULL GROUP

1800 Cab Assembly
 1801A Hull Mounting Parts
 1801B Hull Covers
 1801C Lifting Eyes
 1803B Floor Covers and Plugs
 1803C Drain Valve
 1804 Seats
 1805H Hatches and Related Parts
 1805L Cab Window Cover
 1809 Instrument Panel and Mounting Parts
 1816 Periscope Mountings
 1817 Tool Box

STANDARDIZED GOVERNMENT GROUPING

19—TURRET GROUP

- 1900 Turret Assembly (MK I; LVT (A) (1) only)
- 1900 Turret Assembly (MK IV; LVT (A) (4) only)
- 1900-1 .50 cal. Anti-Aircraft Machine Gun Hold Down Latch (MK IV; LVT (A) (4) only)
- 1900-2 Anti-Aircraft Machine Gun Mounting Brake (MK IV; LVT (A) (4) only)
- 1900A Turret Base Seals (MK I; LVT (A) (1) only)
- 1900B Turret Retaining Rollers (MK I; LVT (A) (1) only)
- 1901 Turret Basket (MK I; LVT (A) (1) only)
- 1901A Turret Seats (MK I; LVT (A) (1) only)
- 1901A Turret Seats (MK IV; LVT (A) (4) only)
- 1902 Turret Hatches (MK I; LVT (A) (1) only)
- 1902 Turret Hatches (MK IV; LVT (A) (4) only)
- 1902A Turret Doors (MK I; LVT (A) (1) only)
- 1903 Traversing Hand Control and Mechanism (MK I; LVT (A) (1) only)
- 1903A Turret Traversing Mechanism Bearings (MK I; LVT (A) (1) only)
- 1903A Turret Traversing Ball Ring (MK IV; LVT (A) (4) only)
- 1903B Turret Traversing Lock (MK I; LVT (A) (1) only)
- 1903C Turret Traversing Controls (MK I; LVT (A) (1) only)
- 1903D Gear Box and Hydraulic Motor (MK I; LVT (A) (1) only)
- 1903D Turret Traversing Gear Box (MK IV; LVT (A) (4) only)
- 1903E Variable Displacement Pump (MK I; LVT (A) (1) only)
- 1903F Oil Pot (MK I; LVT (A) (1) only)
- 1903G Tubes (MK I; LVT (A) (1) only)
- 1903H Turret Foot Firing Mechanism (MK I; LVT (A) (1) only)
- 1904 Insulating and Protective Pads (MK I; LVT (A) (1) only)
- 1904 Insulating and Protective Pads (MK IV; LVT (A) (4) only)
- 1905 Periscopes and Linkage (MK I; LVT (A) (1) only)

- 1905-1 Rotating Periscopes (MK I; LVT (A) (1) only)
- 1905-2 Sighting Periscopes (MK I; LVT (A) (1) only)
- 1905A Sighting Devices (MK I; LVT (A) (1) only)
- 1906 Ammunition Boxes and Racks (MK I; LVT (A) (1) only)
- 1906 Ammunition Boxes and Racks (MK IV; LVT (A) (4) only)
- 1907 Miscellaneous Stowage (MK I; LVT (A) (1) only)
- 1907 Miscellaneous Stowage (MK IV; LVT (A) (4) only)

20—POWER TAKE-OFF GROUP

- 2012 Power Take-Off Assembly

21—GUARDS GROUPS

- 2103A Headlight Guards

22—MISCELLANEOUS HULL AND ACCESSORIES GROUP

- 2201 Tarpaulin and Covers
- 2201C Gun Covers
- 2203 Identification and Caution Plates
- 2205 Tachometer and Related Parts
- 2208C Bilge Pump
- 2208D Bilge Pump Drive Shaft
- 2208E Bilge Pump Discharge Tubing
- 2208F Hand Operated Bilge Pump
- 2208H Hand Operated Bilge Pump Tubing
- 2209 Turret Position Indicator (MK IV; LVT (A) (4) only)
- 2210 Compass
- 2218 Turret Gun Lock (MK I; LVT (A) (1) only)

23—GENERAL USE STANDARDIZED PARTS GROUP


- 2301 Tools
- 2301A Pioneer Equipment
- 2302A Fuels and Lubricants
- 2302B Miscellaneous Supplies
- 2304M Locking Wire (in rolls)
- 2304P Tubing and Hose (Bulk)

24—FIRE EXTINGUISHER SYSTEM GROUP

- 2401 Stationary System and Parts
- 2402 Portable System and Parts


26—RADIO AND INTERNAL COMMUNICATION SYSTEM GROUP

- 2601 Radio and Supports
- 2602 Internal Communication System
- 2602A Amplifier
- 2602B Radio Junction Box
- 2602C Remote Control Units and Mounting Brackets
- 2602D Internal Communication Speaker Junction Box
- 2603 Radio Suppression System Parts

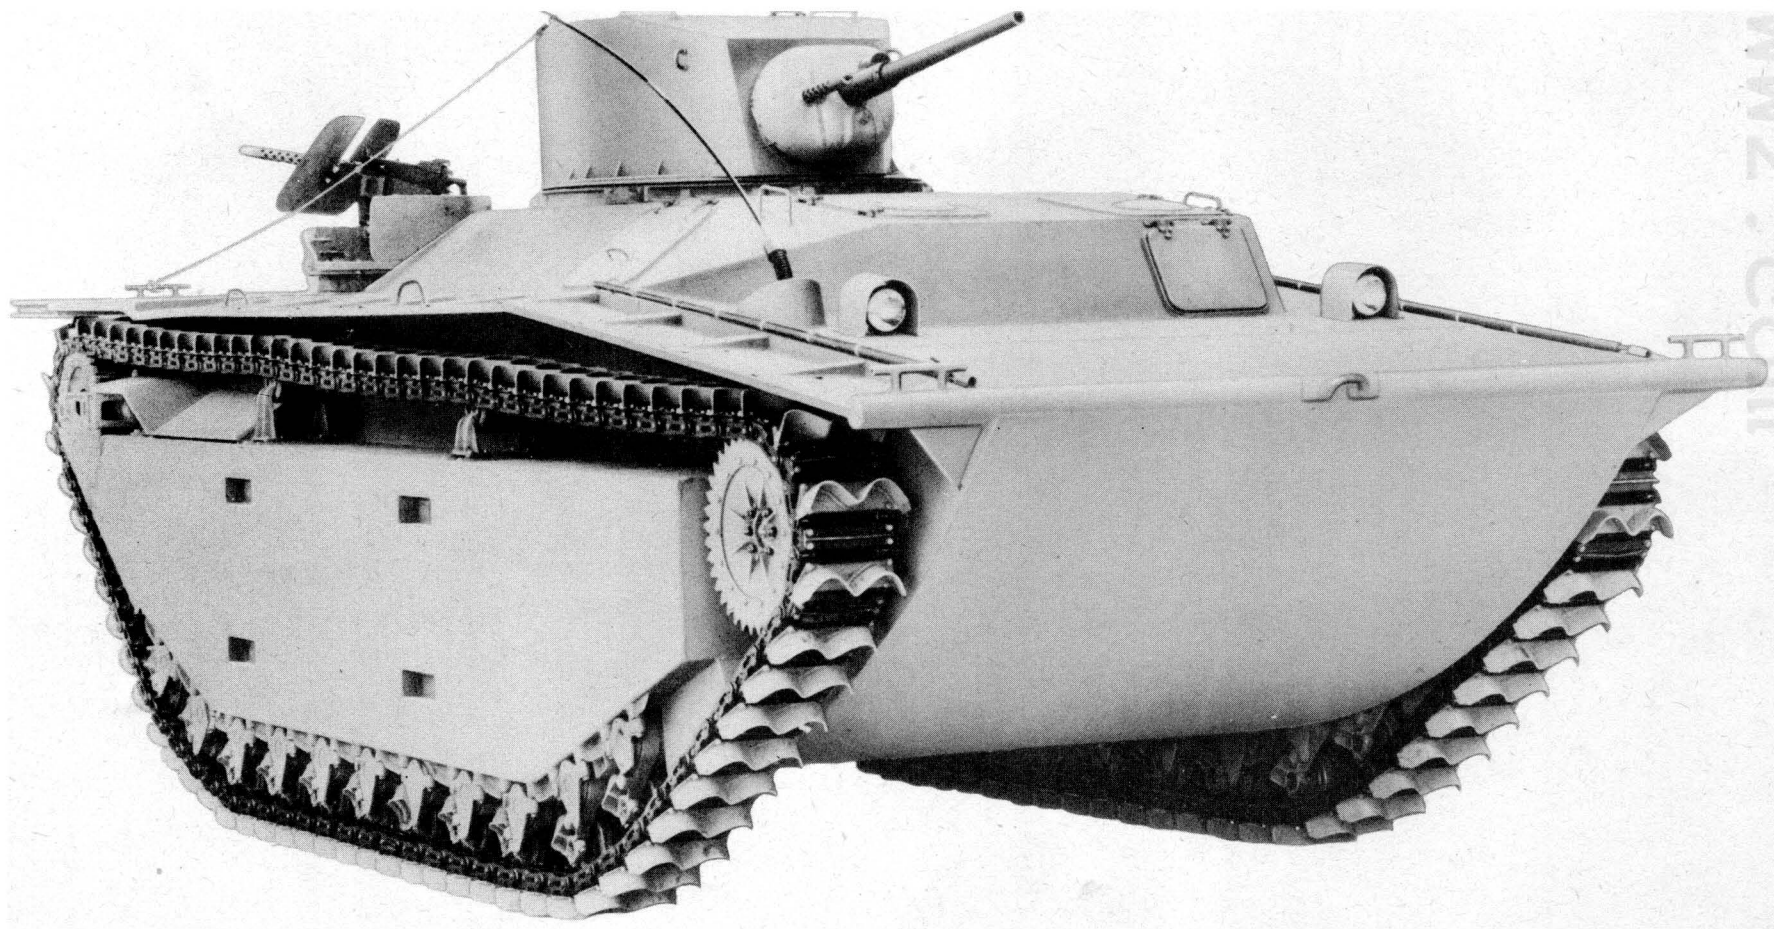

RA PD 75353

FIGURE A—VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1)— $\frac{3}{4}$ RIGHT FRONT VIEW

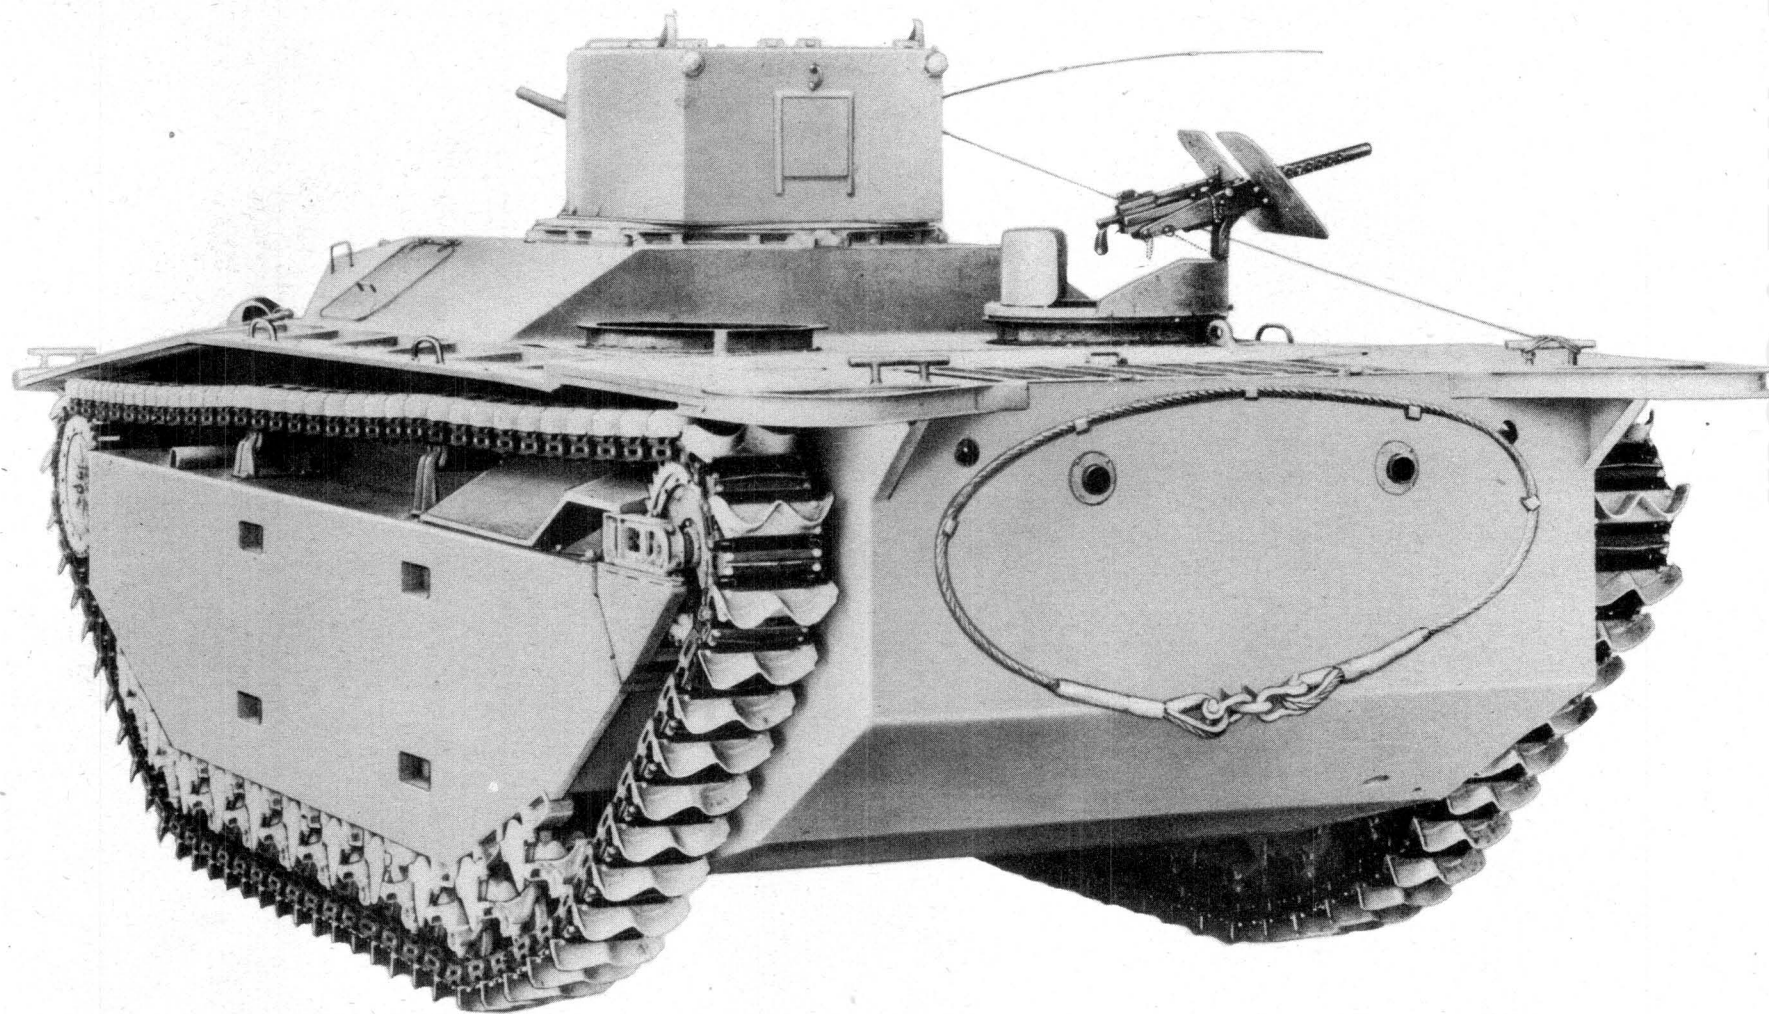

RA PD 75389

FIGURE B—VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1)— $\frac{3}{4}$ LEFT REAR VIEW

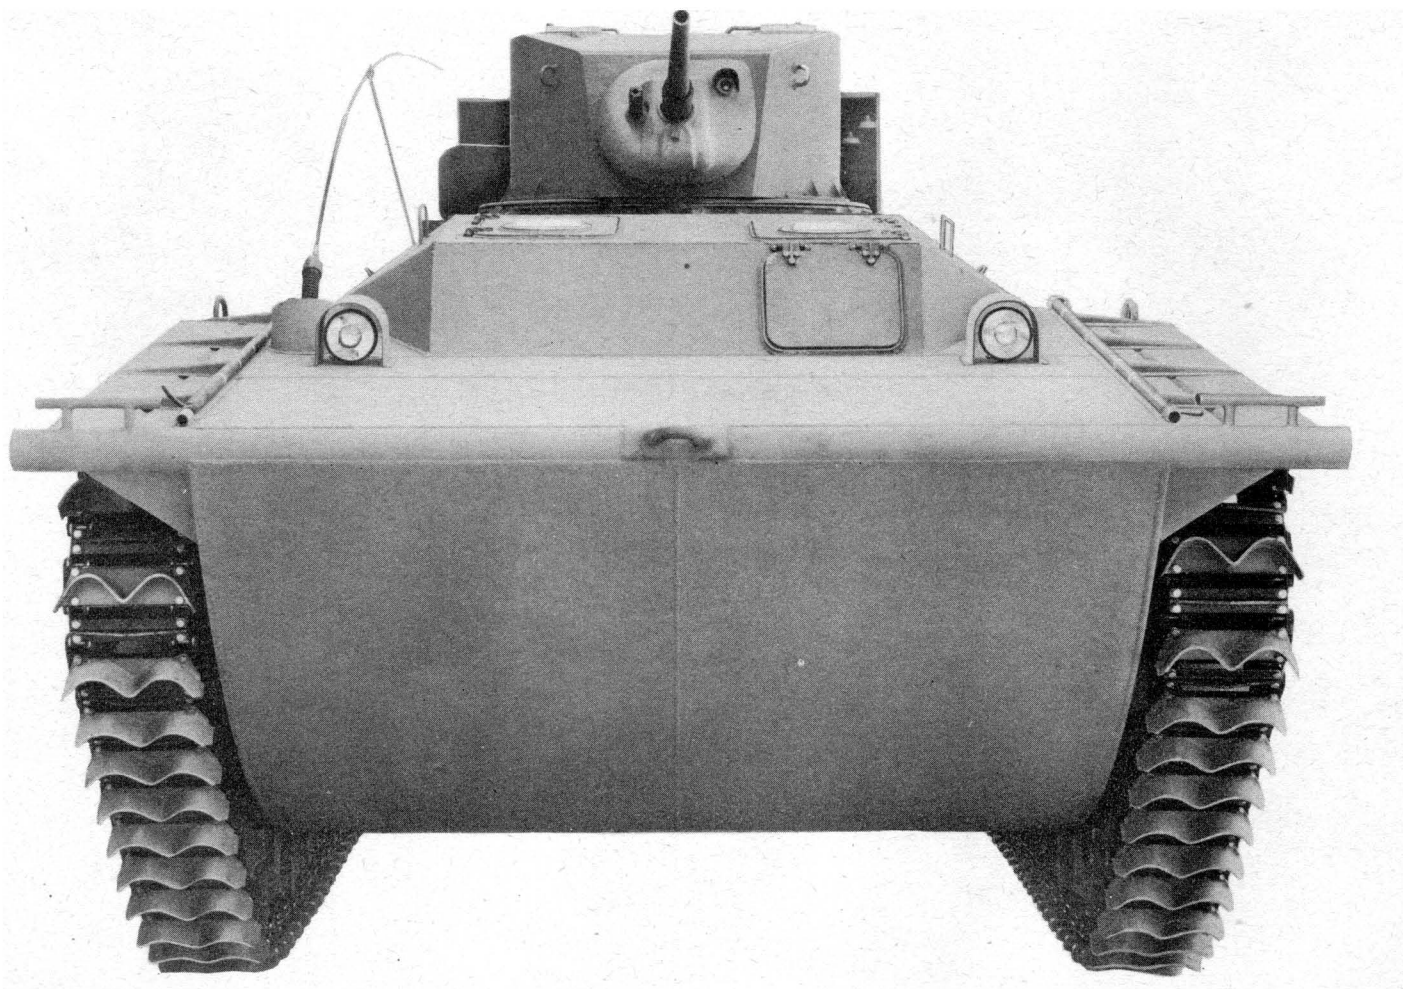


FIGURE C—VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1)—FRONT VIEW



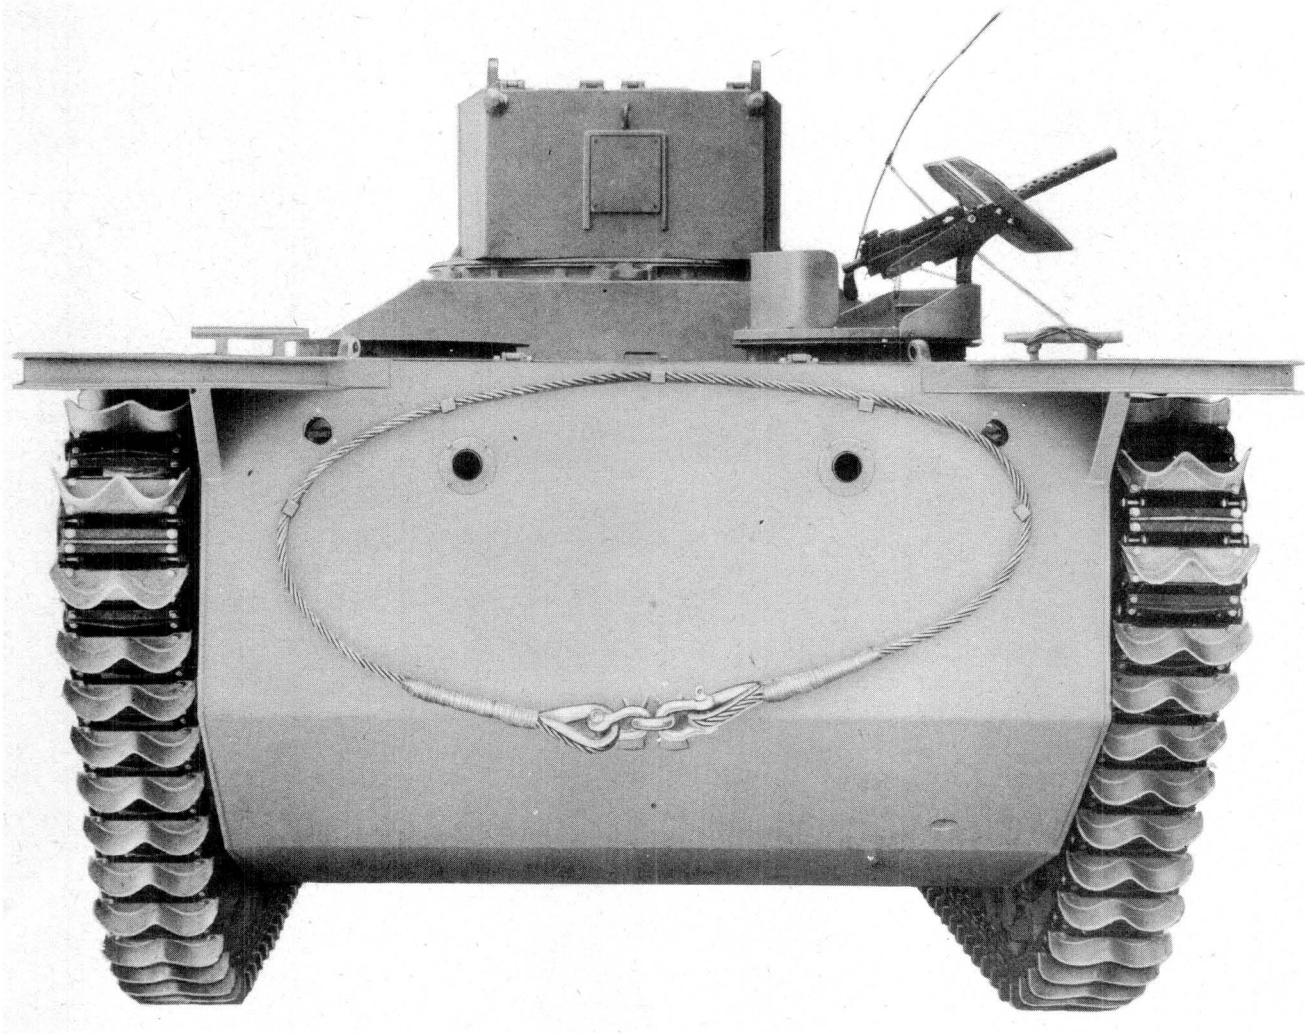


FIGURE D—VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1)—REAR VIEW

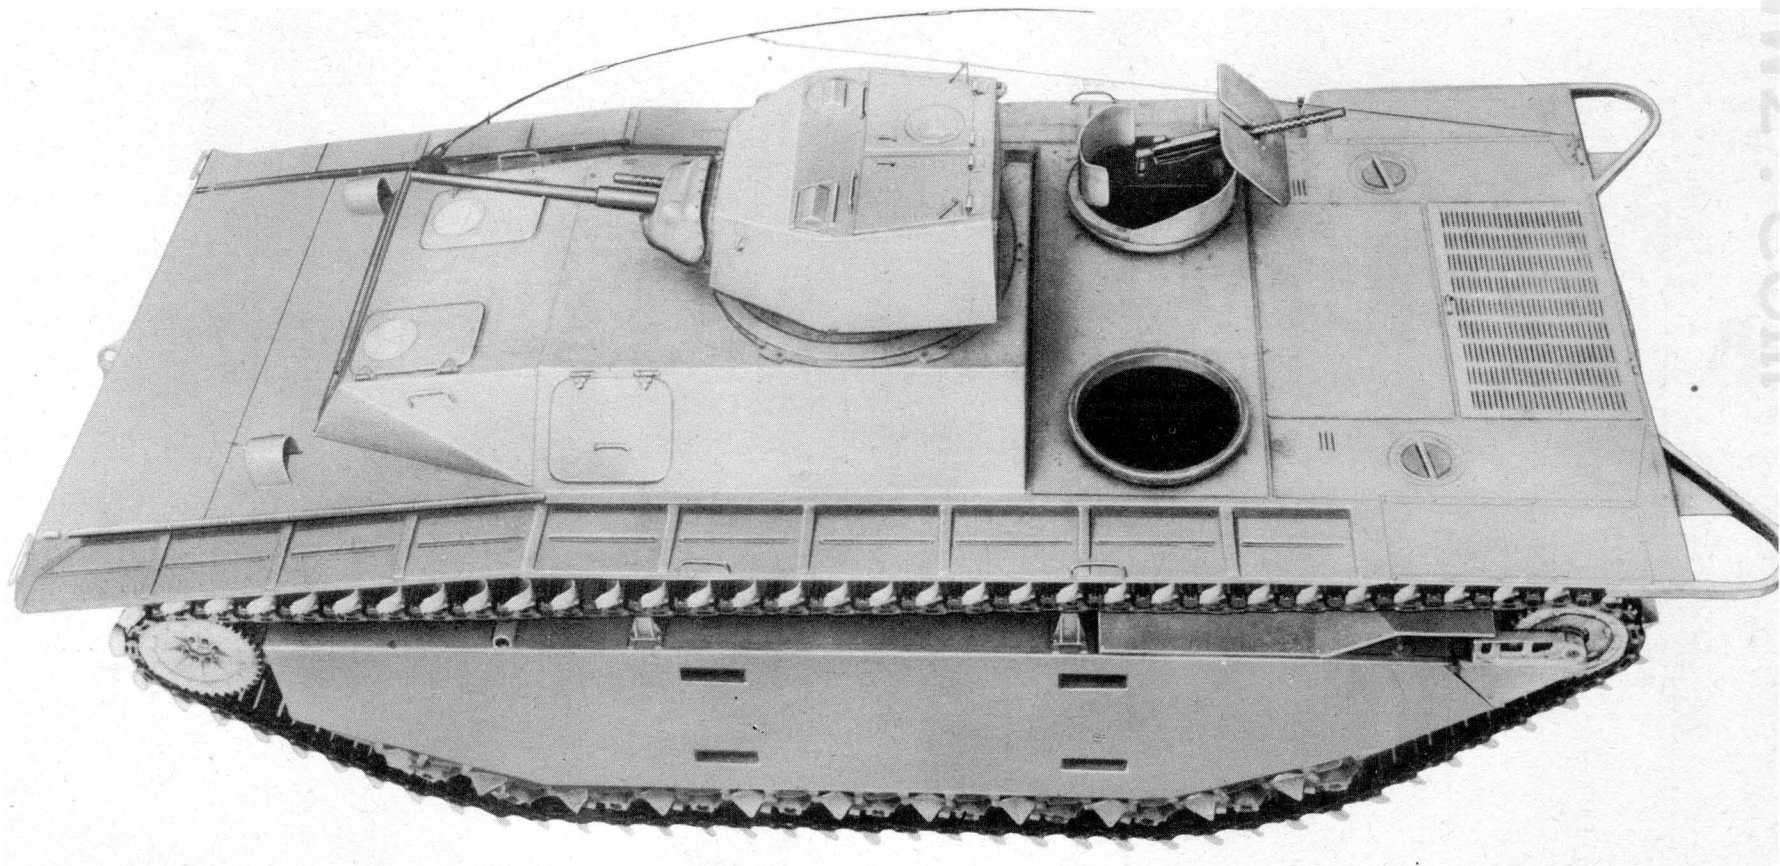

RA PD 75352

FIGURE E—VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1)—TOP VIEW

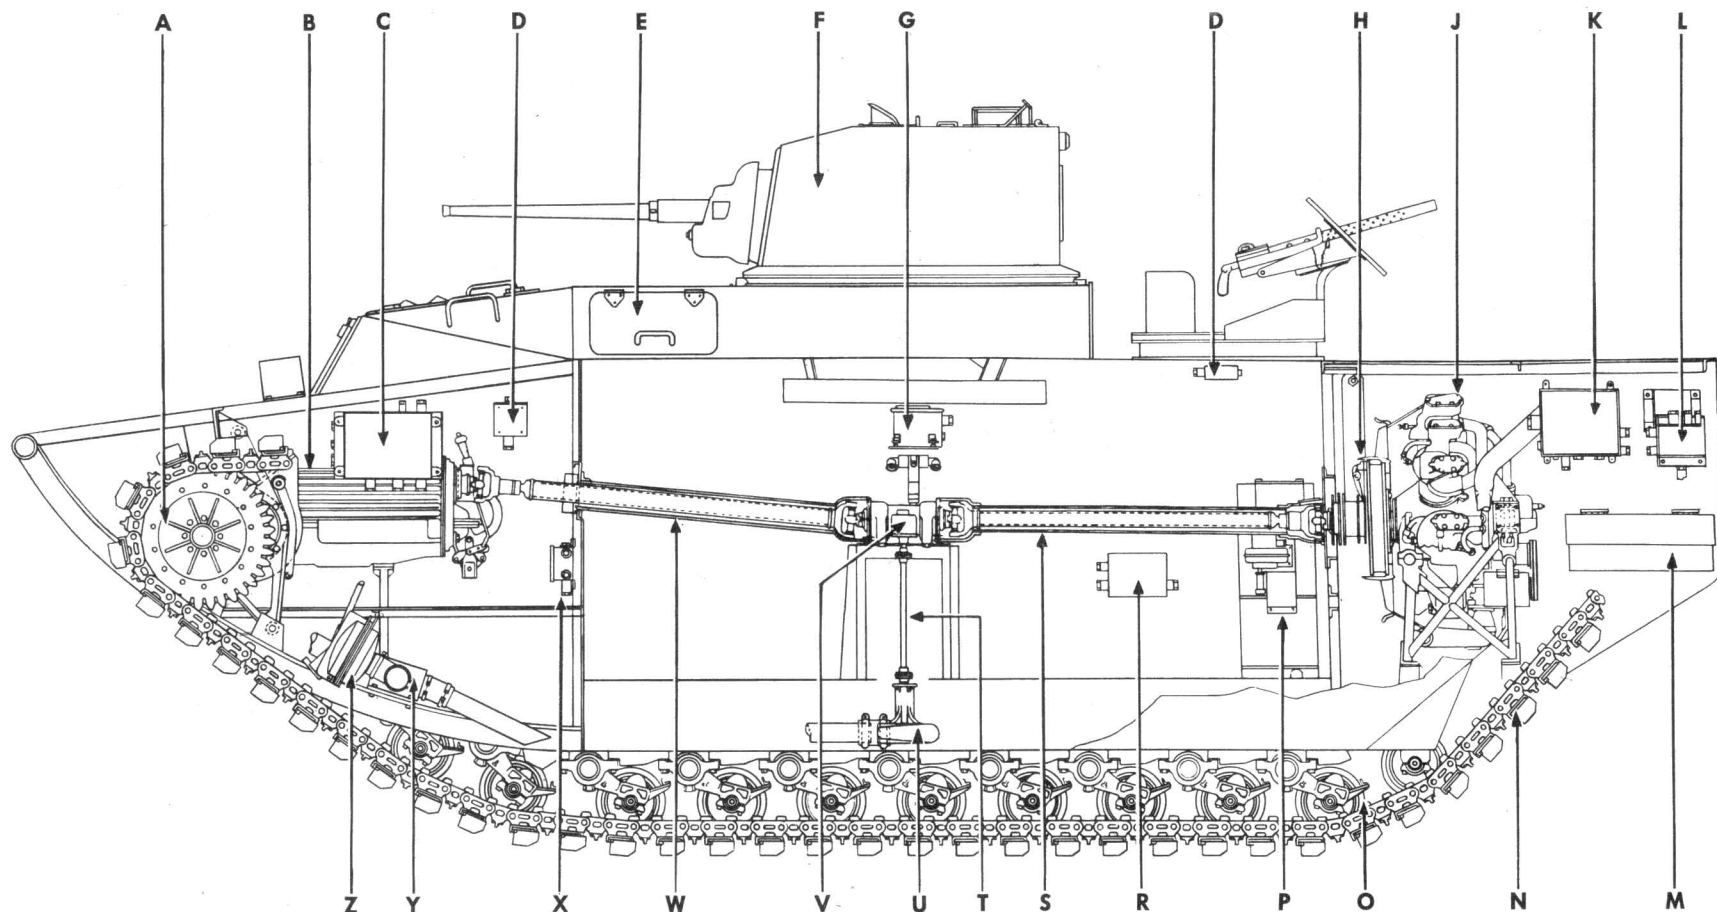


KEY PART NAME	PART No.	GROUP
A SPROCKET.....	FOM-5X1112D...	1307
B TRANSMISSION, ASS'Y	FOM-41X1062E...	0700
C BOX, ASS'Y.....	FOM-70X1034E...	0606E
D BOX, ASS'Y.....	FOM-70X1011C...	2602D
E COVER.....	FOM-21X1393B...	1902
F TURRET, ASS'Y.....	FOM-P684.....	1900
G SLIP RING, ASS'Y.....	CHB-XAT114.....	0613B
H CLUTCH, ASS'Y.....	FOM-31X1060E...	0200

KEY PART NAME	PART No.	GROUP
J ENGINE, ASS'Y.....	A294699.....	0100
K PANEL, ASS'Y.....	FOM-70X1015E...	0601B
L BOX, ASS'Y.....	FOM-70X1006C...	0606E
M BATTERY.....	FOM-P378.....	0610
N TRACK, ASS'Y.....	FOM-51X1111D...	1305
O WHEEL, ASS'Y.....	FOM-51B156C...	1303
P GENERATOR, ASS'Y	DA-5067440.....	0611
R BOX, ASS'Y.....	FOM-71X1059D...	0606E

KEY PART NAME	PART No.	GROUP
S SHAFT, ASS'Y.....	FOM-41X1029D...	0901
T SHAFT, ASS'Y.....	FOM-41X1069B...	2208D
U PUMP, ASS'Y.....	FOM-P151.....	2208C
V POWER TAKE OFF, ASS'Y.....	FOM-41X1028D...	2012
W SHAFT, ASS'Y.....	FOM-41X1030D...	0901
X BOX, ASS'Y.....	FOM-70X1043C...	2602B
Y BOX, ASS'Y.....	FOM-20X3030...	2208F
Z PUMP, ASS'Y.....	FOM-20X3031C...	2208F


RA PD 341186

FIGURE F—VEHICLE, LANDING, TRACKED (ARMORED) MK I; LVT (A) (1)—CROSS SECTIONAL VIEW

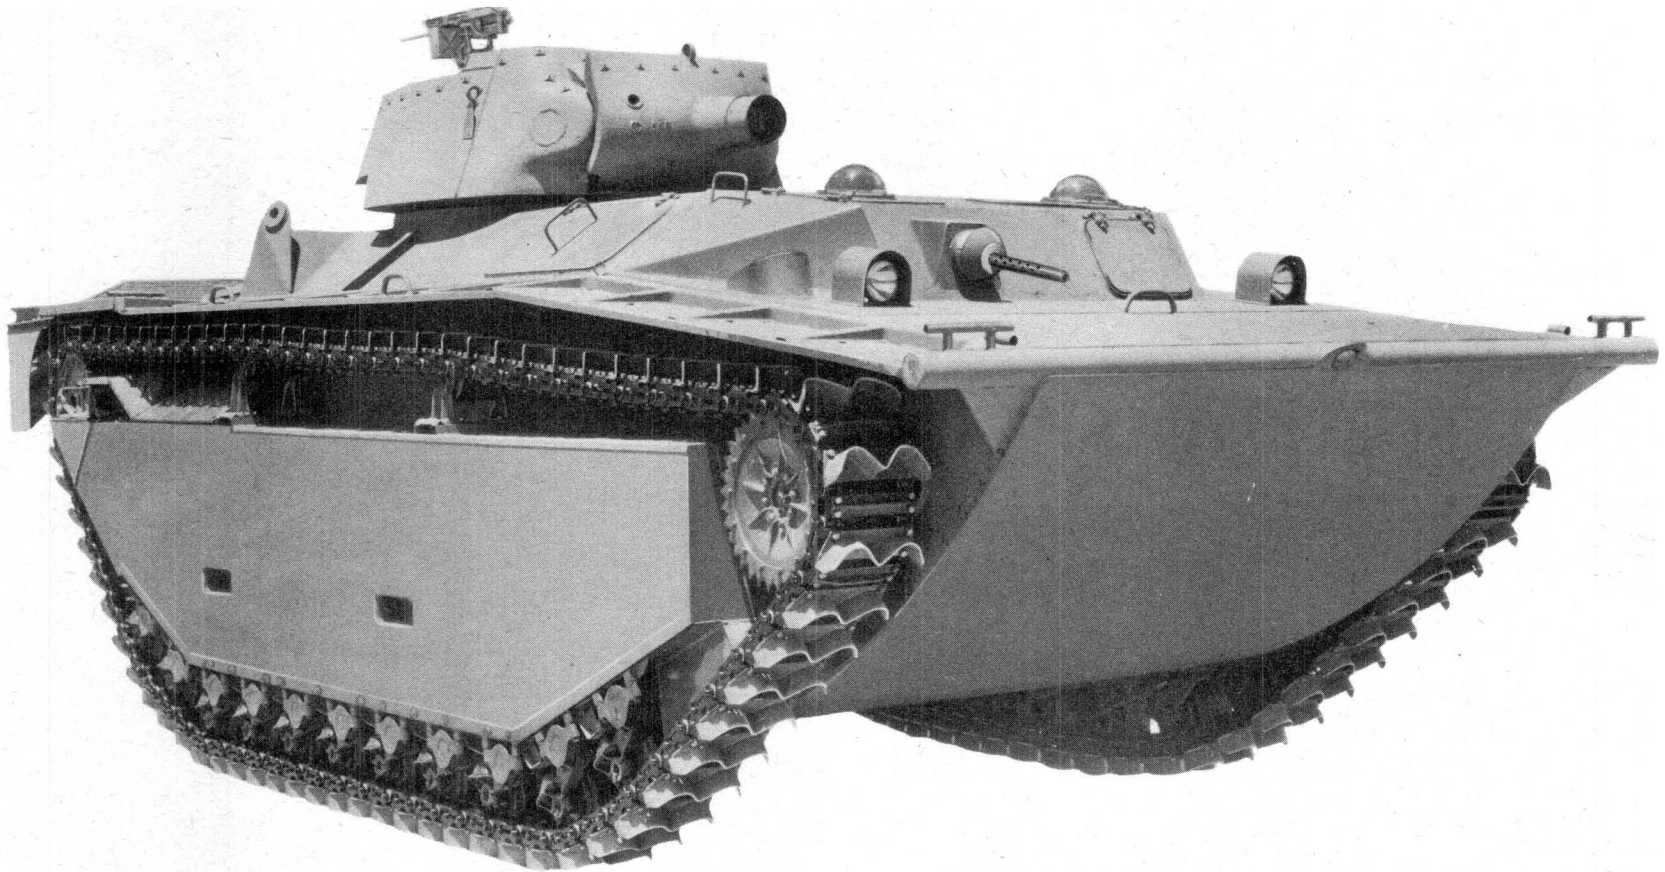

RA PD 337685

FIGURE G—VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4)— $\frac{3}{4}$ RIGHT FRONT VIEW

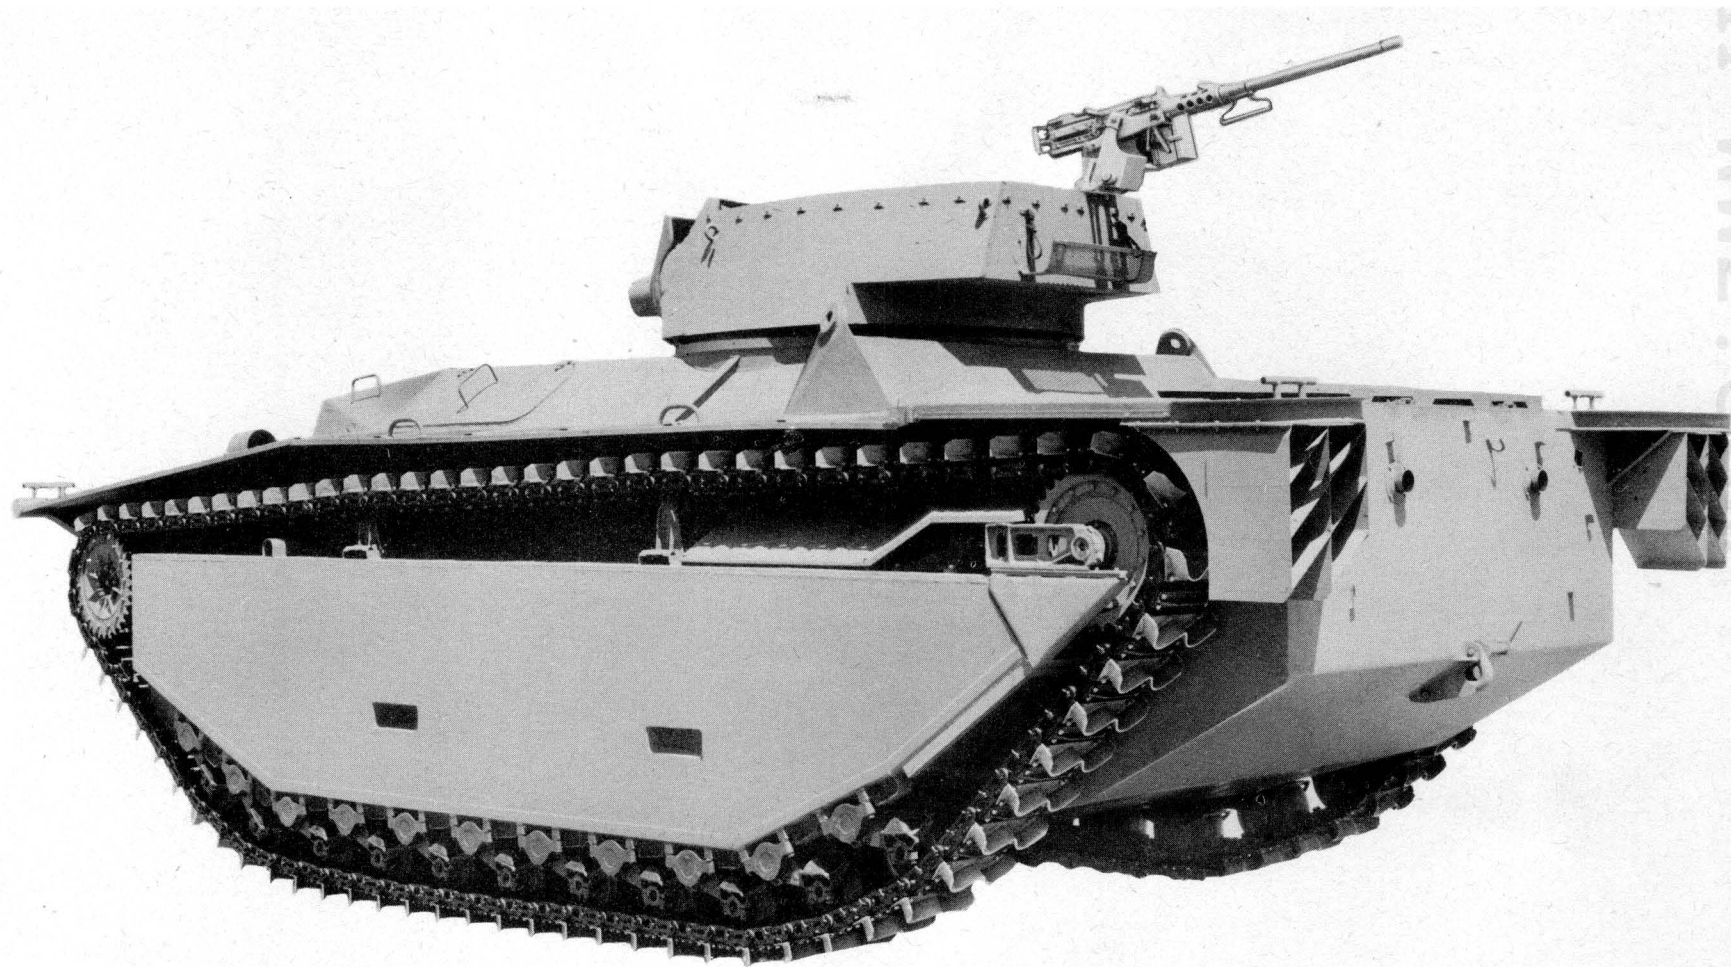

RA PD 341189

FIGURE H—VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4)— $\frac{3}{4}$ LEFT REAR VIEW


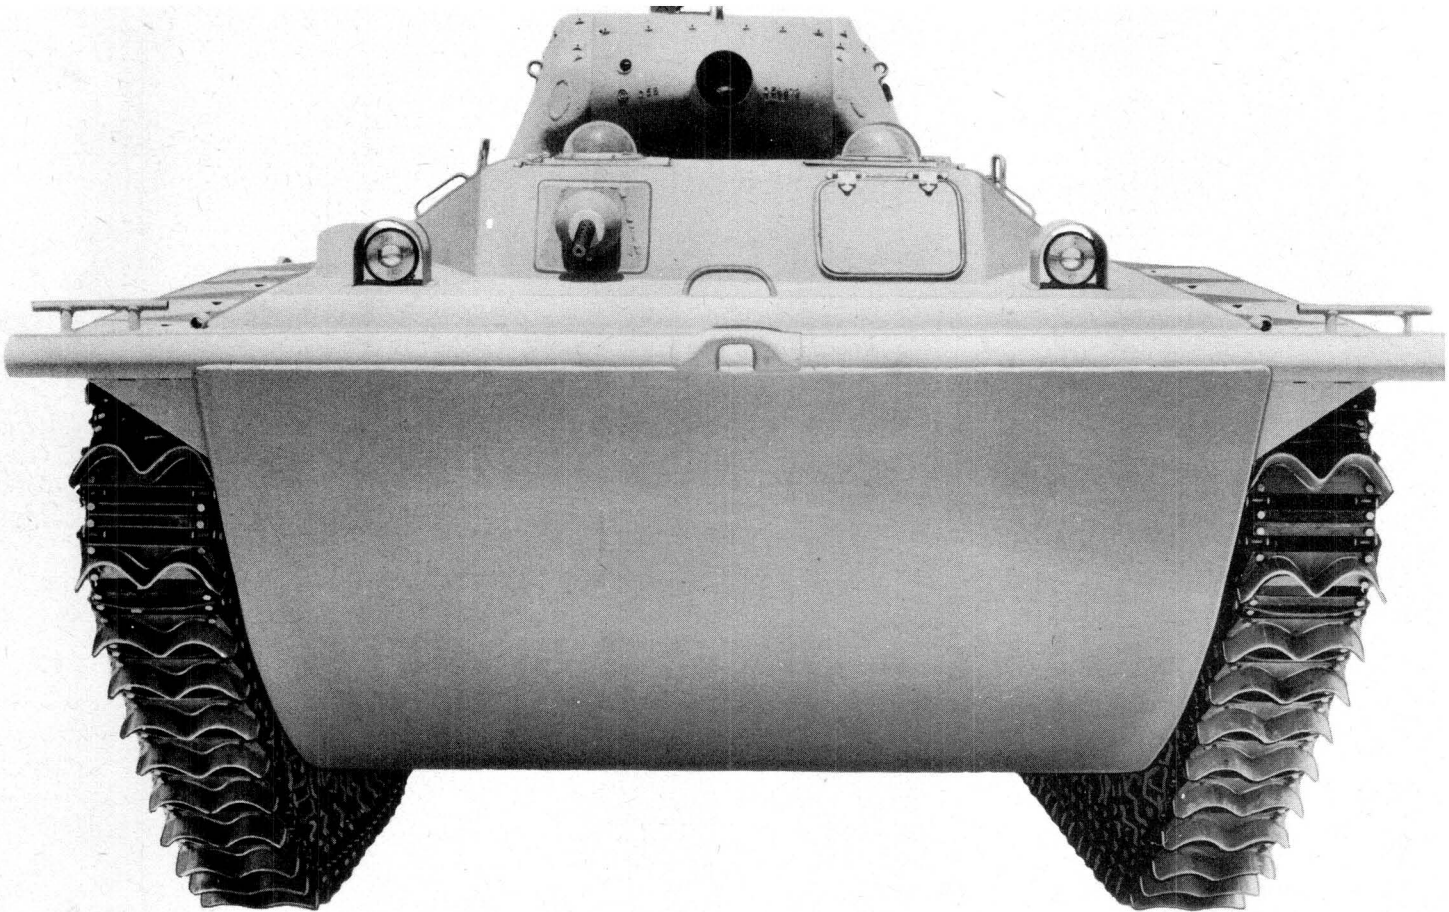


FIGURE J—VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4)—FRONT VIEW




RA PD 341191

FIGURE K—VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4)—REAR VIEW

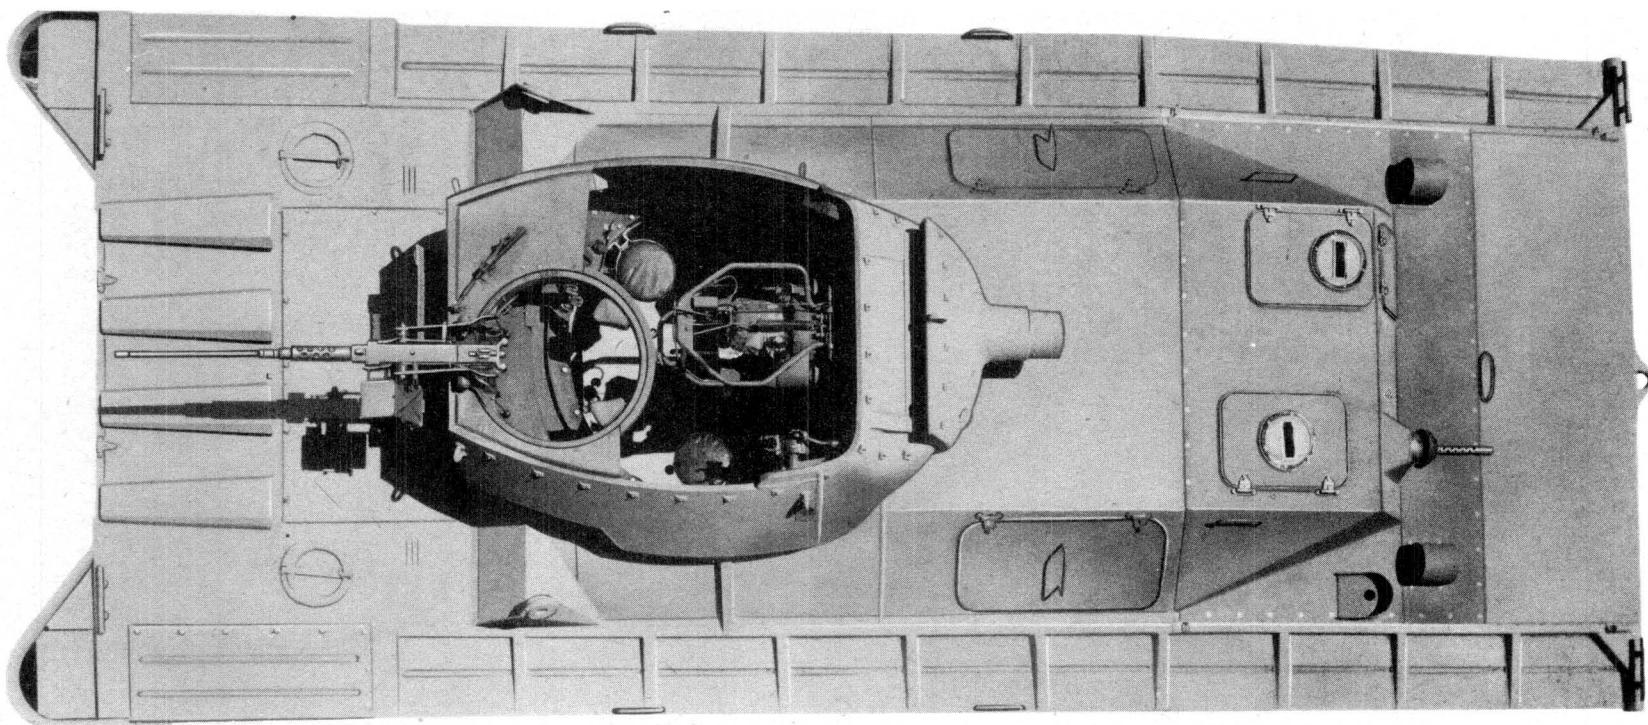

RA PD 341192

FIGURE L—VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4)—TOP VIEW

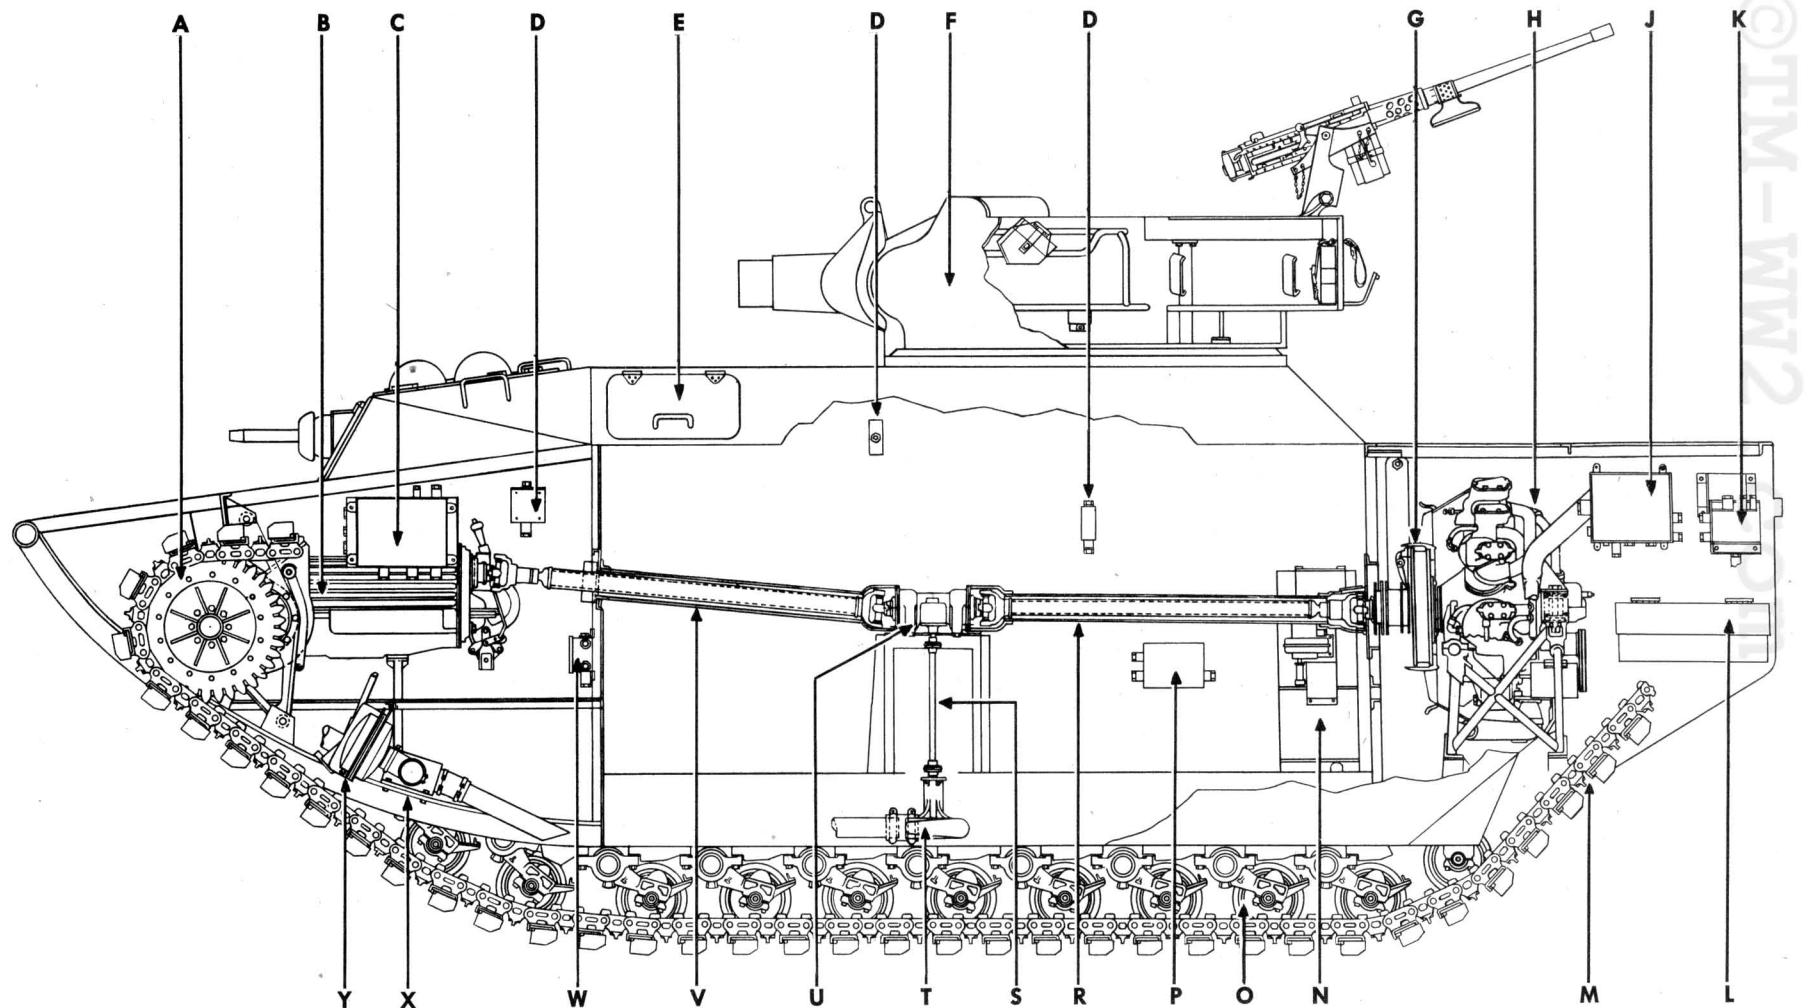


KEY PART NAME	PART No.	GROUP
A SPROCKET.....	FOM-5X112D...	1307
B TRANSMISSION, ASS'Y	FOM-41X1062E..	0700
C BOX, ASS'Y.....	FOM-70X1034E..	0606E
D BOX, ASS'Y.....	FOM-71X1103C..	2602D
E COVER.....	FOM-20X1937B..	1902
F TURRET, ASS'Y.....	FOM-P1206.....	1900
G CLUTCH, ASS'Y.....	FOM-31X1060E..	0200
H ENGINE, ASS'Y.....	A294699.....	0100

KEY PART NAME	PART No.	GROUP
J PANEL, ASS'Y.....	FOM-70X1015E..	0601B
K BOX, ASS'Y.....	FOM-70X1006C..	0606E
L BATTERY.....	FOM-P378.....	0610
M TRACK, ASS'Y.....	FOM-51X1111D..	1305
N GENERATOR, ASS'Y	DA-5067440....	0611
O WHEEL, ASS'Y.....	FOM-51B156C..	1303
P BOX, ASS'Y.....	FOM-71X1097D..	0606E
R SHAFT, ASS'Y.....	FOM-41X1029D..	0901

KEY PART NAME	PART No.	GROUP
S SHAFT, ASS'Y.....	FOM-41X1069B..	2208D
T PUMP, ASS'Y.....	FOM-P151.....	2208C
U POWER TAKE OFF, ASS'Y.....	FOM-41X1028D..	2012
V SHAFT, ASS'Y.....	FOM-41X1030D..	0901
W BOX, ASS'Y.....	FOM-70X1105C..	2602B
X BOX, ASS'Y.....	FOM-20X3030....	2208F
Y PUMP, ASS'Y.....	FOM-20X3031C..	2208F

RA PD 341187

FIGURE M—VEHICLE, LANDING, TRACKED (ARMORED) MK IV; LVT (A) (4)—CROSS SECTIONAL VIEW

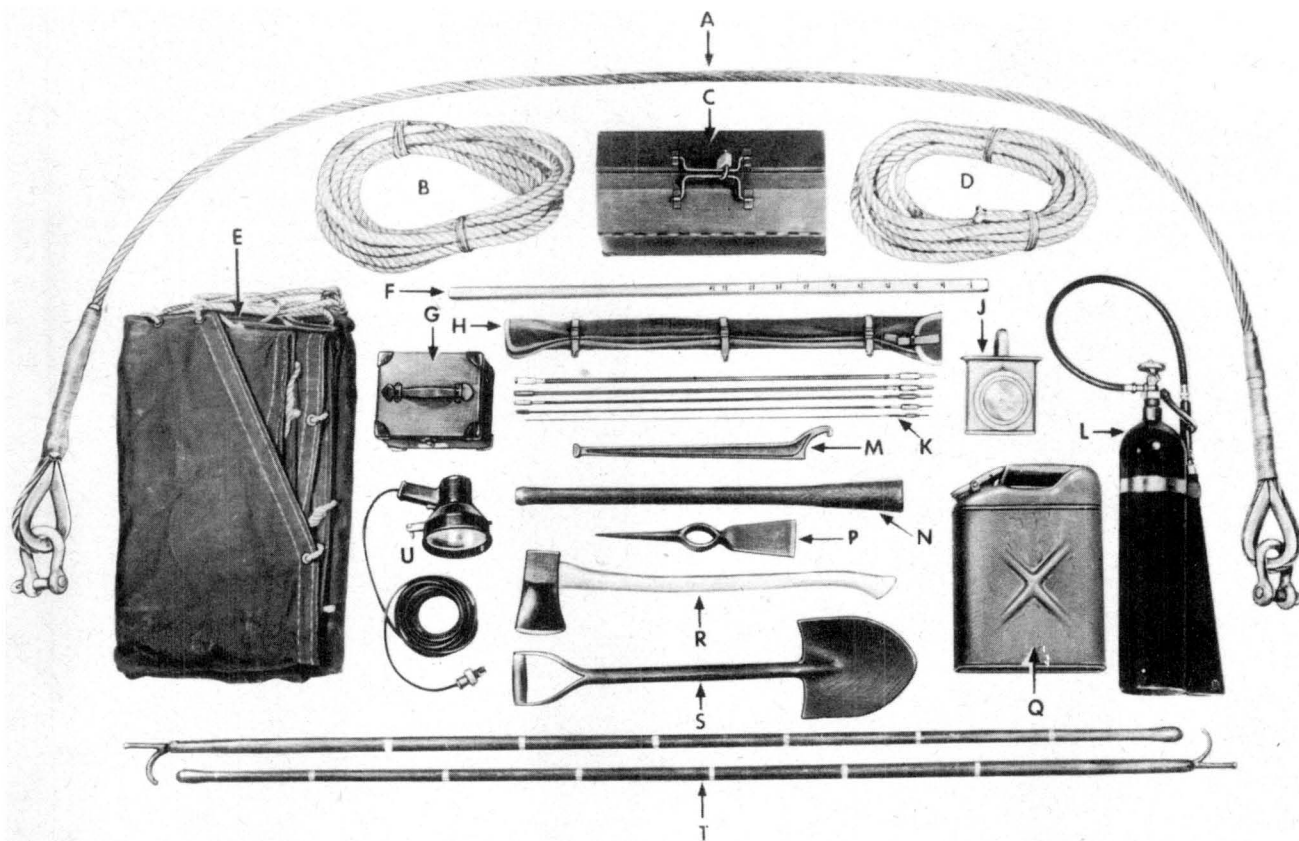


KEY	PART NAME	PART No.	GROUP
A	LINE	FOM-80X1027B	2301A
B	PAINTER	FOM-P533	2301A
C	BOX	FOM-P441	1817
D	STERNFAST	FOM-P534	2301A
E	COVER	FOM-80X1024C	2201
F	STICK	FOM-8X1057C	0300
G	BOX		0608A

KEY	PART NAME	PART No.	GROUP
H	COVER		2601
J	LANTERN	FOM-P374	0608A
K	ANTENNA		2601
L	EXTINGUISHER, assembly	FOM-P531	2402
M	WRENCH	FOM-8X1018C	2301

KEY	PART NAME	PART No.	GROUP
N	HANDLE		2301A
P	MATTOCK	FOM-P530	2301A
Q	BREAKER	FOM-P535	2301A
R	AX	FOM-P529	2301A
S	SHOVEL	FOM-P528	2301A
T	HOOK	FOM-P532	2301A
U	SPOTLIGHT	FOM-P376	0608A

RA PD 341188

FIGURE N—VEHICULAR ACCESSORIES

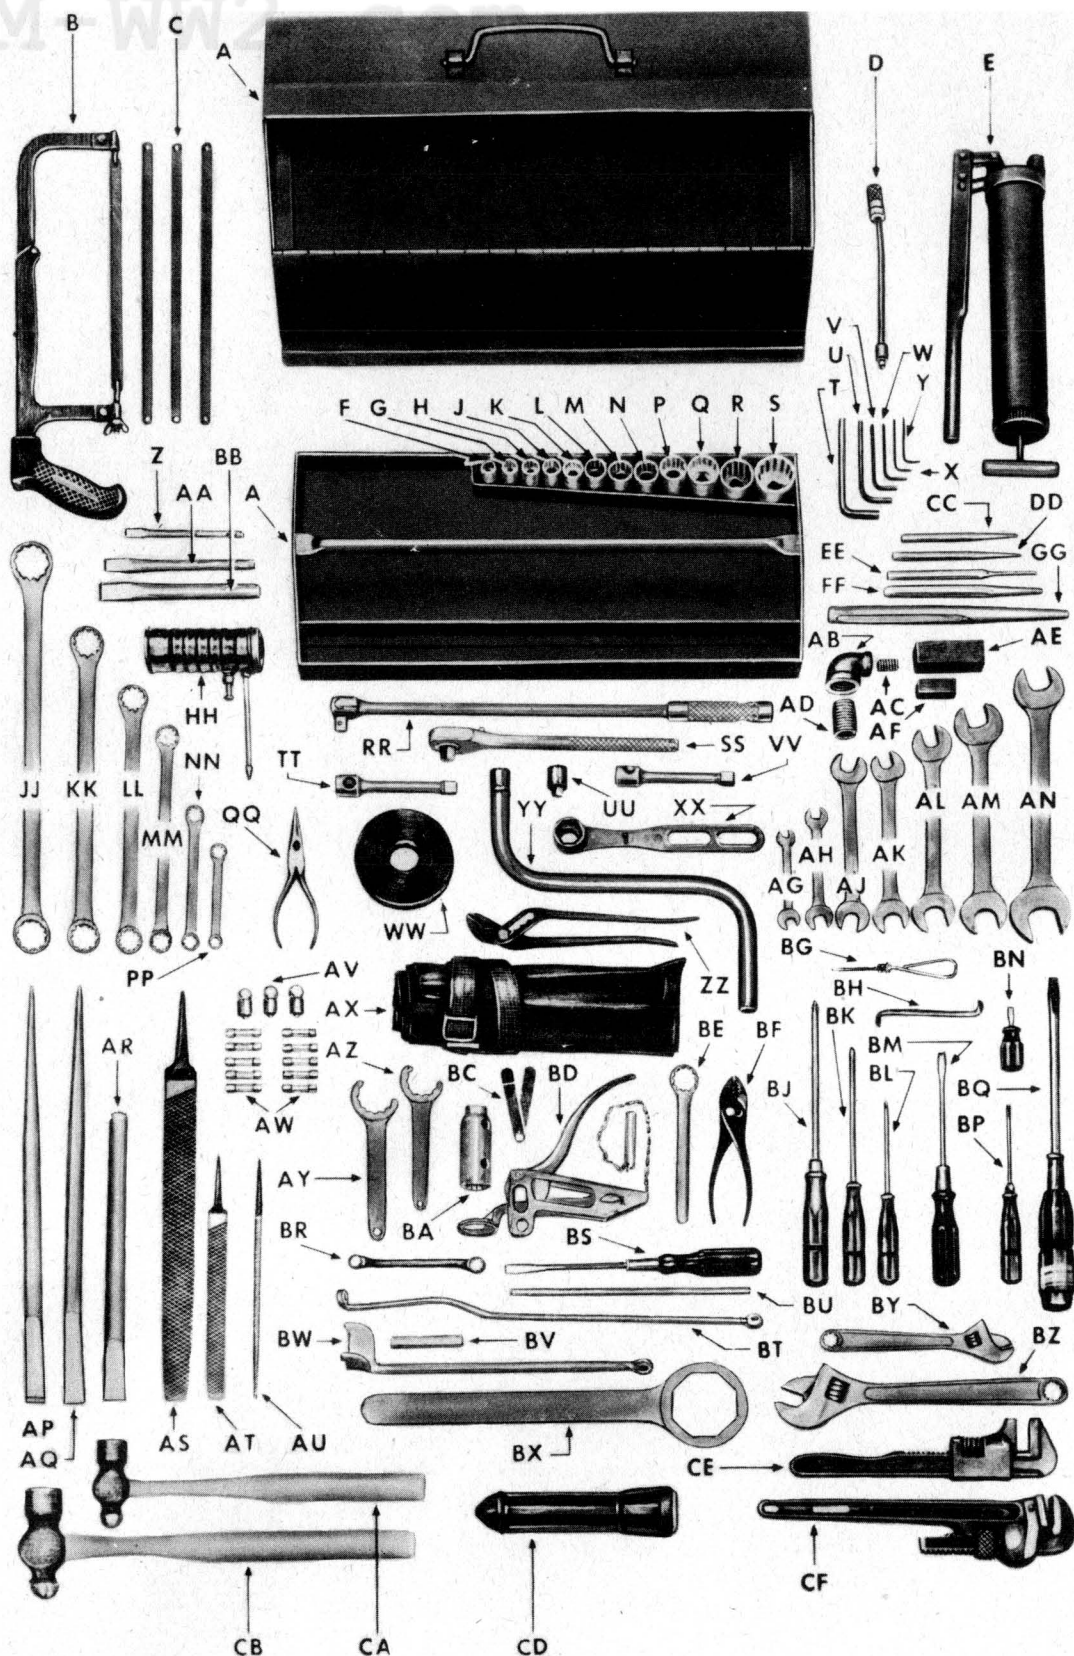

RA PD 76499

FIGURE P—VEHICULAR TOOL KIT

Key	Part Name	Part Number	Group Number
A	BOX	FOM-P441	1817
B	FRAME	FOM-P501	2301
C	BLADE	FOM-P502	2301
D	NOZZLE		2301
E	GUN	FOM-P476	2301
F	WRENCH	FOM-P442	2301
G	WRENCH	FOM-P443	2301
H	WRENCH	FOM-P444	2301
J	WRENCH	FOM-P445	2301
K	WRENCH	FOM-P446	2301
L	WRENCH	FOM-P447	2301
M	WRENCH	FOM-P448	2301
N	WRENCH	FOM-P448	2301
P	WRENCH	FOM-P449	2301
Q	WRENCH	FOM-P450	2301
R	WRENCH	FOM-P451	2301
S	WRENCH	FOM-P452	2301
T	WRENCH		2301
U	WRENCH	FOM-P498	2301
V	WRENCH	FOM-P497	2301
W	WRENCH	FOM-P496	2301
X	WRENCH	FOM-P495	2301
Y	WRENCH	FOM-P494	2301
Z	CHISEL	FOM-P481	2301
AA	CHISEL	FOM-P482	2301
BB	CHISEL	FOM-P483	2301
CC	PUNCH	FOM-P479	2301
DD	PUNCH	FOM-P480	2301
EE	PUNCH	FOM-P478	2301
FF	PUNCH	FOM-P477	2301
GG	PUNCH	FOM-P487	2301
HH	OILER	FOM-P507	2301
JJ	WRENCH	FOM-P462	2301
KK	WRENCH	FOM-P461	2301
LL	WRENCH	FOM-P460	2301
MM	WRENCH	FOM-P459	2301
NN	WRENCH	FOM-P458	2301
PP	WRENCH	FOM-P457	2301
QQ	PLIERS	FOM-P485	2301
RR	HANDLE	FOM-P454	2301
SS	RATCHET	FOM-P453	2301
TT	EXTENSION	FOM-P455	2301
UU	ADAPTER	FOM-P456	2301
VV	EXTENSION	FOM-P455	2301
WW	TAPE	FOM-P505	2301
XX	WRENCH		2301
YY	CRANK	FOM-80X1271B	2215
ZZ	PLIERS	FOM-P486	2301
AB	ELBOW	FOM-P509	2301
AC	NIPPLE	FOM-P508	2301

Key	Part Name	Part Number	Group Number
AD	NIPPLE	FOM-P510	2301
AE	PLUG	FOM-8X1272B	2301
AF	PLUG	FOM-P512	2301
AG	WRENCH	FOM-P463	2301
AH	WRENCH	FOM-P464	2301
AJ	WRENCH	FOM-P465	2301
AK	WRENCH	FOM-P466	2301
AL	WRENCH	FOM-P467	2301
AM	WRENCH	FOM-P468	2301
AN	WRENCH	FOM-P469	2301
AP	BAR	FOM-P488	2301
AQ	BAR	FOM-P488	2301
AR	CHISEL	FOM-P484	2301
AS	FILE	FOM-P493	2301
AT	FILE	FOM-P492	2301
AU	FILE	FOM-P491	2301
AV	LAMP	FOM-P636	0607B
AW	FUSE	FOM-P403	0607C
AX	ROLL	FOM-P514	1817
AY	WRENCH	FOM-P518	2301
AZ	WRENCH	FOM-P517	2301
BA	SOCKET	FOM-P521	2301
BC	GAGE	FOM-P513	2301
BD	COMPRESSOR	FOM-P526	2301
BE	WRENCH	FOM-P519	2301
BF	PLIERS	FOM-P516	2301
BG	SCREWDRIVER		2301
BH	SCREWDRIVER	FOM-P670	2301
BJ	SCREWDRIVER	FOM-P475	2301
BK	SCREWDRIVER	FOM-P474	2301
BL	SCREWDRIVER	FOM-P473	2301
BM	SCREWDRIVER	FOM-P511	2301
BN	SCREWDRIVER	FOM-P470	2301
BP	SCREWDRIVER	FOM-P471	2301
BQ	SCREWDRIVER	FOM-P515	2301
BR	WRENCH	FOM-P520	2301
BS	SCREWDRIVER	FOM-P472	2301
BT	WRENCH	FOM-P525	2301
BU	HANDLE	FOM-P527	2301
BV	WRENCH	FOM-P523	2301
BW	WRENCH	FOM-P524	2301
BX	WRENCH	FOM-P522	2301
BY	WRENCH	FOM-P503	2301
BZ	WRENCH	FOM-P504	2301
CA	HAMMER	FOM-P499	2301
CB	HAMMER	FOM-P500	2301
CD	FLASHLIGHT	FOM-P506	2301
CE	WRENCH	FOM-P489	2301
CF	WRENCH	FOM-P490	2301

RA PD 76499C

FIGURE P—VEHICULAR TOOL KIT

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
F,M	G167-0170348	A294699		GROUP 01—ENGINE	1
	G167-0115990		CO-35253	0100—ENGINE ASSEMBLY	
	G167-0118000		CO-5845	ENGINE, assembly (Continental, W670-9A).....	
	G167-0125825	C76074	CO-4863	(Includes:	
	G103-0100960		CO-5234A1	1 BAR, steady, engine (FOM-3X1037B)	
	G103-0101165	A191022	CO-23262	1 BEAM, support, engine (FOM-3X1149C)	
	G214-7033364		FOM-31X1060E	1 BRACKET, mounting, engine generator	
	G167-0131250		CO-A35270	1 CARBURETOR, engine, w/STUDS, assembly (BS-type NA-R6B)	
				1 CLAMP, engine generator mounting bracket	
	G167-0131252		CO-A35269	1 CLUTCH, master, assembly	
	G167-0131251		CO-A35267	1 CONDUIT, cranking motor to regulator and relay panel, w/CABLE, assembly (FOM-70X1003C-1)	
	G167-0131253		CO-A35268	1 CONDUIT, engine generator to regulator and relay panel, w/CABLE, assembly (FOM-70X1003C-3)	
	G167-0170338		CO-W670-9A	1 CONDUIT, left magneto to regulator and relay panel, w/CABLE, assembly (FOM-70X1003C-2)	
	G103-1585203		CO-A4813	1 CONDUIT, right magneto to regulator and relay panel, w/CABLE, assembly (FOM-70X1003C-4)	
	G103-0102420	A165851	CO-23274	1 ENGINE, assembly	
	G167-0196320		FOM-P292	1 FLYWHEEL, engine, w/FAN, assembly	
	G167-0202284		CO-A4960	2 GASKET, engine carburetor air horn plug	
	G167-0209390		CO-A6517	1 GENERATOR, engine, assembly (CO-40033) (DR-1106458)	
	G167-0217790		CO-5114	1 GOVERNOR, engine, assembly (PG-GC-309)	
	G103-0500440		CO-23272	1 HARNESS, shielded, ignition, assembly	
				1 HORN, air, engine carburetor	
	G103-0103640	C74411	SCI-10-20519	1 JUMPER, radio bonding, w/TERMINALS, assembly (engine mount) (FOM-P423)	
	G103-0105920	D31767	CO-5842	2 MAGNETO, assembly (Scintilla type VMN7DFA)	
	G103-0104540	B144054	CO-35250	1 MOTOR, cranking, engine, assembly (DR-1108682)	
	M001-0109372	A193557	CO-22489	2 PLUG, engine carburetor air horn	
	G103-0104680	B155667	CO-35217	14 PLUG, spark, w/GASKET, assembly (CP-63S)	
	G103-0104665	C65241	CO-A4174A	1 PUMP, fuel, engine, assembly (CAN-9151)	
	G103-0104705		CO-A4170A	1 PUMP, oil pressure and scavenger, engine, assembly	
	G168-6902540		CO-A6419	1 PUMP, oil scavenger, engine valve rocker, w/COUPLING, assembly	
	G103-0103045		CO-22530	1 SYSTEM, fuel priming)	
				GASKET SET, engine overhaul.....	
	G103-0102400		CO-20482	(Consists of:	
				1 GASKET, air horn to engine carburetor (vellumoid, 1/32 in. thk.)	

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G103-0102540	A160984	CO-20291	2 GASKET, elbow connection to engine oil pressure and scavenger pump (vellumoid, 1/32 in. thk.)	
	G103-0102320	B105701	CO-3112	1 GASKET, engine accessory case to crankcase (vellumoid, 1/32 in. thk.)	
	G103-0102420	A165851	CO-23274	2 GASKET, engine carburetor air horn plug (asbestos, 7/8 I.D. x 1 1/8 O.D. x 1/8 in. thk.)	
	G103-0102232	A231713	CO-22803	1 GASKET, engine carburetor to crankcase (vellumoid, 1/32 in. thk.)	
	G103-0102340	A190516-16	AIR-AN900-16	1 GASKET, engine crankcase oil sump drain plug (rd., cop-asbestos., 1 I.D. x 1 3/16 O.D. x 1/8 in. thk.)	
	G103-1593666	A189106	CO-20951	1 GASKET, engine crankcase oil sump to front crankcase (vellumoid, 1/16 in. thk.)	
	G103-0102960	A189107	CO-20952	1 GASKET, engine crankcase oil sump to rear crankcase (vellumoid, 1/16 in. thk.)	
	G103-0103040	A139822	CO-2867	1 GASKET, engine crankcase scavenger oil line (29/64 I.D. x 1 O.D. x 1/8 in. thk.)	
	G103-0103100	A139740	CO-2249	2 GASKET, engine cranking motor to accessory case (vellumoid, 1/32 in. thk.)	
	G103-0102740	A160995	CO-20423	1 GASKET, engine fuel pump to valve rocker oil scavenger pump (vellumoid, 1/32 in. thk.)	
	G103-0102820	A166229	CO-20595	1 GASKET, engine governor to generator drive shaft pulley (vellumoid, 1/32 in. thk.)	
	G103-0102920	A136042	CO-2589	1 GASKET, engine high-pressure oil screen housing to accessory case (vellumoid, 1/32 in. thk.)	
	G038-0125710	A190516-10	AIR-AN900-10	1 GASKET, engine high-pressure oil screen by-pass valve plug	
	G038-0125710	A190516-10	AIR-AN900-10	1 GASKET, engine high-pressure oil screen plug	
	G103-0102360	A190516-24	AIR-AN900-24	1 GASKET, engine high-pressure oil screen to housing (rd., cop-asbestos., 1 1/2 I.D. x 1 11/16 O.D. x 1/8 in. thk.)	
	G103-0100028	A139796	CO-2827	7 GASKET, engine intake pipe flange (cop-asbestos., 1/16 in. thk.)	
	G103-0102340	A190516-16	AIR-AN900-16	1 GASKET, engine oil high-pressure relief valve housing (rd., 1 I.D. x 1 3/16 O.D. x 1/8 in. thk.)	
	G038-0125730	A190516-14	AIR-AN900-14	1 GASKET, engine oil low-pressure relief valve housing (rd., cop-asbestos., 7/8 I.D. x 1 1/16 O.D. x 1/8 in. thk.)	
	G103-0102560	A136048	CO-2595	1 GASKET, engine oil pressure and scavenger pump, pressure gear body to scavenger gear body (vellumoid, 0.010 in. thk.)	
	G103-0102580	A166230	CO-20620	1 GASKET, engine oil pressure and scavenger pump, pressure gear body to scavenger gear body (vellumoid, 0.004 in. thk.)	
	G103-0102600	A166231	CO-20621	1 GASKET, engine oil pressure and scavenger pump, pressure gear body to scavenger gear body (vellumoid, 0.006 in. thk.)	
	G103-0102620	A166235	CO-20622	1 GASKET, engine oil pressure and scavenger pump, pressure gear body to scavenger gear body (vellumoid, 0.008 in. thk.)	
	G103-0102625	A136050	CO-2597	1 GASKET, engine oil pressure and scavenger pump to accessory case (vellumoid, 1/32 in. thk.)	
	G103-0102970	A190516-12	AIR-AN900-12	6 GASKET, engine valve rocker box cover hose nipple (cop-asbestos., 3/4 I.D. x 15/16 O.D. x 1/8 in. thk.)	
	G103-0103210	A160960	CO-20254	14 GASKET, engine valve rocker box cover (vellumoid, 1/32 in. thk.)	
	G103-0103000	A161028	CO-20532	1 GASKET, engine valve rocker oil scavenger pump inner cover to body (lead, 0.007 in. thk.)	
	G103-0103020	A160996	CO-20425	1 GASKET, engine valve rocker oil scavenger pump to accessory case (vellumoid, 1/32 in. thk.)	
	G103-0103140	A160964	CO-20262	14 GASKET, engine valve rocker push rod housing (vellumoid, 1/32 in. thk.)	

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0100—ENGINE ASSEMBLY (Cont'd)	
	G103-0102340	A190516-16	AIR-AN900-16	14 GASKET, engine valve rocker push rod housing gland nut (rd., cop-asbestos., 1 I.D. x 1 3/16 O.D. x 1/8 in. thk.)	
	G103-0102340	A190516-16	AIR-AN900-16	1 GASKET, engine valve rocker scavenger oil strainer (rd., cop-asbestos., 1 I.D. x 1 3/16 O.D. x 1/8 in. thk.)	
	G103-0102980	A161002	CO-20467	1 GASKET, engine valve rocker scavenger pump elbow (vellumoid, 1/32 in. thk.)	
	G103-0103200	A160972	CO-20268	14 GASKET, engine valve tappet guide to crankcase (vellumoid, 1/32 in. thk.)	
	G103-0102800	A189114	CO-20962	1 GASKET, generator drive shaft bearing retainer (vellumoid, 1/32 in. thk.)	
	G103-0102780	B141605	CO-500060	1 GASKET, generator drive shaft pulley support to accessory case (vellumoid, 1/64 in. thk.)	
	G103-0102860	A139738	CO-2247	2 GASKET, magneto to accessory case	
	G167-0194015	A231712	CO-22819	1 GASKET, tachometer drive cover nut (vellumoid, 1/32 in. thk.)	
	G103-0103120	A136041	CO-2588	1 GASKET, tachometer drive housing to accessory case (vellumoid, 1/32 in. thk.)	
	G103-0103424	A190530	CO-22098	1 HOSE, engine governor oil drain nipple to rocker scavenger tee (neoprene, 1/2 in. I.D. x 2 in. long)	
	G103-0103425		CO-20275	7 HOSE, engine valve rocker cover to line (neoprene, 5/8 I.D. x 1-7/8 in. long)	
	G103-0105440	A189144	CO-20889	2 OIL SEAL, magneto drive gear	
	G103-0104200	A139811	CO-2845	7 PACKING cylinder base (victoprene, 3/32 in. thk.)	
	G103-0104220	A139717	CO-2096	7 PACKING, engine intake pipe gland nut	
	G103-0104240	A160975	CO-20271	14 PACKING, engine interrocker box drain tube	
	G103-0104260	A160969	CO-20266	14 PACKING, engine valve rocker push rod housing (GPC-182)	
	G103-0103130		CO-20705	1 PASTE, gasket (in tube)	
				0101—CRANKCASE	
01-3	G103-0100580	A164140	CO-20538	BOLT, engine crankcase to crankcase, double end (special, alloy-S., 7/16-20NF-2 both ends, 7-21/32 over-all)	4
	G103-0103780	BBFX1DA-1	CO-2459	NUT, castle, alloy-S., cd-pltd., 7/16-20NF-2	8
	H001-0811039	BFAX1CE-1	CO-2506	PIN, cotter, split, S., cd-pltd. (type B), 3/32 x 3/4	8
	G103-0106960	A139760	CO-2475	WASHER, plain, S., cd-pltd., 7/16 in.	16
01-3	G103-0100561	A190770	CO-20997	BOLT, engine crankcase, long (alloy-S., 7/16-20NF-2 x 5-1/2)	1
01-3	G103-0103780	BBFX1DA-1	CO-2459	NUT, castle, alloy-S., cd-pltd., 7/16-20NF-2	1
01-3	H001-0811039	BFAX1CE-1	CO-2506	PIN, cotter, split, S., cd-pltd. (type B), 3/32 x 3/4	1
01-3	G103-0106960	A139760	CO-2475	WASHER, plain, S., cd-pltd., 7/16 in.	2
01-3	G103-0100537		CO-2835	BOLT, engine crankcase to crankcase, short (alloy-S., 7/16-20NF-2 x 4-7/8)	2
	G103-0103780	BBFX1DA-1	CO-2459	NUT, castle, alloy-S., cd-pltd., 7/16-20NF-2	2
	H001-0811039	BFAX1CE-1	CO-2506	PIN, cotter, split, S., cd-pltd. (type B), 3/32 x 3/4	2
	G103-0106960	A139760	CO-2475	WASHER, plain, S., cd-pltd., 7/16 in.	4
01-3	G103-0100935	B155362	CO-3427	CAGE, engine crankcase front thrust bearing	1

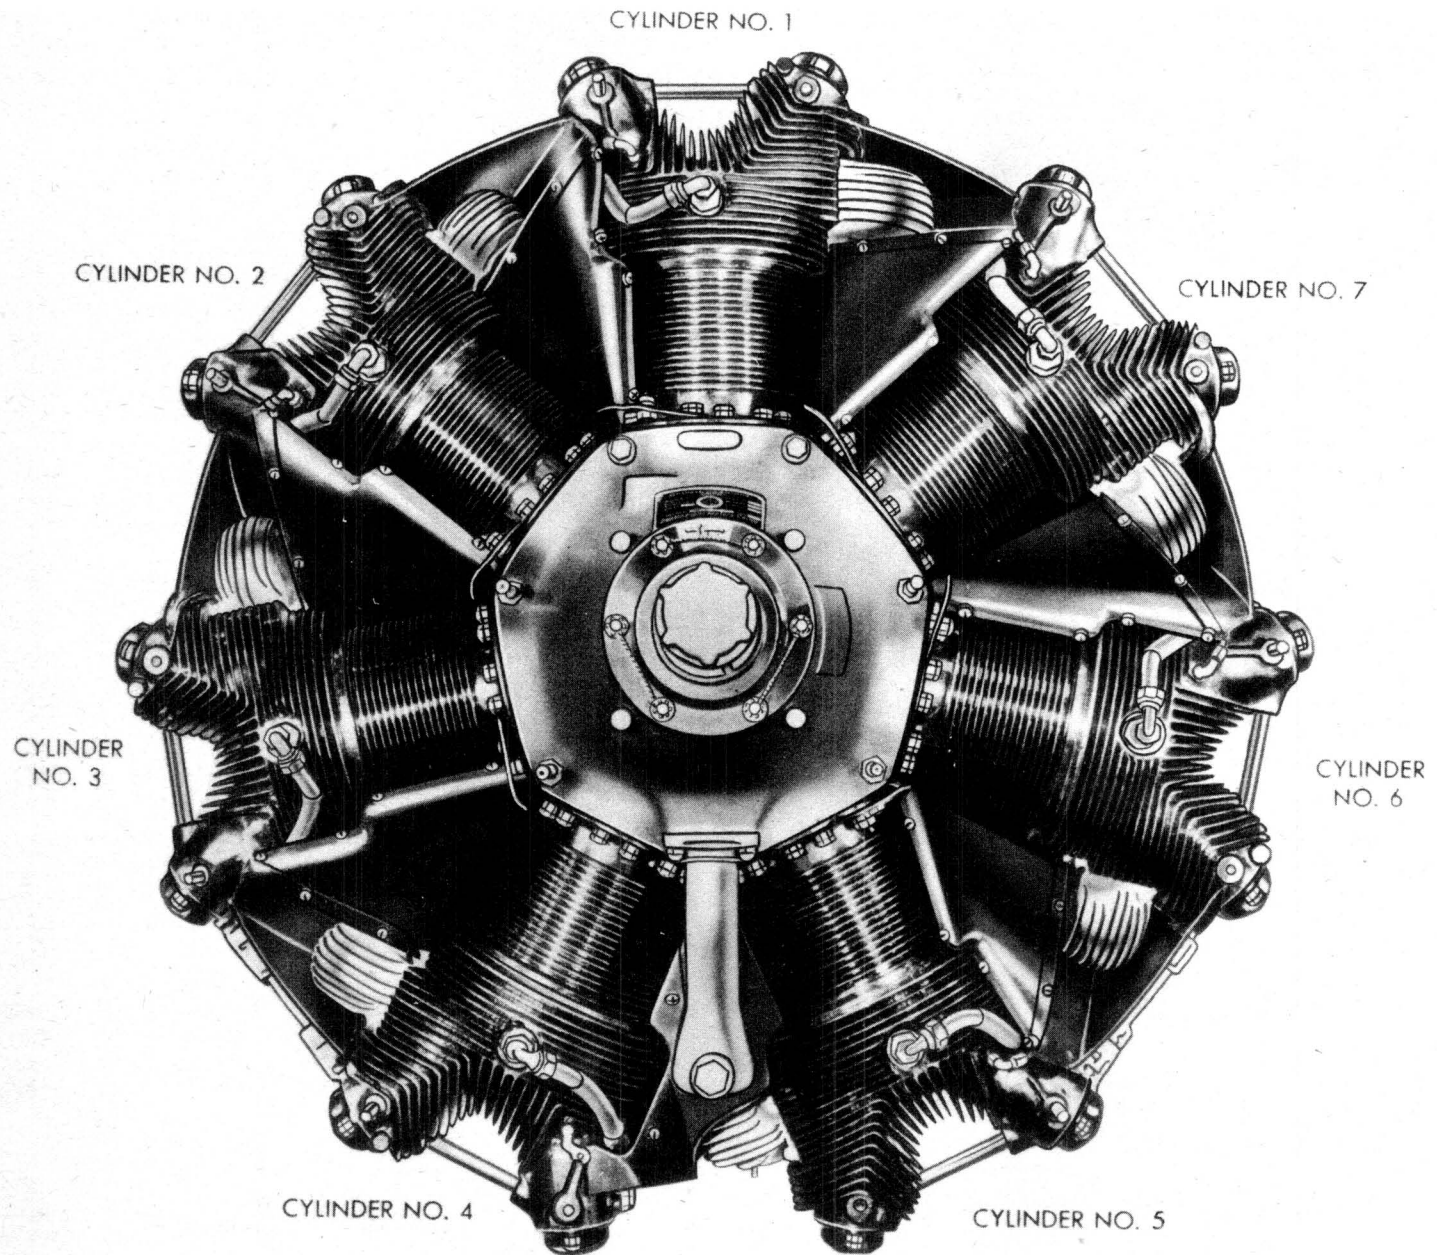


FIGURE 01-1—ENGINE LESS CLUTCH, FLYWHEEL, FAN, AND SHROUD—FRONT VIEW


RA PD 76336

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0101—CRANKCASE (Contd)	
01-3	G103-0101685		CO-A3428	COVER, engine crankcase front thrust bearing, assembly	1
01-3	G038-0138030	BBFX1CA	CO-500332	NUT, castle, alloy-S., 3/8-24NF-2	6
	H001-0811039	BFX1CE-1	CO-2506	PIN, cotter, split, S., cd-pltd. (type B), 3/32 x 3/4	6
01-3	G103-0106185	A166236	CO-20624	STUD, alloy-S., cd-pltd., dld. f/c-pin., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1-9/16 (standard size) (sq-end.)	6
	G167-0392287		CO-20624-03	STUD, alloy-S., cd-pltd., dld. f/c-pin., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1-9/16 (0.003 oversize) (pointed end)	as req.
	G103-0106185		CO-20624-06	STUD, alloy-S., cd-pltd., dld. f/c-pin., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1-9/16 (0.006 oversize) (ck-end.)	as req.
	G103-0106185		CO-20624-09	STUD, alloy-S., cd-pltd., dld. f/c-pin., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1-9/16 (0.009 oversize) (dld-end.)	as req.
01-3	G103-0106940	A136017	CO-2474	WASHER, special, plain, S., cd-pltd., 3/8 in.	6
	G103-0101805		CO-A6117A1	CRANKCASE, engine, assembly (Includes: front and rear crankcase, liners, studs, and nuts, lifting eye, crankcase attaching bolts, oil sump, steady bar support assembly, and front crankcase cover)	1
01-3	G103-0101845	E1651	CO-A6117	CRANKCASE, engine, assembly (Includes: front and rear crankcase, liners, studs lifting eyes and crankcase attaching bolts. Does not include oil sump, steady bar support assembly, front crankcase cover or the studs, related nuts, palnuts or washers)	1
	G038-0135260	B155360	CO-3425	LINER, engine crankcase intermediate bearing (5.328 O.D.)	1
	G214-7033365		CO-3425-40	LINER, engine crankcase intermediate bearing (5.368 O.D.) (0.040 oversize)	as req.
	G038-0135280	B155361	CO-3426	LINER, engine crankcase rear bearing (4.362 O.D.)	1
	G214-7033366		CO-3426-40	LINER, engine crankcase rear bearing (4.402 O.D.) (0.040 oversize)	as req.
	G038-0150960	A139763	CO-2520	PIN, dowel, engine crankcase bearing liner (br., 5/32 x 5/8 in.)	6
				0101A—CYLINDER AND HEAD	
01-4,5	G103-0101825	D33519	CO-A5239A	CYLINDER, engine, w/HEAD, assembly (Includes: rocker box covers, valve seat inserts, valve stem guides and studs)	7
	G103-0103825	A139769	CO-2557	NUT, special, hex., alloy-S., cd-pltd., 3/8-24NF-3	84
	G103-0104265	A139770	CO-2561	PALNUT, light, S., cd-pltd., 3/8-24NF-2	84
01-3	G103-0106165	A189131	CO-22006	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (3/4) x 1 3/8 (standard size) (sq-end.)	72
	G214-7033665		CO-22006-03	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (3/4) x 1 3/8 (0.003 oversize) (pointed end)	as req.
	G214-7033666		CO-22006-06	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (3/4) x 1 3/8 (0.006 oversize) (ck-end.)	as req.
	G214-7033667		CO-22006-09	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (3/4) x 1 3/8 (0.009 oversize) (dld-end.)	as req.

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-4	G103-0106180	A166224	CO-20099	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (5/8) x 1 1/2 (2 per cylinder except cylinder No. 4) (standard size) (sq-end.)	12
	G167-0392289		CO-20099-03	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (5/8) x 1 1/2 (0.003 oversize) (pointed end)	as req.
	G214-7033668		CO-20099-06	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (5/8) x 1 1/2 (0.006 oversize) (ck-end.)	as req.
	G214-7033669		CO-20099-09	STUD, alloy-S., cd-pltd., 3/8-16NC-4 (5/8) x 3/8-24NF-3 (5/8) x 1 1/2 (0.009 oversize) (dld-end.)	as req.
	G214-6902281	E2281	CO-6182	HEAD, cylinder, engine	7
	G103-0104200	A139811	CO-2845	PACKING, engine cylinder base (victoprene, 3/32 in. thk.) (Also part of GASKET SET, CO-22530)	7
				0102—CRANKSHAFT	
	G103-0100600	A139709	CO-2050	BOLT, clamping, engine crankshaft (alloy-S., 7/8-18NF-3 x 2 3/32)	1
	H101-177923	BFAX1DP-1	AIR-AN380-4-3	PIN, cotter, split, S., (type B), cd-pltd., 1/8 x 3/4	1
	G103-0106700	A139710	CO-2052	WASHER, S., 15/16 I.D. x 1 1/4 O.D. x 3/32 in. thk.	1
01-6	G103-0101120	A139716	CO-2079	CIRCLIP, engine crankshaft rear nut (7/8 in. diam.)	1
01-6	G214-7033368		CO-A5145A	CRANKSHAFT, engine, w/BEARINGS, assembly (Includes: cones, nuts, spacers, pins and oil thrower)	1
01-6	G103-0101800	D32987	CO-A5145	CRANKSHAFT, engine, w/o BEARINGS, assembly (Includes: clamping bolt, pin and washer)	1
01-20	G167-0314892		CO-2872A1	NUT, engine rear crankshaft, w/PLUG, assembly	1
01-20	G103-2369899		CO-22094	RING, extractor, engine rear crankshaft	1
01-6	G103-0106360	A164146	CO-20604	THROWER, oil, engine crankshaft	1
01-20	G103-0106780	A136029	CO-2576	WASHER, lock, engine rear crankshaft nut	1
				0102A—CRANKSHAFT BEARINGS	
01-6	H012-0710061	A164143	CO-20601	BEARING, ball, annular, single row, 2.7559 bore, 4.9213 O.D., 0.7874 width (engine crankshaft, front) (SAE 214V)	2
01-6	H012-1304045	CAAX3AL	CO-20600	BEARING, ball, No. 309 (type A, annular, single row, medium series, 1.7717 bore, 3.9370 O.D., 0.9843 width) (engine crankshaft, rear)	1
01-6	G103-0103820	A164147	CO-20605	NUT, engine crankshaft front bearing	1
01-6	G103-0105685	A164145	CO-20603	SPACER, engine crankshaft front bearing	1
01-20	G103-0105663	A164150	CO-20608	SPACER, engine rear crankshaft bearing	1
01-6	G103-0106680	A164144	CO-20602	WASHER, engine crankshaft front bearing, inner (S., 2 51/64 I.D. x 3 5/16 O.D. x 1/8 in. thk.)	1
				0103—PISTONS	
01-7	2220-4925		CO-4925	PISTON, engine	7
	G214-7033369		CO-4925-010	PISTON, engine (0.010 oversize)	as req.
	G214-7033370		CO-4925-015	PISTON, engine (0.015 oversize)	as req.
	G214-7033371		CO-4925-020	PISTON, engine (0.020 oversize)	as req.
	G167-0338854		CO-4925A1	PISTON, engine w/PINS, PLUGS and RINGS, assembly (standard size)	7
	G214-7033372		CO-4925A2	PISTON, engine, w/RINGS, assembly (standard size)	7

GROUP 01—ENGINE

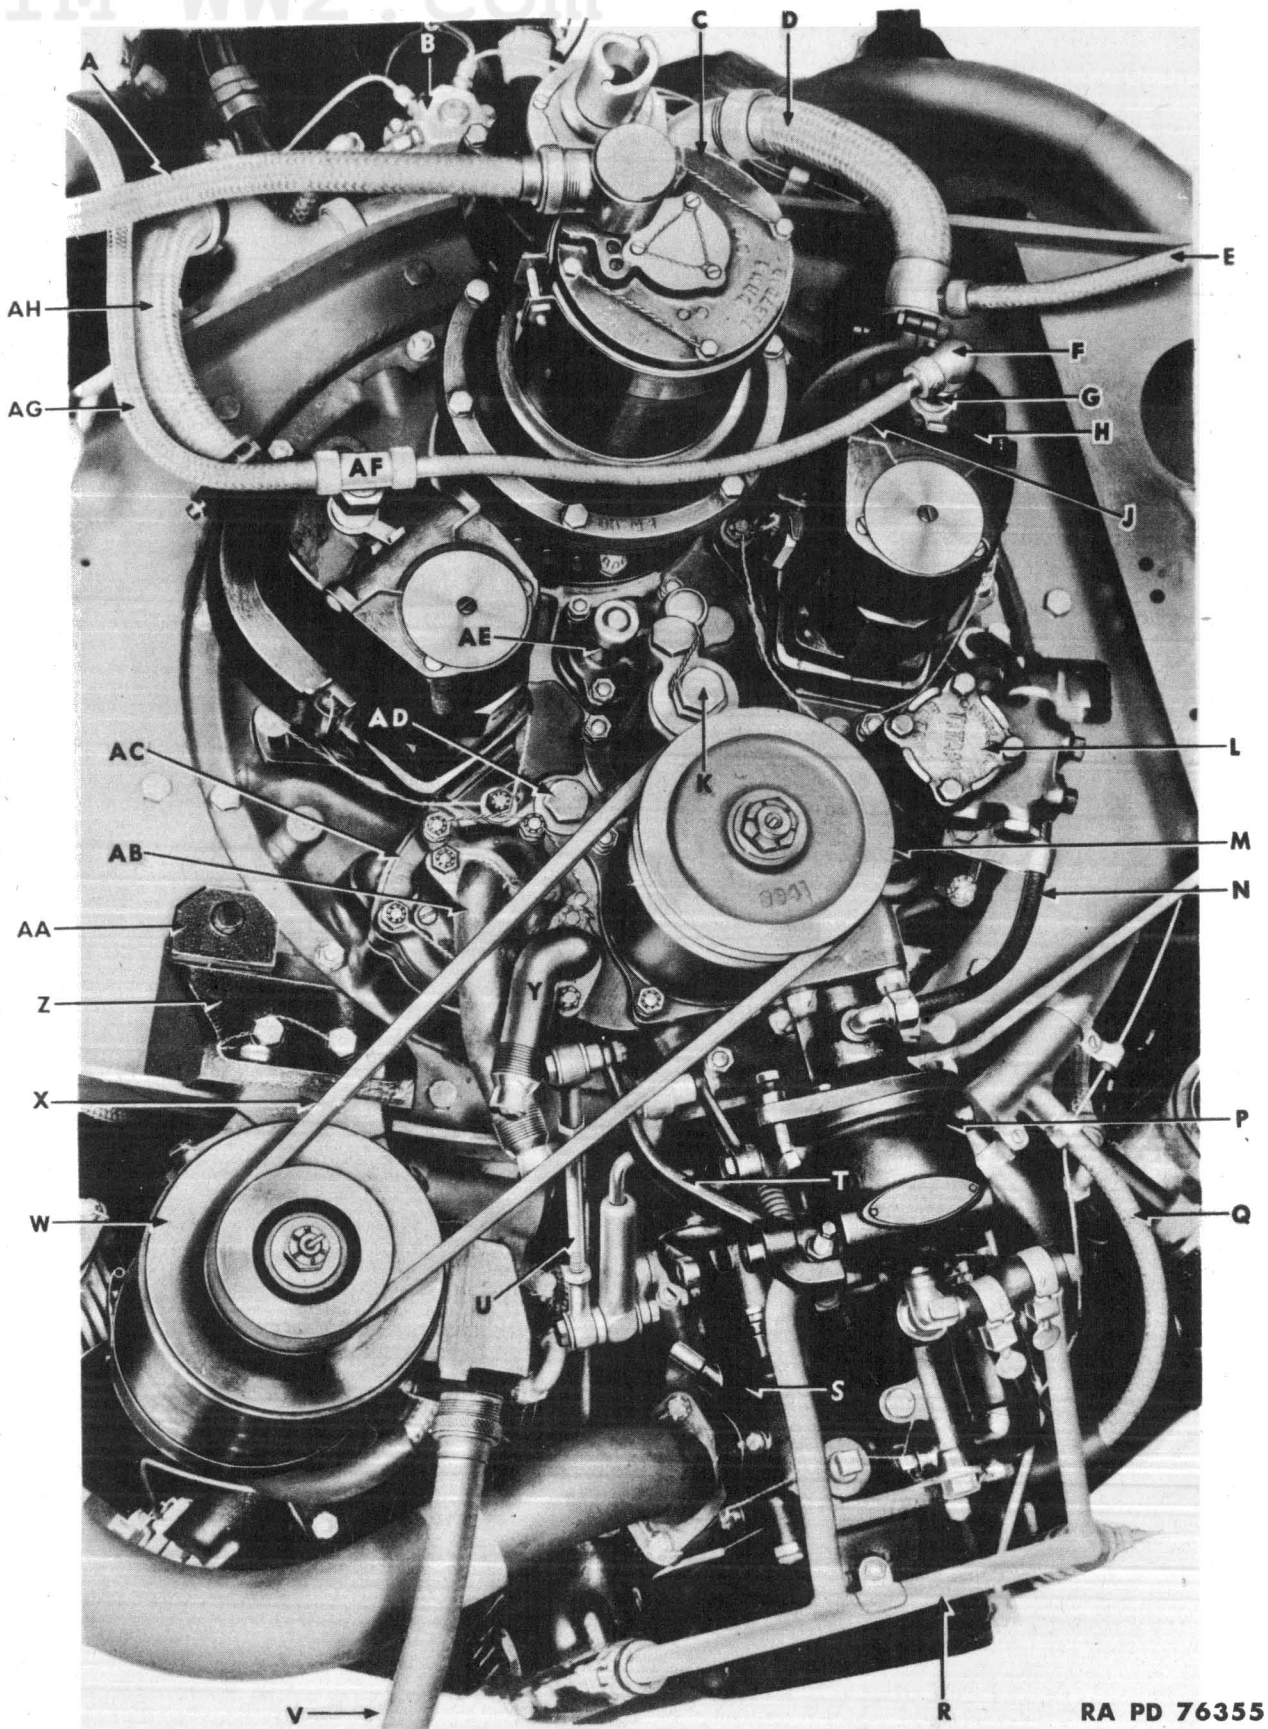

RA PD 76355

FIGURE 01-2—ENGINE ACCESSORIES—INSTALLED VIEW


Key	Part Name	Part Number	Group Number
A	CONDUIT, w/CABLE, assembly	FOM-70X1003C-1	0610B
B	DISTRIBUTOR	B192255	0308A-2
C	MOTOR, assembly	D31767	0602
D	CONDUIT, w/ADAPTER, assembly	BZ-E1199-71-0902	0604A
E	CONDUIT, w/CABLE, assembly	FOM-70X1003C-4	0604A
F	ELBOW	A143317	0604A
G	NUT	A143407	0604A
H	MAGNETO, assembly	C74411	0603A
J	CONDUIT, w/CABLE, assembly	B143534F	0604A
K	SCREEN, assembly	CO-A500014	0107E-2
L	PUMP, assembly	B155667	0302
M	PULLEY	B170061	0113B-4
N	HOSE, assembly	CO-A20645	0305
P	GOVERNOR, assembly	CO-A4960	0305
Q	CONDUIT, assembly	BZ-E1199-66-2107	0604A
R	TEE	D38369	0107J
S	CARBURETOR, assembly	CO-5245A1	0301
T	LEVER, assembly	PG-A2159	0305
U	ROD, assembly	CO-20811	0305A
V	CONDUIT, w/CABLE, assembly	FOM-70X1003C-3	0606C
W	GENERATOR, assembly	FOM-P292	0601
X	BELT	C67972	0113B-4
Y	CONNECTION	A189139	0107-1
Z	BRACKET	C76074	0601A
AA	CLAMP	A191022	0601A
AB	CONNECTION	B150882	0107
AC	PUMP, assembly	C65241	0107
AD	STRAINER, assembly	A189103	0107C
AE	DRIVE, assembly	B105674	0113B-8
AF	TEE	A143318	0604A
AG	CONDUIT, w/CABLE, assembly	FOM-70X1003C-2	0604A
AH	CONDUIT, w/ADAPTER, assembly	BZ-E1199-72-0902	0604A

RA PD 76355C

FIGURE 01-2—ENGINE ACCESSORIES—INSTALLED VIEW

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0103A—PISTON RINGS	
01-7	G103-0104927	A190540	CO-22210	RING, piston, engine, compression, lower (3rd groove) (standard size).....	7
	G214-7033373		CO-22210-010	RING, piston, engine, compression, lower (3rd groove) (0.010 oversize).....	as req.
	G214-7033374		CO-22210-020	RING, piston, engine, compression, lower (3rd groove) (0.020 oversize).....	as req.
01-7	2220-35294		CO-35294	RING, piston, engine, compression, upper (2 upper grooves) (standard size).....	14
	G214-7033376		CO-35294-010	RING, piston, engine, compression, upper (2 upper grooves) (0.010 oversize).....	as req.
	G214-703377		CO-35294-020	RING, piston, engine, compression, upper (2 upper grooves) (0.020 oversize).....	as req.
01-7	G103-0104925	A190539	CO-22209	RING, piston, engine, oil control (lower groove) (standard size).....	7
	G214-703378		CO-22209-010	RING, piston, engine, oil control (lower groove) (0.010 oversize).....	as req.
	G214-703379		CO-22209-020	RING, piston, engine, oil control (lower groove) (0.020 oversize).....	as req.
				0103B—PISTON PINS	
01-7	G103-0104340	A160962	CO-20260	PIN, piston, engine (7/8 I.D. x 1 3/16 O.D. x 4 9/16 in. long).....	7
	G103-2338750		CO-A20260	PIN, piston, engine, w/PLUGS, assembly.....	7
01-7	G038-0162010	A160963	CO-20261	PLUG, engine piston pin.....	14
				0104—CONNECTING RODS AND BEARING	
01-8	2220-23524		CO-23524	BEARING, engine master connecting rod.....	1
01-8	G103-0100845	A139814	CO-2859	BUSHING, engine articulated connecting rod to knuckle pin (bz., 0.928 I.D. x 1.1066 O.D. x 1 27/32 in. long).....	6
01-8	G103-0100885	A139718	CO-2110	BUSHING, engine connecting rod to piston pin (bz., 1.178 I.D. x 1.347 O.D. x 1 27/32 in. long).....	7
01-8	G103-0101020	A139815	CO-2860	CIRCLIP, engine articulated connecting rod knuckle pin (15/16 in. diam.).....	6
01-8	G103-0103551	BGAX6B	CO-2219	KEY, Woodruff, ni-S., 1/8 x 5/8 in. (No. 405 engine articulated connecting rod knuckle pin).....	6
	2220-23834		CO-23834	PIN, engine master rod piston pin bushing.....	1
01-8	G103-0104320	A139817	CO-A23152	PIN, knuckle, engine articulated connecting rod, assembly (std. size).....	6
	G214-7033670		CO-A23152-005	PIN, knuckle, articulated connecting rod, assembly (0.0005 oversize).....	as req.
	G214-7033671		CO-A23152-01	PIN, knuckle, engine articulated connecting rod, assembly (0.001 oversize).....	as req.
	G214-7033672		CO-A23152-05	PIN, knuckle, engine articulated connecting rod, assembly (0.005 oversize).....	as req.
01-8	G038-0163430	B108076	CO-3192	ROD, connecting, engine, articulated.....	6
	G103-0104985	B108077	CO-A3192	ROD, connecting, engine, articulated, w/BUSHINGS, assembly.....	6
01-8	G103-0105025	D7020	CO-5071	ROD, connecting, engine, master.....	1
	2220-A50023		CO-A50023	ROD, connecting, engine, master, assembly (Includes: bearing, bushing and pin).....	1
	2220-A50023A2		CO-A50023A2	ROD, connecting, engine, master, w/KNUCKLE PINS, assembly (Includes: rod assembly, circlip and key).....	1
	G214-7033673		CO-A50023A1	ROD SET, connecting, engine.....	1
				(Consists of:	
				6 ROD, w/BUSHINGS, assembly	
				1 ROD, w/KNUCKLE PINS, assembly)	
	G103-0104985	B108077	CO-A3192		
			CO-A50023A2		

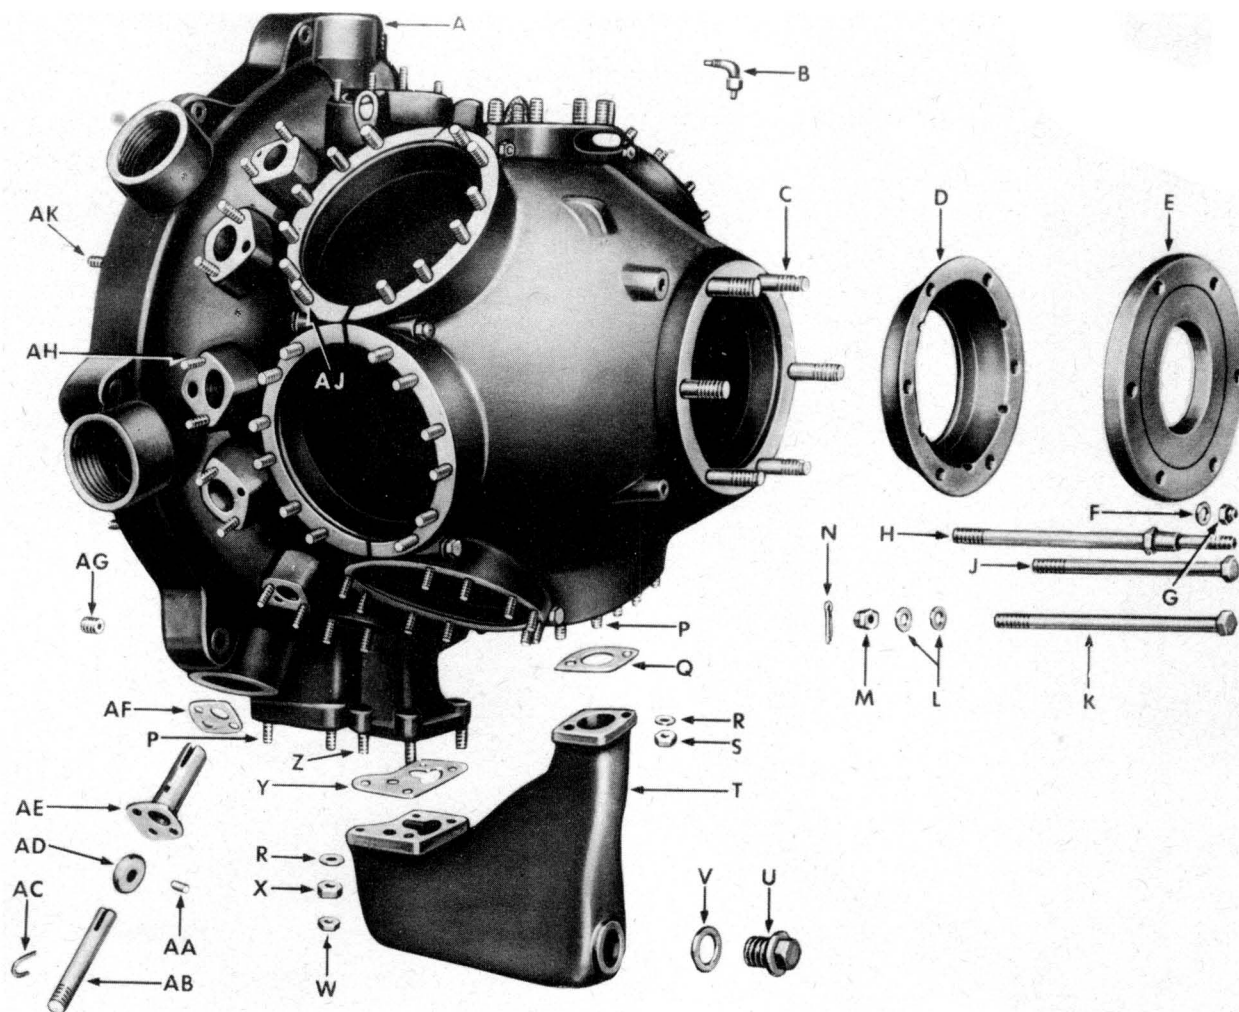


Key	Part Name	Part Number	Group Number
A	CRANKCASE, assembly.	E1651	.0101
B	JET	A139752	.0308A
C	STUD	A166236	.0101
D	CAGE	B155362	.0101
E	COVER	CO-A3428	.0101
F	WASHER	A136017	.0101
G	NUT	BBFX1CA	.0101
H	BOLT	A164140	.0101
J	BOLT	CO-2835	.0101
K	BOLT	A190770	.0101
L	WASHER	A139760	.0101
M	NUT	BBFX1DA-1	.0101
N	PIN	BFA1CE-1	.0101
P	STUD	A189122	.0107A-0301
Q	GASKET	A189106	.0107A
R	WASHER	A136016	.0107A
S	NUT	BBFX1BA-1	.0107A
T	SUMP	D38287	.0107A
U	PLUG	A190535	.0107A
V	GASKET	A190516-16	.0107A
W	PALNUT	A160945	.0107A
X	NUT	A143866	.0107A
Y	GASKET	A189107	.0107A
Z	STUD	A189141	.0107A
AA	PIN	A160961	.0105A
AB	TAPPET, w INSERT, assembly	A160986	.0105A
AC	CIRCLIP	A160988	.0105A
AD	ROLLER	A139722	.0105A
AE	GUIDE	B152102	.0105A
AF	GASKET	A160972	.0105A
AG	PLUG	A20188	.0107J
AH	STUD	A189118	.0105B
AJ	STUD	A189131	.0101A
AK	STUD	A189121	.0113B

FIGURE 01-3—CRANKCASE AND RELATED PARTS

RA PD 341078

GROUP 01—ENGINE

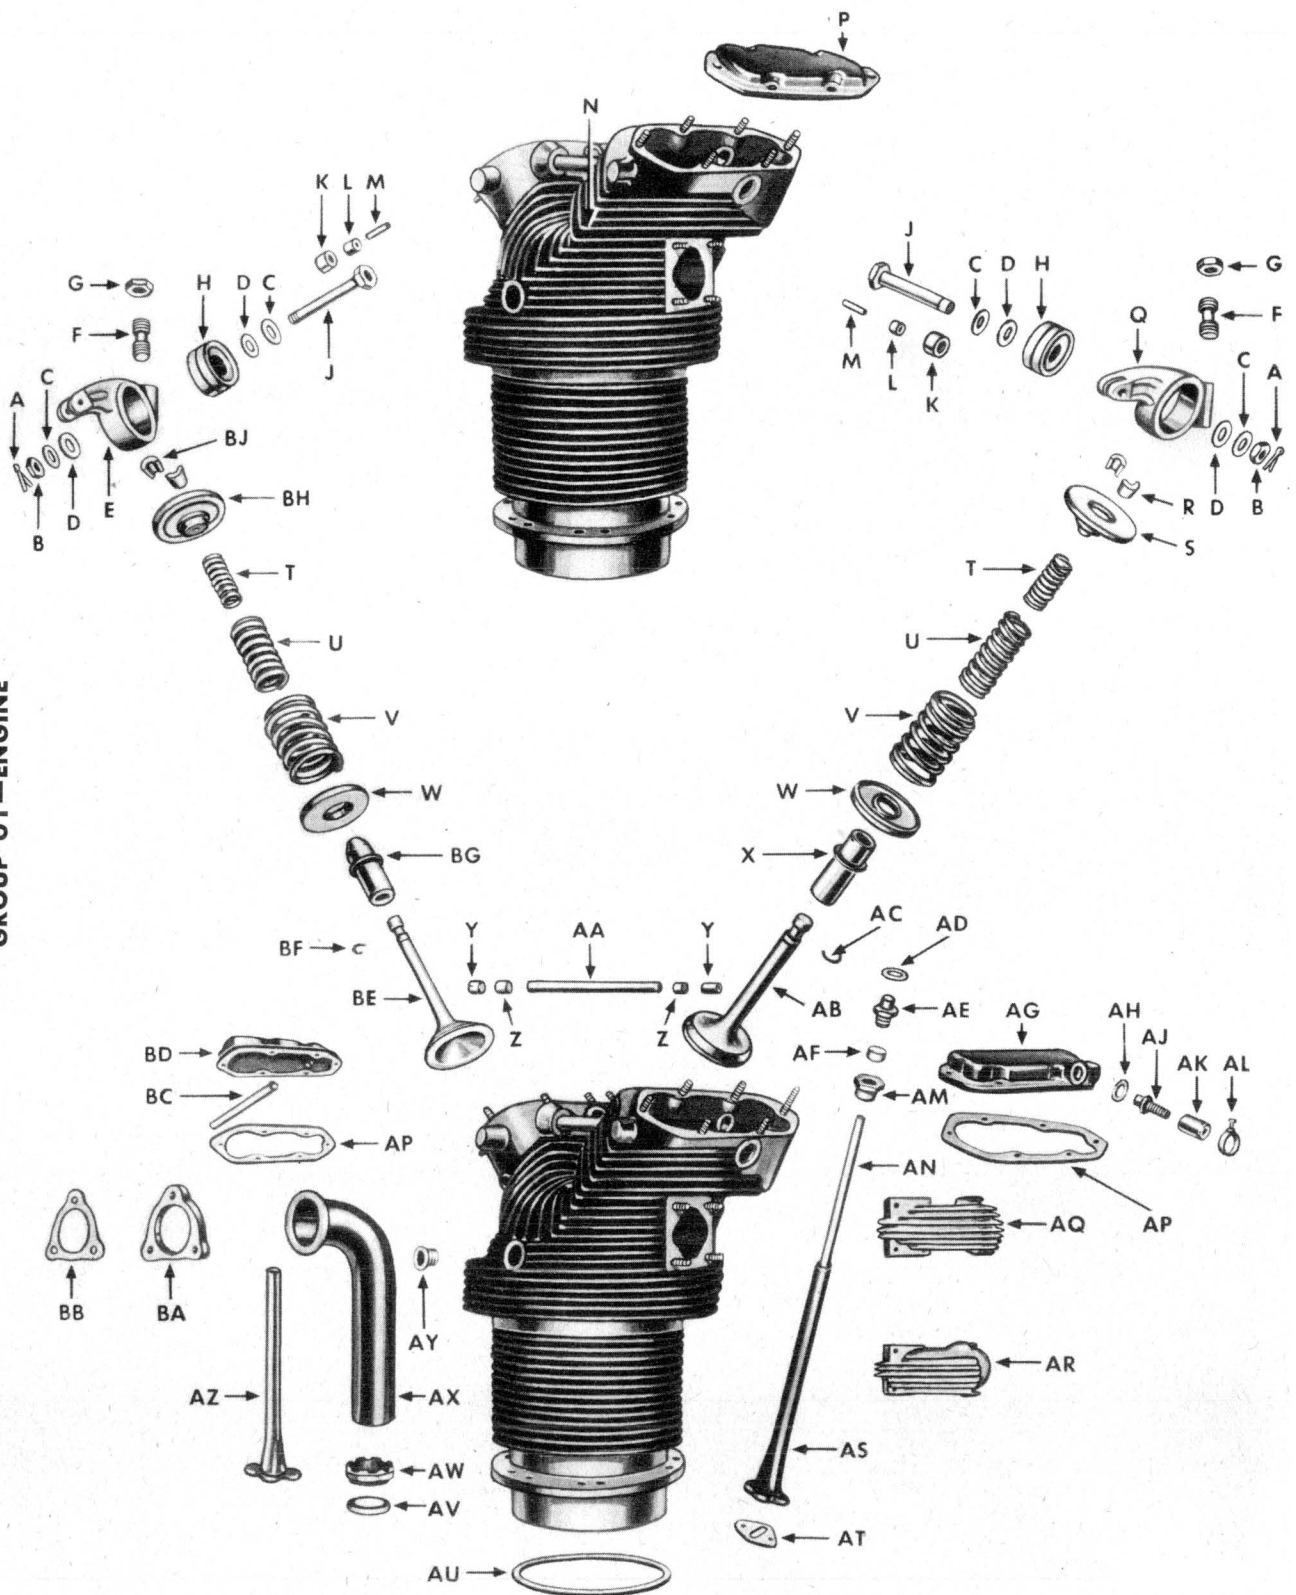

RA PD 76291

FIGURE 01-4—CYLINDER AND RELATED PARTS


Key	Part Name	Part Number	Group Number
A	PIN	BFAX1EF-1	0105B
B	NUT	A139727	0105B
C	WASHER	A139730	0105B
D	WASHER	A160957	0105B
E	ROCKER	B152098	0105B
F	SCREW	A160958	0105
G	NUT	A160959	0105
H	BEARING	CO-23159	0105B
J	SHAFT	A161026	0105B
K	ROLLER	A20198	0105B
L	BUSHING	A20199	0105B
M	PIN	A20200	0105B
N	CYLINDER, w/HEAD, assembly	D33519	0101A
P	COVER	C75690	0105C
Q	ROCKER	B152100	0105B
R	LOCK	A143884	0105
S	SEAT	A141619	0105
T	SPRING	A143882	0105
U	SPRING	A143881	0105
V	SPRING	B169323	0105
W	WASHER	B141602	0105
X	GUIDE	A143885	0105
Y	NUT	A160976	0107J
Z	PACKING	A160975	0107J
AA	TUBE	A160973	0107J
AB	VALVE	B141620	0105
AC	CIRCLIP	A143886	0105
AD	GASKET	A1R-AN900-16	0105B
AE	RETAINER	A161014	0105B
AF	PACKING	A160969	0105B
AG	COVER	C75692	0105C
AH	GASKET	A190516-12	0107J
AJ	NIPPLE	A160977	0107J
AK	HOSE	A160978	0107J
AL	CLAMP	A1R-AN745-2A	0107J
AM	NUT	A161019	0105B
AN	ROD, assembly	A160971	0105B
AP	GASKET	A160960	0105C
AQ	ELBOW, w/STUDS, assembly	B170183	0108B
AR	ELBOW, w/STUDS, assembly	B170184	0108B
AS	HOUSING, assembly	A160967	0105B
AT	GASKET	A160964	0105B
AU	PACKING	A139811	0101A
AV	PACKING	A139717	0108A
AW	NUT	A139803	0108A
AX	PIPE	C65239	0108A
AY	INSERT	A139701	0604B
AZ	HOUSING, assembly	A160966	0105B
BA	FLANGE	A139804	0108A
BB	GASKET	A139796	0108A
BC	TUBE	A160979	0107J
BD	COVER	C75691	0105C
BE	VALVE	A160949	0105
BF	CIRCLIP	A160951	0105
BG	GUIDE	A160950	0105
BH	SEAT	B141616	0105
BJ	LOCK	A143878	0105

RA PD 76291C

FIGURE 01-4—CYLINDER AND RELATED PARTS

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0105—VALVES, SEATS, GUIDES, AND SPRINGS	
01-4	G103-0104040	A143886	CO-20401	CIRCLIP, engine exhaust valve (1/2 in. diam.)	7
01-4	G103-0101080	A160951	CO-20242	CIRCLIP, engine intake valve (1/2 in. diam.)	7
01-4	G103-0103320	A143885	CO-20400	GUIDE, engine exhaust valve stem	7
	G214-7033380		CO-20400-03	GUIDE, engine exhaust valve stem (0.003 oversize)	as req.
	G214-7033381		CO-20400-06	GUIDE, engine exhaust valve stem (0.006 oversize)	as req.
	G214-7033382		CO-20400-09	GUIDE, engine exhaust valve stem (0.009 oversize)	as req.
01-04	G103-0103360	A160950	CO-20241	GUIDE, engine intake valve stem	7
	G214-7033383		CO-20241-03	GUIDE, engine intake valve stem (0.003 oversize)	as req.
	G214-7033384		CO-20241-06	GUIDE, engine intake valve stem (0.006 oversize)	as req.
	G214-7033385		CO-20241-09	GUIDE, engine intake valve stem (0.009 oversize)	as req.
	G103-0103450	A189142	CO-20884	INSERT, engine exhaust valve seat	7
	G214-7033386		CO-20884-03	INSERT, engine exhaust valve seat (0.003 oversize)	as req.
	G214-7033387		CO-20084-10	INSERT, engine exhaust valve seat (0.010 oversize)	as req.
	G214-7033388		CO-20884-20	INSERT, engine exhaust valve seat (0.020 oversize)	as req.
	G214-7033389		CO-20884-30	INSERT, engine exhaust valve seat (0.030 oversize)	as req.
	G103-0103451	A139800	CO-2831	INSERT, engine intake valve seat	7
	G214-7033390		CO-2831-03	INSERT, engine intake valve seat (0.003 oversize)	as req.
	G214-7033391		CO-2831-10	INSERT, engine intake valve seat (0.010 oversize)	as req.
	G214-7033392		CO-2831-20	INSERT, engine intake valve seat (0.020 oversize)	as req.
	G214-7033393		CO-2831-30	INSERT, engine intake valve seat (0.030 oversize)	as req.
01-4	G103-0103580	A143884	CO-20399	LOCK, engine exhaust valve spring seat	14
01-4	G103-0103600	A143878	CO-20366	LOCK, engine intake valve spring seat	14
01-4	G103-0104140	A160959	CO-20253	NUT, lock, engine valve adjusting screw (alloy-S., 7/8 hex., 5/8-18NF-3, 3/16 in. thk.)	14
01-4	G103-0105420	A160958	CO-20252	SCREW, adjusting, engine valve	14
01-4	G103-0105460	B141619	CO-3292	SEAT, engine exhaust valve spring	7
01-4	G103-0105480	B141616	CO-3271	SEAT, engine intake valve spring	7
01-4	G103-0105860	A143882	CO-20385	SPRING, engine valve, inner	14
01-4	G103-0105880	A143881	CO-20384	SPRING, engine valve, intermediate	14
01-4	G103-0105900	B169323	CO-3840	SPRING, engine valve, outer	14
01-4	G103-0106580	B141620	CO-3299	VALVE, engine, exhaust	7
01-4	G103-0106600	A160949	CO-20240	VALVE, engine, intake	7
01-4	G103-0106985	B141602	CO-500049	WASHER, engine valve spring	14
				0105A—TAPPETS	
01-3	G103-0101140	A160988	CO-20294	CIRCLIP, engine valve tappet (11/16 in. diam.)	14
01-3	G103-0103200	A160972	CO-20268	GASKET, engine valve tappet guide (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)	14

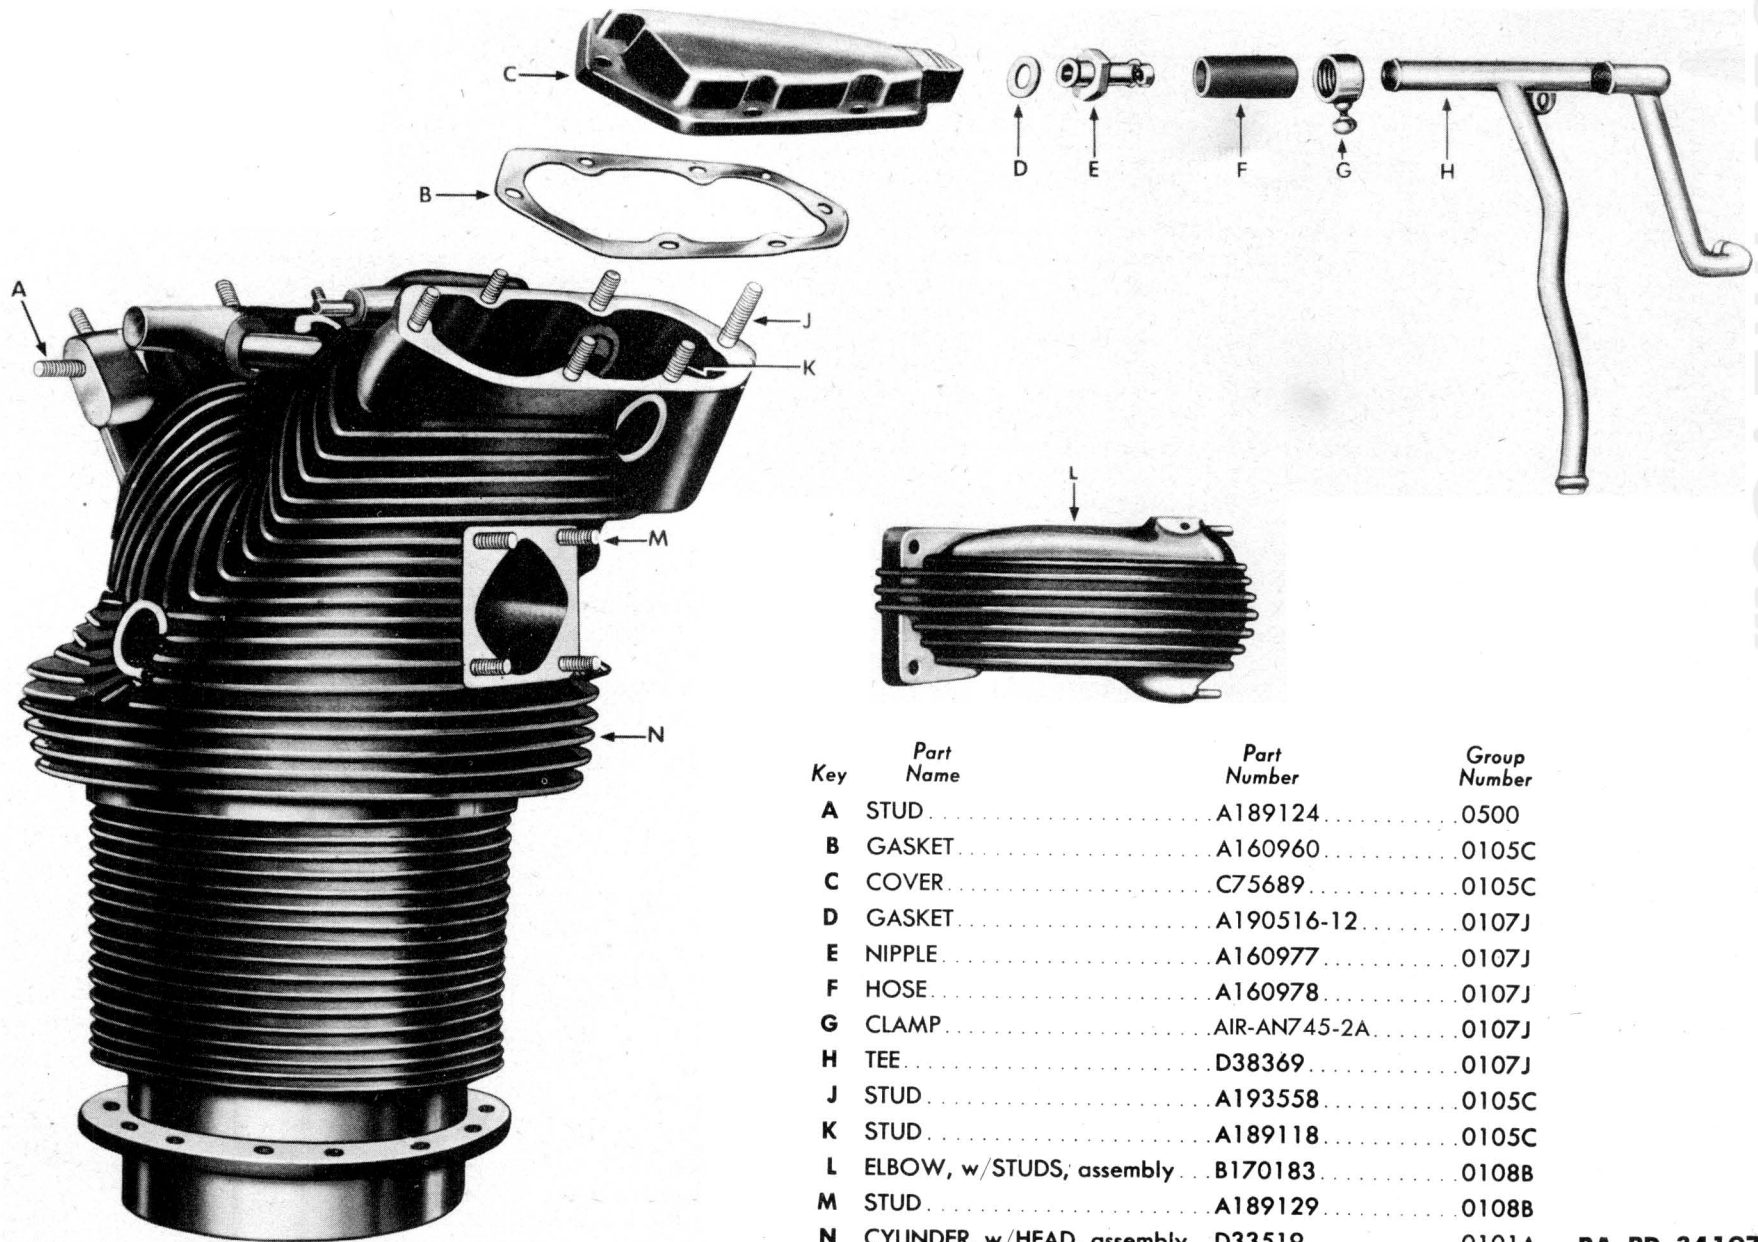

Key	Part Name	Part Number	Group Number
A	STUD	A189124	0500
B	GASKET	A160960	0105C
C	COVER	C75689	0105C
D	GASKET	A190516-12	0107J
E	NIPPLE	A160977	0107J
F	HOSE	A160978	0107J
G	CLAMP	AIR-AN745-2A	0107J
H	TEE	D38369	0107J
J	STUD	A193558	0105C
K	STUD	A189118	0105C
L	ELBOW, w/STUDS, assembly	B170183	0108B
M	STUD	A189129	0108B
N	CYLINDER, w/HEAD, assembly	D33519	0101A


RA PD 341079

FIGURE 01-5—CYLINDER

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0105A—TAPPETS (Cont'd)	
01-3	G103-0103340	B152102	CO-3360	GUIDE, engine valve tappet.....	14
01-3	G103-0104380	A160961	CO-20255	PIN, engine valve tappet roller (3/8 diam. x 11/16).....	14
01-3	G103-0105080	A139722	CO-2129	ROLLER, engine valve tappet.....	14
	G038-0176670		CO-A20292A1	TAPPET, engine valve, w/GUIDE, assembly (Includes: tappet w/roller assembly, guide, gasket, and circlip).....	14
01-3	G103-0106320	A160986	CO-A20292	TAPPET, engine valve, w/INSERT, assembly.....	14
	G103-0106325		CO-A20292A	TAPPET, engine valve, w/ROLLER, assembly (Includes: tappet, assembly, pin, and roller).....	14
				0105B—ROCKERS, SHAFTS, AND HOUSINGS	
01-4	G167-0118020		CO-23159	BEARINGS, roller, engine intake and exhaust valve rocker.....	14
01-4	G103-0100920	A20199	CO-2255	BUSHING, engine valve rocker roller (S., 1/4 I.D. x 7/16 O.D. x 5/16 in. long).....	14
01-4	G103-0103140	A160964	CO-20262	GASKET, engine valve rocker push rod housing (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	14
01-4	G103-0102340	A190516-16	AIR-AN900-16	GASKET, engine valve rocker push rod housing retainer (Also listed as part of GASKET SET, CO-22530).....	14
01-4	G038-0131390	A160967	CO-B20263	HOUSING, engine exhaust valve rocker push rod, assembly.....	7
	G038-0131420		CO-B20263A1	HOUSING, engine exhaust valve rocker push rod, w/gland NUT and PACKING, assembly.....	7
	G103-0104060	A156959	CO-2437	NUT, regular, hex., alloy-S., cd-pltd., 1/4-28NF-3.....	14
	G103-0104266	A160946	CO-2886	PALNUT, light, S., cd-pltd., 1/4-28NF.....	14
	G103-0106045	A189118	CO-20988	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8 x 1/4-28NF-3 (7/16) x 1 1/8 (standard size) (sq-end.).....	14
	G167-0392290		CO-20988-03	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.003 oversize) (pointed end).....	as req.
	G214-7033674		CO-20988-06	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7033675		CO-20988-09	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.009 oversize) (dld-end.).....	as req.
	G103-0106900	A139759	CO-2472	WASHER, plain, S., cd-pltd., 1/4 in.....	14
01-4	G103-0103442	A160966	CO-A20263	HOUSING, engine intake valve rocker push rod, assembly.....	7
			CO-A20263A1	HOUSING, engine intake valve rocker push rod, w/gland NUT and PACKING, assembly.....	7
	G103-0104060	A156959	CO-2437	NUT, regular, hex., alloy-S., cd-pltd., 1/4-23NF-3.....	14
	G103-0104266	A160946	CO-2886	PALNUT, light, S., cd-pltd., 1/4-28NF.....	14
01-3	G103-0106045	A189118	CO-20988	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (standard size) (sq-end.).....	14

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G167-0392290		CO-20988-03	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.003 oversize) (pointed end).....	as req.
	G214-7033674		CO-20988-06	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7033675		CO-20988-09	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.009 oversize) (dld-end.).....	as req.
	G103-0106900	A139759	CO-2472	WASHER, plain, S., cd-pltd., 1/4 in.	14
01-4	G103-0103900	A161019	CO-20516	NUT, gland, engine valve rocker push rod housing.	14
01-4	G103-0104260	A160969	CO-20266	PACKING, engine valve rocker push rod housing (GPC-182).....	14
01-4	G103-0104360	A20200	CO-2256	PIN, engine valve rocker roller.	14
01-4	G103-0104780	A161014	CO-20515	RETAINER, engine valve rocker push rod housing.	14
01-4	G038-0165230	B152100	CO-3349	ROCKER, engine exhaust valve.	7
	2220-B3992A1		CO-B3992A1	ROCKER, engine intake valve, assembly (Includes: bearing, bushing, pin, and roller)....	7

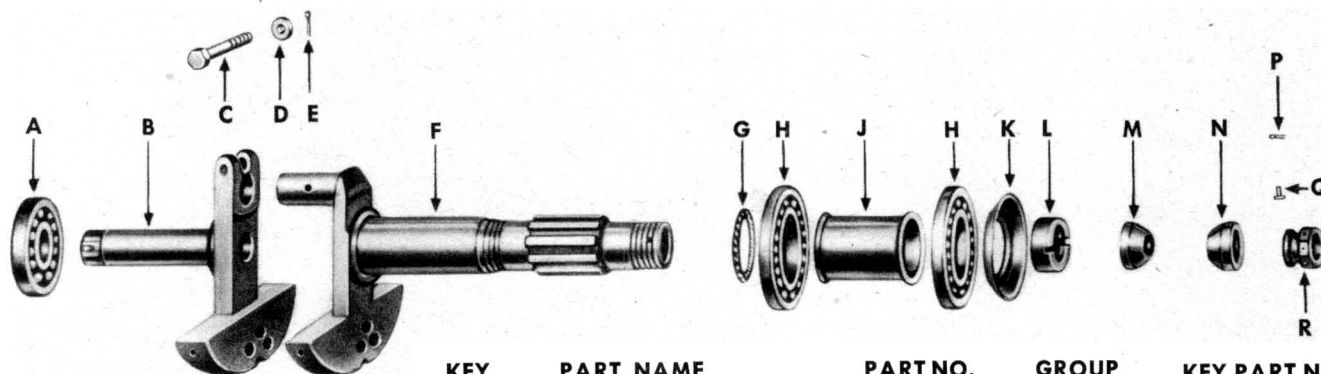

KEY	PART NAME	PART NO.	GROUP	KEY	PART NAME	PART NO.	GROUP
A	BEARING.....	CAAX3AL	0102A	G	WASHER.....	A164144.....	0102A
B	CRANKSHAFT, W/COUNTERWEIGHT, ASS'Y (furnished only as part of crankshaft CO-A5145).....		0102	H	BEARING.....	A164143.....	0102A
C	BOLT.....	A139709	0102	J	SPACER.....	A164145.....	0102A
D	WASHER.....	A139710	0102	K	THROWER....	A164146.....	0102
E	PIN.....	BFA11DP-1	0102	L	NUT.....	A164147.....	0102A
F	CRANKSHAFT, W/COUNTERWEIGHT, ASS'Y (furnished only as part of crankshaft CO-A5145).....		0102	M	CONE.....	A164148.....	0109
				N	CONE.....	A164149.....	0109
				P	PIN.....	BFA11BD-1.....	0109
				Q	PIN.....	AN393-17.....	0109
				R	NUT.....	A161005.....	0109


RA PD 341080

FIGURE 01-6—CRANKSHAFT ASSEMBLY—EXPLODED VIEW

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0105B—ROCKERS, SHAFTS, AND HOUSINGS (Con't)	
	G103-2110478		CO-B3992A2	ROCKER, engine intake valve, w/SCREW, assembly (Includes: bearing, bushing, pin, roller and nut).	7
01-4	G038-8807260	B152098	CO-3348	ROCKER, engine intake valve.	7
	2220-B3993A1		CO-B3993A1	ROCKER, engine exhaust valve, assembly (Includes: bearing, bushing, pin, and roller).	7
	G103-2110477		CO-B3993A2	ROCKER, engine exhaust valve, w/SCREW, assembly (Includes: bearing, bushing, pin, roller and nuts).	7
01-4	G103-0105040	A160971	CO-A20267	ROD, push, engine valve rocker, assembly (Includes: ball ends).	14
01-4	G103-0105060	A20198	CO-2254	ROLLER, engine valve rocker.	14
01-4	G103-0105540	A161026	CO-20529	SHAFT, engine valve rocker (hex-hd., 9/16-18NF-3 x 2 17/32).	14
01-4	G103-0103700	A139727	CO-2152	NUT, slotted, hex., alloy-S., cd-pltd., 9/16-18NF-3, 9/32 in. high.	14
01-4	G103-0101470	BFAX1CF-1	CO-2505	PIN, cotter, split, S., cd-pltd., 3/32 x 5/8.	14
01-4	G103-0107000	A139730	CO-2157	WASHER, engine valve rocker shaft, outer (plain, S., cd-pltd., 39/64 I.D. x 1 1/16 O.D. x 1/16 in. thk.).	28
01-4	G103-01006980	A160957	CO-20251	WASHER, engine valve rocker shaft, inner (plain, S., cd-pltd., 19/32 I.D. x 1 1/8 O.D. x 5/64 in. thk.).	28
				0105C—VALVE ROCKER BOX COVERS AND GASKETS	
01-4	G103-0103665		CO-4720	COVER, engine exhaust valve rocker box, side outlet (For cylinder Nos. 4 and 6).	2
	G103-0101725	C75692	CO-4720A	COVER, engine exhaust valve rocker box, side outlet, assembly (For cylinder Nos. 4 and 6) (Includes: gasket, nipple, and plug).	2
01-4	G103-0101726	C75691	CO-4721	COVER, engine intake valve rocker box, side outlet (For cylinder Nos. 3 and 5).	2
	G103-0101726		CO-4721A	COVER, engine intake valve rocker box, side outlet, assembly (For cylinder Nos. 3 and 5) (Includes: gasket, nipple, and plug).	2
01-4	G103-0101724	C75690	CO-4722	COVER, engine valve rocker box (For cylinder Nos. 1, 2, 3 (exhaust only), 6 (intake only), and 7).	8
01-5	G103-0101727	C75689	CO-4723	COVER, engine valve rocker box, rear outlet (For cylinder No. 4 (intake) and cylinder No. 5 (exhaust)).	2
	G103-0101727		CO-4723A	COVER, engine valve rocker box, rear outlet, assembly (For cylinder No. 4 (intake) and cylinder No. 5 (exhaust)) (Includes: gasket, nipple, and plug).	2
	G103-0104060	A156959	CO-2437	NUT, regular, hex., alloy-S., cd-pltd., 1/4-28NF-3.	84
	G103-0103140	A160946	CO-2886	PALNUT, light, S., cd-pltd., 1/4-28NF.	84
01-5	G103-0106045	A189118	CO-20988	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16 x 1 1/8 (standard size) (sq-end.).	70
	G167-0392290		CO-20988-03	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8 x 1/4-28NF-3 (7/16) x 1 1/8 (0.003 oversize) (pointed end).	as req.
	G214-7033674		CO-20988-06	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.006 oversize) (ck-end.).	as req.

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-5	G214-7033675	A193558	CO-20988-09	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.009 oversize) (dld-end.)	as req.
	G103-0106012		CO-22539	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 9/16 (standard size) (sq-end.)	14
	G214-7033657		CO-22539-03	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 9/16 (0.003 oversize) (pointed end.)	as req.
	G214-7033658		CO-22539-06	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 9/16 (0.006 oversize) (ck-end.)	as req.
	G214-7033659		CO-22539-09	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 9/16 (0.009 oversize) (dld-end.)	as req.
01-4,5	G103-0106900	A139759	CO-2472	WASHER, plain, S., cd-pltd., 1/4 in.	84
	G103-0103210	A160960	CO-20254	GASKET, engine valve rocker box cover (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)	14
0106—CAM					
01-20	G038-0164140	D33522	CO-A5160	CAM, engine valve, assembly	1

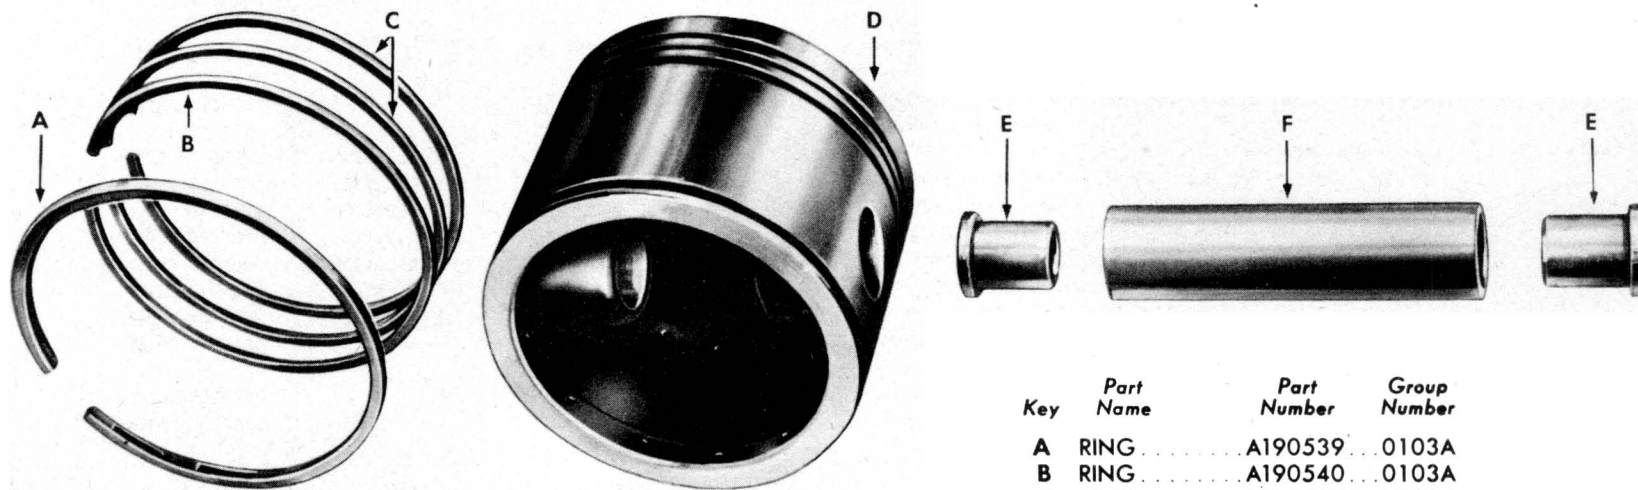

Key	Part Name	Part Number	Group Number
A	RING	A190539	0103A
B	RING	A190540	0103A
C	RING	CO-35294	0103A
D	PISTON	CO-4925	0103
E	PLUG	A160963	0103B
F	PIN	A160962	0103B

FIGURE 01-7—PISTON, PIN AND RINGS


RA PD 341081

0105C-0106

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107—OIL PRESSURE AND SCAVENGER PUMP	
01-9	G103-0100525 G103-0100525	C65240	CO-4174 CO-4174A1	BODY, engine oil pressure and scavenger pump pressure gear.....	1
				BODY, engine oil pressure and scavenger pump pressure gear, w/STUDS, assembly (pressure section).....	1
01-9	G103-0105220	A135049	CO-2596	BOLT, oval-fil-hd., alloy-S., dld. f/c pin., 1/4-28NF-3 x 2 3/32.....	4
01-9	H001-4013501	BBFX1AA-1	CO-2546	NUT, castle, alloy-S., cd-pltd., 1/4-28NF-2.....	4
01-9	G103-0164294	BFAX1BD-1	CO-2502	PIN, cotter, split, S., cd-pltd. (type B), 1/16 x 5/8.....	4
01-9	G103-0106900	A139759	CO-2472	WASHER, plain, S., cd-pltd., 1/4 in.....	4
01-9	G038-0107840	C7453	CO-4057	BODY, engine oil pressure and scavenger pump scavenger gear.....	1
01-2,9	G103-0101415	B150882	CO-35175	CONNECTION, elbow, engine oil pressure and scavenger pump inlet.....	1
	H001-4013521	BBFX1BA-1	CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2.....	2
01-9	G103-0106225	A189129	CO-22003	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (standard size) (sq-end.).....	2
	G167-0392293		CO-22003-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2 x 5/16-24NF-3 (1/2) x 1 1/8 (0.003 oversize) (pointed end).....	as req.
	G214-7036473		CO-22003-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7036484		CO-22003-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.009 oversize) (dld-end.).....	as req.
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black annealed, 0.041 in. diam.....	as req.
01-2,9	G103-0101440	A189139	CO-22085	CONNECTION, elbow, engine oil pressure and scavenger pump, outlet.....	1
	H001-4013521	BBFX1BA-1	CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2.....	2
01-9	G103-0106225	A189129	CO-22003	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (standard size) (sq-end.).....	2
	G167-0392293		CO-22003-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.003 oversize) (pointed end).....	as req.
	G214-7036473		CO-22003-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7036484		CO-22003-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.009 oversize) (dld-end.).....	as req.
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black annealed, 0.041 in. diam.....	as req.
01-9	G038-0120890	B106703	CO-3118	COVER, engine oil pressure and scavenger pump, scavenger gear.....	1
01-9	G103-0102540	A160984	CO-20291	GASKET, elbow connection to engine oil pressure and scavenger pump (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	2
	G103-0102580	A166230	CO-20620	GASKET, engine oil pressure and scavenger pump pressure gear body to scavenger gear body (vellumoid, 0.004 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	as req.
	G103-0102600	A166231	CO-20621	GASKET, engine oil pressure and scavenger pump pressure gear body to scavenger gear body (vellumoid, 0.006 in. thk.) (Also listed as part of GASKET SET, CO-22530)	as req.

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G103-0102620	A166235	CO-20622	GASKET, engine oil pressure and scavenger pump pressure gear body to scavenger gear body (vellumoid, 0.008 in. thk.) listed as part of GASKET SET, CO-22530)	as req.
01-9	G103-0102560	A136048	CO-2595	GASKET, engine oil pressure and scavenger pump pressure gear body to scavenger gear body (vellumoid, 0.010 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	as req.
01-9	G103-0102625	A136050	CO-2597	GASKET, engine oil pressure and scavenger pump to accessory case (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
01-9	G103-0103253	A136047	CO-2594	GEAR, driven, engine oil pressure and scavenger pump.....	1

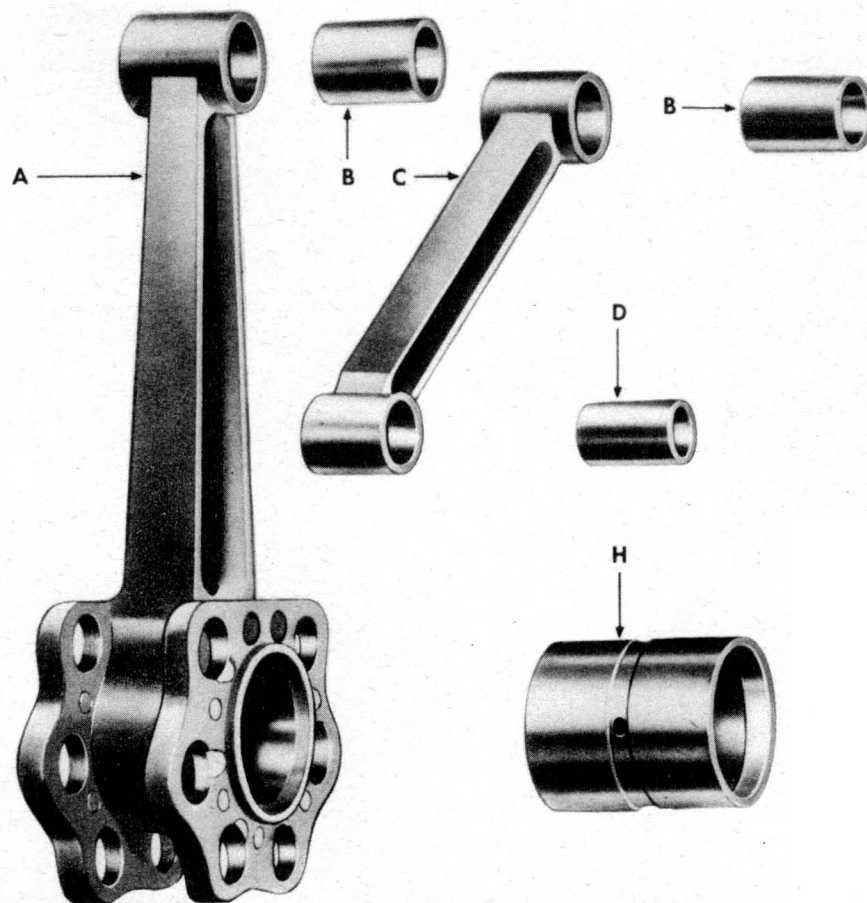

Key	Part Name	Part Number	Group Number
A	ROD.....	D7020.....	0104
B	BUSHING.....	A139718.....	0104
C	ROD.....	B108076.....	0104
D	BUSHING.....	A139814.....	0104
E	CIRCLIP.....	A139815.....	0104
F	PIN, assembly.....	CO-A23152.....	0104
G	KEY.....	BGAX6B.....	0104
H	BEARING.....	CO-23524.....	0104

FIGURE 01-8—MASTER AND ARTICULATED CONNECTING RODS

RA PD 341082


GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107—OIL PRESSURE AND SCAVENGER PUMP (Cont'd)	
01-9	G103-0103252	A136046	CO-2593	GEAR, driving, engine oil pressure and scavenger pump.....	1
01-9	G103-0103251	B108080	CO-3200	GEAR and SHAFT, driven, engine oil pressure and scavenger pump (7 teeth).....	1
01-9	G103-0103250	B108079	CO-3199	GEAR and SHAFT, driving, engine oil pressure and scavenger pump (7 teeth).....	1
01-9	H001-0518012	BGAX6B	CO-2219	KEY, Woodruff, ni-S., 1/8 x 5/8 in. (No. 405) (engine pressure and scavenger pump shaft) ..	1
01-2	G103-0104665	C65241	CO-A4174	PUMP, oil pressure and scavenger, engine, assembly.....	1
01-9	H001-4013521	BBFX1BA-1	CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2.....	5
01-19	G103-0106140	A136008	CO-2403	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 2 1/2 (standard size) (sq-end.).....	5
	G167-0392295		CO-2403-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 2 1/2 (0.003 oversize) (pointed end).....	as req.
	G214-7033660		CO-2403-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 2 1/2 (0.006 oversize) (ck-end.).....	as req.
	G214-7033661		CO-2403-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 2 1/2 (0.009 oversize) (dld-end.).....	as req.
01-9	G103-0106920	A136016	CO-2473	WASHER, plain, S., cd-pltd., 5/16 in.....	5
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black annealed 0.041 in. diam.....	as req.
01-2	2220-A4174A1		CO-A4174A1	PUMP, oil pressure and scavenger, engine, w/CONNECTIONS, assembly (Includes: attaching hardware).....	1
				0107A—CRANKCASE OIL SUMP	
01-3	G103-0102340	A190516-16	AIR-AN900-16	GASKET, engine crankcase oil sump drain plug (rd., cop-asbestos., 1 I.D. x 1 3/16 O.D. x 1/8 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
01-3	G103-1593666	A189106	CO-20951	GASKET, engine crankcase oil sump to front crankcase (vellumoid, 1/16 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
01-3	G103-0102960	A189107	CO-20952	GASKET, engine crankcase oil sump to rear crankcase (vellumoid, 1/16 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
01-3	G103-0104608	A190535	CO-22178	PLUG, drain, engine crankcase oil sump (magnetic).....	1
	G103-0104608	A190536	CO-A22178	PLUG, drain, engine crankcase oil sump, w/GASKET, assembly (LI-651-P.B.).....	1
01-3	G103-0106240	D38287	CO-5195	SUMP, oil, engine crankcase.....	1
	G103-0106245		CO-5195A1	SUMP, oil, engine crankcase, w/PLUG, assembly.....	1
01-3	H001-4013521	BBFX1BA-1	CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2.....	2
01-3	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24NF-3.....	4
01-3	G103-0104267	A160945	CO-2560	PALNUT, light, S., cd-pltd., 5/16-24NF.....	4
01-3	G103-0106110	A189141	CO-22145	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 3/8 (standard size) (sq-end.).....	4
	G214-7033662		CO-22145-03	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 3/8 (0.003 oversize) (pointed end).....	as req.

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-3	G214-7033663	A189122	CO-22145-06	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 3/8 (0.006 oversize) (ck-end.)	as req.
	G214-7033664		CO-22145-09	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 3/8 (0.009 oversize) (dld-end.)	as req.
	G103-0106105		CO-20992	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (standard size) (sq-end.)	2
	G167-0392298		CO-20992-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.003 oversize) (pointed end)	as req.
	G214-7036492		CO-20992-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.006 oversize) (ck-end.)	as req.
01-3	G214-7036493	A136016 BFWX1A	CO-20992-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.009 oversize) (dld end.)	as req.
	G103-0106920		CO-2473	WASHER, special, plain, S., cd-pltd., 5/16 in.	6
	22W-1642100			WIRE, steel, low carbon, soft, black annealed, 0.041 in. diam.	as req.
0107B—OIL COOLER					
01-14	G214-7036208	BBAX1A BCAX1AA BEAX1H	FOM-2X1597BL	BRACKET, mounting, oil cooler, lower, left	1
	G214-7036209		FOM-2X1597BR	BRACKET, mounting, oil cooler, lower, right	1
	H001-0718001		FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	4
	H001-1013003		FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-2 x 3/4	4
	H001-1519009		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	4
	G214-7036251		FOM-2X1596BL	BRACKET, mounting, oil cooler, upper, left (Welded to rear bulkhead)	1
	G214-7036252	BCAX1AA-1 BECX1G-1	FOM-2X1596BR	BRACKET, mounting, oil cooler, upper, right (Welded to rear bulkhead)	1
	G167-0139945		FOM-P341	COOLER, oil, engine, assembly (Same as COOLER, oil, transmission, assembly) (YR-37822-5)	1
	H001-0718001		FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	16
	H001-1013003		FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-2 x 3/4	16
	H001-1519009		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	16
	G214-7033394		YR-37332	FLANGE, oil cooler, inlet and outlet	2
	H001-5025521	YR-37422 YR-39630		SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-2 x 3/4	4
	H001-7025681			WASHER, lock, reg., S., cd-pltd., 1/4 in.	4
	G214-7033395			GASKET, oil cooler inlet and outlet flange	2
				VALVE, temperature control, oil cooler, assembly	1
0107C—VALVE ROCKER OIL SCAVENGER PUMP AND STRAINER					
01-10	G103-0100530	C65238	CO-4170	BODY, engine valve rocker oil scavenger pump	1
	G103-0100528		CO-A4170	BODY, engine valve rocker oil scavenger pump, w/STUDS, assembly	1
01-10	G103-0101665	B152097	CO-3248	COVER, engine valve rocker oil scavenger pump, inner	1
01-10	G103-0101550		CO-20426	COVER, engine valve rocker oil scavenger pump, outer (Used only for shipping and storage—attaching parts same as for PUMP, fuel, assembly)	1
01-10	G103-0103000	A161028	CO-20532	GASKET, engine valve rocker oil scavenger pump inner cover to body (lead, 0.007 in. thk.) (Also listed as part of GASKET SET, CO-22530)	1
01-10	G103-0103020	A160996	CO-20425	GASKET, engine valve rocker oil scavenger pump to accessory case (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)	1

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G103-0102340	A190516-16	AIR-AN900-16	0107C—VALVE ROCKER OIL SCAVENGER PUMP AND STRAINER (Cont'd) GASKET, engine valve rocker scavenger oil strainer (rd., cop-asbestos., 1 I.D. x 1 1/16 O.D. x 1/8 in. thk.) (Also listed as part of GASKET SET, CO-22530)	1
01-10	G103-0103248	A160992	CO-20419	GEAR AND SHAFT, driven, engine valve rocker oil scavenger pump (7 T.)	1
01-10	G103-0103249	A160991	CO-20418	GEAR AND SHAFT, driving, engine valve rocker oil scavenger pump (7 T.)	1
01-10	G103-0101885	A160994	CO-20422	PIN, dowel, engine valve rocker oil scavenger pump body (1/4 in. diam. x 15/32 in. long)	1
	G103-0104706		CO-A4170A1	PUMP, oil scavenger, engine valve rocker, assembly (Does not include coupling or outer cover)	1
01-10	G103-0104706	BBFX1BA-1	CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2	6
	G103-0104705		CO-A4170A	PUMP, oil scavenger, engine valve rocker, w/COUPLING, assembly	1
01-19	G103-0106122	A18923	CO-20993	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/2 (standard size) (sq-end.)	6
	G167-0392292		CO-20993-03	STUD, alloy-S., cd-pltd., f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/2 (0.003 oversize) (pointed end)	as req.
	G214-7033676		CO-20993-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/2 (0.006 oversize) (ck-end.)	as req.
	G214-7033677		CO-20993-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/2 (0.009 oversize) (dld-end.)	as req.
01-10	G103-0106920	A136016	CO-2473	WASHER, plain, S., cd-pltd., 5/16 in.	6
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black annealed, 0.041 in. diam.	as req.
01-2,19	G103-0105108	A189103	CO-A20878	STRAINER, engine valve rocker scavenger oil, assembly (Available only as an assembly)	1
	G167-0131485		FOM-31X1032B	0107D—OIL RESERVOIR CAP, filling, oil reservoir, w/BLADE, assembly	1
	G214-7033397		FOM-3X1011A	GASKET, oil reservoir filling cap (vellumoid, 1/16 in. thk.)	1
			FOM-P119	PLUG, pipe, M.I. std., ck., black, 1/2 in. (drain, oil reservoir)	1
01-14	G167-0396350		FOM-31X1039D	RESERVOIR, oil, engine, assembly (Includes: filling cap and flanges)	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	4
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	4
	H001-1013030	BCAX1CA	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-2 x 3/4	4
				0107E—OIL FILTER AND OIL SCREEN ASSEMBLY	
				0107E-1—OIL FILTER (Filter is not a component part of the engine assembly)	
	G214-7033685		CU-25336	ARM, automatic oil filter motor piston (S., 1.195 over-all lgh., 6 holes)	1
	G214-7033686		CU-25338-U	ARM, automatic oil filter motor piston, assembly	1
			CU-9065	RIVET, ck-hd., S., 1/16 x 21/64	2
			CU-1690-41	WASHER, plain, br., 3/32 I.D. x 1/4 O.D. x 0.020 in. thk.	2

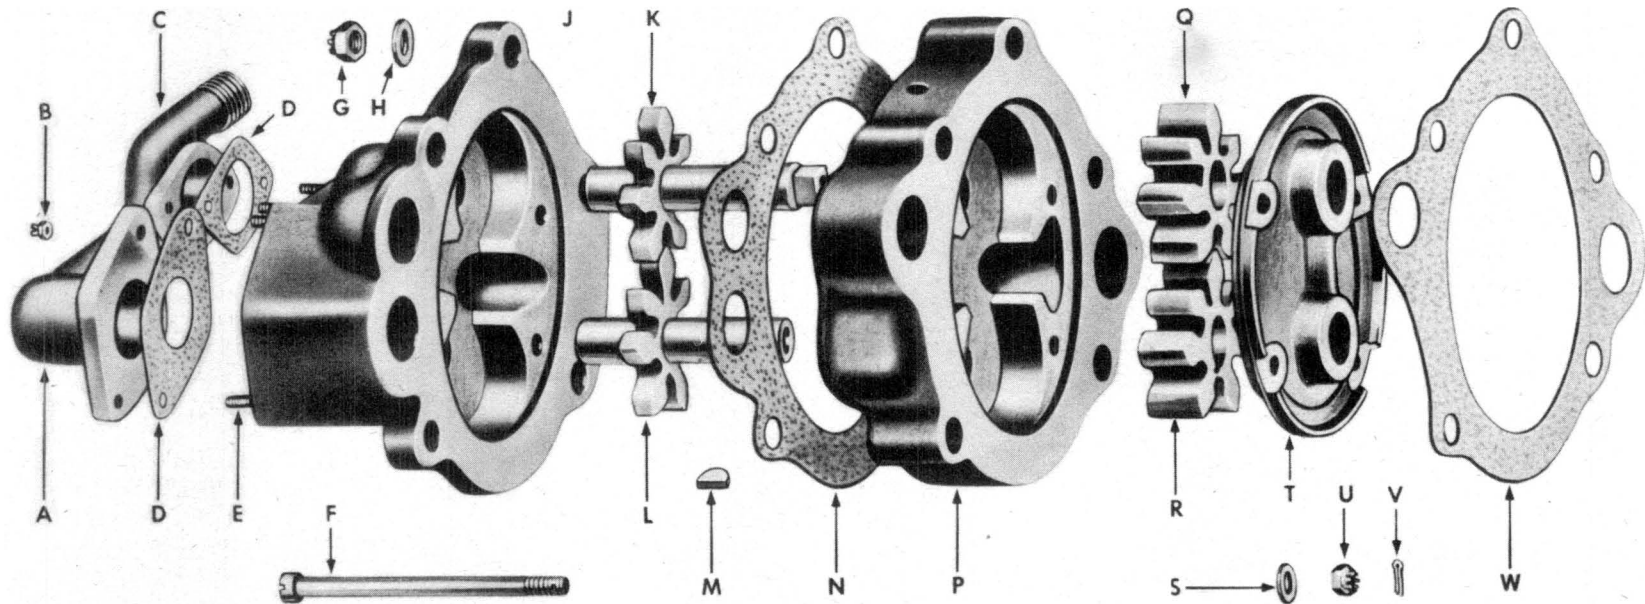


Key	Part Name	Part Number	Group Number
A	CONNECTION	A189139	0107
B	NUT	BBFX1BA-1	0107
C	CONNECTION	B150882	0107
D	GASKET	A160984	0107
E	STUD	A189129	0107
F	BOLT	A136049	0107
G	NUT	BBFX1BA-1	0107
H	WASHER	A136016	0107
J	BODY	C65240	0107
K	GEAR, w/SHAFT, assembly	B108079	0107
L	GEAR, w/SHAFT, assembly	B108080	0107

Key	Part Name	Part Number	Group Number
M	KEY	BGAX6B	0107
N	GASKET	A136048	0107
P	BODY	C7453	0107
Q	GEAR	A136047	0107
R	GEAR	A136046	0107
S	WASHER	A139759	0107
T	COVER	B105703	0107
U	NUT	BBFX1AA-1	0107
V	PIN	BFAX1BD-1	0107
W	GASKET	A136050	0107

FIGURE 01-9—OIL PRESSURE AND SCAVENGER PUMP ASSEMBLY—EXPLODED VIEW

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107E-1—OIL FILTER (Cont'd)	
01-12	G214-7033687	CCAX1A	CU-25379	ARM, automatic oil filter motor valve (S., 21/32 lgh., 2 holes).....	1
	G214-7033688		CU-25436-U	ARM, automatic oil filter motor valve, assembly.....	1
	H002-0100090		CU-9068	BALL, chr-alloy-S., grade 2, 1/8 in. (automatic oil filter motor detent).....	1
	G214-7033398		CU-9004	BLOCK, automatic oil filter motor valve.....	1
01-12	G214-7033399		CU-25156-U	BLOCK, automatic oil filter motor valve, assembly.....	1
01-12			CU-3765	NUT, hex., br., No. 8 (0.164)-32NC-3, 1/4 over flats, 5/64 high.....	2
01-12	H001-5087991	BCKX1FM-1	CU-21705	SCREW, machine, fl-hd., S., cd-pltd., No. 8 (0.164)-32NC-5 x 15/16.....	1
01-12		BCKX1FN-1	CU-21704	SCREW, machine, fl-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 1 3/32.....	2
	G167-0136800		FOM-30X1116C	BRACKET, automatic oil filter, w/CLAMP, assembly.....	1
	H001-4135680	BBKX2CA	FOM-P225	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-2 (clamp).....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2 (bracket to hull).....	4
	H001-1013001	BCAX3A	FOM-P152	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 1/2 (bracket to hull).....	4
			FOM-P224	SCREW, machine, rd-hd., cross recess type, S., cd-pltd., No. 10 (0.190)-32NF-3 x 3/4 (clamp).....	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214) (bracket to hull).....	4
	H001-1519807	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) and 3/16 (clamp).....	2
	G214-7036436		CU-9027	BRIDGE, automatic oil filter motor cover (S., 1 3/16 lgh., 0.072 in. thk., 6 holes).....	1
01-12	G214-7036437		CU-20050-U	BRIDGE, automatic oil filter motor cover, assembly.....	1
			CU-9005	BUSHING, automatic oil filter hydraulic motor clutch (bz., 0.495 I.D. x 0.5625 O.D. x 1 1/16 in. lgh.).....	1
			CU-24914	BUSHING, automatic oil filter hydraulic motor valve.....	1
			CU-21806	BUSHING, automatic oil filter manual turning shaft (shouldered, S., 0.172 I.D. x 0.250 and 0.305 O.D. x 0.240 in. lgh.).....	1
			CU-20233	BUSHING, automatic oil filter manual turning shaft cover (bz., 0.251 I.D., 3/8-32NF-2)	1
			CU-9072	BUSHING, automatic oil filter motor bridge (bz., 7/32 I.D. w/spiral oil groove, 25/64 in. lgh.).....	1
01-12			CU-9008	BUSHING, automatic oil filter rocking shaft pin and motor head (shouldered, S., 0.172 I.D. x 0.250 O.D. x 0.270 in. lgh.).....	2
	G214-7036438		CU-9016	BUTTON, thrust, automatic oil filter motor cover (S., 0.196 O.D. knurled part, 3/8 O.D. head, 7/64 in. lgh.).....	1
01-11	G103-1819302	A245559	CU-25168-U	CARTRIDGE, automatic oil filter, assembly.....	1
01-12	G214-7036440		CU-22834	CENTER, automatic oil filter clutch.....	1
	G214-7036441		CU-9009-R	CENTER, automatic oil filter clutch, assembly.....	1
			CU-21807	RIVET, ck-hd., S.....	3
			CU-21808	RIVET, ck-hd., S., 3/32 x 7/32.....	1

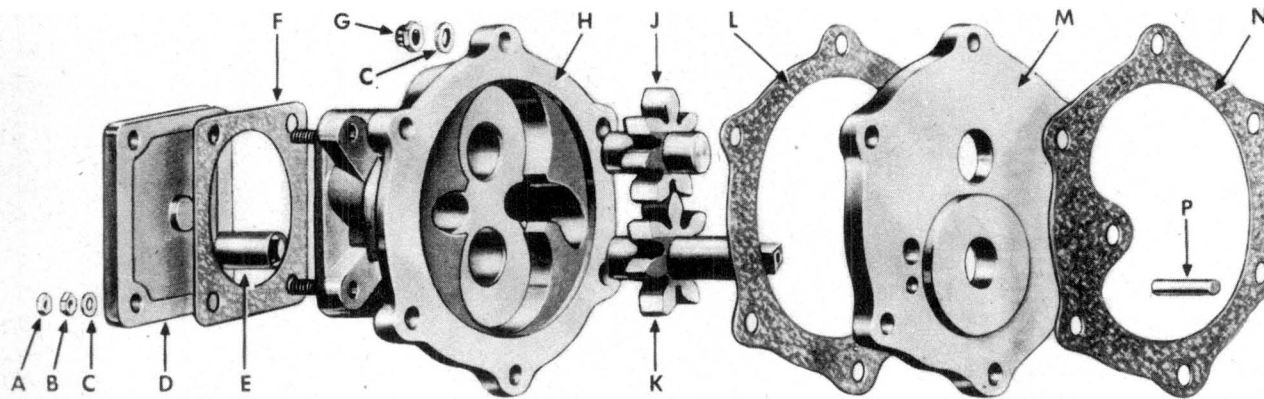

Key	Part Name	Part Number	Group Number
A	PALNUT.....	A160945	0302
B	NUT.....	A143866	0302
C	WASHER.....	A136016	0107C
D	COVER.....	CO-20426	0107C
E	COUPLING.....	A160993	0302
F	GASKET.....	A160995	0302
G	NUT.....	BBFX1BA-1	0107C
H	BODY, w/STUDS, assembly.....	CO-A4170	0107C
J	GEAR.....	A160992	0107C
K	GEAR.....	A160991	0107C
L	GASKET.....	A161028	0107C
M	COVER.....	B152097	0107C
N	GASKET.....	A160996	0107C
P	PIN.....	A160994	0107C

RA PD 341083

FIGURE 01-10—ROCKER BOX OIL SCAVENGER PUMP ASSEMBLY—EXPLODED VIEW

0107E-1

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107E-1—OIL FILTER (Cont'd)	
01-12	G214-7036442		CU-9029	CLEVIS, dash pot, automatic oil filter motor (br., 0.175 O.D., 7/32 shoulder O.D., 29/32 lgh., 1/16 dld. f/toggle-pin.)	1
	G214-7036443		CU-21481-U	CLUTCH, automatic oil filter motor, assembly	1
01-12	G214-7033679		CU-21495-R	COVER, automatic oil filter, assembly	1
01-12			CU-25128	BOLT, hex-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 1 3/4	3
01-12			CU-20498	WASHER, lock, special, S., 4 prongs, 0.191 I.D., 0.025 in. thk.	3
01-12			CU-20559	WASHER, plain, al., 0.189 I.D. x 3/8 O.D. x 1/64 in thk.	3
	G214-7033678		CU-21495	COVER, automatic oil filter motor	1
	G214-7033680		CU-25157-U	COVER, automatic oil filter motor, w/PISTON and VALVE, assembly	1
01-12	G214-7036444		CU-9031	CYLINDER, dash pot, automatic oil filter motor	1
01-12	G214-7036445		CU-20057-U	DETENT, ball, automatic oil filter valve plate, assembly	1
	G103-1695725	C95158	CU-11715	FILTER, oil, automatic, w/CARTRIDGE, assembly (Does not include motor)	1
01-14	G103-1583050	C95134	FOM-P336	FILTER, oil, automatic, w/MOTOR, assembly (for engine oil) (Includes: FILTER, w/CARTRIDGE, assembly) (CU-11602)	1
	H001-0716540	BBKX2CA	FOM-P225	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-2	2
	H001-1030589	BCOX1.1AH	FOM-P224	SCREW, machine, rd-recessed-hd., S., No. 10 (0.190)-32NF-2 x 3/4	2
	H001-1519007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210)	2
01-11	G103-1593992		CU-23935	GASKET, automatic oil filter drain plug (cop-asbestos., 7/8 I.D., 1/8 in. thk.)	1
01-11	G103-1593991		CU-7121	GASKET, automatic oil filter head (vellumoid)	1
01-11	G103-1593994		CU-25175	GASKET, automatic oil filter motor (vellumoid, 1/32 in. thk.)	1
			CU-9053	GASKET, automatic oil filter motor cover (vellumoid, 1/64 in. thk.)	1
01-12			CU-20458	GASKET, automatic oil filter motor valve block (annular, vellumoid, 1/8 I.D. x 7/32 O.D. x 1/16 in. thk.)	1
	G214-7036446		CU-20232	GEAR, automatic oil filter motor clutch (37 T.)	1
01-11	G103-1611406		CU-25170	HEAD, automatic oil filter	1
	G103-1611475	C95161	CU-25171-U	HEAD, automatic oil filter, w/SUMP, assembly	1
01-11	G103-1781822		CU-25110	SCREW, cap, hex-hd., S., 1/4-20NC-2 x 11/16 (make from BCAX1AA)	10
01-11	H001-7023681	BECX2G-1	CU-25107	WASHER, tub., S., cd-pltd., 0.255 I.D. x 1/32 in. thk.	10
	G214-7036447		CU-25208	HEAD, automatic oil filter motor	1
01-12	G214-7036448		CU-25349-U	HEAD, automatic oil filter motor, w/BUSHINGS, assembly	1
01-12	G214-7033689		CU-22987	LOCK, automatic oil filter manual operating shaft bushing (corr-res-S., 1 15/32 lgh., two prongs, hex-hole. 0.438 over flats)	1
01-11	G103-1695726	A245560	CU-25167-U	MOTOR, automatic oil filter, w/RODS, assembly	1
01-12			CU-22533	GASKET, annular, vellumoid, 0.191 I.D. x 3/8 O.D. x 1/64 in. thk.	3
01-11	H001-0718022	BBBX1B	CU-25209	NUT, regular, hex., s-fin., S., 5/16-24NF-2	3
01-11	G104-0101200		CU-23522	PALNUT, reg., hex., 5/16-24NF	3
01-11	G103-1792046		CU-25180	STUD, alloy-S., 5/16-24NF-5 (9/16) x 5/16-24NF-3 (9/16) x 3 1/16	3

GROUP 01—ENGINE


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107E-1—OIL FILTER (Cont'd)	
01-12	G214-7036460		CU-9006	SHAFT, rocking, automatic oil filter motor (S., 1.094 lgh., 1.00 in. arm lgh.).....	1
	G214-7036461		CU-9055	SHELL, automatic oil filter detent (br., 0.136 I.D. x 0.166 O.D. x 7/16 in. lgh. before sealing).....	1
01-12	G214-7036462		CU-9073	SPACER, automatic oil filter valve block bridge (br., 0.165 I.D. x 0.218 O.D. x 0.206 in. lgh.).....	2
	G214-7036463		CU-9039	SPRING, automatic oil filter detent (S., 0.130 O.D., 16 coils, 1/2 in. free lgh.).....	1
01-12	G214-7036464		CU-9012	SPRING, automatic oil filter motor clutch roll (S., wire 0.012 diam., 0.122 O.D., 9 coils, 3/8 in. free lgh.).....	3
01-12	G214-7036465		CU-9060	SPRING, automatic oil filter motor clutch shaft, end (S., wire 0.045 diam., 0.355 O.D., 9 coils, 1 in. free lgh.).....	1
01-11,12	G103-1789634		CU-22921	SPRING, automatic oil filter relief valve (music wire, 0.041 diam., 13/32 in. O.D., 15 coils).....	1
01-12	G214-7036466		CU-9038	SPRING, automatic oil filter toggle (S., wire 0.026 diam., 0.214 O.D., 25 coils, 1.250 in. free lgh.).....	1
01-11	G103-1792475		CU-6104-U	SUMP, automatic oil filter.....	1
01-12	G214-7033692		CU-9035	TUBE, feed, automatic oil filter motor (S., 0.086 I.D. x 0.135 and 0.146 O.D. x 1 3/16 in. lgh.).....	2
	G214-7033693		CU-25380	VALVE, automatic oil filter motor (S., 1/4 O.D., 17/32 in. lgh.).....	1
01-11,12	G214-7033694		CU-25770	VALVE, relief, automatic oil filter.....	1
			CU-9033	WASHER, automatic oil filter toggle spring pin (S., 3/32 I.D. x 3/16 O.D. x 1/64 in. thk.)..	1
01-12			CU-22828	WASHER, shaft and spring, automatic oil filter motor.....	1
01-12			CU-22534	WASHER, three hole tab, automatic oil filter motor.....	1
01-12			CU-22612	WASHER, two hole tab, automatic oil filter motor.....	1
				0107E-2—OIL SCREEN (Screen is a component part of the engine assembly)	
01-13	H002-0100160	CCAX1F	CO-2849	BALL, chr-alloy-S., grade 2, 7/16 in. (engine high pressure oil screen by-pass valve).....	1
01-13	G103-0102360	A190516-24	AIR-AN900-24	GASKET, engine high-pressure oil screen to housing (rd., cop-asbestos., 1 1/2 I.D. x 1 11/16 O.D. x 1/8 in. thk.).....	1
01-13	G103-0102920	A136042	CO-2589	GASKET, engine high-pressure oil screen housing to accessory case (vellumoid, 1/32 in. thk.).....	1
01-13	G038-0125710	A190516-10	AIR-AN900-10	GASKET, engine high-pressure oil screen plug and high-pressure oil screen by-pass valve plug.....	2
01-13	G103-0103428	C60997	CO-500014	HOUSING, engine high-pressure oil screen.....	1
01-13	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24NF-3.....	4
01-13	H001-0726010	A160945	CO-2560	PALNUT, light, S., cd-pltd., 5/16-24NF.....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-19	G103-0106226	A189121	CO-20991	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (standard size) (sq-end.)	4
	G167-0392291		CO-20991-03	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.003 oversize) (pointed end)	as req.
	G214-7036481		CO-20991-06	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.006 oversize) (ck-end.)	as req.
	G214-7036482		CO-20991-09	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.009 oversize) (dld-end.)	as req.
01-13	G103-0106920	A136016	CO-2473	WASHER, plain, S., cd-pltd., 5/16 in.	4
01-13	G103-0104560	A136001	CO-2265	PLUG, engine high pressure oil screen (br., hex-hd., dld. f/lkg-wire., 5/8-18NF-3)	1
01-13	G103-0104560	A136001	CO-2265	PLUG, engine high-pressure oil screen bypass valve (br. hex-hd., dld. f/lkg-wire., 5/8-18NF-3)	1
01-13	G103-0105100	B146100	CO-500015	SCREEN, oil, engine, high-pressure	1
01-2	G103-0103428		CO-A500014	SCREEN, oil, engine, high-pressure, assembly (Includes: housing, spring, ball, plugs, and gaskets)	1
01-13	G103-0105705	A139812	CO-2848	SPRING, engine high pressure oil screen bypass valve	1
0107J—OIL DISTRIBUTION SYSTEM					
01-14	G214-7036467		FOM-8X1059B	BLOCK, supporting, engine oil filter outlet line	1
	H001-0718021	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	2
			FOM-P240	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 2 1/2	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	2
01-14	H006-0210010	A145825	FOM-P339	BUSHING, pipe, shoulder, br., 1/4 x 1/8 (engine oil scavenger pump hose to filter)	1
01-14	G167-0128014		FOM-P330	BUSHING, pipe, shoulder, br., 3/4 x 3/8 (engine oil reservoir vent tee)	2
01-4,5	H006-0100350		AIR-AN745-2A	CLAMP, hose, 1 1/8 in. (3/4-1 1/8 in. cap. with thumb screw) (engine valve rocker scavenger pump hose)	16
01-14	G167-0137987		FOM-8X1012B	CLIP, cable, closed, 1/2 in. (engine oil breather line)	2
	H001-0718021	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	2
	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	2
01-14	G167-0137989		FOM-8X1014B	CLIP, cable, closed, 7/8 in. (engine oil reservoir outlet line (2), and engine oil filter outlet line (2))	4
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	4
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	4
01-14	G167-0137991		FOM-8X1017B	CLIP, cable, closed, 1 3/8 in. (engine oil cooler to reservoir hose)	1
	H001-0718021	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	1
	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4	1
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	1
	H006-0313610	CNGX2AA	FOM-P269	CONNECTOR, fuel and oil hose, 1/4 in., 1/8 in. male pipe end, complete (with nut) (engine oil scavenger pump to filter hose) (WH-281166)	1
	H006-0314820	CNGX3B	FOM-P402	CONNECTOR, fuel and oil hose, 1/4 in., 1/4 in. tube end, complete (with nut) (engine oil scavenger pump to filter hose) (WH-281131)	1
	H006-0313660	CNGX2AD	FOM-P162	CONNECTOR, fuel and oil hose, 1/2 in., 3/8 in. male pipe end, complete (with nut) (engine oil breather hose) (WH-281123)	1

0107J

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107J—OIL DISTRIBUTION SYSTEM (Cont'd)	
	H006-0314665	CNGX3F	FOM-P163	CONNECTOR, fuel and oil hose, 1/2 in., 1/2 in. tube end, complete (with nut) (male) (engine oil breather hose) (WH-281133).....	1
	H006-0313650	CNGX2AF	FOM-P344	CONNECTOR, fuel and oil hose, 3/4 in., 3/4 in. male pipe end, complete (with nut) (engine oil cooler to reservoir hose (1), engine oil pump to filter hose (1), and engine oil intake hose (1)) (WH-281125).....	3
	H006-0314685	CNGX3K	FOM-P820	CONNECTOR, fuel and oil hose, 3/4 in., 7/8 in. tube end, complete (with nut) (engine oil cooler to reservoir hose) (WH-281135).....	1
			FOM-P345	CONNECTOR, fuel and oil hose, 3/4 in., 1-16NF, swivel end, (engine oil intake hose (1) and engine oil pump to filter hose) (WH-281149).....	2
01-14	G167-0139904	B183359L	FOM-P328	CONNECTOR, tube, heavy duty, short, 7/8 in., 3/4 in. female pipe end, complete (with nut and sleeve) (engine oil filter outlet line) (WH-8255X14C).....	1
01-14	H006-0318145	B183358G	FOM-P327	CONNECTOR, tube, heavy duty, short, 1/2 in., 3/8 in. male pipe end, complete (with nut and sleeve) (engine oil reservoir vent line (1), engine oil breather line (1) (WH-8205X8C).....	2
01-14	H006-0318165	B183358L	FOM-P324	CONNECTOR, tube, heavy duty, short, 7/8 in., 3/4 in. male pipe end, complete (with sleeve and nut) (engine oil reservoir outlet line) (WH-8205X14C).....	1
01-19	G103-0101980	A161001	CO-20466	ELBOW, engine valve rocker scavenger pump.....	1
01-19	G103-0104060	A156959	CO-2437	NUT, regular, hex., alloy-S., cd-pltd., 1/4-28NF-3.....	2
01-19	H001-0726005	A160946	CO-2886	PALNUT, light, S., cd-pltd., 1/4-28NF.....	2
01-19	G103-0106045	A189118	CO-20988	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (standard size) (sq-end).....	2
	G167-0392290		CO-20988-03	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.003 oversize) (pointed end).....	as req.
			CO-20988-06	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.006 oversize) (ck-end.).....	as req.
			CO-20988-09	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (7/16) x 1 1/8 (0.009 oversize) (dld-end.).....	as req.
01-19	G103-0106900	A139759	CO-2472	WASHER, plain, S., cd-pltd., 1/4 in.....	2
	G103-0101890		CO-22099	ELBOW, oil drain, engine governor.....	1
01-14	G167-0168010	A159461	FOM-P340	ELBOW, street, br., 45°, 1/4 in. (engine oil scavenger pump hose to filter).....	1
01-14	H006-0265015	A159462	FOM-P342	ELBOW, street, br., 45°, 3/8 in. (engine oil breather line to hose).....	1
01-14	H006-0265120	B7270E	FOM-P335	ELBOW, street, br., 90°, 3/4 in. (engine oil filter intake (1); engine oil intake hose (1))..	2
01-14	G167-0140065		FOM-P337	ELBOW, tube, heavy duty, short, 45°, 1/4 in., 1/8 in., male pipe end, complete (with nut and sleeve) (engine oil scavenger pump outlet) (WH-8355X4).....	1
01-14	H006-0331125	B183361G	FOM-P338	ELBOW, tube, heavy duty, short, 90°, 1/2 in., 3/8 in., male pipe end, complete (with nut and sleeve) (engine oil breather hose to engine) (WH-8405X8).....	1
01-14	H006-0260265	B183361G	FOM-P323	ELBOW, tube, heavy duty, short, 90°, 1/2 in., 3/8 in., male pipe end, complete (with nut and sleeve) (engine oil breather line) (WH-8405X8C).....	1

Key	Part Name	Part Number	Group Number
A	PALNUT.....	CU-23522	0107E-1
B	NUT.....	BBBX1B	0107E-1
C	WASHER.....	BEBX1H	0107E-1
D	MOTOR, w/RODS, assembly	A245560	0107E-1
E	STUD.....	CU-25180	0107E-1
F	GASKET.....	CU-25175	0107E-1
G	HEAD.....	CU-25170	0107E-1
H	GASKET.....	CU-7121	0107E-1
J	ROD.....	CU-22806	0107E-1
K	SPRING.....	CU-22921	0107E-1

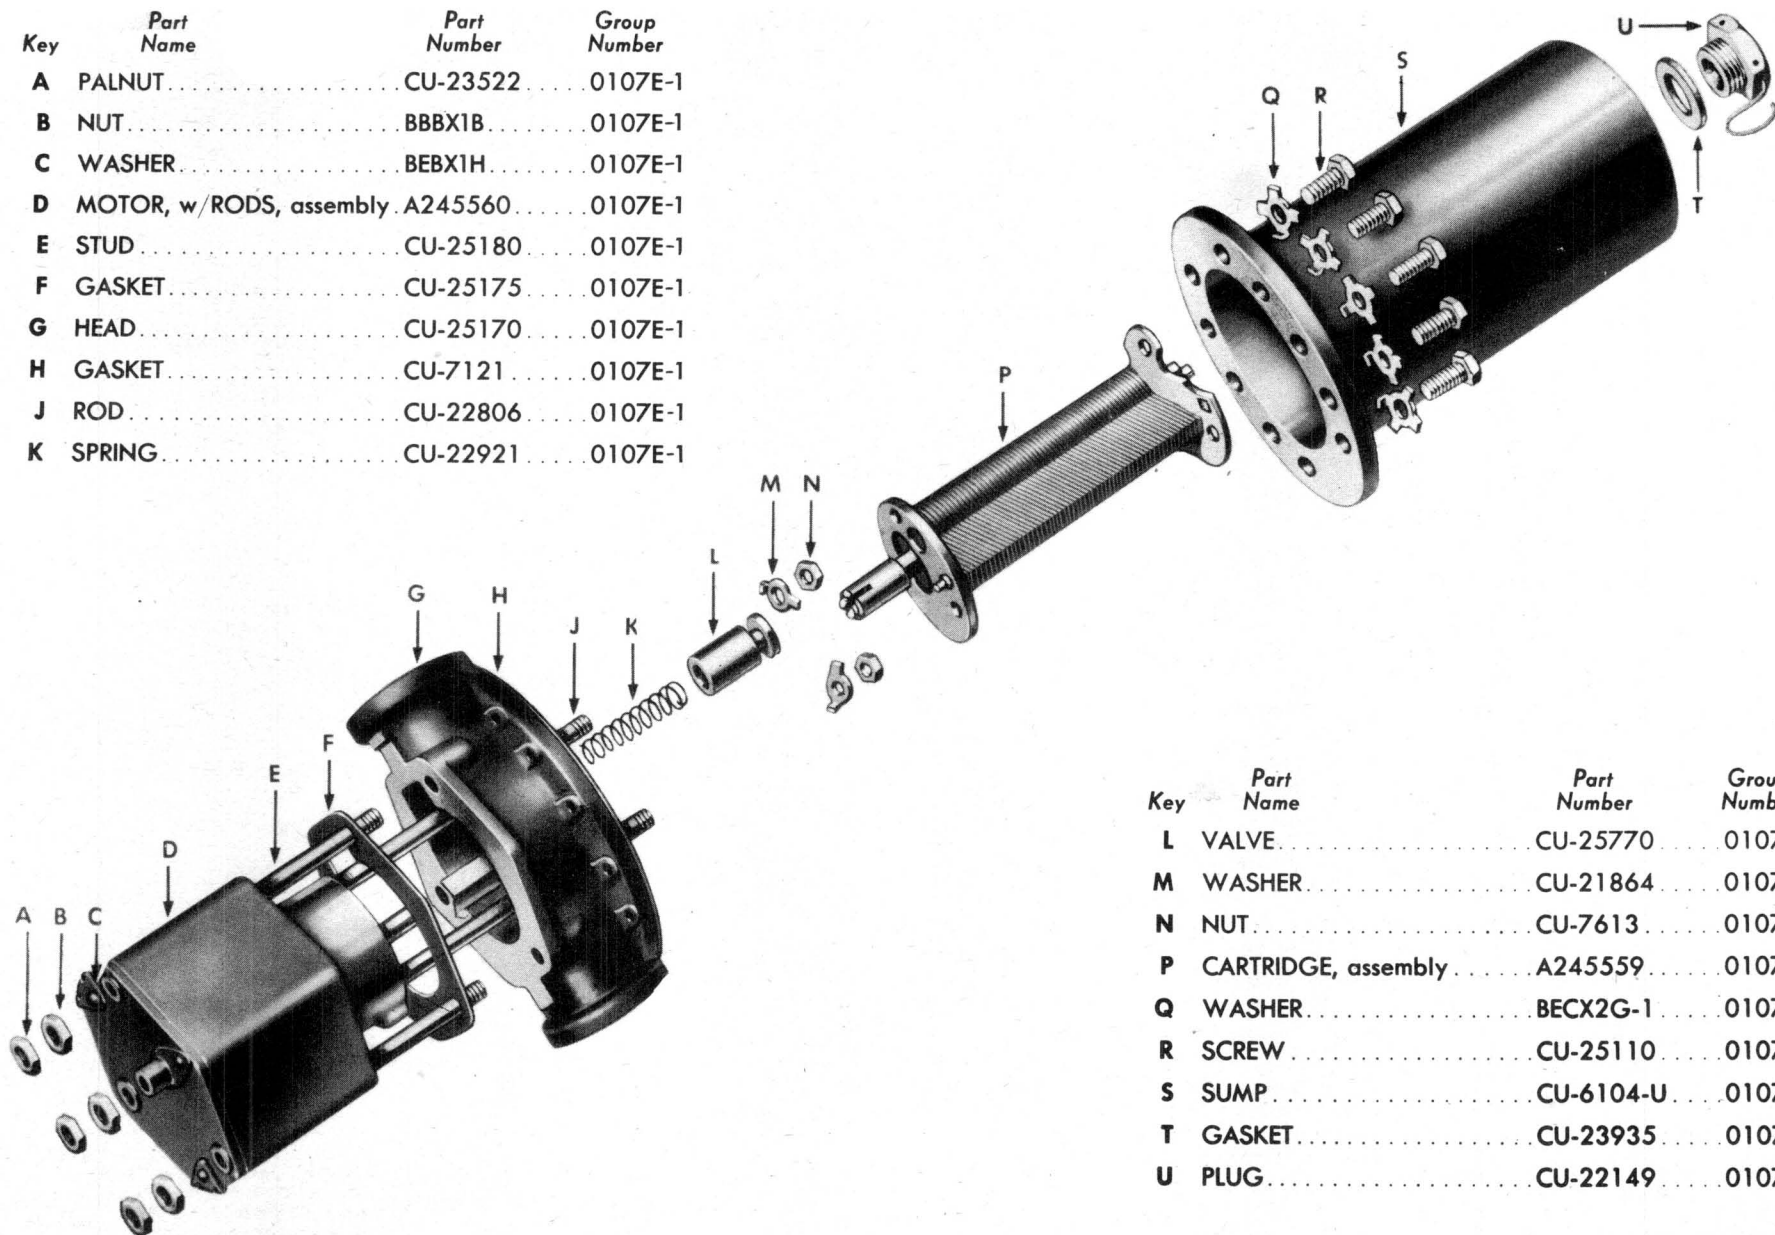

Key	Part Name	Part Number	Group Number
L	VALVE.....	CU-25770	0107E-1
M	WASHER.....	CU-21864	0107E-1
N	NUT.....	CU-7613	0107E-1
P	CARTRIDGE, assembly	A245559	0107E-1
Q	WASHER.....	BECX2G-1	0107E-1
R	SCREW.....	CU-25110	0107E-1
S	SUMP.....	CU-6104-U	0107E-1
T	GASKET.....	CU-23935	0107E-1
U	PLUG.....	CU-22149	0107E-1

FIGURE 01-11—AUTOMATIC OIL FILTER ASSEMBLY—EXPLODED VIEW

RA PD 341084


0107J

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107J—OIL DISTRIBUTION SYSTEM (Cont'd)	
01-14	G167-0168015	A191243L	FOM-P325	ELBOW, tube, heavy duty, short, 90°, 7/8 in., 3/4 in., female pipe end, complete (with sleeve and nut) (engine oil reservoir, outlet) (WH-8455X14C)	1
01-14	G167-0168016	B183361L	FOM-P677	ELBOW, tube, heavy duty, short, 90°, 7/8 in., 3/4 in., male pipe end, complete (with nut and sleeve) (engine oil cooler outlet) (WH-8405X14)	1
01-14	G167-0168017		FOM-P329	ELBOW, tube, union, female, heavy duty, short, 90°, 7/8 in., 3/4 in. female pipe end, complete (with sleeves and nuts) (engine oil filter outlet line to cooler inlet line) (WH-85051X4C)	1
01-14	G167-0168016		FOM-P326	ELBOW, tube, union, heavy duty, short, 90°, 7/8 in., 3/4 in., male pipe end, complete (with sleeve and nuts) (engine oil cooler inlet) (WH-8405X14C)	1
01-20	G103-0103040	A139822	CO-2867	GASKET, engine crankcase scavenger oil line (29/64 I.D. x 1 O.D. x 1/8 in. thk.) (Also listed as part of GASKET SET, CO-22530)	1
01-4, 5	G103-0102970	A190516-12	AIR-AN900-12	GASKET, engine valve rocker box cover hose nipple (cop-asbestos, 3/4 I.D. x 15/16 O.D. x 1/8 in. thk.) (Also listed as part of GASKET SET, CO-22530)	6
01-19	G103-0102980	A161002	CO-20467	GASKET, engine valve rocker scavenger pump elbow (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)	1
	G214-7036468		FOM-30X1164B-1	HOSE, elbow to engine oil pressure and scavenger pump (3/4 in. I.D. x 20 in. long) (See HOSE, FOM-P4604, group 2304P)	1
01-14	G167-0217812		FOM-30X1164B	HOSE, elbow to engine oil pressure and scavenger pump, assembly (3/4 in. I.D. x 20 in. long) (Includes: CONNECTORS, FOM-P344 and FOM-P345)	1
	G103-0103424	A190530	CO-22098	HOSE, engine governor oil drain nipple to rocker scavenger tee (neoprene, 1/2 in. I.D. x 2 in. long)	1
	G214-7036469		FOM-30X1212B-1	HOSE, engine oil cooler to reservoir (3/4 in. I.D. x 13 7/8 in. long) (See HOSE, FOM-P4604, group 2304P)	1
01-14	G167-7002795		FOM-30X1212B	HOSE, engine oil cooler to reservoir, assembly (3/4 in. I.D. x 13 7/8 in. long) (Includes: CONNECTORS, FOM-P344 and FOM-P820)	1
	G214-7036473		FOM-30X1163B-1	HOSE, engine oil pressure and scavenger pump to filter (3/4 in. I.D. x 29 in. long) (See HOSE, FOM-P4604, group 2304P)	1
01-14	G167-0217811		FOM-30X1163B	HOSE, engine oil pressure and scavenger pump to filter, assembly (3/4 in. I.D. x 29 in. long) (Includes: CONNECTORS, FOM-P344 and FOM-P345)	1
01-4,5	G103-0103425	A160978	CO-20275	HOSE, engine valve rocker cover to line (neoprene, 5/8 I.D. x 1 7/8 in. long)	7
	G214-7036475		FOM-30X1162B-1	HOSE, engine valve rocker oil scavenger strainer to filter (1/4 I.D. x 19 1/4 in. long) (See HOSE, FOM-P4601, group 2304P)	1
01-14	G167-0217810		FOM-30X1162B	HOSE, engine valve rocker oil scavenger strainer to filter, assembly (1/4 in. I.D. x 19 1/4 in. long) (Includes: CONNECTORS, FOM-P269 and FOM-P402)	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G214-7036476		FOM-30X1175B-1	HOSE, oil breather, bulkhead to engine (1/2 in. I.D. x 22 7/8 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
01-14	G167-0217813		FOM-30X1175B	HOSE, oil breather, bulkhead to engine, assembly (1/2 in. I.D. x 22 7/8 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163).....	1
	G103-0106480	A190520	CO-A20645	HOSE, oil feed, engine governor, assembly.....	1
01-14	G167-0407825		FOM-3X1156B	LINE, elbow to engine oil cooler (54 3/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
01-14	G167-0407828		FOM-3X1159B	LINE, engine oil filter to elbow (70 3/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
01-14	G167-0407827		FOM-3X1158B	LINE, engine oil reservoir to elbow (48 3/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
01-14	G167-0407829		FOM-3X1161B	LINE, oil breather, reservoir to bulkhead (7 ft. 8 1/2 in. long) (See TUBING, FOM-P4405, group 2304P).....	1
01-14	G214-7036477		FOM-3X1160B	LINE, vent, engine oil reservoir (29 1/4 in. long) (See TUBING, FOM-P4407, group 2304P).....	1
01-14	G167-0307553		FOM-P334	NIPPLE, engine oil filter to line (pipe, br., std., long, 3/4 x 3).....	1
01-14	G167-0307552		FOM-P333	NIPPLE, engine oil reservoir to tee (pipe, br., 3/4 x 5 1/4).....	1
01-4,5	G103-0103665	A160977	CO-20273	NIPPLE, engine valve rocker box cover (S., cd-pltd., 3/4-16NC-3 1 9/16 in. over-all)....	6
01-14	G167-0307557		FOM-P331	NIPPLE, pipe, br., std., close, 3/4 x 1 3/8 (engine oil reservoir vent tee (1), engine oil reservoir outlet tee (1)).....	2
01-4	G103-0103880	A160976	CO-20272	NUT, gland, engine interrocker box drain tube.....	14
01-4	G103-0104240	A160975	CO-20271	PACKING, engine interrocker box drain tube.....	14
	G103-0101880	A139823	CO-2868	PIN, dowel, engine crankcase scavenger oil line gasket.....	1
	G038-0151640	A189101	CO-20464	PIN, oil plug, crankcase (br., 3/16 x 1/2).....	7
	G038-0151670	A160982	CO-20287	PIN, oil plug, crankcase (br., 5/32 x 5/16).....	7
01-14	H006-0283220	B7270UA	FOM-P647	PLUG, pipe, br., sq-hd., 3/4 in. (engine oil reservoir outlet tee).....	1
01-19	H006-0283400	B75A	CO-2026	PLUG, pipe, C.I., std., ck., black, 1/4 in. (engine accessory case oil lines)	
01-19	H006-0283404	B75B	CO-2025	PLUG, pipe, C.I., std., ck., black, 3/8 in. (engine crankcase scavenger oil line).....	2
01-3,19,20	G103-0146614	A20188	CO-2024	PLUG, pipe, S., ck., 1/8 in. (engine high pressure oil lines).....	3
01-19	G103-0104611	A189104	CO-20882	PLUG, pipe, S., sq-dld-hd., 1/8-27NPT (engine oil pressure gage hole).....	1
01-2,5	G103-0106340	D38369	CO-5250	TEE, engine valve rocker scavenger pump.....	1
	G103-0104060	A156959	CO-2437	NUT, regular, hex., alloy-S., cd-pltd., 1/4-28NF-3.....	1
	H001-0726005	A160946	CO-2886	PALNUT, light, S., cd-pltd., 1/4-28NF-2.....	1
03-6	G103-0106222	A189127	CO-22001	STUD, 1/4-20NC-3 (3/8) x 1/4-28NF-3 (5/16) x 3/4 (standard size) (sq-end.).....	1
	G214-7036478		CO-22001-03	STUD, 1/4-20NC-3 (3/8) x 3/4 x 1/4-28NF-3 (5/16) (0.003 oversize) (pointed end)....	as req.
	G214-7036480		CO-22001-06	STUD, 1/4-20NC-3 (3/8) x 3/4 x 1/4-28NF-3 (5/16) (0.006 oversize) (ck-end.).....	as req.
	G103-0106222		CO-22001-09	STUD, 1/4-20NC-3 (3/8) x 3/4 x 1/4-28NF-3 (5/16) (0.009 oversize) (dld-end.).....	as req.
01-14	G167-0398494	B7269BA	FOM-P332	TEE, stght., br., 3/4 in. (engine oil reservoir, vent (1), outlet (1)).....	2
01-4	G103-0106483	A160979	CO-20276	TUBE, drain, engine intercyylinder rocker box.....	2
01-4	G103-0106482	A160973	CO-20269	TUBE, drain, engine interrocker box.....	7
0107K—OIL PRESSURE RELIEF VALVE					
01-19	G103-0102340	A190516-16	AIR-AN900-16	GASKET, engine oil high-pressure relief valve housing (rd., 1 I.D. x 1 3/16 O.D. x 1/8 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
01-19	G038-0125730	A190516-14	AIR-AN900-14	GASKET, engine oil low-pressure relief valve housing (rd., cop-asbestos., 7/8 I.D. x 1 1/16 O.D. x 1/8 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1

GROUP 01—ENGINE

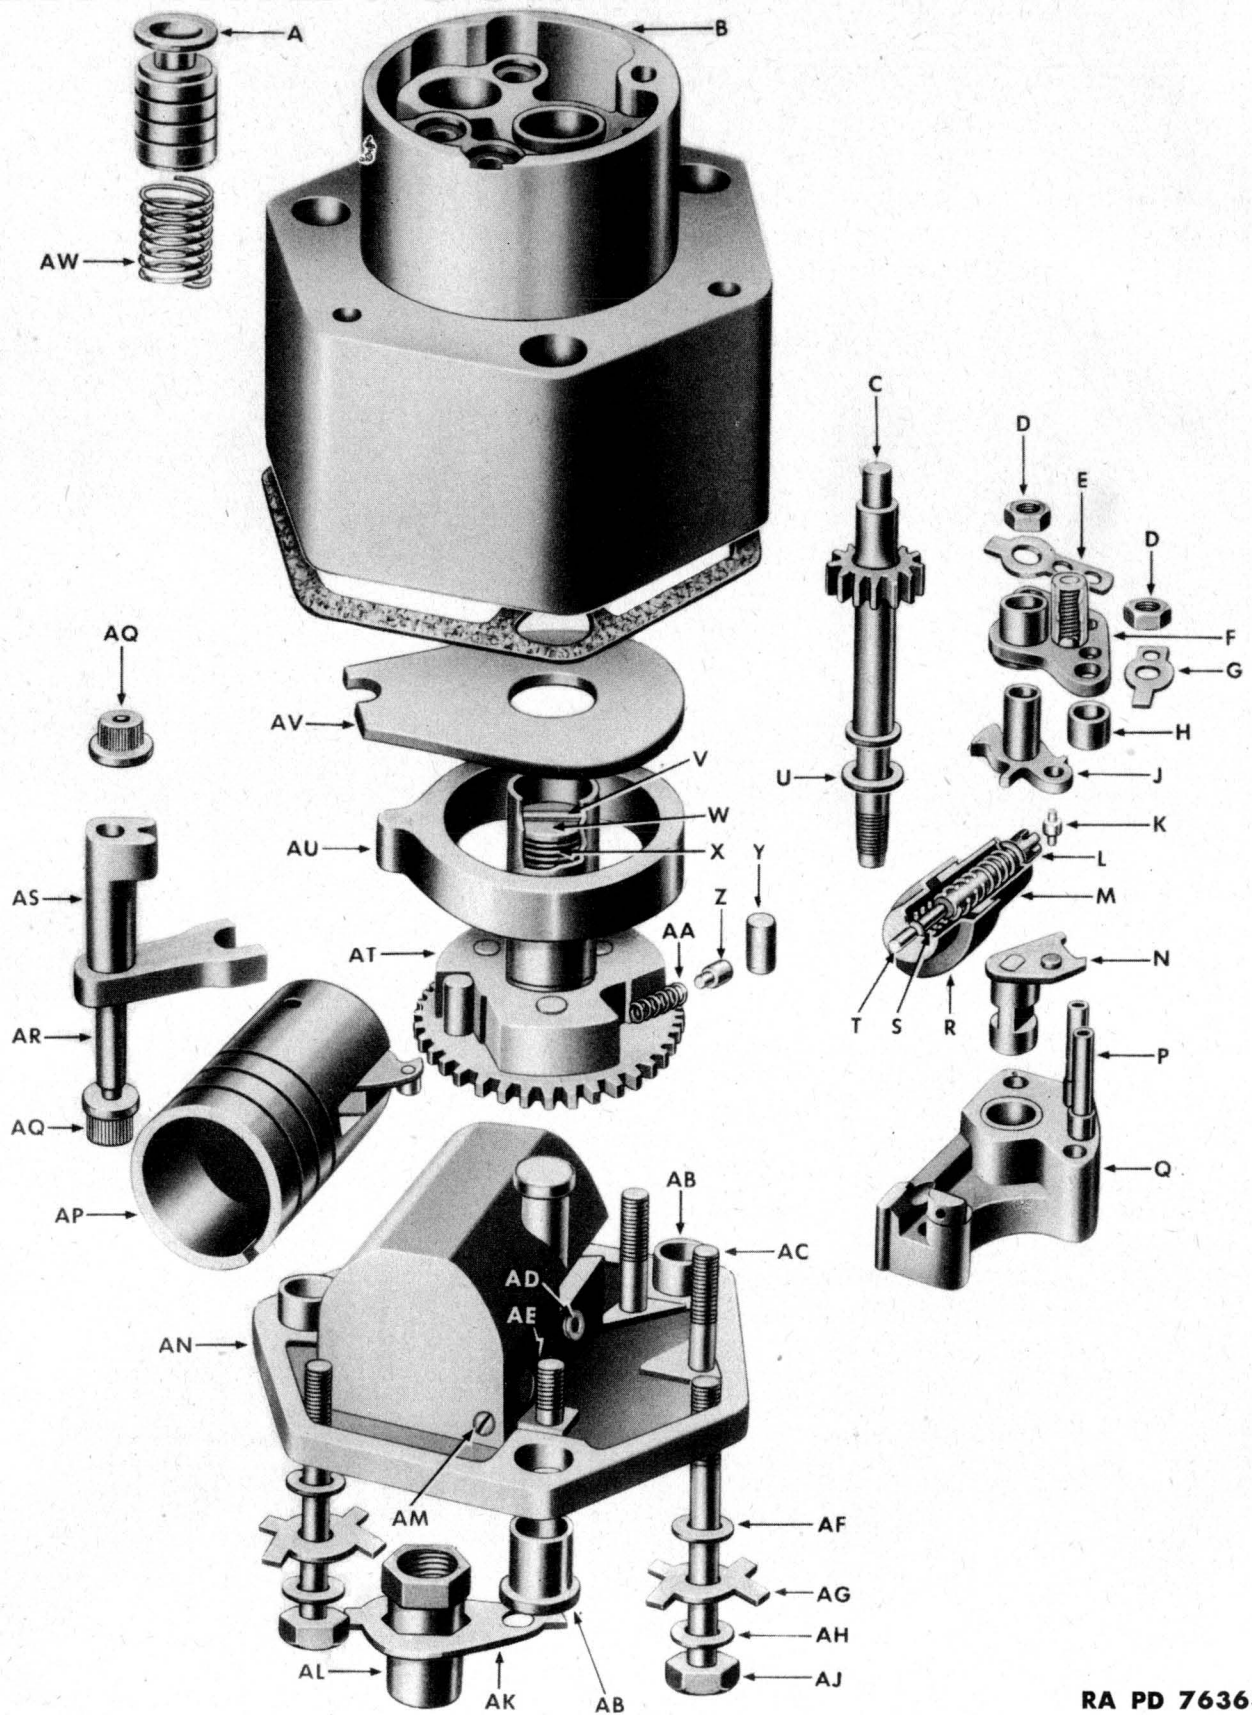

RA PD 76363

FIGURE 01-12—OIL FILTER MOTOR ASSEMBLY—EXPLODED VIEW

Key	Part Name	Part Number	Group Number
A	VALVE	CU-25770	0107E-1
B	HEAD, w/BUSHING, assembly	CU-25349-U	0107E-1
C	SHAFT	CU-20190	0107E-1
D	NUT	CU-3765	0107E-1
E	WASHER	CU-22534	0107E-1
F	BRIDGE	CU-20050-U	0107E-1
	DETENT	CU-20057-U	0107E-1
G	WASHER	CU-22612	0107E-1
H	SPACER	CU-9073	0107E-1
J	PLATE, assembly	CU-9077-U	0107E-1
K	PIN	CU-9034	0107E-1
L	CLEVIS	CU-9029	0107E-1
M	PISTON	CU-9028	0107E-1
N	ARM, assembly	CU-25436-U	0107E-1
P	TUBE	CU-9035	0107E-1
Q	BLOCK, assembly	CU-25156-U	0107E-1
R	CYLINDER	CU-9031	0107E-1
S	SPRING	CU-9038	0107E-1
T	PIN	CU-9030	0107E-1
U	WASHER	CU-20383	0107E-1
V	PIN	CU-22535	0107E-1
W	WASHER	CU-22838	0107E-1
X	SPRING	CU-9060	0107E-1
Y	ROLLER	CU-9011	0107E-1
Z	PIN	CU-9013	0107E-1
AA	SPRING	CU-9012	0107E-1
AB	PIN	CU-9059	0107E-1
AC	SCREW	BCKX1FN-1	0107E-1
AD	GASKET	CU-20458	0107E-1
AE	SCREW	BCKX1FM-1	0107E-1
AF	GASKET	CU-22533	0107E-1
AG	WASHER	CU-20498	0107E-1
AH	WASHER	CU-20559	0107E-1
AJ	BOLT	CU-25128	0107E-1
AK	LOCK	CU-22987	0107E-1
AL	NUT	CU-20234	0107E-1
AM	PLUG	CU-21997	0107E-1
AN	COVER, assembly	CU-21495-R	0107E-1
AP	PISTON	CU-20059-U	0107E-1
AQ	BUSHING	CU-9008	0107E-1
AR	PIN	CU-9007	0107E-1
AS	SHAFT	CU-9006	0107E-1
AT	CENTER	CU-22834	0107E-1
AU	RING	CU-9010	0107E-1
AV	PLATE	CU-9017	0107E-1
AW	SPRING	CU-22921	0107E-1


RA PD 76363-C

FIGURE 01-12—OIL FILTER MOTOR ASSEMBLY—EXPLODED VIEW

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0107K—OIL PRESSURE RELIEF VALVE (Cont'd)	
01-19	G103-0103439	A136053	CO-2599	HOUSING, engine oil high-pressure relief valve.....	1
01-19	G103-0103438	A160953	CO-20246	HOUSING, engine oil low-pressure relief valve.....	1
01-19	G103-0105703	A231714	CO-22812	SPRING, engine oil high-pressure relief valve.....	1
01-19			CO-23168	SPRING, engine oil low-pressure relief valve.....	1
01-19	G103-0106640	A136054	CO-2600	VALVE, relief, engine oil, high-pressure.....	1
01-19	G103-0106660	A160954	CO-20247	VALVE, relief, engine oil, low-pressure.....	1
				0108A—INTAKE PIPE	
01-4	G103-0102160	A139804	CO-2834	FLANGE, engine intake pipe.....	7
	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24NF-3.....	21
	G103-0104267	A160945	CO-2560	PALNUT, light, S., cd-pltd., 5/16-24NF.....	21
	G103-0106226	A189121	CO-20991	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (standard size) (sq-end.).....	21
	G167-0392291		CO-20991-03	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.003 oversize) (pointed end).....	as req.
	G214-7036481		CO-20991-06	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.006 oversize) (ck-end.).....	as req.
	G214-7036482		CO-20991-09	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) (0.009 oversize) (dld-end.).....	as req.
01-4	G103-0100028	A139796	CO-2827	GASKET, engine intake pipe flange (cop-asbestos., 1/16 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	7
01-4	G103-0103920	A139803	CO-2833	NUT, gland, engine intake pipe.....	7
01-4	G103-0104220	A139717	CO-2096	PACKING, engine intake pipe gland nut (GPC-7063).....	7
01-4	G103-0104400	C65239	CO-4173	PIPE, intake, engine.....	7
				0108B—EXHAUST MANIFOLD AND ELBOWS	
01-4,5	G103-0101900	B170183	CO-A3931	ELBOW, engine exhaust, 65°, w/STUDS, assembly (For cylinder Nos. 1, 3, 4 and 7) (Includes: liner, nuts and washers).....	4
	G103-0101920	B170172	CO-A35050	ELBOW, engine exhaust, 90°, w/STUDS, assembly (For cylinder Nos. 2 and 6) (Includes: liner, nuts, and washers).....	2
01-4	G103-0101940	B170184	CO-A3930	ELBOW, engine exhaust, 90°, w/STUDS, assembly (For cylinder No. 5) (Includes: liner, nuts, and washer).....	1
	G103-0103800	A136015	CO-2463	NUT, castle, br., 5/16-24NF-2.....	28
01-5	G103-0106225	A189129	CO-22003	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (standard size) (sq-end.).....	28
	G167-0392293		CO-22003-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.003 oversize) (pointed end).....	as req.

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G214-7036483		CO-22003-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.006 oversize) (ck-end.)	as req.
	G214-7036484		CO-22003-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.009 oversize) (dld-end.)	as req.
	G103-0106920 22W-1642100	A136016 BFWX1A	CO-2473	WASHER, special, plain, S., cd-pltd., 5/16 in.	28
	G038-0124995		CO-20886	WIRE, steel, low carbon, soft, black anld., 0.041 in. diam.	as req.
	G167-0184603		CO-22707	FLANGE, engine exhaust pipe (For cylinder Nos. 1, 4, 7 and 3)	4
	G103-0103650	E2311	CO-A6408	FLANGE, engine exhaust pipe (For cylinder Nos. 2, 5 and 6)	3
	G103-0104398		CO-4323	MANIFOLD, engine exhaust, assembly	1
	G103-0104396		CO-4324	PIPE, engine exhaust (For cylinder Nos. 1 and 4)	2
	G103-0104411		CO-4753	PIPE, engine exhaust (For cylinder No. 2)	1
	G103-0104397		CO-4326	PIPE, engine exhaust (For cylinder No. 3)	1
	G103-0104399		CO-4327	PIPE, engine exhaust (For cylinder No. 5)	1
	G103-0104410		CO-4754	PIPE, engine exhaust (For cylinder No. 6)	1
	G103-0103800	A136015	CO-2463	PIPE, engine exhaust (For cylinder No. 7)	1
	G038-0175572	A189120	CO-20990	NUT, castle, br., 5/16-24NF-2	14
	G214-7026485		CO-20990-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (standard size) (sq-end.)	14
	G214-7026486		CO-20990-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.003 oversize) (pointed end)	as req.
	G214-7026487		CO-20990-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.006 oversize) (ck-end.)	as req.
	G103-0106920 22W-1642100	A136016 BFWX1A	CO-2473	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.009 oversize) (dld-end.)	as req.
				WASHER, special, plain, S., cd-pltd., 5/16 in.	14
				WIRE, steel, low carbon, soft, black anld., 0.041 in. diam.	as req.

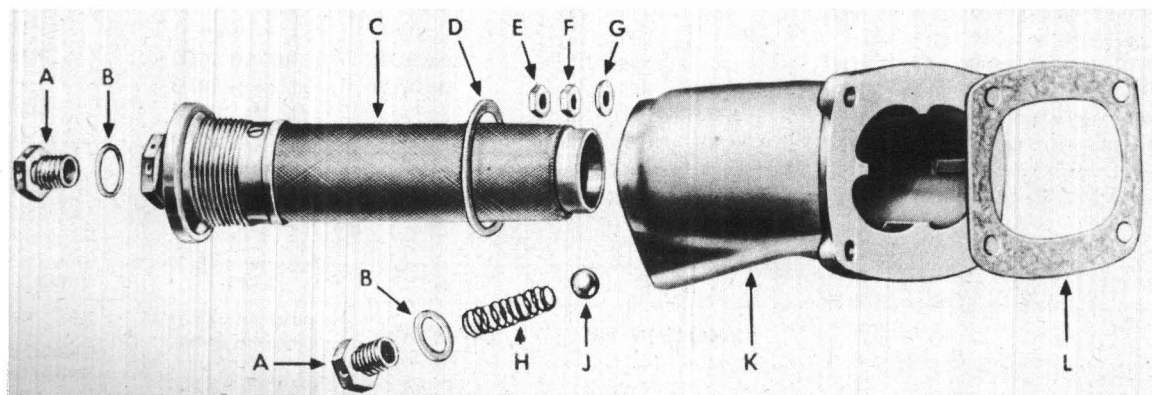

Key	Part Name	Part Number	Group Number
A	PLUG	A136001	0107E-2
B	GASKET	A190516-10	0107E-2
C	SCREEN	B146100	0107E-2
D	GASKET	A190516-24	0107E-2
E	PALNUT	A160945	0107E-2
F	NUT	A143866	0107E-2
G	WASHER	A136016	0107E-2
H	SPRING	A139812	0107E-2
J	BALL	CCAX1F	0107E-2
K	HOUSING	C60997	0107E-2
L	GASKET	A136042	0107E-2

FIGURE 01-13—HIGH PRESSURE OIL SCREEN ASSEMBLY—EXPLODED VIEW

RA PD 341085

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0109—FLYWHEEL	
01-6	G103-0101380	A164149	CO-20607	CONE, engine flywheel hub, front (two halves).....	1
01-6	G103-0101400	A164148	CO-20606	CONE, engine flywheel hub, rear (two halves).....	1
01-15	G103-0102221		CO-A4812	FLYWHEEL, engine, assembly (Includes: hub and facing).....	1
02-2	G103-1585203		CO-A4813	FLYWHEEL, engine, w/FAN, assembly.....	1
	G103-0102220	D32988	CO-5228	HUB, engine flywheel.....	1
01-6	G103-0103840	A161005	CO-20447	NUT, engine flywheel hub.....	1
01-6	H001-0811026	BFAX1BD-1	CO-2502	PIN, cotter, split, S., cd-pltd. (type B), 1/16 x 5/8.....	1
	G038-0122840	A165596	CO-20960	PIN, dowel, engine flywheel hub.....	2
01-6	G103-0104300		AIR-AN393-17	PIN, lock, engine flywheel hub nut.....	1
				0109A—FAN	
01-15	G103-0102060	D33156	CO-6126	FAN, engine flywheel.....	1
01-15	H001-0118025	BAOX7CC	CO-20998	BOLT, hex-hd., s-fin., alloy-S., dld. f/lkg-wire., 3/8-24NF-2 x 1.....	12
01-15	H001-0118052	BAOX7ED	CO-20999	BOLT, hex-hd., s-fin., alloy-S., dld. f/lkg-wire., 1/2-20NF-2 x 1 1/4.....	12
01-15	G103-0106940	A136017	CO-2474	WASHER, plain, S., 3/8 in.....	12
01-15	G038-8810720	A139781	CO-2794	WASHER, plain, S., 1/2 in.....	12
	22W-1642125	BFWX1B		WIRE, steel, low carbon, soft, black anld., 0.0063 in. diam.....	as req.
			CO-20647	WEIGHT, counterbalance, engine fan.....	as req.
	H001-0924108	BMCX1	CO-20670	RIVET, steel, ck-hd., 3/16 x 7/8.....	as req.
				0110—MOUNTINGS	
	G167-0115990		CO-35253	BAR, steady, engine (FOM-3X1037B).....	1
	G167-0118000		CO-A5845	BEAM, support, engine (FOM-3X1149C).....	1
	H001-0117051	BAOX9HB	FOM-P308	BOLT, hex-hd., s-fin., alloy-S., dld. f/c-pin., 3/8-24NF-2 x 1 1/8.....	8
	H001-0117060	BAOX9HC	FOM-P307	BOLT, hex-hd., s-fin., alloy-S., dld. f/c-pin., 3/8-24NF-2 x 3 1/2.....	8
	H001-4013545	BBFX1CA	FOM-P312	NUT, castle, alloy-S., 3/8-24NF-2.....	16
	H001-0811040	BFAX1CG	FOM-P310	PIN, cotter, split, S., (type B), 3/32 x 1.....	16
	G167-0443015	A175630	CO-23268	WASHER, engine support beam attaching bolt (FOM-P303).....	8
	G167-0443015	BE CX1K	CO-23268	WASHER, lock, reg., S., 3/8 in.....	16
01-16	G167-0125829		FOM-31X1165B	BRACKET, resilient, engine mount.....	2
01-16	G107-0124255		FOM-P214	BOLT, hex-hd., s-fin., S., dld. f/c-pin., 7/8-14NF-3 x 6 1/2.....	2
	H001-0713005	BBFX2D	FOM-P213	NUT, castle, S., 7/8-14NF-2.....	2
	H001-0811054	BFAX1DK	FOM-P212	PIN, cotter, split, S., 1/8 x 1 1/2.....	2
	G167-0131484		FOM-3X1016A	CAP, engine steady bar.....	2
	G167-0381997	Q48WD	FOM-P101	SCREW, cap, hex-hd., S., dld. f/lkg-wire., 1/2-13NC-2 x 2.....	4
	G167-0443033	BE BX1M	FOM-P103	WASHER, plain, S., SAE std., 1/2 in.....	4
	22W-1642125	BFWX1B		WIRE, S., low carbon, black anld., 0.0625 diam.....	as req.

Key	Part Name	Part Number	Group Number
A	HOSE, assembly	FOM-30X1163B	0107J
B	ELBOW	B7270E	0107J
C	FILTER, assembly	C95134	0107E-1
D	CONNECTOR	FOM-P328	0107J
E	ELBOW	A159461	0107J
F	BUSHING	A145825	0107J
G	NIPPLE	FOM-P334	0107J
H	LINE	FOM-3X1159B	0107J
J	HOSE, assembly	FOM-30X1162B	0107J
K	CLIP	FOM-8X1014B	0107J
L	BLOCK	FOM-8X1059B	0107J
M	ELBOW	FOM-P329	0107J
N	RESERVOIR, assembly	FOM-31X1039D	0107D
P	HOSE, assembly	FOM-30X1212B	0107J
Q	CLIP	FOM-8X1017B	0107J
R	ELBOW	FOM-P677	0107J
S	LINE	FOM-3X1156B	0107J
T	ELBOW	FOM-P326	0107J
U	COOLER, assembly	FOM-P341	0107B
V	CLIP	FOM-8X1012B	0107J
W	LINE	FOM-3X1161B	0107J
X	ELBOW	FOM-P323	0107J

Key	Part Name	Part Number	Group Number
Y	ELBOW	A159462	0107J
Z	LINE	FOM-3X1160B	0107J
AA	CONNECTOR	FOM-P327	0107J
AB	BUSHING	FOM-P330	0107J
AC	TEE	FOM-P332	0107J
AD	NIPPLE	FOM-P331	0107J
AE	HOSE, assembly	FOM-30X1175B	0107J
AF	ELBOW	FOM-P338	0107J
AG	NIPPLE	FOM-P333	0107J
AH	PLUG	B7270UA	0107J
AJ	ELBOW	FOM-P325	0107J
AK	LINE	FOM-3X1158B	0107J
AL	HOSE, assembly	FOM-30XT164B	0107J
AM	ELBOW	FOM-P337	0107J
AN	CONNECTOR	FOM-P324	0107J

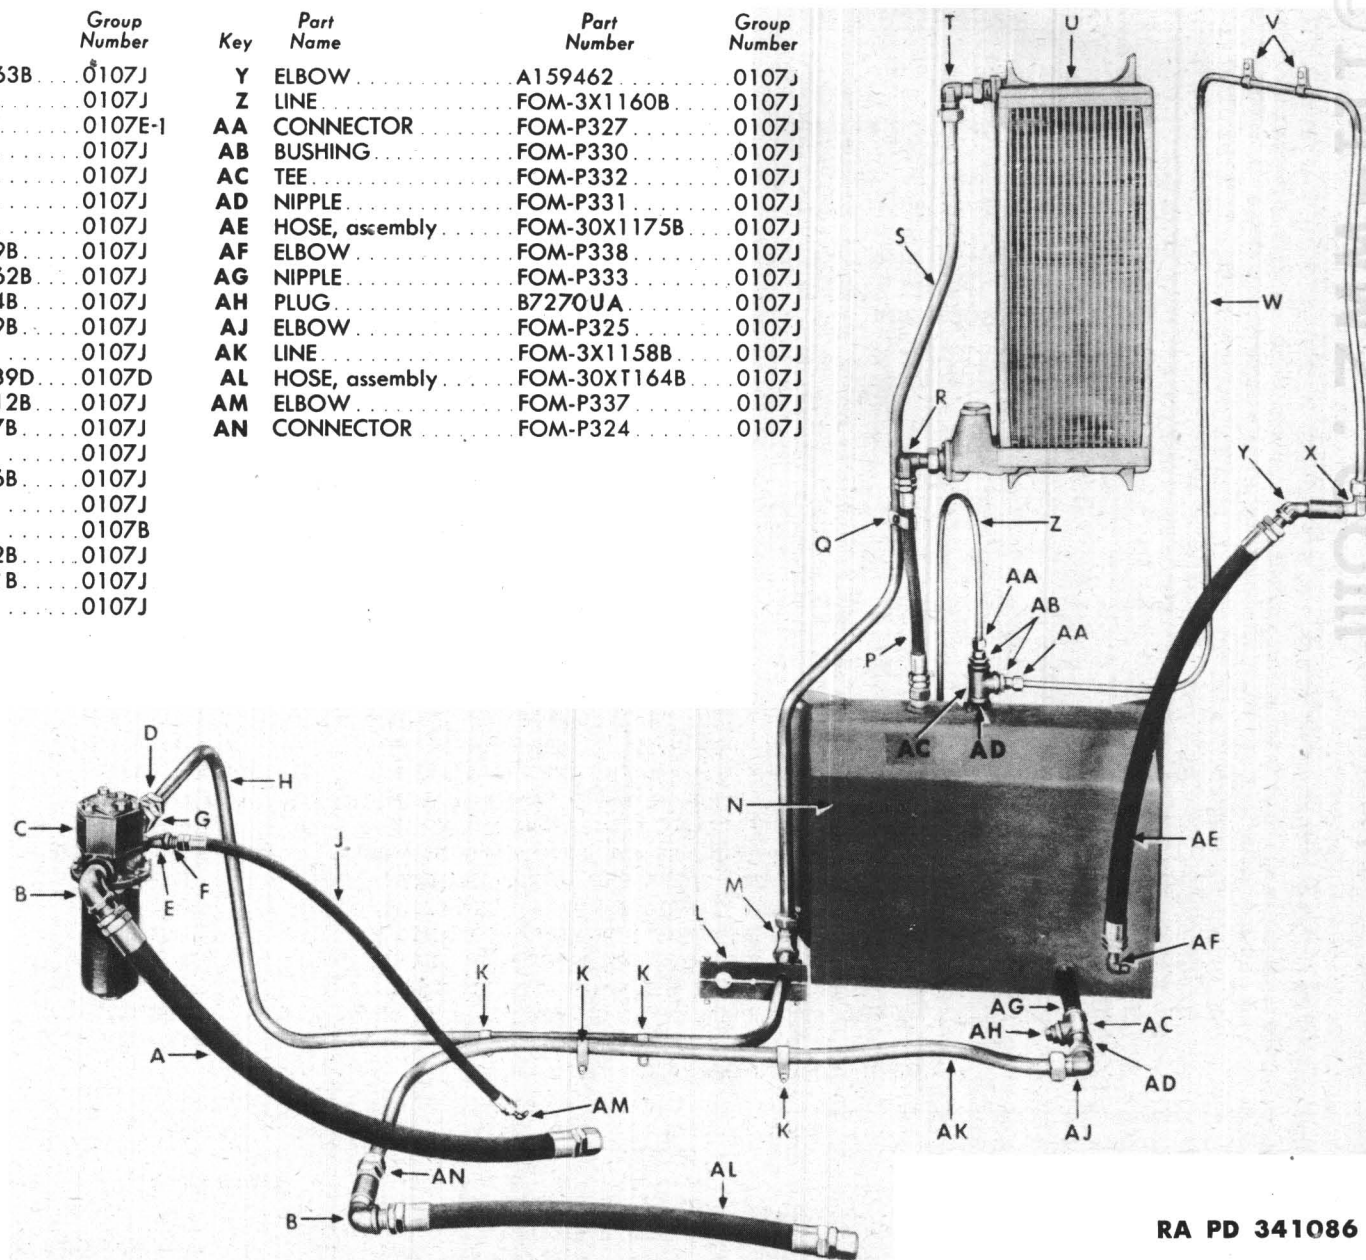



FIGURE 01-14—ENGINE OIL DISTRIBUTION SYSTEM

RA PD 341086

0110

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0110—MOUNTINGS (Cont'd)	
01-17		C67075B	CO-4241A	CAP, engine steady bar clamp.....	2
01-17	G103-0105134	A164141	CO-20539	SCREW, cap, hex-hd., alloy-S., cd-pltd., dld. f/lkg-wire., 3/8-16NC-2 x 1 1/4.....	4
	22W-1642125	BFWX1B		WIRE, steel, low carbon, soft, black anld., 0.063 in. diam.....	as req.
01-17	G038-0109910	C67075	CO-4241	CLAMP, engine steady bar.....	2
	G103-0101205		CO-4241A1	CLAMP, engine steady bar, assembly (Includes: cap and screws).....	2
	G103-0104100	A166458	CO-2441	NUT, light, hex., alloy-S., cd-pltd., 3/8-24NF-3.....	4
	G103-0104265	A139770	CO-2561	PALNUT, light, S., cd-pltd., 3/8-24NF.....	4
01-16	G167-0294850		FOM-30X1015E	FRAME, engine mount, assembly (Includes: cap and screws).....	1
01-17	G103-1632800	B157719	CO-A3400	INSULATOR, engine steady bar clamp support, assembly.....	2
	G103-0104100	A166458	CO-2441	NUT, light, hex., alloy-S., cd-pltd., 3/8-24NF-3.....	8
	G214-7036488		FOM-31X1105E	MOUNT, engine, assembly (Includes: resilient bracket, throttle control bracket, throttle rear extension bushing, and attaching hardware).....	1
	H001-0116053	BANX1EC	FOM-P438	BOLT, hex-hd., s-fin., S., dld. f/lkg-wire., 1/2-13NC-2 x 1.....	8
	G167-0443033	BEBX1M	FOM-P103	WASHER, plain, S., SAE std., 1/2 in.....	8
	G103-0105930		CO-A5133	SUPPORT, engine steady bar, assembly (Includes: clamps and insulators).....	1
01-17	G103-0105930	B34373	CO-5133	SUPPORT, engine steady bar clamp.....	1
	G103-0100580	A164140	CO-20538	BOLT, engine crankcase (special, alloy-S., 7/16-20NF-2 both ends, 7 21/32 over-all lgh.).....	4
	H001-0811039	BFX1CE	CO-2506	PIN, cotter, split, S. (type B), 3/32 x 3/4.....	4
	G103-0103780	BBFX1DA-1	CO-2459	NUT, castle, alloy-S., cd-pltd., 7/16-20NF-2.....	4
	G167-0443015	A175630	CO-23268	WASHER, engine support beam attaching bolt (FOM-P303).....	4
	H001-1530011	BEBX1M	CO-20672	WASHER, plain, S., SAE std., 1/2 in.....	4
	G103-0106960	A139760	CO-2475	WASHER, special, plain, S., cd-pltd., 7/16 in.....	4
	G038-0123760	A139705	CO-2027	0111—LIFTING EYE	
				EYE, lifting, engine.....	2
				0113B—ACCESSORY CASE AND ACCESSORY DRIVE	
				0113B-1—ACCESSORY CASE	
01-19,20	G103-0100989		CO-A6158A1	CASE, engine accessory, w/GEARS, assembly (Includes: case w/studs assembly, gears, valves, and housings).....	1
01-19,20	G103-0100990		CO-A6158A2	CASE, engine accessory, w/PUMPS, assembly (Includes: accessory case w/gears assembly, drive assembly, filter assembly, strainer assembly, and miscellaneous plugs, covers, gaskets, nuts, and washers).....	1
	G167-0131614		CO-A6305	CASE, engine accessory, w/STUDS, assembly (Includes: bushings, and plugs).....	1
	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24NF-3.....	13
01-3	G103-0106226	A189121	CO-20991	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (standard size) (sq-end.).....	13

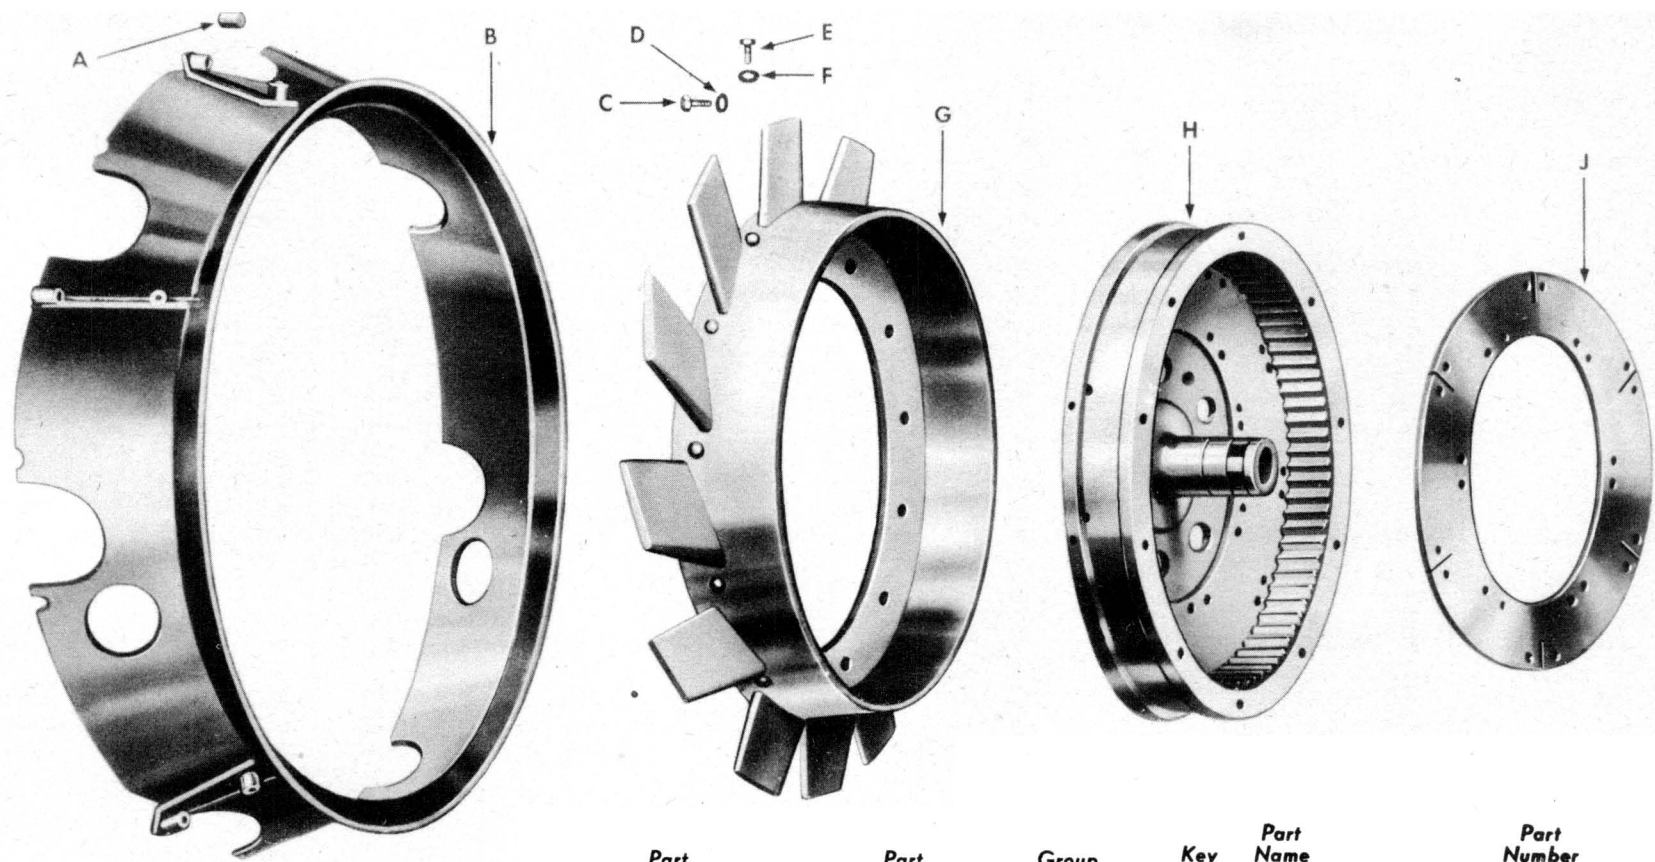


Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	SPACER.....	A164776	0500	E	BOLT.....	BAOX7CC	0109A
B	SHROUD, assembly.....	D33233	0500	F	WASHER.....	A136017	0109A
C	BOLT.....	BAOX7ED	0109A	G	FAN.....	D33156	0109A
D	WASHER.....	A139781	0109A	H	FLYWHEEL, assembly.....	CO-A4812	0109
				J	FACING.....	B157396	0201A

FIGURE 01-15—FLYWHEEL, FAN, AND SHROUD

RA PD 341087

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-19,20	G167-0392291		CO-20991-03	0113B—ACCESSORY CASE (Contd) STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) 5/16-24NF-3 (1/2) x 1 1/4 (0.003 oversize) (pointed end).....	as req.
	G214-7036481		CO-20991-06	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.006 over-size) (ck-end.).....	as req.
	G214-7036482		CO-20991-09	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.009 over-size) (dld-end.).....	as req.
	G103-0106920	A136016	CO-2473	WASHER, special, plain, S., cd-pltd., 5/16 in.....	13
	G214-6902216	E2216	CO-6158	CASE, engine accessory.....	1
01-19	G103-0102320	B105701	CO-3112	GASKET, engine accessory case to crankcase (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
	G103-0105326		AIR-AN502-10-4	SCREW, machine, oval-fil-hd., S., cd-pltd., dld. f/lkg-wire., No. 10 (0.190)-32NF-3 x 1/4 (drain, engine accessory case).....	1
01-20 01-18,20 01-20 01-20 01-20 01-20 01-20 01-20 01-20 01-20 01-20 01-20 01-20 01-20	G103-0100790	A136035	CO-2582	0113B-2—CAM DRIVE BUSHING, cam drive intermediate gear (bz., 1 I.D. x 13/16 O.D. x 1 9/16 in. long)....	1
	G214-6169328	B169328	CO-3979	GEAR, cam drive, intermediate (36T. and 20T.).....	1
	G103-0103700	A139727	CO-2152	NUT, slotted, hex., alloy-S., cd-pltd., 9/16-18NF-3.....	1
	H001-0811281	BFAX1CF-1	CO-2505	PIN, cotter, split, S., cd-pltd., 3/32 x 7/8.....	1
	G103-0106942	A136036	CO-2583	WASHER, S., 37/64 I.D. x 15/16 O.D. x 3/32 in. thk.....	1
	G103-0103244	B170323	CO-A3979	GEAR, cam drive, intermediate, w/BUSHING, assembly (36T. and 20T.).....	1
	G103-0103245	B105690	CO-3068	GEAR, cam drive, (24T., serrated hub) (driven by the crankshaft).....	1
	G103-0104280	B105689	CO-3113	PIN, cam drive intermediate gear.....	1
	H001-4013521	BBFX1BA-1	CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2.....	2
	H001-0811026	BFAX1BD-1	CO-2502	PIN, cotter, split, S., cd-pltd. (type B), 1/16 x 5/8.....	2
	G103-0106225	A189129	CO-22003	STUD, alloy-S., cd-pltd., dld. f/c-pin., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (standard size) (sq-end.).....	2
	G167-0392293		CO-22003-03	STUD, alloy-S., cd-pltd., dld. f/c-pin., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.003 oversize) (pointed end).....	as req.
	G214-7036483		CO-22003-06	STUD, alloy-S., cd-pltd., dld. f/c-pin., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7036484		CO-22003-09	STUD, alloy-S., cd-pltd., dld. f/c-pin., 5/16-18NC-3 (1/2) x 5/16-24NF-3 (1/2) x 1 1/8 (0.009 oversize) (dld-end.).....	as req.
01-20 01-19,20	G103-0100820	A139772	CO-2574	0113B-3 CRANKING MOTOR DRIVE BUSHING, engine accessory drive gear (br., 1 7/8 I.D. x 2 3/16 O.D. x 2 1/8 in. long)...	1
	G103-0100905	A136033	CO-2580	BUSHING, engine cranking motor drive gear (bz., 1 3/16 I.D. x 1 3/8 O.D. x 13/16 in. long).....	2

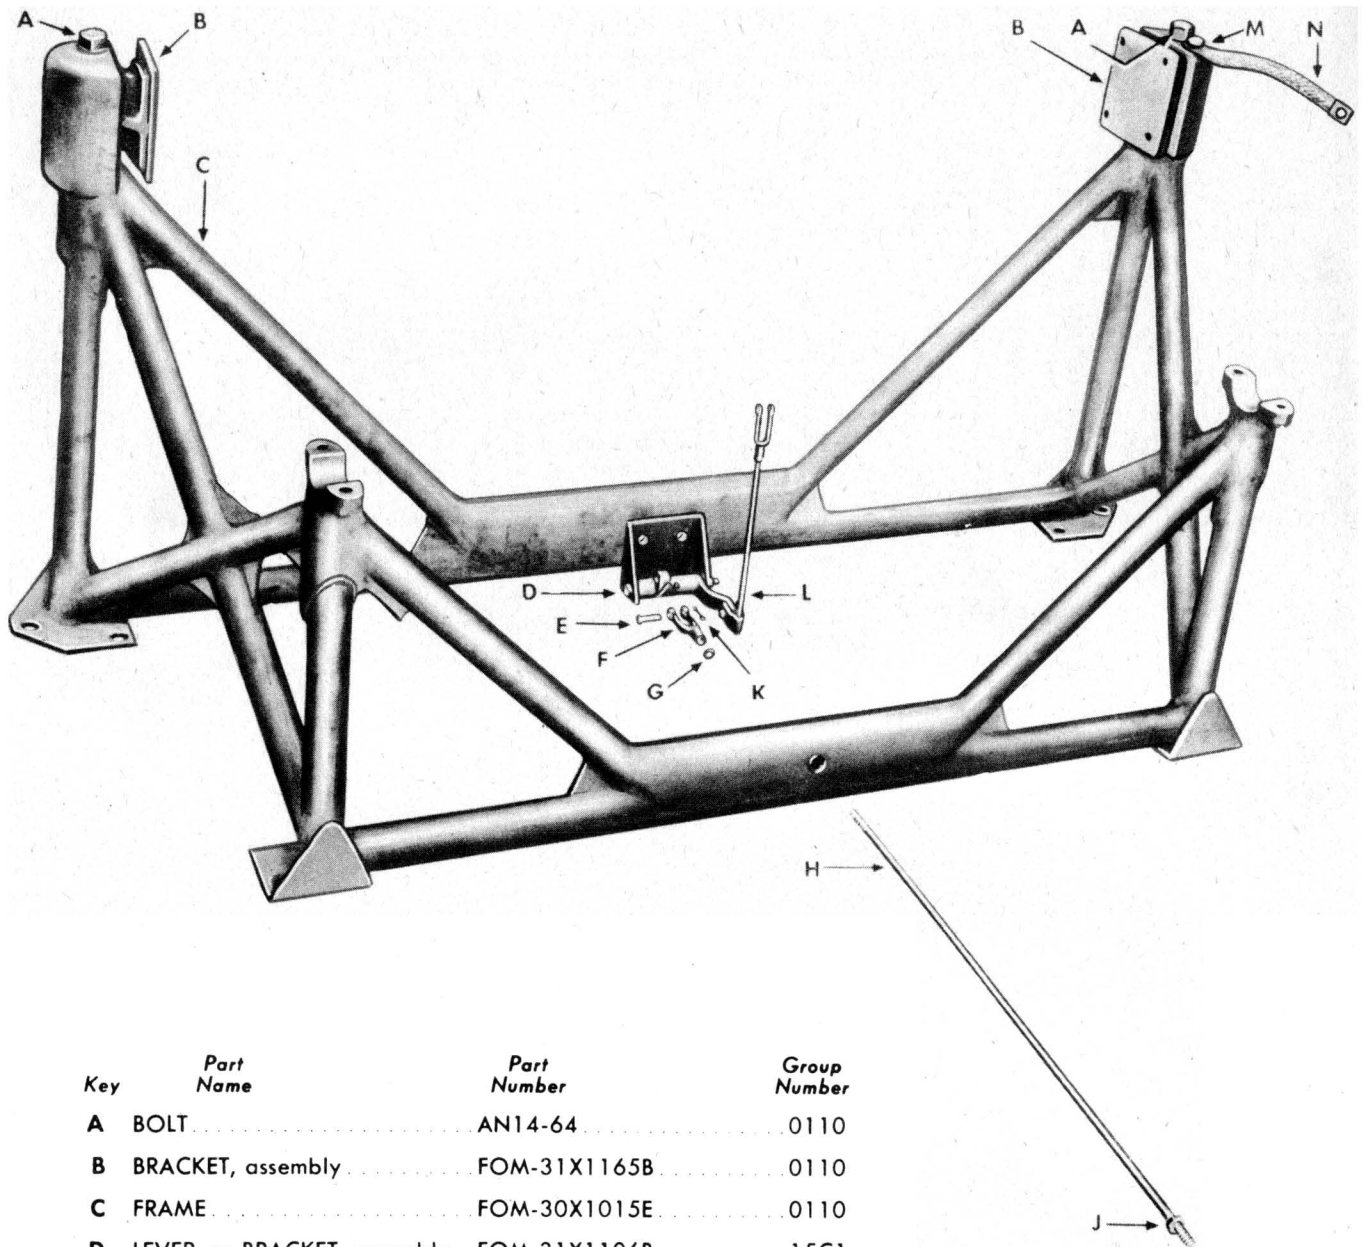


Key	Part Name	Part Number	Group Number
A	BOLT	AN14-64	0110
B	BRACKET, assembly	FOM-31X1165B	0110
C	FRAME	FOM-30X1015E	0110
D	LEVER, w/ BRACKET, assembly	FOM-31X1106B	15C1
E	PIN	BFFX1D	15C1
F	YOKE	EEAX1D	15C1
G	NUT	BBDX1C	15C1
H	ROD	FOM-30X1120B-1	15C1
J	NUT	BBDX1C	15C1
K	PIN	BFAX1CD	15C1
L	ROD, assembly	FOM-30X1086B	15C1
M	SCREW	BCVX2EH-1	2603
N	JUMPER	A160693	2603

FIGURE 01-16—ENGINE MOUNT AND THROTTLE

GROUP 01—ENGINE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0113B-3—CRANKING MOTOR DRIVE (Contd)	
	G168-7037107		CO-2574-040	BUSHING, engine cranking motor rear crankshaft gear (0.040 oversize)	as req.
01-19	G103-0101683	A166457	CO-2304	COVER, engine cranking motor gear (Used only for shipping and storage)	1
01-19	H001-4013541	BBFX1CA-1	CO-2458	NUT, castle, alloy-S., cd-pltd., 3/8-24NF-2	6
01-19	G103-0106200	A136011	CO-2418	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (5/8) x 1 5/8 (standard size) (sq-end.)	6
	G167-0392288		CO-2418-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (5/8) x 1 5/8 (0.003 oversize) (pointed end)	as req.
	G214-7036489		CO-2418-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (5/8) x 1 5/8 (0.006 oversize) (ck-end.)	as req.
	G214-7036490		CO-2418-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (5/8) x 1 5/8 (0.009 oversize) (dld-end.)	as req.
01-19	G103-0106940	A136017	CO-2474	WASHER, plain, S., cd-pltd., 3/8 in.	6
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black anld., 0.041 in. diam.	as req.
01-19	G103-0103100	A139740	CO-2249	GASKET, engine cranking motor flange (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)	2
	G214-7036491		CO-4378A1	GEAR, engine accessory drive, assembly (35T.) (Includes: circlip, ring, washer and nut) (Located inside accessory case and driven by the crankshaft)	1
01-18, 20	G103-0103240	C74408	CO-4378	GEAR, engine accessory drive (35T.) (Located inside accessory case and driven by the crankshaft)	1
	G103-0103261	B169306	CO-A3915	GEAR, engine cranking motor drive, assembly (35T.) (Includes: retainer, screw and washer) (Located outside of accessory case and driven by GEAR, CO-4378)	1
01-19	G103-0103260	B169293	CO-3915	GEAR, engine cranking motor drive (35T.) (Located outside of accessory case and driven by GEAR, CO-4378)	1
01-19	G103-0104765	A189065	CO-A22197	RETAINER, engine cranking motor drive gear, assembly	1
01-19	G103-0105286		AIR-AN75-11	SCREW, special, hex-hd., S., cd-pltd., dld. f/lkg-wire., 5/16-24NF-3 x 1 1/8	1
01-19	G103-0106840	A139768	CO-2555	WASHER, plain, S., cd-pltd., 5/16 in.	1
01-19	G103-0105683	A136071	CO-2667	SPACER, engine cranking motor gasket	1
				0113B-4 GENERATOR DRIVE	
01-21	G103-1518094		CO-22778	BEARING, ball, generator drive shaft	1
01-2	G103-0100420	C67972	CO-4292	BELT, generator drive	2
01-20	G103-0100825	A189140	CO-22097	BUSHING, generator drive gear (bz., 1 3/16 I.D. x 1 3/8 O.D. x 1 3/8 in. long)	1
01-20	G103-0100905	A136033	CO-2580	BUSHING, generator drive gear (bz., 1 3/16 I.D. x 1 3/8 O.D. x 13/16 in. long)	1
01-21	G103-0101020	A139815	CO-2860	CIRCLIP, generator drive shaft (15/16 in. diam.)	2
	G098-0600090	A189117	CO-20979	COUPLING, generator drive shaft	1
01-21	G103-1596320	A189138	CO-22070	COUPLING, generator drive shaft, w/oil THROWER, assembly	1
01-21	G103-0102800	A189114	CO-20962	GASKET, generator drive shaft bearing retainer (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)	1

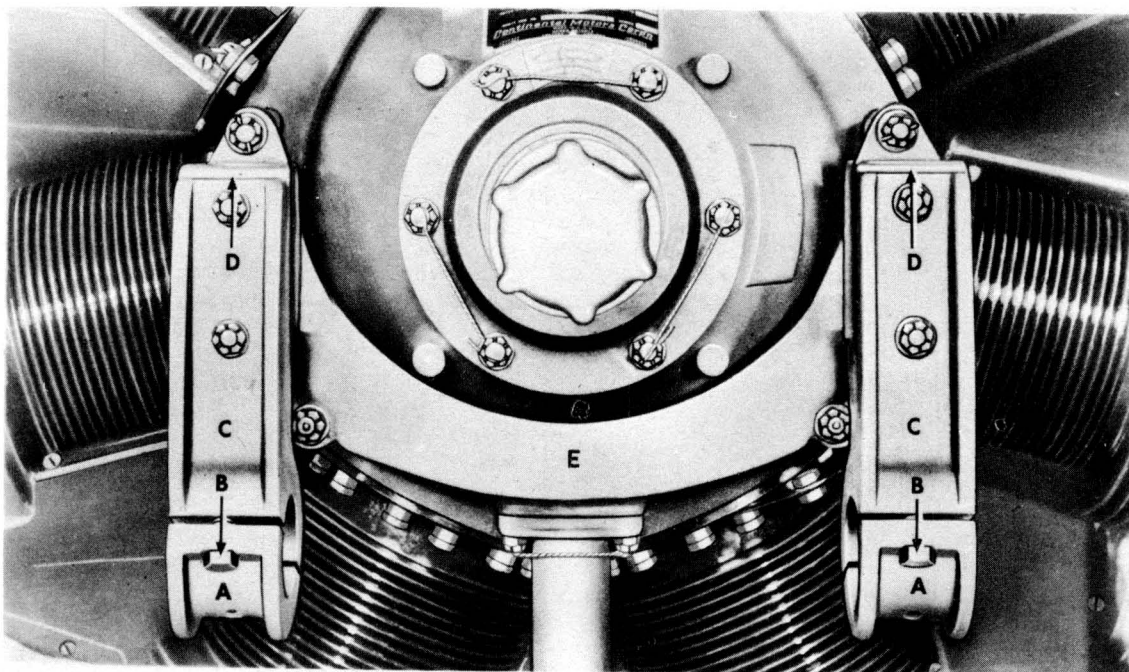

Key	Part Name	Part Number	Group Number
A	CAP.....	C67075B.....	0110
B	SCREW.....	A164141.....	0110
C	CLAMP.....	C67075.....	0110
D	INSULATOR, assembly..	B157719.....	0110
E	SUPPORT.....	D34373.....	0110


FIGURE 01-17—ENGINE STEADY BAR SUPPORT

RA PD 76323

0113B-4

GROUP 01—ENGINE


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0113B-4—GENERATOR DRIVE (Contd)	
01-21	G103-0102780	B141605	CO-500060	GASKET, generator drive shaft pulley support to accessory case (vellumoid, 1/64 in. thk.) (Also listed as part of GASKET SET, CO-22530).....	1
01-18,20	G167-0196002	A169324	CO-3942	GEAR, generator drive (20T.).....	1
01-21	G103-0103550	BGAX8B	CO-20589	KEY, Woodruff, ni-S., 5/32 x 5/8 (No. 505) (generator drive shaft).....	1
01-2,21	G103-0501700	B170061	CO-3941	PULLEY, generator drive shaft (5 in. O.D.).....	1
01-21	G103-0103870	A143872	CO-2923	NUT, slotted, alloy-S., 3/4-16NF-3.....	1
01-21	H001-4417531	BFAX1CH-1	CO-2508	PIN, cotter, split, S., cd-pltd., 3/32 x 1 1/8.....	1
01-21	G103-0106710	A143867	CO-2480	WASHER, plain, S., cd-pltd., 3/4 in.....	1
01-20	G103-0104750	A136045	CO-2592	RETAINER, generator drive gear.....	1
01-20	G103-0105287	A136056	CO-2602	SCREW, machine, oval-fil-hd., S., cd-pltd., dld. f/lkg-wire., No. 10 (0.190)— 32NF-2 x 5/8.....	2
	22W-1642100	BFWX1A		WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
01-21	G103-0104810	A166238	CO-20641	RETAINER, generator drive shaft bearing.....	1
01-21	H001-5127331	BCGX1.1BD-1		SCREW, machine, oval-fil-hd., S., cd-pltd., dld. f/lkg. wire., No. 10 (0.190)— 32NF-2 x 3/8.....	5
01-21	G103-0101475	A189113	CO-20961	RETAINER, generator drive shaft coupling w/oil THROWER.....	1
01-21	G103-0105520	B169325	CO-3943	SHAFT, drive, generator, w/GEAR, assembly.....	1
01-21	G103-0106260	D38291	CO-5231	SUPPORT, generator drive shaft pulley.....	1
01-21	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24 NF-3.....	4
01-21	H002-0726010	A160945	CO-2560	PALNUT, light, S., cd-pltd., 5/16-24NF.....	4
01-19	G103-0106105	A189122	CO-20992	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16)-24NF-3 (1/2) x 1 3/8 (standard size) (sq-end.).....	4
	G167-0392298		CO-20992-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.003 oversize) (pointed end).....	as req.
	G214-7036492		CO-20992-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7036493		CO-20992-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.009 oversize) (dld-end.).....	as req.
01-21	G103-0106920	A136016	CO-2473	WASHER, plain, S., cd-pltd., 5/16 in.....	4
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black anld., 0.041 in. diam.....	as req.
01-21	G103-0106350	A143891	CO-500056	THROWER, oil, generator drive shaft.....	1
				0113B-5—MAGNETO DRIVE	
01-19,20	G103-0100905	A136033	CO-2580	BUSHING, magneto drive gear (bz., 1 3/16 I.D. x 1 3/8 O.D. x 13/16 in. long).....	2
01-20	G103-0101060	A136031	CO-2578	CIRCLIP, magneto drive gear (1 3/16 in. diam.).....	2
	G103-0101520	A20197	CO-2246	COUPLING, magneto drive.....	2
01-18	G103-0103247	C74409	CO-4379	GEAR, magneto drive (40T.).....	2
01-20	G167-0196032		CO-A35099	GEAR, magneto drive, w/PLUG, assembly.....	2
01-19	G103-0105440	A189144	CO-20889	OIL SEAL, magneto drive gear.....	2
		A139827	CO-2878	PLUG, magneto drive gear.....	2

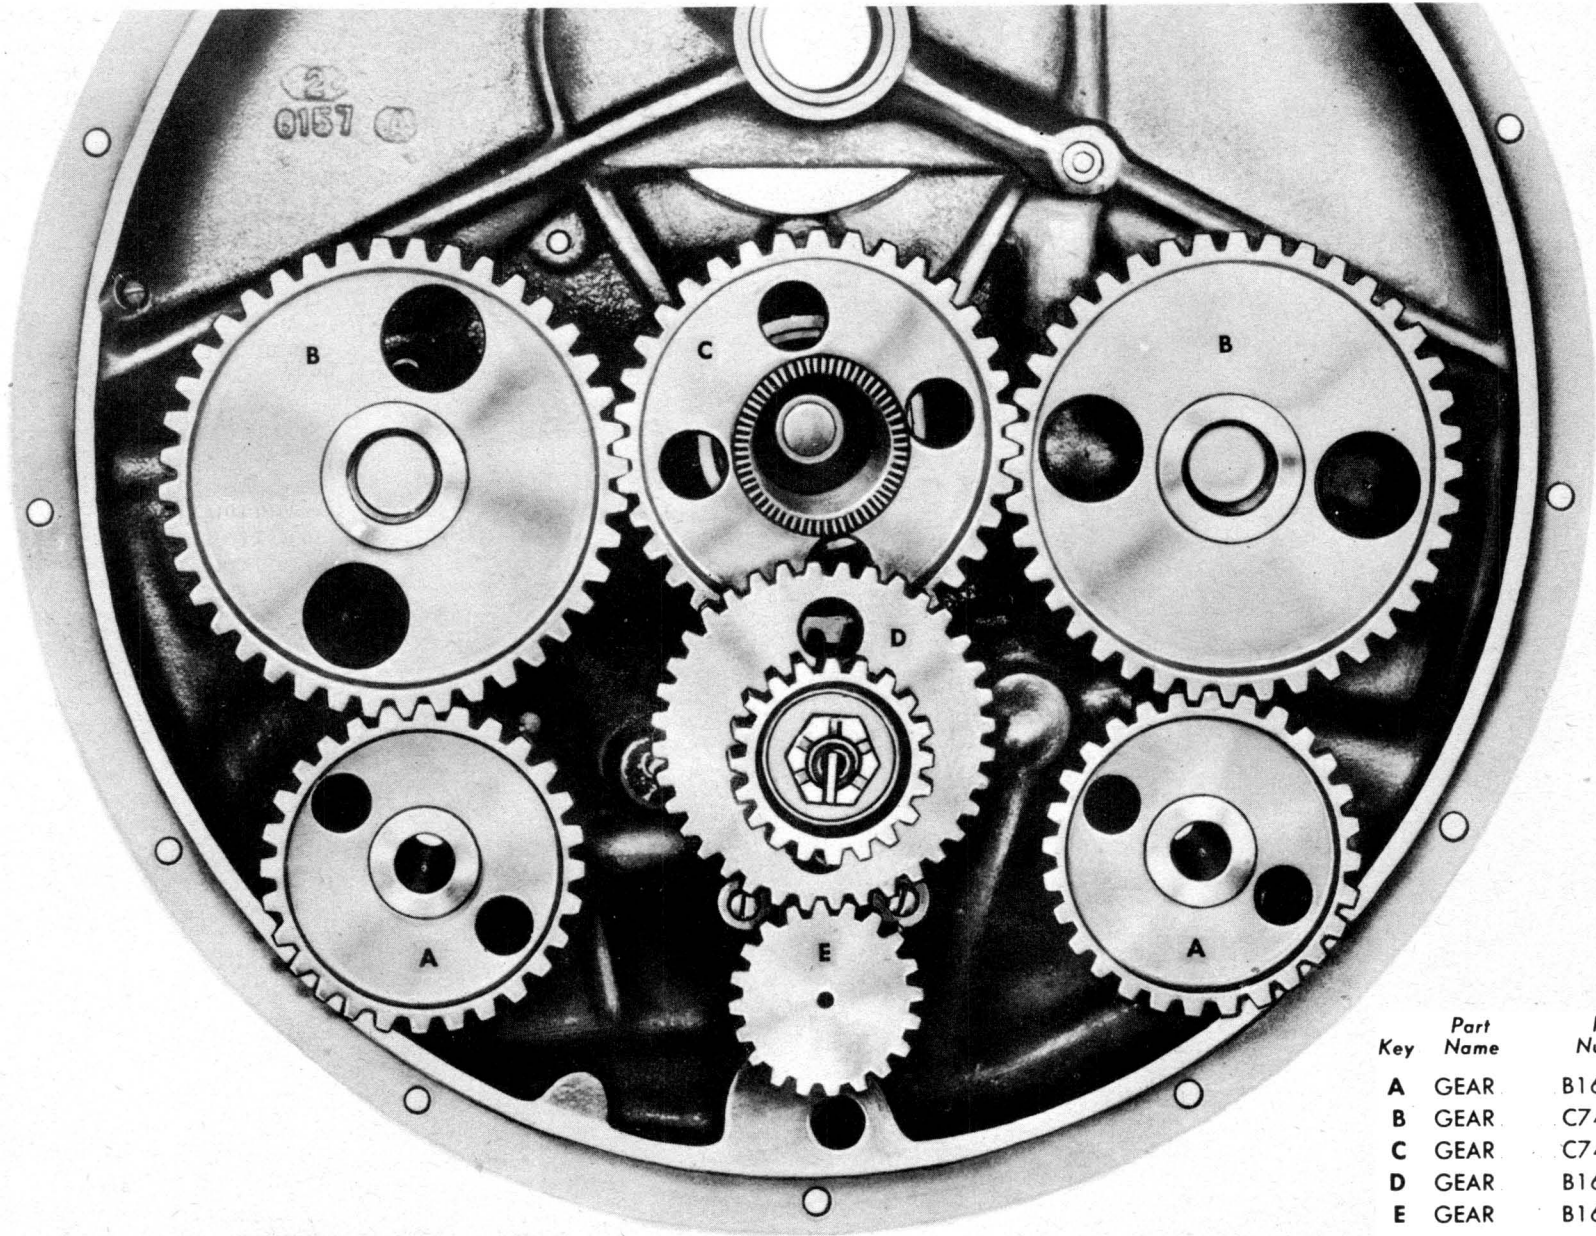

Key	Part Name	Part Number	Group Number
A	GEAR	B169327	0113B-6-7
B	GEAR	C74409	0113B-5
C	GEAR	C74408	0113B-3
D	GEAR	B169328	0113B-2
E	GEAR	B169324	0113B-4

FIGURE 01-18—GEAR ARRANGEMENT INSIDE OF ACCESSORY CASE—INSTALLED VIEW RA PD 341089

GROUP 01—ENGINE

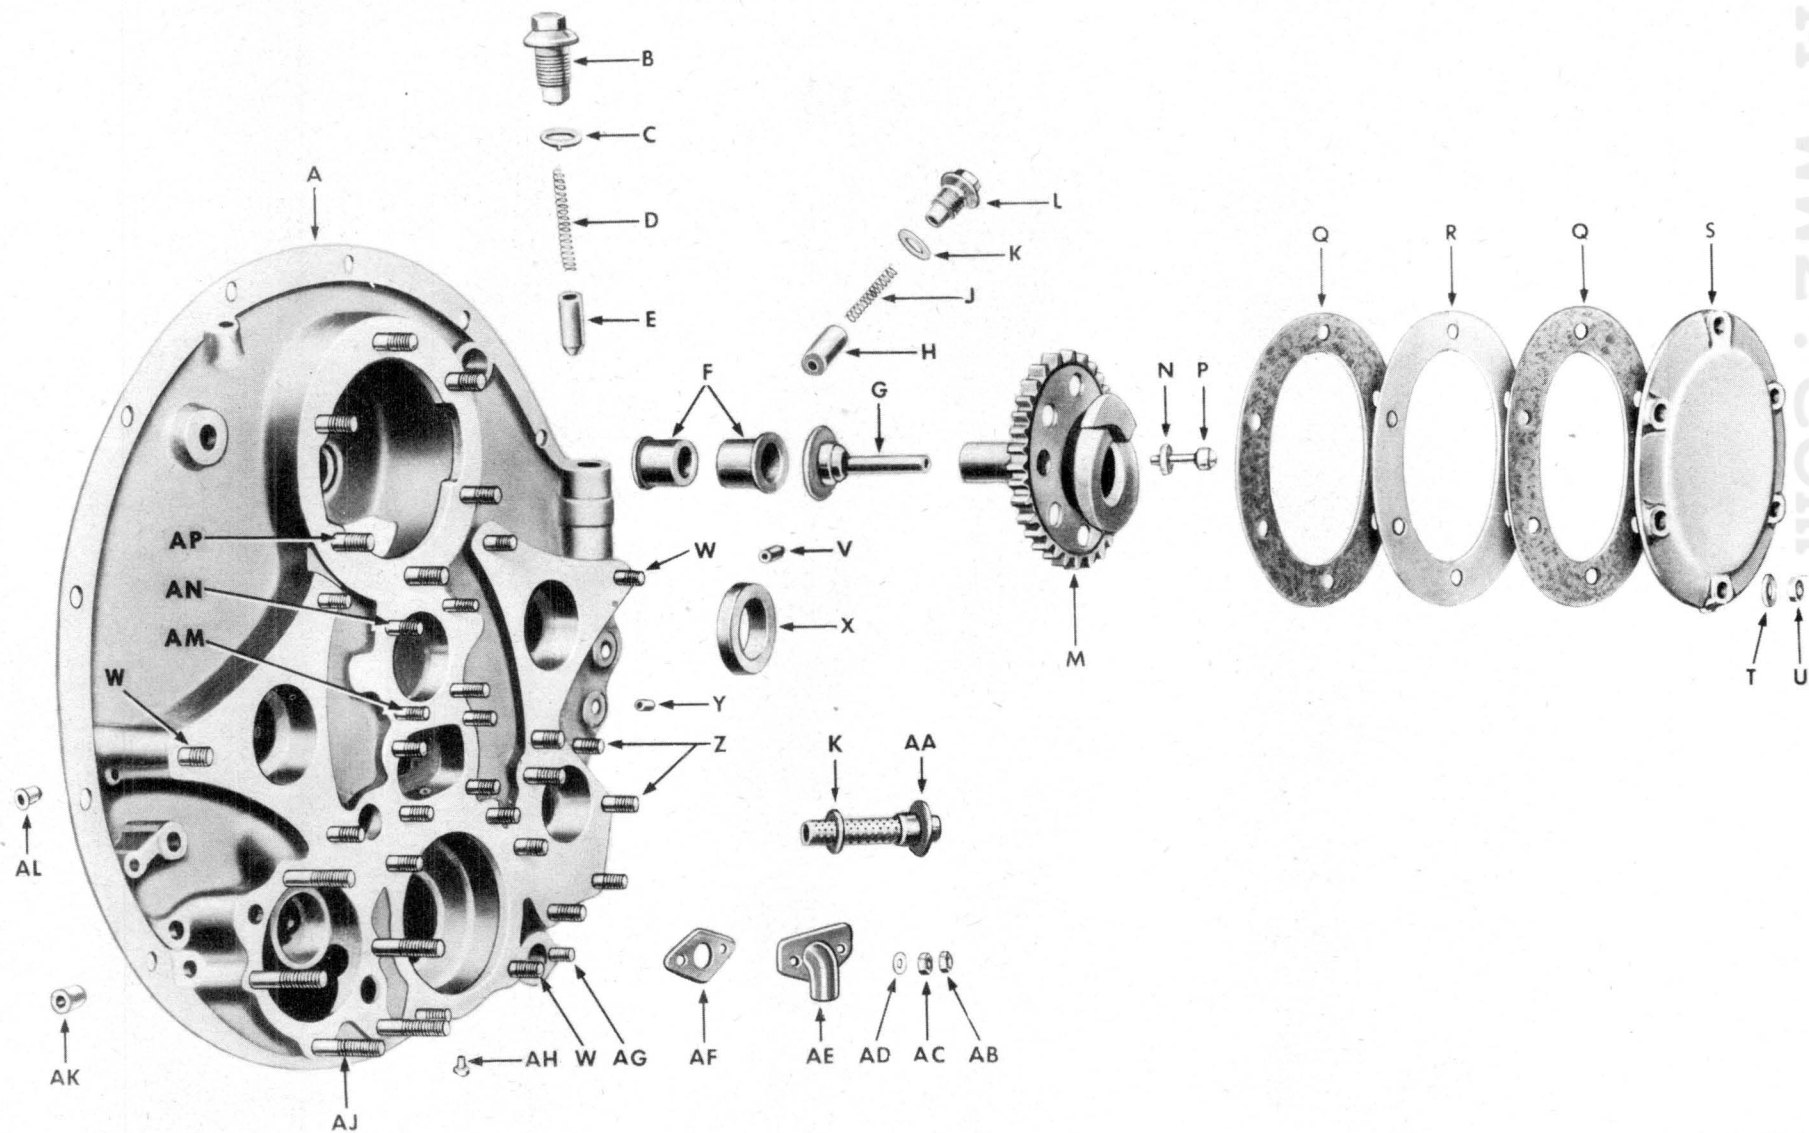

RA PD 341090

FIGURE 01-19—ACCESSORY CASE AND RELATED PARTS—OUTSIDE VIEW


Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	CASE	E2216	0113B-1	V	PLUG	A189104	0107J
B	HOUSING	A160953	0107K	W	STUD	A189122	0603A
C	GASKET	A190516-14	0107K	X	OIL SEAL	A189144	0113B-5
D	SPRING	CO-23168	0107K	Y	PLUG	A20188	0107J
E	VALVE	A160954	0107K	Z	STUD	A189123	0107C
F	BUSHING	A136033	0113B-3-5	AA	STRAINER, assembly	A189103	0107C
G	RETAINER, assembly	A189065	0113B-3	AB	PALNUT	A160946	0107J
H	VALVE	A136054	0107K	AC	NUT	A156959	0107J
J	SPRING	A231714	0107K	AD	WASHER	A139759	0107J
K	GASKET	A190516-16	0107C, 0107K	AE	ELBOW	A16001	0107J
L	HOUSING	A136053	0107K	AF	GASKET	A161002	0107J
M	GEAR	B169293	0113B-3	AG	STUD	A189118	0107J
N	WASHER	A139768	0113B-3	AH	SCREW	AN502-10-4	0113B-1
P	SCREW	AIR-AN75-11	0113B-3	AJ	STUD	A136008	0107
Q	GASKET	A139740	0113B-3, 0602	AK	PLUG	B75B	0107J
R	SPACER	A136071	0113B-3, 0602	AL	PLUG	B75A	0107J
S	COVER	A166457	0113B-3	AM	STUD	A189121	0107E-2
T	WASHER	A136017	0113B-3	AN	STUD	A189130	0113B-8
U	NUT	BBFX1CA-1-3	0113B-3	AP	STUD	A136011	0602

RA PD 341090A

FIGURE 01-19—ACCESSORY CASE AND RELATED PARTS—OUTSIDE VIEW

GROUP 01—ENGINE


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0113B-6—OIL PRESSURE AND SCAVENGER PUMP DRIVE (Parts are the same as those used with the VALVE ROCKER OIL SCAVENGER PUMP DRIVE, group 0113B-7) BUSHING, engine oil pressure and scavenger pump drive gear (br. 13/16 I.D. x 1 O.D. x 3/4 in.)..... CIRCLIP, engine oil pressure and scavenger pump drive gear (13/16 in. diam.)..... GEAR, engine oil pressure and scavenger pump drive (28T.).....	2 1 1
				0113B-7—VALVE ROCKER OIL SCAVENGER PUMP DRIVE (Parts are the same as those used with the OIL PRESSURE AND SCAVENGER PUMP DRIVE, group 0113B-6) BUSHING, engine valve rocker oil scavenger pump drive gear (br. 13/16 I.D. x 1 O.D. x 3/4 in. long)..... CIRCLIP, engine valve rocker oil scavenger pump drive gear (13/16 in. diam.)..... GEAR, engine valve rocker oil scavenger pump drive (28T.).....	2 1 1
				0113B-8—TACHOMETER DRIVE COUPLING, tachometer drive..... DRIVE, tachometer, assembly (Does not include coupling or gasket)..... NUT, regular, hex., alloy-S., cd-pltd., 1/4-28NF-3..... PALNUT, light, S., cd-pltd., 1/4-28NF..... STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (3/8) x 1 3/8 (standard size) (sq-end.)..... STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (3/8) x 1 3/8 (0.003 over-size) (pointed end)..... STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (3/8) x 1 3/8 (0.006 over-size) (ck-end.)..... STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (3/8) x 1 3/8 (0.009 over-size) (dld-end.)..... SCREW, machine, oval-fil-hd., S., cd-pltd., dld. f/lkg-wire., No. 10 (0.190)-23NF-3 x 3/4..... WASHER, plain, S., cd-pltd., 1/4 in..... WIRE, locking, br. grade A, anld., soft 0.041 diam..... GASKET, tachometer drive cover nut (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)..... GASKET, tachometer drive housing to accessory case (vellumoid, 1/32 in. thk.) (Also listed as part of GASKET SET, CO-22530)..... GEAR, driven, tachometer drive (20 T.)..... GEAR, driving, tachometer drive (10 T.)..... HOUSING, tachometer drive..... NUT, tachometer drive cover (S., knurled, 7/8-18SAE-2)..... PILOT, tachometer drive housing.....	1 1 4 4 4 as req. as req. as req. 2 4 as req. 2 1 2 1 1 2 1
01-20	G103-0100822	A136034	CO-2581		
01-20	G103-0101100	A136043	CO-2590		
01-18,20	G103-0103246	B169327	CO-3978		
01-20	G103-0100882	A136034	CO-2581		
01-20	G103-0101100	A136043	CO-2590		
01-18,20	G103-0103246	B169327	CO-3978		
01-22	G103-0101540	A139826	CO-2873		
01-2	G103-0106315	B105674	CO-B3119		
01-22	G103-0104060	A156959	CO-2437		
01-22	G103-0104266	A160946	CO-2886		
01-19	G103-0106050	A189130	CO-22004		
	G167-0392294		CO-22004-03		
	G214-7036494		CO-22004-06		
	G214-7036495		CO-22004-09		
01-22	G103-0105325		AIR-AN502-10-12		
01-22	G103-0106900	A139759	CO-2472		
	G103-0304905	A143860	CO-2220		
	G167-0194015	A231712	CO-22819		
01-22	G103-0103120	A136041	CO-2588		
01-22	G103-0103265	A136038	CO-2585		
01-22	G103-0103264	A136037	CO-2584		
01-22	G103-0103441	B105685	CO-3119		
01-22	G103-0104126	A139776	CO-2716		
01-22	G103-0104270	A136044	CO-2591		

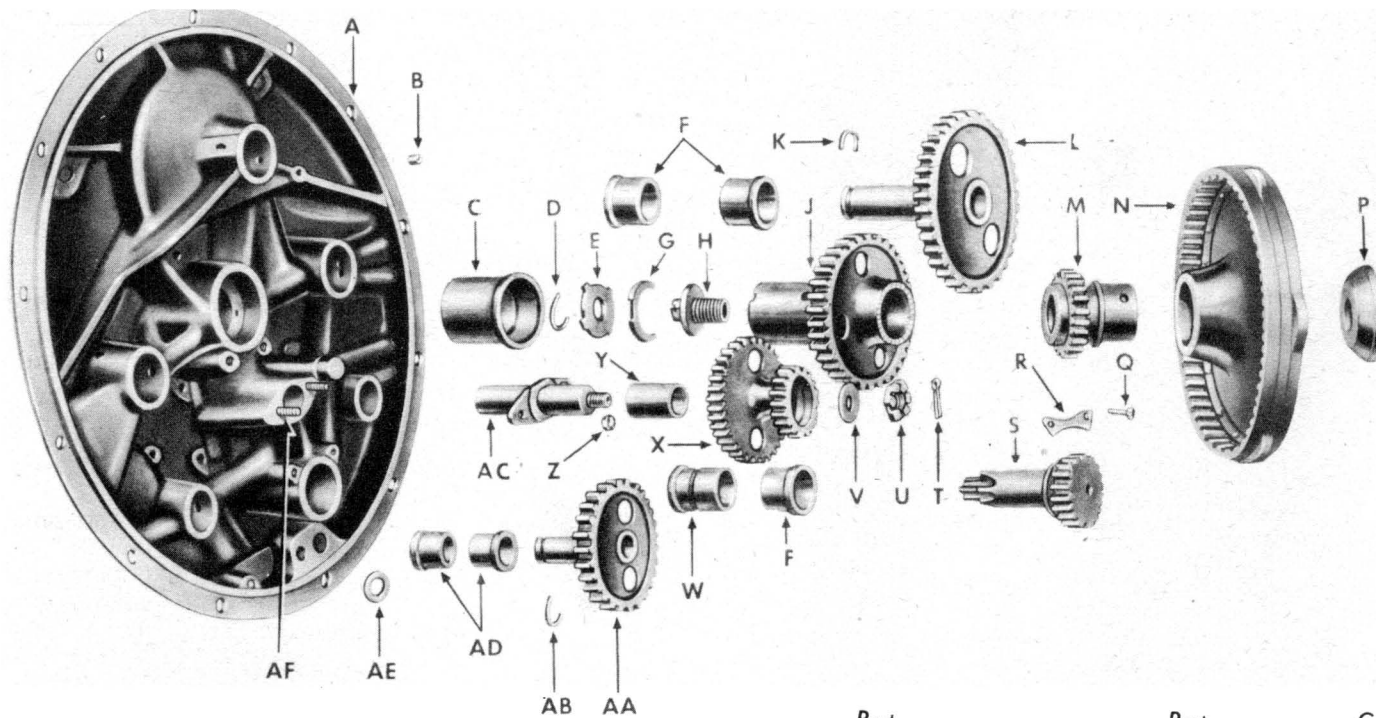

Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	CASE	E2216	0113B-1	Q	SCREW	A136056	0113B-4
B	PLUG	A20188	0107J	R	RETAINER	A136045	0113B-4
C	BUSHING	A139772	0113B-3	S	GEAR	B169324	0113B-4
D	CIRCLIP	A139716	0102	T	PIN	BFAX1CF-1	0113B-2
E	WASHER	A136029	0102	U	NUT	A139727	0113B-2
F	BUSHING	A136033	0113B-3-4-5	V	WASHER	A136036	0113B-2
G	RING	CO-22094	0102	W	BUSHING	A189140	0113B-4
H	NUT, w/PLUG, assembly	CO-2872A1	0102	X	GEAR	B169328	0113B-2
J	GEAR	C74408	0113B-3	Y	BUSHING	A136035	0113B-2
K	CIRCLIP	A136031	0113B-5	Z	NUT	BBFX1BA-1	0113B-2
L	GEAR, w/PLUG, assembly	CO-A35099	0113B-5	AA	GEAR	B169327	0113B-6-7
M	GEAR	B105690	0113B-2	AB	CIRCLIP	A136043	0113B-6-7
N	CAM, assembly	D33522	0106	AC	PIN	B105689	0113B-2
P	SPACER	A164150	0102A	AD	BUSHING	A136034	0113B-6-7
				AE	GASKET	A139822	0107J
				AF	STUD	A189129	0113B-2

RA PD 341091


FIGURE 01-20—GEAR ARRANGEMENT INSIDE OF ACCESSORY CASE—EXPLODED VIEW

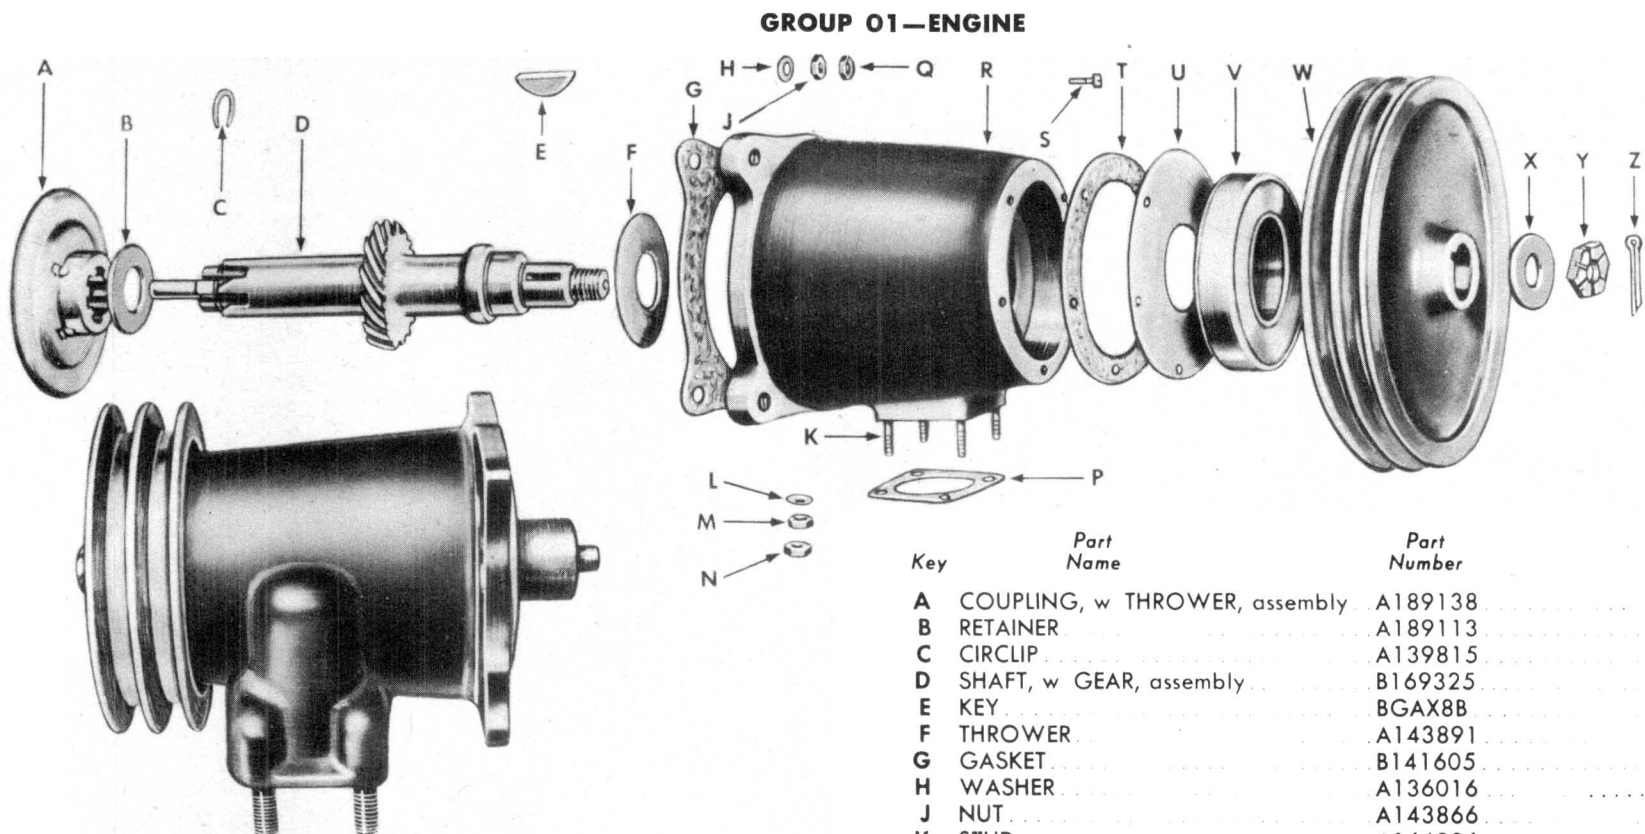

Key	Part Name	Part Number	Group Number
A	COUPLING, w THROWER, assembly	A189138	0113B-4
B	RETAINER	A189113	0113B-4
C	CIRCLIP	A139815	0113B-4
D	SHAFT, w GEAR, assembly	B169325	0113B-4
E	KEY	BGAX8B	0113B-4
F	THROWER	A143891	0113B-4
G	GASKET	B141605	0113B-4
H	WASHER	A136016	0113B-4
J	NUT	A143866	0113B-4
K	STUD	A166236	0305
L	WASHER	A139760	0305
M	NUT	A166458	0305
N	PALNUT	A139770	0305
P	GASKET	A166229	0305A
Q	PALNUT	A160945	0113B-4
R	SUPPORT	D38291	0113B-4
S	SCREW	BCGX1.1BD-1...	0113B-4
T	GASKET	A189114	0113B-4
U	RETAINER	A166238	0113B-4
V	BEARING	CO-22778...	0113B-4
W	PULLEY	B170061	0113B-4
X	WASHER	A143867	0113B-4
Y	NUT	A143872	0113B-4
Z	PIN	BFAX1CH-1	0113B-4

RA PD 341092

FIGURE 01-21—GENERATOR DRIVE—EXPLODED VIEW

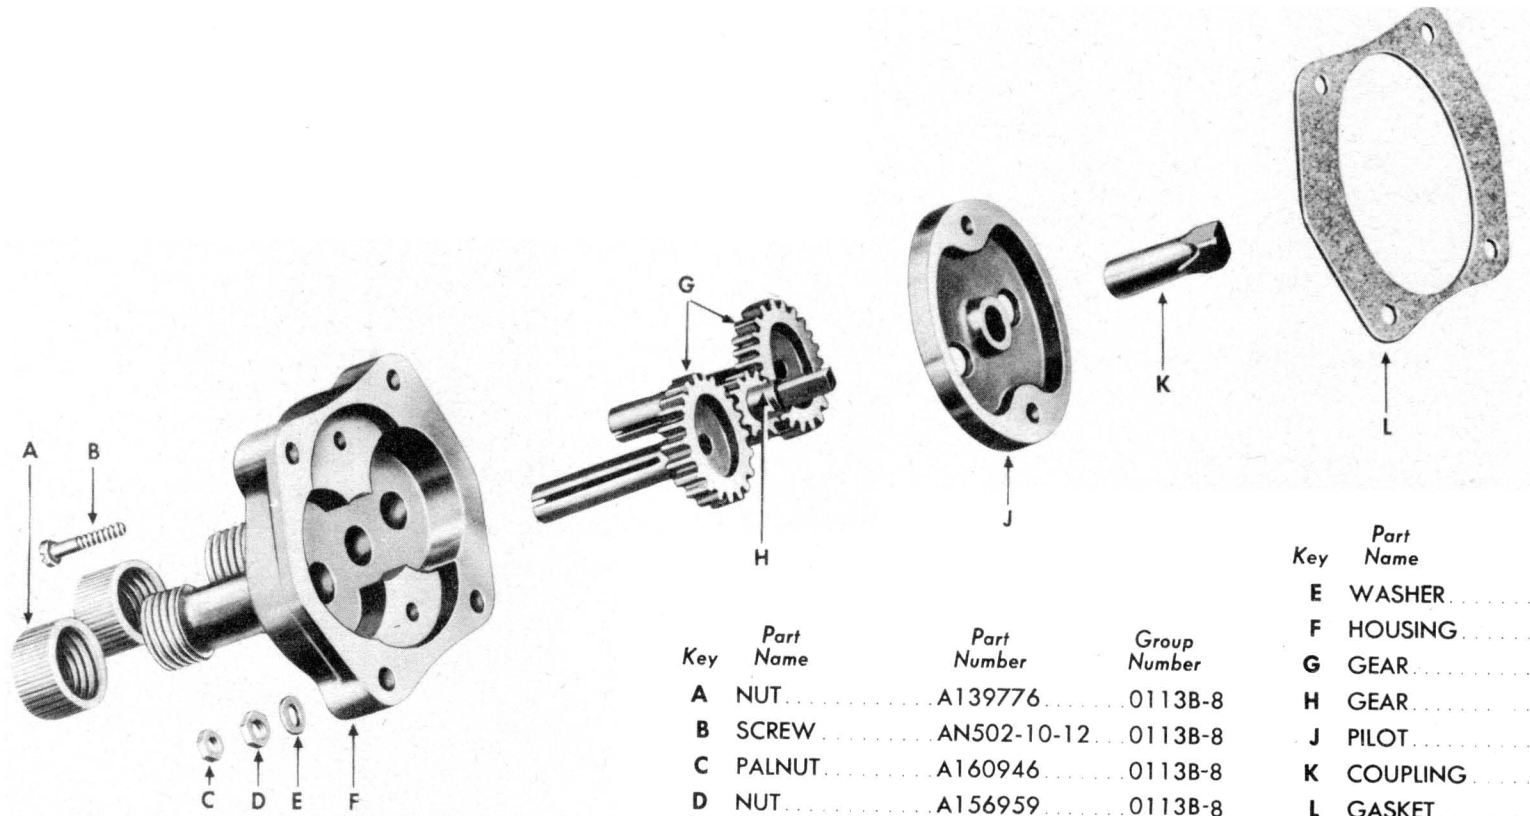

Key	Part Name	Part Number	Group Number
A	NUT	A139776	0113B-8
B	SCREW	AN502-10-12	0113B-8
C	PALNUT	A160946	0113B-8
D	NUT	A156959	0113B-8

Key	Part Name	Part Number	Group Number
E	WASHER	A139759	0113B-8
F	HOUSING	B105685	0113B-8
G	GEAR	A136038	0113B-8
H	GEAR	A136037	0113B-8
J	PILOT	A136044	0113B-8
K	COUPLING	A139826	0113B-8
L	GASKET	A136041	0113B-8

FIGURE 01-22—TACHOMETER DRIVE—EXPLODED VIEW


RA PD 341093

0113B-8

GROUP 02—CLUTCH

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
F, M	G214-7033364	FOM-31X106OE		GROUP 02—CLUTCH	
				0200—CLUTCH ASSEMBLY	
				CLUTCH, master, assembly (Includes: driving plates, pressure plate, bearings, spindle, sleeve, release arms, springs, and housing).....	1
				0201—CLUTCH DRIVING PLATE	
02-2	G103-0402180	B158343		PLATE, driving, clutch, w/FACINGS, assembly (Includes: rivets and cushion washers)...	2
				0201A—FACINGS	
01-15	G103-0400740	B157396	CO-3963	FACING, clutch driving plate, pressure plate, and flywheel.....	6
		A169767E		RIVET, tubular, S., chamf-fl-ck-hd., 3/16 x 7/16.....	as req.
		A169767K		RIVET, tubular, S., chamf-fl-ck-hd., 3/16 x 11/16.....	as req.
	H001-0935401	A169767N		RIVET, tubular, S., chamf-fl-ck-hd., 3/16 x 7/8.....	as req.
		A169767Z		RIVET, tubular, S., chamf-fl-ck-hd., 3/16 x 1.....	as req.
	G103-0402160	A169659		WASHER, cushion.....	as req.
				0201B—DRIVEN PLATE	
02-2	G103-1740269	B157536		PLATE, driven, clutch.....	3
				0202—PRESSURE PLATES AND SPRINGS	
02-1,4	G103-0300140	A166301		ARM, release, clutch.....	3
02-4	G103-0302040	C66376		HOUSING, clutch pressure plate spring.....	1
02-2,4	H001-0118052	BAOX7ED		BOLT, hex-hd., s-fin., alloy-S., dld. f/lkg-wire., 1/2-20NF-2 x 1 1/4.....	12
	22W-1642125	BFWX1B		WIRE, steel, low carbon, soft, black annealed, 0.063 in. diam.....	as req.
	G103-0103552	A23238		KEY, clutch release sleeve.....	1
02-1,4	G038-0139930	A23201		PAD, clutch release arm.....	3
02-4	H001-4040581	BBSX4AE-1		NUT, safety, S., cd-pltd. (elastic stop nut type), 1/2-20NF-2.....	6
02-4	G103-0106205	A23239		STUD, attaching, clutch arm pad.....	6
02-4	G103-0302800	A23209		PIN, clutch release arm.....	3
	H001-0811052	BFAX1DG		PIN, cotter, split, S., (type B), 1/8 x 1.....	6
02-4	G103-0402140	C9920		PLATE, pressure, clutch, w/FACING, assembly.....	1
	5900-X-5271	A4632		PLUG, pipe, clutch release sleeve.....	1
02-4	G103-0600260	A23202		SHIM, adjusting, clutch release arm.....	as req.
02-1,4	G038-0171070	B155427		SLEEVE, release, clutch.....	1
02-4	G103-0402940	A169794		SPRING, clutch pressure plate.....	9
				0203—RELEASE YOKE AND BEARINGS	
02-3	H012-0700238	A164283	FOM-P205	BEARING, ball, No. 305Y (type H), annular, single row, medium, w/double oil shield, 0.9843 bore, 2.4409 O.D., 0.6693 width (clutch release yoke).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
02-3	G167-0125826		FOM-3B37B	BRACKET, clutch release yoke.....	2
02-3	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	4
02-3	H001-5424561	BCVX2LN-1	FOM-P209	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	4
02-3	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal-teeth, hv., S., 1/2 in. (SK-1424).....	4
02-3			FOM-P567	BUSHING, oilite, clutch release yoke (1 17/64 I.D. x 1 1/2 O.D. x 2 in. long).....	2
02-3	H002-0222055	CLDX5M	FOM-P79	FITTING, lubricating, hydraulic type, elbow, 1/8-27NPT, 90°, (clutch release yoke) (AD-1613).....	2
02-3	H002-0223010	CLDX5A	FOM-P1	FITTING, lubricating, hydraulic type stght, 1/8-27NPT, male, short (clutch release yoke shaft) (AD-1610).....	2
02-3	G167-0385608		FOM-3B102A	SHAFT, clutch release yoke.....	1
02-3	H001-0216540	BBKX2C	FOM-P207	NUT, castle, S., 3/4-16NF-2.....	2
02-3	G167-0338714		FOM-P208	PIN, cotter, split, S., (type B), 1/8 x 1 1/8 (Make from BFAX1DH).....	2
02-3			FOM-3B133A	SPACER, clutch release yoke stud (57/64 I.D. x 1 1/2 O.D. x 0.1379 in. thk.).....	2
02-3	G167-0392301		FOM-3B131A	STUD, clutch release yoke.....	2
02-3	G167-0314853		FOM-3B132A	NUT, clutch release yoke stud.....	2
02-3	H001-1518016	BECX1S	FOM-P204	WASHER, lock, reg., S., 7/8 in.....	2
02-3	G167-0482433		FOM-3B38C	YOKE, release, clutch.....	1

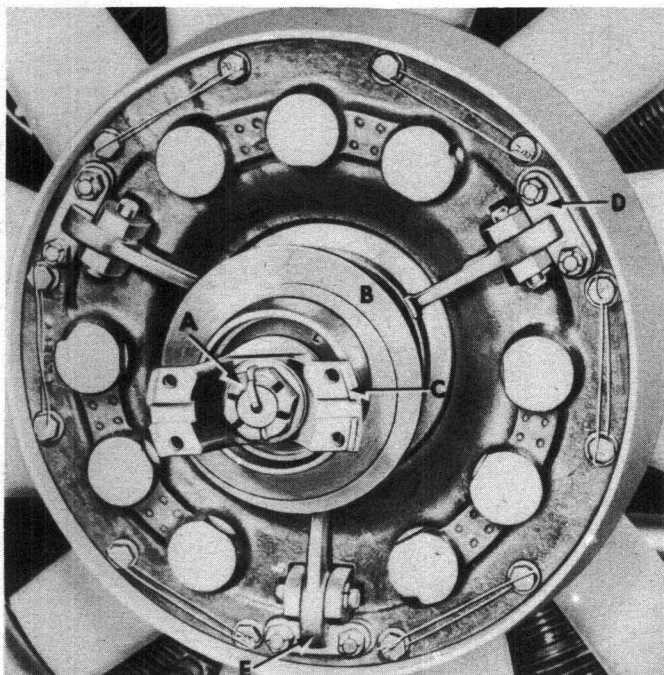

Key	Part Name	Part Number	Group Number
A	NUT.....	A130768.....	0208B
B	SLEEVE.....	B155427.....	0202
C	YOKE.....	FOM-P770.....	0208B
D	PAD.....	A23201.....	0202
E	ARM.....	A166301.....	0202


FIGURE 02-1—CLUTCH ASSEMBLY—INSTALLED VIEW

RA PD 341074

GROUP 02—CLUTCH


ORD 9 SNL G-214

82

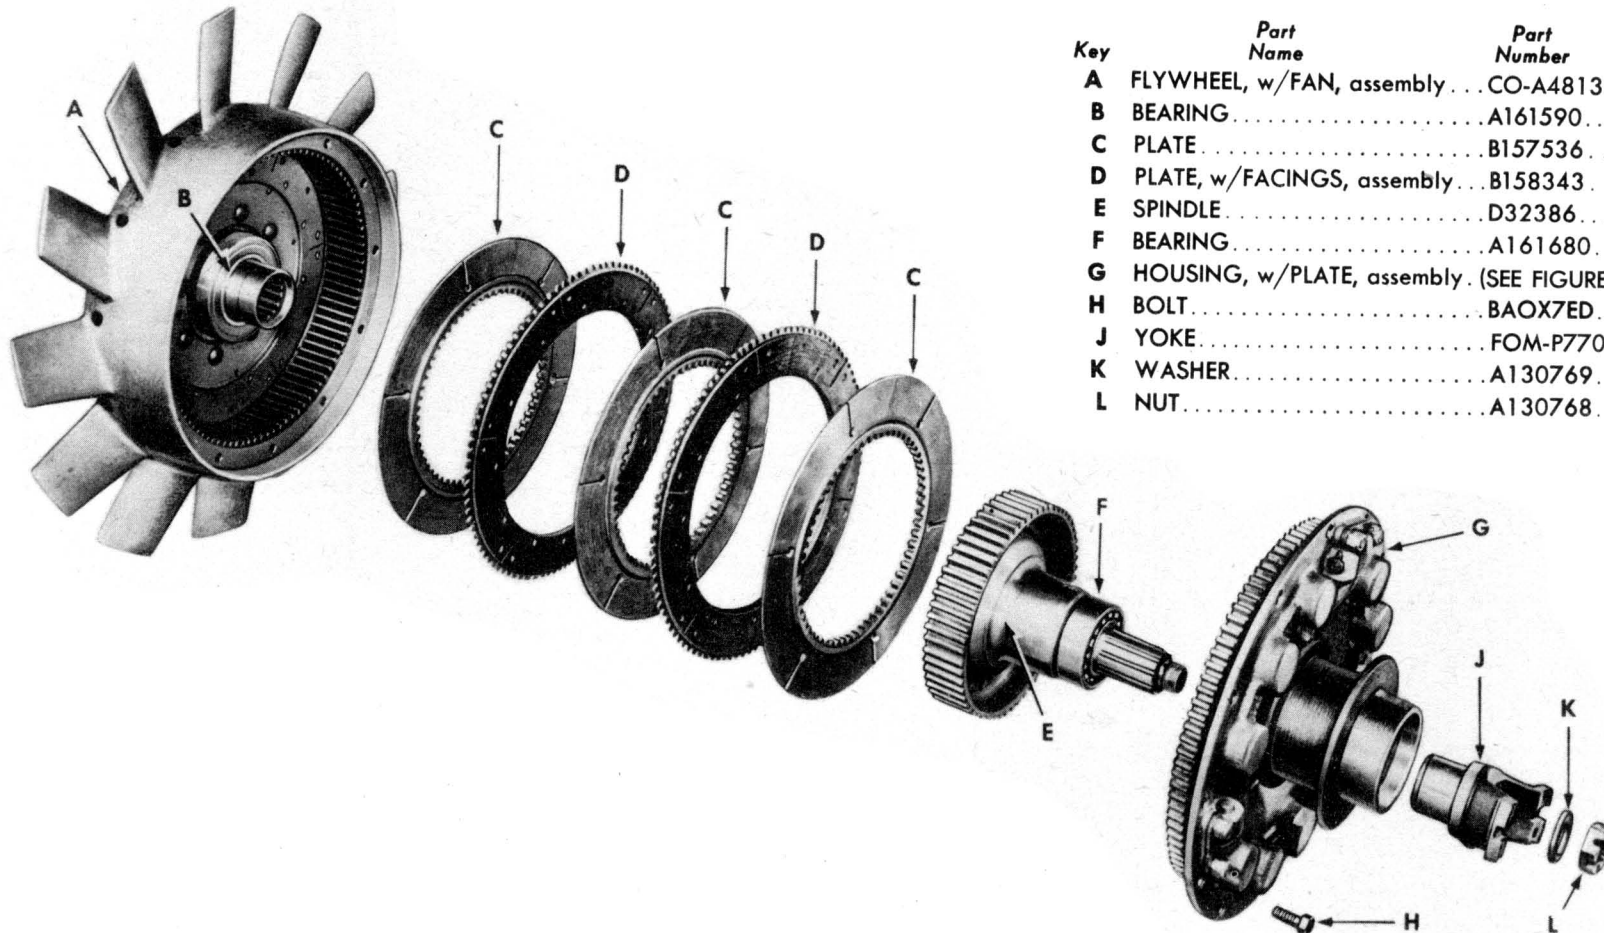

Key	Part Name	Part Number	Group Number
A	FLYWHEEL, w/FAN, assembly . . .	CO-A4813	0109
B	BEARING	A161590	0205
C	PLATE	B157536	0201B
D	PLATE, w/FACINGS, assembly . . .	B158343	0201
E	SPINDLE	D32386	0208B
F	BEARING	A161680	0205
G	HOUSING, w/PLATE, assembly . (SEE FIGURE O2-4)		
H	BOLT	BAOX7ED	0202
J	YOKE	FOM-P770	0208B
K	WASHER	A130769	0208B
L	NUT	A130768	0208B

Key	Part Name	Part Number	Group Number
A	NUT	BBAX1E	0203
B	WASHER	BEAX3E	0203
C	SCREW	BCVX2LN-1	0203
D	NUT	BBKX2C	0203
E	PIN	FOM-P208	0203
F	BRACKET	FOM-3B37B	0203
G	SHAFT	FOM-3B102A	0203
H	BUSHING	FOM-P567	0203
J	FITTING	CLDX5A	0203

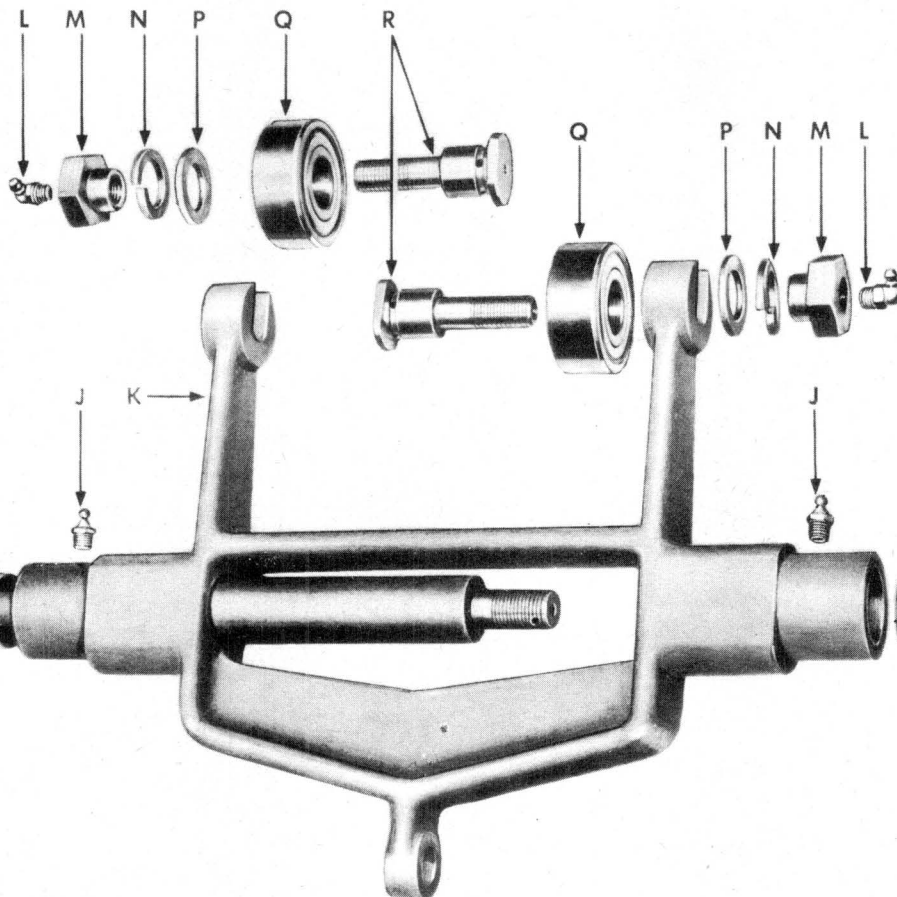

K	YOKE	FOM-3B38C	0203
L	FITTING	CLDX5M	0203
M	NUT	FOM-3B132A	0203
N	WASHER	BECX1S	0203
P	SPACER	FOM-3B133A	0203
Q	BEARING	A164283	0203
R	STUD	FOM-3B131A	0203


FIGURE 02-3—CLUTCH RELEASE YOKE ASSEMBLY—EXPLODED VIEW

RA PD 341076

GROUP 02—CLUTCH

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
15-7	G168-7037167		FOM-30X1182C	0203—RELEASE YOKE AND BEARINGS (Contd)	1
	G167-0296800		FOM-31X1140D	YOKE, release, clutch, assembly (Includes: bushings and fittings).....	1
02-2	H012-1910055	A161680		YOKE, release, clutch, assembly (Includes: brackets, shaft, stud, spacer, fittings, and attaching hardware).....	1
02-2	H012-1323085	A161590		0205—SPINDLE BEARING	
				BEARING, ball, annular, double row, w/single oil shield, 2.1654 bore, 3.937 O.D., 1.3125 width (clutch spindle).....	1
				BEARING, ball, No. 2172 (type G), annular, single row, w/single oil shield, 3.3465 bore, 5.9055 O.D., 1.1024 width, (engine flywheel).....	1
02-4	G103-0402255	B132704X		0208B—SPINDLE	
02-2	G103-0402900	D32386		RETAINER, oil, clutch spindle bearing.....	1
02-1,2	G168-7037051		FOM-P770	SPINDLE, clutch.....	1
02-1,2	G103-0401740	A130768		YOKE, fitting, clutch spindle (attaches to propeller shaft universal joint) (MJ-6529J).....	1
02-2	H001-0811081	BFAX2AD		NUT, special, slotted, alloy-S., 1 13/16 hex., 1 1/2-12NF-2.....	1
	G103-0403300	A130769		PIN, cotter, split, S. (type B), 3/16 x 2 1/2.....	1
				WASHER, plain, S., 1 1/4 I.D. x 2 1/4 O.D. x 3/16 in. thk.....	1
				GROUP 03—FUEL SYSTEM	
				0300—FUEL TANKS	
			FOM-60X1069D-4	BELTING, cotton (Cemented to air duct) (3-ply, 5 in. wide x 30 in. long).....	1
			FOM-P167	BELTING, cotton (Cemented to angle and channel clip) (3/16 in. thk. x 1 1/2 in. wide x 4 in. long).....	2
			FOM-P168	BELTING, cotton (Cemented to hull) (3/16 in. thk. x 1 1/2 in. wide x 27 in. long).....	1
			FOM-60X1058BL	CLAMP, engine fuel tank, left, assembly.....	2
			FOM-60X1057B	BOLT, engine fuel tank clamp, front (3/8-16NC-2 both ends x 30 in. long).....	2
			FOM-60X1056B	BOLT, engine fuel tank clamp, rear (3/8-16NC-2 both ends x 27 1/2 in. long).....	2
			FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	8
			FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	4
			FOM-60X1058BR	CLAMP, engine fuel tank, right, assembly.....	2
			FOM-60X1055B	BOLT, engine fuel tank clamp, w/NUT, assembly (3/8-16NC-2 both ends x 17 9/16 in. long).....	4
			FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	4
			FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	4
17-1			FOM-60X1097D	COVER, lock, engine fuel tank drip shield (9 in. diam.).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-2	G167-0157000	BEBX1G	FOM-6X1021C FOM-P158	DRAIN, sump, engine fuel tank.....	2
	H001-1031027		FOM-P157	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., 1/4-28NF-3 x 5/8 (Make from BCBX3AA).....	12
	H001-1530007		FOM-P72	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., 1/4-28NF-3 x 3/4.....	12
			FOM-P196	WASHER, plain, S., SAE std., 1/4 in.....	12
	G214-7036500		FOM-6X1027B FOM-P158	WIRE, br., grade A, annealed, soft, 0.051 in. diam.....	as req.
		BEBX1G		FLANGE, blind, engine fuel tank.....	2
				SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., 1/4-28NF-3 x 5/8 (Make from BCBX3AA).....	12
	H001-1530007		FOM-P72	WASHER, plain, S., SAE std., 1/4 in.....	12
			FOM-P754	WIRE, br., grade A, annealed, soft, 0.032 in. diam.....	as req.
	G214-7036502		FOM-6X1039B	FLANGE, engine fuel tank filler pipe packing gland.....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	16
	H001-5417640	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	16
	H001-1024119		FOM-P243	SCREW, machine, oval-fil-hd., br., 1/4-20NC-3 x 3/8.....	2
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	16
	H001-1522007	BEBX1BG	FOM-P244	WASHER, plain, br., SAE std., 1/4 in.....	2

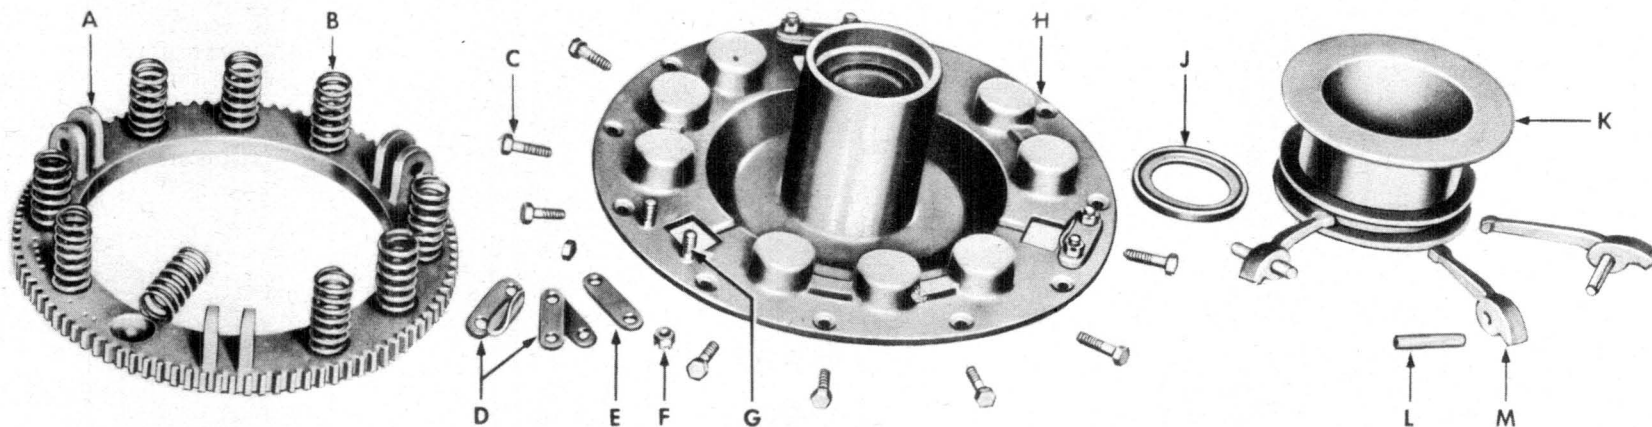

Key	Part Name	Part Number	Group Number
A	PLATE, w. FACING, assembly C9920.....		0202
B	SPRING.....	A169794.....	0202
C	BOLT.....	BAOX7ED.....	0202
D	SHIM.....	A23202.....	0202
E	PAD.....	A23201.....	0202
F	NUT.....	BBSX4AE-1.....	0202

Key	Part Name	Part Number	Group Number
G	STUD.....	A23239.....	0207
H	HOUSING.....	C66376.....	0202
J	RETAINER.....	B132704X.....	0208B
K	SLEEVE.....	B155427.....	0202
L	PIN.....	A23209.....	0202
M	ARM.....	A166301.....	0202

FIGURE 02-4—CLUTCH PRESSURE PLATE AND HOUSING


RA PD 341077

0300

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0300—FUEL TANKS (Contd)	
	G214-7036501	BEBX1E	FOM-6X1025B	FLANGE, filler neck, engine fuel tank	2
			FOM-P159	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., No. 10 (0.190)-24NC-3 x 5/8	48
	H001-1530005		FOM-P223	WASHER, plain, S., SAE std., No. 10 (0.190)	48
			FOM-P754	WIRE, br., grade A., annealed, soft, 0.032 in. diam.	as req.
	G214-7036503	BEBX1G	FOM-6X1026B	FLANGE, outlet, engine fuel tank	2
			FOM-P158	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., 1/4-28NF-3 x 5/8 (Make from BCBX3AA)	12
	H001-1530007		FOM-P72	WASHER, plain, S., SAE std., 1/4 in.	12
			FOM-P754	WIRE, br., grade A, annealed, soft, 0.032 in. diam.	as req.
	G214-7036504	BEBX1G	FOM-6X1038B	FLANGE, recirculating, engine fuel tank	2
			FOM-P158	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., 1/4-28NF-3 x 5/8 (Make from BCBX3AA)	12
	H001-1530007		FOM-72	WASHER, plain, S., SAE std., 1/4 in.	12
			FOM-P754	WIRE, br., grade A, annealed, soft, 0.032 in. diam.	as req.
03-2	G167-0194026	B7270RA B7270TA	FOM-61X1032D-6	GASKET, engine fuel tank filler pipe lock nut (leather, 1/16 in. thk.)	2
			FOM-6X1064B	GASKET, engine fuel tank filler pipe packing gland flange (vellumoid, 1/16 in. thk.)	2
03-2	G167-0194029		FOM-61X1032D-4	GASKET, engine fuel tank filler pipe strainer (leather, 1/16 in. thk.)	2
			FOM-6X1030B	GASKET, engine fuel tank sump drain (vellumoid, 1/16 in. thk.)	2
03-2	G167-0194025		FOM-6X1040B	NUT, jam, engine fuel tank filler pipe packing gland	2
03-2			FOM-61X1032D-2	NUT, lock, engine fuel tank filler pipe	2
03-2	G167-0333000		FOM-61X1032D-5	PACKING, engine fuel tank filler pipe gland (braided asbestos, 1/4 in. sq. x 9 1/4 in. long)	4
03-2	G214-7036505		FOM-60X1063B	PIPE, filler, engine fuel tank	2
03-9	G167-0338811		FOM-61X1032D	PIPE, filler, engine fuel tank, assembly (Includes: strainer, lock nut, jam nut, flange and gaskets)	2
03-2	H006-0283205		FOM-P630	PLUG, pipe, br., sq-hd., 1/4 in. (left engine fuel tank filler pipe)	1
	H006-0283215		FOM-P221	PLUG, pipe, br., sq-hd., 1/2 in. (engine fuel tank sump drain)	2
	G214-7036506		FOM-6X1059B	SHEET, supporting, engine fuel tank, front (masonite, 1/4 in. thk. x 15 1/4 in. wide x 18 1/2 in. long)	2
	G214-7036507		FOM-6X1060B	SHEET, supporting, engine fuel tank, rear (masonite, 1/4 in. thk. x 13 1/2 in. wide x 15 1/4 in. long)	2
	G214-7036508		FOM-8X1057C	STICK, engine fuel measuring	2
03-2	G167-0392085		FOM-61X1032D-1	STRAINER, fuel tank filler pipe, w/CAP, assembly	2
	G214-7036509		FOM-60X1004D	TANK, engine fuel, assembly (bullet-sealing) (w/out sump drain, plug, and four flanges)	2
03-9	G167-7002556		FOM-61X1029CL	TANK, engine fuel, left, assembly (bullet-sealing) (Includes: sump drain, plug, and four flanges)	1
03-9	G167-7002556		FOM-61X1029CR	TANK, engine fuel, right, assembly (bullet-sealing) (Includes: sump drain, plug, and four flanges)	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0300-1—FUEL SHUT-OFF VALVE ASSEMBLY	
03-1	G214-7036510		IB-31336	BELLOWS, sealing, fuel shut-off valve.....	3
03-1	G214-7036511		IB-37613	BLOCK, center, fuel shut-off valve universal joint.....	3
03-1			IB-37614	RIVET, fuel shut-off valve universal joint center block.....	3
03-1	G214-7036512		IB-44248-1	BODY, fuel shut-off valve.....	3
03-1			IB-43692-5	BUSHING, guide, fuel shut-off valve stem.....	3
03-1			IB-43692-7	CAP, fuel shut-off valve body.....	3
03-1			IB-43692-8	FACING, fuel shut-off valve stem.....	3
03-1			IB-23318	SCREW, attaching, fuel shut-off valve stem facing.....	3
03-1	G214-7036513		IB-33168	HANDLE, engine fuel shut-off valve extension rod.....	3
03-1			IB-32670	SCREW, attaching, fuel shut-off valve extension rod handle.....	3
	G104-0303340	A213777	IB-43531-1	JOINT, universal, engine fuel shut-off valve rod, assembly (Includes: yokes, rivet, cotter pin, center block, and screw).....	3
03-1			IB-28333	PIN, cotter, engine fuel shut-off valve universal joint.....	3
03-1	G214-7033695		IB-44248-2	ROD, extension, engine fuel shut-off valve.....	2
03-1			IB-43690-2	SCREW, operating, engine fuel shut-off valve.....	3

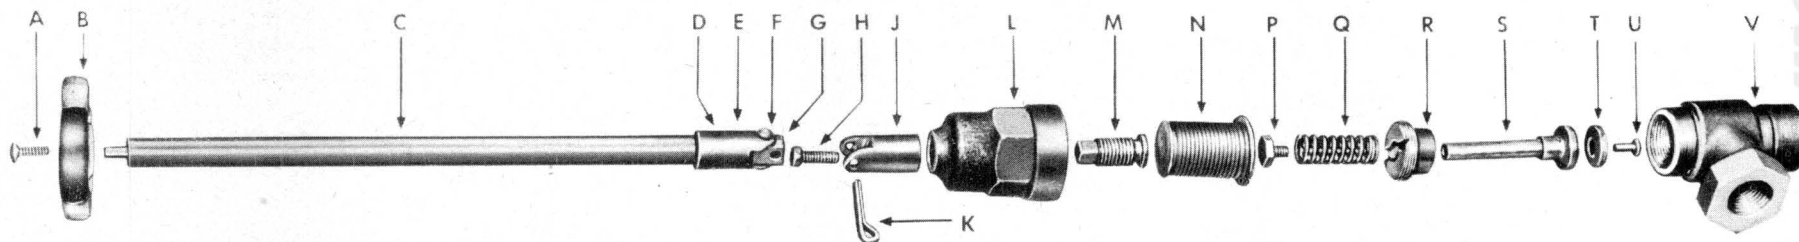

Key	Part Name	Part Number	Group Number
A	SCREW	IB-32670	0300-1
B	HANDLE	IB-33168	0300-1
C	ROD	IB-44248-2	0300-1
D	RIVET	IB-43795-2	0300-1
E	YOKE	IB-37612	0300-1
F	RIVET	IB-37614	0300-1
G	BLOCK	IB-37613	0300-1
H	SCREW	BCFX2AF-1	0300-1
J	YOKE	IB-37615	0300-1
K	PIN	IB-28333	0300-1

Key	Part Name	Part Number	Group Number
L	CAP	IB-43692-7	0300-1
M	SCREW	IB-43690-2	0300-1
N	BELLOWS	IB-31336	0300-1
P	SCREW	IB-43692-13	0300-1
Q	SPRING	IB-31340	0300-1
R	BUSHING	IB-43692-5	0300-1
S	STEM	IB-43692-3	0300-1
T	FACING	IB-43692-8	0300-1
U	SCREW	IB-23318	0300-1
V	BODY	IB-44248-1	0300-1

FIGURE 03-1—FUEL SHUT-OFF VALVE AND HANDLE ASSEMBLY—EXPLODED VIEW

RA PD 341138


0300-1

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0300-1—FUEL SHUT-OFF VALVE ASSEMBLY (Contd)	
03-1	G214-7036514		IB-31340	SPRING, engine fuel shut-off valve.....	3
03-1			IB-43692-13	SCREW, retaining, engine fuel shut-off valve spring.....	3
03-1	G214-7036515		IB-43692-3	STEM, engine fuel shut-off valve.....	3
	G214-7036516		IB-43692-9	STEM, engine fuel shut-off valve, w/SPRING, assembly (Includes: guide bushing, spring retaining screw, facing, and facing screw).....	3
			IB-44248-3	VALVE, shut-off, engine fuel, assembly (Includes: stem w/spring assembly, body, body cap, sealing bellows, and operating screw).....	3
03-2	G167-0427254		FOM-60X1073B	VALVE, shut-off, engine fuel, assembly (Includes: 34 in. extension rod).....	2
03-1	3267-P937		FOM-P937	VALVE, shut-off, engine fuel, assembly (IB-44248).....	1
03-1			IB-37612	YOKE, engine fuel shut-off valve universal joint.....	3
03-1			IB-43795-2	RIVET, fuel shut-off valve universal joint yoke.....	3
03-1			IB-37615	YOKE, engine fuel shut-off valve universal joint.....	3
03-1	H001-5125851	BCFX2AF-1	IB-6776	SCREW, machine, oval-fil-hd., S., cd-pltd., No. 8 (0.164)-32NC-2x1/2.....	3
				0301—CARBURETOR	
03-4	G038-0104410	A252837	BS-P13962	ARM, engine carburetor accelerating pump.....	1
	0840-P6606	A245767	BS-P6606	BALL, engine carburetor throttle adjusting stop screw.....	2
	0840-P13743	A245802	BS-P13743	BEARING, engine carburetor accelerating pump lever.....	1
	G104-0300426		BS-P9201	BLEED, idle air, engine carburetor.....	1
03-3	G038-0106480	A232767	BS-P60166	BLEED, main air, engine carburetor (No. 50).....	1
03-5	G103-1781795	A232708	BS-P390274	BLOCK, engine carburetor throttle adjustment stop.....	1
03-5	G103-1524081	C92034	BS-P60896	BODY, engine carburetor, main, assembly (Includes: bushing, pin, and stud).....	1
03-3,4	G103-6541627	D41627	BS-P17226	BODY, engine carburetor, main, stripped.....	1
03-4,5	0840-P60885	D41628	BS-P60885	BODY, engine carburetor throttle.....	1
03-4	G104-0101173	A245888	BS-P60244	NUT, engine carburetor body.....	1
03-4	G103-0105245	A232786	BS-P8576	SCREW, attaching, engine carburetor bodies (Also listed as part of KIT, BS-383577).....	6
03-3	0840-P60815	A232751	BS-P60815	STUD, 1/4-20.....	1
	G103-1792092		BS-P60815-1	STUD, 1/4-20 (1st oversize).....	as req.
	G103-1792093		BS-P60815-2	STUD, 1/4-20 (2nd. oversize).....	as req.
03-4	H001-1518007	BE CX1G	BS-P6664	WASHER, lock, reg., S., 1/4 in. (Also listed as part of KIT, BS-383577).....	7
	G038-0107126	C92033	BS-P60895	BODY, engine carburetor throttle, assembly (Includes: block, bushing, and jet).....	1
	G104-5303958		BS-383350	BOOT, engine carburetor throttle lever (Also listed as part of KIT, BS-383577).....	2
03-3	G103-1527783	A232769	BS-P60168	BUSHING, engine carburetor air bleeder.....	1
	0840-P60117	A232765	BS-P60117	BUSHING, engine carburetor air horn stud.....	4
	G103-1527782		BS-P60117-1	BUSHING, engine carburetor air horn stud (1st. oversize).....	4
	G103-1738608	A232884	BS-P60312	PIN, engine carburetor air horn stud bushing.....	8
03-3	G163-0128021	A232901	BS-P10173	BUSHING, engine carburetor economizer valve.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-1	0840-P13681	A232791	BS-P13681	BUSHING, engine carburetor float mechanism.....	1
	0840-P18054	A232680	BS-P18054	BUSHING, engine carburetor float mechanism.....	3
	0840-P6712	A232728	BS-P6712	BUSHING, engine carburetor needle valve seat.....	1
03-4	G103-1527784	A232691	BS-P390219	BUSHING, engine carburetor accelerator pump.....	1
03-4	G103-1781795	A232692	BS-P390220	SCREW, attaching, engine carburetor accelerator pump stem bushing to throttle body.....	3
03-5	0840-P13678	A245794	BS-P13678	BUSHING, engine carburetor strainer screen.....	1
	G103-0100802	A232704	BS-P390090	BUSHING, engine carburetor throttle shaft.....	2
	0840-P10101	A232783	BS-P10101	BUSHING, engine carburetor throttle stop.....	1


FEET	1	2
------	---	---

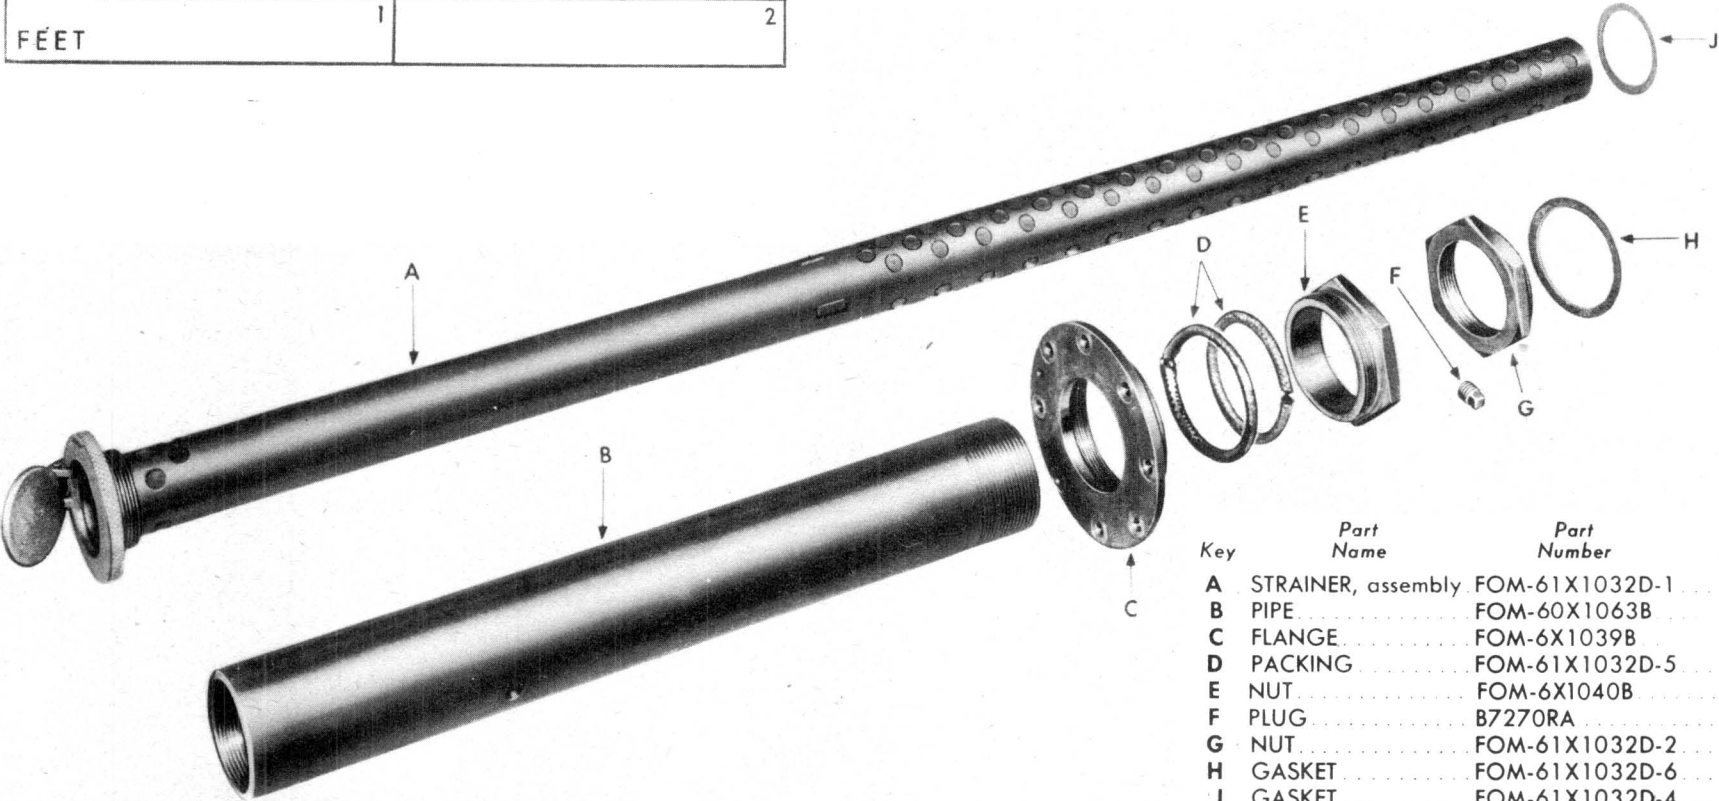

Key	Part Name	Part Number	Group Number
A	STRAINER, assembly	FOM-61X1032D-1	0300
B	PIPE	FOM-60X1063B	0300
C	FLANGE	FOM-6X1039B	0300
D	PACKING	FOM-61X1032D-5	0300
E	NUT	FOM-6X1040B	0300
F	PLUG	B7270RA	0300
G	NUT	FOM-61X1032D-2	0300
H	GASKET	FOM-61X1032D-6	0300
J	GASKET	FOM-61X1032D-4	0300

RA PD 341139

FIGURE 03-2—FUEL TANK FILLER PIPE ASSEMBLY—EXPLODED VIEW

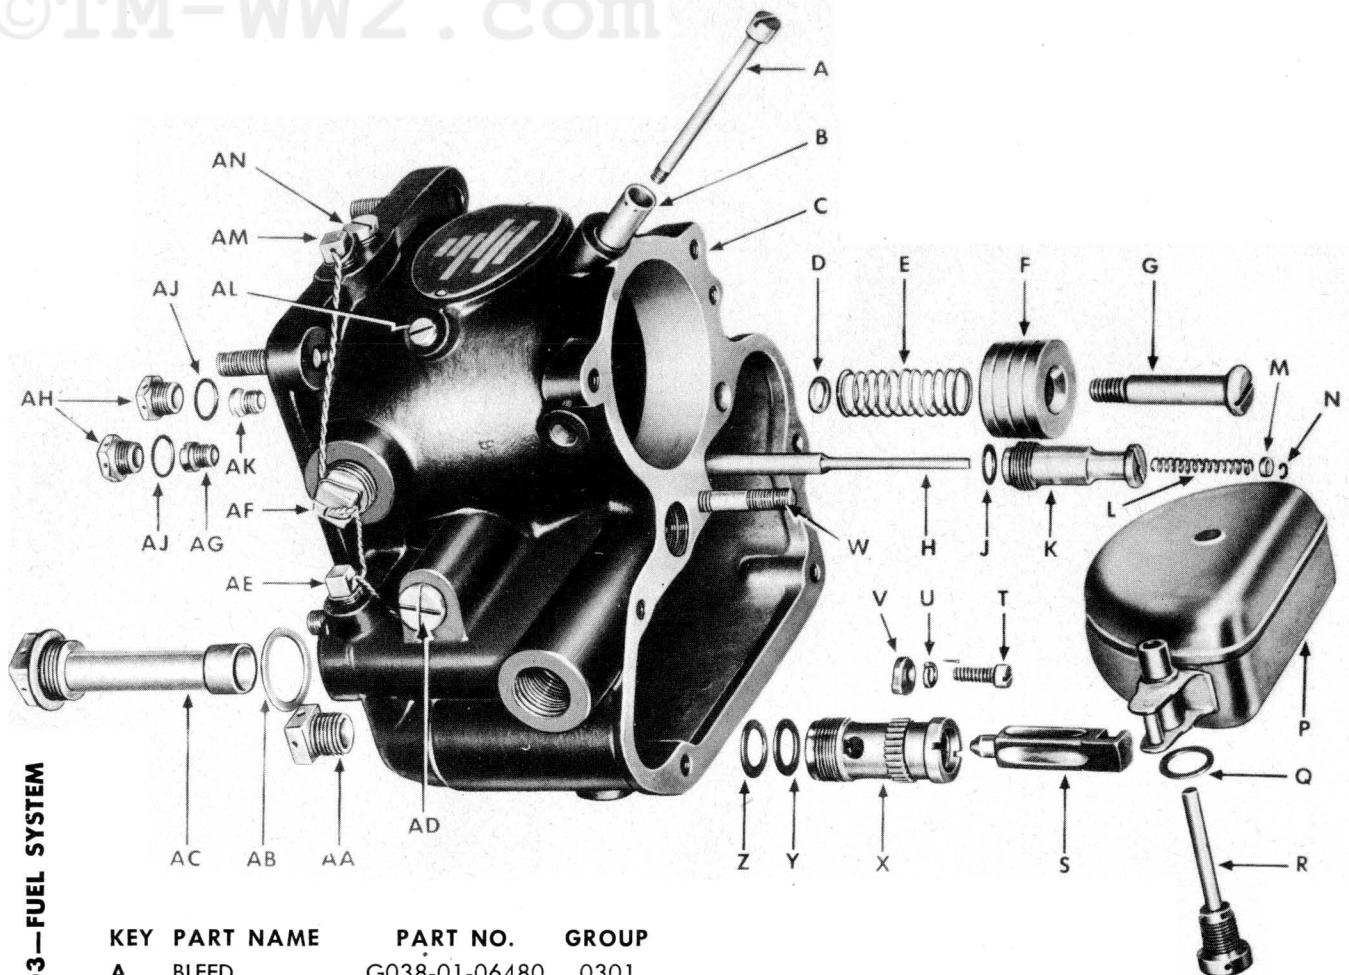


GROUP 03—FUEL SYSTEM

KEY	PART NAME	PART NO.	GROUP
A	BLEED.....	G038-01-06480...	0301
B	BUSHING.....	G103-15-27783...	0301
C	BODY.....	D41627.....	0301
D	WASHER.....	G085-30-02120...	0301
E	SPRING.....	G103-17-89652...	0301
F	PISTON.....	G103-17-38886...	0301
G	VALVE.....	G103-01-06565...	0301
H	VALVE.....	G038-01-78731...	0301
J	GASKET.....	BS-P16546.....	0301
K	SEAT.....	G103-01-05450...	0301
L	SPRING.....	BS-P12507.....	0301
M	BUSHING.....	G163-01-28021...	0301
N	WASHER.....	G103-01-06701...	0301
P	FLOAT, ASS'Y....	BS-P18056.....	0301
Q	GASKET.....	BS-P60308.....	0301
R	SCREEN, ASS'Y...	BS-P13688.....	0301
S	VALVE.....	G038-01-78733...	0301
T	SCREW.....	BS-P3199.....	0301
U	WASHER.....	G104-01-01114...	0301
V	CLIP.....	G103-01-03575...	0301

KEY	PART NAME	PART No.	GROUP
W	STUD.....	A232751.....	0301
X	SEAT, ASS'Y....	GO38-01-68494..	0301
Y	GASKET.....	BS-P13964.....	0301
Z	GASKET.....	BS-P13965.....	0301
AA	PLUG.....	G103-01-04565..	0301
AB	GASKET.....	BS-P6558.....	0301
AC	STRAINER, ASS'Y.	A232695.....	0301
AD	PLUG.....	A232907.....	0301
AE	PLUG.....	A245773.....	0301
AF	PLUG.....	A232682.....	0301
AG	JET.....	BS-P390188-37...	0301
AH	PLUG.....	A232914.....	0301
AJ	GASKET.....	A245755.....	0301
AK	JET.....	BS-P390188-56...	0301
AL	PLUG.....	A232785.....	0301
AM	PLUG.....	A245773.....	0301
AN	PLUG.....	A232908.....	0301

RA PD 341140

**FIGURE 03-3—CARBURETOR MAIN BODY AND FLOAT
CHAMBER VALVE—EXPLODED VIEW**

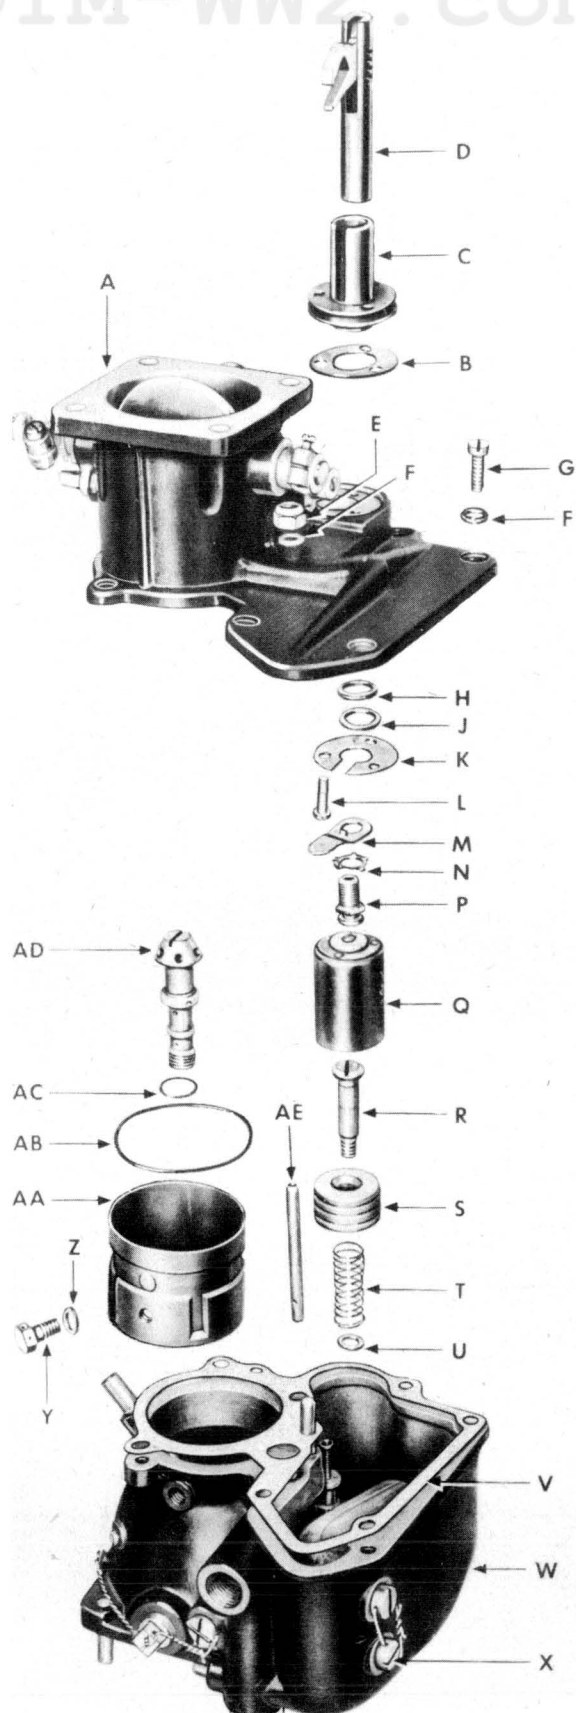

KEY	PART NAME	PART NO.	GROUP
A	BODY	D41628	0301
B	GASKET	A245813	0301
C	BUSHING	A232691	0301
D	STEM, ASS'Y	A232820	0301
E	NUT	A245888	0301
F	WASHER	BECX1G	0301
G	SCREW	A232786	0301
H	PACKING	A245819	0301
J	WASHER	BS-P13873	0301
K	PLATE	A245816	0301
L	SCREW	A232692	0301
M	ARM	A232837	0301
N	WASHER	A232849	0301
P	LINK	A232850	0301
Q	SLEEVE, ASS'Y	A232749	0301
R	VALVE	A232870	0301
S	PISTON	A232748	0301
T	SPRING	A232758	0301
U	WASHER	A232889	0301
V	GASKET	B197015	0301
W	BODY	D41627	0301
X	PLUG	A232907	0301
Y	SCREW	A232917	0301
Z	WASHER	A245766	0301
AA	VENTURI	C92036	0301
AB	PACKING	A232705	0301
AC	GASKET	A245761	0301
AD	NOZZLE	A232776	0301
AE	JET	BS-P13931	0301

RA PD 341141


FIGURE 03-4—CARBURETOR MAIN BODY, THROTTLE BODY, ACCELERATOR PUMP PISTON VALVE, AND VENTURI-EXPLODED VIEW

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0301—CARBURETOR (Contd)	
	0840-P60396	A232771	BS-P60396	CAP, engine carburetor accelerator pump	1
	G103-0100965	D38294	BS-A17676D	CARBURETOR, engine, assembly (BS-TYPE-NA-R6B)	1
01-2	G103-0100960		CO-5245A1	CARBURETOR, engine, w/STUDS, assembly (Includes: plug, stud, and wire)	1
	H001-0725650	BBSX4AB	CO-22427	NUT, safety, S., (elastic stop nut type), 5/16-24NF-3	4
01-3	G103-0106105	A189122	CO-20992	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (standard size) (sq-end.)	4
	G167-0392298		CO-20992-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.003 oversize) (pointed end)	as req.
	G214-7036492		CO-20992-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.006 oversize) (ck-end.)	as req.
	G214-7036483		CO-20992-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire., 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.009 oversize) (drilled end)	as req.
	G103-0106920	A136016	CO-2473	WASHER, special, plain, S., cd-pltd., 5/16 in. (21/64 I.D. x 9/16 O.D. x 1/16 in. thk.)	4
	22W-1642100	BFWX1A		WIRE, steel, low carbon, soft, black annealed, 0.041 in. diam.	as req.
03-3	G103-0103575		BS-P13898	CLIP, engine carburetor float seat lock	1
03-3	G104-0102166		BS-P3199	SCREW, engine carburetor float seat lock clip	1
03-3	H001-1518005	BECX1E	BS-P6668	WASHER, lock, reg., No. 10 (0.190) (Also listed as part of KIT, BS-383577)	1
	G214-5232840	A232840	BS-P383352	CLIP, engine carburetor throttle lever boot	20
	G103-1540141	A232709	BS-P14141	CLOTH, engine carburetor float strainer screen	1
	G104-1538168		BS-ST383350	COVER, engine carburetor accelerator pump stem	1
03-3	G103-0102180	A232678	BS-ST383352	CLIP, accelerator pump stem cover	9
03-3	G103-0102382		BS-P18056	FLOAT, engine carburetor, assembly	1
			BS-P16546	GASKET, engine carburetor economizer valve seat (Also listed as part of GASKET SET, BS-P61379)	1
	G103-0102522		BS-P60307	GASKET, engine carburetor float fulcrum screw (1/64 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	as req.
	G103-0102440		BS-P10666	GASKET, engine carburetor float fulcrum screw (1/32 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	1
03-3	G103-0102523		BS-P60308	GASKET, engine carburetor float fulcrum screw (3/64 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	as req.
	G103-0102500		BS-P13963	GASKET, engine carburetor float needle valve seat (1/64 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	as req.
	G103-0102520		BS-P6564	GASKET, engine carburetor float needle valve seat (1/32 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	as req.
03-3	G103-0102501		BS-P13964	GASKET, engine carburetor float needle valve seat (3/64 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	as req.
03-3	G103-0102521		BS-P13965	GASKET, engine carburetor float needle valve seat (1/16 in. thk.) (Also listed as part of GASKET SET, BS-P61379)	as req.

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-4	G104-1593997	A245761	BS-P18602	GASKET, engine carburetor main discharge nozzle (Also listed as part of GASKET SET, BS-P61379).....	1
03-4	G103-0102381	A245813	BS-P13775	GASKET, engine carburetor piston stem bushing (Also listed as part of GASKET SET, BS-P61379).....	1
03-3	G103-0102385	A245755	BS-P2886	GASKET, engine carburetor screw plug (Also listed as part of GASKET SET, BS-P61379).....	2

KEY	PART NAME	PART No.	GROUP
A	WASHER.....	BS-P12167.....	0301
B	SCREW.....	BS-P2267.....	0301
C	PIN.....	BS-P14577.....	0301
D	LEVER, ASS'Y....	BS-P14022.....	0301
E	SHAFT.....	BS-P17525.....	0301
F	BUSHING.....	BS-390090.....	0301
G	BODY.....	BS-P60885.....	0301
H	VALVE.....	BS-P60167.....	0301
J	SCREW.....	BS-P4235.....	0301
K	SCREW, ASS'Y....	BS-P11477.....	0301
L	STOP, ASS'Y....	BS-P20346.....	0301
M	NUT.....	BS-P6581.....	0301
N	PLUG.....	BS-392522.....	0301
P	QUADRANT.....	BS-P10053.....	0301
Q	NUT.....	BS-P16598.....	0301
R	BLOCK.....	BS-390274.....	0301
S	PIN.....	BS-P16597.....	0301
T	SCREW.....	BS-P6869.....	0301
U	JET.....	BS-P60874.....	0301
V	PACKING.....	BS-P20396.....	0301
W	LEVER, ASS'Y....	BS-P60879.....	0301
X	PIN.....	BS-P6243.....	0301
Y	NUT.....	BS-P20397.....	0301
Z	PLUG.....	BS-P8460.....	0301
AA	JET.....	BS-P17137.....	0301
AB	BODY.....	BS-P60896.....	0301
AC	STUD.....	CO-22324.....	0301-1
AD	PLUG.....	BS-P10248.....	0301

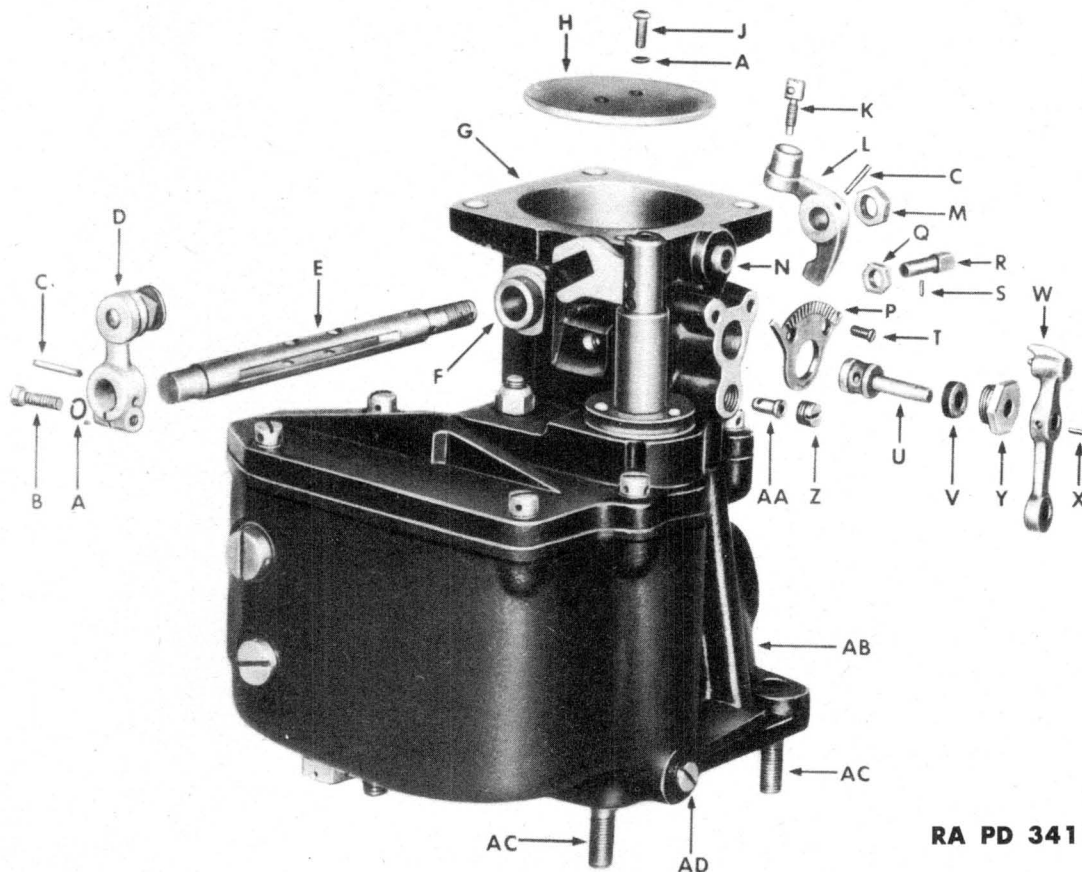

RA PD 341142

**FIGURE 03-5—CARBURETOR MAIN BODY, THROTTLE BODY, IDLE ADJUSTING LEVER
ACCELERATOR PUMP LEVER, AND THROTTLE VALVE SHAFT—EXPLODED VIEW**

GROUP 03—FUEL SYSTEM


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0301—CARBURETOR (Contd)	
03-3	G103-0102460		BS-P6558	GASKET, engine carburetor strainer plug (Also listed as part of GASKET SET, BS-P61379).....	1
	G103-0182055		BS-174-S-22	GASKET, engine carburetor strainer plug (Also listed as part of KIT, BS-383577).....	10
03-4	G103-0102485	B197015	BS-P60878	GASKET, engine carburetor throttle body (Also listed as part of GASKET SET, BS-P61379).....	1
	G103-0102232	A231713	CO-22803	GASKET, engine carburetor to crankcase (vellumoid, 1/32 in. thk.).....	1
	G103-0102380	A139805	CO-2837	GASKET, engine carburetor to crankcase (vellumoid, 1/16 in. thk.).....	as req.
	G168-7037060	A303959	BS-P61379	GASKET SET, engine carburetor overhaul.....	1
				(Consists of:	
	G103-0102382		BS-P16546	1 GASKET, engine carburetor economizer valve seat	
	G103-0102522		BS-P60307	1 GASKET, engine carburetor float fulcrum screw (1/64 in. thk.)	
	G103-0102440		BS-P10666	1 GASKET, engine carburetor float fulcrum screw (1/32 in. thk.)	
	G103-0102523		BS-P60308	1 GASKET, engine carburetor float fulcrum screw (3/64 in. thk.)	
	G103-0102500		BS-P13963	1 GASKET, engine carburetor float needle valve seat (1/64 in. thk.)	
	G104-0302520		BS-P6564	1 GASKET, engine carburetor float needle valve seat (1/32 in. thk.)	
	G103-0102501		BS-P13964	1 GASKET, engine carburetor float needle valve seat (3/64 in. thk.)	
	G103-0102521		BS-P13965	1 GASKET, engine carburetor float needle valve seat (1/16 in. thk.)	
	G038-0125816		BS-P18602	1 GASKET, engine carburetor main discharge nozzle	
	G103-0102381		BS-P13775	1 GASKET, engine carburetor piston stem bushing	
	G103-0102385		BS-P2886	2 GASKET, engine carburetor screw plug	
	G103-0102460		BS-P6558	1 GASKET, engine carburetor strainer plug	
	G103-0102485		BS-P60878	1 GASKET, engine carburetor throttle body	
	G103-0104160		BS-P393786	1 PACKING, cork, engine carburetor accelerating pin stem	
	G103-1733606		BS-P20396	1 PACKING, engine carburetor idle adjusting lever pin	
	G103-2733607		BS-P390060	1 PACKING, engine carburetor venturi)	
	0840-P15586	A232821	BS-P15586	HOLDER, engine carburetor float fulcrum.....	1
03-5	G104-0101138		BS-P17137	JET, discharge, No. 45, engine carburetor pump.....	1
03-5	G103-1643008	A232754	BS-P60874	JET, idle discharge, engine carburetor.....	1
03-4	G103-1643007		BS-P13931	JET, idle metering, No. 61, engine carburetor.....	1
03-3	0840-390188-37		BS-P390188-37	JET, metering, No. 37, main, engine carburetor (Also listed as part of KIT, BS-383577)	1
03-3	G103-1643070	B197012	BS-P390188-56	JET, metering, No. 56, engine carburetor economizer (Also listed as part of KIT, BS-383577).....	2
	G103-5303952	A303952	BS-383577	KIT, repair, engine carburetor.....	1
				(Consists of:	
	G104-1780450		BS-383350	2 BOOT, engine carburetor throttle lever	
	G104-1538168		BS-383352	20 CLIP, engine carburetor throttle lever boot	
	G103-0182055		BS-174-S-22	10 GASKET, engine carburetor strainer plug	

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
		A303959	BS-P61379	1 GASKET SET, engine carburetor overhaul	
	G103-1643071		BS-390188-56	1 JET, metering, engine carburetor economizer, No. 56	
	G103-1643070		BS-390188-37	1 JET, metering, main, engine carburetor, No. 37	
	G104-0101173		BS-P60244	1 NUT, engine carburetor body	
	H001-0811025		BS-P6666	5 PIN, cotter, split, S., 1/16 x 1/2	
	G103-0104290		BS-P14577	2 PIN, taper, engine carburetor throttle stop and accelerator pump lever	
	G103-0104505		BS-P9008	1 PLUG, drain, engine carburetor float chamber (for carburetor main body, D41627)	
	G103-0105245		BS-P8576	3 SCREW, engine carburetor bodies	
	G167-0381994		BS-P4235	2 SCREW, engine carburetor throttle valve	
	G103-0106620		BS-P19692	1 VALVE, needle, engine carburetor float, w/SEAT, assembly	
	G104-0101115		BS-P12167	2 WASHER, lock, engine carburetor throttle valve screws	
	G104-0101114		BS-P6668	1 WASHER, lock, reg., No. 10 (0.190)	
	H001-1518007	BECX1G	BS-P6664	7 WASHER, lock, reg., S., 1/4 in.)	
	0840-P16814	A232810	BS-P16814	LEVER, engine carburetor accelerator pump	1
03-5	G038-0166961	A232893	BS-P2267	SCREW, locking, engine carburetor accelerating pump lever	1
	G104-0101115	A245788	BS-P12167	WASHER, lock, engine carburetor accelerator pump lever	1
03-5	G103-0103556	A232839	BS-P14022	LEVER, engine carburetor accelerator pump, assembly	1
03-5	G103-1674058	A232747	BS-P60879	LEVER, engine carburetor idle adjusting, assembly (Includes: plunger and spring)	1
03-5	G103-1714464		BS-P20397	NUT, engine carburetor idle adjusting lever pin	1
03-5	G104-0101398	A245762	BS-P6243	PIN, engine carburetor idle adjusting lever	1
	G103-0103557	A232866	BS-22096	LEVER, engine carburetor throttle	1
	0840-P60875	A232755	BS-P60875	LEVER, idle adjusting, engine carburetor	1
03-4	G038-0135665	A232850	BS-P13940	LINK, engine carburetor accelerator pump piston	1
03-4	G103-0103675	A232776	BS-P60169	NOZZLE, main discharge, engine carburetor, (5/16 in.)	1
03-5	G104-0101148	A245764	BS-P6581	NUT, castle, engine carburetor throttle shaft	1
	H001-0811025	BFAX1BC	BS-P6666	PIN, cotter, split, S., 1/16 x 1/2 (Also listed as part of KIT, BS-383577)	1
03-5	G104-0101363		BS-P16598	NUT, engine carburetor throttle body	1
03-4	G103-0104160	A245819	BS-P393786	PACKING, cork, engine carburetor accelerating pin stem (Also listed as part of GASKET SET, BS-P61379)	1
03-5	G103-1733606	A232775	BS-P20396	PACKING, engine carburetor idle adjusting lever pin (Also listed as part of GASKET SET, BS-P61379)	1
03-4	G103-1733607	A232705	BS-P390060	PACKING, engine carburetor venturi tube (Also listed as part of GASKET SET, BS-P61379)	1
	G038-0150490	A165558		PIECE, engine carburetor shield	1
	G103-1738607	A232811	BS-P16815	PIN, engine carburetor accelerating pump lever	1
	0840-P15585	A232836	BS-P15585	PIN, engine carburetor float fulcrum	1
	0840-P18055	A232681	BS-P18055	PIN, engine carburetor float mechanism	1
03-5	G104-0101492		BS-P16597	PIN, taper, engine carburetor throttle body	1
03-5	G103-0104290		BS-P14577	PIN, taper, engine carburetor throttle stop and accelerator pump lever (Also listed as part of KIT, BS-383577)	2
	G103-0104290		BS-P14577-1	PIN, taper, engine carburetor throttle stop and accelerator pump lever (first oversize)	2
03-3,4	G103-1738886	A232748	BS-P60880	PISTON, engine carburetor accelerator pump	1
	G038-0152540	A165559		PLATE, engine carburetor shield	1

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0301—CARBURETOR (Contd)	
03-4	G104-0101556	A245816	BS-P13876	PLATE, retaining, engine carburetor packing (For stem and fork assembly, A232820) . . .	1
03-3	G103-0104565	A245745	BS-P9008	PLUG, drain, engine carburetor float chamber (For carburetor main body, D41627) (Also listed as part of KIT, BS-383577)	1
		A139777	CO-2749	PLUG, engine carburetor connection opening (pipe, S., 3/8-18NPT) (For shipping and storage only)	1
03-3	G103-0303117	A245773	BS-P8508	PLUG, engine carburetor main body (pipe, sq-hd.)	2
03-3	G103-0104613	A232682	BS-11640	PLUG, engine carburetor main body (pipe, sq-hd., 3/8)	1
03-3,5	G038-0162122	A232785	BS-P8460	PLUG, engine carburetor main body and throttle body (screw, 5/16-24NF-3)	4
	G103-1740573	A232798	BS-P17155	PLUG, engine carburetor main body (screw, hdls., 1/4-28NS)	1
03-5	G104-0101665	A245784	BS-P10248	PLUG, engine carburetor main body (screw, hdls., 3/8-24NF)	1
03-3	G038-0162124	A232908	BS-P11611	PLUG, engine carburetor main body (screw, hdls., 7/16-24NS)	1
03-3,4	G038-0162123	A232907	BS-P11582	PLUG, engine carburetor main body (screw, hdls., 9/16-24NS)	2
	G038-0162125		BS-P6670	PLUG, engine carburetor main body and throttle body (screw, hdls., No. 10 (0.190)-32) .	2
03-3	G103-0104545	A232914	BS-P13620	PLUG, engine carburetor main body (screw, hex-hd., 7/16-24NS)	2
	G103-1740572	A245744	BS-P9007	PLUG, engine carburetor strainer	1
03-5	G167-0340662	A232689	BS-P392522	PLUG, engine carburetor throttle body (pipe, hdls.)	1
	G103-0140495	A232881	BS-BK-13673	PLUG, paper, engine carburetor (For shipping only)	1
	G104-0201501	A245799	BS-P9290	PLUNGER, engine carburetor idle adjusting lever	1
03-5	G038-0162870	A232790	BS-P10053	QUADRANT, engine carburetor idling adjustment	1
03-5	G103-0105161		BS-P6869	SCREW, engine carburetor idling adjustment quadrant	2
	G214-5232696	A232696	BS-P390025	SCREW, engine carburetor strainer, assembly (Includes: bushing, cloth, and wire)	1
03-3	G103-0105140	A232928	BS-P13688	SCREW, engine carburetor float fulcrum, assembly (Includes: holder and pin)	1
	G104-0102232		BS-P10100	SCREW, engine carburetor throttle adjusting stop	1
03-5	G104-0102232		BS-P11477	SCREW, engine carburetor throttle adjusting stop, assembly (Includes: ball and spring) .	1
03-3	G103-0105450	A232826	BS-P15663	SEAT, engine carburetor economizer valve	1
	0840-P13676	A232920	BS-P13676	SEAT, engine carburetor needle valve	1
03-3	G038-0168494	A232921	BS-P13677	SEAT, engine carburetor needle valve, w/BUSHING, assembly	1
03-5	G103-0169185	A232801	BS-P17525	SHAFT, engine carburetor throttle valve	1
	G038-0170080	A165560		SHIELD, engine carburetor, assembly (Includes: piece and plate)	1
	0840-P60397	A232772	BS-P60397	SLEEVE, engine carburetor accelerator pump	1
03-4	G103-1787057	A232749	BS-P60881	SLEEVE, engine carburetor accelerator pump, assembly (Includes: cap and rivet)	1
03-3	G038-0172642		BS-P12507	SPRING, engine carburetor economizer valve	1
03-3	G103-0106701	A232784	BS-P8344	WASHER, engine carburetor economizer valve	1
	0840-P4880	A245760	BS-P4880	SPRING, engine carburetor idle adjusting lever	1
	0840-P20344	A245865	BS-P20344	SPRING, engine carburetor stop screw	1
03-3,4	G103-1789652	A232758	BS-P60873	SPRING, helical, engine carburetor accelerator pump piston	1
03-3,4	G085-3002120	A232889	BS-P13619	WASHER, engine carburetor accelerator pump piston valve	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-4	G103-0105940	A232820	BS-P16299	STEM, engine carburetor accelerator pump, w/FORK, assembly (Includes: rivets).....	1
	0840-P20345	A245866	BS-P20345	STOP, engine carburetor throttle.....	1
03-5	G103-1791900		BS-P20346	STOP, engine carburetor throttle, w/BUSHING, assembly.....	1
03-3	G103-1791938	A232695	BS-P390224	STRAINER, engine carburetor, assembly (Includes: plug and screen assembly).....	1
	0840-P13682	A232924	BS-P13682	SUPPORT, engine carburetor float.....	1
03-3,4	G103-0106565	A232870	BS-P13960	VALVE, engine carburetor accelerator pump piston (No. 2-50).....	1
03-3	G038-0178731	A232803	BS-P18011	VALVE, engine carburetor economizer.....	1
	G102-0106576	A232804	BS-P18012	VALVE, engine carburetor economizer, assembly (Includes: bushing, seat, spring, and washer).....	1
03-3	G038-0178733	A232679	BS-P18053	VALVE, engine carburetor float chamber.....	1

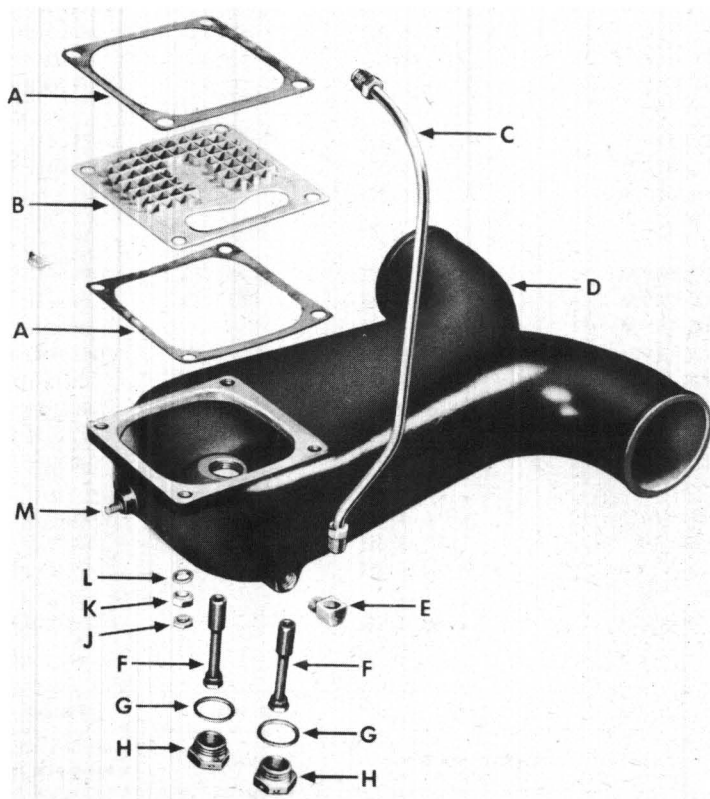

KEY	PART NAME	PART No.	GROUP
A	GASKET.....	CO-20482.....	0301-1
B	GRID.....	CO-3847.....	0301-1
C	TUBE, ASS'Y.....	CO-A4977.....	0301-1
D	HORN.....	CO-5841.....	0301-1
E	ELBOW.....	CO-23287.....	0301-1
F	NUT.....	CO-20412.....	0301-1
G	GASKET.....	A161851.....	0301-1
H	PLUG.....	B144054.....	0301-1
J	PALNUT.....	A160945.....	0301-1
K	NUT.....	A143866.....	0301-1
L	WASHER.....	A136016.....	0301-1
M	STUD.....	CO-22001.....	0107J

FIGURE 03-6—CARBURETOR AIR HORN—EXPLODED VIEW


RA PD 341143

0301

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G103-0106620		BS-P19692	0301—CARBURETOR (Contd) VALVE, needle engine carburetor float, w/SEAT, assembly (Also listed as part of KIT, BS-383577).....	1
03-5	G038-0178599	A232768	BS-60167	VALVE, throttle, engine carburetor.....	1
03-5	G103-0105230	A232859	BS-P4235	SCREW, engine carburetor throttle valve (Also listed as part of KIT, BS-383577).....	2
03-5	G104-0101115	A245788	BS-P12167	WASHER, lock, engine carburetor throttle valve screws (Also listed as part of KIT, BS-383577).....	2
03-4	G103-0106385	C92036	BS-P17222	VENTURI, engine carburetor (2 1/16 in.).....	1
03-4	G103-0105162	A232917	BS-P13657	SCREW, set, engine carburetor venturi.....	1
03-4	G104-0103381	A245766	BS-P6592	WASHER, lock, engine carburetor venturi set screw.....	1
	0840-P13640	A232916	BS-P13640	WASHER, engine carburetor accelerator pump lever screw.....	1
03-4	G038-8810790		BS-P13873	WASHER, engine carburetor accelerator pump packing retainer.....	1
	0840-P12806		BS-P12806	WASHER, engine carburetor float mechanism.....	2
	0840-P12809	A245790	BS-P12809	WASHER, engine carburetor float mechanism.....	2
03-4	G038-0179660	A232849	BS-P13961	WASHER, lock, engine carburetor accelerator pump arm.....	1
				0301-1—CARBURETOR AIR HORN ELBOW, engine carburetor air horn scavenger tube (flared tubing, 1/4 in.).....	1
03-6	G103-0102400		CO-23287	GASKET, air horn to engine carburetor (vellumoid, 1/32 in. thk.).....	2
03-6	G103-0102420	A165851	CO-20482	GASKET, engine carburetor air horn plug (asbestos, 7/8 I.D. x 1 1/3 O.D. x 1/8 in. thk.).....	2
03-6	G167-0203784		CO-3847	GRID, engine carburetor air horn.....	1
03-6	2220-5841		CO-5841	HORN, air, engine carburetor,.....	1
03-6	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24NF-3.....	2
03-6	G103-0103680		CO-20412	NUT, special, 5/16-24NF-3 x 2 21/32 long.....	2
03-6	G103-0104267	A160945	CO-2560	PALNUT, light, S., cd-pltd., 5/16-24NF.....	2
03-5			CO-22324	STUD, 5/16-18NC-3 (3/8) x 5/16-24NF-3 (1/2) x 1 3/8 (standard size) (sq-end.).....	4
	G214-7036518		CO-22324-03	STUD, 5/16-18NC-3 (3/8) x 5/16-24NF-3 (1/2) x 1 3/8 (0.003 oversize) (pointed end)	as req.
	G214-7036519		CO-22324-06	STUD, 5/16-18NC-3 (3/8) x 5/16-24NF-3 (1/2) x 1 3/8 (0.006 oversize) (ck-end.).....	as req.
	G214-7036520		CO-22324-09	STUD, 5/16-18NC-3 (3/8) x 5/16-24NF-3 (1/2) x 1 3/8 (0.009 oversize) (dld-end.).....	as req.
03-6	G103-0106920	A136016	CO-2473	WASHER, plain, S., cd-pltd., 5/16 in.....	as req.
03-6	G103-0104540	B144054	CO-32250	PLUG, engine carburetor air horn.....	2
03-6	G167-0407822		CO-A4977	TUBE, scavenger, carburetor, air horn, assembly.....	1
				0301C—AIR CLEANER AND INTAKE TUBES BODY, engine carburetor left air cleaner, assembly.....	1
03-7	G214-7036521		VR-6547	BODY, engine carburetor right air cleaner, assembly.....	1
	G214-7036522		VR-6546	CLAMP, engine carburetor air cleaner intake tube coupling, (3 1/16 in. I.D.).....	8
	G167-0136801		FOM-P218		

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-7	G167-0137400	A161851	FOM-P219	CLEANER, air, engine carburetor, left, assembly (VR-3530D).....	1
	G167-0137401		FOM-P220	CLEANER, air, engine carburetor, right, assembly (VR-3520D).....	1
	G167-0140064		FOM-3X1115B	COUPLING, engine carburetor air cleaner intake tube (GV-Q7673).....	4
03-7	9160-6557		VR-6615	CUP, engine carburetor air cleaner.....	2
	G103-0102420		VR-6557	CUP, engine carburetor air cleaner, assembly (Includes: disk and spring).....	2
			VR-6558	DISK, engine carburetor air cleaner.....	2
03-7			9160-6631	FOM-P302	GASKET, engine carburetor air horn plug.....
03-7	H001-0724002		FOM-P311	PLUG, engine carburetor air horn.....	2
03-7	H001-1530011		VR-6631	ROD, retaining, engine carburetor air cleaner cup.....	4
03-7	G214-7036523	BBPX1B	VR-6626	NUT, wing, S., 1/4-20NC-2.....	4
	G167-0407824	BEBX1M	VR-676	WASHER, plain, S., SAE std., 1/2 in.....	4
			VR-6618	SPRING, retaining, engine carburetor air cleaner cup disk.....	2
			FOM-3X1088D	TUBE, intake, engine carburetor air cleaner.....	2
0302—FUEL PUMP					
03-8	G038-0106330	A169148	CAN-A1056	BUSHING, fuel pump rear housing (bz., 0.492 I.D. x 0.752 O.D. x 1 3/16 in. long).....	1
03-8	G038-0114980		CAN-1524	CAP, fuel pump relief valve guide.....	1
03-8	G038-0114970		CAN-1525	CAP, fuel pump relief valve, plain.....	1

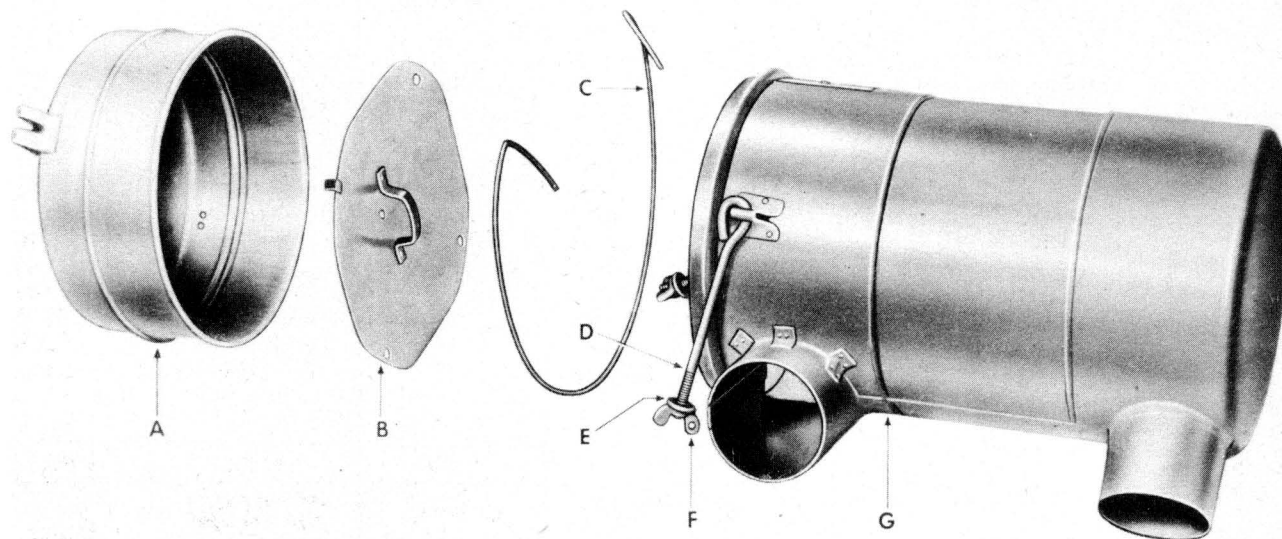

Key	Part Name	Part Number	Group Number
A	CUP.....	VR-6615.....	0301C
B	DISK.....	VR-6558.....	0301C
C	SPRING.....	VR-6618.....	0301C
D	ROD.....	VR-6631.....	0301C
E	WASHER.....	BEBX1M.....	0301C
F	NUT.....	BBPX1B.....	0301C
G	BODY.....	VR-6547.....	0301C

FIGURE 03-7—LEFT AIR CLEANER ASSEMBLY—EXPLODED VIEW

RA PD 76359

0301C-0302

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0302—FUEL PUMP (Contd)	
03-8	G038-0117870		CAN-2920	COLLAR, fuel pump seal ring	1
03-8	G103-0101370		CAN-2922	COLLAR, fuel pump shaft	1
01-10	G103-0101500	A160993	CO-20420	COUPLING, drive, fuel pump (part of PUMP, w/COUPLING, assembly, CO-A4170A).	1
03-8	G038-8802360		CAN-5455	COVER, fuel pump	1
03-8	H001-1013002	BCAX3K	CAN-1477	SCREW, cap, hex-hd., S., 1/4-20NC-2 x 5/8	4
03-8	H001-1500011	BEAX1H	CAN-1308	WASHER, lock, external teeth, reg., S., 1/4 in.	4
03-8	G103-0102760		CAN-2045	GASKET, fuel pump housing (vellumoid, 0.0025 in. thk.)	2
01-10,03-8	G103-0102740	A160995	CO-20423	GASKET, fuel pump or oil scavenger pump outer cover (vellumoid, 1/32 in. thk.)	1
03-8	G103-1593691		CAN-2079	GASKET, fuel pump rear plate	1
03-8	G103-2194031		CAN-2022	GASKET, fuel pump relief valve cap (fiber, 5/8 I.D. x 15/16 O.D. x 1/32 in. thk.)	2
	G103-0102740	A160995	CO-20423	GASKET, fuel pump to scavenger pump (vellumoid, 1/32 in. thk.)	1
03-8	G038-0129020	A145619	CAN-1201	GUIDE, fuel pump rotor vane spring	1
	G103-0103426		CAN-5639	HOUSING, fuel pump, rear	1
03-8	G103-0103435		CAN-6686	HOUSING, fuel pump, rear, w/BUSHING, assembly	1
03-8	H001-1013002	BCAX3K	CAN-1477	SCREW, cap, hex-hd., S., 1/4-20NC-2 x 5/8	4
03-8	H001-1500011	BEAX1H	CAN-1308	WASHER, lock, external teeth, reg., S., 1/4 in.	4
	G038-0130940		CAN-5640	HOUSING, fuel pump rotor	1
03-8	G103-0103434		CAN-6685	HOUSING, fuel pump rotor, w/SEAT, assembly	1
03-8	H001-0518012	BGAX6B		KEY, Woodruff, ni-S., 1/8 x 5/8 in. (No. 405) (fuel pump shaft)	1
	G168-7037071		CAN-3967	OIL SEAL, fuel pump rear bearing plate	1
03-8	G038-0151190		CAN-3009	PIN, fuel pump shaft (S., 0.3345 hd., 1/8 shank, 11/16 in. long)	1
03-8	G168-7037070		CAN-8077	PLATE, bearing, fuel pump, rear, assembly	1
03-8	H001-1026073	BCFX2AG	CAN-1458	SCREW, machine, oval-fil-hd., S., No. 8 (0.164)-32NC-2 x 7/8 in.	4
01-2,03-8	G103-0104680	B155667	CAN-9151	PUMP, fuel, assembly	1
01-10	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 5/16-24NF-3	4
01-10	H001-0726010	A160945	CO-2560	PALNUT, light, S., cd-pltd., 5/16-24NF	4
	G103-0106226	A189121	CO-20991	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4	4
	G167-0392291		CO-20991-03	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.003 oversize) (pointed end)	as req.
	G214-7036481		CO-20991-06	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.006 oversize) (ck-end.)	as req.
	G214-7036482		CO-20991-09	STUD, alloy-S., cd-pltd., 5/16-18NC-4 (1/2) x 5/16-24NF-3 (1/2) x 1 1/4 (0.009 oversize) (drilled end)	as req.
	G103-0106920	A136016	CO-2473	WASHER, plain, S., cd-pltd., 5/16 in.	4
03-8	G214-7036524		CAN-2078	RING, seal, fuel pump (neoprene, 15/32 I.D. x 21/32 O.D. x 21/32 O.D. x 0.125 in. thk.)	1
03-8	G038-0166270		CAN-5227	ROTOR, fuel pump	1
	G103-0105451		CAN-1809	SEAT, fuel pump rotor	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-8	G103-0169290		CAN-6092	SHAFT, fuel pump, assembly (Includes: collar, pin, inner and outer shafts).....	1
03-8	G038-0169320		CAN-5171	SHAFT, fuel pump, inner.....	1
03-8	G038-0169330		CAN-5009	SHAFT, fuel pump, outer.....	1
03-8	G103-0105839		CAN-1739	SPRING, fuel pump relief valve (br., 0.020 in. diam. stock, 0.437 O.D., 11 coils).....	1
03-8	1465-1101		CAN-1101	SPRING, fuel pump rotor vane (music wire, 0.024 diam. stock, 0.150 O.D., 36 coils).....	1
03-8	G038-0172930		CAN-3116	SPRING, fuel pump shaft (music wire, 0.049 in. diam. stock, 0.525 O.D., 3 1/4 coils)...	1
03-8	G160-0427267		CAN-2504	VALVE, relief, fuel pump.....	1
03-8	G038-0178840		CAN-5332	VANE, fuel pump rotor (asbestos formica, 1 x 23/64 x 0.217 in.).....	2
03-8	G038-0181160		CAN-3201	WASHER, thrust, fuel pump shaft spring (S., 33/64 I.D. x 0.725 O.D. x 1/16 in. thk.)...	1
				0304—FUEL LINES	
	H006-0210060	B7270GA	FOM-P177	BUSHING, pipe, shoulder, br., 3/8 x 1/4 (right fuel tank filler pipe hose to tee at carburetor).....	1
03-9	G167-0136802		FOM-P283	CLAMP, hose, 1 3/8 in. (bullet-sealing fuel tank drip shield overflow hose).....	4
03-9	G167-0186802		FOM-P283	CLAMP, hose, 1 3/8 in. (bullet-sealing fuel tank drip shield overflow hose).....	4
			FOM-8X1019B	CLIP, cable, closed, 1/8 in. (primer distributor pressure line).....	2
	H001-5417521	BCVX2AB-1	FOM-P280	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/8.....	2
			FOM-8X1048B	CLIP, cable, closed, 3/16 in. (fuel filter suction line).....	2
			FOM-P281	SCREW, self-tapping, binding head, S., cd-pltd., 1/4-20NC-3 x 3/8.....	2
	G167-0137987		FOM-8X1012B	CLIP, cable, closed, 1/2 in. (right tank to left tank fuel overflow line).....	4
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	4
	H001-5417680	BCVX2AL	FOM-P189	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 1.....	4
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, regular, S., 1/4 in. (SK-1214).....	4
	G167-0137989		FOM-8X1014B	CLIP, cable, closed, 7/8 in. (carburetor by-pass to right fuel tank filler pipe hose).....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	2
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, regular, S., 1/4 in. (SK-1214).....	2
	G167-0137990		FOM-8X1016B	CLIP, cable, closed, 1 in. (right fuel tank to tee hose (2), left fuel tank to tee hose (2), tee to fuel filter hose (1), and carburetor by-pass to filter pipe hose (1)).....	6
				NUT, regular, hex, s-fin., S., 1/4-20NC-2.....	4
	H001-0718001	BBAX1A	FOM-P45	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	4
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	2
	H101-0121887	BCVX2AH-1	FOM-P44	WASHER, lock, internal teeth, regular, S., 1/4 in. (SK-1214).....	6
	H001-1500011	BEAX1H	FOM-P24	CLIP, cable, closed, 1 3/8 in. (tee to fuel filter hose).....	2
	G167-0137991		FOM-8X1017B	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
	H001-0718001	BBAX1A	FOM-P45	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	2
	H101-0121887	BCVX2AH-1	FOM-P44	WASHER, lock, internal teeth, regular, S., 1/4 in. (SK-1214).....	2
	H001-1500011	BEAX1H	FOM-P24	CLIP, cable, closed, 3/8 in. (rear pressure line to fuel primer distributor line).....	1
			FOM-8X1022B	CLIP, cable, two line support (engine to union fuel primer suction line, and engine fuel primer pump to union pressure line).....	1
	G168-7037049		FOM-8X1051B	NUT, machine screw, hex., S., No. 10 (0.190).....	2
				SCREW, machine, rd-hd., S., cd-pltd., cross recess type, No. 10 (0.190) 24NC-3 x 1 1/2.....	2
	H001-0716540	BBKX2C	FOM-P386	WASHER, plain, br., SAE std., No. 10 (0.190).....	2
			FOM-P410	WASHER, reg., S., cd-pltd., SAE std., No. 10 (0.190).....	2
			FOM-P412		
	H001-7025621		FOM-P608		

GROUP 03—FUEL SYSTEM

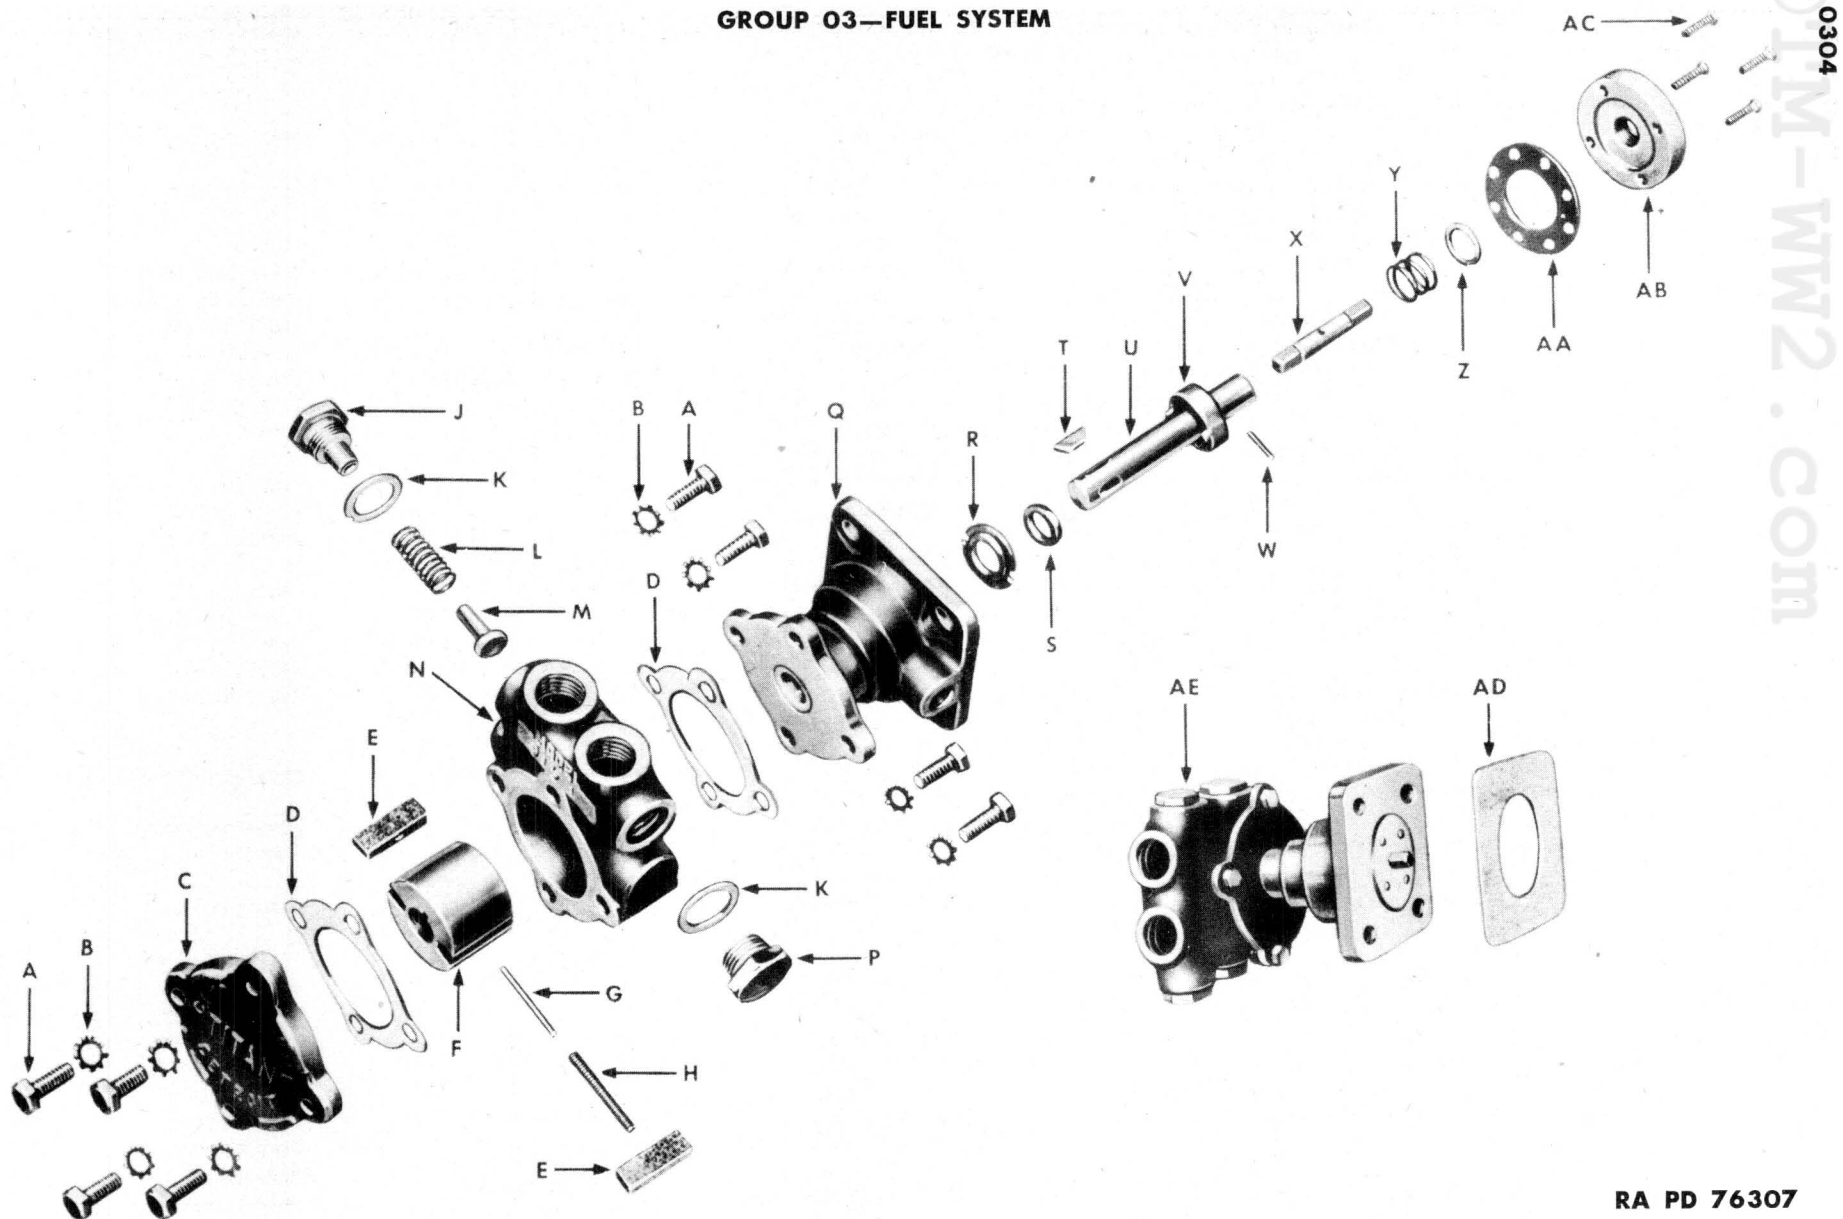


FIGURE 03-8—FUEL PUMP ASSEMBLY—EXPLODED VIEW

RA PD 76307

Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	SCREW	BCAX3K	0302	R	COLLAR	CAN-2920	0302
B	WASHER	BEAX1H	0302	S	RING	CAN-2078	0302
C	COVER	CAN-5455	0302	T	KEY	BGAX6B	0302
D	GASKET	CAN-2045	0302	U	SHAFT	CAN-5009	0302
E	VANE	CAN-5332	0302	V	COLLAR	CAN-2922	0302
F	ROTOR	CAN-5227	0302	W	PIN	CAN-3009	0302
G	GUIDE	CAN-1201	0302	X	SHAFT	CAN-5171	0302
H	SPRING	CAN-1101	0302	Y	SPRING	CAN-3116	0302
J	CAP	CAN-1524	0302	Z	WASHER	CAN-3201	0302
K	GASKET	CAN-2022	0302	AA	GASKET	CAN-2079	0302
L	SPRING	CAN-1739	0302	AB	PLATE, assembly	CAN-8077	0302
M	VALVE	CAN-2504	0302	AC	SCREW	BCFX2AG	0302
N	HOUSING, assembly	CAN-6685	0302	AD	GASKET	A160995	0302
P	CAP	CAN-1525	0302	AE	PUMP, assembly	B155667	0302
Q	HOUSING, assembly	CAN-6686	0302				

FIGURE 03-8—FUEL PUMP ASSEMBLY—EXPLODED VIEW


RA PD 76307A

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0304—FUEL LINES (Contd)	
	H006-0316000	A190722	FOM-P271	CONNECTOR, fuel and oil hose, 3/16 in., 1/8 in. male pipe end, complete (with nut) (rear pressure line to primer distributor line hose) (WH-281120).....	1
	H006-0313100	A190721A	FOM-P272	CONNECTOR, fuel and oil hose, 3/16 in., 1/8 in. short heavy duty tube fitting end, complete (with nuts and sleeve) (rear pressure line to primer distributor line hose (WH-281140).....	1
	H006-0313650	CNGX2AC	FOM-P165	CONNECTOR, fuel and oil hose, 3/8 in., 1/4 in. male pipe end, complete (with nut) (carburetor by-pass to right fuel tank filler pipe hose) (WH-281122).....	1
	H006-0314625	CNGX3C	FOM-P166	CONNECTOR, fuel and oil hose, 3/8 in., 5/16 in. tube end, complete (with nut) (male) (carburetor by-pass to right fuel tank filler pipe hose) (WH-281132).....	1
	H006-0313660	CNGX2AD	FOM-P162	CONNECTOR, fuel and oil hose, 1/2 in., 3/8 in. male pipe end, complete (with nut) (fuel pump to carburetor hose (1), tee to fuel filter hose (1), fuel filter to fuel pump hose (1), right fuel tank to tee hose (1), fuel tank to fuel overflow line hose (1), and left fuel tank to tee hose (1)) (WH-281123)	6
	H006-0314665	CNGX3F	FOM-P163	CONNECTOR, fuel and oil hose, 1/2 in., tube end, complete (with nut) (male) (fuel pump to carburetor hose (1), tee to fuel filter hose (1), fuel filter to fuel pump hose (1), right fuel tank to tee hose (1), and left fuel tank to tee hose (1)) (WH-281133)...	5
	H006-0313150	CNGX1D	FOM-P164	CONNECTOR, fuel and oil hose, 1/2 in. short heavy duty tube fitting end, complete (with nut) (fuel tank to fuel overflow line hose) (WH-281143).....	1
	H006-0318125	B183358E	FOM-P178	CONNECTOR, tube, heavy duty, short, 3/8 in., 1/4 in. male pipe end, complete (with sleeve) (engine right fuel tank filler pipe hose to tee at carburetor).....	1
03-12	H006-0318105	B183358B	FOM-P278	CONNECTOR, tube, heavy duty, short, 3/16 in., 1/8 in. male pipe end, complete (with sleeve and nut) (fuel primer line to filter outlet tee) (WH-8205X3C).....	1
03-9	H006-0318100	B183558B	FOM-P277	CONNECTOR, tube, heavy duty, short, 1/8 in. male pipe end, complete (with sleeve and nut) (rear pressure line to hose) (WH-8205X2C).....	1
	H006-0318145	B183358G	FOM-P176	CONNECTOR, tube, heavy duty, short, 1/2 in., 3/8 in. male pipe end, complete (with sleeve and nut) (engine fuel pump hose to tee at carburetor (1), and fuel filter hose to fuel pump (1)) (WH-8205X8).....	2
03-12	H006-0264006	B7269N	FOM-P175	ELBOW, stght., br., 45°, 3/8 in. (fuel filter outlet).....	1
03-12	H006-0264044	B7269C	FOM-P182	ELBOW, stght., br., 90°, 3/8 in. (fuel pump hose to pump (1), fuel filter inlet (1), and outlet (1)).....	3
03-9	H006-0264448		FOM-P285	ELBOW, stght., M.I. 45°, beaded, glvd., 3/4 in. (fuel tank drip shield nipple to drain pipe).....	2
03-9	H006-0265005	A156484	FOM-P276	ELBOW, street, br., 45°, 1/8 in. (rear pressure line to hose).....	1
03-9,12	H006-0265770	B7270C	FOM-P181	ELBOW, street, br., 90°, 3/8 in. (fuel overflow line hose to fuel tank (2), fuel pump hose tee to carburetor (1), fuel pump hose to pump (1), fuel filter inlet (1), and outlet (1)).....	6
03-9	G167-0168004		FOM-P184	ELBOW, tube, heavy duty, short, 45°, 3/8 in., 1/4 in. male pipe end, complete (with nut and sleeve) (fuel shut-off valve to hose) (WH-8355X8).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-9	H006-0331050	A183361A	FOM-P275	ELBOW, tube, heavy duty, short, 90°, 1/8 in., male pipe end, complete (with sleeve and nut) (pressure line to primer distributor) (WH-8405X2C).....	1
03-12	H006-0329095	A191243G	FOM-P186	ELBOW, tube, heavy duty, short, 90°, 1/2 in., 3/8 in. female pipe end, complete (with nut and sleeve) (hose to fuel filter inlet) (WH-8455X8).....	1
03-9	G167-0217824		FOM-60X1053B	HOSE, engine carburetor by-pass to engine right tank filler pipe, assembly (3/8 in. I.D. x 89 in. long) (Includes: CONNECTORS, FOM-P165 and FOM-P166)...	1
	G214-7036525		FOM-60X1053B-1	HOSE, engine carburetor by-pass to engine right fuel tank filler pipe (3/8 in. I.D. x 87 in. long) (See HOSE, FOM-P4602, group 2304P).....	1
03-9	G167-0217819		FOM-60X1047B	HOSE, engine fuel filter to engine fuel pump, assembly (1/2 in. I.D. x 25 1/4 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163).....	1
	G214-7036526		FOM-60X1047-B-1	HOSE, engine fuel filter to engine fuel pump (1/2 in. I.D. x 22 1/2 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
	G167-0217818		FOM-60X1046B	HOSE, engine fuel pump to engine carburetor, assembly (1/2 in. I.D. x 7 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163).....	1
	G214-7036527		FOM-60X1046B-1	HOSE, engine fuel pump to engine carburetor (1/2 in. I.D. x 4 3/8 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
03-9	G167-0217823		FOM-60X1051B	HOSE, engine fuel tank to fuel overflow line, assembly (1/2 in. I.D. x 6 3/4 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163).....	2
	G214-7036528		FOM-60X1051B-1	HOSE, engine fuel tank to engine fuel overflow line (1/2 in. I.D. x 4 13/16 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
03-9	G167-0217821		FOM-60X1049B	HOSE, engine left fuel tank to tee, assembly (1/2 in. I.D. x 30 3/8 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163).....	1
	G214-7036527		FOM-60X1049B-1	HOSE, engine left fuel tank to tee (1/2 in. I.D. x 27 3/4 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
03-9	G214-7036530		FOM-60X1069D-1	HOSE, overflow, engine fuel tank drip shield (1 in. I.D. x 19 in. long).....	2
03-9	G167-0407847		FOM-60X1074B	HOSE, rear pressure line to engine fuel primer distributor line, assembly (3/16 in. I.D. x 12 in. long) (Includes: CONNECTORS, FOM-277 and FOM-278)....	1
	G214-7036531		FOM-60X1074B-1	HOSE, rear pressure line to engine fuel primer distributor line (3/16 in. I.D. x 10 1/2 in. long) (See HOSE, FOM-P4600, group 2304P).....	1
03-9	G167-0217820		FOM-60X1048B	HOSE, engine right and left fuel tank hose connecting tee to engine fuel filter, assembly (1/2 in. I.D. x 59 1/4 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163)	1
	G214-7036532		FOM-60X1048B-1	HOSE, engine right and left fuel tank hose connecting tee to engine fuel filter (1/2 in. I.D. x 56 1/4 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
	G167-0217822		FOM-60X1050B	HOSE, engine right fuel tank to tee, assembly (1/2 in. I.D. x 30 in. long) (Includes: CONNECTORS, FOM-P162 and FOM-P163).....	1
	G214-7036533		FOM-60X1050B-1	HOSE, engine right tank to tee (1/2 in. x 30 in. long) (See HOSE, FOM-P4603, group 2304P).....	1
03-9	G167-0407842		FOM-6X1067B	LINE, overflow, right fuel tank to left fuel tank (64 in. long) (See TUBING, FOM-P4405, group 2304P).....	1
03-9	G167-0407844		FOM-6X1076B	LINE, pressure, hose to engine fuel primer distributor (20 1/2 in. long) (See TUBING, FOM-P4400, group 2304P).....	1
03-9	G167-0407843		FOM-6X1075B	LINE, pressure, engine field primer pump to union (13 ft. 8 1/2 in. long) (See TUBING, FOM-P4400, group 2304P).....	1
03-9	G168-7037065		FOM-6X1081B	LINE, pressure, union to engine fuel priming hose (22 ft. 6 1/2 in. long) (See TUBING, FOM-P4400, group 2304P).....	1

GROUP 03—FUEL SYSTEM

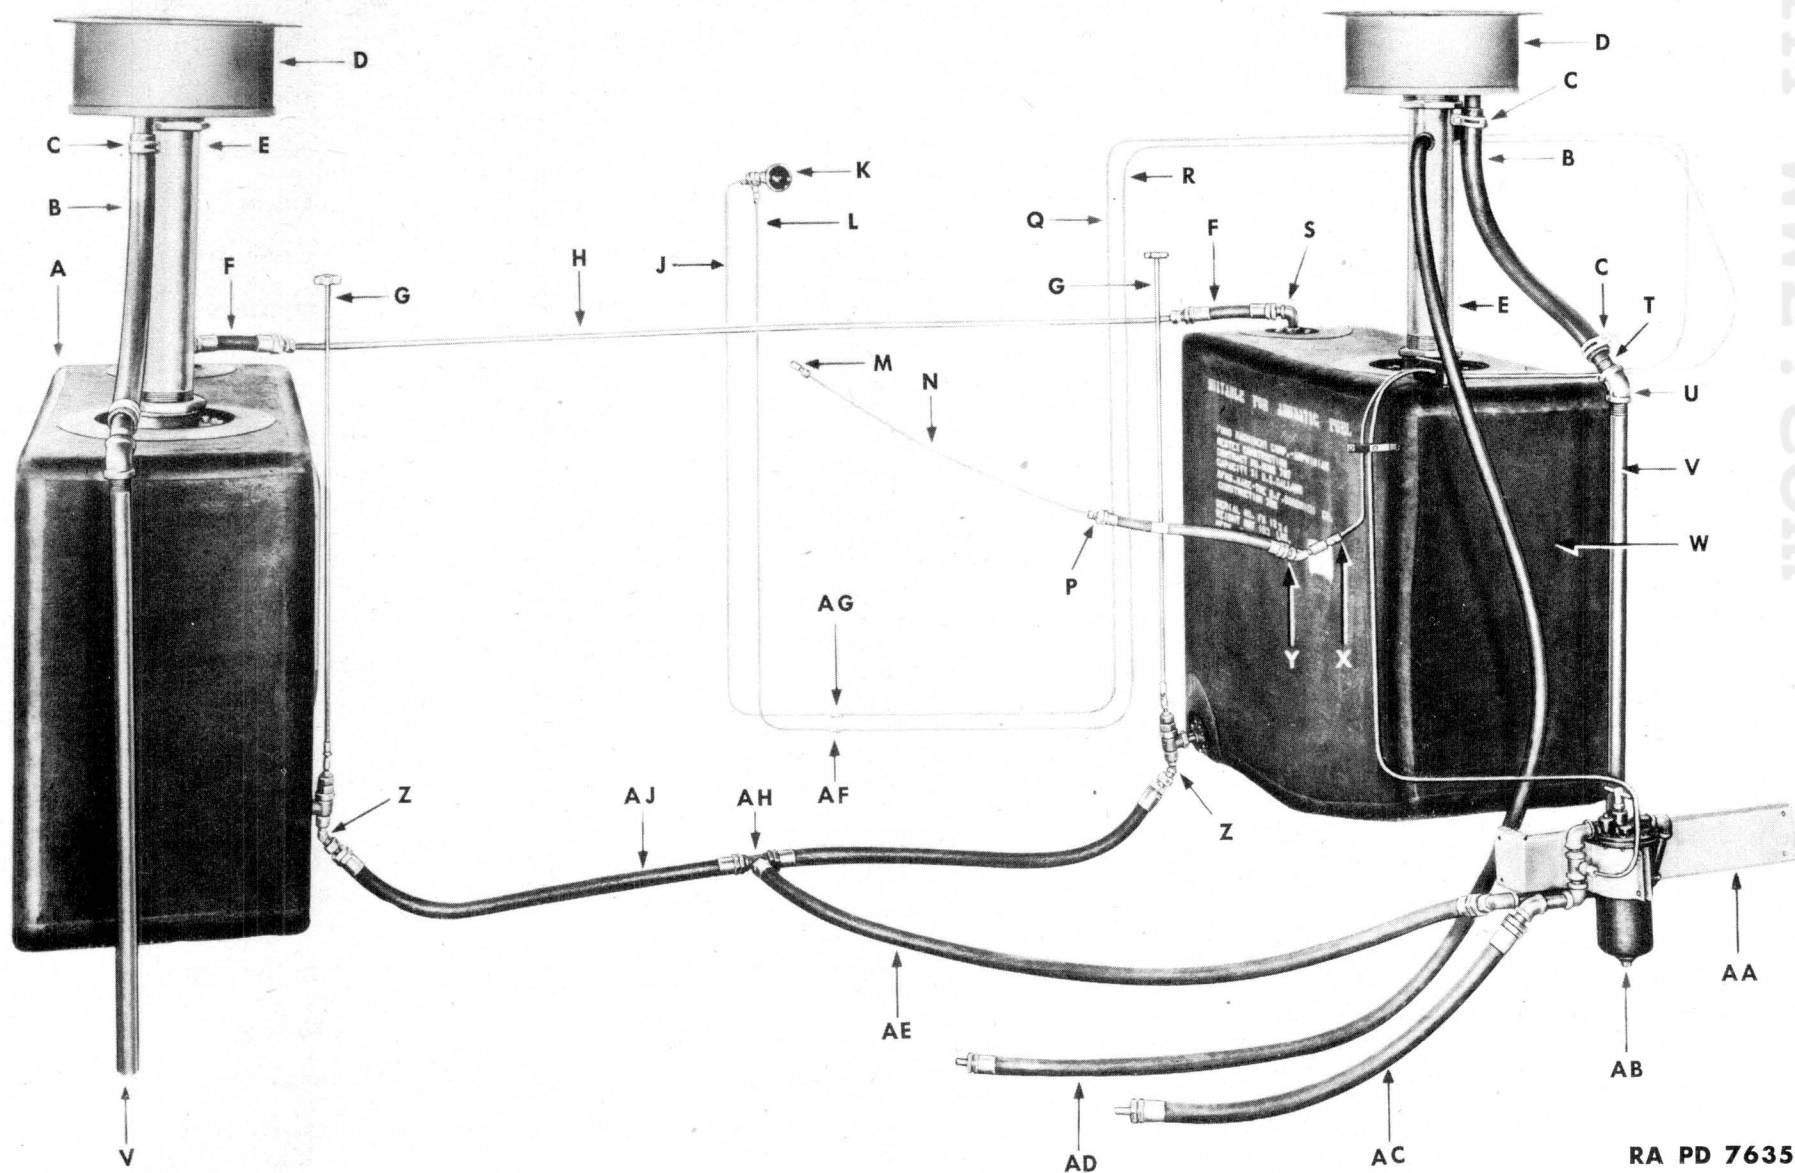

RA PD 76352

FIGURE 03-9—FUEL SYSTEM

Key	Part Name	Part Number	Group Number
A	TANK, assembly	FOM-61X1029CL	0300
B	HOSE	FOM-60X1069D 1	0304
C	CLAMP	FOM-P283	0304
D	SHIELD (not serviced)	FOM-60X1062C	
E	PIPE, assembly	FOM-61X1032D	0300
F	HOSE, assembly	FOM-60X1051B	0304
G	VALVE, w HANDLE, assembly	FOM-60X1073B	0300-1
H	LINE	FOM-6X1067B	0304
J	LINE	FOM-6X1075B	0304
K	PUMP, assembly	FOM-P909	0308A-1
L	LINE	FOM-6X1077B	0304
M	ELBOW	FOM-P275	0304
N	LINE	FOM-6X1076B	0304
P	HOSE, assembly	FOM-60X1074B	0304
Q	LINE	FOM-6X1082B	0304
R	LINE	FOM-6X1081B	0304
S	ELBOW	B7270C	0304
T	NIPPLE	FOM-P287	0304
U	ELBOW	FOM-P285	0304
V	PIPE	FOM-60X1069D 2	0304
W	TANK, assembly	FOM-61X1029CR	0300
X	CONNECTOR	FOM-P277	0304
Y	ELBOW	A156484	0304
Z	ELBOW	FOM-P184	0304
AA	MOUNT, assembly	FOM-30X1119C	0306
AB	FILTER, assembly	FOM-P282	0306
AC	HOSE, assembly	FOM-60X1047B	0304
AD	HOSE, assembly	FOM-60X1053B	0304
AE	HOSE, assembly	FOM-60X1048B	0304
AF	UNION	FOM-P570	0304
AG	UNION	FOM-P571	0304
AH	TEE	FOM-P185	0304
AJ	HOSE, assembly	FOM-60X1049B	0304


FIGURE 03-9—FUEL SYSTEM

RA PD 76352C

0304

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0304—FUEL LINES (Contd)	
03-9	H006-0272100	CPNX1ET	FOM-P287	NIPPLE, engine fuel tank drip shield overflow hose to pipe (pipe, S., std., long, black, 3/4 x 4).....	2
	G167-0307556		FOM-61X1032D-3	NIPPLE, hose, engine, fuel tank drip shield (WH-27228X16).....	2
	G168-7037041		FOM-P612	PAD, tee to engine fuel filter hose (felt, gray, 13 x 3 1/4 x 5/16 in. thk.).....	1
	G214-7036534		FOM-60X1069DL-2	PIPE, drain, bullet sealing fuel tank drip shield (Welded to floor).....	1
03-9	G214-7036535		FOM-60X1069DR-2	PIPE, drain, bullet sealing fuel tank drip shield (Welded to floor).....	1
	G214-7036536		FOM-8X1036B	SPACER, fuel line 1/2 in. hose supporting clip (1/2 in.).....	4
03-12	G167-0398492		FOM-P174	TEE, engine fuel filter, outlet (stght., br., beaded, 3/8 in. x 3/8 in. x 1/8 in.).....	1
03-9	H006-0287015	B7269Z	FOM-P185	TEE, engine left fuel tank hose to engine right fuel tank hose (1), and engine fuel pump hose to carburetor (1) (stght., br., 3/8 in.).....	2
03-9	G167-0407845		FOM-6X1077B	LINE, suction, union to engine fuel primer pump (13 ft. 8 1/2 in. long) (See TUBING, FOM-P4401, group 2304P).....	1
03-9	G168-7037064		FOM-6X1082B	LINE, suction, tee at engine fuel filter to union (25 ft. long) (See TUBING, FOM-P4401, group 2304P).....	1
			FOM-P279	LOOM, engine fuel priming lines (7/32 in. I.D. x 8 ft. 6 1/2 in. long).....	1
03-12	H006-0270205	CPNX2CQ	FOM-P171	NIPPLE, engine fuel filter, inlet (pipe, br., std., long, 3/8 x 3 1/2).....	1
03-12	G167-0307550		FOM-P187	NIPPLE, engine fuel filter, inlet (pipe, br., standard, long, 3/8 x 8 1/4).....	1
03-12	H006-0270195	CPNX2CM	FOM-P172	NIPPLE, engine fuel filter, outlet (pipe, br., std., long, 3/8 x 2 1/2).....	1
	G167-0307457		FOM-P611	NIPPLE, engine fuel pump hose to pump (pipe, br., std., long, 3/8 x 2 3/4).....	1
03-12	H006-0270015	CPNX2CC	FOM-P173	NIPPLE, engine fuel shut-off valve to tank (2) engine fuel pump hose tee to carburetor (1), and fuel filter outlet (2) (pipe, br., std., close, 3/8 x 1).....	5
03-9	H006-0392600	B183360A	FOM-P570	UNION, tube, heavy duty, short, 1/8 in., complete (with sleeves and nuts) (engine primer pump front and rear pressure lines) (WH-8305X2C).....	1
03-9	H006-0392610	B183360B	FOM-P571	UNION, tube, heavy duty, short, 3/16 in., complete (with sleeves and nuts) (engine primer pump front and rear suction lines) (WH-8305X3C).....	1
				0305—GOVERNOR	
03-10	G214-7036537		PG-G5296M	BASE, engine governor.....	1
03-10	7260-X824		PG-X824	SCREW, cap, S., No. 10 (0.190)-24NC-3 x 3/4.....	4
03-10	H001-1518005	BE CX1E	PG-X540	WASHER, lock, reg., S., No. 10 (0.190).....	4
03-10	H012-0710046	710046	PG-X328	BEARING, ball, annular, single row, dustproof, 0.4375 bore, 0.9062 O.D., 5/16 width (engine governor rocker shaft).....	2
03-10	H012-0710045	710045	PG-X317	BEARING, ball, thrust, annular, single row, shielded, 0.502 bore, 1 17/64 O.D., 7/16 width (engine governor drive shaft).....	2
03-10	G214-7036538		PG-G5847M	BODY, engine governor.....	1
	G214-7033696		PG-G5294	BRACKET, engine governor auxiliary spring adjusting screw.....	1
03-10	G214-7033697		PG-A2161	BRACKET, engine governor auxiliary spring adjusting screw, assembly.....	1
03-10	H001-0824030	BFCX1CC	PG-X82	PIN, taper, S., No. 1 (0.172) x 1.....	1

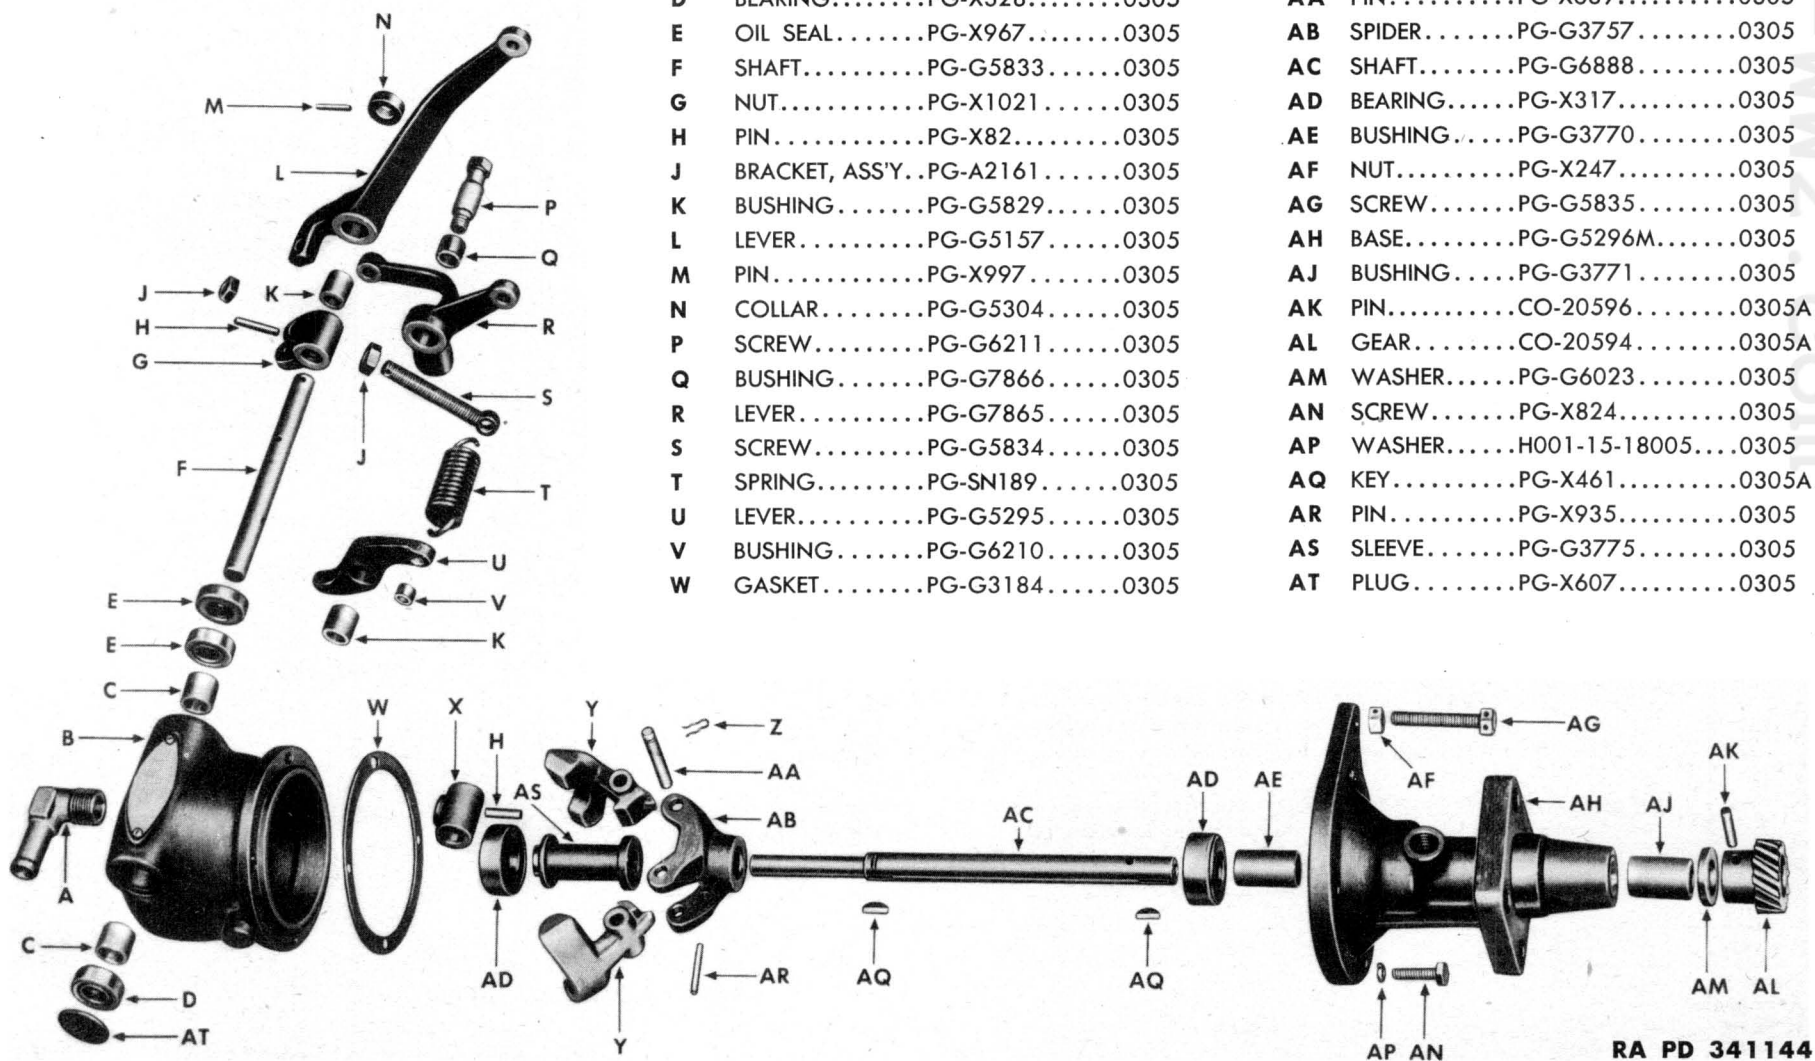


RA PD 341144

FIGURE 03-10—GOVERNOR ASSEMBLY—EXPLODED VIEW

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0305—GOVERNOR (Contd)	
03-10	G509-0129218		PG-G3770	BUSHING, engine governor drive shaft, lower.....	1
03-10	G038-0111826		PG-G3771	BUSHING, engine governor drive shaft, upper.....	1
03-10			PG-G6210	BUSHING, engine governor speed adjusting lever (S., cd-pltd., 5/32 I.D. x 0.375 O.D. x 1/4 in. lgh.).....	1
03-10	G038-0111827		PG-G5829	BUSHING, engine governor throttle control lever (1), governor speed adjusting lever (1) (S., 0.459 I.D. x 9/16 O.D. x 19/32 in. lgh.).....	1
03-10	G104-0100282		PG-G3774	BUSHING, engine governor thrust sleeve yoke (S., 15/32 I.D. x 5/8 O.D. x 31/64 in. lgh.).....	1
03-10			PG-G7866	BUSHING, engine governor variable speed control lever.....	1
	G214-7036539		PG-G5831	BUTTON, contact, engine governor adjustment bracket (S., 1/2 diam. head, 1/4 diam. shank, 11/32 in. lgh.).....	1
	G214-7036540		PG-G5830	BUTTON, contact, engine governor throttle lever (S., oval-hd., 1/2 diam. head, 1/4 diam. shank, 13/32 in. lgh.).....	1
03-10	G214-7036541		PG-G5304	COLLAR, engine governor throttle control lever (S., cd-pltd., 0.437 I.D. x 3/4 O.D. x 5/16 in. lgh.).....	1
03-10	H001-4568562		PG-X997	PIN, S., zn-pltd., 1/8 x 3/4 (Groov-Pin-Corp., style No. 1).....	1
03-10	G104-0100649		PG-G3184	GASKET, engine governor body.....	1
01-2,03-11	G167-0202284		CO-A4960	GOVERNOR, engine, assembly (PG-GC-309).....	1
	G214-7036542		CO-EQ5263	GOVERNOR, engine, w/control LINKS, assembly.....	1
01-21	G103-0104100	A166458	CO-2441	NUT, light, hex., alloy-S., cd-pltd., 3/8-24NF-3.....	4
01-21	G103-0104265	A139770	CO-2561	PALNUT, light, S., cd-pltd., 3/8-24NF.....	4
01-21	G103-0106185	A166236	CO-20624	STUD, alloy-S., cd-pltd., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1 9/16 (standard size) (sq-end.).....	4
	G167-0392287		CO-20624-03	STUD, alloy-S., cd-pltd., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1 9/16 (0.003 oversize) (pointed end).....	as req.
	G214-7036543		CO-20624-06	STUD, alloy-S., cd-pltd., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1 9/16 (0.006 oversize) (ck-end.).....	as req.
	G214-7036546		CO-20624-09	STUD, alloy-S., cd-pltd., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (9/16) x 1 9/16 (0.009 oversize) (dld-end.).....	as req.
01-21	G103-0106960	A139760	CO-2475	WASHER, plain, S., cd-pltd., 7/16 in. (29/84 I.D. x 13/16 O.D. x 5/64 in. thk.).....	4
01-2	G103-0106480	A190520	CO-A20645	HOSE, oil feed, engine governor, assembly.....	1
	G104-0101003	BGAX4D	PG-X461	KEY, Woodruff, ni-S., 3/32 x 1/2 (NO. 304) (engine governor weights spider).....	1
03-10	G038-0134671		PG-G5157	LEVER, engine governor throttle control.....	1
01-2	G214-7036549		PG-A2159	LEVER, engine governor throttle control, assembly.....	1
03-10	G214-7036545		PG-G7863	LEVER, engine governor variable speed control.....	1
	G214-7036550		PG-A2181	LEVER, engine governor variable speed control, assembly.....	1

KEY	PART NAME	PART No.	GROUP
A	SCREW.....	CO-22787.....	0305A
B	WASHER.....	CO-22786.....	0305A
C	BEARING.....	CO-22791.....	0305A
D	END.....	CO-22782.....	0305A
E	NUT.....	CO-2439.....	0305A
F	ROD.....	CO-20811.....	0305A
G	SCREW.....	CO-22789.....	0305A
H	SPACER.....	CO-22785.....	0305A
J	END.....	CO-22780.....	0305A
K	LEVER.....	CO-22096.....	0305A
L	GASKET.....	CO-20595.....	0305A
M	PIN.....	CO-20596.....	0305A
N	GEAR.....	CO-20594.....	0305A
P	KEY.....	PG-X461.....	0305A
Q	PIN.....	AIR-AN380-2-2 ..	0305A
R	NUT.....	AIR-AN320-4....	0305A
S	TUBE.....	PG-G6400.....	0305A
T	ROD.....	PG-G7059.....	0305A
U	NUT.....	CO-2456.....	0305A
V	SPACER.....	CO-22784.....	0305A
W	SCREW.....	CO-22788.....	0305A
X	END.....	CO-22781.....	0305A
Y	SPACER.....	CO-22783.....	0305A
Z	GOVERNOR, ASS'Y..	CO-A4960.....	0305A

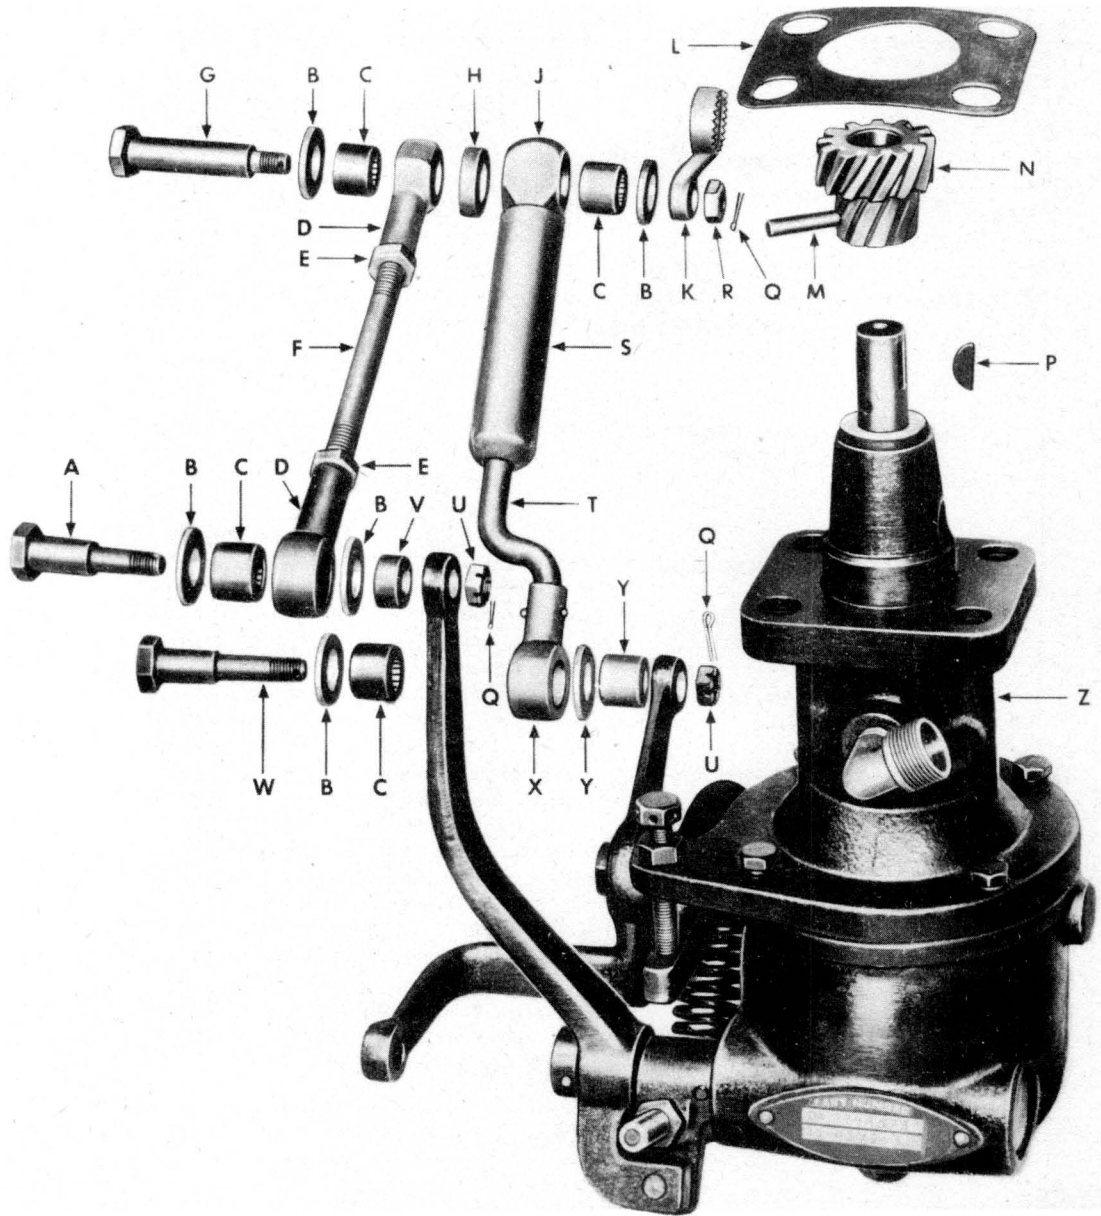


RA PD 341145

FIGURE 03-11—GOVERNOR AND CONTROL RODS—EXPLODED VIEW

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0305—GOVERNOR (Contd)	
03-10	G038-0134695		PG-G5295	LEVER, speed adjusting, engine governor.....	1
	G214-7036551		PG-A2160	LEVER, speed adjusting, engine governor, assembly.....	1
03-10			PG-G6211	SCREW, shoulder, S., cd-pltd., hex-hd., 5/8-16NC-3 x 1 11/16.....	1
03-10	7260-X967		PG-X967	OIL SEAL, engine governor rocker shaft bearing (Servene No. 80, 7/16 I.D. x 1.005 O.D. x 5/16 in. thk.).....	1
	G104-0101713	BEDX1CB	PG-X532	PLUG, expansion, engine governor body (br., 5/16 diam.).....	1
03-10	G162-1583726	BEDX1EN	PG-X607	PLUG, expansion, engine governor rocker shaft hole (al., 15/16 diam.).....	1
03-10	G038-0172821		PG-G5834	SCREW, adjusting, engine governor spring (eye, S., 5/16-24NF-2 x 2 1/2).....	1
03-10	H001-0716022	BBDX1B	PG-X1021	NUT, jam, hex., s-fin., S., 5/16-24NF-2.....	2
03-10		BCBX3AB-1	PG-G5835	SCREW, adjusting, engine governor spring.....	1
03-10			PG-X247	NUT, S., cd-pltd., 1/4-28NF-2, 7/16 hex., 7/32 width, 1/64 boss.....	1
03-10	G214-7036552		PG-G6888	SHAFT, drive, engine governor.....	1
03-10	G038-0169089		PG-G5833	SHAFT, engine governor rocker yoke (S., 0.4370 diam. x 4 3/4 lgh.).....	1
03-10	G104-0102526		PG-G3775	SLEEVE, thrust, engine governor drive shaft (S., 5/8 and 15/16 diam. x 1 55/64 lgh.).....	1
03-10	G104-0102635		PG-G3757	SPIDER, engine governor weights (M.I.).....	1
03-10	G104-2979807		PG-X935	PIN, 1/8 x 7/8 (Groov-Pin Corp.).....	1
03-10	G038-0172561		PG-SN189	SPRING, tension, engine governor (spring-S., wire, 25/32 O.D., 2 3/16 free lgh.).....	1
			PG-G7875	STUD, engine governor speed change lever.....	1
03-10	7260-G6023		PG-G6023	WASHER, thrust, engine governor drive gear (br., 33/64 I.D. x 15/16 O.D. x 1/8 in. thk., 3/32 milled slots).....	1
03-10	G104-0103536		PG-G3098	WEIGHT, engine governor spider.....	2
03-10			PG-X689	PIN, cotter (hairpin type).....	2
03-10	F005-0108277		PG-G3167	PIN, S., 1/4 diam. x 1 9/16 lgh.....	2
03-10	G104-0103580		PG-G4058	YOKE, engine governor rocker (S., 2 5/16 lgh. 0.4375 diam. hole for shaft, 1 1/16 width).....	1
	H001-0824030	BFCX1CC	PG-X82	PIN, taper, S., No. 1 (0.172) x 1.....	1
				0305A—GOVERNOR CONTROLS	
03-11	G167-0118028	A230662	CO-22791	BEARING, rod end, engine governor throttle rod (2), governor speed control rod (2)....	4
			PG-G6402	BUSHING, engine governor speed control rod tube (S., cd-pltd., 21/64 I.D. x 0.655 O.D. x 5/16 in. lgh.).....	1
03-10	G103-0101890	A190531	CO-22099	ELBOW, engine governor oil drain.....	1
03-11	G167-0373270	A230651	CO-22781	END, engine governor speed control rod (PG-G7070).....	1
	G214-7036553		PG-A1977	END, engine governor speed control rod, w/BEARING, assembly.....	1
			PG-X945	PIN, dowel, S., 3/32 x 1/2.....	1
	G167-0373271	A230652	CO-22780	END, engine governor speed control rod tube (PG-G7069).....	1
	G214-7036554		PG-A1978	END, engine governor speed control rod tube, assembly.....	1
	H001-4568562		PG-X997	PIN, dowel, S., 1/8 x 3/4.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-11	G167-0373269		CO-22782	END, engine governor throttle rod (PG-G7071).....	2
	G214-7036558		PG-A1979	END, engine governor throttle rod, assembly.....	2
03-11	G103-0104080	A143866	CO-2439	NUT, light, hex., alloy-S., cd-pltd., 3/16-24NF-3.....	2
01-21,03-11	G103-0102820	A166229	CO-20595	GASKET, engine governor to pulley support (vellumoid, 1/32 in. thk.).....	1
03-10,11	G103-0103242	A190518	CO-20594	GEAR, drive, engine governor.....	1
03-10,11	G103-0104305	A190519	CO-20596	PIN, retaining, engine governor drive gear.....	1
	G103-0106480		CO-A20645	HOSE, engine governor oil feed, assembly.....	1
03-10,11	G104-0101003	BGAX4D	PG-X461	KEY, Woodruff, ni-S., 3/32 x 1/2 (No. 304) (engine governor drive gear).....	1
03-11	G103-01-03555	A190529	CO-22096	LEVER, engine governor to carburetor.....	1
	G103-0103666		CO-20700	NIPPLE, connecting, engine governor oil feed line.....	1
03-11	G214-7033698		PG-G7059	ROD, engine governor speed control.....	1

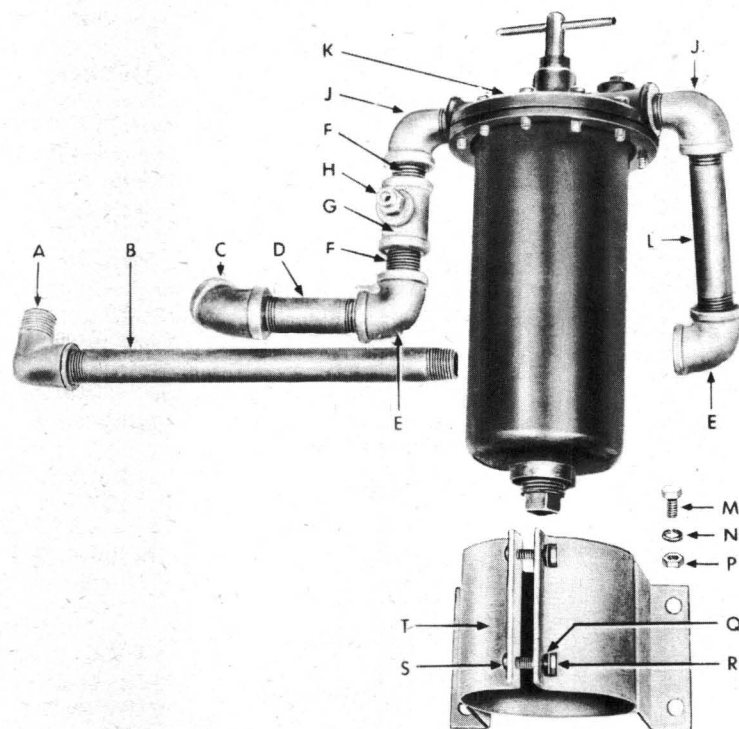

Key	Part Name	Part Number	Group Number
A	ELBOW.....	FOM-P186.....	.0304
B	NIPPLE.....	FOM-P187.....	.0304
C	ELBOW.....	B7269N.....	.0304
D	NIPPLE.....	FOM-P172.....	.0304
E	ELBOW.....	B7269C.....	.0304
F	NIPPLE.....	CPNX2CC.....	.0304
G	TEE.....	FOM-P174.....	.0304
H	CONNECTOR.....	FOM-P278.....	.0304
J	ELBOW.....	B7270C.....	.0304
K	FILTER, assembly.....	FOM-P282.....	.0306
L	NIPPLE.....	FOM-P171.....	.0304
M	SCREW.....	BCAX3A.....	.0306
N	WASHER.....	BEAX1H.....	.0306
P	NUT.....	BBAX1A.....	.0306
Q	WASHER.....	BEAX1F.....	.0306
R	NUT.....	FOM-P225.....	.0306
S	SCREW.....	FOM-P224.....	.0306
T	CLAMP, w/BRACKET, assembly.....	FOM-30X1191C.....	.0306


FIGURE 03-12—FUEL FILTER ASSEMBLY AND RELATED PARTS

RA PD 341146 0305A

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
0305A—GOVERNOR CONTROLS (Contd)					
01-2,03-11	G103-0104990		CO-A22779	ROD, engine governor speed control, assembly (Includes: bearings, bushings, ends, pins, spring, tube, washer) (PG-A1976).....	1
	G103-0105051		CO-20811	ROD, engine governor throttle (PG-G5701).....	1
	G103-0104991		CO-A22790	ROD, engine governor throttle, assembly (Includes: bearings, ends, and nuts) (PG-A1980).....	1
03-11	G167-0124253	BBFX1AA-1	CO-22788	SCREW, engine governor speed control rod to speed control lever.....	1
03-11	H001-4013501		CO-2456	NUT, castle, alloy-S., cd-pltd., 1/4-28NF-2.....	1
03-11	A054-0338945		AIR-AN380-2-2	PIN, cotter, split, S., cd-pltd., 1/16 x 1/2.....	1
03-11	H001-1530009		CO-22786	WASHER, plain, S., cd-pltd., 3/8 in.....	2
03-11	G167-0381993	BBFX1AA-1	CO-22787	SCREW, throttle control rod to throttle lever.....	1
	H001-4013501		CO-2456	NUT, castle, alloy-S., cd-pltd., 1/4-28NF-2.....	1
	A054-0338945		AIR-AN380-2-2	PIN, cotter, split, S., cd-pltd., 1/16 x 1/2.....	1
			CO-22786	WASHER, plain, S., cd-pltd., 3/8 in.....	2
03-11	G167-0124254		CO-22789	SCREW, throttle control rod to speed control rod to throttle lever.....	1
03-11	G167-0314843		AIR-AN320-4	NUT, shear, hex., S., 1/4-28NF.....	1
	A054-0338945		AIR-AN380-2-2	PIN, cotter, split, S., cd-pltd., 1/16 x 1/2.....	1
			CO-22786	WASHER, plain, S., cd-pltd., 3/8 in.....	2
03-11	G167-0443023	A230655	CO-22783	SPACER, speed control rod.....	1
03-11	G167-0443023		CO-22784	SPACER, throttle control rod.....	1
03-11	G167-0443016	A230657	CO-22785	SPACER, throttle control rod to speed control rod.....	1
	G214-7036562		PG-SN142	SPRING, engine governor speed control rod.....	1
			PG-X714	WASHER, retaining spring.....	1
			PG-X713	PIN, cotter, split, S., 3/32 x 1/2.....	1
03-11			PG-G6400	TUBE, speed control rod spring.....	1
0306—FUEL FILTER					
03-13	2400-10636		CU-10636	CARTRIDGE, engine fuel filter, assembly.....	1
03-13	H001-1024213	BCGX4FF	CU-21665	SCREW, machine, oval-fil-hd., br., No. 10 (0.190)-32NF-3 x 3/8.....	2
03-13	H001-1518005	BE CX1E	CU-24396	WASHER, lock, reg., S., No. 10 (0.190).....	2
03-12	3267-30X1191C		FOM-30X1191C	CLAMP, engine fuel filter, w/BRACKET, assembly (Includes: attaching hardware).....	1
03-12	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	4
03-12	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	4
03-12	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	4
	G214-7036563		FOM-20X1811C-3	COVER, access, engine fuel filter (attached to engine room baffle).....	1
	H001-0716610		FOM-P225	NUT, regular, hex., s-fin., S., No. 10 (0.190)-32NF-2.....	1
			FOM-P288	SCREW, machine, rd-hd., cross recess type, S., No. 10 (0.190)-32NF-3 x 3/8.....	1
03-9,12	G103-0102100	A23091	FOM-P282	FILTER, fuel, engine, assembly (Includes: bracket) (CU-1167).....	1
03-13	G103-1593991		CU-7121	GASKET, engine fuel filter sump (cork, 3 I.D. x 4 O.D. x 1/32 in. thk.).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-13	2400-23004		CU-23004	GASKET, vent screw, engine fuel filter (lead, 3/16 I.D. x 3/8 O.D. x 1/16 in. thk.)	1
03-13	M009-0102890		CU-F-745	GLAND, packing, engine fuel filter	1
03-13	G214-7036564		CU-F-136	HANDLE, engine fuel filter	1
03-13	G214-7036566		CU-6490	HEAD, engine fuel filter	1
03-9	G214-7036589		FOM-30X1119C	MOUNT, engine fuel filter bracket, assembly (Includes: attaching hardware)	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	4
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	4
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	4
03-13			CU-F1258	NUT, gland, engine fuel filter	1
03-12	H001-4135680	BBKX2CA	FOM-P225	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-2 (fuel filter clamp)	2
03-13	G103-1733602		CU-1334-8	PACKING, engine fuel filter gland nut	1
03-13	H006-0283815	CPMX1AD	CU-F-359	PLUG, drain, engine fuel filter sump (pipe, sq-hd., black, 1/2 in.)	1
03-13			CU-F-609	PLUG, vent, engine fuel filter relief valve	1
03-13			CU-23003	SCREW, engine fuel filter vent (machine, oval-fil-hd., br., No. 10 (0.190)-32NF-3 x 3/16	1
03-12			FOM-P224	SCREW, machine, rd-hd., cross recess type, S., cd-pltd., No. 10 (0.190)-32NF-3 x 3/4 (engine fuel filter clamp)	2
03-13	G214-7036590		CU-6489	SUMP, engine fuel filter, assembly	1
03-13	H001-1026108	BCFX2CG	CU-24123	SCREW, machine, oval-fil-hd., S., No. 12 (0.216)-24NC-2 x 5/8	10
03-12	H001-1519007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210) (engine fuel filter clamp)	2

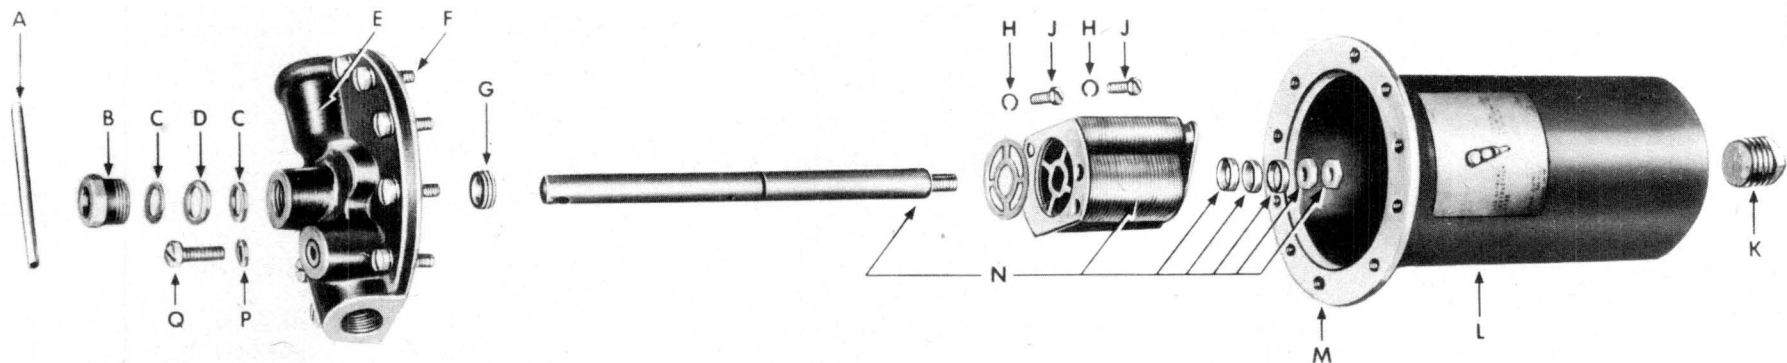

Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	HANDLE	CU-F-136	0306	F	SCREW	BCFX2CG	0306	L	SUMP	CU-6489	0306
B	NUT	CU-F-125B	0306	G	PLUG	CU-F-609	0306	M	GASKET	CU-7121	0306
C	GLAND	CU-F-745	0306	H	WASHER	BECX1E	0306	N	CARTRIDGE, assembly	CU-10636	0306
D	PACKING	CU-1334-8	0306	J	SCREW	BCGX4FF	0306	P	GASKET	CU-23004	0306
E	HEAD	CU-6490	0306	K	PLUG	CPMX1AD	0306	Q	SCREW	CU-23003	0306

FIGURE 03-13—FUEL FILTER ASSEMBLY—EXPLODED VIEW

RA PD 341147

0306

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0308A—PRIMING SYSTEM	
				0308A-1—PRIMER PUMP	
03-14	G104-0500071	DV-PR3-12		BALL, engine fuel primer pump check spring.....	2
03-14	G104-0100152	DV-PR3-50		BARREL, engine fuel primer pump, assembly (Includes: body, and packing gland).....	1
	G214-7033647	DV-PR31-70		BODY, engine fuel primer pump, assembly (Includes: barrel assembly, diaphragm, cap, gasket, spring, guide, screen, check plug, spring, and ball).....	1
	G214-7033648	DV-PR25-54		BODY, engine fuel primer pump, assembly (Includes: barrel assembly, plunger assembly, lock nut, packing, packing nut, and ring).....	1
03-14		DV-PR25-3		CAP, engine fuel primer pump barrel.....	1
03-14		DV-PR3-24		CAP, engine fuel primer pump diaphragm.....	1
03-14		DV-PR20-15		CONNECTOR, intake, engine fuel primer pump.....	1
03-14		DV-PR16-11		CONNECTOR, outlet, engine fuel primer pump.....	1
03-14	G104-0100488	DV-PR3-5		CUP, leather, engine fuel primer pump plunger.....	1
03-14		DV-PR3-10		NUT, jam, hex., br., No. 10 (0.190)-32NF-2.....	1
03-14		DV-PR3-55		NUT, jam, hex., br., No. 10 (0.190)-32NF-2.....	1
03-14	G104-0103356	DV-PR3-4		WASHER, engine fuel primer pump plunger cup.....	1
03-14	G104-0501075	DV-PR3-22		DIAPHRAGM, engine fuel primer pump.....	1
03-14	G104-0501282	DV-PR3-23		GASKET, engine fuel primer pump diaphragm cap (Fibre).....	1
03-14	G214-7033652	DV-PR3-21		GUIDE, engine fuel primer pump diaphragm spring.....	1
03-14	G104-2209202	DV-PR22-4		HANDLE, engine fuel primer pump plunger.....	1
	G214-7033653	DV-PR20-51		INTAKE, engine fuel primer pump, assembly (Includes: connector, spring, and ball)....	1
03-14	G104-0101223	DV-PR3-19		NUT, lock, engine fuel primer pump.....	1
03-14		DV-PR25-18		NUT, engine fuel primer pump gland packing.....	1
		DV-BU110		NUT, engine fuel primer pump intake connector.....	1
03-14		DV-BU010		NUT, engine fuel primer pump intake connector, w/SLEEVE, assembly.....	1
03-14		DV-BU100		NUT, engine fuel primer pump outlet connector.....	1
		DV-BU000		NUT, engine fuel primer pump outlet connector, w/SLEEVE, assembly.....	1
03-14	G104-0101379	DV-PR3-17		PACKING, engine fuel primer pump gland.....	3
03-14		DV-PR3-14		PLUG, check, engine fuel primer pump.....	1
	G214-7033654	DV-PR3-56		PLUNGER, engine fuel primer pump, assembly (Includes: stem, cup, cup washers, and nuts).....	1
	G104-0101719	DV-PR3-52		PLUNGER, engine fuel primer pump, assembly (Includes: stem, cup, cup washer, cup nuts, packing, packing rings, and packing nut).....	1
03-9	G168-7037061	FOM-P909		PUMP, engine fuel primer, assembly (DV-PR31).....	1
03-14	G104-0101867	DV-PR3-16		RING, engine fuel primer pump gland packing.....	2
03-14	G214-7033655	DV-PR8-27		SCREEN, engine fuel primer pump diaphragm.....	1
		DV-BU210		SLEEVE, engine fuel primer pump intake connector nut.....	1
03-14		DV-BU200		SLEEVE, engine fuel primer pump outlet connector nut.....	1

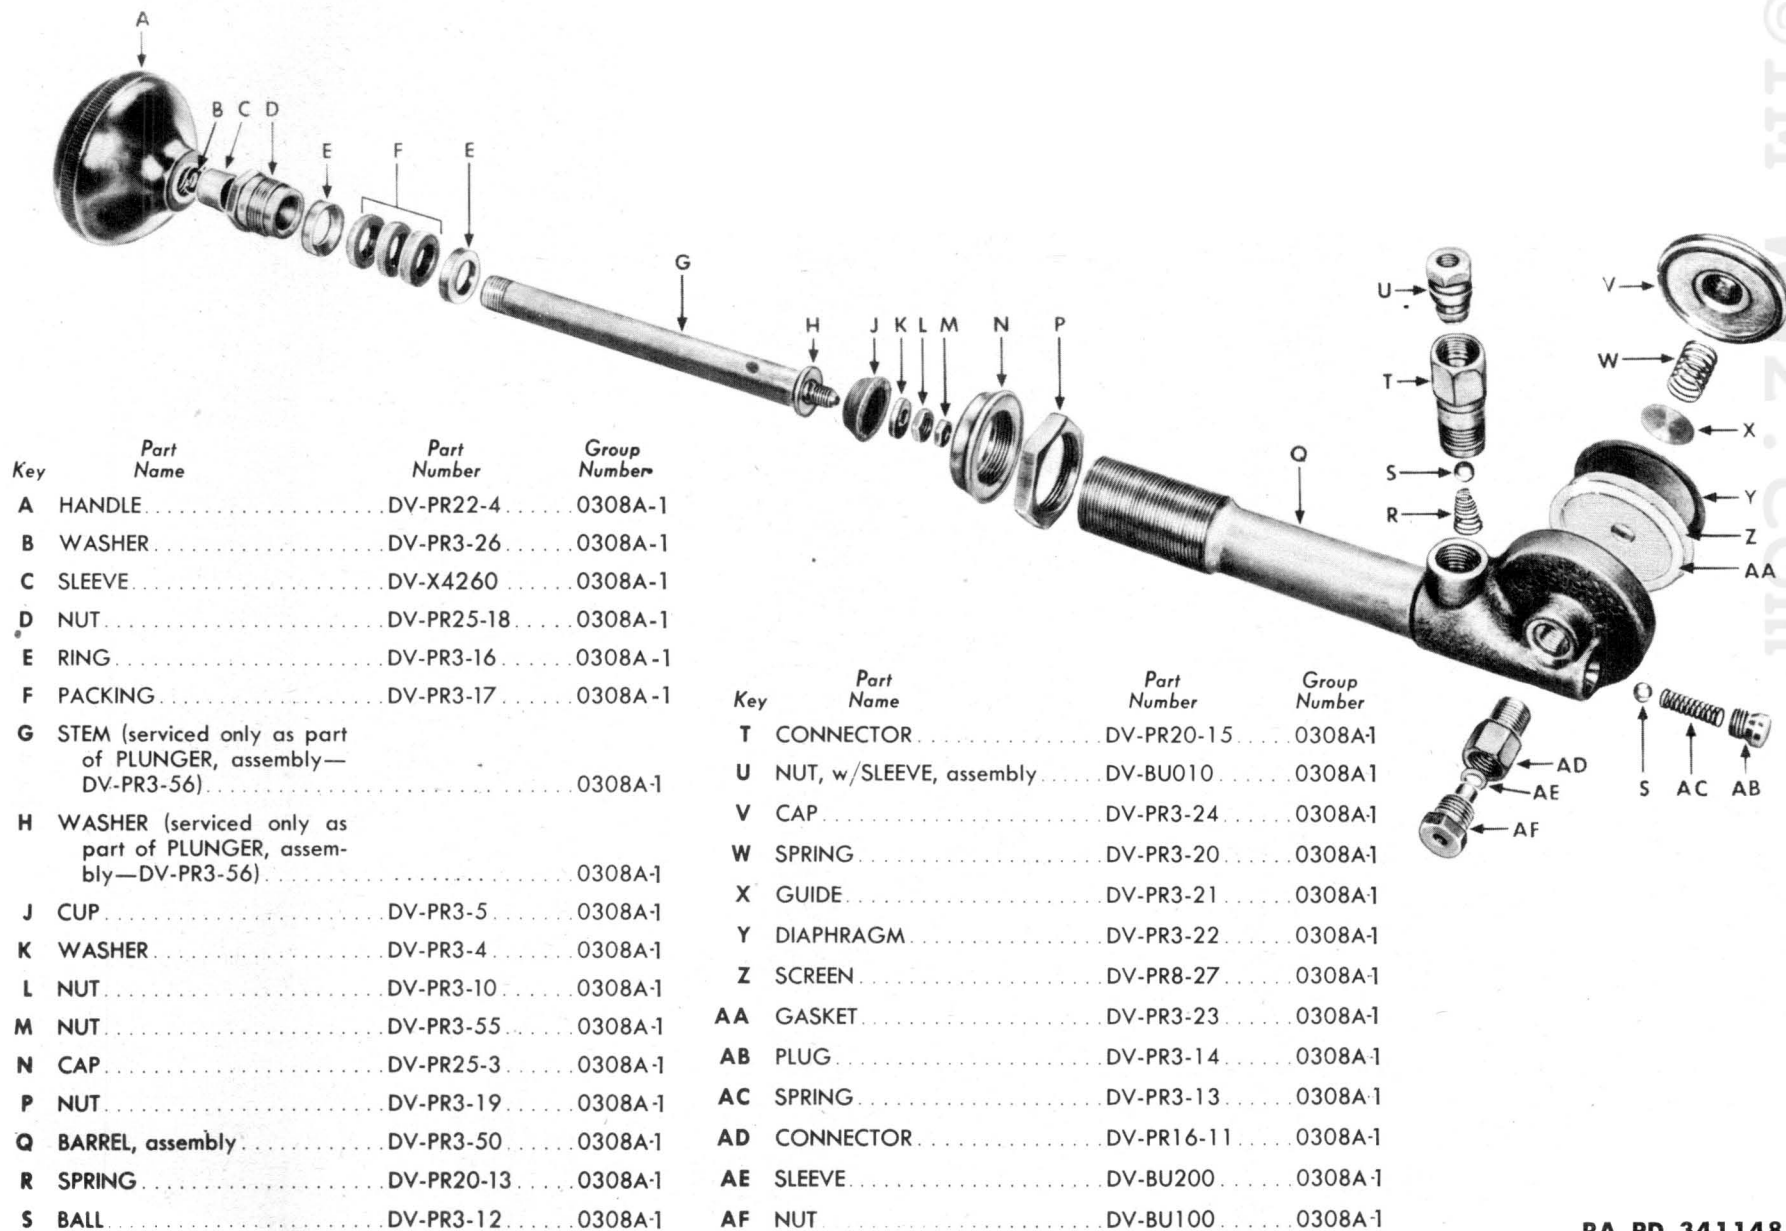



FIGURE 03-14—PRIMER PUMP ASSEMBLY—EXPLODED VIEW

RA PD 341148

0308A-1

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0308A-1—PRIMER PUMP (Contd)	
03-14			DV-X4260	SLEEVE, stop, engine fuel primer pump plunger handle.....	1
02-14	G214-7033656		DV-PR20-13	SPRING, check, engine fuel primer pump intake.....	1
03-14	G104-0504061		DV-PR3-13	SPRING, engine fuel primer pump check-plug.....	1
03-14	G104-0504075		DV-PR3-20	SPRING, engine fuel primer pump diaphragm.....	1
03-14	G104-0103412		DV-PR3-26	WASHER, lock, engine fuel primer pump plunger handle.....	1
				0308A-2—PRIMING DISTRIBUTOR AND TUBES	
03-15	G103-1538558	A193513	CO-20296	CLIP, mounting, engine fuel priming tubes to ignition harness.....	8
03-15	G103-1538559	A193512	CO-20721	CLIP, mounting, engine fuel priming tubes to ignition harness.....	19
	G103-2314841	A193555	AIR-AN345-10	NUT, machine screw, hex., S., cd-pltd., No. 10 (0.190)-32NF-2.....	12
	G103-0104060	A156959	CO-2437	NUT, regular, hex., alloy-S., cd-pltd., 1/4-28NF-3.....	7
	H001-0726005	A160946	CO-2886	PALNUT, light, S., cd-pltd., 1/4-28NF.....	7
03-15	H001-5127331	BCGX1.1BD-1		SCREW, machine, oval-fil-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 3/8 (AIR-AN501-10-6).....	12
	G103-0106222	A189127	CO-22001	STUD, alloy-S., cd-pltd., 1/4-20NC-3 (3/8) x 1/4-28NF-3 (5/16) x 3/4.....	7
	H001-1519007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190).....	12
	G167-0443021	A193514	CO-20522	WASHER, plain, S., 1/4 in.....	7
03-15	G103-1538357	A193515	CO-20559	CLIP, mounting, engine fuel priming tubes to intake pipe.....	7
	G103-1539880	A193510	CO-20720	CONE, engine fuel priming tube (S., 1/8 union).....	14
01-2,03-15	G103-1552101	B192255	CO-35105	DISTRIBUTOR, engine fuel priming system.....	1
03-15	G103-2124269	A193511	CO-22162	BOLT, "U", mounting, fuel priming distributor.....	1
	G103-1714651	A193554	AIR-AN315-3R	NUT, regular, hex., s-fin., S., No. 10 (0.190)-32NF-3.....	2
	H101-0147505	A162821	AIR-AN356-1032	PALNUT, S., cd-pltd., No. 10 (0.190)-32NF.....	2
	H101-0502244		AIR-AN960-10	WASHER, plain, S., cd-pltd., No. 10 (0.190).....	2
03-15	G168-6902540	E2540	CO-A6419	DISTRIBUTOR, engine fuel priming system, assembly (Includes: nipples, tubes, brackets, clips, and attaching hardware).....	1
03-15	G103-1643006	B192183	CO-3665	ELBOW, br., 1/8-27NPT, 5/16-32NF-2 (fuel priming tubes to cylinders).....	7
03-15	G103-1603616	A192964	CO-21512	GROMMET, fuel priming tubes (neoprene, 1/8 I.D. x 1/4 O.D. x 5/8 in. long).....	26
01-3	G103-1643005	A139752	CO-2351	JET, elbow, engine fuel primer.....	1
03-15	G103-1707411	A160618	AIR-AN780-2	NIPPLE, union, br., 1/8-27NPT, 5/16-32NF-2 (engine fuel priming distributor).....	7
	G103-1214461	A193556	AIR-AN805-2	NUT, union, br., 5/16-32NF-2 (engine fuel priming tubes).....	14
03-15	G103-0104610	A189115	CO-20975	PLUG, pipe, al., ck-hd., 1/8-27NPT x 3/8 (engine fuel priming distributor).....	1
	G103-0104614	A20188	CO-2024	PLUG, pipe, S., ck., 1/8 in. (cylinder head primer hole).....	7
03-15	G103-0104611	A189104	CO-20882	PLUG, pipe, S., sq-hd., dld. f/lkg-wire., 1/8-27NPT (engine fuel priming distributor).....	1
03-15	G103-1807899	B192236	CO-A3682	TUBE, engine fuel priming, cylinder No. 1, assembly (Includes: cones, grommets, and nuts).....	1

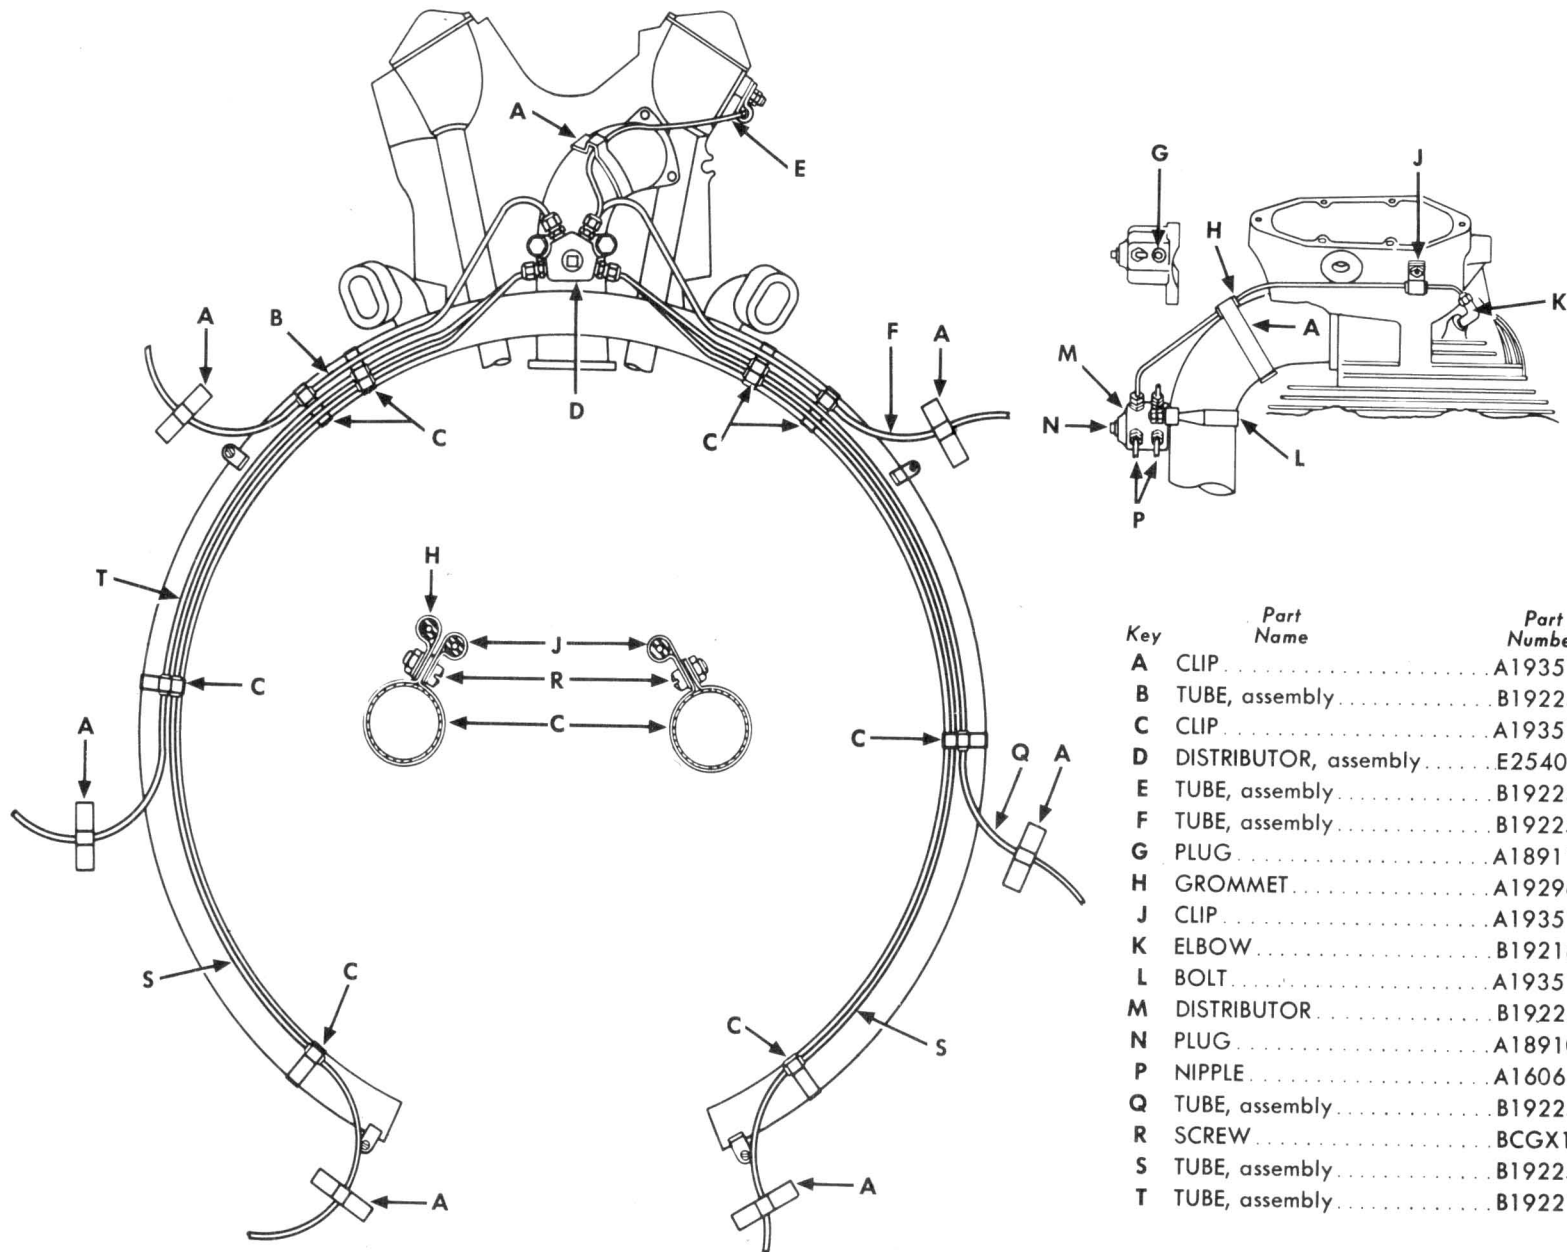


Key	Part Name	Part Number	Group Number
A	CLIP	A193515	0308A-2
B	TUBE, assembly	B192250	0308A-2
C	CLIP	A193513	0308A-2
D	DISTRIBUTOR, assembly	E2540	0308A-2
E	TUBE, assembly	B192236	0308A-2
F	TUBE, assembly	B192251	0308A-2
G	PLUG	A189115	0308A-2
H	GROMMET	A192964	0308A-2
J	CLIP	A193512	0308A-2
K	ELBOW	B192183	0308A-2
L	BOLT	A193511	0308A-2
M	DISTRIBUTOR	B192255	0308A-2
N	PLUG	A189104	0308A-2
P	NIPPLE	A160618	0308A-2
Q	TUBE, assembly	B192252	0308A-2
R	SCREW	BCGX1.1BD-1	0308A-2
S	TUBE, assembly	B192253	0308A-2
T	TUBE, assembly	B192218	0308A-2

FIGURE 03-15—FUEL PRIMING DISTRIBUTOR AND TUBES

RA PD 341149

GROUP 03—FUEL SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
03-15	G103-1807859	B192251	CO-A3876	0308A-2—PRIMING DISTRIBUTOR AND TUBES (Contd) TUBE, engine fuel priming, cylinder No. 2, assembly (Includes: cones, grommets, and nuts).....	1
03-15	G103-1807804	B192252	CO-A35102	TUBE, engine fuel priming, cylinder No. 3, assembly (Includes: cones, grommets, and nuts).....	1
03-15	G103-1807861	B192253	CO-A35103	TUBE, engine fuel priming, cylinder Nos. 4 and 5, assembly (Includes: cones, grommets, and nuts).....	2
03-15	G103-1807862	B192218	CO-A3877	TUBE, engine fuel priming, cylinder No. 6, assembly (Includes: cones, grommets, and nuts).....	1
03-15	G103-1807863	B192250	CO-A3878	TUBE, engine fuel priming, cylinder No. 7, assembly (Includes: cones, grommets, and nuts).....	1
GROUP 04—EXHAUST					
0401—MUFFLER					
04-1	G214-7035455	BEAX1H	FOM-2X1890B	FLANGE, engine exhaust muffler packing.....	2
04-1			FOM-P71	SCREW, machine, oval-fil-hd., cross recess type, S., 1/4-20NC-3 x 5/8.....	8
04-1	H001-1519009		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	8
04-1	G167-0296800	BBAX1C BCVX2EL BEAX1L	FOM-31X1140D	MUFFLER, exhaust, engine, assembly.....	2
04-1	H001-0718003		FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	8
04-1	H001-5420560		FOM-P29	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 1.....	8
04-1	H001-1519011		FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	8
04-1	G167-7007020		FOM-P825	PACKING, engine exhaust muffler (asbestos, 1/2 in. diam.) (GPC-243).....	2
0402—EXHAUST TUBES					
04-1	G214-7136344		FOM-30X1217B	CLAMP, engine exhaust tube, assembly (Includes: screw and nut) (3 1/4 in. diam.).....	4
04-1	G168-7037105		FOM-3X1215B	TUBE, engine exhaust flexible tube to muffler.....	2
04-1	G168-7037104		FOM-3X1216B	TUBE, flexible, exhaust, engine.....	2
GROUP 05—COOLING					
0500—BAFFLES AND FAN SHROUD					
	G214-7035456	BBAX1A	FOM-21X1670C	BAFFLE, air, front, lower, assembly (Includes: quadrants and retainers).....	1
	G214-7035457		FOM-21X1671C	BAFFLE, air, front, upper, assembly (Includes: quadrants and retainers).....	1
	H001-0718001		FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	7
	H001-1013001		FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	5
	H001-0121887	BCVX2AH-1	FOM-P671	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	2
	H001-1518007	BECX1G	FOM-P926	WASHER, lock, reg., S., 1/4 in.....	7

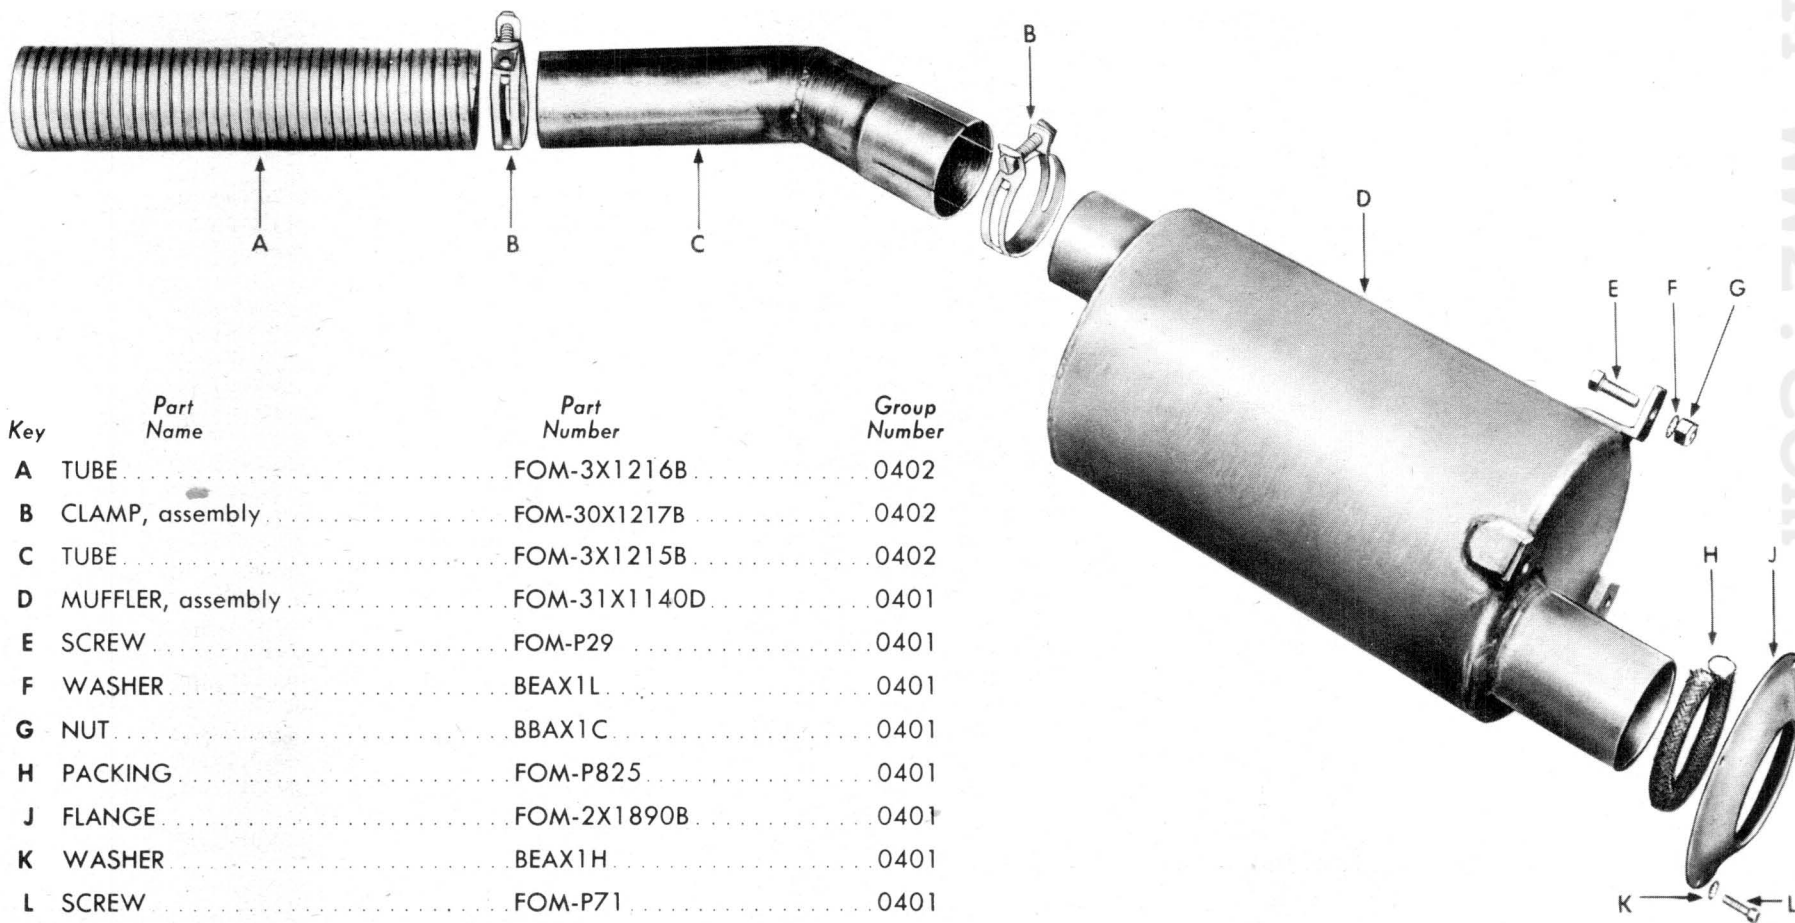

Key	Part Name	Part Number	Group Number
A	TUBE	FOM-3X1216B	0402
B	CLAMP, assembly	FOM-30X1217B	0402
C	TUBE	FOM-3X1215B	0402
D	MUFFLER, assembly	FOM-31X1140D	0401
E	SCREW	FOM-P29	0401
F	WASHER	BEAX1L	0401
G	NUT	BBAX1C	0401
H	PACKING	FOM-P825	0401
J	FLANGE	FOM-2X1890B	0401
K	WASHER	BEAX1H	0401
L	SCREW	FOM-P71	0401

FIGURE 04-1—MUFFLER AND RELATED PARTS


RA PD 341137

0500

GROUP 05—COOLING

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0500—BAFFLES AND FAN SHROUD (Contd)	
05-2	G103-0100099		CO-B6136	BAFFLE, between cylinder Nos. 1-2, assembly.....	1
				(Includes:	
	G103-0100260		CO-A6136	1 BAFFLE, cylinder, assembly	
	G103-0100098		CO-A6135	1 BAFFLE, cylinder, assembly	
	G103-0100220		CO-6138	1 BAFFLE, cylinder head	
	G103-0100320		CO-20661	1 BAR, tie, cylinder baffles	
	G038-0176010		CO-20662	1 SUPPORT, cylinder baffle)	
	G103-0100097		CO-C6136	BAFFLE, between cylinder Nos. 2-3 and 7-1, assembly.....	2
				(Includes:	
	G103-0100260		CO-A6136	1 BAFFLE, cylinder, assembly	
	G103-0100098		CO-A6135	1 BAFFLE, cylinder, assembly	
	G103-0100200		CO-6137	1 BAFFLE, cylinder head	
	G103-0100320		CO-20661	1 BAR, tie, cylinder baffles	
	G038-0176010		CO-20662	1 SUPPORT, cylinder baffle)	
	G038-8800190		CO-B4284	BAFFLE, between cylinder Nos. 3-4, assembly.....	1
				(Includes:	
	G103-0100100		CO-A4284	1 BAFFLE, cylinder, w/SUPPORT, assembly	
	G103-0100098		CO-A6135	1 BAFFLE, cylinder, assembly	
	G103-0100200		CO-6137	1 BAFFLE, cylinder head	
	G103-0100320		CO-20661	1 BAR, tie, cylinder baffles)	
05-2	G038-8800210		CO-B5130	BAFFLE, between cylinder Nos. 4-5, assembly.....	1
				(Includes:	
	G038-0104970		CO-A5130	1 BAFFLE, cylinder, assembly	
	G103-0100100		CO-A4282	1 BAFFLE, cylinder, assembly)	
	G038-8800220		CO-B5161	BAFFLE, between cylinder Nos. 5-6, assembly.....	1
				(Includes:	
	G103-0100120		CO-A5161	1 BAFFLE, cylinder, assembly	
	G103-0100140		CO-A6143	1 BAFFLE, cylinder, assembly	
	G103-0100220		CO-6138	1 BAFFLE, cylinder head	
	G103-0100320		CO-20661	1 BAR, tie, cylinder baffles	
	G038-0176010		CO-20662	1 SUPPORT, cylinder baffles)	
	G038-8800230		CO-B20676	BAFFLE, between cylinder Nos. 6-7, assembly.....	1
				(Includes:	
	G103-0100160		CO-A20676	1 BAFFLE, cylinder, assembly	
	G103-0100098		CO-A6135	1 BAFFLE, cylinder, assembly	
	G103-0100200		CO-6137	1 BAFFLE, cylinder head	
	G103-0100320		CO-20661	1 BAR, tie, cylinder baffles	
	G038-0175990		CO-20674	1 SUPPORT, cylinder baffles)	

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
05-2	G103-0100260	E1757	CO-A6136	BAFFLE, cylinder, assembly	3
				(Includes:	
	G103-0100097		CO-6136	1 BAFFLE, cylinder	
	G038-0109810		CO-20666	1 BRACKET, baffle to cylinder	
	G103-0103965		CO-20656	2 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	
05-2	G103-0100098	E1756	CO-A6135	BAFFLE, cylinder, assembly	5
				(Includes:	
	G103-0100098		CO-6135	1 BAFFLE, cylinder	
	G103-0103965		CO-20656	5 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	
05-2	G103-0100120	D33523	CO-A5161	BAFFLE, cylinder, assembly	1
				(Includes:	
	G038-0104820		CO-5161	1 BAFFLE, cylinder	
	G038-0109810		CO-20666	1 BRACKET	
	G103-0103965		CO-20656	2 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	

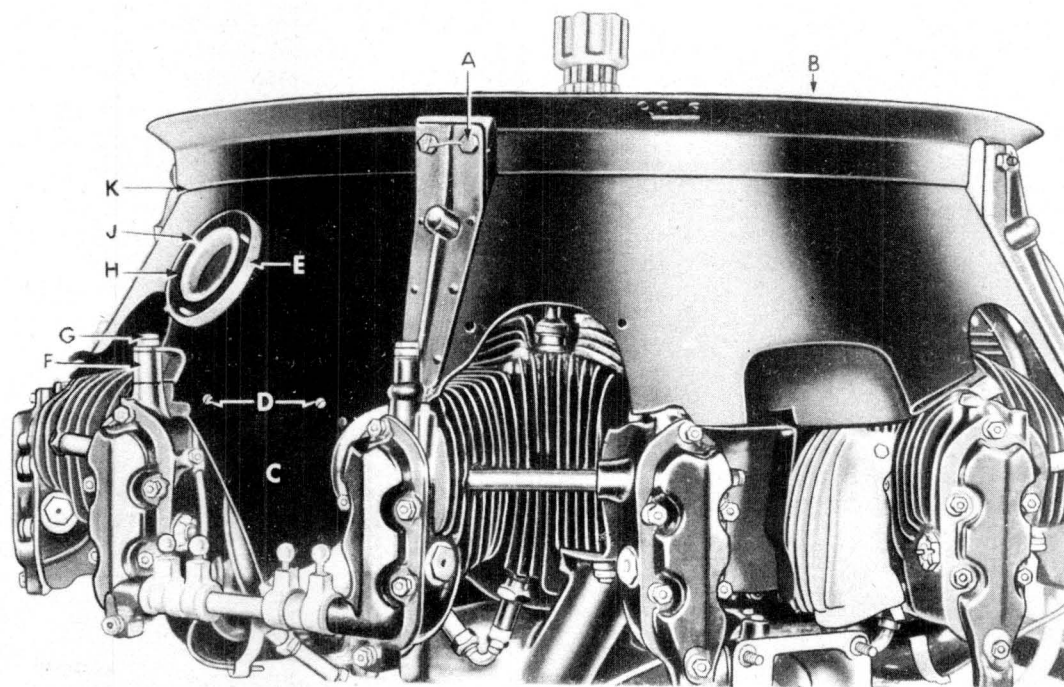

Key	Part Name	Part Number	Group Number
A	SCREW	BCAX1CB-10500
B	RING	D332320500
C	BAFFLE	E17580500
D	SCREW	BCNX2AE-10500
	WASHER	A1647790500
	NUT	A1647810500
E	SEAL	A1647820500
F	SPACER	A1647760500
G	STUD	A1891240500
	NUT	A1664580500
	PALNUT	A1397700500
H	RETAINER	A1647830500
J	PIN	BFAX1CE-10500
K	SHROUD, assembly	D332330500

FIGURE 05-1—ENGINE FAN SHROUD—INSTALLED VIEW


RA PD 341135

0500

GROUP 05—COOLING

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0500—BAFFLES AND FAN SHROUD (Contd)	
05-2	G103-0100140	E1760	CO-A6143	BAFFLE, cylinder, assembly	1
	G038-0104770		CO-6143	(Includes:	
	G103-0103965		CO-20656	1 BAFFLE, cylinder	
	G103-0100160	A166250	CO-20676	5 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	
05-2	G038-0104780		CO-20676	BAFFLE, cylinder, assembly	1
	G038-0109810		CO-20666	(Includes:	
	G103-0103965		CO-20656	1 BAFFLE, cylinder	
	G103-0100110	C67082	CO-A4285	1 BRACKET	
05-2	G038-0104760		CO-4285	2 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	
	G038-0109810		CO-20666	BAFFLE, cylinder, assembly	1
	G103-0103965		CO-20656	(Includes:	
	G103-0100100	C67081	CO-A4284	1 BAFFLE, cylinder	
05-2	G103-0100110		CO-A4285	1 BRACKET	
	G214-5166459		CO-20673	2 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	
	G103-0100280	D32191	CO-A5130	BAFFLE, cylinder, w/SUPPORT, assembly	1
				(Includes:	
05-2	G038-0104970		CO-5130	1 BAFFLE, cylinder, assembly	
	G038-0105130		CO-5131	1 SUPPORT, cylinder baffle)	
	G103-0100300	C67079	CO-A4282	BAFFLE, sump, assembly	1
				(Includes:	
05-1	G038-0105140		CO-4282	1 BAFFLE, sump, front	
	G103-0103965		CO-20656	1 BAFFLE, sump, large, side)	
	G038-0104760		CO-4285	BAFFLE, sump, side, small, assembly	1
	G038-0104820		CO-5161	(Includes:	
05-2	G103-0100098		CO-6135	1 BAFFLE, sump, small, side	
	G103-0100097		CO-6136	2 NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2)	
	G038-0104770		CO-6143	BAFFLE, cylinder	1
	G038-0104780		CO-20676	BAFFLE, cylinder	1
05-2	G103-0100200	E1758	CO-6137	BAFFLE, cylinder	1
	G103-0100220	D33524	CO-6138	BAFFLE, cylinder head	4
	G103-0100240	E1686	CO-6131	BAFFLE, cylinder head	2
	G038-0104970	D32190	CO-5130	BAFFLE, fan shroud to rear spark plugs	7
	G038-0105130	D32192	CO-5131	BAFFLE, sump, front	1
				BAFFLE, sump, large side	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
05-2	G038-0105140		CO-4282	BAFFLE, sump, small side.	1
	G103-0103442	A139759	CO-2472	WASHER, plain, S., cd-pltd., 1/4 in. (baffle to cylinder).	14
	G103-0106940	A136017	CO-2474	WASHER, plain, S., cd-pltd., 3/8 in. (cylinder baffle support to front cylinder baffle) .	6
	G103-0100320	A166242	CO-20661	BAR, tie, intercylinder baffles (S., 9/16 x 5 5/32 x 1/8).	6
	H001-1030098		CO-20668	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-2 x 3/8.	6
	H001-5148251	BCNX2AE-1	CO-20655	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-2 x 1/2.	6
05-1	G103-0103965	A164781	CO-20656	NUT, regular, hex., S., No. 10 (0.190)-24NC-2.	6
	G103-0106785	A164779	CO-20654	WASHER, lock, No. 10 (0.190) (Everlock type).	12
	G103-0103965	A164781	CO-20656	NUT, regular, hex., S., No. 10 (0.190)-24NC-2 (cylinder baffle top to fan shroud	72
				assembly (44) fan shroud to rear spark plug baffle to fan shroud assembly (28)).	

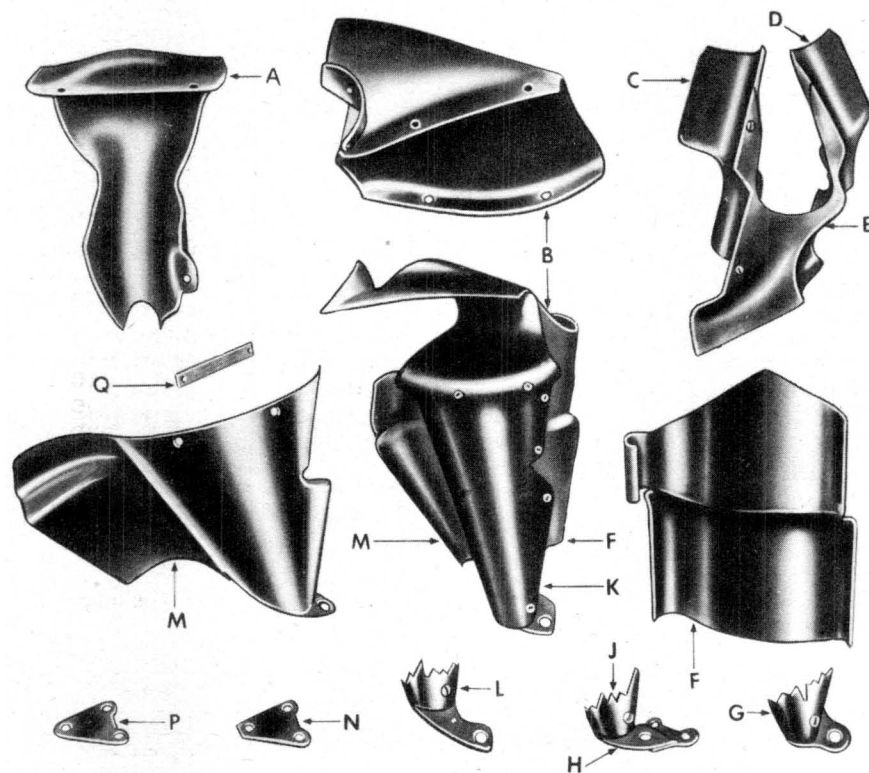

Key	Part Name	Part Number	Group Number
A	BAFFLE	E1686	.0500
B	BAFFLE	D33524	.0500
C	BAFFLE, assembly	C67079	.0500
D	BAFFLE, assembly	D32191	.0500
E	BAFFLE, assembly	CO-B5130	.0500
F	BAFFLE, assembly	E1756	.0500
G	BAFFLE, assembly	A166250	.0500
H	SUPPORT	A166459	.0500
J	BAFFLE, assembly	C67081	.0500
K	BAFFLE, assembly	CO-B6136	.0500
L	BAFFLE, assembly	D33523	.0500
M	BAFFLE, assembly	E1757	.0500
N	SUPPORT	A166249	.0500
P	SUPPORT	A166243	.0500
Q	BAR	A166242	.0500

FIGURE 05-2—ENGINE CYLINDER BAFFLES—EXPLODED VIEW

RA PD 341136

0500


GROUP 05—COOLING

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0500—BAFFLES AND FAN SHROUD (Contd)	
05-1	H001-0811039	BFAX1CE-1	CO-2506	PIN, cotter, split, S., cd-pltd., 3/32 x 3/4 (front cylinder baffle to cylinder baffle support screw).....	6
	G214-7035458		FOM-2X1668B	QUADRANT, upper and lower front baffles (gray felt).....	4
05-1	G103-0104766	A164783	CO-20658	RETAINER, engine fan shroud steady bar seal (S., 2 17/32 I.D. x 3 13/16 O.D. x No. 20).....	2
			FOM-2X1707B	RETAINER, upper and lower front baffles.....	12
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	24
	H001-5417640	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4.....	24
	H001-1518007	BE CX1G	FOM-P926	WASHER, lock, reg., S., 1/4 in.....	24
05-1	G103-0104840	D33232	CO-5158	RING, engine fan shroud.....	1
05-1	H001-1013031	BCAX1CB-1	CO-20649	SCREW, cap, hex-hd., alloy-S., cd-pltd., dld. f/lkg-wire., 3/8-16NC-2 x 7/8.....	10
	G103-0105207		CO-20042	SCREW, hex-hd., S., dld. f/lkg-wire., 3/8-24NF-2 x 5/8 (cylinder baffle support to front cylinder baffle).....	6
	H001-1030098		CO-20668	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-2 x 3/8 (spark plug baffle bracket to cylinder head).....	7
05-1	H001-5148251	BCNX2AE-1	CO-20655	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-2 x 1/2 (spark plug baffle to fan shroud (14), fan shroud to top cylinder baffle (6), front cylinder baffle to right cylinder baffle (24), side small sump baffle to inter-cylinder sump baffle (2), top cylinder baffle to front cylinder baffle (12), fan shroud to top cylinder baffle (12)).....	70
05-1	G103-0105445	A164782	CO-20657	SEAL, fan shroud steady bar aperture (felt, 2 7/32 x 3 3/16 x 3/8).....	2
	H001-0811039	BFAX1CE-1	CO-2506	PIN, cotter, split, S., cd-pltd., 3/32 x 3/4.....	6
	G103-0105645		CO-B5159	SHROUD, engine fan, w/BRACKETS, assembly (Includes: ring, seal, and retainer).....	1
01-5,05-1	G103-0105645	D33233	CO-A5159	SHROUD, engine fan, assembly.....	1
05-1	G103-0104100	A166458	CO-2441	NUT, light, hex., alloy-S., cd-pltd., 3/8-24NF-3.....	7
05-1	G103-0104265	A139770	CO-2561	PALNUT, light, S., cd-pltd., 3/8-24NF.....	7
01-5,05-1	G103-0106221	A189124	CO-20994	STUD, alloy-S., cd-pltd., 3/8-16NC-3 (5/8) x 3/8-24NF-2 (5/8) x 2 1/8 (sq.-end.).....	7
			CO-20994-03	STUD, fan shroud bracket (0.003 oversize) (pointed end).....	as req.
			CO-20994-06	STUD, fan shroud bracket (0.006 oversize) (ck-end.).....	as req.
			CO-20994-09	STUD, fan shroud bracket (0.009 oversize) (dld-end.).....	as req.
	G103-0106011		CO-20303	STUD, fan shroud bracket (not plated).....	7
01-5,05-1	G103-0105684	A164776	CO-20650	SPACER, fan shroud bracket to cylinder head.....	2
05-2	G214-5166459	A166459	CO-20673	SUPPORT, cylinder baffle to cylinder No. 3.....	1
	H001-4013541	BBFX2CA-1	CO-2458	NUT, castle, alloy-S., cd-pltd., 3/8-24NF-2.....	1
05-2	G038-0175990	A166249	CO-20674	SUPPORT, cylinder baffle to cylinder No. 6.....	1
	H001-4013541	BBFX1CA-1	CO-2458	NUT, castle, alloy-S., cd-pltd., 3/8-24NF-2.....	1
05-2	G038-0176010	A166243	CO-20662	SUPPORT, cylinder baffle to cylinder Nos. 1, 2, 5, and 7.....	4
	H001-4013541	BBFX1CA-1	CO-2458	NUT, castle, alloy-S., cd-pltd., 3/8-24NF-2.....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
05-1	G103-0106785	A164779	CO-20654	WASHER, lock, No. 10 (0.190) (Everlock type) (front cylinder baffle to right cylinder baffle (24), side small sump baffle to intercylinder sump baffle (2), top cylinder baffle to front cylinder baffle (12), fan shroud to top cylinder baffle (6), spark plug baffle to fan shroud (14), spark plug baffle bracket to cylinder head (7)).....	65
GROUP 06 – ELECTRICAL					
0601—ENGINE GENERATOR					
06-3	G103-0500105		DR-1850759	ARM, engine generator brush.....	2
06-1	G103-0500032		DR-1888310	ARMATURE, engine generator, assembly.....	1
06-1	H001-0518018	BGAX9B	DR-124548	KEY, Woodruff, ni-S., 5/32 x 3/4 (No. 506).....	1
06-1	G103-0501506	BBBX1E-2	DR-1888068	NUT, regular, hex., s-fin., S., zn-pltd., 1/2-20NF-2.....	1
06-1	G103-0500711		DR-1888070	PIN, cotter, engine generator shaft nut, drive end.....	1
06-1	G103-0502295	BEBX1M-2	DR-1888069	WASHER, plain, S., zn-pltd., SAE std., 1/2 in.....	1
06-1	G103-1516002		DR-1888427	BAND, cover, engine generator, assembly.....	1
06-2	G103-1516201		DR-1866059	BASE, mounting, engine generator.....	1
06-2	H001-1013029	BCAX3L	DR-1888073	SCREW, cap, hex-hd., S., 3/8-16NC-2 x 5/8.....	4
06-2	H001-7023741	BECX2K-1	DR-120381	WASHER, lock, lgt., S., cd-pltd., 3/8 in.....	4
06-2	G103-0500129		DR-1886071	BASE, engine generator terminal box.....	1
06-1,2	G103-0501787		DR-5017850	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 15/32 (Make from BCGX1.1BF-2).....	2
06-2	H001-1030079	BCNXIFD	DR-115607	SCREW, machine, rd-hd., S., No. 8 (0.164)-32NC-2 x 5/16.....	1
06-2	H001-1518004	BECXID	DR-802729	WASHER, lock, reg., S., No. 8 (0.164).....	1
06-2	H001-7025621	BECX1E-1	DR-120217	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
06-3	H012-1376017		DR-954143	BEARING, ball, annular, single row, double sealed, 0.6693 bore, 1.5748 O.D. 0.6536 width (engine generator armature shaft, commutator end) (ND-88503).....	1
06-1	H012-1377020		DR-954243	BEARING, ball, annular, single row, double sealed, 0.7874 bore, 2.0472 O.D., 0.9055 width (engine generator, drive end).....	1
06-1	G103-1524238		DR-1888319	BOLT, through, engine generator.....	2
06-2	G103-0500235		DR-1886073	BOX, terminal, engine generator.....	1
06-2	G103-0501788	BCGX1.1BG-2	DR-1864533	SCREW, machine, oval-fil-hd., S., zn-pltd., No 10 (0.190)-32NF-2 x 5/8.....	4
06-2	H001-7025621	BECX1E-1	DR-120217	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	4
06-3	G103-0500242		DR-1856494	BRUSH, engine generator, assembly.....	2
06-3	H001-1030064	BCNX1ED	DR-141541	SCREW, machine, rd-hd., S., No. 6 (0.138)-32NC-2 x 5/16.....	2
06-3	H001-1518003	BECX1C	DR-802730	WASHER, lock, reg., S., No. 6 (0.138).....	2
	G103-0500488		DR-1882949	CLIP, terminal, engine generator armature.....	1
	G103-0500489		DR-1859665	CLIP, terminal, engine generator field.....	1
	G103-0500490		DR-1857107	CLIP, terminal, engine generator field lead to ground.....	1
06-2	G103-1539673		DR-1888318	COIL, engine generator field, left, assembly.....	1
06-2	G103-1539672		DR-1888317	COIL, engine generator field, right, assembly.....	1
06-1	G103-0500732		DR-1886074	COVER, engine generator terminal box.....	1
06-1	G103-0501787	BCGX1.1BF-2	DR-5017850	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 15/32.....	2
06-1	H001-7025621	BECX1E-1	DR-120217	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
06-1				FIELD and FRAME, engine generator, assembly.....	1
06-2				FRAME and BASE, engine generator, assembly.....	1

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0601—ENGINE GENERATOR (Contd)	
06-1,3	G103-1588211		DR-1888760	FRAME, engine generator, commutator end.....	1
06-1	G103-1557006		DR-1888763	FRAME, engine generator, drive end.....	1
01-2	G214-7035459		FOM-P292	GENERATOR, engine, assembly (DR-1106458) (CO-40033).....	1
	G103-0501089		DR-1888237	INSULATION, engine generator terminal box.....	1
06-1	G103-0501571	A214701	DR-809062	PIN, dowel, engine generator frame, drive end.....	2
06-3	G103-0501606		DR-1857213	PLATE, engine generator brush.....	1
06-3	G103-0501834		DR-1866970	SCREW, engine generator brush bearing plate retainer.....	3
06-3	H001-1518005	BECX1E	DR-106497	WASHER, lock, reg., S., No. 10 (0.190).....	3
06-3	G103-0501604		DR-1887595	PLATE, engine generator end cover, commutator end.....	1
06-3	G103-0501832	BCLX1.1AE-2	DR-133633	SCREW, machine, fl-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 7/16.....	3
06-3	H001-7016561	BEAX4C-1	DR-138597	WASHER, lock, external-teeth, countersunk, S., cd-pltd., No. 10 (0.190).....	3
06-1	G103-0501609		DR-1869730	PLATE, retaining, engine generator drive end ball bearing.....	1
06-1	H001-5127351		DR-5017850	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 15/32 (Make from BCGX1.1BF-2).....	4
06-1	G103-0502271		DR-802731	WASHER, lock, reg., S., No. 10 (0.190).....	4
06-2	G103-0501608		DR-1886072	PLATE, support, engine generator terminal.....	1
06-1	G103-0501719		DR-1886070	PULLEY, driven, engine generator (CO35264).....	1
06-2	G103-1742810		DR-1888313	SHOE, pole, engine generator.....	2
	G103-0501868		DR-1883864	SCREW, machine, fl-hd., S., zn-pltd., 3/8-24NF-2 x 13/16 (Make from BCLX1.1EH-2).....	4
06-3	G103-0501970		DR-1850760	SPRING, engine generator brush arm.....	2
06-2	G103-0502094		DR-1886064	STUD, engine generator "A" terminal (1/4-20 x 13/16).....	1
06-2		BBAX1A-2	DR-120375	NUT, regular, hex., s-fin., S., zn-pltd., 1/4-20NC-2.....	2
06-2	G103-0502284		DR-802760	WASHER, lock, special, S., 17/64 x 32/64 x 1/32.....	2
06-2	G103-0502279	BEBX1G-2	DR-834560	WASHER, plain, S., zn-pltd., SAE std., 1/4 in.....	1
06-2	G103-0502093		DR-1886063	STUD, engine generator "F" terminal (10-32 x 11/16).....	1
06-2	G103-0501522	BBMX1C2	DR-5024654	NUT, machine screw, hex., S., zn-pltd., No. 10 (0.190)-32NF-1.....	2
06-2	H001-1530005	BECX1E	DR-106497	WASHER, lock, reg., S., No. 10 (0.190).....	2
06-2	G103-0502274	BEBX1E-2	DR-834231	WASHER, plain, S., zn-pltd., SAE std., No. 10 (0.190).....	1
06-2	G103-0500491		DR-831187	TERMINAL, engine generator insulated brush (Also known as CLIP).....	1
06-1	H001-7025711	BECX1H-1	DR-1886686	WASHER, lock, reg., S., cd-pltd., 5/16 in. engine (generator through bolt).....	2
06-3	H001-1530005	BEBX1E	DR-1857412	WASHER, plain, S., SAE std., No. 10 (0.190) (engine generator spacer washer).....	2
06-3	G103-0502307		DR-1888761	WASHER, spacer, engine generator commutator end ball bearing.....	1
				0601A—ENGINE GENERATOR ATTACHING PARTS	
01-2	G167-0125825	C76074	FOM-P313	BRACKET, mounting, engine generator (CO-4863).....	1
	H001-0116027	BANX1CD	FOM-P305	BOLT, hex-hd., s-fin., alloy-S., 3/8-16NC-2 x 1 1/4 (CO-23271).....	6
	H001-1518009	BECX1K	FOM-P309	WASHER, lock, reg., S., 3/8 in.....	6

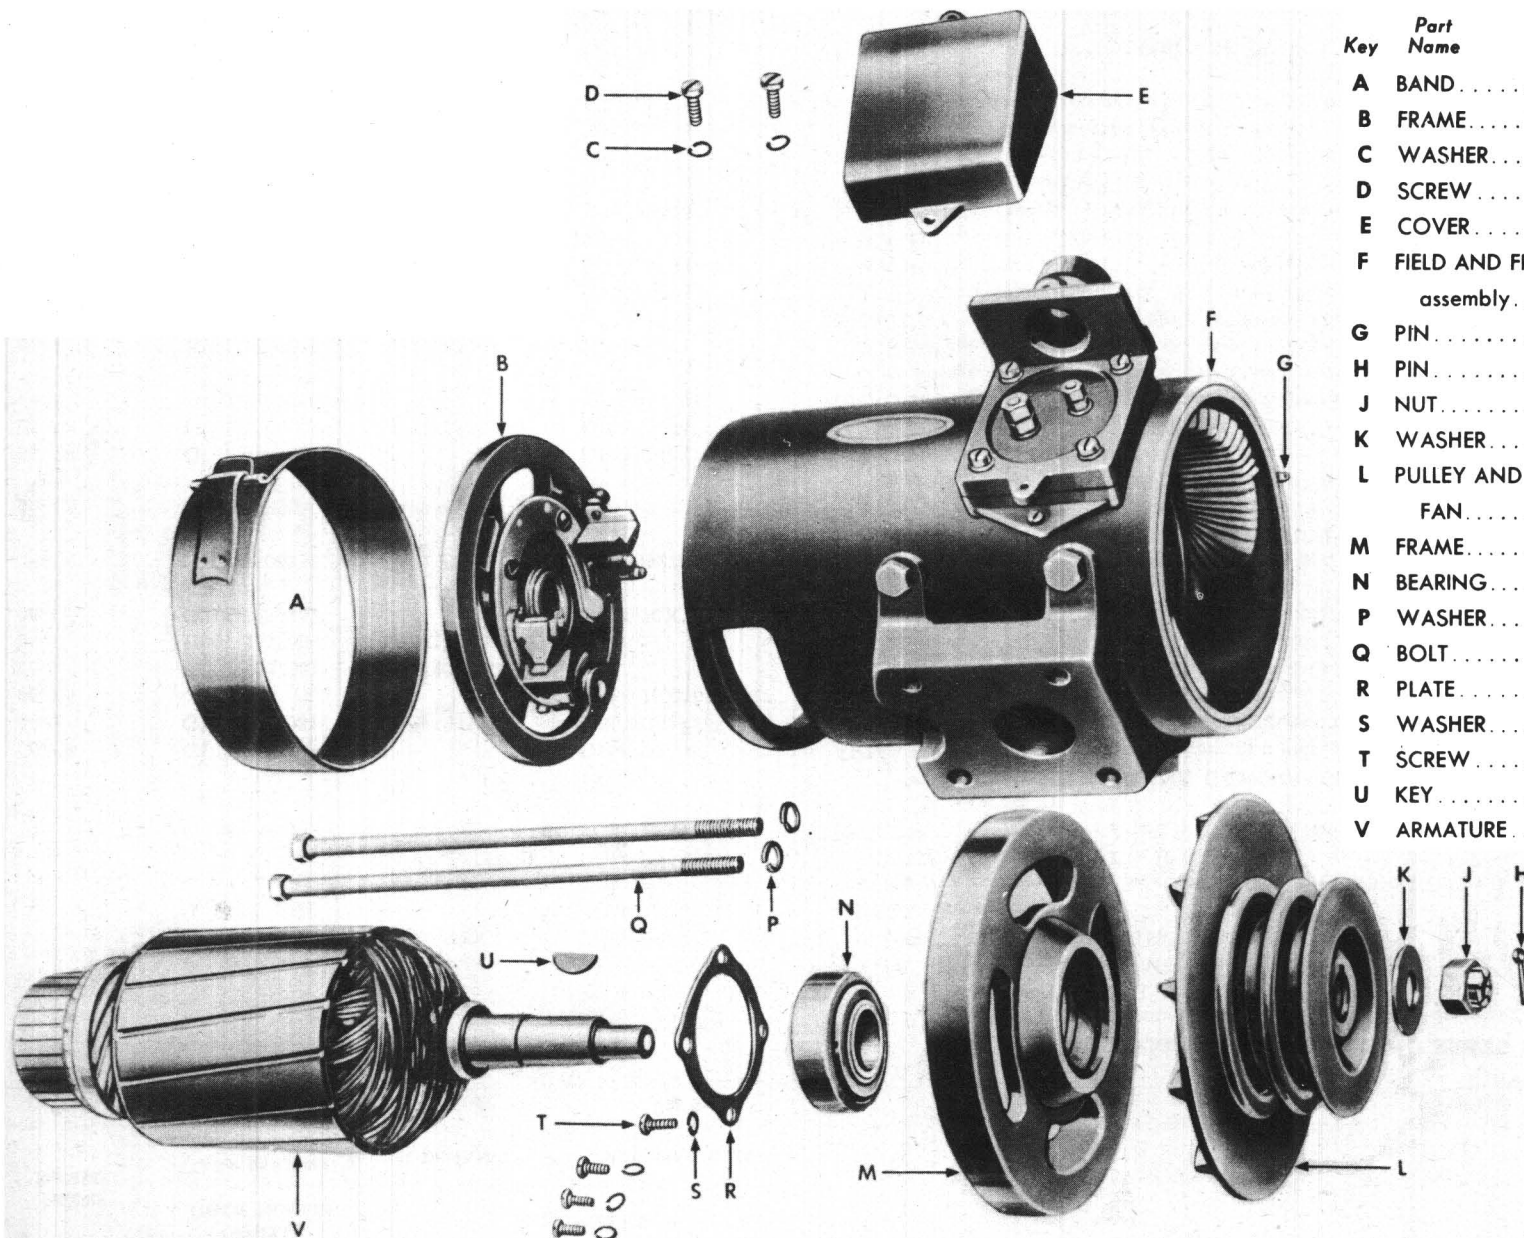

Key	Part Name	Part Number	Group Number
A	BAND	DR-1888427	0601
B	FRAME	DR-1888760	0601
C	WASHER	BECX1E-1	0601
D	SCREW	BCGX1.1BF-2	0601
E	COVER	DR-1886074	0601
F	FIELD AND FRAME, assembly		0601
G	PIN	A214701	0601
H	PIN	DR-1888070	0601
J	NUT	BBBX1E-2	0601
K	WASHER	BEBX1M-2	0601
L	PULLEY AND FAN	DR-1886070	0601
M	FRAME	DR-1888763	0601
N	BEARING	DR-954243	0601
P	WASHER	BECX1H-1	0601
Q	BOLT	DR-1888319	0601
R	PLATE	DR-1869730	0601
S	WASHER	DR-802731	0601
T	SCREW	BCGX1.1BF-2	0601
U	KEY	BGAX9B	0601
V	ARMATURE	DR-1888310	0601


FIGURE 06-1—GENERATOR—EXPLODED VIEW

RA PD 341094

0601A

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-2	G103-0101165	A191022	FOM-P304	0601A—ENGINE GENERATOR ATTACHING PARTS (Contd)	
	H001-0116223	BAOX1CF	FOM-P306	CLAMP, engine generator mounting bracket (CO-23262).....	1
	H001-4036540	B166456C	FOM-P315	BOLT, hex-hd., s-fin., alloy-S., 3/8-24NF-2 x 1 3/4.....	1
	H001-1518009	BECX1K	FOM-P309	NUT, engine generator mounting bracket clamp.....	1
	G214-7035460		FOM-3X1184C	WASHER, lock, reg., S., 3/8 in.....	1
			FOM-P560	SHIELD, engine generator.....	1
			FOM-P223	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 1.....	3
			FOM-30X1203C-1	WASHER, lock, reg., S., No. 10 (0.190).....	3
	G214-7035461			SPACER, engine generator shield bolt (1/8 in. black pipe, 9/16 in. long).....	1
				0601B—ENGINE GENERATOR REGULATOR	
06-7,8	G103-0500030		DR-1861996	ARMATURE, engine generator current and voltage regulator.....	2
06-9	G103-0500031	A225835	DR-1839042	ARMATURE, engine generator regulator cut-out relay.....	1
06-4,5			FOM-70X1023E-17	BLOCK, terminal, engine generator regulator.....	1
06-5	H001-5147551	BCNX1FG-1		SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 1/2.....	2
06-5	H001-1518004	BECX1D-1		WASHER, lock, reg., S., cd-pltd., No. 8 (0.164).....	2
06-32	G214-7035462		FOM-70X1023E	BOX, engine generator regulator and relay panel, assembly (Includes: cover, mounting plate, and terminal tubes).....	1
06-7,8	G103-0500252	A225831	DR-1842784	BRACKET, contact, engine generator current and voltage regulators, w/POINT, assembly (Also known as CONTACT and SUPPORT, assembly).....	2
06-7,8	H001-1029030	A225829	DR-20987	SCREW, attaching, engine generator regulator cut-out relay contact bracket (machine, binder-hd., S., zn-pltd., dog-pt., No. 8 (0.164)-36NF-3 x 3/8).....	8
06-7,8	G147-0443088		DR-1901832	WASHER, lock, S., zn-pltd., No. 8 (0.164).....	8
06-7,8	H001-1530004	A214677	DR-810794	WASHER, plain, S., zn-pltd., No. 8 (0.164).....	8
06-9	G103-0500250		DR-1839044	BRACKET, contact, engine generator regulator cut-out relay, w/POINTS, assembly (Also known as CONTACT and SUPPORT, assembly).....	1
06-9	H001-1029030	A225829	DR-20987	SCREW, machine, binder-hd., S., zn-pltd., dog-pt., No. 8 (0.164)-36NF-3 x 3/8.....	2
06-9	G103-0500251	A225839	DR-18198	BRACKET, engine generator regulator cut-out relay, w/STOP, assembly.....	1
06-9	H001-1025044	BCGX1.1AC-2	DR-22820	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 8 (0.164)-36NF-2 x 5/16.....	2
06-9	G147-0443088		DR-1901832	WASHER, lock, S., zn-pltd., No. 8 (0.164).....	4
06-9	H001-1530004	A214677	DR-810794	WASHER, plain, S., zn-pltd., No. 8 (0.164).....	2
06-7,8	G103-0502097	A225833	DR-1843160	BRACKET, mounting, engine generator current and voltage regulator contact bracket (Also known as SUPPORT).....	2
06-7,8	H001-1029030	A225829	DR-20987	SCREW, machine, binder-hd., S., zn-pltd., dog-pt., No. 8 (0.164)-36NF-3 x 3/8.....	8
06-7,8	G147-0443088		DR-1901832	WASHER, lock, S., zn-pltd., No. 8 (0.164).....	8
06-7,8	H001-1530004	A214677	DR-810794	WASHER, plain, S., zn-pltd., No. 8 (0.164) (current regulator bracket (1), voltage regulator bracket (2)).....	3
	G103-0500302		DR-1889908	BUSHING, insulating, engine generator regulator terminal connector.....	3

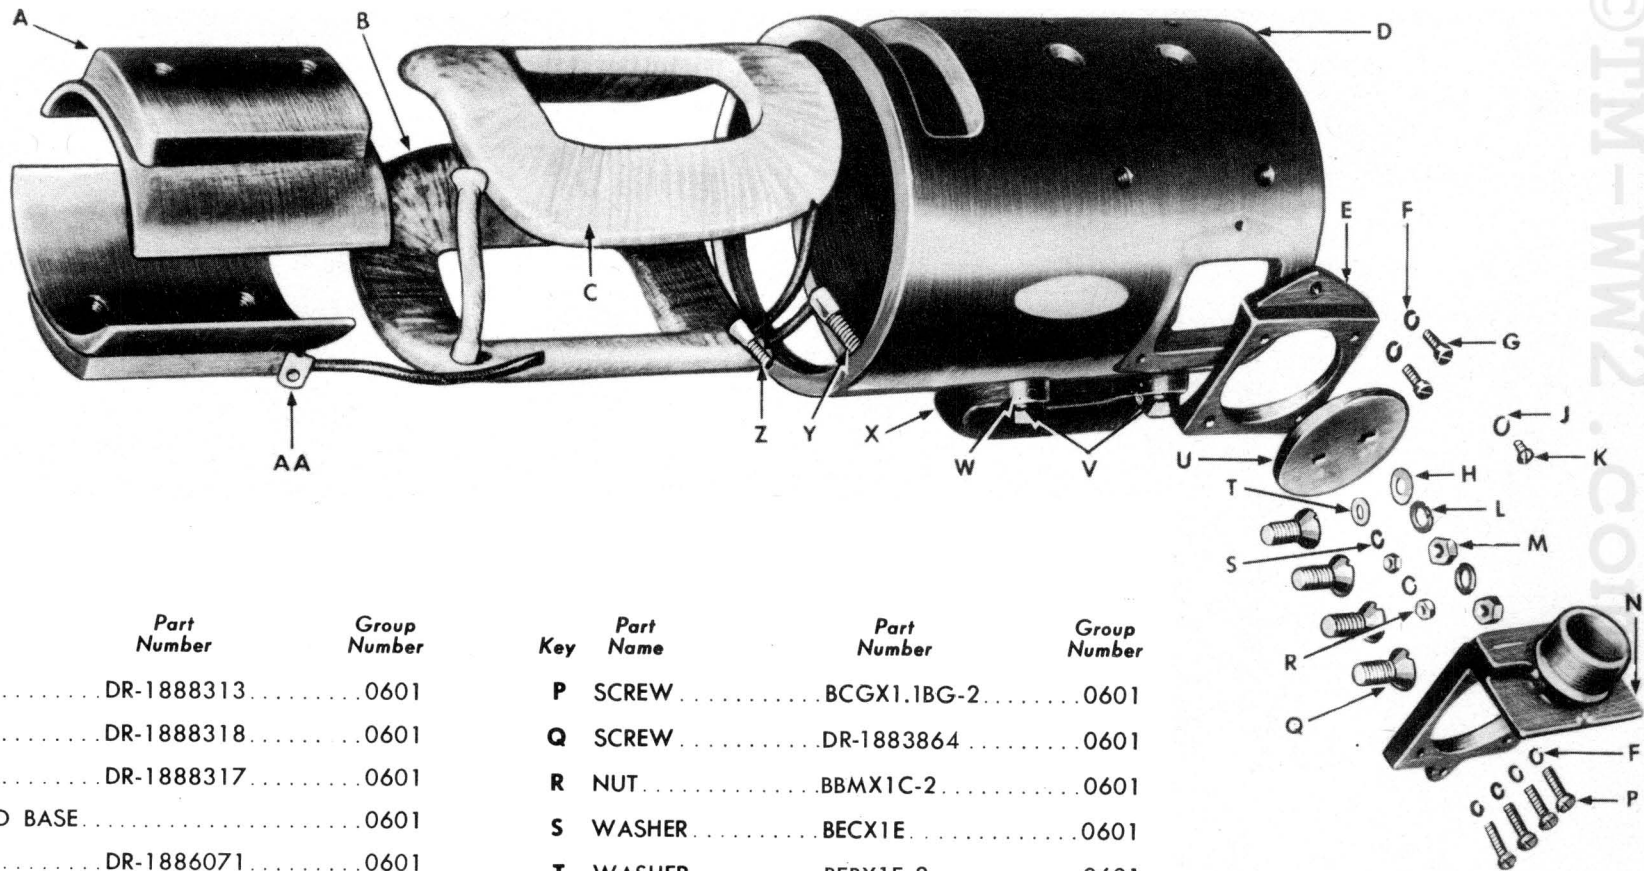


Key	Part Name	Part Number	Group Number
A	SHOE	DR-1888313	.0601
B	COIL	DR-1888318	.0601
C	COIL	DR-1888317	.0601
D	FRAME AND BASE		.0601
E	BASE	DR-1886071	.0601
F	WASHER	BECX1E-1	.0601
G	SCREW	BCGX1.1BF-2	.0601
H	WASHER	BEBX1G-2	.0601
J	WASHER	BECX1D	.0601
K	SCREW	BCNX1FD	.0601
L	WASHER	DR-802760	.0601
M	NUT	BBAX1A-2	.0601
N	BOX	DR-1886073	.0601

Key	Part Name	Part Number	Group Number
P	SCREW	BCGX1.1BG-2	.0601
Q	SCREW	DR-1883864	.0601
R	NUT	BBMX1C-2	.0601
S	WASHER	BECX1E	.0601
T	WASHER	BEBX1E-2	.0601
U	PLATE	DR-1886072	.0601
V	SCREW	BCAX3L	.0601
W	WASHER	BECX2K-1	.0601
X	BASE	DR-1866059	.0601
Y	STUD	DR-1886064	.0601
Z	STUD	DR-1886063	.0601
AA	TERMINAL	DR-831187	.0601

FIGURE 06-2—GENERATOR FRAME AND FIELD—EXPLODED VIEW

GROUP 06—ELECTRICAL

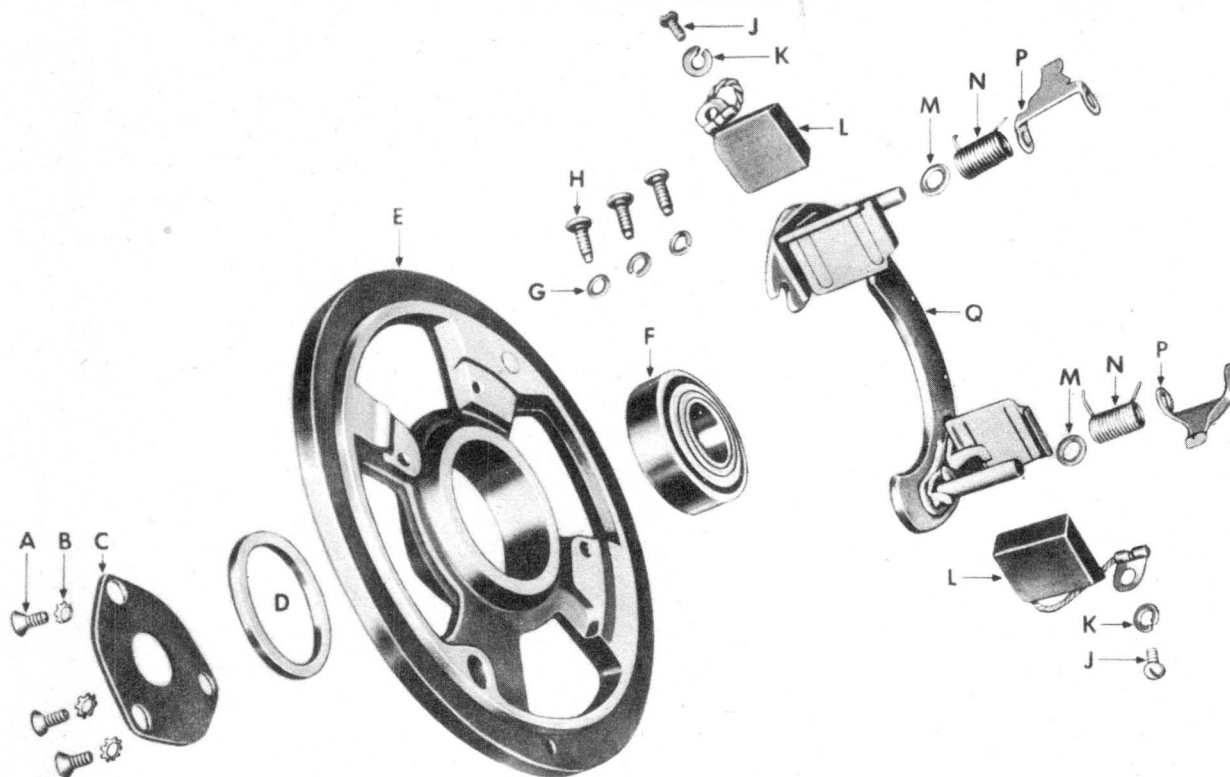


KEY	PART NAME	PART No.	GROUP
A	SCREW	BCLX1.1AE-2	.0601
B	WASHER	BEAX4C-1	.0601
C	PLATE	DR-1887595	.0601
D	WASHER	DR-1888761	.0601
E	FRAME	DR-1888760	.0601
F	BEARING	DR-954143	.0601
G	WASHER	BECX1E	.0601
H	SCREW	DR-1866970	.0601

KEY	PART NAME	PART No.	GROUP
J	SCREW	BCNXIED	.0601
K	WASHER	BECXIC	.0601
L	BRUSH	DR-1856494	.0601
M	WASHER	BEBXIE	.0601
N	SPRING	DR-1850760	.0601
P	ARM	DR-1850759	.0601
Q	PLATE	DR-1857213	.0601

RA PD 76314

FIGURE 06-3—GENERATOR COMMUTATOR END—EXPLODED VIEW

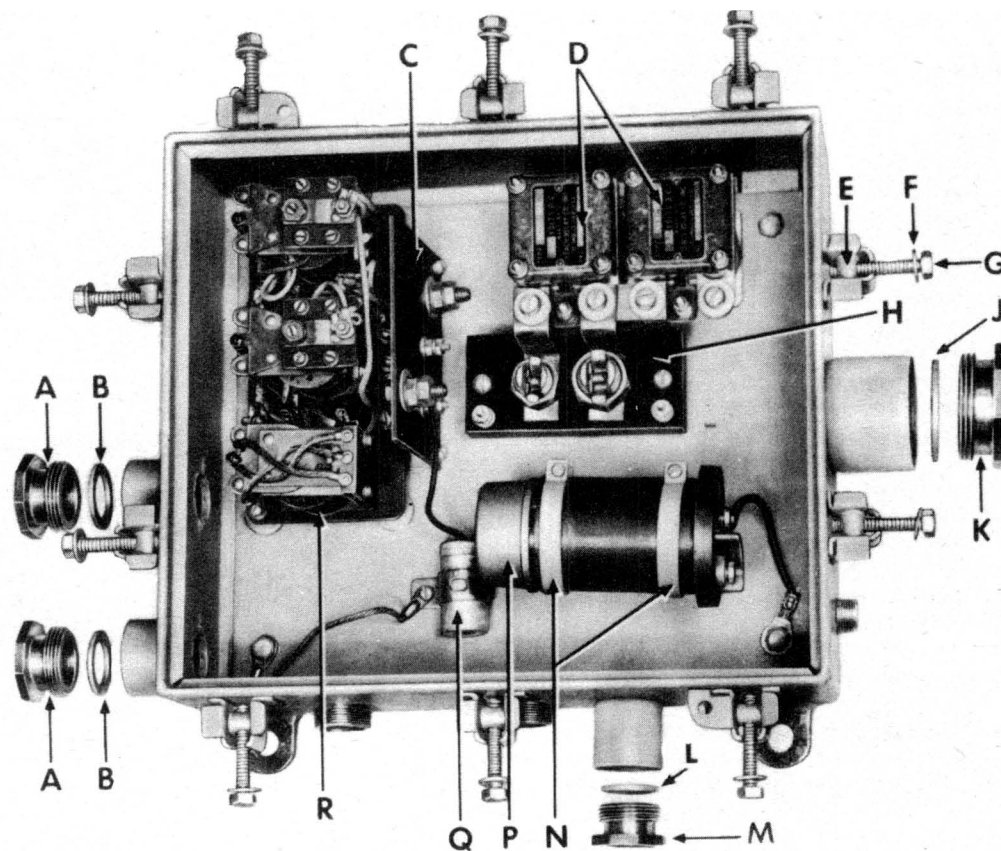

Key	Part Name	Part Number	Group Number
A	NUT	NVS-Size-G	.0601B
B	RING	NVS-Size-G	.0601B
C	BLOCK	FOM-70X1023E-17	.0601B
D	RELAY, assembly	FOM-P435	.0610B
E	PIN	NVS-5211-L-10	.0601B
F	WASHER	BEEX1H-2	.0601B
G	SCREW	BCAX1BF-2	.0601B
H	BASE	FOM-70X1023E-13	.0610B


Key	Part Name	Part Number	Group Number
J	RING	NVS-Size-P	.0601B
K	NUT	NVS-Size-P	.0601B
L	RING	NVS-Size-F	.0601B
M	NUT	NVS-Size-F	.0601B
N	STRAP	FOM-70X1023E-14	.0604
P	COIL, assembly	FOM-P436	.0604
Q	CONDENSER	FOM-P405	.0601B
R	REGULATOR, assembly	A163163	.0601B

FIGURE 06-4—REGULATOR AND RELAY PANEL—COVER REMOVED

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0601B—ENGINE GENERATOR REGULATOR (Contd)	
06-9	G103-0502453		DR-18204	COIL, shunt, engine generator regulator cut-out relay, assembly (Also known as WINDING).....	1
06-8	G103-0502450	B184438	DR-18201	COIL, shunt, engine generator voltage regulator, assembly.....	1
06-8	G103-0501490	BBDX1A-2	DR-29991	NUT, jam, hex., s-fin., S., zn-pltd., 1/4-28NF-2.....	1
06-4,5	G167-0139870		FOM-P405	CONDENSER, engine generator regulator and relay panel (SPR-5285, type J-X-131)....	1
06-5	H001-5148231	BCNX2AC-1	FOM-P846	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-2 x 3/8.....	1
06-5	H001-7043621	BEBX1E-1		WASHER, plain, S., cd-pltd., SAE std., No. 10 (0.190).....	1
06-5	H001-7025621	BECX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	1
06-5			FOM-70X1023E-19	CONNECTOR, engine generator current regulator terminal.....	1
06-5			FOM-70X1023E-18	CONNECTOR, engine generator regulator cut-out relay terminal.....	1
06-5			FOM-70X1023E-20	CONNECTOR, engine generator voltage regulator terminal.....	1
06-32	G214-7035463		FOM-70X1023E-2	COVER, engine generator regulator and relay panel box.....	1
06-4			NVS-5211-L-10	PIN, hinge, engine generator regulator and relay panel box cover.....	10
06-4,32		BCAX1BF-2		SCREW, cap, hex-hd., S., zn-pltd., 5/16-18NC-2 x 1 3/4.....	10
06-4		BEBX1H-2		WASHER, plain, S., zn-pltd., SAE std., 5/16 in.....	10
	2580-37336		DR-37336	ECCENTRIC, adjusting screw, engine generator current and voltage regulator and cut-out relay spring.....	3
06-7,8,9	G102-1588200		DR-18195	FRAME, engine generator current and voltage regulators and cut-out relay, assembly (Includes: eccentric, plate, rivet, armature adjusting screw and washers).....	3
	2580-37338		DR-37338	FRAME, engine generator current and voltage regulators and cut-out relay, stripped....	3
	G214-7036345		FOM-70X1023E-8	GASKET, engine generator regulator and relay panel box cover (rubber, 3/8 in. sq.)....	as req.
06-7,9	G102-0400908		DR-37330	INSULATOR, engine generator current regulator and cut-out relay shunt coil.....	2
	G147-0273800		DR-1880425	LEAD, engine generator regulator cut-out relay to mounting plate.....	1
06-6	G102-0400999	A225806	DR-18212	LEAD, engine generator regulator resistance unit.....	1
	H001-5148851	BCOX1.1AF-2	DR-1901840	SCREW, machine, rd-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 1/2.....	1
06-6	G103-0501195	A225804	DR-1839111	LEAD, engine generator voltage regulator to cut-out relay shunt.....	1
	G147-0273801		DR-1880426	LEAD, engine generator voltage regulator to mounting plate.....	1
06-4			FOM-P1013-1	NUT, gland, terminal tube (Size F) (engine generator regulator and relay panel).....	1
06-4			FOM-P353-1	NUT, gland, terminal tube (size G) (engine generator regulator and relay panel).....	2
06-4			FOM-P260-1	NUT, gland, terminal tube (Size P) (engine generator regulator and relay panel).....	1
06-6	G103-0501493	A225814	DR-30986	NUT, hex., S., zn-pltd., No. 8 (0.164)-36NF (engine generator regulator resistance unit terminal).....	1
F,M	G214-7035464		FOM-70X1015E	PANEL, engine generator regulator and relay, assembly (Includes: box, booster coil, generator regulator, cranking motor relay, and battery relay).....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	4
	H001-1013071	BCAX1ED	FOM-P49	SCREW, cap, hex-hd., S., 1/2-13NC-2 x 1 1/4.....	4
	H001-1519013	BEAX2B	FOM-P76	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1224).....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	2580-37335		DR-37335	PLATE, adjusting, engine generator current and voltage regulators and cut-out relay spring.....	3
			DR37337	RIVET, engine generator current and voltage regulators and cut-out relay spring adjusting plate.....	3
	G214-7035465		FOM-70X1023E-10	PLATE, mounting, engine generator regulator and relay panel.....	1
			FOM-P855	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-2 x 3/8 (Make from BCAX3A-1).....	4
	H001-7025681	BECX1G-1	FOM-P623	WASHER, lock, reg., S., cd-pltd., 1/4 in.....	4
06-6	G103-0501615	A225802	DR-1880423	PLATE, mounting, engine generator regulator units, assembly.....	1
06-6	H001-5148851	BCOX1.1AF-2	DR-1901840	SCREW, machine, rd-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 1/2.....	4
06-6	G147-0443063	BECX1E-2	DR-1880781	WASHER, lock, reg., S., zn-pltd., No. 10 (0.190).....	4
06-6	G103-0501730		DR-1864128	REGULATOR, current, engine generator, assembly.....	1
06-6	G103-0501491	A225800	DR-1869286	NUT, hex., br., 1/4-28NF-2.....	1
06-6	G103-0502273		DR-1872430	WASHER, lock, S., external teeth, 1/4 in.....	1
06-6	G162-1789677	BEBX2B-2	DR-1901928	WASHER, plain, S., zn-pltd., U.S. std., 1/4 in.....	1

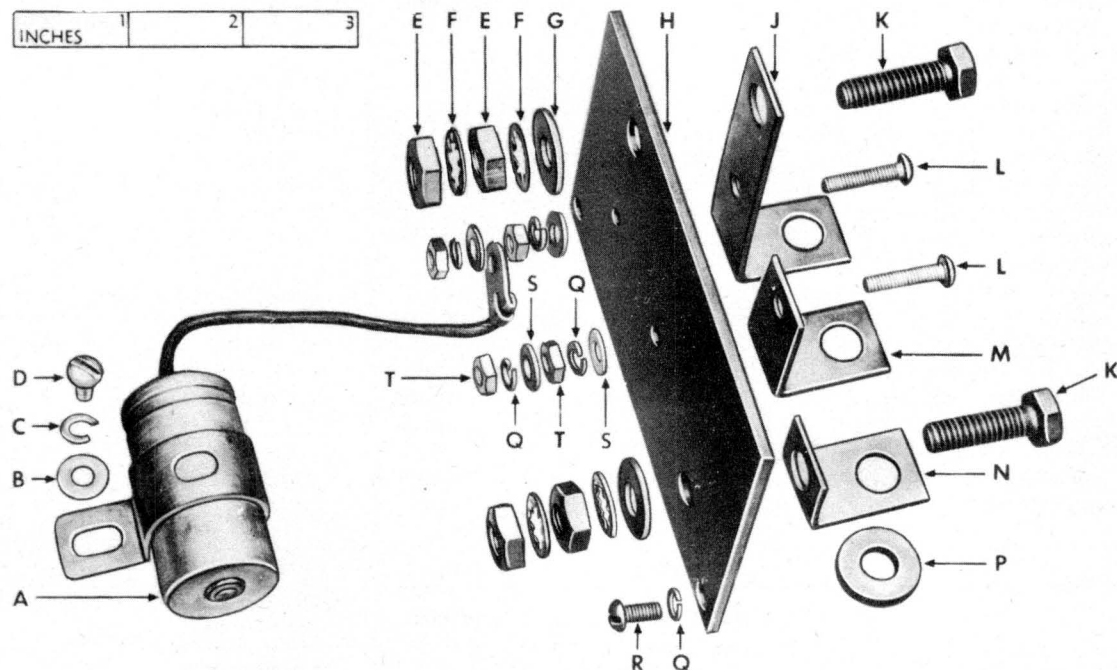

Key	Part Name	Part Number	Group Number
A	CONDENSER.....	FOM-P405.....	0601B
B	WASHER.....	BEBX1E-1.....	0601B
C	WASHER.....	BECX1E-1.....	0601B
D	SCREW.....	BCNX2AC-1.....	0601B
E	NUT.....	BBAX1B-1.....	0601B
F	WASHER.....	BEAX1K-1.....	0601B
G	WASHER.....	BEBX1H-1.....	0601B
H	BLOCK.....	FOM-70X1023E-17.....	0601B
J	CONNECTOR.....	FOM-70X1023E-18.....	0601B
K	SCREW.....		0601B
L	SCREW.....	BCNX1FK-1.....	0601B
M	CONNECTOR.....	FOM-70X1023E-19.....	0601B
N	CONNECTOR.....	FOM-70X1023E-20.....	0601B
P	WASHER.....	DR-1889909.....	0601B
Q	WASHER.....	BECX1D-1.....	0601B
R	SCREW.....	BCNX1FG-1.....	0601B
S	WASHER.....	BEBX1D-1.....	0601B
T	NUT.....		0601B

FIGURE 06-5—GENERATOR REGULATOR TERMINAL BLOCK AND RELATED PARTS


RA PD 76244

0601B

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0601B—ENGINE GENERATOR REGULATOR (Contd)	
06-4	G103-0500195	A169163	FOM-P437	REGULATOR, engine generator, assembly (Includes: voltage regulator, current regulator, and cut-out relay) (DR-1118473).....	1
	G162-1667106	BCOX1.1AK-2	DR-1901844	SCREW, machine, rd-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 7/8.....	3
	G103-0502274	BEBX1E-2	DR-834231	WASHER, plain, S., zn-pltd., SAE Std., No. 10 (0.190).....	3
	G147-0443063	BECX1E-2	DR-1880781	WASHER, lock, reg., S., zn-pltd., No. 10 (0.190).....	3
06-6	G103-0501733		DR-1864129	REGULATOR, voltage, engine generator, assembly.....	1
06-6	G103-0501491	A225800	DR-1869286	NUT, hex., br., 1/4-28NF-2.....	1
06-6	G103-0502273		DR-1872430	WASHER, lock, S., external teeth, 1/4 in.....	1
06-6	G103-0501745		DR-1839041	RELAY, cut-out, engine generator regulator, assembly.....	1
06-6	G103-0501491	A225800	DR-1869286	NUT, hex., br., 1/4-28NF-2.....	1
06-6	G103-0502273		DR-1872430	WASHER, lock, S., external teeth, 1/4 in.....	1
06-6	G103-0501748	A225804	DR-18211	RESISTANCE, engine generator regulator, assembly.....	1
	H001-5148851	BCOX1.1AF-2	DR-1901840	SCREW, machine, rd-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 1/2.....	1
06-4	G214-7035466		FOM-P1013-2	RING, gland, terminal tube (size F) (engine generator regulator and relay panel).....	1
06-4	G214-7035467		FOM-P353-2	RING, gland, terminal tube (size G) (engine generator regulator and relay panel).....	2
06-4	G214-7035468		FOM-P260-2	RING, gland, terminal tube (size P) (engine generator regulator and relay panel).....	1
06-5				SCREW, cap, hex-hd., br., 5/16-18NC-2 x 1 (engine generator lead terminal (1), and cab fan terminal (1)).....	2
06-5	H001-4026521	BBAX1B-1		NUT, regular, hex., s-fin., S., cd-pltd., 5/16-18NC-2.....	4
06-5	H001-7021771	BEAX1K-1		WASHER, lock, internal teeth, reg., S., cd-pltd., 5/16 in.....	4
06-5	H001-7043711	BEBX1H-1		WASHER, plain, S., cd-pltd., SAE std., 5/16 in.....	2
06-7,8	G103-0501772	A225834	DR-1861998	SCREW, contact, engine generator current and voltage regulators (special, No. 12 (0.216)-28NF-2 x 31/64.....	2
06-7,8	G102-0401116		DR-1839110	NUT, hex., br., No. 12 (0.216)-28NF-2.....	2
06-7,8	G130-0443032	BEAX1G-2	DR-1901842	WASHER, lock, internal-teeth, reg., S., zn-pltd., No. 12 (0.216).....	2
06-7,8,9	G103-0501778	BCGX1.1AC-3	DR-20173	SCREW, machine, oval-fil-hd., S., ni-pltd., No. 8 (0.164)-36NF-2 x 5/16 (engine generator current and voltage regulators and cut-out relay armature adjustment).....	3
06-6,7,8,9	G147-0443088		DR-1901832	WASHER, lock, S., zn-pltd., No. 8 (0.164).....	3
06-7,8,9	H001-1530004	A214677	DR-810794	WASHER, plain, S., zn-pltd., No. 8 (0.164).....	3
06-7,8	H001-1025044	BCGX1.1AC-2	DR-22820	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 8 (0.164)-36NF-2 x 5/16 (engine generator current and voltage regulators contact terminal).....	2
06-7,8	G103-0501493	A225814	DR-30986	NUT, hex., S., zn-pltd., No. 8 (0.164)-36NF-2.....	4
06-7,8	H001-7021651	BEAX1E-2	DR-1901834	WASHER, lock, internal-teeth, reg., S., zn-pltd., No. 8 (0.164).....	2
06-7,8	G147-0443088		DR-1901832	WASHER, lock, S., zn-pltd., No. 8 (0.164).....	4
06-5	H101-0132768	BCNX1FK-1		SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 3/4 (engine generator ground terminal (1), and condenser terminal (1)).....	2
06-5				NUT, regular, hex., s-fin., S., cd-pltd., No. 8 (0.164)-32NC-2.....	4
06-5	H001-7043591	BEBX1D-1		WASHER, plain, S., cd-pltd., SAE std., No. 8 (0.164).....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-6	H001-7025591 H001-5148851	BE CX1D-1 BCOX1.1AF-2	DR-1901840	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164)..... SCREW, machine, rd-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 1/2 (engine generator regulator cut-out relay and voltage regulator ground leads to mounting plate).....	4 2
06-6	G103-0502263		DR-1886670	WASHER, plain, cop., No. 10 (0.190).....	2
06-6	G103-0502264		DR-1888105	WASHER, plain, cop., No. 10 (0.190).....	2
06-6	G147-0443063	BE CX1E-2	DR-1880781	WASHER, lock, reg., S., zn-pltd., No. 10 (0.190).....	2
06-7	G102-0401503	A225842	DR-37318	SPRING, engine generator current regulator armature (ph-bz., 0.050 diam. stock x 0.295 O.D., 21 coils x 1 15/32 over-all lgh.).....	1
06-9	G102-0401504	A225837	DR-37339	SPRING, engine generator regulator cut-out relay armature.....	1
06-8	G103-0501968	A225828	DR-1841953	SPRING, engine generator voltage regulator armature (ph-bz., 0.050 diam. stock x 0.295 O.D., 21 coils x 1 3/4 over-all lgh.).....	1
06-5	G103-0502308		DR-1889909	WASHER, insulating, engine generator regulator terminal connector (5/16 x 3/4 x 1/8 in. thk.).....	3
06-6	G147-0443088 G103-0502451	A225443	DR-1901832 DR-18202	WASHER, engine generator regulator resistance (lock, S., zn-pltd., No. 8 (0.164))..... WINDING, engine generator current regulator, assembly (Includes: shunt coil, series and insulator).....	1 1
06-7	G103-0501490	BBDX1A-2	DR-29991	NUT, jam, hex., s-fin., S., zn-pltd., 1/4-28 NF-2.....	1

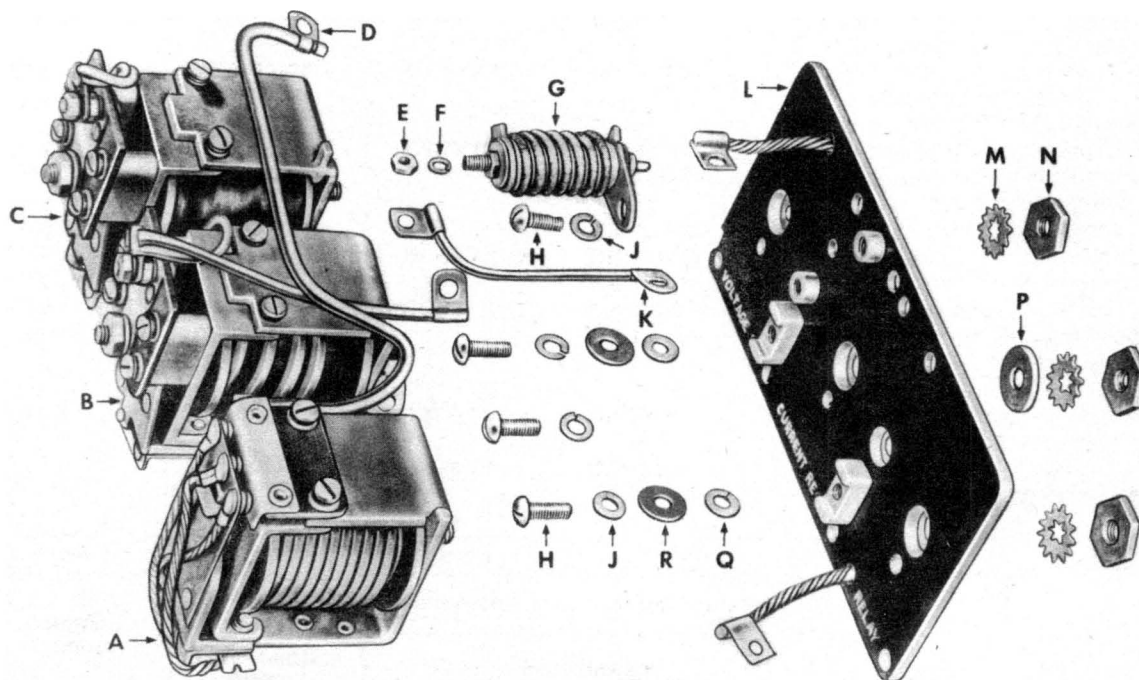

Key	Part Name	Part Number	Group Number
A	RELAY, assembly.....	DR-1839041	.0601B
B	REGULATOR, assembly	DR-1864128	.0601B
C	REGULATOR, assembly	DR-1864129	.0601B
D	LEAD.....	A225804	.0601B
E	NUT.....	A225814	.0601B
F	WASHER.....	DR-1901832	.0601B
G	RESISTANCE, assembly	A225804	.0601B
H	SCREW.....	BCOX1.1AF-2	.0601B
J	WASHER.....	BE CX1E-2	.0601B
K	LEAD.....	A225806	.0601B
L	PLATE, assembly.....	A225802	.0601B
M	WASHER.....	DR-1872430	.0601B
N	NUT.....	A225800	.0601B
P	WASHER.....	BE BX2B-2	.0601B
Q	WASHER.....	DR-1888105	.0601B
R	WASHER.....	DR-1886670	.0601B

RA PD 76348



FIGURE 06-6—GENERATOR REGULATOR MOUNTING PLATE WITH ATTACHED UNITS—EXPLODED VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0601B—ENGINE GENERATOR REGULATOR (Contd)	
	G103-0502452	A225840	DR-18203	WINDING, engine generator regulator cut-out relay, assembly (Includes: shunt coil, series coil, and insulator).....	1
06-9	G103-0501490	BBDX1A-2	DR-29991	NUT, jam, hex., s-fin., S., zn-pltd., 1/4-28 NF-2.....	1
				0602—CRANKING MOTOR	
06-10	G103-0500033		DR-1887666	ARMATURE, engine cranking motor, assembly.....	1
06-11	H002-0100110	CCAX1B	DR-104916	BALL, chr-alloy-S., grade 2, 3/16 in. (engine cranking motor drive housing).....	120
06-10	G103-0500117		DR-1887658	BAND, cover, engine cranking motor commutator end frame.....	1
06-10	H001-1030594	BCOX1.1AN	DR-132929	SCREW, machine, rd-hd., S., No. 10 (0.190)-32NF-2 x 1 1/4.....	1
06-11	G103-0500126		DR-1888393	BARREL, engine cranking motor drive, w/CLUTCH, assembly (Includes all items shown on figure 06-13, and JAW, DR-1887699).....	1
06-13	G103-0500121		DR-1887700	BARREL, engine cranking motor, w/STUD, assembly.....	1
06-12	H012-1303012	CAAX1AF	DR-903201	BEARING, ball, No. 201 (type A, annular, single row, light series, 0.4724 bore, 1.2598 O.D., 0.3937 width) (engine cranking motor intermediate gear shaft) (ND-3201).....	2
06-12	H012-1303015	CAAX1AG	DR-903202	BEARING, ball, No. 202 (type A, annular, single row, light series, 0.5906 bore, 1.3780 O.D., 0.4331 width) (engine cranking motor hand crank shaft).....	1
06-10	H012-1376012	700924	DR-954162	BEARING, ball, engine cranking motor armature shaft, commutator end.....	1
06-10,12	H012-1333015		DR-954292	BEARING, ball, engine cranking motor armature shaft, drive end.....	1
06-12	G103-0500134		DR-1887690	BEARING, needle, engine cranking motor hand crank shaft.....	1
	G103-0500243		DR-828448	BRUSH, engine cranking motor.....	4
	H001-5146469	BCNX1EG	DR-115903	SCREW, machine, rd-hd., S., No. 6 (0.138)-32NC-2 x 1/2.....	4
	H001-1518003	BECX1C	DR-106495	WASHER, lock, reg., S., No. 6 (0.138).....	4
06-13	G103-0500123		DR-1887721	BUSHING, engine cranking motor drive clutch.....	1
	G103-0500301		DR-1887703	BUSHING, engine cranking motor drive sun gear.....	1
	G103-1527772		DR-1900333	BUSHING, insulating, engine cranking motor terminal.....	1
06-10	G103-0500446		DR-1887634	CAP, engine cranking motor terminal shield.....	1
06-12	G103-0500563		DR-1887686	COLLAR, engine cranking motor hand crank shaft.....	1
06-11	G103-0501942		DR-1887728	COLLAR, spacing, engine cranking motor drive sun gear.....	1
06-10,12	G103-0500712		DR-1887684	COVER, engine cranking motor hand crank movable ratchet.....	1
06-12	G103-0501787		DR-5017850	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 15/32 (Make from BCGX1.1BF-2).....	6
	22W-1642100	BFWX1A		WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
06-12	G103-0500761		DR-1887685	CUP, engine cranking motor hand crank movable ratchet spring.....	1
	G103-0500955		DR-1887692	DRIVE, engine cranking motor, assembly.....	1
06-10	G103-2188266		DR-1902087	FRAME, engine cranking motor, commutator end, w/BRUSHES, assembly (Includes: frame w/pins assembly, brush springs, holders, terminal shield, terminal insulating washers, bushings, and terminal nuts).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-10	G103-0501783	BECX1E-1 BFWX1A	DR-1887663	SCREW, engine cranking motor commutator end frame to field frame.....	4
06-10	G103-0502302		DR-807295	WASHER, engine cranking motor commutator end frame screw.....	4
06-10	H001-7025621		DR-120217	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	4
	22W-1642100			WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
	G103-0500923		DR-1887645	FRAME, engine cranking motor, commutator end, w/PINS, assembly.....	1
06-10,12	G103-0500929	BECX1E-1 BFWX1A	DR-1887676	FRAME, engine cranking motor, drive end.....	1
06-10	G103-0501789		DR-1887664	SCREW, engine cranking motor end frame to field frame.....	6
06-10	G103-0502302		DR-807295	WASHER, engine cranking motor drive end frame screw.....	6
06-10	H001-7025621		DR-120217	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	6
	22W-1642100			WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
06-10	G103-1588252	A139740	DR-1902086	FRAME, engine cranking motor, w/FIELD, assembly.....	1
01-19	G103-0103100		CO-2249	GASKET, engine cranking motor to accessory case (vellumoid, 1/32 in. thk.).....	2

Key	Part Name	Part Number	Group Number
A	NUT.....	BBDX1A-2.....	.0601B
B	FRAME, assembly.....	DR-18195.....	.0601B
C	INSULATOR.....	DR-37330.....	.0601B
D	COIL (Serviced only as part of winding assy. A225443).....	DR-37354.....	.0601B
E	COIL, assembly (Serviced only as part of winding assy. A225443).....	DR-18207.....	.0601B
F	WASHER.....	DR-1901832.....	.0601B
G	SCREW.....	A225829.....	.0601B
H	BRACKET, assembly.....	A225833.....	.0601B
J	SCREW.....	BCGX1.1AC-2.....	.0601B
K	WASHER.....	BEAX1E-2.....	.0601B
L	BRACKET, assembly.....	A225831.....	.0601B
M	NUT.....	A225814.....	.0601B
N	WASHER.....	BEAX1G-2.....	.0601B
P	NUT.....	DR-1839110.....	.0601B

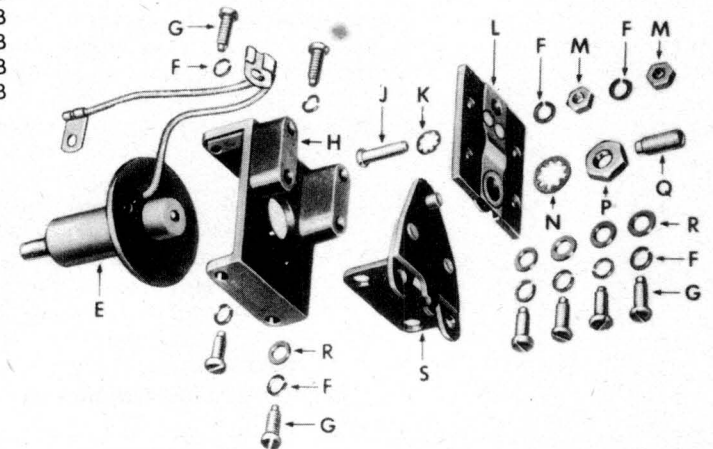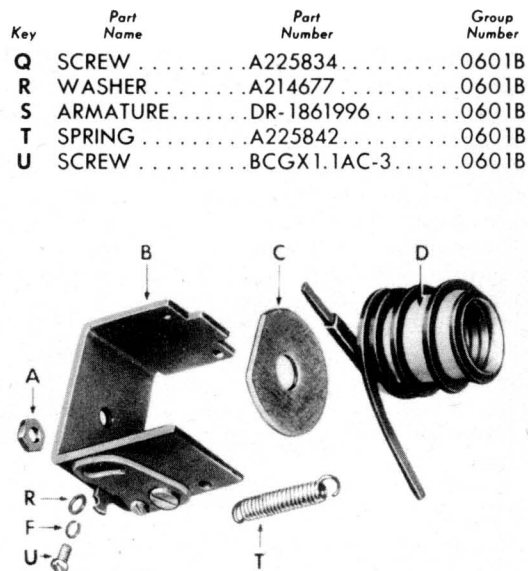


RA PD 341097

FIGURE 06-7—CURRENT REGULATOR ASSEMBLY—EXPLODED VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0602—CRANKING MOTOR (Contd)	
06-11	G103-0500939		DR-1887759	GEAR, annulus, engine cranking motor, w/PINS, assembly	1
06-10,11	G103-0501792		DR-1887753	SCREW, engine cranking motor annulus gear to housing	4
06-10,11	G103-0502269		DR-813731	WASHER, engine cranking motor annulus gear screw	4
06-10,11	H001-7025591	BECX1D-1	DR-121841	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164)	4
06-10	22W-1642125	BFWX1B		WIRE, S., low carbon, black anld., 0.0625 diam.	as req.
06-10	G103-0501577		DR-1887708	GEAR, engine cranking motor armature shaft, drive end	1
06-10	G103-0501790		DR-1887665	SCREW, engine cranking motor armature shaft gear	1
06-10,12	G103-0500952		DR-1887679	GEAR, engine cranking motor hand crank shaft	1
06-12	G103-0501509		DR-1887689	NUT, engine cranking motor hand crank shaft gear	1
06-12	G103-0501512		DR-137150	PIN, cotter, split, S., cd-pltd., 1/16 x 7/8 (Make from BFAX1BE-1)	1
06-10,12	G103-0500954		DR-1887672	GEAR, engine cranking motor, intermediate	1
06-11	G103-0502101		DR-1887701	GEAR, sun, engine cranking motor drive, w/BUSHING, assembly	1
	G102-0400835		DR-810226	HOLDER, engine cranking motor brush	4
06-10,12	G103-0501179		DR-1887688	HOLDER, engine cranking motor hand crank (Also known as JAW)	1
06-10,12	G103-0500192		DR-1887678	BOLT, engine cranking motor hand crank holder to shaft	1
06-10,12	G103-0500193		DR-1887677	NUT, engine cranking motor hand crank holder to shaft bolt	1
06-10,12	H001-0811719	BFAX1BD-1	DR-137141	PIN, cotter, split, S., cd-pltd., 1/16 x 5/8	1
06-10,11	G103-0501042		DR-1887756	HOUSING, engine cranking motor drive	1
06-10	G103-0500194		DR-1887661	BOLT, engine cranking motor drive housing	6
06-10	G103-0501464		DR-1887535	NUT, engine cranking motor drive housing bolt	6
06-10	G103-0502797		DR-1872057	WASHER, engine cranking motor drive housing bolt	12
06-10,11	G103-0501178		DR-1887699	JAW, meshing, engine cranking motor drive shaft	1
06-11	G103-0501507		DR-1887696	NUT, engine cranking motor drive shaft meshing jaw	1
06-11	G103-0501564		DR-1887722	PIN, cotter, engine cranking motor drive shaft meshing jaw	1
06-12	G103-0501168		DR-1887682	KEY, engine cranking motor hand crank shaft	2
06-10	H001-0518010	BGAX5B	DR-124543	KEY, Woodruff, ni-S., 1/8 x 1/2 (No. 404) (engine cranking motor armature shaft gear	1
06-11	G103-0501308		DR-1887729	LOCK, engine cranking motor drive sun gear	1
01-2,06-10	G103-0105920	D31767	FOM-P314	MOTOR, cranking, engine, assembly (Includes: drive assembly) (Also known as STARTER or STARTER MOTOR) (DR-1108682) (CO-5842)	1
	G103-0103760	BBFX1CA-1	CO-2458	NUT, castle alloy-S., cd-pltd., 3/8-24NF-2	6
01-19	G103-0106200	A136011	CO-2418	STUD, alloy-S., cd-pltd., dld. f/lkg-wire, 3/8-16NC-3 (5/8) x 3/8-24NF-2 (5/8) x 1 5/8	6
	G103-0106940	A136017	CO-2474	WASHER, plain, S., cd-pltd., 3/8 in.	6
	22W-1642125	BFWX1B		WIRE, S., low carbon, black anld., 0.0625 diam.	as req.
06-13	G103-0501525		DR-1887716	NUT, adjusting, engine cranking drive clutch	1
06-11	G103-0501371		DR-1887710	NUT, engine cranking motor ball retainer	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-13	G103-0501526 H001-4133820 H001-7017681	BEAX7H-1	DR-1887720	NUT, engaging, engine cranking motor drive shaft.....	1
			DR-134570	NUT, hex., br., 3/8-16NC-2 (engine cranking motor terminal).....	2
			DR-138489	WASHER, lock, external teeth, reg., S., cd-pltd., 3/8 in.....	2
06-11	G103-0501508		DR-1887730	NUT, retaining, engine cranking motor drive sun gear.....	1
06-11	G103-0502301	A291142 A291141	DR-1887697	OIL SEAL, engine cranking motor drive shaft rod.....	1
	G103-0501563		DR-1887761	PIN, engine cranking motor annulus gear.....	4
	G103-0501574		DR-812016	PIN, hinge, engine cranking motor brush holder.....	4
	G103-0501575		DR-812015	PIN, stop, engine cranking motor brush holder.....	4
06-10,12	G103-0500953	BCKX1EP	DR-1887673	PINION, engine cranking motor intermediate gear shaft (meshes with hand crank shaft gear).....	1
06-10,12	G103-0501524		DR-1887674	NUT, engine cranking motor intermediate gear shaft pinion.....	1
06-10	G103-0501562		DR-137150	PIN, cotter, split, S., cd-pltd., 1/16 x 7/8 (Make from BFAXIBE-1).....	1
06-11	G103-0501576		DR-1887695	PINION, planet, engine cranking motor drive, w/BEARING, assembly.....	3
06-10,11	G103-0500122		DR-1887762	PLATE, engine cranking motor drive housing.....	1
	G103-0501791		DR-133418	SCREW, machine, fl-hd., S., No. 6 (0.138)-32NC-2 x 1 1/4.....	4

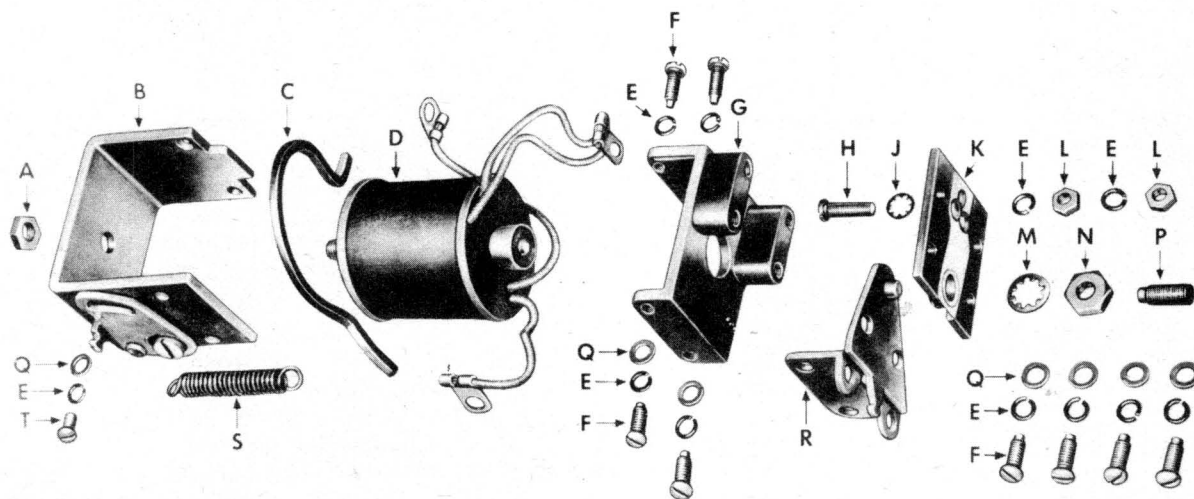

Key	Part Name	Part Number	Group Number
A	NUT.....	BBDX1A-2.....	.0601B
B	FRAME, assembly.....	DR-18195.....	.0601B
C	COIL (Served only as part of COIL, assembly—B184438).....	DR-37317.....	.0601B
D	COIL, assembly.....	B184438.....	.0601B
E	WASHER.....	DR-1901832.....	.0601B
F	SCREW.....	A225829.....	.0601B
G	BRACKET.....	A225833.....	.0601B
H	SCREW.....	BCGX1.1AC-2.....	.0601B
J	WASHER.....	BEAX1E-2.....	.0601B
K	BRACKET, assembly.....	A225831.....	.0601B
L	NUT.....	A225814.....	.0601B
M	WASHER.....	BEAX1G-2.....	.0601B
N	NUT.....	DR-1839110.....	.0601B
P	SCREW.....	A225834.....	.0601B
Q	WASHER.....	A214677.....	.0601B
R	ARMATURE.....	DR-1861996.....	.0601B
S	SPRING.....	A225828.....	.0601B
T	SCREW.....	BCGX1.1AC-3.....	.0601B


FIGURE 06-8—VOLTAGE REGULATOR ASSEMBLY—EXPLODED VIEW

RA PD 341098

0602

GROUP 06—ELECTRICAL

Key	Part Name	Part Number	Group Number
A	NUT	BBDX1A-2	0601B
B	FRAME, assembly	DR-18195	0601B
C	INSULATOR	DR-37330	0601B
D	COIL (Serviced only as part of WINDING, assembly—A225840)	DR-37326	0601B
E	COIL (Serviced only as part of WINDING, assembly—A225840)	DR-18204	0601B
F	SCREW	A225829	0601B
G	WASHER	DR-1901832	0601B
H	WASHER	A214677	0601B
J	BRACKET, assembly	DR-1839044	0601B
K	BRACKET, assembly	A225839	0601B
L	ARMATURE	A225835	0601B
M	SCREW	BCGX1.1AC-2	0601B
N	SPRING	A225837	0601B
P	SCREW	BCGX1.1AC-3	0601B

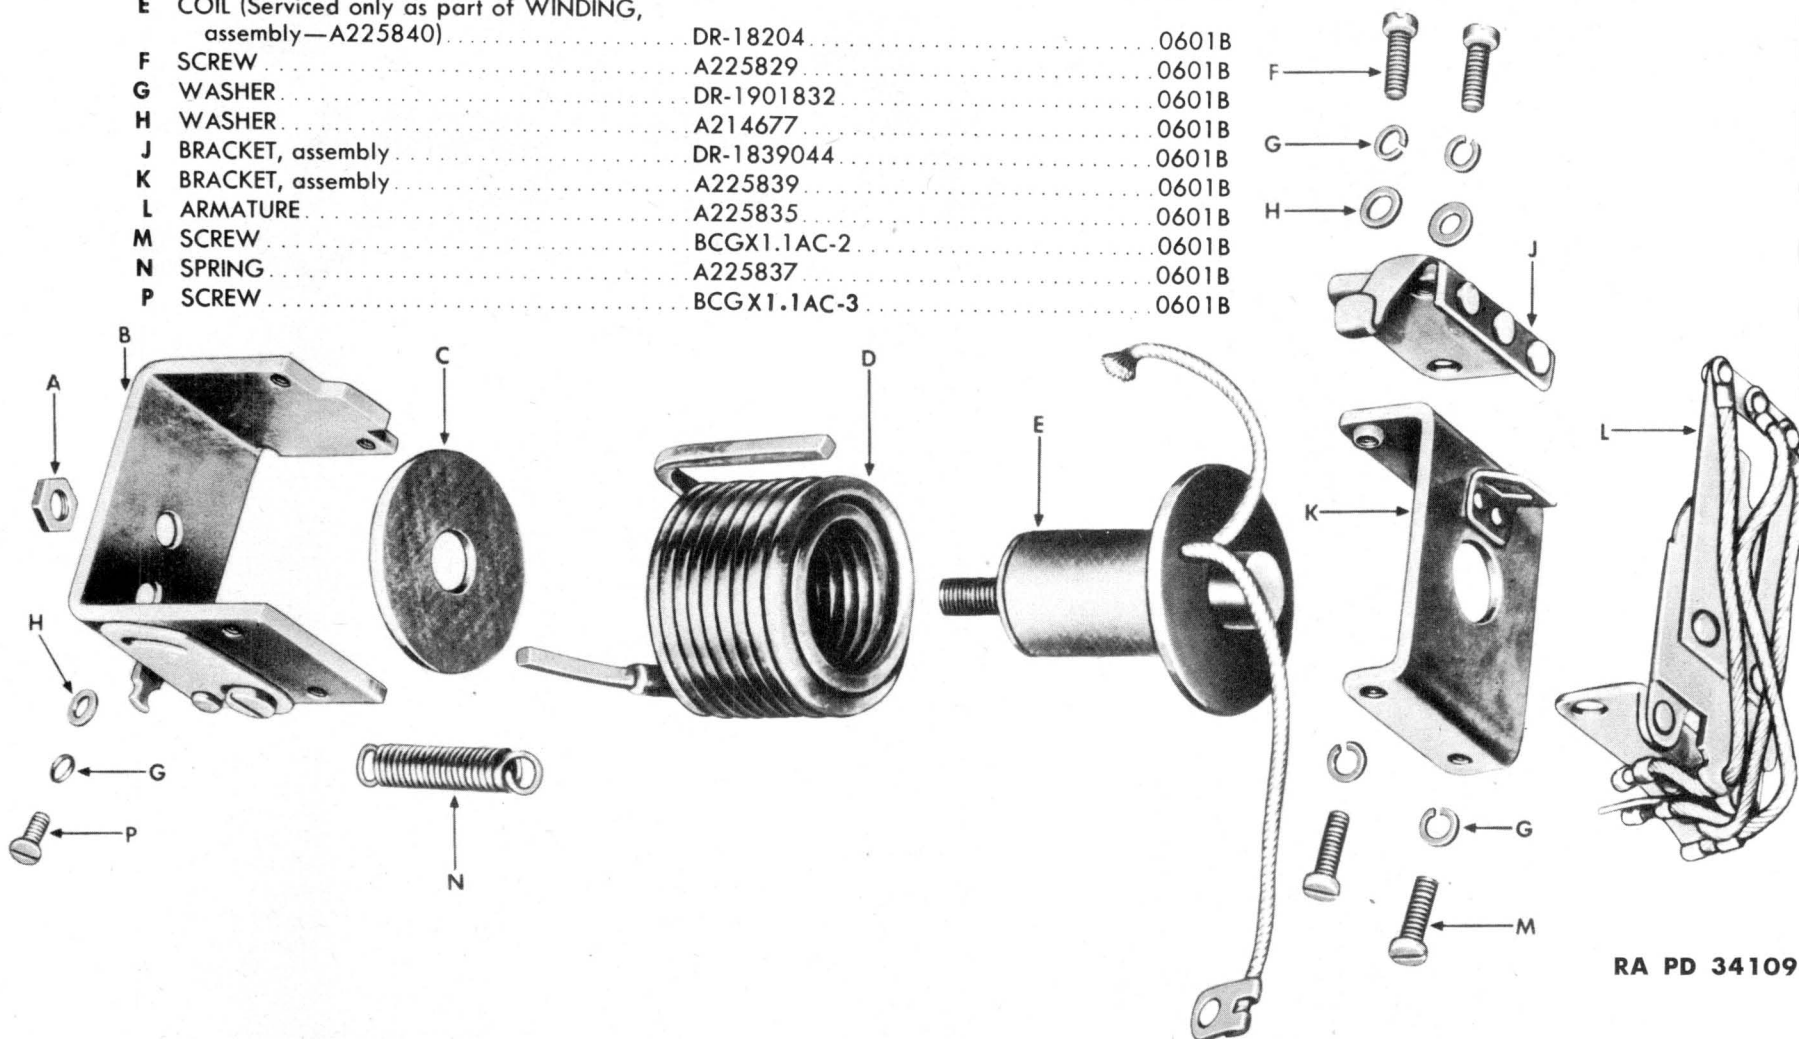


RA PD 341099

FIGURE 06-9—GENERATOR REGULATOR CUT-OUT RELAY ASSEMBLY—EXPLODED VIEW

Key	Part Name	Part Number	Group Number
A	BAND	DR-1887658	0602
B	SCREW	BCOX1.1AN	0602
C	PLATE	DR-1887356	0602
D	CAP	DR-1887634	0602
E	FRAME, w/BRUSHES, assembly	DR-1902087	0602
F	FRAME, w/FIELD, assembly	DR-1902086	0602

Key	Part Name	Part Number	Group Number
Q	GEAR	DR-1887679	0602
R	BEARING	DR-954292	0602
S	NUT	DR-1887674	0602
	PIN	GM-137150	0602
T	PINION	DR-1887673	0602
U	PLATE	DR-1887670	0602
V	GEAR	DR-1887672	0602
W	GEAR	DR-1887708	0602
X	SCREW	DR-1887665	0602
Y	HOUSING	DR-1887756	0602

Key	Part Name	Part Number	Group Number
Z	SCREW	DR-1887753	0602
	WASHER	BECX1D-1	0602
	WASHER	DR-813731	0602
	WIRE	BFWX1B	0602
AA	PLATE	DR-1887762	0602
AB	JAW	DR-1887699	0602
AC	SCREW	DR-1887664	0602
AD	WASHER	BECX1E-1	0602
AE	WASHER	DR-807295	0602
AF	BOLT	DR-1887661	0602
AG	KEY	BGAX5B	0602
AH	WASHER	BECX1E	0602
AJ	SCREW	BCOX1.1AB9	0602
AK	SCREW	DR-1887663	0602
AL	BEARING	DR-954162	0602
AM	SPACER	DR-1887416	0602
AN	SCREW	DR-1886500	0602

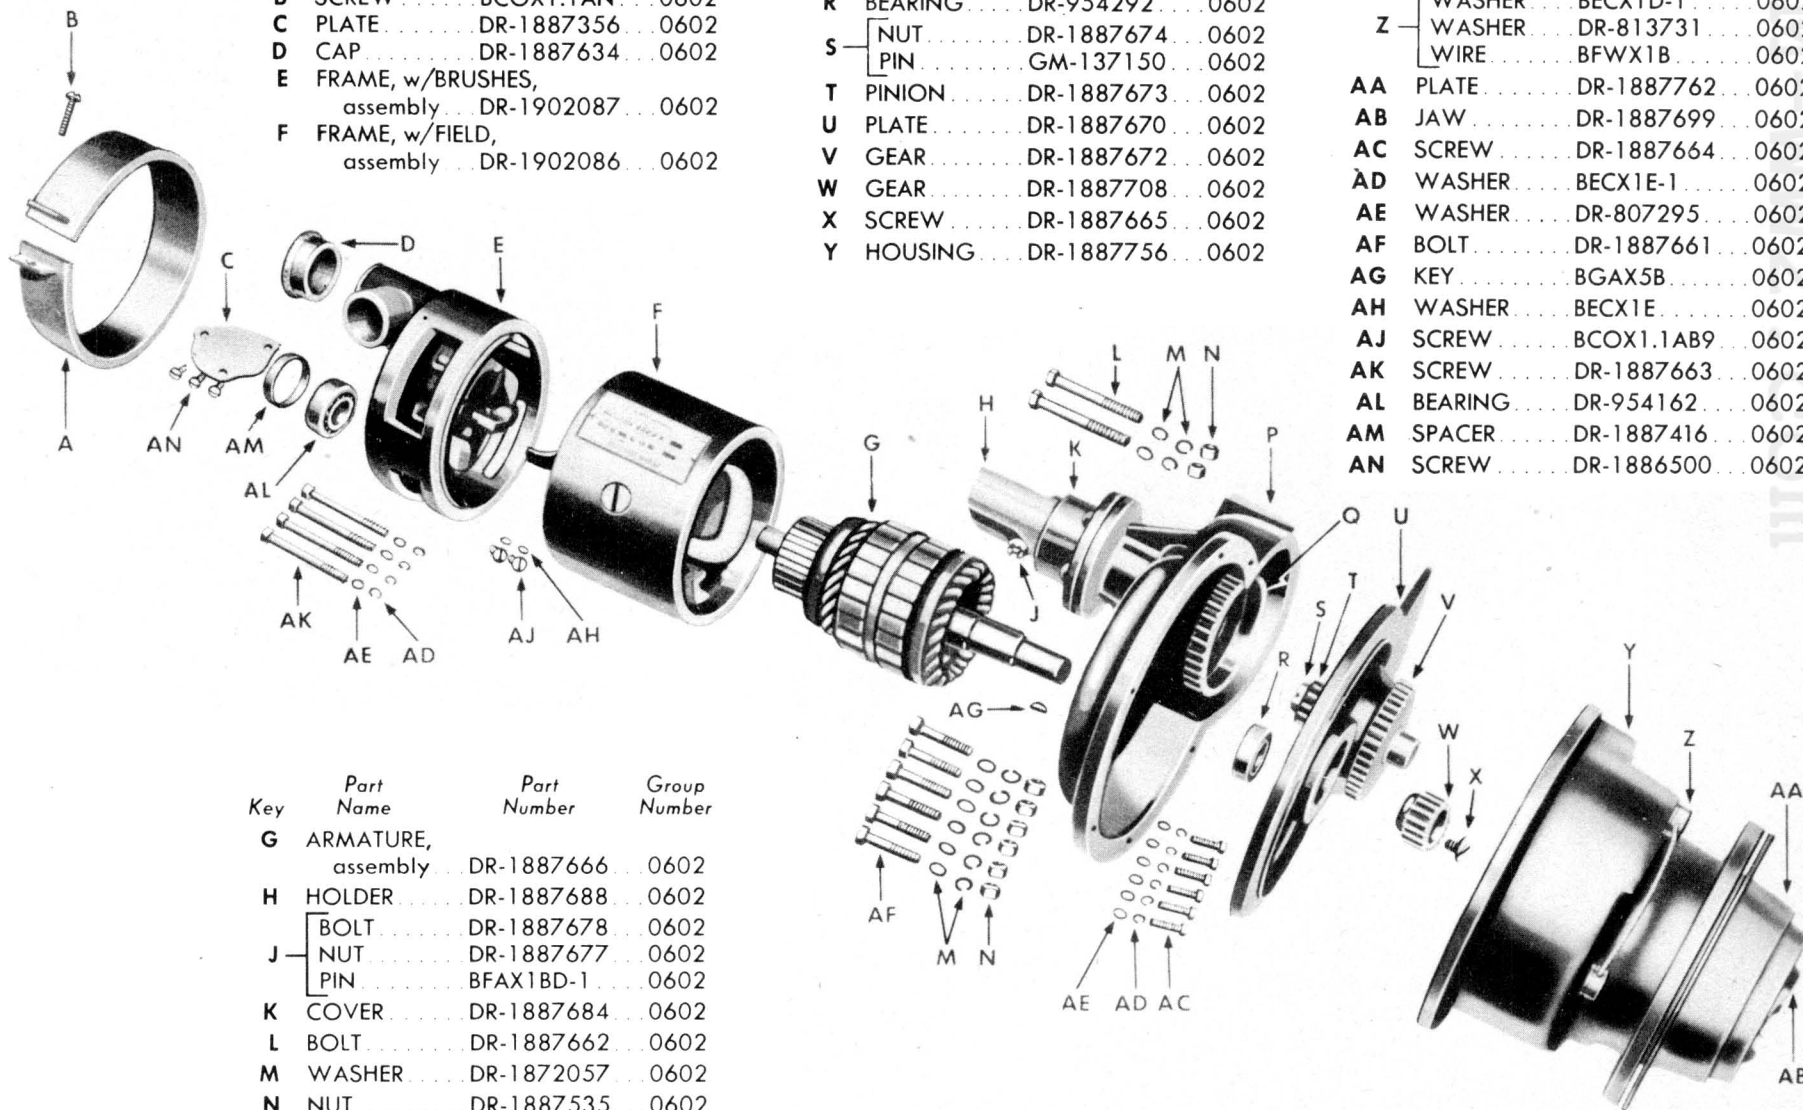


Key	Part Name	Part Number	Group Number
G	ARMATURE, assembly	DR-1887666	0602
H	HOLDER	DR-1887688	0602
J	BOLT	DR-1887678	0602
	NUT	DR-1887677	0602
	PIN	BFAX1BD-1	0602
K	COVER	DR-1887684	0602
L	BOLT	DR-1887662	0602
M	WASHER	DR-1872057	0602
N	NUT	DR-1887535	0602
P	FRAME	DR-1887676	0602

RA PD 341100


FIGURE 06-10—CRANKING MOTOR ASSEMBLY—EXPLODED VIEW

GROUP 06—ELECTRICAL

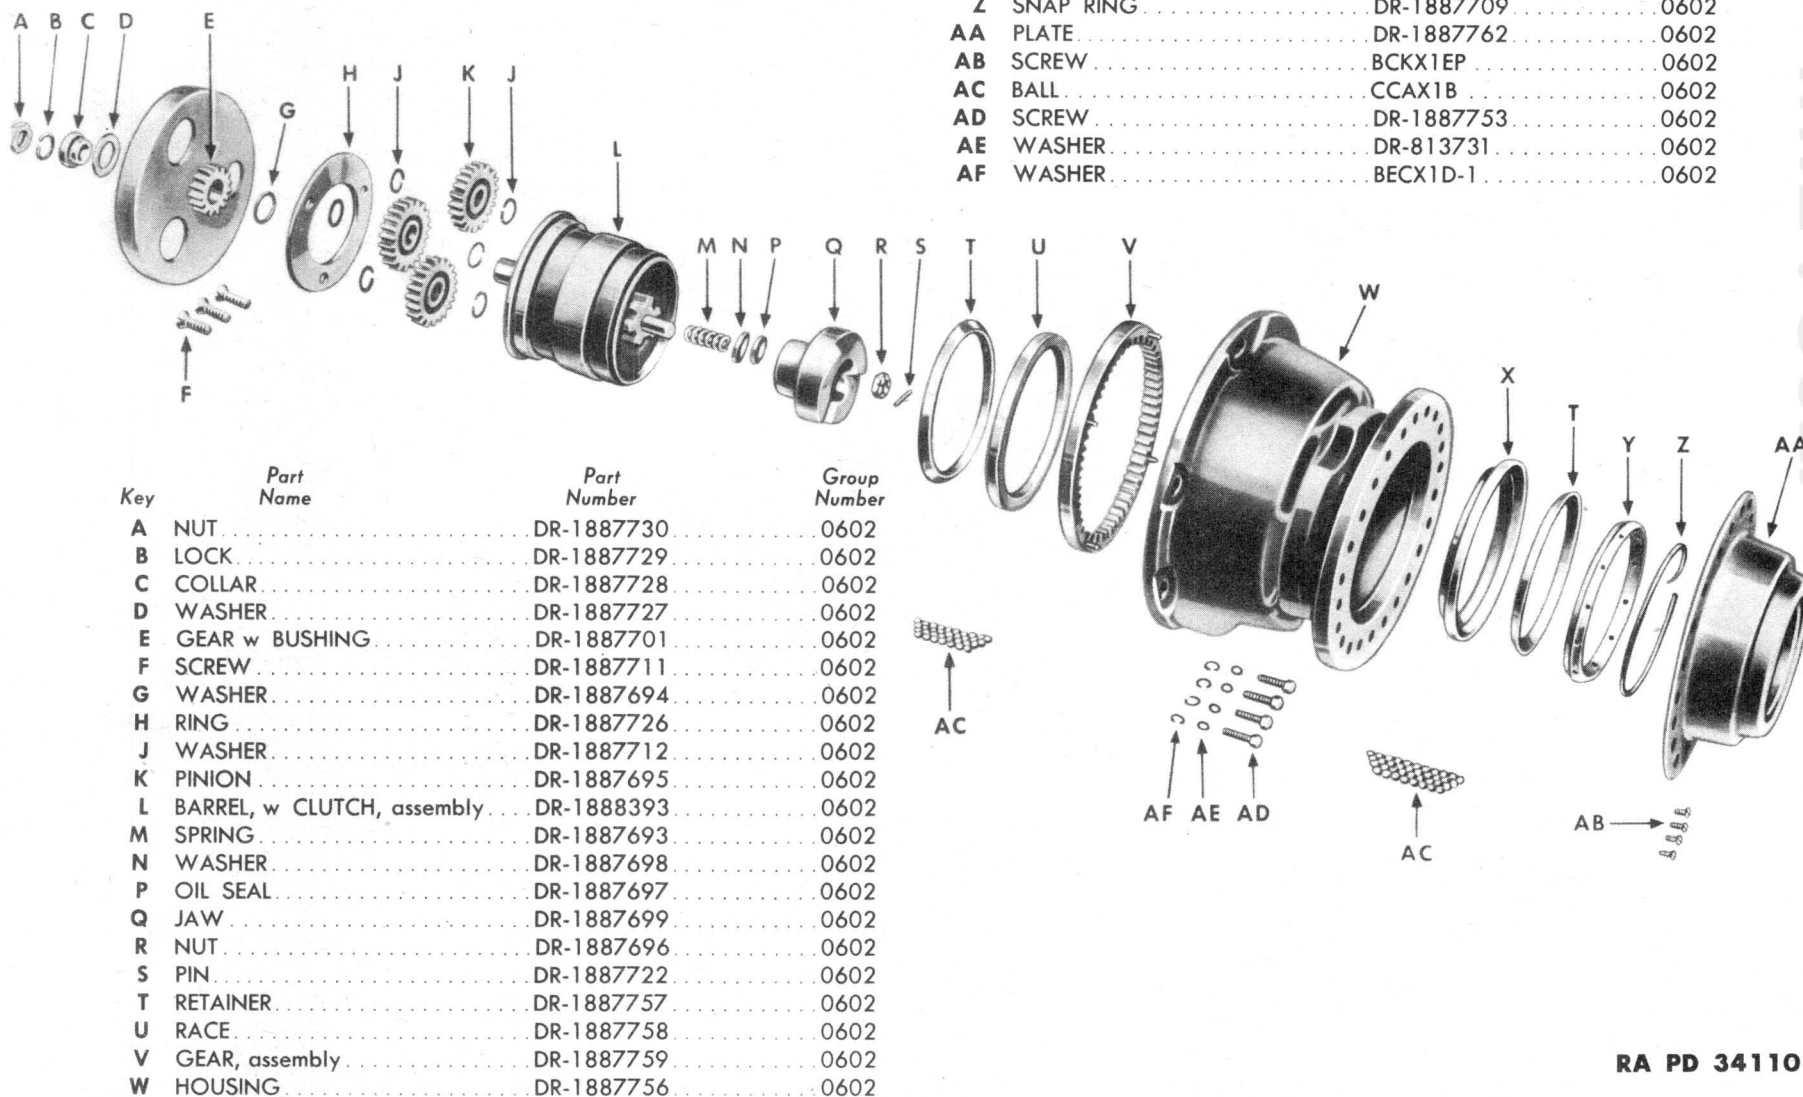

RA PD 341101

FIGURE 06-11—CRANKING MOTOR DRIVE ASSEMBLY AND HOUSING—EXPLODED VIEW

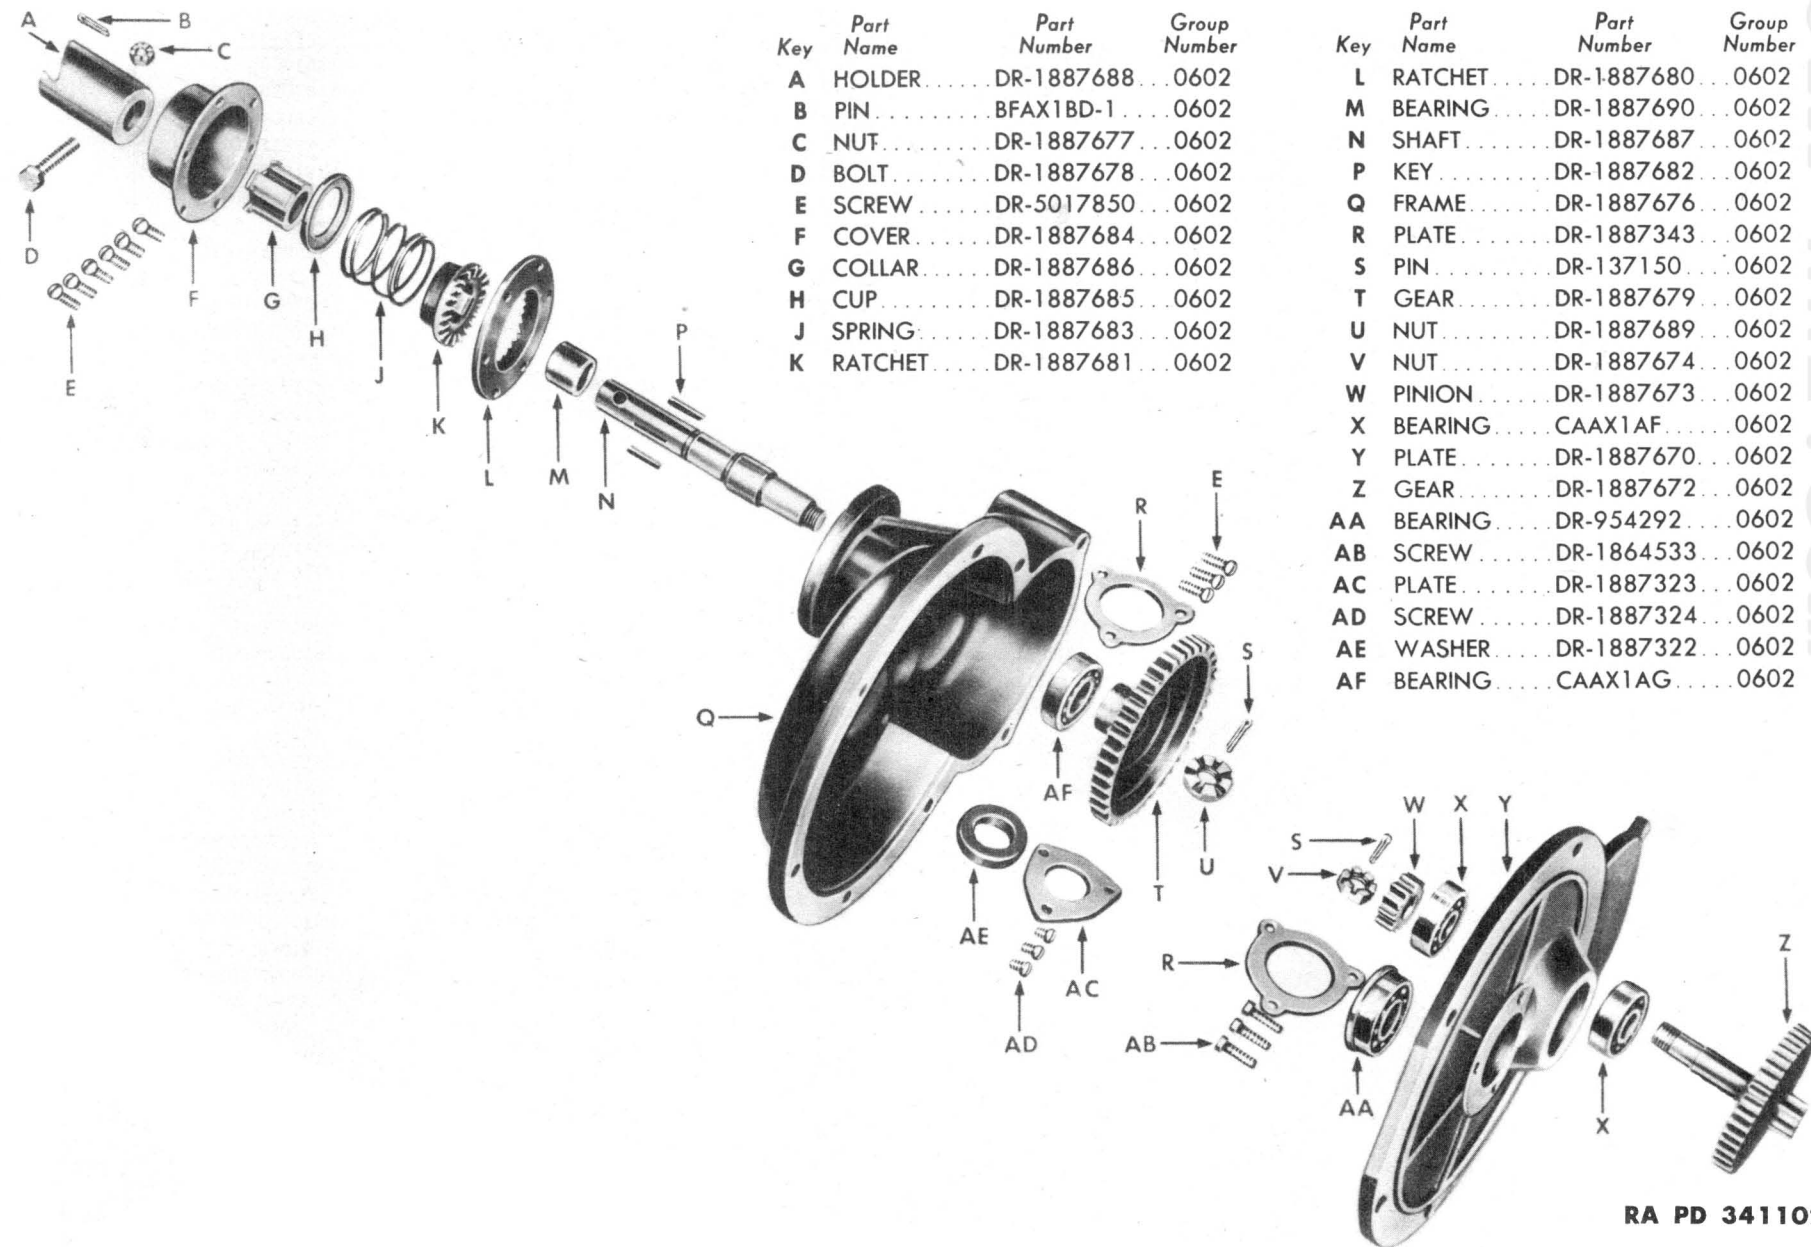

RA PD 341102

FIGURE 06-12—CRANKING MOTOR DRIVE END FRAME, HAND CRANKING PARTS, AND RELATED PARTS—EXPLODED VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0602—CRANKING MOTOR (Contd)	
06-10	G103-0501611	BFWX1A	DR-1887356	PLATE, engine cranking motor commutator end bearing.....	1
06-10	G103-0501782		DR-1886500	SCREW, engine cranking motor commutator end bearing plate.....	3
	22W-1642100			WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
06-13	G103-0500493	BCGX1.1BG-2 BFWX1A	DR-1888444	PLATE, engine cranking motor drive clutch, assembly.....	1
06-12	G103-0501613		DR-1887343	PLATE, retaining, engine cranking motor armature shaft drive end ball bearing.....	1
06-12	G103-0501788		DR-1864533	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 5/8.....	3
	22W-1642100			WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
06-12	G103-0501612	BFWX1A	DR-1887323	PLATE, retaining, engine cranking motor drive end frame felt washer.....	1
06-12	G103-0501844		DR-1887324	SCREW, engine cranking motor drive end frame felt washer retaining plate.....	3
	22W-1642100			WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
06-12	G103-0501613	BFWX1A	DR-1887343	PLATE, retaining, engine cranking motor hand crank shaft ball bearing.....	1
06-12	G103-0501787		DR-5017850	SCREW, machine, oval-fil-hd., S., zn-pltd., No. 10 (0.190)-32NF-2 x 15/32 (Make from BCGX1.1BF-2).....	3
	22W-1642100			WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
06-10,12	G103-0303071	BFWX1A	DR-1887670	PLATE, engine cranking motor bearing and gear, assembly.....	1
06-10	G103-0500197		DR-1887662	BOLT, engine cranking motor drive end bearing plate.....	2
06-10	G103-0501464		DR-1887535	NUT, engine cranking motor drive end bearing plate bolt.....	2
06-10	G103-0502797	BCOX1.1AB-9	DR-1872057	WASHER, engine cranking motor drive end bearing plate bolt.....	4
06-11	G103-0500138		DR-1887758	RACE, engine cranking motor drive housing ball, inner.....	1
06-11	G103-0501726		DR-1887790	RACE, engine cranking motor drive housing ball, outer.....	1
06-12	G103-0501724	BECX1E	DR-1887681	RATCHET, movable, engine cranking motor hand crank shaft.....	1
06-12	G103-0501723		DR-1887680	RATCHET, stationary, engine cranking motor hand crank shaft.....	1
06-11	G103-0501747		DR-1887757	RETAINER, engine cranking motor drive housing ball.....	2
06-13	G103-0501985	BECX1E	DR-1887717	RING, engine cranking motor drive clutch spring, w/STUDS, assembly.....	1
06-13	G103-0501727		DR-1887715	RING, locking, engine cranking motor drive clutch adjusting nut.....	1
06-11	G103-0501746		DR-1887726	RING, retaining, engine cranking motor drive planet pinion.....	1
06-11	G103-0501869	BECX1E	DR-1887711	SCREW, engine cranking motor drive planet pinion retaining ring.....	3
	G103-0501728		DR-1887713	ROD, engine cranking motor drive shaft meshing jaw.....	1
06-10	H001-5148819		DR-135616	SCREW, machine, rd-hd., S., blued, No. 10 (0.190)-32NF-2 x 1/4 (engine cranking motor brush lead to field).....	2
06-10	H001-158005	BECX1E	DR-106497	WASHER, lock, reg., S., No. 10 (0.190).....	2
	G103-0501944		DR-1887714	SHAFT, engine cranking motor drive.....	1
06-13	G103-0501943		DR-1888394	SHAFT, engine cranking motor drive, w/ROD, assembly.....	1
06-12	G103-0501871	BECX1E	DR-1887687	SHAFT, engine cranking motor hand crank.....	1
	G103-1784842		DR-1900318	SHIELD, engine cranking motor terminal.....	1
	G103-1787053		DR-1900316	SLEEVE, insulating, engine cranking motor terminal.....	1
06-11	G103-0501742	BECX1E	DR-1887709	SNAP RING, engine cranking motor ball retainer nut.....	1
06-10	G103-0501972		DR-1887416	SPACER, engine cranking motor commutator end bearing.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-13	G103-0501959	A136071	DR-1887725	SPACER, engine cranking motor drive clutch plate.....	1
06-13	G103-0501984		DR-1887719	SPACER, engine cranking motor drive clutch spring.....	1
01-19	G103-0105683		CO-2667	SPACER, engine cranking motor gasket.....	1
	G103-1789594		DR-1855685	SPRING, engine cranking motor brush.....	4
06-13	G103-0501983		DR-1887718	SPRING, tension, engine cranking motor drive clutch.....	8
06-11	G103-0501986		DR-1887693	SPRING, engine cranking motor drive shaft meshing jaw.....	1
06-12	G103-0501982		DR-1887683	SPRING, engine cranking motor hand crank movable ratchet.....	1
	G104-2392405		DR-1902090	TERMINAL, engine cranking motor w/lead WIRE, assembly.....	1
06-11	G103-0502301		DR-1887698	WASHER, engine cranking motor drive shaft rod oil seal.....	1
	G103-1842704		DR-805790	WASHER, engine cranking motor terminal, outside.....	1
06-12	G103 0502268	A291153	DR-1887322	WASHER, engine cranking motor drive end frame (felt).....	1
	G103-0502265		DR-1861076	WASHER, insulating, engine cranking motor terminal (rd., 25/64 I.D. x 3/4 O.D. x 3/32 in. thk.).....	2
	G104-2443069	A291139	DR-1901940	WASHER, insulating, engine cranking motor terminal (sq., 7/8 O.D.).....	1
06-11	G103-0501941		DR-1887712	WASHER, spacing, engine cranking motor drive planet pinion.....	6
06-11	G103-0502298		DR-1887727	WASHER, engine cranking motor drive sun gear.....	1
06-11	G103-0502303		DR-1887694	WASHER, thrust, engine cranking motor drive sun gear.....	1
	G103-0501196		DR-811450	WIRE, engine cranking motor brush to field.....	2

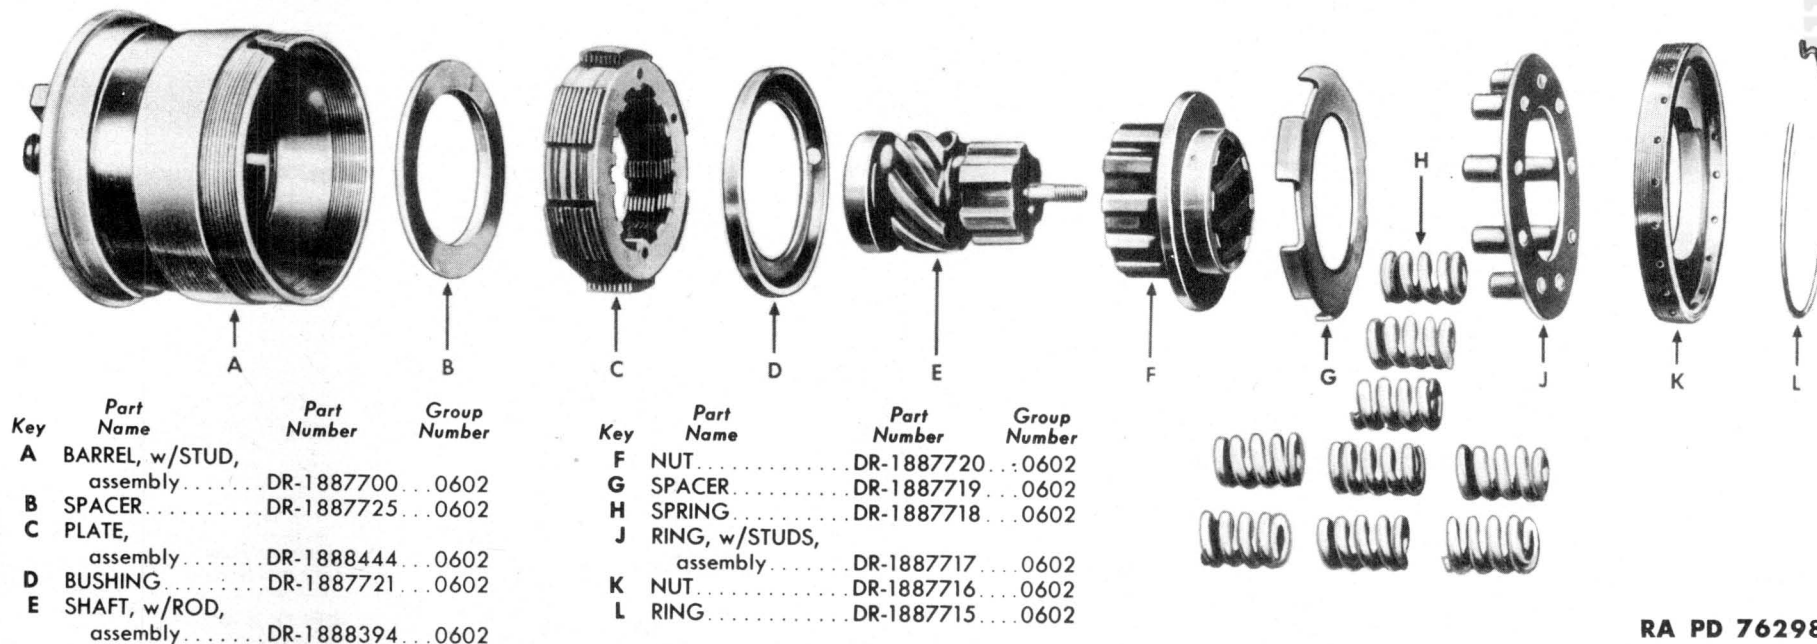



FIGURE 06-13—CRANKING MOTOR BARREL ASSEMBLY—EXPLODED VIEW

RA PD 76298

0602

GROUP 06—ELECTRICAL


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0603A—MAGNETO-SCINTILLA	
06-19	G038-0104635	B166518	SCI-10-2148	AXLE, magneto breaker contact lever	2
06-18	G038-8800140		SCI-10-13776	AXLE, magneto distributor gear, assembly	2
06-17	H012-2400015	CAGX1AM	SCI-2-462	BEARING, ball, No. 15, 0.5906 bore x 1.3870 O.D. x 0.3150 width (magneto drive shaft breaker end)	2
06-17	H012-2400017	CAG1X1AP	SCI-2-463	BEARING, ball, No. 17, 0.6693 bore x 1.7323 O.D. x 0.4331 width (magneto drive end)	2
06-15,21,24	G103-0100460	A173926	SCI-10-55112	BLOCK, magneto distributor, left, assembly	2
06-21	G103-0105320		SCI-10-7439	SCREW, piercing, magneto distributor block wire electrode	16
06-15,21,24	G103-1000480	A173925	SCI-10-5510Z	BLOCK, magneto distributor, right, assembly	2
06-21			SCI-10-13591	SCREW, magneto distributor block booster electrode	2
06-15,21	G104-0103481		SCI-2-220	WASHER, lock, light, S., No. 6 (0.138)	2
06-19	G038-0176165		SCI-10-1801	BRACKET, support, magneto breaker contact screw	2
06-19	G103-0105340		SCI-2-172	SCREW, attaching, magneto breaker contact support bracket	4
06-19	G104-0103481		SCI-2-220	WASHER, lock, light, S., No. 6 (0.138)	4
06-19	G103-0106800		SCI-2-801	WASHER, plain, br., 0.141 x 0.359 x 0.031	4
06-15	G103-0100740		SCI-10-7559Z	BREAKER, magneto, assembly	2
06-20	G038-0111685		SCI-10-13374	BRIDGE, magneto coil primary to ground terminal, assembly	2
06-20	G104-0102147		SCI-10-4874	SCREW, attaching, magneto coil primary bridge	4
06-20	G104-0103474		SCI-10-7308	WASHER, ear lock, magneto coil primary bridge	4
06-18	G038-0111688	A173935	SCI-10-12647	BRUSH, magneto distributor cylinder, high tension contact, assembly	2
06-19	G103-0500312		SCI-10-13330	BUSHING, insulating, magneto breaker contact screw bracket	4
	G103-0100880		SCI-2-403	BUSHING, magneto breaker lever (contact)	2
06-14,22	G103-0100040		SCI-10-4860	BUSHING, magneto coil cover ground terminal	2
06-22	G103-0500680		SCI-10-25725	BUTTON, magneto ground terminal contact screw	2
06-17	G103-0100940		SCI-10-20223	CAM, magneto contact breaker (4 lobe)	2
06-17	G103-0105180		SCI-2-167	SCREW, attaching, magneto breaker cam	2
06-15	G104-0100368		SCI-2-819	CLAMP, attaching, magneto coil	4
06-15	G104-0102145		SCI-2-177	SCREW, attaching, magneto coil clamp	4
06-15	G104-0103481		SCI-2-220	WASHER, lock, light, S., No. 6 (0.138)	4
06-14,22	G103-0101180		SCI-10-3666	CLAMP, attaching, magneto contact inspection cover	2
06-14,18	G103-0101220		SCI-10-3074	CLAMP, attaching, magneto, radio shield, assembly (spring type)	4
06-21	G038-0120658		SCI-10-2745Z	CLAMP, magneto distributor block	2
06-15,21	G103-0500455		SCI-10-2489Y	CLAMP, magneto distributor block, assembly	2
06-15,21	G104-0101399		SCI-2-152Z	PIN, safety, distributor block clamp screws	2
06-21	G214-5173901		SCI-10-2633	RING, lock, magneto distributor block clamp screw	2
06-21			SCI-10-13638	SCREW, attaching, magneto distributor block clamp	2
06-20	G081-0113920		SCI-10-14857	COIL, magneto, assembly	2
06-15	G038-0117765		SCI-10-14856	COIL, magneto, w/CONDENSER, assembly	2

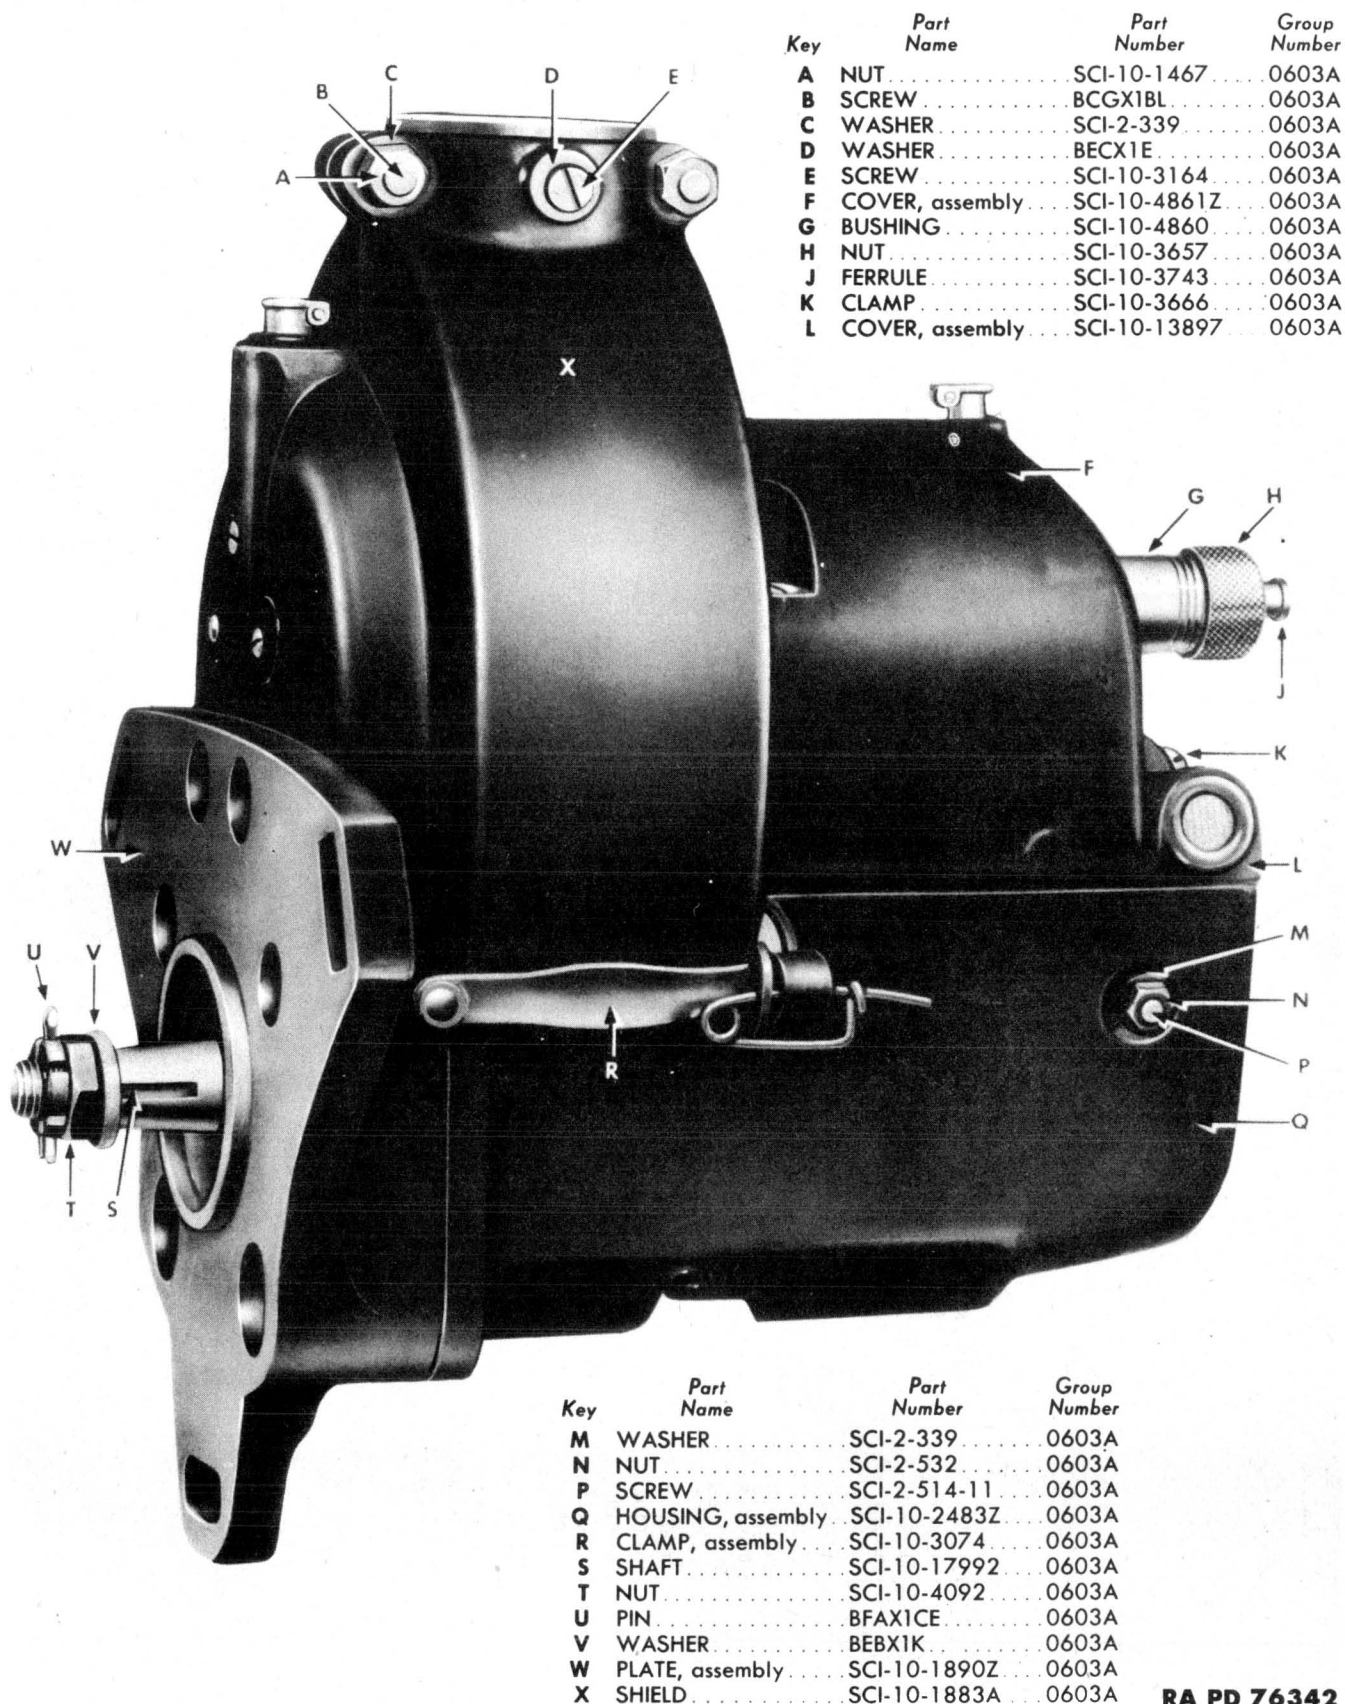

RA PD 76342

FIGURE 06-14—SCINTILLA MAGNETO ASSEMBLY

GROUP 06—ELECTRICAL

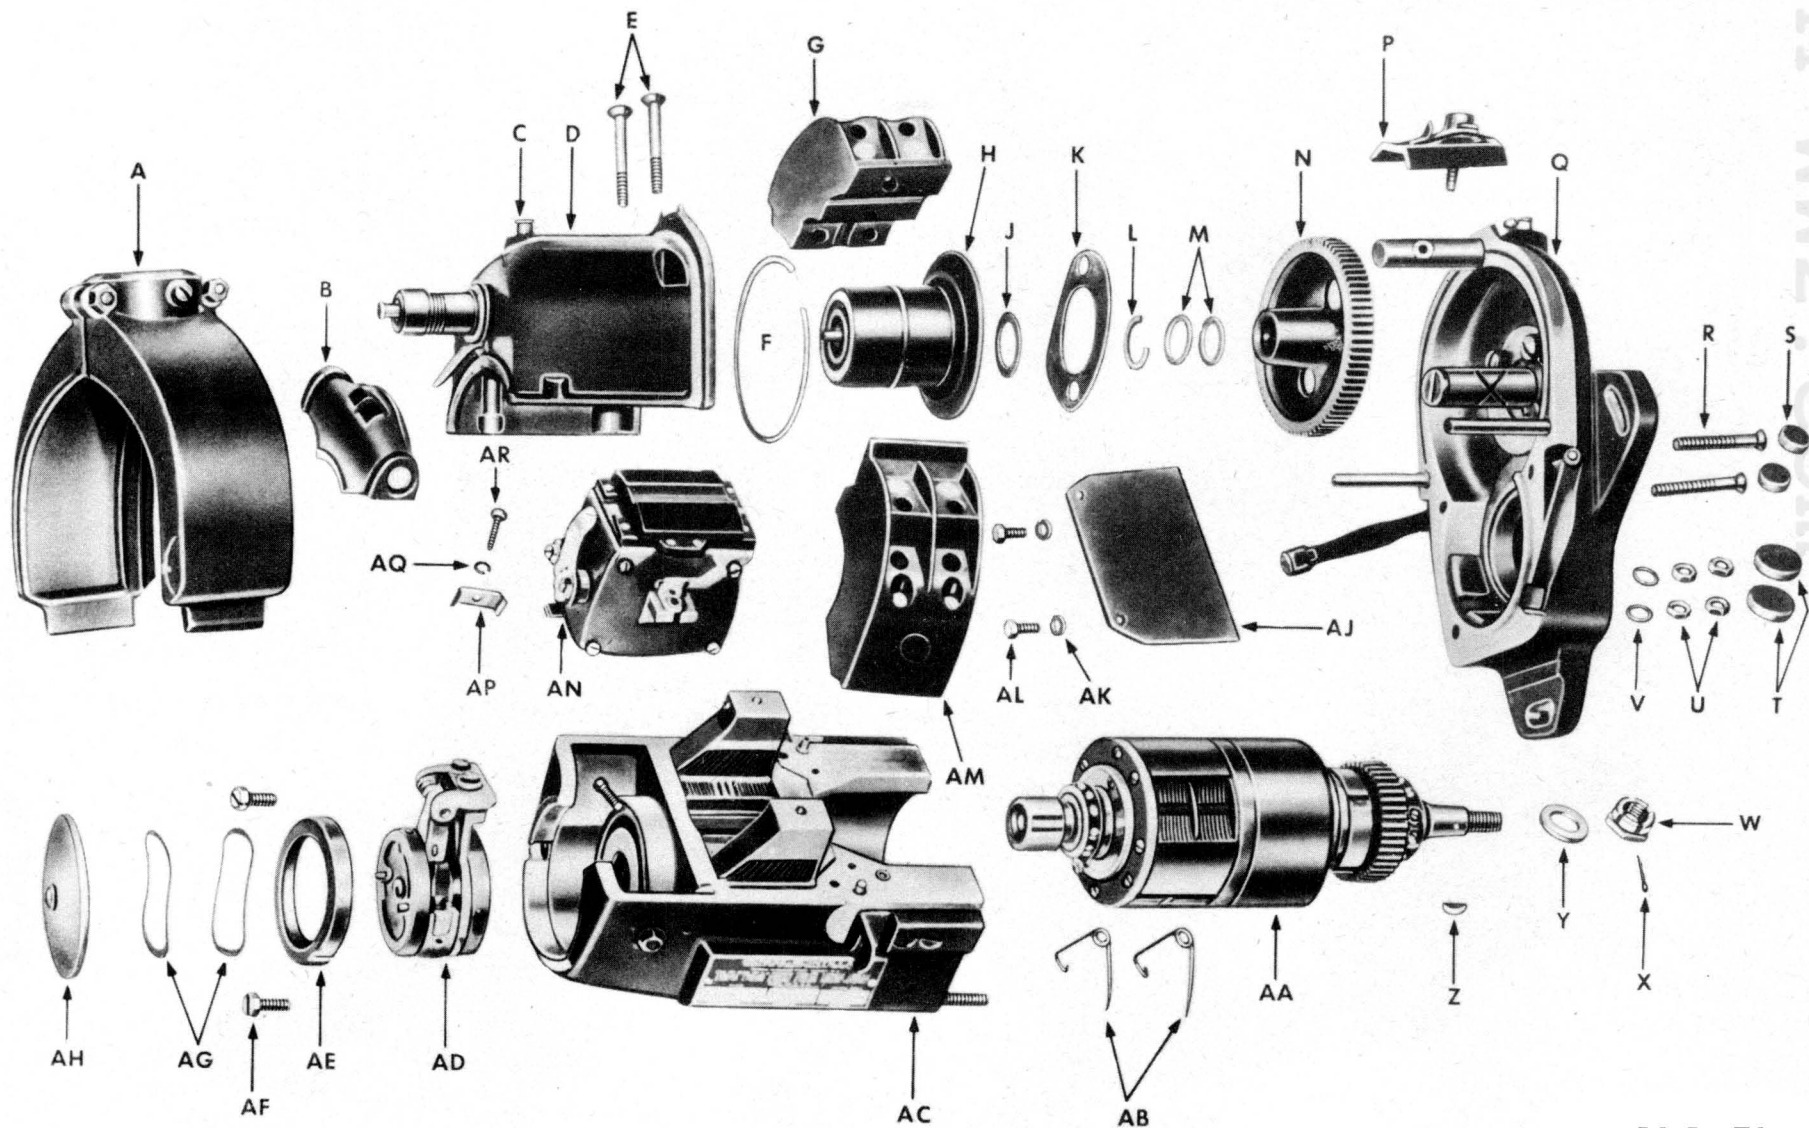

RA PD 76328

FIGURE 06-15—SCINTILLA MAGNETO ASSEMBLY—EXPLODED VIEW

Key	Part Name	Part Number	Group Number
A	SHIELD, assembly	SCI-10-7445	0603A
B	COVER	SCI-10-13897	0603A
C	CUP, assembly	SCI-2-628	0603A
D	COVER	SCI-10-4861Z	0603A
E	SCREW	SCI-10-14119	0603A
F	RING	A173978	0603A
G	BLOCK, assembly	A173926	0603A
H	CYLINDER	SCI-10-13400	0603A
J	GASKET	SCI-10-9643	0603A
K	GASKET	SCI-10-9624	0603A
L	RING	SCI-10-2024	0603A
M	WASHER	A173922	0603A
N	GEAR	SCI-10-9373	0603A
P	CLAMP, assembly	SCI-10-2489Y	0603A
Q	PLATE, assembly	SCI-10-1890Z	0603A
R	SCREW	SCI-2-158	0603A
S	PLUG	SCI-10-4140	0603A
T	PLUG	SCI-10-3154-1	0603A
U	NUT	SCI-2-164	0603A
V	WASHER	SCI-2-281	0603A
W	NUT	SCI-10-4092	0603A

Key	Part Name	Part Number	Group Number
X	PIN	BFAX1CE	0603A
Y	WASHER	BEBX1K	0603A
Z	KEY	BGAX5A	0603A
AA	MAGNET, w/SHAFT, assembly	SCI-10-17983	0603A
AB	PIN	SCI-2-152Z	0603A
AC	HOUSING, assembly	SCI-10-3145Z	0603A
AD	BREAKER, assembly	SCI-10-7559Z	0603A
AE	RETAINER	SCI-10-13722	0603A
AF	SCREW	A173967	0603A
AG	WASHER	SCI-10-1792-5	0603A
AH	COVER, assembly	SCI-10-20182	0603A
AJ	PLATE	SCI-10-9622	0603A
AK	WASHER	SCI-2-194	0603A
AL	SCREW	SCI-10-1338	0603A
AM	BLOCK, assembly	A173925	0603A
AN	COIL, w/CONDENSER, assembly	SCI-10-14856	0603A
AP	CLAMP	SCI-2-819	0603A
AQ	WASHER	SCI-2-220	0603A
AR	SCREW	SCI-2-177	0603A


FIGURE 06-15—SCINTILLA MAGNETO ASSEMBLY—EXPLODED VIEW

RA PD 76328C


0603A

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
0603A—MAGNETO-SCINTILLA (Contd)					
06-20	G104-0500791	A20197	SCI-10-13373	CONDENSER, magneto coil, assembly	2
06-20	G128-0381992		SCI-10-528Z	SCREW, attaching, magneto condenser	8
06-19,20	G104-0103473		SCI-2-194	WASHER, lock, S., 1/8 x 7/32 x 0.022	8
	G103-0191520		CO-2246	COUPLING, drive, magneto	2
06-14,15	G038-0120665	B166505	SCI-10-13897	COVER, inspection, magneto contact breaker, assembly	2
06-15	G081-0116980		SCI-10-20182	COVER, magneto breaker end, assembly	2
06-19	G103-0769677		SCI-10-600	RING, lock, magneto breaker end cover screw	2
06-19	G038-0167189		SCI-2-545	SCREW, attaching, magneto breaker end cover	2
06-19	G103-0500815	A173910	SCI-10-3761Y	COVER, magneto breaker end, stripped, assembly	2
06-14,15,22	G038-0120661		SCI-10-4861Z	COVER, magneto coil, assembly	2
	G103-0105195		SCI-10-14119	SCREW, attaching, magneto coil cover	4
06-17	G103-0101560		A173978	SCI-10-17996	COVER, magneto rotating magnet flyweight
06-15,18,22	G104-0101372	SCI-2-628		CUP, oil, magneto coil covers and drive end plate, assembly	4
06-15,18	G103-0101860	SCI-10-13400		CYLINDER, magneto distributor	2
06-15	G103-1501750	SCI-13780		RING, lock, magneto distributor cylinder	2
06-21	G104-0100538	B166336	SCI-2-321	DISK, marking, magneto distributor block, No. 1	2
06-21	G104-0100539		SCI-2-322	DISK, marking, magneto distributor block, No. 2	2
06-21	G104-2598700		SCI-2-323	DISK, marking, magneto distributor block, No. 3	2
06-21	G104-0100543		SCI-2-324	DISK, marking, magneto distributor block, No. 4	2
06-21	G104-0100544	A139738	SCI-2-325	DISK, marking, magneto distributor block, No. 5	2
06-21	G104-0100545		SCI-2-326	DISK, marking, magneto distributor block, No. 6	2
06-21	G104-0100546		SCI-2-327	DISK, marking, magneto distributor block, No. 7	2
06-21	G104-0100534		SCI-2-318	DISK, marking, magneto distributor block, No. 8	2
	G104-0100537	B166336	SCI-2-319	DISK, rotation marking, magneto drive end plate	2
06-21	G103-0102020		SCI-10-4744	ELECTRODE, magneto distributor block	16
06-14,22	G103-0102080		SCI-10-3743	FERRULE, magneto ground wire terminal screw	2
06-17	G103-0102200		SCI-10-17995	FLYWEIGHT, magneto magnet automatic advance	76
06-15	G038-0126514	A139738	SCI-10-9624	GASKET, magneto distributor cylinder base, large	2
06-15	G038-8803390		SCI-10-9643	GASKET, magneto distributor cylinder base, small	2
06-18	G103-0102900		SCI-10-13775	GASKET, magneto distributor gear axle	2
06-18			SCI-2-138	GASKET, magneto drive end plate ball bearing outer race	2
06-16	G103-0102880	A139738	SCI-2-140	GASKET, magneto housing breaker end ball bearing outer race	2
	G103-0102860		CO-2247	GASKET, magneto to accessory case (Also listed as part of GASKET SET, CO-22530)	2
06-15	G038-8803880		SCI-10-9373	GEAR, magneto distributor, large	2
06-17	G103-0500950		SCI-2-292Z	GEAR, magneto distributor, small	2
06-22	G103-0500965		SCI-10-2674	GROMMET, magneto ground wire terminal screw	2

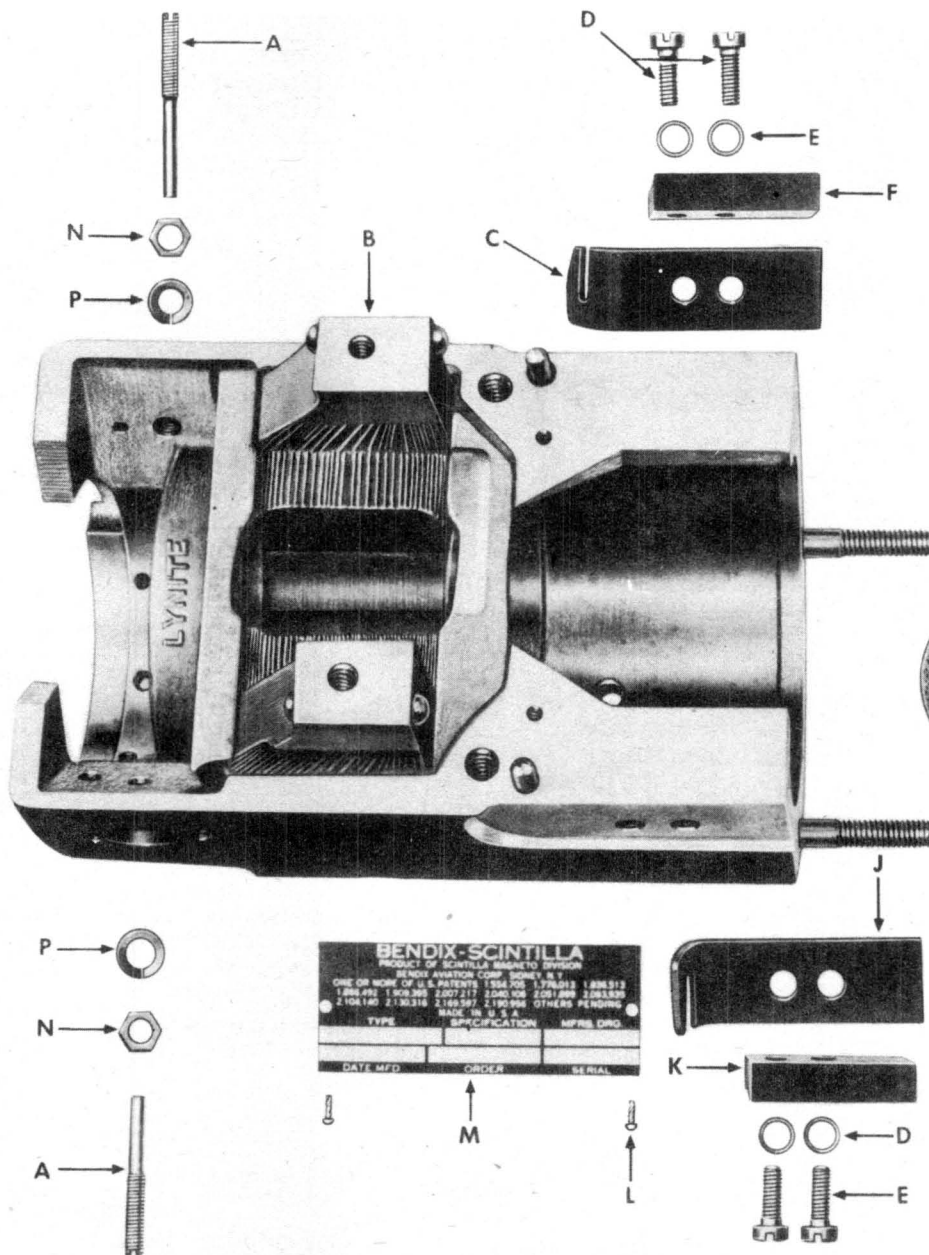

Key	Part Name	Part Number	Group Number
A	SCREW.....	SCI-2-514-1.....	.0603A
B	HOUSING, assembly.....	SCI-10-2483Z.....	.0603A
C	HOOK.....	SCI-10-1885.....	.0603A
D	SCREW.....	BCGX1.1BE.....	.0603A
E	WASHER.....	SCI-10-2493.....	.0603A
F	SPACER.....	SCI-10-2486 Y.....	.0603A

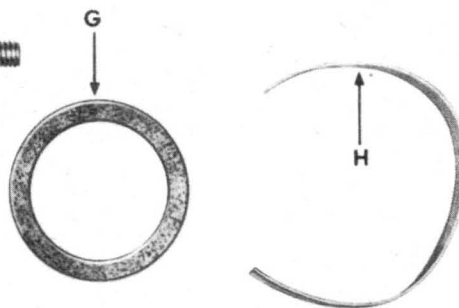

G	GASKET.....	SCI-2-140.....	.0603A
H	STRIP.....	SCI-2-141-1.....	.0603A
J	HOOK.....	SCI-10-2487.....	.0603A
K	SPACER.....	SCI-10-2486 Y.....	.0603A
L	SCREW.....	SCI-2-783.....	.2203
M	PLATE.....	SCI-2-782Z.....	.2203
N	NUT.....	SCI-2-532.....	.0603A
P	WASHER.....	SCI-2-339.....	.0603A


RA PD 341103

FIGURE 06-16—MAGNETO HOUSING ASSEMBLY—EXPLODED VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0603A—MAGNETO-SCINTILLA (Contd)	
	G214-7035469		FOM-30X1180D	GUARD, splash, magneto, assembly	1
	H101-0121887	BCVX2AH-1 BEAX1H	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3 1/4	4
	H001-1500011		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in.	4
06-16	G038-0130472		SCI-10-2487	HOOK, magneto radio shield attaching clamp, left	2
06-16	G038-0130473		SCI-10-1885	HOOK, magneto radio shield attaching clamp, right	2
06-14,16	G103-0103429		SCI-10-2483Z	HOUSING, magneto, assembly	2
06-15,19	G103-0501061		SCI-10-3145Z	HOUSING, magneto contact breaker, assembly	2
06-15	H001-0518009	BGAX5A	SCI-2-295Z	KEY, Woodruff, S., 1/8 x 1/2 (No. 404) (magneto distributor gear)	2
06-17	G103-0501182		SCI-2-182	KEY, Woodruff, S., 0.058 x 0.267 (magneto contact breaker cam)	2
06-17	G103-0501183		SCI-2-181	KEY, Woodruff, S., 0.094 x 0.325 (magneto distributor gear breaker end)	2
06-19	G103-0103560	C73123	SCI-2-350	LEVER, contact, magneto breaker, assembly	2
06-15	G103-0103620		SCI-10-17983	MAGNET, rotating, magneto, w/SHAFT, assembly	2
06-17	G103-0103620		SCI-10-17983Y	MAGNET, rotating, magneto, assembly	2
01-2	G103-0103640	C74411 BBFX1BA-1	SCI-10-20519	MAGNETO, assembly (Scintilla type VMN7DFA)	2
	G103-0103740		CO-2457	NUT, castle, alloy-S., cd-pltd., 5/16-24NF-2	6
01-19	G103-0106015		CO-20992	STUD, alloy-S., cd-pltd., dld. f/lkg-wire, 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (standard size) (sq-end.)	6
	G167-0392298		CO-20992-03	STUD, alloy-S., cd-pltd., dld. f/lkg-wire, 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.003 oversize) (pointed end)	as req.
			CO-20992-06	STUD, alloy-S., cd-pltd., dld. f/lkg-wire, 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.006 oversize) (ck-end.)	as req.
			CO-20993-09	STUD, alloy-S., cd-pltd., dld. f/lkg-wire, 5/16-18NC-4 (9/16) x 5/16-24NF-3 (1/2) x 1 3/8 (0.009 oversize) (drilled end)	as req.
	G103-0106840	A139768 BFWX1A	CO-2555	WASHER, plain, S., cd-pltd., 5/16 in.	6
	22W-1642100			WIRE, S., low carbon, soft, black anld., 0.041 in. diam.	as req.
06-19	G103-0103980		SCI-2-65	NUT, lock, magneto breaker contact screw	2
	G103-0104000		SCI-2-532	NUT, lock, magneto breaker range adjusting screw	2
	G103-0103960		SCI-10-17993	NUT, lock, magneto rotating magnet drive shaft	2
06-14,22	G103-0104020		SCI-10-3657	NUT, gland, magneto ground wire terminal	2
	G103-0103940		SCI-10-17994	NUT, magneto rotating magnet drive shaft	2
06-15	G038-8806660		SCI-10-9622	PLATE, insulating, magneto housing and cylinder distributor	2
06-15	G038-0167645		SCI-10-1338	SCREW, magneto housing and distributor block insulating plate	4
06-15	G104-0103473		SCI-2-194	WASHER, lock, S., 1/8 x 7/16 x 0.022	4
06-19	G038-0152915		SCI-10-13329	PLATE, insulating, magneto breaker contact screw support bracket	2
06-14,15,18	G103-0501603		SCI-10-1890Z	PLATE, magneto drive end, assembly	2
06-15	G104-0101144		SCI-2-164	NUT, magneto drive end plate stud	8
06-15	G104-0102142		SCI-2-158	SCREW, attaching, magneto drive end plate	2
06-15	H001-1517007		SCI-2-281	WASHER, lock, S., 1/4 x 0.453 x 0.040	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-15	G104-0502876	B166415	SCI-10-4140	PLUG, magneto drive end plate mounting screw hole (leather, 1/2 O.D. x 3/16 in. thk.).	4
06-15	G103-0501667		SCI-10-3154-1	PLUG, magneto drive end plate mounting stud hole (leather, 45/64 O.D. x 7/32 in. thk.).	4
06-19	G104-0102226		SCI-2-150	PLUG, stop, magneto breaker contact lever (fiber).....	2
06-15	G103-0501744		SCI-10-13722	RETAINER, magneto breaker, front end, assembly.....	2
06-15	G103-0501858	A173967	SCI-10-13723	SCREW, attaching, magneto breaker end retainer.....	4
06-19			SCI-10-13331	RETAINER, magneto breaker cam oil wick.....	2
06-19	G103-0105280		SCI-2-176	SCREW, magneto breaker, cam oil wick retainers.....	2
06-19	G104-0103473		SCI-2-194	WASHER, lock, S., 1/8 x 7/32 x 0.022.....	2
06-18			SCI-10-13777	RETAINER, magneto distributor gear axle.....	2
06-18	G038-0167576		SCI-10-13778	SCREW, attaching, magneto distributor gear axle retainer.....	8
06-18	G038-0179711		SCI-2-339	WASHER, lock, S., 0.203 x 0.375 x 0.031.....	8
06-18	G038-0163663		SCI-10-13774	RETAINER, magneto drive end plate axle oiling strips.....	2
06-17	G103-0104800	A231593	SCI-10-18098	RETAINER, magneto rotating magnet flyweight cover.....	2
06-17	G103-0105200		SCI-10-18099	SCREW, attaching, magneto magnet flyweight cover retainer.....	4
06-17	H001-1518005	BECX1E		WASHER, lock, reg., S., No. 10 (0.190).....	4
06-15,17	G038-0164497		SCI-10-2024	RING, lock, magneto distributor gear axle.....	2
06-19	G103-0105240		SCI-10-28908	SCREW, contact, magneto breaker, long.....	2
06-19	G103-0105260		SCI-10-28909	SCREW, contact, magneto breaker, short.....	2

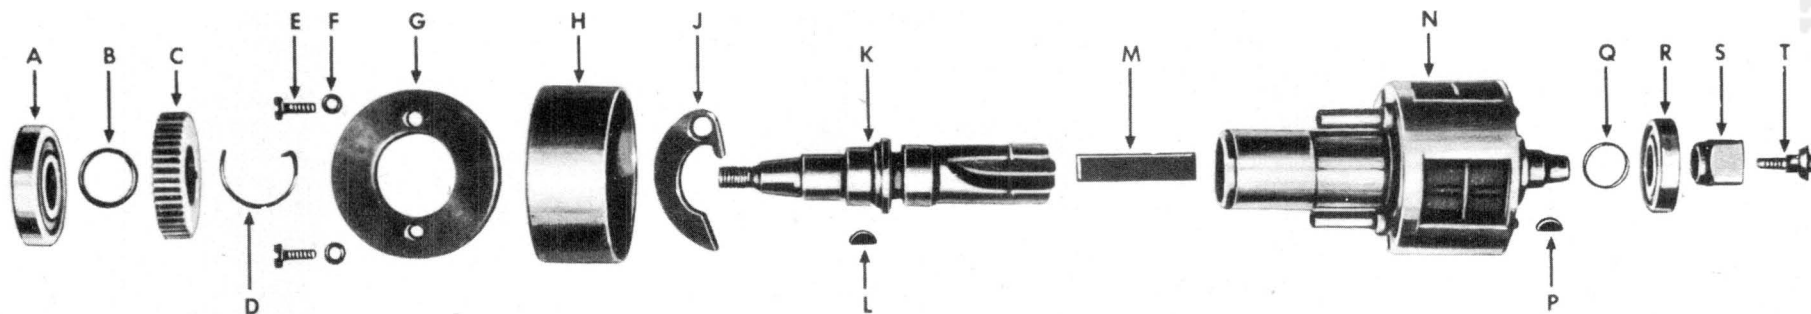

Key	Part Name	Part Number	Group Number
A	BEARING.....	CAGX1AP.....	0603A
B	WASHER.....	B166368.....	0603A
C	GEAR.....	SCI-2-292Z.....	0603A
D	RING.....	SCI-10-2024.....	0603A
E	SCREW.....	SCI-10-18099.....	0603A
F	WASHER.....	BECX1E.....	0603A

Key	Part Name	Part Number	Group Number
G	RETAINER.....	SCI-10-18098.....	0603A
H	COVER.....	SCI-10-17996.....	0603A
J	FLYWEIGHT.....	SCI-10-17995.....	0603A
K	SHAFT.....	SCI-10-17992.....	0603A
L	KEY.....	SCI-2-181.....	0603A
M	SPRING.....	SCI-10-17991Y.....	0603A

Key	Part Name	Part Number	Group Number
N	MAGNET, assembly.....	SCI-10-17983Y.....	0603A
P	KEY.....	SCI-2-182.....	0603A
Q	WASHER.....	SCI-2-161-1.....	0603A
R	BEARING.....	CAGX1AM.....	0603A
S	CAM.....	SCI-10-20223.....	0603A
T	SCREW.....	SCI-2-167.....	0603A

FIGURE 06-17—MAGNETO MAGNET ASSEMBLY—EXPLODED VIEW


RA PD 341104

0603A

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0603A—MAGNETO-SCINTILLA (Contd)	
06-18	G103-0105280		SCI-2-176	SCREW, magneto breaker contact lever main spring.....	2
06-22			SCI-10-13779	SCREW, locating, magneto distributor cylinder.....	2
06-16	G103-0105360		SCI-10-3383	SCREW, magneto ground wire terminal.....	2
	G103-0501848		SCI-2-514-1	SCREW, range adjusting, magneto breaker, 0.531 in. long.....	as req.
	G103-0501851		SCI-2-514-2	SCREW, range adjusting, magneto breaker, 0.718 in. long.....	as req.
	G103-0501852		SCI-2-514-3	SCREW, range adjusting, magneto breaker, 0.750 in. long.....	as req.
	G103-0501853	B166406	SCI-2-514-4	SCREW, range adjusting, magneto breaker, 0.843 in. long.....	as req.
	G103-0501854		SCI-2-514-5	SCREW, range adjusting, magneto breaker, 0.937 in. long.....	as req.
	G103-0501855		SCI-2-514-6	SCREW, range adjusting, magneto breaker, 1.031 in. long.....	as req.
	G103-0501856		SCI-2-514-7	SCREW, range adjusting, magneto breaker, 1.093 in. long.....	as req.
	G103-0501857	B166410	SCI-2-514-8	SCREW, range adjusting, magneto breaker, 1.187 in. long.....	as req.
	G103-0501859		SCI-2-514-9	SCREW, range adjusting, magneto breaker, 1.312 in. long.....	as req.
	G103-0501847		SCI-2-514-10	SCREW, range adjusting, magneto breaker, 1.375 in. long.....	as req.
06-14	G103-0105300		SCI-2-514-11	SCREW, range adjusting, magneto breaker, 1.437 in. long.....	as req.
06-14,16	G103-0104000		SCI-2-532	NUT, lock, magneto breaker range adjusting screw.....	4
06-14,16	G038-0179711		SCI-2-339	WASHER, lock, S., 0.203 x 0.375 x 0.031.....	4
06-19	G103-0501843	A173914	SCI-10-13332	SCREW, set, magneto breaker contact lever axle.....	2
06-14	G081-0160760		SCI-10-3164	SCREW, set, magneto radio shield harness adapter.....	2
06-14	H001-1518005	BECX1E		WASHER, lock, reg., S., No. 10 (0.190).....	2
06-14,17	G103-0500770		SCI-10-17992	SHAFT, drive, magneto.....	2
06-14,15	G103-0501470		SCI-10-4092	NUT, castle, s-fin., 3/8-16NC-3.....	2
	G104-0101861		SCI-10-25118	NUT, magneto drive shaft.....	
06-14,15	H001-0811039	BFAX1CE		PIN, cotter, split, S., 3/32 x 3/4.....	2
06-14,15	H001-1530009	BEBX1K	SCI-2-965	WASHER, plain, S., SAE std., 3/8 in.....	2
06-15	G103-0105580		SCI-10-7445	SHIELD, radio, magneto block end coil cover, assembly.....	2
06-14	G038-0138391		SCI-10-1467	NUT, hex., s-fin., S., No. 10 (0.190)-32NF-2.....	4
06-15	G104-0101399		SCI-2-152Z	PIN, safety, magneto radio shields.....	4
06-14	H001-1026326	BCGX1BL	SCI-10-1525	SCREW, machine, oval-fil-hd., S., No. 3 (0.099)-56NF-2 x 7/8.....	4
06-14	G038-0179711		SCI-2-339	WASHER, lock, S., 0.203 x 0.375 x 0.031.....	4
	G214-7036668		SCI-10-1882A	SHIELD, radio, magneto block and coil cover, left.....	2
06-14	G214-7036669		SCI-10-1883A	SHIELD, radio, magneto block and coil cover, right.....	2
06-19	G038-0157028		SCI-10-13328-1	SHIM, insulating, magneto breaker contact screw support bracket, 0.005 thk.....	as req.
	G103-0501600		SCI-10-13328-2	SHIM, insulating, magneto breaker contact screw support bracket, 0.008 thk.....	as req.
	G103-0104437		SCI-10-13328-3	SHIM, insulating, magneto breaker contact screw support bracket, 0.010 thk.....	as req.
	G103-0124482		SCI-10-13328-4	SHIM, insulating, magneto breaker contact screw support bracket, 0.015 thk.....	as req.
	G103-0104483		SCI-10-13328-5	SHIM, insulating, magneto breaker contact screw support bracket, 0.020 thk.....	as req.
	G038-0170685		SCI-2-206	SHOE, magneto breaker contact lever.....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-16	G103-0105660	BCGX1.1BE	SCI-10-2486Y	SPACER, magneto radio shield spring clamp, left.	2
06-16	G103-0105660		SCI-10-2486Y	SPACER, magneto radio shield spring clamp, right.	2
06-16	H001-1026464			SCREW, machine, oval-fil-hd., S., No. 10 (0.190)-32NF-2 x 7/16.	8
06-16	G038-0179720		SCI-10-2493	WASHER, lock, S., 0.200 x 0.293 x 1/32 in.	8
06-17	G103-0501966		SCI-10-17991Y	SPRING, flat, magneto magnet to drive shaft, automatic advance.	4
06-21	G214-7036670		SCI-10-13637	SPRING, magneto distributor block clamp.	2
06-19	G103-0105780		SCI-2-146	SPRING, main, magneto breaker control lever.	2
06-19	G103-0105800		SCI-2-440	SPRING, reinforcing, magneto breaker contact lever main spring, long.	2
06-19	G103-0105820		SCI-2-145	SPRING, reinforcing, magneto breaker contact lever main spring, short.	2
06-21	G103-0501976		SCI-10-27463	SPRING, reinforcing magneto distributor block clamp.	2
06-18,22	G104-0102792		SCI-2-274	STRIP, magneto end plate to coil cover (felt, 1/8 x 3/32 in. thk.).	as req.
06-18	G038-0174837		SCI-2-139-1	STRIP, insulating, magneto drive end plate ball bearing outer race (0.007 thk.).	as req.
	G104-0102793		SCI-2-139-2	STRIP, insulating, magneto drive end plate ball bearing outer race (0.008 thk.).	as req.
	G104-0102794		SCI-2-139-3	STRIP, insulating, magneto drive end plate ball bearing outer race (0.009 thk.).	as req.

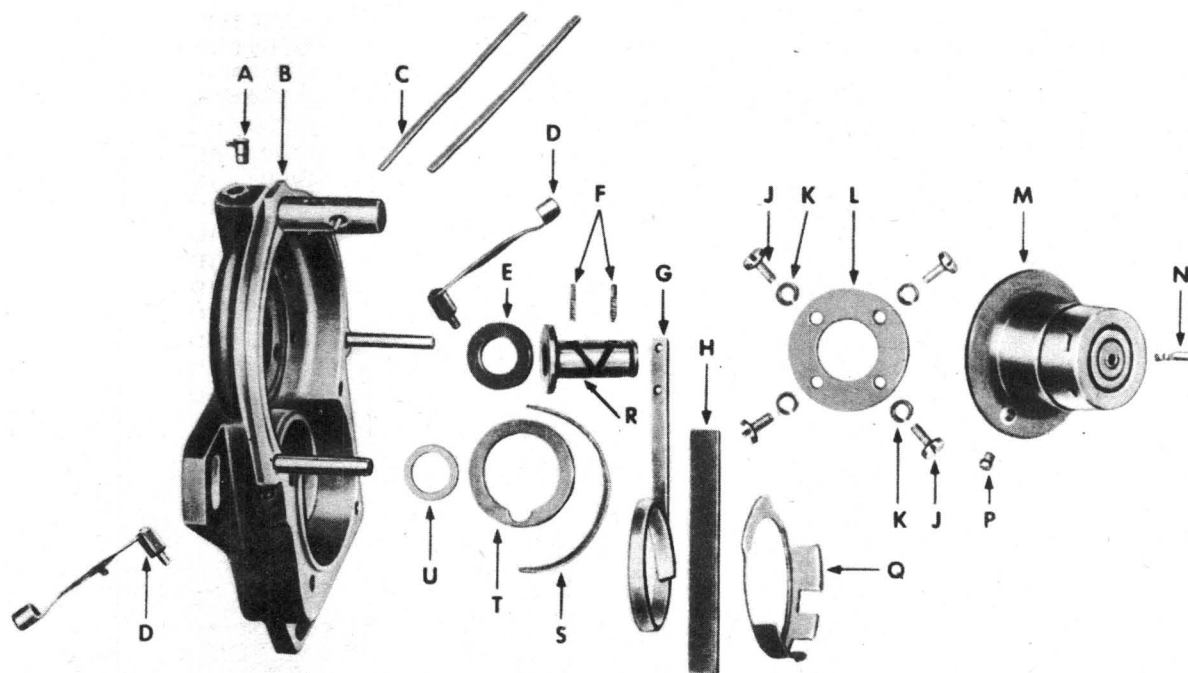

Key	Part Name	Part Number	Group Number
A	CUP, assembly.	SCI-2-628.	0603A
B	PLATE, assembly.	SCI-10-1890Z.	0603A
C	STRIP.	SCI-2-274.	0603A
D	CLAMP, assembly.	SCI-10-3074.	0603A
E	GASKET.	SCI-10-13775.	0603A
F	WICK.	A173886.	0603A
G	STRIP.	A173973.	0603A
H	STRIP.	SCI-10-16640.	0603A
J	SCREW.	SCI-10-13778.	0603A
K	WASHER.	SCI-2-339.	0603A
L	RETAINER.	SCI-10-13777.	0603A
M	CYLINDER.	SCI-10-13400.	0603A
N	BRUSH, assembly.	A173935.	0603A
P	SCREW.	SCI-10-13779.	0603A
Q	RETAINER.	SCI-10-13774.	0603A
R	AXLE, assembly.	SCI-10-13776.	0603A
S	STRIP.	SCI-2-139-1.	0603A
T	GASKET.	SCI-2-138.	0603A
U	WASHER.	SCI-10-21721.	0603A

FIGURE 06-18—MAGNETO DRIVE END PLATE—EXPLODED VIEW


RA PD 76340

0603A

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0603A—MAGNETO-SCINTILLA (Contd)	
	G104-0102795		SCI-2-139-4	STRIP, insulating, magneto drive end plate ball bearing outer race (0.010 thk.)	as req.
	G038-0174839		SCI-2-139-5	STRIP, insulating, magneto drive end plate ball bearing outer race (0.011 thk.)	as req.
	G038-0174841		SCI-2-139-6	STRIP, insulating, magneto drive end plate ball bearing outer race (0.012 thk.)	as req.
06-16	G103-0502083		SCI-2-141-1	STRIP, insulating, magneto housing breaker end ball bearing outer race (0.007 thk.)	as req.
	G038-0502084	B166338	SCI-2-141-2	STRIP, insulating, magneto housing breaker end ball bearing outer race (0.008 thk.)	as req.
	G103-0502085	B166339	SCI-2-141-3	STRIP, insulating, magneto housing breaker end ball bearing outer race (0.009 thk.)	as req.
	G103-0502086	B166340	SCI-2-141-4	STRIP, insulating, magneto housing breaker end ball bearing outer race (0.010 thk.)	as req.
	G103-0502087		SCI-2-141-5	STRIP, insulating, magneto housing breaker end ball bearing outer race (0.011 thk.)	as req.
	G103-0502088		SCI-2-141-6	STRIP, insulating, magneto housing breaker end ball bearing outer race (0.012 thk.)	as req.
06-18	G038-0174591		SCI-10-16640	STRIP, oiling, distributor gear axle, auxiliary (felt)	as req.
06-18	G038-0174594	A173593	SCI-10-13773	STRIP, oiling, distributor gear axle, main (felt)	as req.
	G104-0103442		SCI-10-1792-1	WASHER, end play adjusting, magneto breaker end cover (0.0179 thk.)	as req.
	G104-0103443		SCI-10-1792-2	WASHER, end play adjusting, magneto breaker end cover (0.0226 thk.)	as req.
	G104-0103444		SCI-10-1792-3	WASHER, end play adjusting, magneto breaker end cover (0.0253 thk.)	as req.
	G103-0502306		SCI-10-1792-4	WASHER, end play adjusting, magneto breaker end cover (0.0285 thk.)	as req.
06-15	G103-0502340		SCI-10-1792-5	WASHER, end play adjusting, magneto breaker end cover (0.0350 thk.)	as req.
06-15	G103-0502337	A173922	SCI-10-5289-11	WASHER, end play adjusting, magneto distributor gear axle (0.051 thk.)	as req.
	G103-0502336	A175069	SCI-10-5289-14	WASHER, end play adjusting, magneto distributor gear axle (0.053 thk.)	as req.
				0604—BOOSTER COIL	
06-23	G104-1510360		DR-1879732	ARMATURE, booster coil	1
06-4	G104-1539703		FOM-P436	COIL, booster, assembly (DR-1115481)	1
06-23	G104-1539850		DR-1877700	CONDENSER, booster coil	1
06-23	G057-0314856		DR-817363	NUT, attaching, booster coil condenser	1
06-23	H001-5147511	BCNX1FC-1	DR-122159	SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-2x1/4	1
06-23	G103-1679858		DR-116438	WASHER, lock, booster coil condenser attaching nut	1
06-23	G103-1679858		DR-116438	WASHER, lock, booster coil condenser attaching screw	1
06-23			DR-1879752	COVER, booster coil	1
06-23			DR-132780	SCREW, attaching, booster coil cover	2
06-23	G103-1679858		DR-116438	WASHER, lock, booster coil cover attaching screw	2
06-23	2580-1879743		DR-1879743	GASKET, booster coil cover	1
06-23			DR-822613	NUT, lock, booster coil contact screw	1
06-23	H001-4135681	BBKX2CA-1	DR-120614	NUT, terminal, booster coil (machine Screw, hex., S., cd-pltd., No. 10 (0.190)-32NF-2)	3
06-23	G103-0501772		DR-1861998	SCREW, contact, booster coil	1
06-23	G214-7035470		FOM-7X1073B	SHIELD, rubber, booster coil	1
06-4			FOM-70X1023E-14	STRAP, booster coil	2
	H001-4135681	BBKX2CA-1		NUT, machine screw, hex., S., cd-pltd., No. 10 (0.190)-32NF-2	2
		BCOX1.1AP-1		SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 1 1/2	2
	H001-7025621	BEEX1E-1		WASHER, lock, reg., S., cd-pltd., No. 10 (0.190)	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-23	H004-0370120	A213823D	FOM-P603	TERMINAL, solderless, cable (TB-B71) (booster coil ground wire).....	1
06-23			FOM-P599	TERMINAL, solderless, cable (TB-B87) (booster coil ground wire).....	1
06-23	H001-1518005	BE CX1E	DR-106497	WASHER, booster coil terminal nut (lock, reg., S., No. 10 (0.190)).....	3
06-23	G102-0401477		DR-826213	WASHER, plain, booster coil terminal nut.....	3
06-23			FOM-70X1015E-1	WIRE, ground, booster coil (No. 16 synthetic rubber insulated, 5 3/4 in. long).....	1
0604A—IGNITION WIRING					
06-24	G103-0106261	A22227	CO-A22227	CLAMP, mounting, ignition harness manifold, assembly (BZ-3585-40).....	4
06-24	G214-7035471		BZ-E1199-66-1400	CONDUIT, ignition harness to front spark plugs, assembly (For cylinder Nos. 1, 2, 3, 6 and 7).....	5
01-2,06-24	G214-7035472		BZ-E1199-66-2107	CONDUIT, ignition harness to front spark plug, assembly (For cylinder No. 4).....	1
06-24	G214-7035473		BZ-E1199-76-1900	CONDUIT, ignition harness to front spark plug, assembly (For cylinder No. 5).....	1
06-24	G214-7035474		BZE-1199-36-0800	CONDUIT, ignition harness to rear spark plugs, assembly (For cylinder Nos. 1, 2, 3, 4, 6 and 7).....	6
06-24	G214-7035475		BZ-E1199-88-0513	CONDUIT, ignition harness to rear spark plug, assembly (For cylinder No. 5).....	1

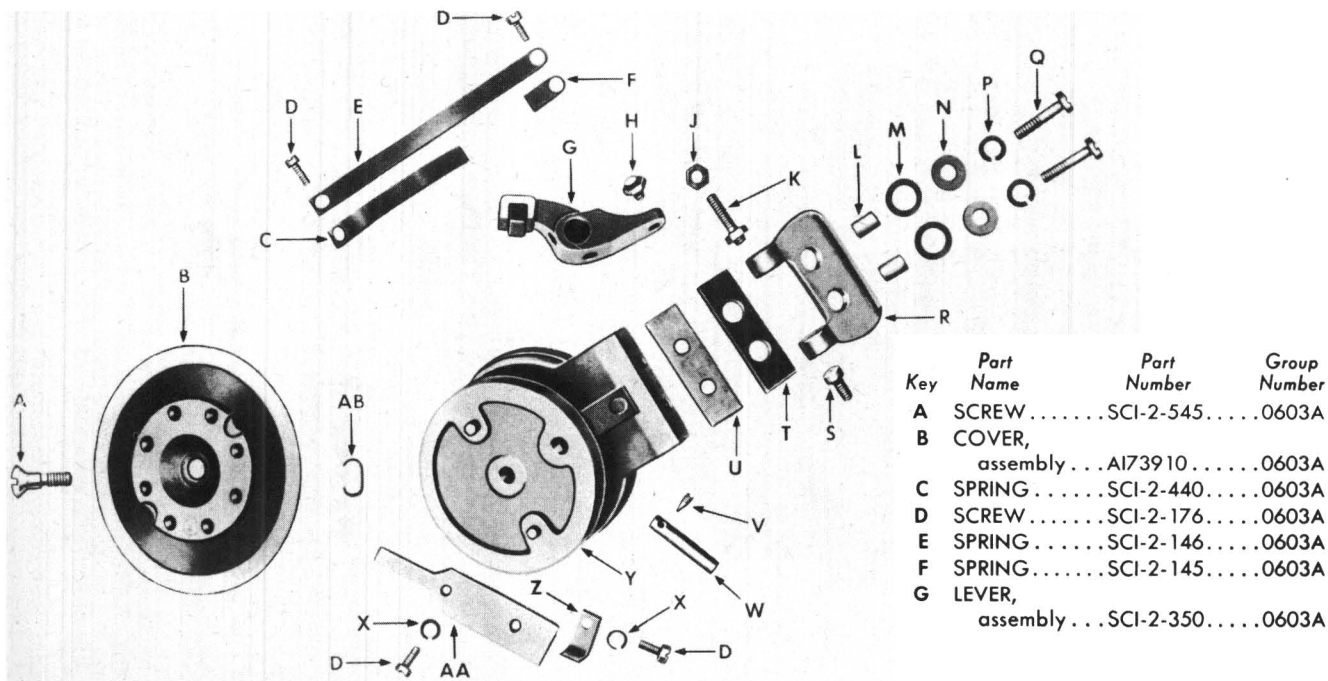


Key	Part Name	Part Number	Group Number
H	SCREW.....	SCI-10-28909	.0603A
J	NUT.....	SCI-2-65.....	.0603A
K	SCREW.....	SCI-10-28908	.0603A
L	BUSHING.....	SCI-10-13330.....	.0603A
M	WASHER.....	SCI-2-165.....	.0603A
N	WASHER.....	SCI-2-801.....	.0603A
P	WASHER.....	SCI-2-220.....	.0603A
Q	SCREW.....	SCI-2-172.....	.0603A
R	BRACKET.....	SCI-10-1801.....	.0603A
S	PLUG.....	SCI-2-150.....	.0603A
T	SHIM.....	SCI-10-13328-1.....	.0603A
U	PLATE.....	SCI-10-13329.....	.0603A
V	SCREW.....	SCI-10-13332.....	.0603A
W	AXLE.....	B166518.....	.0603A
X	WASHER.....	SCI-2-194.....	.0603A
Y	HOUSING, assembly.....	SCI-10-3145Z.....	.0603A
Z	RETAINER.....	SCI-10-13331.....	.0603A
AA	WICK.....	B166402.....	.0603A
AB	RING.....	SCI-10-600.....	.0603A

FIGURE 06-19—MAGNETO BREAKER AND END COVER—EXPLODED VIEW

RA PD 341115

0604-0604A

GROUP 06—ELECTRICAL

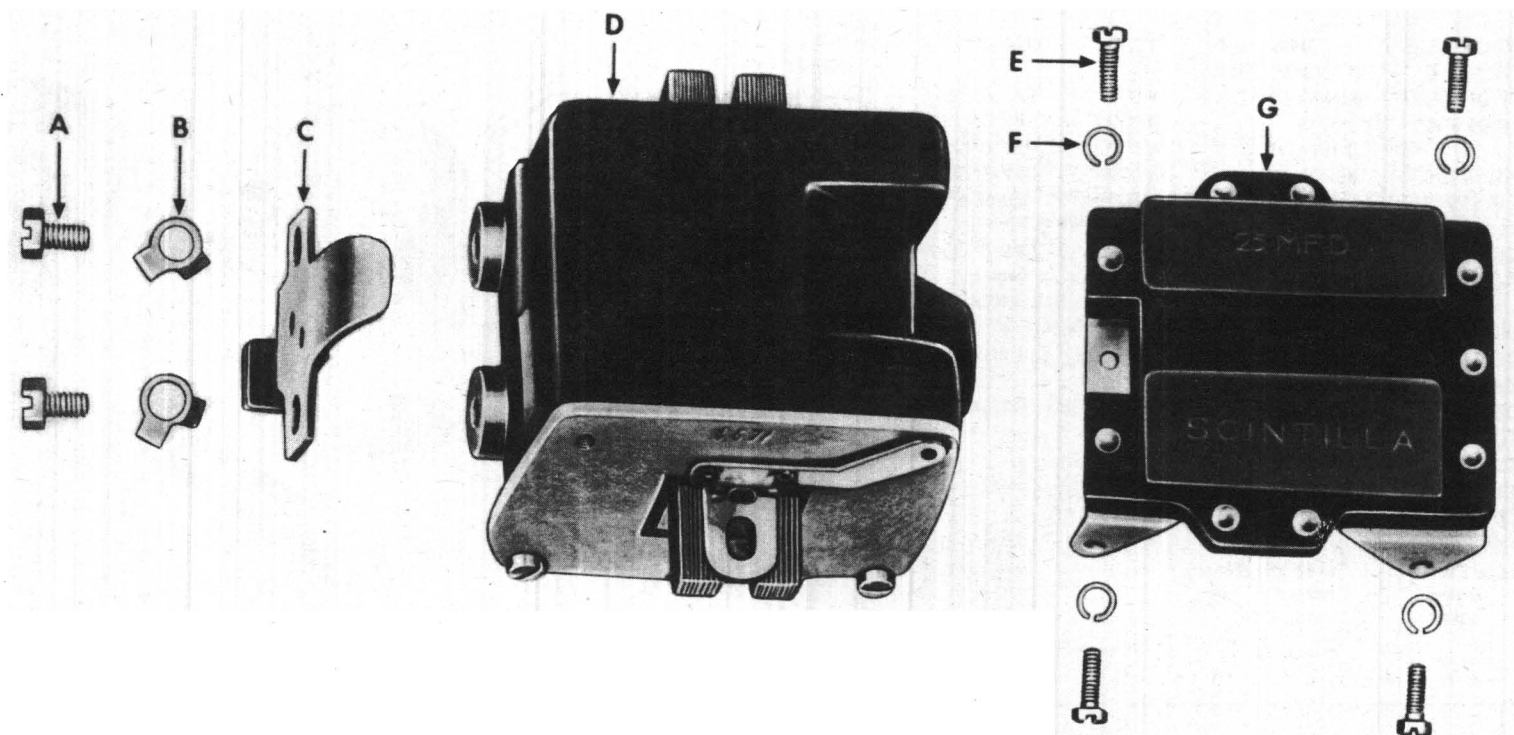


Key	Part Name	Part Number	Group Number
A	SCREW.....	SCI-10-4874.....	0603A
B	WASHER.....	SCI-10-7308.....	0603A
C	BRIDGE, assembly.....	SCI-10-13374....	0603A
D	COIL, assembly.....	SCI-10-14857....	0603A

Key	Part Name	Part Number	Group Number
E	SCREW.....	SCI-10-528Z.....	0603A
F	WASHER.....	SCI-2-194.....	0603A
G	CONDENSER, assembly.....	SCI-10-13373....	0603A

RA PD 76304

FIGURE 06-20—MAGNETO COIL AND CONDENSER—EXPLODED VIEW

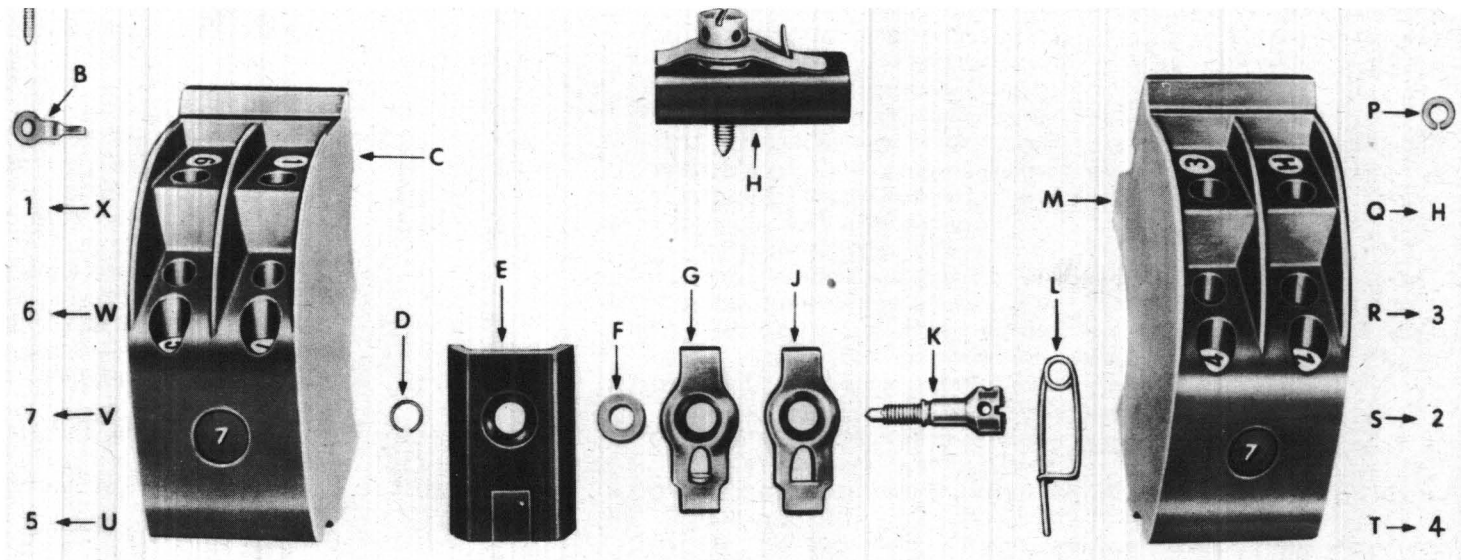

Key	Part Name	Part Number	Group Number
A	SCREW	SCI-10-7439	.0603A
B	ELECTRODE	SCI-10-4744	.0603A
C	BLOCK	A173926	.0603A
D	RING	SCI-10-2633	.0603A
E	CLAMP	SCI-10-2745Z	.0603A
F	WASHER	SCI-10-13640	.0603A
G	SPRING	SCI-10-27463	.0603A
H	CLAMP, assembly	SCI-10-2489Y	.0603A
J	SPRING	SCI-10-13637	.0603A
K	SCREW	SCI-10-13638	.0603A
L	PIN	SCI-2-152Z	.0603A

Key	Part Name	Part Number	Group Number
M	BLOCK	A173925	.0603A
N	SCREW	SCI-10-13591	.0603A
P	WASHER	SCI-2-220	.0603A
Q	DISK	SCI-2-318	.0603A
R	DISK	SCI-2-323	.0603A
S	DISK	SCI-2-322	.0603A
T	DISK	SCI-2-324	.0603A
U	DISK	SCI-2-325	.0603A
V	DISK	SCI-2-327	.0603A
W	DISK	SCI-2-326	.0603A
X	DISK	SCI-2-321	.0603A

RA PD 76333

FIGURE 06-21—MAGNETO BLOCKS—EXPLODED VIEW


GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0604A—IGNITION WIRING (Contd)	
01-2,06-24	G103-7006752		BZ-E1199-72-0902	CONDUIT, left magneto to ignition harness, w/ADAPTER, assembly.....	1
01-2	G167-0131251		FOM-70X1003C-2	CONDUIT, left magneto to regulator and relay panel, w/CABLE, assembly (flexible, 4 ft. 7 in long) (CO-A35267).....	1
01-2	G038-0118780	B143534F	FOM-P297	CONDUIT, left magneto to right magneto, w/CABLE, assembly (CO-35251).....	1
01-2	G167-0131253		FOM-70X1003C-4	CONDUIT, right magneto booster to regulator and relay panel, w/CABLE, assembly (flexible, 5 ft. 5 1/2 in. long) (CO-A235268).....	1
01-2,06-24	G103-7006753		BZ-E1199-71-0902	CONDUIT, right magneto to ignition harness, w/ADAPTER, assembly.....	1
	G104-0500910	A161615	FOM-P301	COUPLING, tee to left magneto.....	1
01-2	G103-0500780	A143317	FOM-P298	ELBOW, flexible conduit to right magneto.....	1
	G214-7035476		BZ-E1135-2-4	GASKET, ignition harness left manifold to right manifold (neoprene, 1 3/32 I.D. x 1 11/32 O.D. x 3/32 in thk.).....	1
	G214-7036369		FOM-20X1694B	GASKET, left channel support conduit cover, assembly (Composed of two halves) (felt, 5/16 in. thk.) (For cranking motor, left magneto and right magneto conduits)....	1
	G214-7035478		BZ-E1135-2-6	GASKET, magneto conduit to ignition harness (neoprene, 31/32 I.D. x 1 7/32 O.D. x 3/32 in. thk.).....	2
	G214-7035479		BZ-E1135-2-7	GASKET, spark plug conduit barrel to ignition harness (neoprene, 7/16 I.D. x 5/8 O.D. x 3/32 in thk.).....	14
	G214-7035480		BZ-E1135-6-1	GASKET, spark plug conduits to ignition harness (neoprene, 3/8 I.D. x 1/2 O.D. x 1/2 in. long).....	14
	G104-0100642	A193375	BZ-3154-2	GROMMET, copper and neoprene, cone, 0.270 I.D. x 0.580 O.D. (spark plug elbows and right magneto conduit).....	15
	G167-0209390		CO-A6517	HARNES, ignition, assembly (Includes: cables, clamps, and spark plug conduits) (BZ-E603-19P-2M).....	1
	G103-0105287	A136056		SCREW, machine, oval-fil-hd., S., cd-pltd., dld. f/lkg-wire, No. 10-(0.190)-32NF-2 x 3/8.....	4
	G103-0501080	A156127	FOM-P299	INSERT, elbow at right magneto.....	1
	G214-7035480		BZ-E1028-51-50	MANIFOLD, ignition harness, left, assembly.....	1
	G214-7035482		BZ-E1028-51-40	MANIFOLD, ignition harness, right, assembly.....	1
	G081-0142250		BZ-E1026-29-2	NUT, coupling, shielding conduit, al-alloy., 3/4 hex., 11/16-24EF-3 (spark plug conduits)	29
			BZ-3177-D3	NUT, coupling, shielding conduit, al-alloy., knurled, 1 7/16-18EF-3 (magneto to ignition harness conduits).....	2
			BZ-E1026-13-1	NUT, coupling, shielding conduit, br., 5/8 hex., 9/16-27NS-3 (spark plug elbows).....	14
	G004-0345600	A213578A		NUT, coupling, shielding conduit, br., 11/16-24NS-2 (for 1/4 and 3/8 conduit) (left magneto to panel conduit (2), and right magneto booster to panel conduits (2)).....	4
06-24			BZ-3177-B8P	NUT, coupling, shielding conduit, br., knurled, 1 1/2-18EF-3 (ignition harness manifold).....	1
01-2	G103-0501440	A143407	FOM-P300	NUT, elbow at right magneto.....	1
06-31				NUT, regular, hex., s-fin., S., cd-pltd., No. 8 (0.164)-32NC-2 (left magneto terminal screw (2), and right magneto terminal screw (2)).....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-31	H101-0132776	BCNX1FM-1		SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 1 (left magneto terminal (1), and right magneto terminal (1)).....	2
01-2	G038-0176780	A143318	FOM-P296	TEE, flexible conduits to left magneto.....	1
06-24			BZ-E112-5-4	TUBING, neoprene, 0.515 I.D. x 0.625 O.D. (spark plug conduits).....	as req.
06-31	H001-7021651	BEAX1E-1	FOM-P364	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 8 (0.164) (left magneto terminal screw (1), and right magneto terminal screw (1)).....	2
06-3	H001-1518004	BECX1D-1		WASHER, lock, reg., S., cd-pltd., No. 8 (0.164) (left magneto terminal screw (2), and right magneto terminal screw (2)).....	4
06-31	H001-1518004	BEBX1D-1		WASHER, plain, S., cd-pltd., SAE std., No. 8 (0.164) (left magneto terminal screw (2), and right magneto terminal screw (2)).....	4
0604B—SPARK PLUGS					
01-4	G103-0103452	A139701	CO-2002	INSERT, spark plug (standard size).....	14
	2220-2002-03		CO-2002-03	INSERT, spark plug (0.003 oversize).....	14
	G104-0102062		CO-2002-06	INSERT, spark plug (0.006 oversize).....	14
	2220-2002-09		CO-2002-09	INSERT, spark plug (0.009 oversize).....	14
	G103-0104278	A194622	CO-22676	PIN, dowel, spark plug insert.....	14
	G001-0109372	A193557	CO-22489	PLUG, spark, w/GASKET, assembly (CP-635).....	14



163

Key	Part Name	Part Number	Group Number
A	NUT.....	SCI-10-3657	0603A
B	FERRULE.....	SCI-10-3743	0603A
C	GROMMET.....	SCI-10-2674	0603A

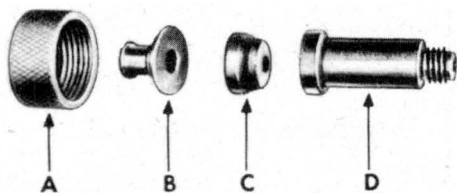

D	SCREW.....	SCI-10-3383	0603A
E	BUTTON, assembly.....	SCI-10-25725	0603A
F	BUSHING.....	SCI-10-4860	0603A
G	CLAMP.....	SCI-10-3666	0603A

Key	Part Name	Part Number	Group Number
H	CUP, assembly.....	SCI-2-628	0603A
J	COVER, assembly.....	SCI-10-4861Z	0603A
K	STRIP.....	SCI-2-274	0603A

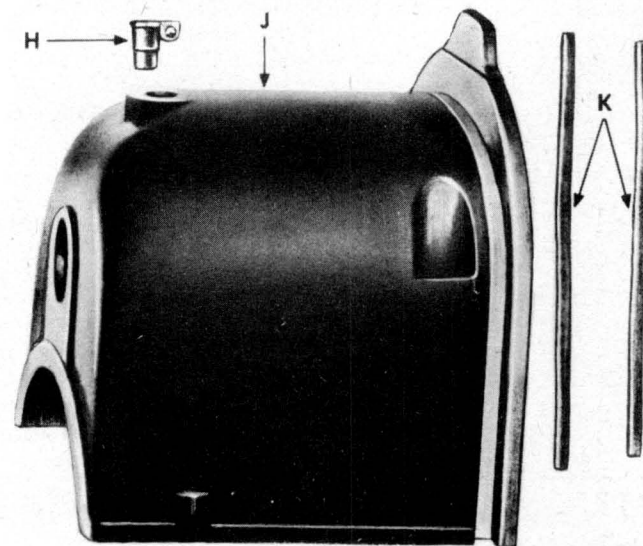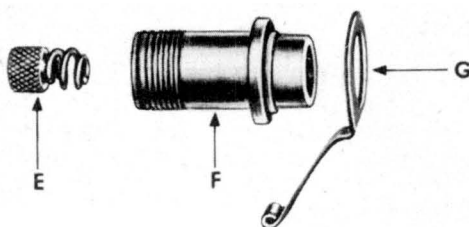

ORD 9 SNL G-214

FIGURE 06-22—MAGNETO COIL COVER—EXPLODED VIEW


RA PD 341105

0604A-0604B

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0605—INSTRUMENTS	
06-27,28	G167-0107476		FOM-P265	AMMETER, assembly (SW-440097).....	1
06-27,28	G167-0194062		FOM-P267	GAGE, oil pressure, assembly (SW-44122) (transmission oil (1), and engine oil (1)).....	2
06-27,28	G167-0194061		FOM-P266	GAGE, oil temperature, w/TUBE, assembly (SW-442148).....	1
	H001-4135680	BBKX2CA	FOM-P225	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-2.....	2
06-28			FOM-P288	SCREW, machine, rd-hd., cross recess type, S., cd-pltd., No. 10 (0.190)-32NF-3 x 3/8..	2
	H001-1518007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210).....	2
				0605B—INSTRUMENT LINES AND FITTINGS	
	G167-0137992		FOM-8X1020B	CLIP, cable, closed, 1/4 in.....	1
			FOM-8X1023B	CLIP, cable, closed, 7/16 in.....	13
	G167-0137988		FOM-8X1013B	CLIP, cable, closed, 3/4 in.....	3
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	17
		BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	17
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	17
	G168-7037049		FOM-8X1051B	CLIP, cable, closed, 3 line (primer lines and oil pressure line).....	10
			FOM-8X1050B	CLIP, cable, closed, 4 line (primer lines, oil pressure line, and oil temperature line).....	18
	G103-0103965	A164781	FOM-P386	NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2.....	56
			FOM-P410	SCREW, machine, rd-hd., cross recess type, S., No. 10 (0.190)-24NC-3 x 1 1/2.....	56
	H001-1518007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210).....	56
	H001-1522005	BEBX1BE	FOM-P412	WASHER, plain, br., SAE std., No. 10 (0.190).....	92
			FOM-8X1154B	CLIP, cable, closed, 5 line (primer lines, oil pressure line, oil temperature line, and tachometer cable).....	4
	G103-0103965	A164781	FOM-P386	NUT, regular, hex., s-fin., S., No. 10 (0.190)-24NC-2.....	8
			FOM-P411	SCREW, machine, rd-hd., cross recess type, S., No. 10 (0.190)-24NC-3 x 1 3/4.....	8
	H001-1518007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210).....	8
	H001-1522005	BEBX1BE	FOM-P412	WASHER, plain, br., SAE std., No. 10 (0.190).....	8
	H006-0313610	CNGX2AA	FOM-P269	CONNECTOR, fuel and oil hose, 1/4 in., 1/8 in. male pipe end, complete (with nut) (oil pressure line to engine hose (1), transmission oil pressure gage hose (1), and engine oil pressure gage hose (1)) (WH-281166).....	3
	H006-0313120	CNGX1B	FOM-P398	CONNECTOR, fuel and oil hose, 1/4 in., 1/4 in. short heavy duty tube fitting end, complete (with nuts and sleeve) (male) transmission oil pressure gage hose (1), and engine oil pressure gage hose (1)) (WH-281147).....	2
	H006-0314620	CNGX3B	FOM-P402	CONNECTOR, fuel and oil hose, 1/4 in., 1/4 in. tube end, complete (with nut) (oil pressure line to engine hose) (WH-281131).....	1
	H006-0318530	B183358C	FOM-P413	CONNECTOR, tube, heavy duty, short, 1/4 in., 1/8 in. male pipe end, complete (with sleeve) (engine oil pressure line to hose) (WH-8205X4C).....	1
	H006-0318100	B18358A	FOM-P277	CONNECTOR, tube, heavy duty, short, 1/8 in., 1/8 in. male pipe end, complete (with nut and sleeve) (transmission oil pressure gage line (2), and engine oil pressure gage line (2)) (WH-8205X2C).....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-28	H006-0256500	CPEX2AA	FOM-P84	COUPLING, pipe, stght., M.I., black, R H, 1/8 in. (transmission oil pressure gage (1), and engine oil pressure gage (1)).....	2
	H006-0331060	A183361C	FOM-P414	ELBOW, tube, heavy duty, short, 90 deg., 1/4 in., 1/8 in. male pipe end, complete (with nut and sleeve) (engine oil pressure hose to engine) (WH-8405X4).....	1
	H006-0264002		FOM-P258	ELBOW, stght., br., 45°, 1/8 in. (transmission oil pressure gage (1), and engine oil pressure gage line (1)).....	2
	G167-0168012	B7270A	FOM-P394	ELBOW, street, br., 90°, 1/8 in. (engine oil pressure line to hose).....	1
			FOM-80X1373B-1	HOSE, engine oil pressure gage (1/4 I.D. x 16 7/8 in. long) (See HOSE, FOM-P4601, group 2304P).....	1
	G167-7007021		FOM-80X1373B	HOSE, engine oil pressure gage, assembly (Includes: CONNECTORS, FOM-P269 and FOM-P398).....	1
			FOM-30X1174B-1	HOSE, oil pressure line to engine (1/4 in. I.D. x 25 1/2 in. long) (See HOSE, FOM-P4601, group 2304P).....	1
	G167-0407846		FOM-30X1174B	HOSE, oil pressure line to engine, assembly (1/4 in. I.D. x 27 3/8 in. long) (Includes: CONNECTORS, FOM-P269 and FOM-P402).....	1
			FOM-80X1374B-1	HOSE, transmission oil pressure gage (1/4 in. I.D. x 13 7/8 in. long) (See HOSE, FOM-P4601, group 2304P).....	1
	G168-7037194		FOM-80X1374B	HOSE, transmission oil pressure gage, assembly (Includes: CONNECTORS, FOM-P269 and FOM-P398).....	1

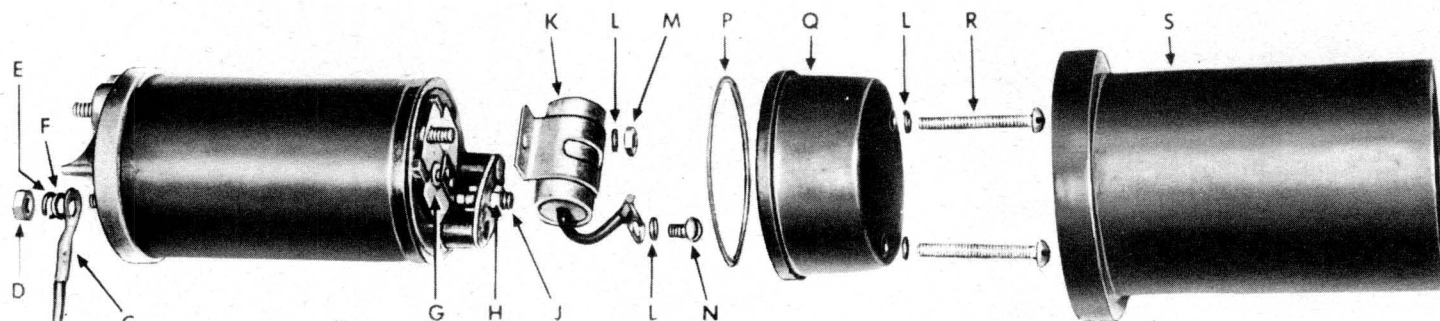

Key	Part Name	Part Number	Group Number
A	TERMINAL	FOM-P603	0604
B	WIRE	FOM-70X1015E-1	0604
C	TERMINAL	FOM-P599	0604
D	NUT	DR-120614	0604
E	WASHER	DR-106497	0604
F	WASHER	DR-826213	0604

Key	Part Name	Part Number	Group Number
G	ARMATURE	DR-1879732	0604
H	NUT	DR-822613	0604
J	SCREW	DR-1861998	0604
K	CONDENSER	DR-1877700	0604
L	WASHER	DR-116438	0604
M	NUT	DR-817363	0604


Key	Part Name	Part Number	Group Number
N	SCREW	DR-122159	0604
P	GASKET	DR-1879743	0604
Q	COVER	DR-1879752	0604
R	SCREW	DR-132780	0604
S	SHIELD	FOM-7X1073B	0604

FIGURE 06-23—BOOSTER COIL ASSEMBLY

RA PD 76237

0605B

GROUP 06—ELECTRICAL

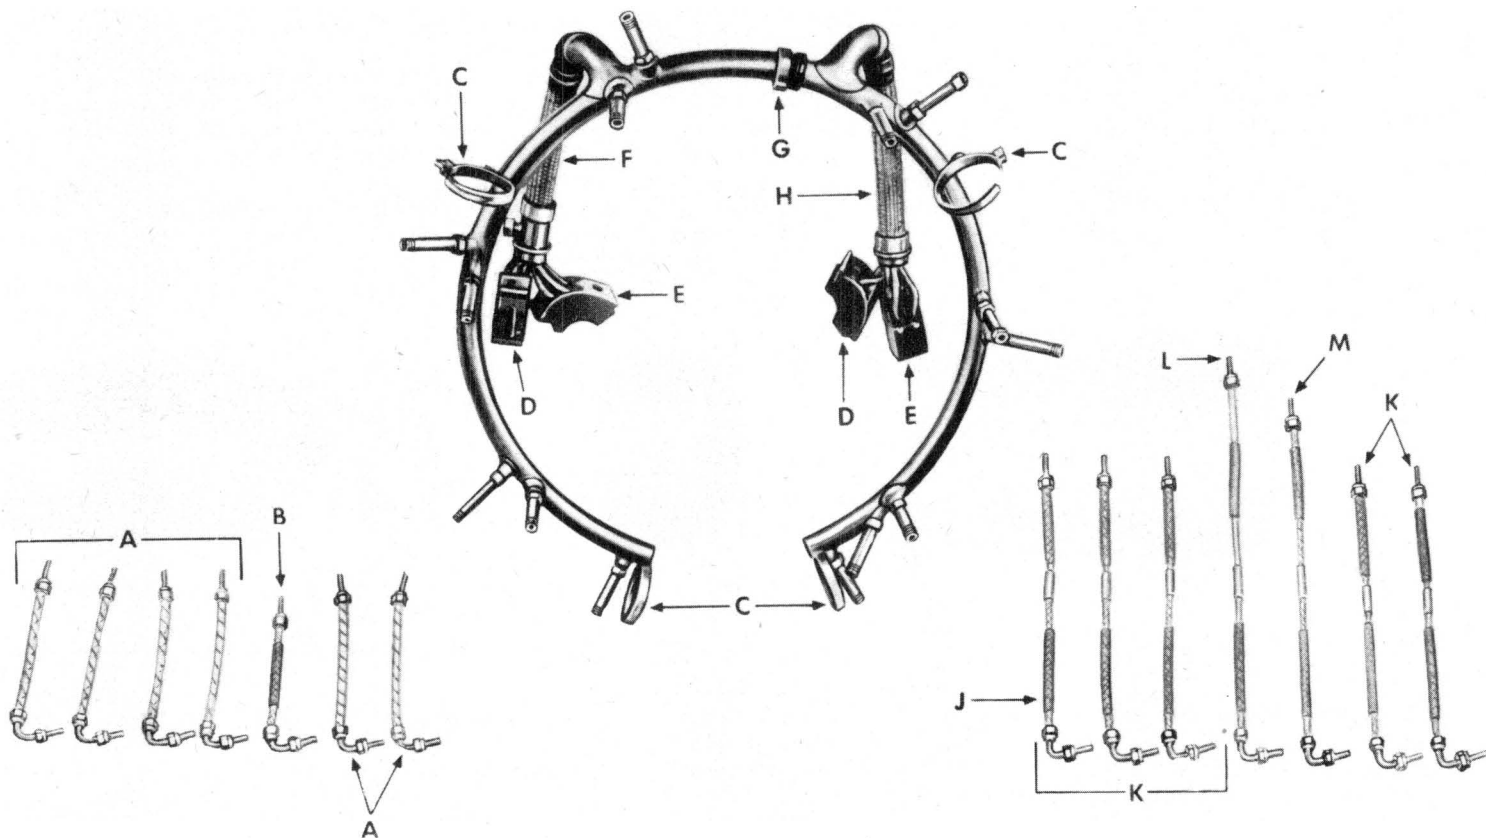


Key	Part Name	Part Number	Group Number
A	CONDUIT, assembly . . .	BZ-E1199-36-08000604A
B	CONDUIT, assembly . . .	BZ-E1199-88-05130604A
C	CLAMP, assembly	CO-A222270604A
D	BLOCK, assembly	A1739250603A
E	BLOCK, assembly	A1739260603A
F	CONDUIT,w/ADAPTER, assembly	BZ-E1199-71-09020604A
G	NUT	BZ-3177-B8P0604A

Key	Part Name	Part Number	Group Number
H	CONDUIT,w/ADAPTER, assembly	BZ-E1199-72-09020604A
J	TUBING	BZ-E1112-5-40604A
K	CONDUIT, assembly	BZ-E1199-66-14000604A
L	CONDUIT, assembly	BZ-E1199-66-21070604A
M	CONDUIT, assembly	BZ-E1199-76-19000604A

RA PD 341106

FIGURE 06-24—IGNITION HARNESS AND SPARK PLUG CONDUITS

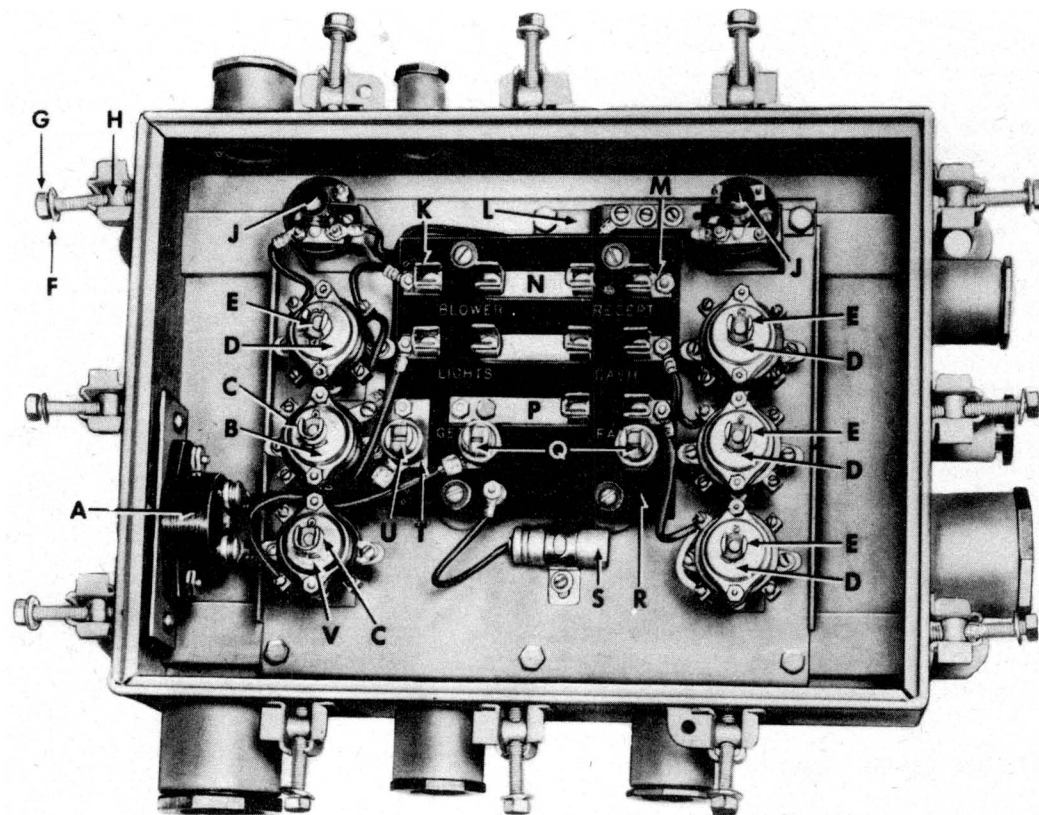

Key	Part Name	Part Number	Group Number
A	BREAKER, assembly.....	FOM-P779.....	.0606D
B	SWITCH.....	FOM-P784.....	.0606
C	YOKE.....	FOM-P875.....	.0606
D	SWITCH.....	FOM-P783.....	.0606
E	YOKE.....	FOM-P877.....	.0606
F	WASHER.....	FOM-P860.....	.0606E
G	BOLT.....	FOM-P859.....	.0606E
H	PIN.....	FOM-P858.....	.0606E
J	SWITCH.....	FOM-P785.....	.0606
K	RETAINER.....	FOM-P880.....	.0606C

Key	Part Name	Part Number	Group Number
L	BUS.....	FOM-7X1062B.....	.0606C
M	TERMINAL.....	FOM-P873.....	.0606C
N	BUS.....	FOM-70X1052E-4.....	.0606C
P	BUS.....	FOM-70X1052E-6.....	.0606C
Q	POST.....	FOM-P884.....	.0606C
R	BASE.....	FOM-70X1B52E-1.....	.0606C
S	CONDENSER.....	FOM-P406.....	.0606E
T	BUS.....	FOM-70X1052E-5.....	.0606C
U	POST.....	FOM-P883.....	.0606C
V	SWITCH.....	FOM-P791.....	.0606

FIGURE 06-25—CONTROL PANEL—COVER REMOVED


RA PD 341107

0605B

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-28	G167-7007016	B183360C	FOM-P843	0605B—INSTRUMENT LINES AND FITTINGS (Contd)	
	G167-0407830		FOM-3X1173B	LINE, engine oil pressure gage to hose (transmission oil pressure gage (1), and engine oil pressure gage (1)) (See TUBING, FOM-P4400, group 2304P).....	2
	G214-7035483		FOM-3X1190B	LINE, engine oil pressure, instrument panel to union (12 ft. long) (See TUBING, FOM-P4402, group 2304P).....	1
	G214-7035484		FOM-P409	LINE, engine oil pressure, union to hose (21 ft. long) (See TUBING, FOM-P4402, group 2304P).....	2
	H006-0392620		FOM-P569	LOOM, engine oil pressure line (1/4 in. I.D. x 45 in. long).....	1
				UNION, tube, heavy duty, short, 1/4 in., complete (with nuts and sleeves) (engine oil pressure lines) (WH8305X4C).....	1
06-28	G214-7035485	BEAX1E	FOM-P604	0605C—PANEL LIGHT	
06-27	G167-0276315		FOM-P252	GROMMET, dash light (rubber).....	1
	G167-0314850		FOM-P138	LIGHT, dash, instrument panel.....	1
			FOM-P824	NUT, regular, hex., s-fin., S., No. 8 (0.164)-32NC-2.....	2
	H001-1530005		FOM-P364	SCREW, machine, rd-hd., cross recess type, S., cd-pltd., No. 8 (0.164)-32NC-3 x 1....	2
				WASHER, lock, internal teeth, reg., S., No. 8 (0.164) (SK-1208).....	2
06-26	G214-7035486	BECX1C-1	FOM-7X1056B	0606—SWITCHES	
06-26	G168-7037124		FOM-P786	DIAPHRAGM, control panel push button switch (rubber, 1/16 in. thk.).....	2
			FOM-P871	HANDLE, control panel snap switch.....	6
	G214-7035487		FOM-7X1055B	SCREW, machine, oval-fil-hd., S., cd-pltd., No. 4 (0.112)-40NC-3 x 3/8.....	6
			FOM-P850	HOLDER, control panel push button switch diaphragm.....	2
	H001-1518003		FOM-P853	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/16.....	8
			FOM-P863	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138).....	8
	G214-7035488		FOM-70X1052E-19	NUT, control panel switch handle connecting shaft gland.....	6
	G214-7035489		FOM-P864	PIN, retaining, control panel snap switch yoke.....	6
	G168-7037123		FOM-P870	SHAFT, connecting, control panel switch handle (For blower, battery, dash, and fan)....	4
06-25		BECX1C-1	FOM-P785	SHAFT, connecting, control panel switch handle (For magneto and lights).....	2
			FOM-P885	SWITCH, booster coil (push button) (mounted in switch control panel box).....	2
	H001-1518003		FOM-P853	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/8.....	4
			FOM-P783	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138).....	4
	G168-7037120		FOM-P784	SWITCH, battery (snap) (mounted in switch control panel box).....	4
06-25	G168-7037122	BECX1D-1	FOM-P791	SWITCH, headlight (snap) (mounted in switch control panel box) (AH-81378).....	1
06-25	G168-7037121		FOM-P886	SWITCH, engine magneto (snap) (mounted in switch control panel box) (AH-811978A)...	1
			FOM-P854	SCREW, machine, oval-fil-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 3/8.....	12
	H001-1518004		FOM-70X1051E-9	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164).....	12
			FOM-P877	WASHER, control panel switch handle connecting shaft gland nut (felt).....	6
06-25	G214-7035490			YOKE, control panel snap switch (For blower, battery, dash, and fan).....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-25	G214-7035491		FOM-P875	YOKE, control panel snap switch (For lights and magneto).....	2
				0606C—HULL WIRING	
06-25	G214-7035492		FOM-70X1052E-1	BASE, control panel fuse.....	1
	G168-7039442		FOM-P890	SCREW, machine, rd-hd., S., cd-pltd., No. 12 (0.216)-24NC-3 x 3/4.....	4
			FOM-7X1065B	BLOCK, control tunnel junction box binding post.....	1
			FOM-P848	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NF-3 x 1.....	2
	H001-7025621	BECX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
	G214-7035493		FOM-2X1645C	BRACKET, control panel to instrument panel shielded cable clip.....	1
	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
	H001-5419141	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	2
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock internal teeth, reg., S., 5/16 in. (SK-1218).....	2

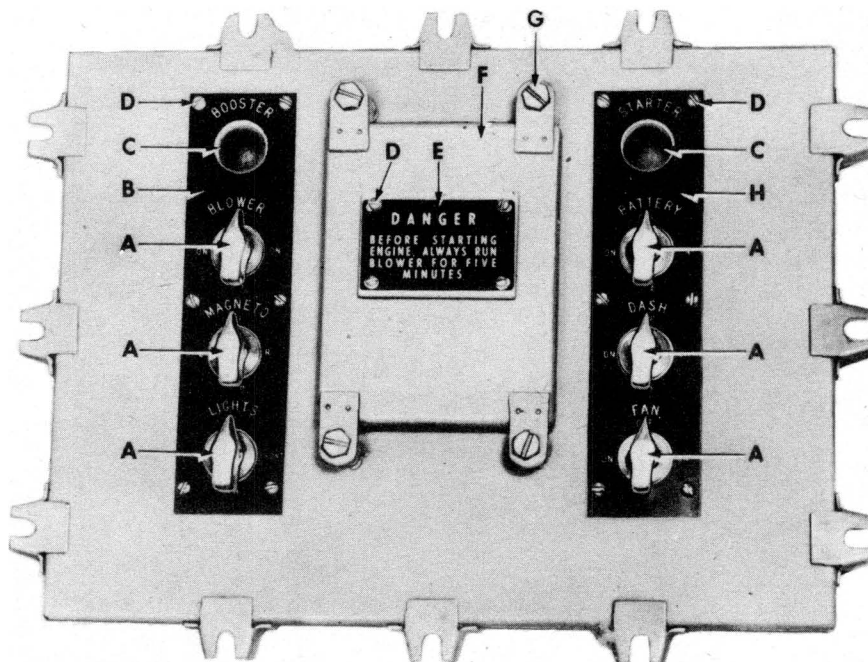

Key	Part Name	Part Number	Group Number
A	HANDLE.....	FOM-P786.....	.0606
B	PLATE.....	FOM-70X1051E-3.....	.2203
C	DIAPHRAGM.....	FOM-7X1056B.....	.0606
D	SCREW.....	FOM-P850.....	.0606
E	PLATE.....	FOM-70X1051E-5.....	.2203
F	COVER.....	FOM-70X1051E-4.....	.0606E
G	BOLT.....	FOM-P867.....	.0606E
H	PLATE.....	FOM-70X1051E-2.....	.2203

FIGURE 06-26—CONTROL PANEL COVER


RA PD 341116

0606-0606C

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0606C—HULL WIRING (Contd)	
	G214-7035494		FOM-30X1150B-1	BRACKET, supporting, flexible conduit (supports engine to regulator and relay panel conduits).....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	2
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
	G214-7035495		FOM-30X1150B	BRACKET, supporting, flexible conduit, assembly (Includes: clips and attaching hardware) (supports engine to regulator and relay panel conduits).....	1
06-25	G214-7035496		FOM-70X1052E-4	BUS, branch, control panel fuse base.....	2
	H001-4133620	BBKX3AF	FOM-P363	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	4
			FOM-P889	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 3/4.....	4
			FOM-P888	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 7/8.....	4
06-25	G214-7035497		FOM-70X1052E-5	BUS, control panel fuse base.....	1
	H001-4133620	BBKX3AF	FOM-P363	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	1
			FOM-P889	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 3/4.....	1
	G214-7035498		FOM-70X1052E-6	BUS, branch, control panel fuse base.....	1
	H001-4133620	BBKX3AF	FOM-P363	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	2
	H001-4024520	BBAX1AG	FOM-P34	NUT, regular, hex., s-fin., br., 1/4-20NC-2.....	1
			FOM-P889	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 3/4.....	2
			FOM-P891	SCREW, machine, rd-hd., br., 1/4-20NC-3 x 7/8.....	1
			FOM-7X1067B	BUS, branch, control tunnel junction box.....	1
	H001-4133620	BBKX3AF	FOM-P363	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	1
			FOM-P1299	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 1/2.....	1
			FOM-P607	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NC-3 x 1/2.....	2
	H001-7025591	BECX1D-1	FOM-P364	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164).....	1
	H001-7025621	BECX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
	H001-1522004	BEEX1BD	FOM-P417	WASHER, plain, br., SAE std., No. 8 (0.164).....	1
06-25	G214-7035499		FOM-7X1062B	BUS, grounding, control panel.....	1
	H001-5417520	BCVX2AB-1	FOM-P855	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/8.....	2
	H001-7043681	BECX1G-1	FOM-P623	WASHER, lock, reg., S., cd-pltd., 1/4 in.....	2
	G214-703550		FOM-70X1052E-2	BUS, main, control panel fuse base.....	1
			FOM-70X1038E-13	CABLE, cab ventilating fan receptacle box to fan (shielded, 2 ft. long).....	1
	G167-0131109		FOM-70X1038E-7	CABLE, cab ventilating fan receptacle box to headlight receptacle box (shielded, 5 ft. 1 1/2 in. long) (Mk I; LVT (A) (1) only).....	1
			FOM-70X1109B	CABLE, cab ventilating fan receptacle box to headlight receptacle box (shielded, 4 ft. 5 1/2 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1093B	CABLE, connector, power outlet boxes (Includes: terminals) (Mk IV; LVT (A) (4) only).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G167-0131108 G167-0131107		FOM-70C1038E-6 FOM-70X1038E-5 FOM-70X1038E-14 FOM-70X1038E-12	CABLE, control panel to cab ventilating fan receptacle box (shielded, 7 ft. 7 in. long)....	1
				CABLE, control panel to distribution box (shielded, 34 ft. 7 3/4 in. long).....	1
				CABLE, control panel to instrument panel (shielded, 1/2 in. diam. x 4 ft. 1 in. long)....	1
				CABLE, control panel to instrument panel (shielded, 1 3/8 in. diam. x 4 ft. 4 1/2 in. long).....	1
	G167-0131105		FOM-70X1038E-3	CABLE, control panel to radio junction box (shielded, 10 ft. 2 1/2 in. long).....	1
	G167-0131106		FOM-70X1038E-4	CABLE, control panel to regulator and relay panel (shielded, 30 ft. long).....	1
	G167-0131103		FOM-70X1038E-1 FOM-70X1063B	CABLE, control panel to spotlight receptacle box (shielded, 5 ft. 4 1/2 in. long).....	1
			FOM-70X1075B	CABLE, control tunnel junction box to auxiliary generator (shielded) (Mk I; LVT (A) (1) only).....	1
			FOM-70X1038E-21	CABLE, control tunnel junction box to auxiliary generator (shielded) (Mk IV; LVT (A) (4) only).....	1
				CABLE, control tunnel junction box to battery (shielded, 15 ft. 10 in. long) (Mk I; LVT (A) (1) only).....	1

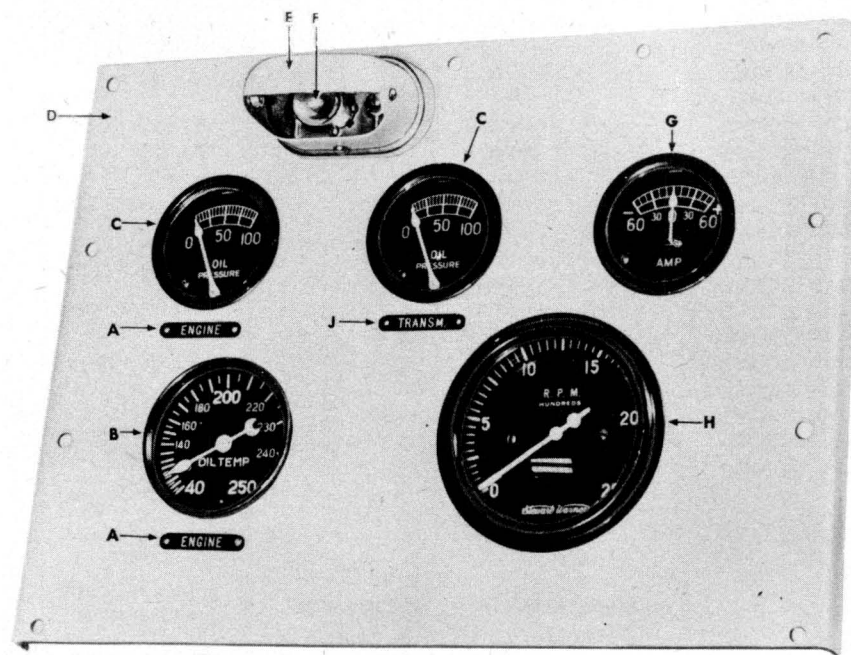

Key	Part Name	Part Number	Group Number
A	PLATE.....	FOM-8X1033B.....	2203
B	GAGE, w/TUBE, assembly.....	FOM-P266.....	0605
C	GAGE, assembly.....	FOM-P267.....	0605
D	PANEL.....	FOM-80X1004C.....	1809
E	LIGHT.....	FOM-P252.....	0605C
F	LAMP.....	FOM-P636.....	0607B
G	AMMETER, assembly.....	FOM-P265.....	0605
H	TACHOMETER, assembly.....	FOM-P254.....	2205
J	PLATE.....	FOM-8X1034B.....	2203

FIGURE 06-27—INSTRUMENT PANEL—FRONT VIEW

RA PD 341108

0606C

GROUP 06—ELECTRICAL


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0606C—HULL WIRING (Contd)	
			FOM-70X1104B	CABLE, control tunnel junction box to power outlet box, assembly (Includes: terminals) (shielded, 10 ft. 2 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1104B-1	CABLE, control tunnel junction box to power outlet box (w/o terminals) (shielded) (Mk IV; LVT (A) (4) only).....	1
	G168-7037139		FOM-70X1078B	CABLE, control tunnel junction box to solenoid plug (Mk IV; LVT (A) (4) only).....	1
	G167-0131110		FOM-70X1038E-11	CABLE, distribution box to left engine room blower (shielded, 8 ft. 1 in. long).....	1
			FOM-70X1038E-8	CABLE, distribution box to left taillight (shielded, 3 ft. 9 1/2 in. long).....	1
			FOM-70X1038E-16	CABLE, distribution box to regulator and relay panel, lower (shielded, 2 ft. 6 in. long)...	1
			FOM-70X1038E-15	CABLE, distribution box to regulator and relay panel, upper (shielded, 2 ft. 3 in. long)...	1
	G168-7037135		FOM-70X1038E-10	CABLE, distribution box to right engine room blower (shielded, 13 ft. 5 in. long).....	1
			FOM-70X1038E-22	CABLE, engine generator to blower (shielded, 3 ft. 10 1/2 in. long) (Mk IV; LVT (A) (4) only).....	1
	G167-0131111		FOM-70X1038E-9	CABLE, left taillight to right taillight (shielded, 7 ft. 2 1/2 in. long).....	1
	G168-7037136		FOM-70X1074B	CABLE, radio junction box to platform speaker junction box, assembly (Includes: terminals) (shielded, 11 ft. 10 1/2 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1074B-1	CABLE, radio junction box to platform speaker junction box (w/o terminals) (shielded, 10 ft. 2 1/2 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1086B	CABLE, radio junction box to radio cabinet junction box, assembly (Includes: terminals) (shielded, 3 ft. 3 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1086B-1	CABLE, radio junction box to radio cabinet junction box (w/o terminals) (shielded) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1087B	CABLE, radio junction box to radio cabinet junction box, assembly (Includes: terminals) (shielded, 2 ft. 9 1/4 in.) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1087B-1	CABLE, radio junction box to radio cabinet junction box (w/o terminals) (shielded) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1127B	CABLE, radio junction box to remote control junction box, assembly (Includes: terminals) (shielded, 11 ft. 2 1/2 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1127B-1	CABLE, radio junction box to remote control junction box (w/o terminals) (shielded) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1129B	CABLE, radio junction box to remote control junction box, assembly (Includes: terminals) (shielded, 11 ft. 9 in. long) (Mk IV; LVT (A) (4) only).....	1
			FOM-70X1129B-1	CABLE, radio junction box to remote control junction box (w/o terminals) (shielded) (Mk IV; LVT (A) (4) only).....	1
	G167-0131104		FOM-70X1038E-2	CABLE, radio junction box to speaker junction box (shielded, 11 ft. 11 3/4 in. long) (Mk I; LVT (A) (1) only).....	1
	G168-7039411		FOM-70X1038E-18	CABLE, radio junction box to speaker junction box, assembly (Includes: terminals) (shielded, 14 ft. 7 in. long) (Mk I; LVT (A) (1) only).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
01-2	G214-7035501 H001-0718003 H001-5420521 H001-1519011 G167-0137999 H001-5122007 G167-0137987 G167-0137988 H001-0725480 H001-0121887 H001-1522007 G167-0138000 G167-0138001 H001-1522007 G167-0137990 G167-0137991 G167-0138002 H001-0725480 H101-0121887 H001-1522007 G214-7036346 G214-7036347 G214-7036348 G214-7036349 G214-7036350 G214-7036351 G214-7036352 G214-7036353 G168-7039410 G214-7036354 G167-0131252 G214-7035502 H004-0345660 G168-7039407 G168-7039408	BBAX1C BCVX2EH-1 BEAX1L BEBX1BG BBSX2AA-1 BCVX2AH-1 BEBX1BG BEBX1BG BBSX2AA-1 BCVX2AH-1 BEBX1BG A213578D	FOM-70X1128B FOM-70X1128B-1 FOM-2X1657B FOM-P40 FOM-P39 FOM-P28 FOM-P874 FOM-8X1048B FOM-P369 FOM-P672 FOM-P244 FOM-8X1012B FOM-8X1013B FOM-P420 FOM-P671 FOM-P244 FOM-P370 FOM-P371 FOM-P672 FOM-P244 FOM-8X1016B FOM-8X1017B FOM-P372 FOM-P420 FOM-P671 FOM-P244 FOM-70X1052E-12 FOM-70X1052E-18 FOM-70X1052E-13 FOM-70X1052E-14 FOM-70X1052E-10 FOM-70X1052E-11 FOM-70X1052E-15 FOM-70X1052E-16 FOM-70X1052E-17 FOM-70X1052E-9 FOM-70X1003C-3 FOM-70X1051E-14 FOM-P4905 FOM-P4906	CABLE, radio junction box to remote control junction box, assembly (Includes: terminals) (shielded, 11 ft. 5 in. long) (Mk IV; LVT (A) (4) only)..... CABLE, radio junction box to remote control junction box (w/o terminals) (shielded) (Mk IV; LVT (A) (4) only)..... CHANNEL, supporting, engine flexible conduit clip (behind engine room left baffle).... NUT, regular, hex., s-fin., S., 3/8-16NC-2..... SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4..... WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)..... CLIP, control panel fuse..... CLIP, cable, closed, 3/16 in..... CLIP, cable, closed, 1/2 in..... SCREW, machine, oval-fil-hd., S., cd-pltd., 1/4-20NC-3 x 3/8..... WASHER, plain, br., SAE std., 1/4 in..... CLIP, cable, closed, 1/2 in..... CLIP, cable, closed, 3/4 in..... NUT, safety, hex., S., cd-pltd., (elastic stop nut type) 1/4-20NC-2..... SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4..... WASHER, plain, br., SAE std., 1/4 in..... CLIP, cable, closed, 3/4 in..... CLIP, cable, closed, 7/8 in..... SCREW, machine, oval-fil-hd., S., cd-pltd., 1/4-20NC-3 x 3/8..... WASHER, plain, br., SAE std., 1/4 in..... CLIP, cable, closed, 1 in..... CLIP, cable, closed, 1 3/8 in..... CLIP, cable, closed, 3 line..... NUT, safety, hex., S., cd-pltd., (elastic stop nut type) 1/4-20NC-2..... SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4..... WASHER, plain, br., SAE std., 1/4 in..... CONDUCTOR, blower switch..... CONDUCTOR, blower switch to booster push button switch..... CONDUCTOR, blower switch to fuse..... CONDUCTOR, booster push button switch to starter push button switch..... CONDUCTOR, circuit breaker to middle terminal post..... CONDUCTOR, circuit breaker to right terminal post..... CONDUCTOR, dash switch to fuse..... CONDUCTOR, fan switch to fuse..... CONDUCTOR, light switch to fuse..... CONDUCTOR, magneto switch to control panel grounding bus..... CONDUIT, generator to regulator and relay panel w/CABLE, assembly (flexible, 7 ft. 4 3/4 in. long)..... DIAGRAM, wiring, control panel (paper)..... NUT, coupling, shielding conduit, br., 1 3/16-18NS-2 (generator to panel conduit)..... PACKING, electrical (3/16 in.)..... PACKING, electrical (3/16 in.).....	1 1 1 4 4 4 10 4 3 7 7 24 22 46 46 46 2 2 4 4 21 24 3 51 51 51 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 180" 58"

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0606C—HULL WIRING (Contd)	
	G168-7039409		FOM-P4904	PACKING, electrical (3/16 in.).....	119"
			FOM-P845	POST, terminal, control tunnel junction box.....	1
	H001-0718003	BBAX1CG	FOM-P27	NUT, regular, hex., s-fin., br., 3/8-16NC-2.....	1
06-25	G214-7035503		FOM-P883	POST, terminal, control panel.....	1
06-25	G214-7035504		FOM-P884	POST, terminal, control panel.....	2
	H001-0718003	BBAX1CG	FOM-P27	NUT, regular, hex., s-fin., br., 3/8-16NC-2.....	3
06-25			FOM-P880	RETAINER, control panel fuse.....	10
	H001-4133620	BBKX2AF	FOM-P363	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	10
			FOM-P889	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 3/4.....	10
			FOM-P851	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 3/8 (control panel grounding bus terminal).....	2
	H001-1518004	BECX1D-1	FOM-P854	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164).....	2
06-25			FOM-P873	TERMINAL, branch control panel fuse.....	5
	H001-4133620	BBKX3AF	FOM-P363	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	5
			FOM-P538	TERMINAL, solderless, cable (TB-B5).....	33
	H004-0370020		FOM-P595	TERMINAL, solderless, cable (TB-B33).....	12
			FOM-P596	TERMINAL, solderless, cable (TB-B86).....	21
			FOM-P597	TERMINAL, solderless, cable (TB-G71).....	4
			FOM-P598	TERMINAL, solderless, cable (TB-G72).....	1
			FOM-P599	TERMINAL, solderless, cable (TB-B87).....	4
	H004-0370120		FOM-P603	TERMINAL, solderless, cable (TB-B71).....	1
			FOM-P881	TERMINAL, solderless, cable (TB-D71).....	2
			FOM-P882	TERMINAL, solderless, cable (TB-D73).....	2
			FOM-P900	TERMINAL, solderless, cable (TB-B43).....	5
				0606D—CIRCUIT BREAKER	
06-25	G168-7037126		FOM-P779	BREAKER, circuit, assembly (60 amp.).....	1
			FOM-P852	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 3/4.....	2
	G214-7035505		FOM-7X1056B	DIAPHRAGM, circuit breaker push button.....	1
	G214-7035506		FOM-7X1055B	HOLDER, circuit breaker push button diaphragm.....	1
			FOM-P850	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/16.....	2
	H001-1518003	BECX1C-1	FOM-P853	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138).....	2
	G214-7035507		FOM-7X1061B	PLATE, mounting, circuit breaker.....	1
			FOM-P607	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 1/2.....	2
	H001-7043621	BECX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
				0606E—TERMINAL BOXES	
	G214-7035508		FOM-70X1092B	BLOCK, terminal, power outlet box (Mk IV; LVT (A) (4) only).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
F,M,06-32 06-25 06-25 06-25 F,M	H001-7043621	BECX1E-1	FOM-P929	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-3 x 3/8.....	4
	G214-7035509		FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	4
			FOM-70X1034E	BOX, control panel, assembly (Includes: terminal tubes and cover attaching bolts).....	1
			FOM-P859	BOLT, attaching, control panel cover.....	12
			FOM-P858	PIN, hinge, control panel cover attaching bolt.....	12
	G214-7035510	BBAX1E	FOM-P860	WASHER, control panel cover attaching bolt.....	12
	H001-0718005		FOM-70X1006C	BOX, distribution, electrical, assembly (Also called main junction box).....	1
			FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	4
	H001-1519013		FOM-P37	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 3/4.....	4
			FOM-P76	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1224).....	4
		BEAX2B		BOX, junction, main, assembly (See BOX, distribution, electrical, assembly, FOM-70X1006C)	
	G214-7036511		FOM-71X1107C	BOX, power outlet, assembly (Includes: body, cover, cover gasket and terminal block) (Mk. IV; LVT (A) (4) only).....	1

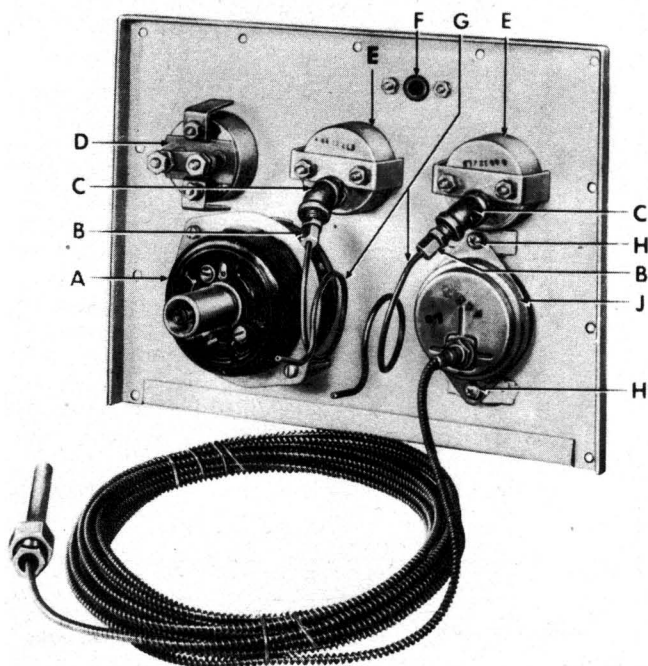

Key	Part Name	Part Number	Group Number
A	TACHOMETER, assembly ..	FOM-P254	2205
B	CONNECTOR.....	FOM-P277	0605B
C	ELBOW	FOM-P258	0605B
D	AMMETER, assembly	FOM-P265	0605
E	GAGE, assembly.....	FOM-P267	0605
F	GROMMET.....	FOM-P604	0605C
G	LINE	FOM-P843	0605B
H	SCREW	FOM-P288	0605
J	GAGE, w/TUBE, assembly	FOM-P266	0605

FIGURE 06-28—INSTRUMENT PANEL—REAR VIEW


RA PD 341109

0606E

0606F

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y	
	Order and Store by This Number	ORDNANCE	MANUFACTURER			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	
F M 06-25	G214-7035512		FOM-71X1088C	0606E—TERMINAL BOXES (Contd)		
	G214-7035513		FOM-70X1008B	BOX, power outlet, assembly (Includes: body, cover, cover gasket and terminal block) (Mk IV; LVT (A) (4) only).....	1	
	H001-0718002	BBAX1B	FOM-P55	BOX, receptacle, cab ventilating fan, assembly.....	1	
	H001-1519010	BEAX1K	FOM-P25	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2	
	G214-7035514		FOM-70X1007B	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2	
	H001-0718002	BBAX1B	FOM-P55	BOX, receptacle, right headlight, assembly.....	1	
	H001-1519010	BEAX1K	FOM-P25	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2	
	G214-7035515		FOM-70X1009B	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2	
	H001-0718002	BBAX1B	FOM-P55	BOX, receptacle, spotlight, assembly.....	1	
	H001-5419141	BCVX2CH-1	FOM-P22	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	4	
	H001-1519010	BEAX1K	FOM-P25	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	4	
	G214-7035516		FOM-71X1059D	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	4	
	G214-7035517		FOM-71X1097D	BOX, junction, control tunnel, assembly (Mk I; LVT (A) (1) only).....	1	
	G167-0139871		FOM-P406	BOX, junction, control tunnel, assembly (Mk IV; LVT (A) (4) only).....	1	
	H001-4133620	BBKX3AF	FOM-P363	CONDENSER, control panel (SPR-5284, type J-X-131).....	1	
			FOM-P888	NUT, machine screw, hex., br., No. 8 (0.164)-32NC-2.....	2	
			FOM-887	SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-3 x 7/8.....	1	
			FOM-P854	SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 3/8.....	1	
		BECX1D-1	FOM-P417	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164).....	3	
		BEBX1D-1	FOM-70X1051E	WASHER, plain, S., cd-pltd., No. 8 (0.164).....	1	
	06-26	G214-7035518		FOM-70X1051E-4	COVER, control panel, assembly (Includes: fuse cover, switch handles, and name plates).....	1
	06-26	G214-7035519		FOM-P867	COVER, control panel fuse.....	1
				FOM-70X1064D-2	BOLT, attaching, control panel fuse cover.....	4
		G214-7035520		FOM-P846	COVER, control tunnel junction box.....	1
		H001-5148231		FOM-P846	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NC-3 x 3/8.....	10
		H001-5148831	BEAX1F-1	FOM-P36	WASHER, lock, int-teeth., reg., S., cd-pltd., No. 10 (0.190).....	10
	G214-7035530		FOM-7X1095B	COVER, control tunnel junction box (Mk IV; LVT (A) (4) only).....	1	
			FOM-P846	SCREW, machine, rd-hd., cd-pltd., No. 10 (0.190)-32NC-3 x 3/8.....	14	
	H001-7025621	BECX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	14	
	G214-7035521		FOM-7X1090B	COVER, power outlet box (Mk IV; LVT (A) (4) only).....	2	
			FOM-P885	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 3/8.....	32	
	G103-0502287	BECX1C-1	FOM-P853	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138).....	32	
	G214-7035522		FOM-70X1051E-8	GASKET, control panel cover (rubber, 3/8 in. square).....	1	
	G214-7035523		FOM-70X1051E-7	GASKET, control panel fuse cover (rubber, 1/4 in. square).....	1	
	G214-7035524		FOM-7X1069D	GASKET, control tunnel junction box (Mk I; LVT (A) (1) only).....	1	
	G214-7035525		FOM-7X1096B	GASKET, control tunnel junction box (Mk IV; LVT (A) (4) only).....	1	
	G214-7035529		FOM-7X1091B	GASKET, power outlet box cover (Mk IV; LVT (A) (4) only).....	2	

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
			FOM-P260-1	NUT, gland, terminal tube (size P) (control panel box)	2
			FOM-P368-1	NUT, gland, terminal tube, (size J) (electrical distribution box (1), and control panel box (1))	2
			FOM-P353-1	NUT, gland, terminal tube (size G) (electrical distribution box (2), cab ventilating fan receptacle box (1), spotlight receptacle box (1), and control panel box (3))	7
			FOM-P259-1	NUT, gland, terminal tube (size C) (electrical distribution box (3), right headlight receptacle box (1), cab ventilating fan receptacle box (2), and control panel box (1))	7
			FOM-P628-1	NUT, gland, terminal tube (size A) (right headlight receptacle box (1), and control panel box (1))	2
	G214-7035526		FOM-P4908	PACKING, electrical, terminal tube (5/16 in.)	184"
	G214-7035527		FOM-P4909	PACKING, electrical, terminal tube (5/16 in.)	61"
	G214-7035528		FOM-P4907	PACKING, electrical, terminal tube (5/16 in.)	122"

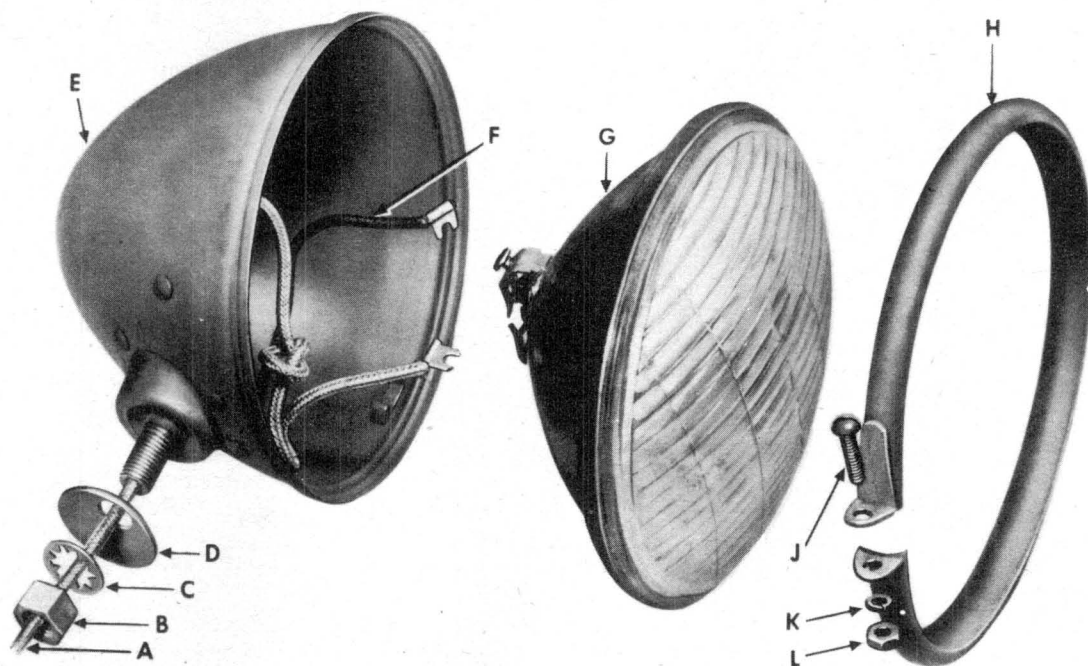

Key	Part Name	Part Number	Group Number
A	WIRE	FOM-70X104.1C-2	0607
B	NUT	DZ-B126	0607
C	WASHER	BEAX2A	0607
D	WASHER	DZ-B482	0607
E	BODY	DZ-W985	0607
F	WIRE	DZ-A440	0607
G	LAMP-UNIT	DZ-A114	0607A
H	BEZEL	DZ-W988	0607
J	SCREW	BCNX1FH	0607
K	WASHER	BECX1D	0607
L	NUT	DZ-B150	0607

FIGURE 06-29—LEFT HEADLIGHT ASSEMBLY—EXPLODED VIEW


RA PD 76273

0606E

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G168-7037119		FOM-71X1035E	0606E-TERMINAL BOXES (Contd) PANEL, control, assembly (Includes: box, cover, circuit breaker, grounding bus, and switch mounting plate).....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	4
	H001-1519013	BEAX2B	FOM-P76	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1224).....	4
	G214-7035531		FOM-70X1052E	PLATE, mounting, control panel switch, assembly (Includes: snap switches, push buttons, fuse base, busses, fuse clips, fuse retainers, yokes, and conductors).....	1
	H001-5417520	BCVX2AB	FOM-P855	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/8.....	4
	H001-7043681	BECX1G-1	FOM-P623	WASHER, lock, reg., S., cd-pltd., 1/4 in.....	4
	G214-7035532		FOM-P260-2	RING, gland, terminal tube (size P) (control panel box).....	2
	G214-7035533		FOM-P368-2	RING, gland, terminal tube (size J) (electrical distribution box (1), and control panel box (1)).....	2
	G214-7035534		FOM-P353-2	RING, gland, terminal tube (size G) (electrical distribution box (2), cab ventilating fan receptacle box (1), spotlight receptacle box (1), and control panel box (3)).....	7
	G214-7035535		FOM-P259-2	RING, gland, terminal tube (size C) (electrical distribution box (3), right headlight receptacle box (1), cab ventilating fan receptacle box (2), and control panel box (1)).....	7
	G214-7035536		FOM-P628-2	RING, gland, terminal tube (size A) (right headlight receptacle box (1), and control panel box (1)).....	2
				0607—HEADLIGHTS	
06-29	G214-7035537		DZ-W988	BEZEL, headlight.....	2
06-29			DZ-B150	NUT, regular, hex., s-fin., S., No. 8 (0.164)-32NC-2.....	2
06-29	H001-1030083	BCNX1FH	DZ-B364	SCREW, machine, rd-hd., S., No. 8 (0.164)-32NC-2 x 5/8.....	2
06-29	H001-1518004	BECX1D	DZ-B608	WASHER, lock, regular, S., No. 8 (0.164).....	2
06-29	G214-7035538		DZ-W985	BODY, headlight, assembly (Includes: mounting, stud, bolt, and ground terminal).....	2
06-29	H001-0718804	BBAX1D	DZ-B126	NUT, regular, hex., s-fin., S., 7/16-14NC-2.....	2
06-29			DZ-B482	WASHER, headlight body mounting bolt.....	2
06-29	H001-1519012	BEAX2A	DZ-B585	WASHER, lock, internal teeth, regular, S., 7/16 in. (SK-1222).....	2
	G167-0211400		FOM-P375	LIGHT, head, assembly (Does not include lead wire) (DZ-909P).....	2
	G168-7039416		FOM-70X1041C	LIGHT, head, left, assembly (Includes: 54 in. lead wire).....	1
	G168-7039417		FOM-70X1042C	LIGHT, head, right, assembly (Includes: 25 in. lead wire and terminal).....	1
			FOM-P595	TERMINAL, solderless, cable (right headlight lead wire) (TB-B33).....	1
06-29			DZ-A440	WIRE, ground, headlight.....	2
06-29			FOM-70X1041C-2	WIRE, lead, left headlight (54 in. long).....	1
			FOM-70X1042C-2	WIRE, lead, right headlight (25 in. long).....	1
				0607A—SEALED BEAM LAMP UNITS	
06-29			FOM-P789	LAMP UNIT, headlight, sealed, 12 V., assembly (MZ-4531) (DZ-A114).....	2
			FOM-P790	LAMP UNIT, spotlight, sealed, assembly.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
P,06-27,30	H104-0142450		FOM-P636 FOM-P788	0607B—LAMPS LAMP, elec., 13V., 3 cp. (WE-67) (instrument panel dash light (1), left taillight (1), and right taillight (1)). LAMP, hand lantern.	3 1
P	G167-0190576 G167-0190577		FOM-P403 FOM-P404	0607C—FUSES FUSE, 15 amp. (control panel switches). FUSE, 75 amp. (control panel switches).	5 1
				0608—TAILLIGHTS	
06-30	G214-7035539	BEAX1H	FOM-70X1021D-3	BODY, left taillight.	1
06-30	G214-7035540		FOM-70X1024D-3	BODY, right taillight.	1
06-30	H001-1500011		FOM-P633	SCREW, machine, rd-hd., S., cd-pltd., 1/4-20NC-3 x 1/4.	6
	G214-7035541		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).	6
	G214-7035542		FOM-70X1021D-6	GASKET, left taillight body ring (vellumoid, 1/32 in. thk.).	1
06-30	G214-7035543		FOM-70X1021D-5 FOM-70X1024D-6	GASKET, left taillight lens ring and lens (rubber, 1/32 in. thk.). GASKET, right taillight body ring (vellumoid, 1/32 in. thk.).	2 1

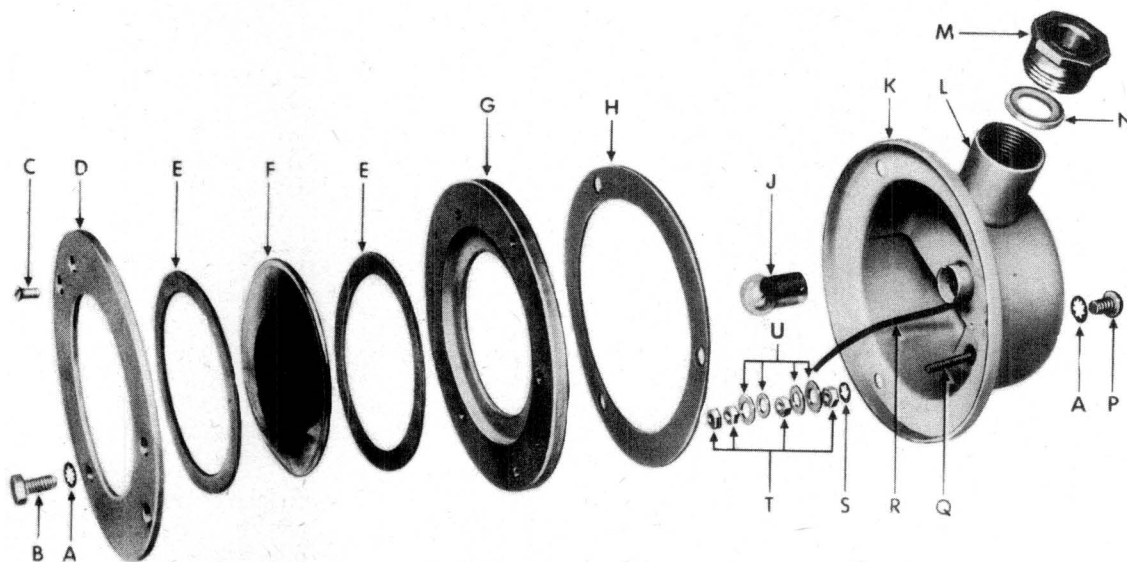

Key	Part Name	Part Number	Group Number
A	WASHER.....	BEAX1H.....	0608
B	SCREW.....	BCVX2AF-1.....	0608
C	SCREW.....	FOM-P637.....	0608
D	RING.....	FOM-70X1024D-2.....	0608
E	GASKET.....	FOM-70X1024D-5.....	0608
F	LENS.....	FOM-P632.....	0608
G	RING.....	FOM-70X1024D-1.....	0608
H	GASKET.....	FOM-70X1024D-6.....	0608
J	LAMP.....	FOM-P636.....	0607B
K	BODY.....	FOM-70X1024D-3.....	0608
L	TUBE (not serviced)		
M	NUT.....	FOM-P259-1.....	0608
N	RING.....	FOM-P259-2.....	0608
P	SCREW.....	FOM-P633.....	0608
Q	SCREW.....	FOM-P639.....	0608
R	WIRE.....	FOM-P634.....	0608
S	WASHER.....	BEAX1E-1.....	0608
T	NUT.....	FOM-P642.....	0608
U	WASHER.....	BEBX1D-1.....	0608


RA PD 341117

FIGURE 06-30—RIGHT TAIL LIGHT ASSEMBLY—EXPLODED VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0608—TAILLIGHTS (Contd)	
06-30	G214-7035544		FOM-70X1024D-5	GASKET, right taillight lens ring and lens (rubber, 1/32 in. thk.)	2
06-30	G168-7039423		FOM-P632	LENS, taillight (KD-6018)	2
	G168-7039424		FOM-70X1021D	LIGHT, tail, left, assembly	1
	G168-7039425		FOM-70X1024D	LIGHT, tail, right, assembly	1
06-30	H001-5417601	BCVX2AF-1	FOM-P419	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 5/8	6
	H001-5417561	BCVX2AD-1	FOM-P644	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	6
06-30	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	6
06-30			FOM-P259-1	NUT, gland, terminal tube (size C) (left taillight (2), right taillight (1))	3
06-30			FOM-P642	NUT, regular, hex., s-fin., S., cd-pltd., No. 8 (0.164)-32NC-2 (taillight terminal screws)	8
	G214-7035545		FOM-P259-2	RING, gland, terminal tube (size C) (left taillight (2), right taillight (1))	3
	G214-7035546		FOM-70X1021D-1	RING, left taillight body	1
	G214-7035547		FOM-70X1021D-2	RING, left taillight lens	1
06-30	G214-7035548		FOM-70X1024D-1	RING, right taillight body	1
06-30	G214-7035549		FOM-70X1024D-2	RING, right taillight lens	1
06-30			FOM-P637	SCREW, machine, fl-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 3/8	4
06-30			FOM-P639	SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 1/8 (taillight terminal)	2
06-30	H001-7021651	BEAX1E-1		WASHER, lock, internal teeth, reg., S., cd-pltd., No. 8 (0.164) (taillight terminal screw)	2
06-30	H001-7021621	BEBX1D-1	FOM-P641	WASHER, plain, S., cd-pltd., SAE std., No. 8 (0.164) (taillight terminal screw)	10
06-30			FOM-P634	WIRE, taillight, lead (No. 18 rubber covered, 6 in. long)	2
				0608A—AUXILIARY LAMPS	
				BOX, portable spotlight	1
	G167-0271600		FOM-P374	LANTERN, hand, w/mounting BRACKET	1
	G167-0389450		FOM-P376	SPOTLIGHT, w/CORD (Includes: box)	1
				0610—BATTERY	
F,M,06-32	G167-0117038		FOM-P378	BATTERY, storage, 205 amp. hr. (ES-3-DS-41-IR)	2
	G167-0131114		FOM-P381	CABLE, battery to ground (14 in. long) (WT-492S)	1
			FOM-P422	NUT, safety, S., cd-pltd., (elastic stop nut type) 3/8-16NC-2	1
	H001-5420561	BCVX2EL-1	FOM-P424	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1	1
	H001-1522009	BEBX1BK	FOM-P387	WASHER, plain, br., SAE std., 3/8 in.	1
				0610A—BATTERY SUPPORTS	
	G214-7035550		FOM-20X1900C	CLAMP, battery	1
			FOM-P842	BOLT, sq-hd., S., 3/8-16NC-2 x 12 1/2 (Welded to hull)	4
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	4
	H001-1531004	BEBX2D	FOM-P356	WASHER, plain, S., U.S. std., 3/8 in.	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G214-7035551		FOM-20X1593C FOM-7X1070B	FLOOR, battery rack..... TERMINAL, battery cable.....	1
				0610B—STARTING CABLES, CONNECTIONS, AND RELAYS 0610B-1—STARTING CABLES AND CONNECTIONS	
06-4,31	G214-7035552 H101-0132982 H001-7025651	BCNX2BG-1 BECX1F-1	FOM-70X1023E-13	BASE, cranking motor and battery relay terminal..... SCREW, machine, rd-hd., S., cd-pltd., No. 12 (0.216)-24NC-2 x 3/4..... WASHER, lock, reg., S., cd-pltd., No. 12 (0.216).....	1 2 2
06-31	G214-7035553		FOM-70X1023E-11	BUS, cranking motor relay terminal post.....	1
06-31	G214-7035554		FOM-70X1023E-12	BUS, elbow, battery relay terminal post.....	1
01-2	G167-0131250		FOM-70X1003C-1	CONDUIT, cranking motor to regulator and relay panel, w/CABLE, assembly (flexible, 5 ft. 3/4 in. long).....	1
	G168-7037128 G168-7037129 H004-0345660	A213578D	FOM-70X1040B FOM-70X1039B	JUMPER, battery (15 3/8 in. long)..... LEAD, battery to regulator and relay panel, positive (3 ft. 4 in. long)..... NUT, coupling, shielding conduit, br., 1 3/16-18NS-2 (cranking motor to panel conduit).....	1 1 2

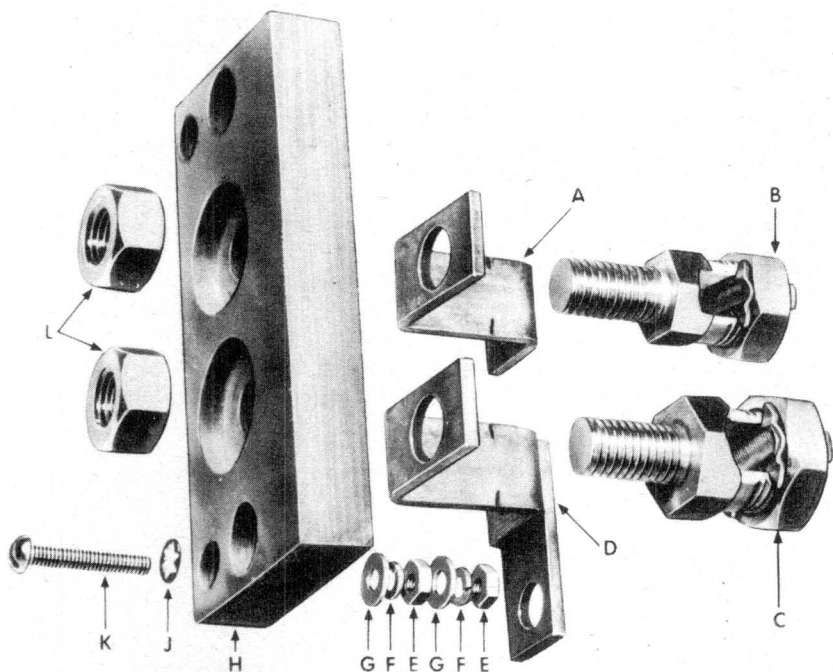

Key	Part Name	Part Number	Group Number
A	BUS.....	FOM-70X1023E-11.....	0610B
B	POST.....	BUN-KC2563T13.....	0610B
C	POST.....	BUN-KC2663T13.....	0610B
D	BUS.....	FOM-70X1023E-12.....	0610B
E	NUT.....		0604A
F	WASHER.....	BECX1D-1.....	0604A
G	WASHER.....	BEBX1D-1.....	0604A
H	BASE.....	FOM-70X1023E-13.....	0610B
J	WASHER.....	BEAX1E-1.....	0604A
K	SCREW.....	BCNX1FM-1.....	0604A
L	NUT.....	BBAX1E-1.....	0610B

FIGURE 06-31—RELAY TERMINAL BASE AND RELATED PARTS


RA PD 76276

0610A-0610B-1

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0610B-1—STARTING CABLES AND CONNECTIONS (Contd)	
06-31	G214-7035555		BUN-KC2663T13	POST, terminal, battery relay (For No. 2/0 wire).....	1
06-31	H001-0718005	BBAX1E-1	FOM-P52	NUT, regular, hex., s-fin., S., cd-pltd., 1/2-13NC-2.....	1
06-31	G214-7035556		BUN-KC2563T13	POST, terminal, cranking motor relay (for No. 1/0 wire).....	1
06-31	H001-0718005	BBAX1E-1	FOM-P52	NUT, regular, hex., s-fin., S., cd-pltd., 1/2-13NC-2.....	1
06-33	H101-189136	BCGX1.1DG-1		SCREW, machine, oval-fil-hd., S., cd-pltd., 1/4-28NF-2 x 5/8 (cranking motor and battery relay terminal).....	4
06-33	A055-0443005	BECX1G-1	FOM-P623	WASHER, lock, reg., S., cd-pltd., 1/4 in. (relay terminal screw).....	4
06-33	H001-7045531	BEBX2B-1		WASHER, plain, S., cd-pltd., U.S. std., 1/4 in. (relay terminal screw).....	4
				0610B-2—RELAY ASSEMBLY	
06-33	G214-7035557		LE-LC1901-2A-3A	BAR, cranking motor and battery relay stationary contact, w/NUT, assembly.....	4
06-33	G214-7035558		LE-156114	BUSHING, insulating, cranking motor and battery relay contact disk.....	2
06-33	G214-7035559		LE-LC1901-5	COIL, cranking motor and battery relay, assembly.....	2
06-33				SCREW, machine, oval-fil-hd., dld. f/lkg-wire., No. 10 (0.190)-24NC-2 x 5/8.....	8
06-33	H001-7043621	BECX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	8
06-33	H001-7043621	BEBX1E-1		WASHER, plain, S., cd-pltd., SAE std., No. 10 (0.190).....	8
	22W-1642100	BFWX1A		WIRE, S., low carbon, soft, black annealed, 0.041 in. diam.....	as req.
06-33	G214-7035560		LE-156115-N12	COVER, cranking motor and battery relay contact, w/NAMEPLATE, assembly.....	2
06-33			LE-156123	NUT, hex., elastic stop nut type.....	8
06-33	G214-7035561		LE-156113	DISK, contact, cranking motor and battery relay.....	2
06-33	H001-4135621	BBKX2BA-1	LE-156124	NUT, machine screw, hex., S., cd-pltd., No. 8 (0.164)-32NC-2 (cranking motor and battery relay coil terminal screw).....	6
06-33	G214-7035562		LE-LC1901-4	PANEL, cranking motor and battery relay stationary contact.....	2
06-33			LE-156109	PIN, cranking motor and battery relay compression spring.....	2
06-33		BFAQ1CC-1	LE-156125	PIN, cotter, split, S., cd-pltd., 3/32 x 1/2.....	2
06-33	G214-7035563		LE-156111	PLUNGER, cranking motor and battery relay.....	2
06-33			LE-LC1901-6	POST, support, cranking motor and battery relay contact cover.....	8
06-4	G167-0364801		FOM-P435	RELAY, cranking motor and battery, assembly (LE-5038-NKE).....	2
06-33		BCNX3FK-3	LE-156117	SCREW, machine, rd-hd., br., ni-pltd., No. 8 (0.164)-32NC-2 x 3/4 (relay coil terminal).....	2
06-33	G214-7035564		LE-156110	SPRING, compression, cranking motor and battery relay.....	2
06-33	G214-7035565		LE-156108	SPRING, lifting, cranking motor and battery relay plunger.....	2
06-33			LE-156120	WASHER, cranking motor and battery relay compression spring pin.....	4
06-33			LE-156112	WASHER, insulating, cranking motor and battery relay contact disk.....	2
06-33	H001-7021651	BEAX1E-1		WASHER, lock, internal teeth, reg., S., cd-pltd., No. 8 (0.164) (SK-1208) (cranking motor and battery relay coil terminal screw).....	2
06-33	H001-1518004	BECX1D-1	LE-156121	WASHER, lock, reg., S., cd-pltd., No. 8 (0.164) (cranking motor and battery relay coil terminal screw).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611—AUXILIARY GENERATOR ASSEMBLY AND MOUNTINGS	
	G214-7035566		FOM-20X1872B	ANGLE, front support, auxiliary generator engine (Mk I; LVT (A) (1) only).....	1
	G214-7035567		FOM-20X1971B	ANGLE, front support, auxiliary generator engine (Mk IV; LVT (A) (4) only).....	1
	G214-7035568		FOM-20X1873B	ANGLE, rear support, auxiliary generator engine (Mk I; LVT (A) (1) only).....	1
	G214-0735569		FOM-20X1985B	ANGLE, rear support, auxiliary generator engine (Mk IV; LVT (A) (4) only).....	1
	G214-7035570		FOM-2X1874B	ANGLE, support bracket, auxiliary generator engine.....	2
	H001-0718003	BBAX1C	FOM-P40	NUT, hex., s-fin., S., 3/8-16NC-2	4
			FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4.....	4
	H001-1519011	BEAXIL	FOM-P28	WASHER, lock, internal teeth, S., 3/8 in. (SK-1220).....	4
	G214-7035571		FOM-20X1870D	COVER, auxiliary generator engine, assembly, (removable)	1
	G214-7035572		FOM-P654	HINGE, spring (ACH-1026L).....	2
			FOM-P55	NUT, hex., s-fin., S., 5/16-18NC-2.....	4
	H001-1049060	BCRX1FG	FOM-P939	SCREW, wood, rd-hd., S., 1 in., No. 5 (0.125).....	3
F,M	G103-1596360	D58208	DA-5067440	GENERATOR, auxiliary, assembly (Includes: carburetor and breather).....	1

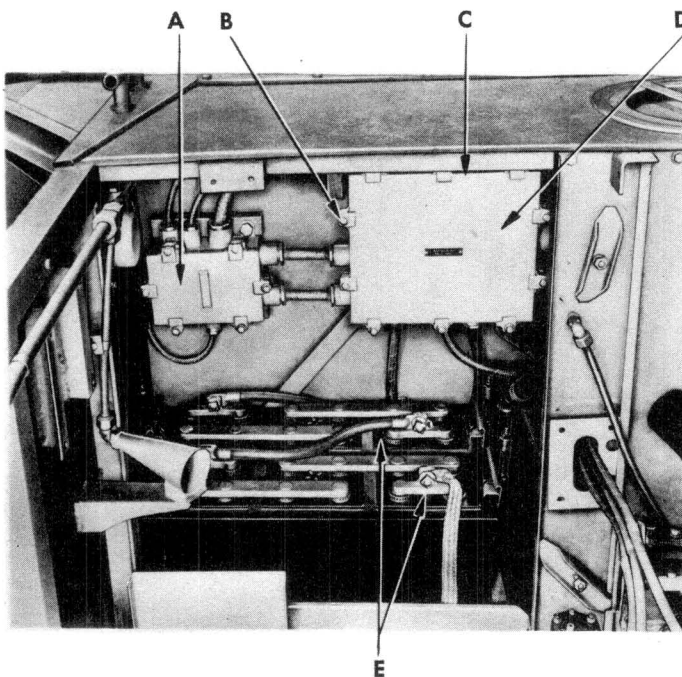


KEY	PART NAME	PART No.	GROUP
A	BOX, ASS'Y...	FOM-70X1006C...	0606E
B	SCREW.....	BCAX1BF-2.....	0601B
C	BOX, ASS'Y...	FOM-70X1023E.....	0601B
D	COVER.....	FOM-70X1023E-2...	0601B
E	BATTERY.....	FOM-P378.....	0610

FIGURE 06-32—REGULATOR AND RELAY PANEL, DISTRIBUTION BOX, AND BATTERY

RA PD 341118

0611

GROUP 06—ELECTRICAL

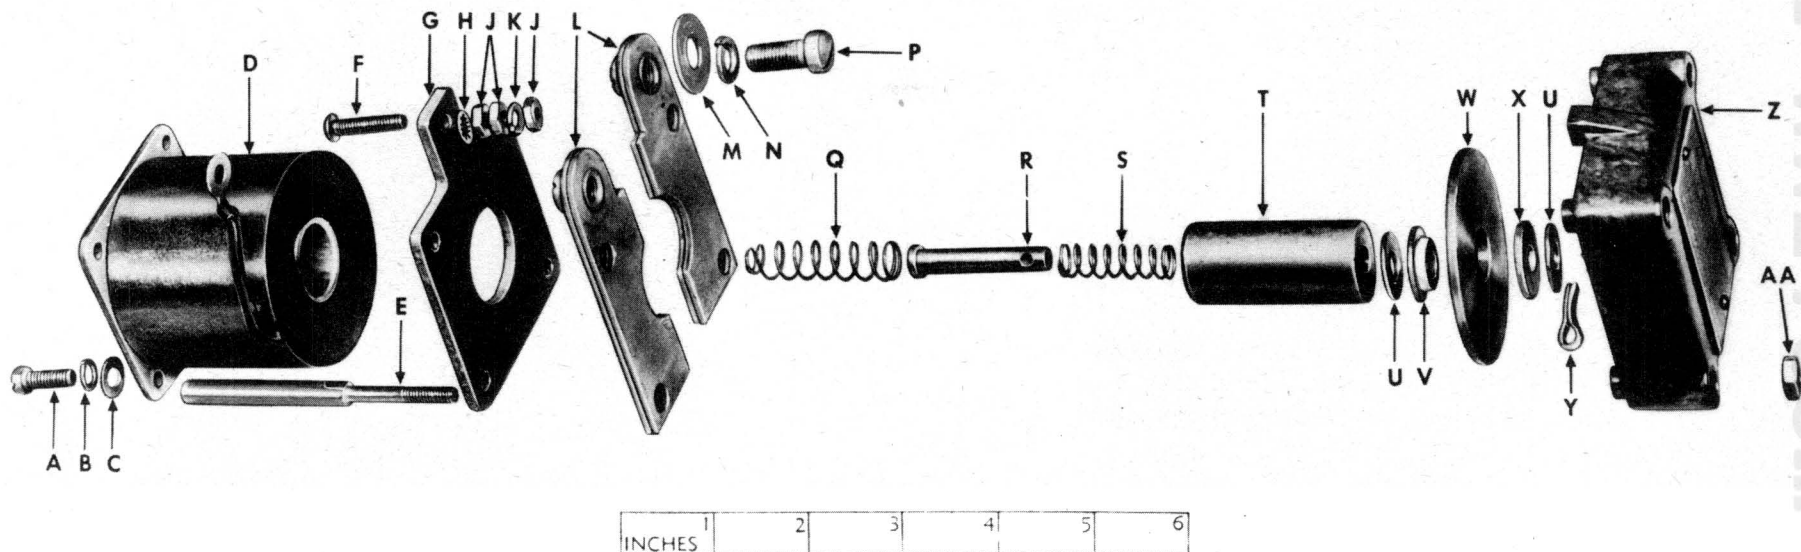


Key	Part Name	Part Number	Group Number
A	SCREW	0610B-2
B	WASHER	BECX1E-1	0610B-2
C	WASHER	BEBX1E-1	0610B-2
D	COIL, assembly	LE-LC1901-5	0610B-2
E	POST	LE-LC1901-6	0610B-2
F	SCREW	BCNX3FK-3	0610B-2
G	PANEL	LE-LC1901-4	0610B-2
H	WASHER	BEAX1E-1	0610B-2

Key	Part Name	Part Number	Group Number
J	NUT	BBKX2BA-1	0610B-2
K	WASHER	BECX1D-1	0610B-2
L	BAR, w NUT, assembly	LE-LC1901-2A-3A	0610B-2
M	WASHER	BEBX2B-1	0610B-1
N	WASHER	BECX1G-1	0610B-1
P	SCREW	BCGX1.1DG-1	0610B-1
Q	SPRING	LE-156108	0610B-2
R	PIN	LE-156109	0610B-2
S	SPRING	LE-156110	0610B-2
T	PLUNGER	LE-156111	0610B-2

Key	Part Name	Part Number	Group Number
U	WASHER	LE-156120	0610B-2
V	BUSHING	LE-156114	0610B-2
W	DISK	LE-156113	0610B-2
X	WASHER	LE-156112	0610B-2
Y	PIN	LE-156125	0610B-2
Z	COVER, w PLATE, assembly	LE-156115-N12	0610B-2
AA	NUT	LE-156123	0610B-2

RA PD 341110

FIGURE 06-33—RELAY ASSEMBLY—EXPLODED VIEW

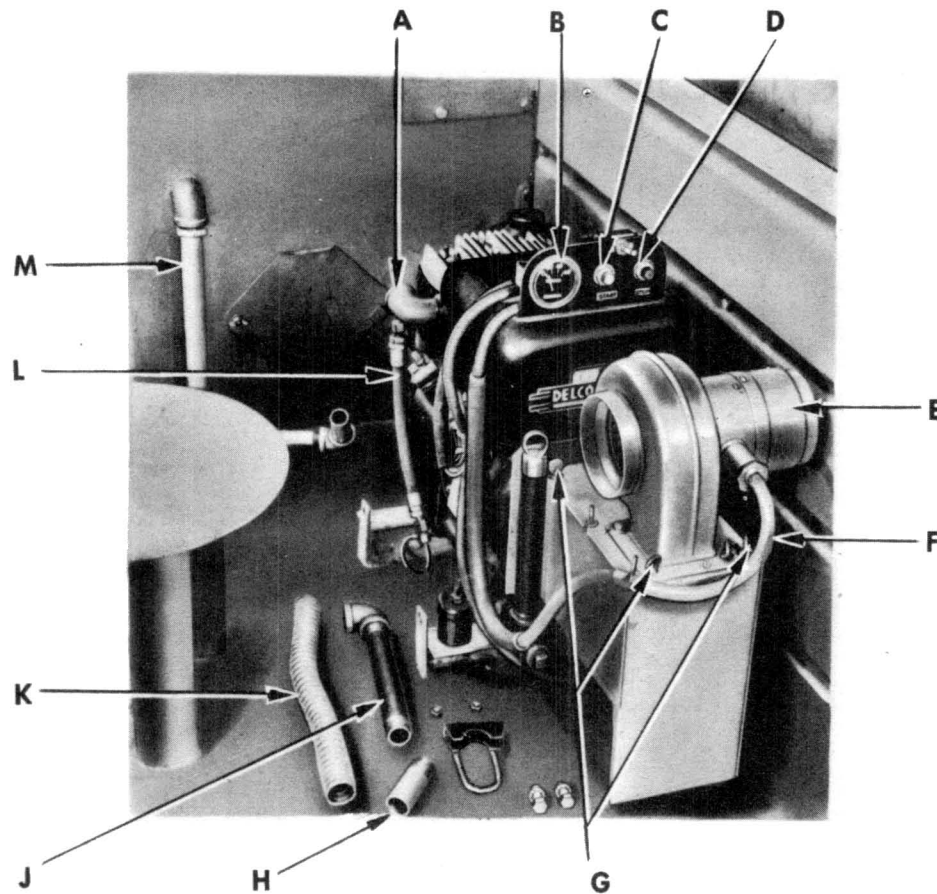

KEY	PART NAME	PART No.	GROUP
A	ELBOW.....	H006-02-65620	.0611F
B	AMMETER.....	AC-1500726	.0611H-1
C	BUTTON.....	G103-17-93670	.0611H-1
D	BUTTON.....	G103-17-93650	.0611H-1
E	BLOWER, ASS'Y	FOM-P154	.0612
F	CABLE.....	FOM-70X1038E	.0611H-3

KEY	PART NAME	PART No.	GROUP
G	THUMB SCREW	FOM-P653	.0612
H	NIPPLE.....	FOM-2X1916B	.0611F
J	NIPPLE.....	FOM-2X1927B	.0611F
K	TUBE.....	FOM-2X1917B	.0611F
L	HOSE, ASS'Y...	FOM-60X1086B	.0611C
M	NIPPLE.....	FOM-2X1918B	.0611F


FIGURE 06-34—AUXILIARY GENERATOR ASSEMBLY—INSTALLED VIEW

RA PD 341119

0611

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611—AUXILIARY GENERATOR ASSEMBLY AND MOUNTINGS (Contd)	
06-35	G103-1617730	B267946	DA-5067497	HOOD, auxiliary generator engine, assembly.....	1
	G103-1526301	A309175	DA-5029139	INSULATION, auxiliary generator armature brush holder.....	2
	H001-0930015	BMGX1-3	CM-135705	RIVET, tub., oval-hd., S., ni-pltd., 9/64 x 7/32.....	8
06-37	H001-0518011	BGAX6A	DA-103905	KEY, Woodruff, ni-S., 1/8 x 5/8 (No. 405) (auxiliary generator engine cranking pulley to crankshaft).....	1
06-35	G103-1673808		DA-5067599	LEAD, auxiliary generator panel board to ammeter, assembly (black).....	1
	G103-1695757		FOM-P707	MOUNTING, auxiliary generator (flexible) (DA-5067688).....	4
	G214-7035573		FOM-20X1928D	PLATFORM, auxiliary generator, assembly.....	1
06-37	G103-1746030	B267944	DA-5066452	PULLEY, cranking, auxiliary generator engine.....	1
06-37	H001-0718236	BBBX1E	DA-120371	NUT, hex., s-fin., S., 1/2-20NF-2.....	1
06-37	H001-1518011	BECX1M	DA-103323	WASHER, lock, reg., S., 1/2 in.....	1
06-36,39	G103-1846852	C129726	DA-5066336	SADDLE, support, auxiliary generator engine.....	1
06-36	H001-0720002	BBCX1B	GM-113111	NUT, jam, hex., s-fin., S., 5/16-18NC-2.....	1
06-36	H001-1013018	BCAX1BB	GM-132330	SCREW, cap, hex-hd., S., 5/16-18NC-2 x 7/8.....	4
	H001-1026142	BCFX2EL	GM-132335	SCREW, fil-hd., S., 5/16-18NC-3 x 1.....	1
06-36	H101-0162445	BCX1BC	GM-102445	SCREW, set, sq-hd., cup-pt., S., 5/16-18NC-2 x 3 3/4.....	1
06-36	H001-1518008	BECX1H	GM-120214	WASHER, lock, reg., S., 5/16 in.....	4
	H001-1531003	BEBX2C	GM-120387	WASHER, plain, U.S. std., S., 5/16 in.....	1
06-35	H001-5417521	BCVX2AB-1	GM-121797	SCREW, auxiliary generator engine hood (cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 7/8)...	3
	G103-1842766	A309213A	DA-5067641	WASHER, auxiliary generator panel board mounting.....	4
				0611A—AUXILIARY GENERATOR	
06-37	G103-1510655	B267940	DA-5066383	ARMATURE, auxiliary generator, w/FAN, assembly.....	1
06-37	G103-1526303	A309253	DA-5066519	BRUSH, auxiliary generator armature, assembly.....	4
06-37	H001-1026055	BCFX1EE-3	DA-131890	SCREW, mach., fil-hd., ni-pltd., No. 6 (0.138)-32NC-2 x 3/8.....	10
06-37	H001-1517003	BECX2C	DA-106495	WASHER, lock, lgt., S., No. 6 (0.138).....	10
06-37	H001-1530003	BEBX1C	DA-5061901	WASHER, plain, S., SAE std., No. 6 (0.138).....	10
06-37	G103-1527758	A309241	DA-5066377	BUSHING, insulating, auxiliary generator field ring leads.....	1
	G103-1538552	A309169	DA-5017183	CLIP, retaining, auxiliary generator armature brush lever spring.....	4
06-38	G103-1539653	A309244	DA-5066382	COIL, field, auxiliary generator, assembly (12 volts).....	3
06-38	G103-1539652	A309243	DA-5066381	COIL, field, auxiliary generator, assembly (12 volts).....	3
06-37	3500-5067878		DA-5067878	CONDENSER, auxiliary generator engine armature brush holder.....	2
06-39	G103-1540156	B267938	DA-5066316	COVER, auxiliary generator, end, w/INSULATION, assembly.....	1
06-39	H001-1026121	BCFX2DC	GM-114350	SCREW, machine, oval-fil-hd., S., 1/4-20NC-2 x 5/16.....	2
06-39	H001-1518007	BECX1G	GM-103319	WASHER, lock, reg., S., 1/4 in.....	2
06-37	2520-5059312		DA-5059312	HOLDER, auxiliary generator armature brush, w/INSULATION, LEVER, and SPRING, assembly.....	2

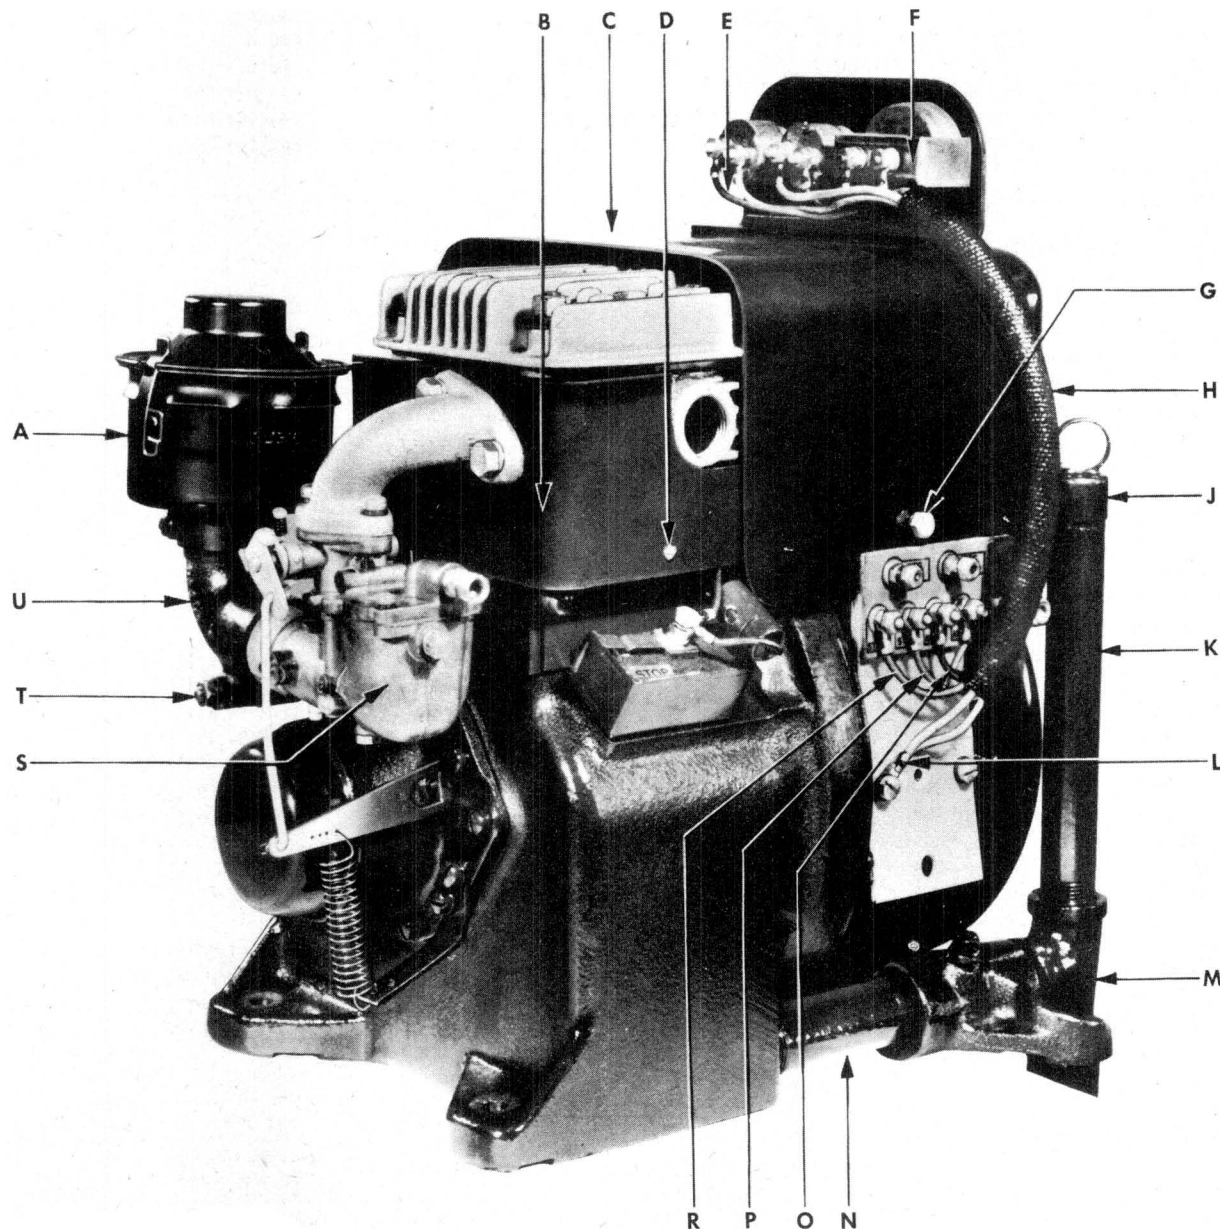

KEY	PART NAME	PART No.	GROUP
A	AIR CLEANER . . .	AC-1542710 . . .	0611D
B	BAFFLE	DA-5066392 . . .	0611D
C	HOOD	DA-5067495 . . .	0611
D	SCREW	DA-5033646 . . .	0611D
E	LEAD	DA-5067854 . . .	0611H-1
F	BRACKET	DA-857408 . . .	0611H-1
G	SCREW	GM-121797 . . .	0611
H	INSULATION . . .	DA-5054383 . . .	0611H-1
J	GAGE	DA-5067506 . . .	0611B-9
K	PIPE	DA-5067500 . . .	0611B-9
L	LEAD	DA-5067596 . . .	0611H-1
M	TEE	DA-5067507 . . .	0611B-9
N	PIPE	DA-5067575 . . .	0611B-9
O	LEAD	DA-5067599 . . .	0611-1
P	LEAD	DA-5067597 . . .	0611H-1
R	LEAD	DA-5067598 . . .	0611H-1
S	CARBURETOR . .	DA-5066309 . . .	0611D
T	STUD	DA-5067585 . . .	0611C
U	ELBOW	DA-5067584 . . .	0611D


FIGURE 06-35—AUXILIARY GENERATOR ASSEMBLY—REAR VIEW

RA PD 341182

0611A

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611A—AUXILIARY GENERATOR (Contd)	
06-37	G103-1526302	A309177	DA-5029593	HOLDER, auxiliary generator armature brush, w/STUD, assembly.....	4
06-38	G103-1632680		DA-5051273	INSULATION, auxiliary generator field coil.....	6
	H001-0518013	BGXA7B	GM-103646	KEY, Woodruff, ni-S., 1/8 x 3/4 (auxiliary generator armature to crankshaft).....	1
	G103-1526003	A309275	DA-5067618	KIT, repair, auxiliary generator armature brush.....	1
				(Includes:	
	G103-1526303		DA-5066519	1 BRUSH, auxiliary generator armature assembly.....	
	H001-1026464	BCGX1.1BE	GM-131890	1 SCREW, machine, oval-fil-hd., S., No. 10 (0.190)-32NF-2 x 7/16.....	
	H001-1518005	BE CX1E	GM-106495	1 WASHER, lock, reg., S., No. 10 (0.190).....	
06-38	G103-1673834		DA-5066406	LEAD, auxiliary generator series field to armature brush, assembly.....	1
06-38	G103-1673838		DA-5066514	LEAD, auxiliary generator series field to panel board starter switch, assembly.....	1
06-37	G103-1673825		DA-5050826	LEAD, connecting, auxiliary generator brushes, assembly.....	1
06-37	G103-1673826		DA-5050827	LEAD, connecting, auxiliary generator brushes, assembly.....	1
06-37	G103-1796150		DA-5066387	LEAD, ground, auxiliary generator armature brush to field ring, assembly.....	1
06-38	G103-1673813		DA-5067545	LEAD, negative, auxiliary generator shunt field to armature brush, assembly.....	1
06-38	G214-7036672		DA-5053123	LEAD, positive, auxiliary generator shunt field to panel board terminal marked "REG. FIELD", assembly.....	1
	G103-1526350	A309173	DA-5029115	LEVER, auxiliary generator armature brush, w/SPRING, assembly.....	4
				(Includes:	
			DA-5029129	1 BEARING, auxiliary generator armature brush lever.....	
	G214-7036673		DA-5029134	1 LEVER, auxiliary generator armature brush lever.....	
			DA-5040353	1 ROLLER, auxiliary generator armature brush lever.....	
	G214-7036671		DA-5019237	1 SPRING, auxiliary generator armature brush lever.....	
06-38	G103-1742800	A309205	DA-5054833	POLE PIECE, auxiliary generator field.....	6
06-38	H001-1023792	BCLX1.1EH	GM-177945	SCREW, mach., fil-hd., S., 3/8-24NF-2 x 3/4.....	6
06-37	G103-1789607	A309176	DA-5029397	SPRING, tension, auxiliary generator armature brush lever.....	4
06-37	2520-5070989		DA-5070989	RING, field, auxiliary generator, w/COILS and BRUSHES, assembly.....	1
06-36	H001-1026125	BCFX2DG	GM-114354	SCREW, mach., fil-hd., S., 1/4-20NC-2 x 5/8.....	6
06-36	H001-1518007	BE CX1G	GM-103319	WASHER, lock, reg., S., 1/4 in.....	6
				0611B—AUXILIARY GENERATOR ENGINE	
				0611B-1—AUXILIARY GENERATOR ENGINE CRANKCASE AND CYLINDER BLOCK	
06-36,39	G103-1541366	A309284	DA-5067754	CRANKCASE, auxiliary generator engine, w/needle BEARING, assembly.....	1
06-39	G103-1545676	C129724	DA-5066306	CYLINDER, auxiliary generator engine, w/VALVE GUIDE and SEAT, assembly.....	1
06-36	G103-1792049		DA-5043456	STUD, alloy-S., 3/8-16NC-2 (1/2) x 3/8-16NC-2 (1/2) x 3 1/4.....	2
06-36	G103-1792053		DA-5021932	STUD, alloy-S., 3/8-16NC-2 (17/32) x 3/8-16NC-2 (17/32) x 1 11/16.....	2
06-39	G103-1594019	A309242	DA-5066378	GASKET, auxiliary generator engine cylinder to crankcase (vellumoid, 0.015 in. thk.)....	1

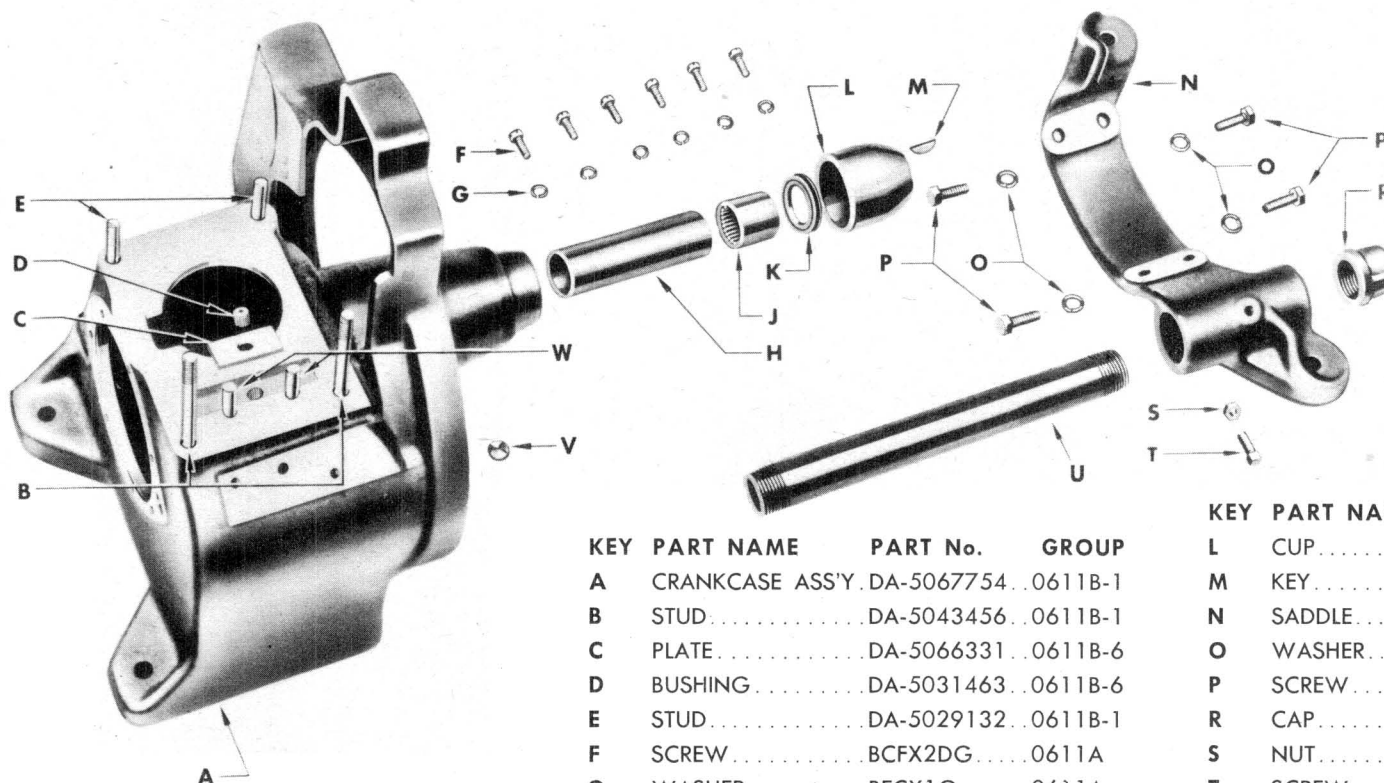


KEY	PART NAME	PART No.	GROUP
A	CRANKCASE ASS'Y.	DA-5067754	.0611B-1
B	STUD	DA-5043456	.0611B-1
C	PLATE	DA-5066331	.0611B-6
D	BUSHING	DA-5031463	.0611B-6
E	STUD	DA-5029132	.0611B-1
F	SCREW	BCFX2DG	.0611A
G	WASHER	BECX1G	.0611A
H	BUSHING	DA-5064016	.0611B-3
J	BEARING	DA-5064005	.0611B-3
K	COLLAR	DA-5043485	.0611B-3

KEY	PART NAME	PART No.	GROUP
L	CUP	DA-5043427	.0611B-3
M	KEY	BGXA7B	.0611A
N	SADDLE	DA-5066336	.0611
O	WASHER	BECX1H	.0611
P	SCREW	BCAX1BB	.0611
R	CAP	CPKX1AB	.0611B-9
S	NUT	BBCX1B	.0611
T	SCREW	BCSX1BC	.0611
U	PIPE	DA-5067575	.0611B-9
V	PLUG	DA-5043433	.0611B-8
W	FOLLOWER	DA-5066330	.0611B-6

RA PD 341120

FIGURE 06-36—AUXILIARY GENERATOR ENGINE CRANKCASE AND SADDLE SUPPORT—EXPLODED VIEW

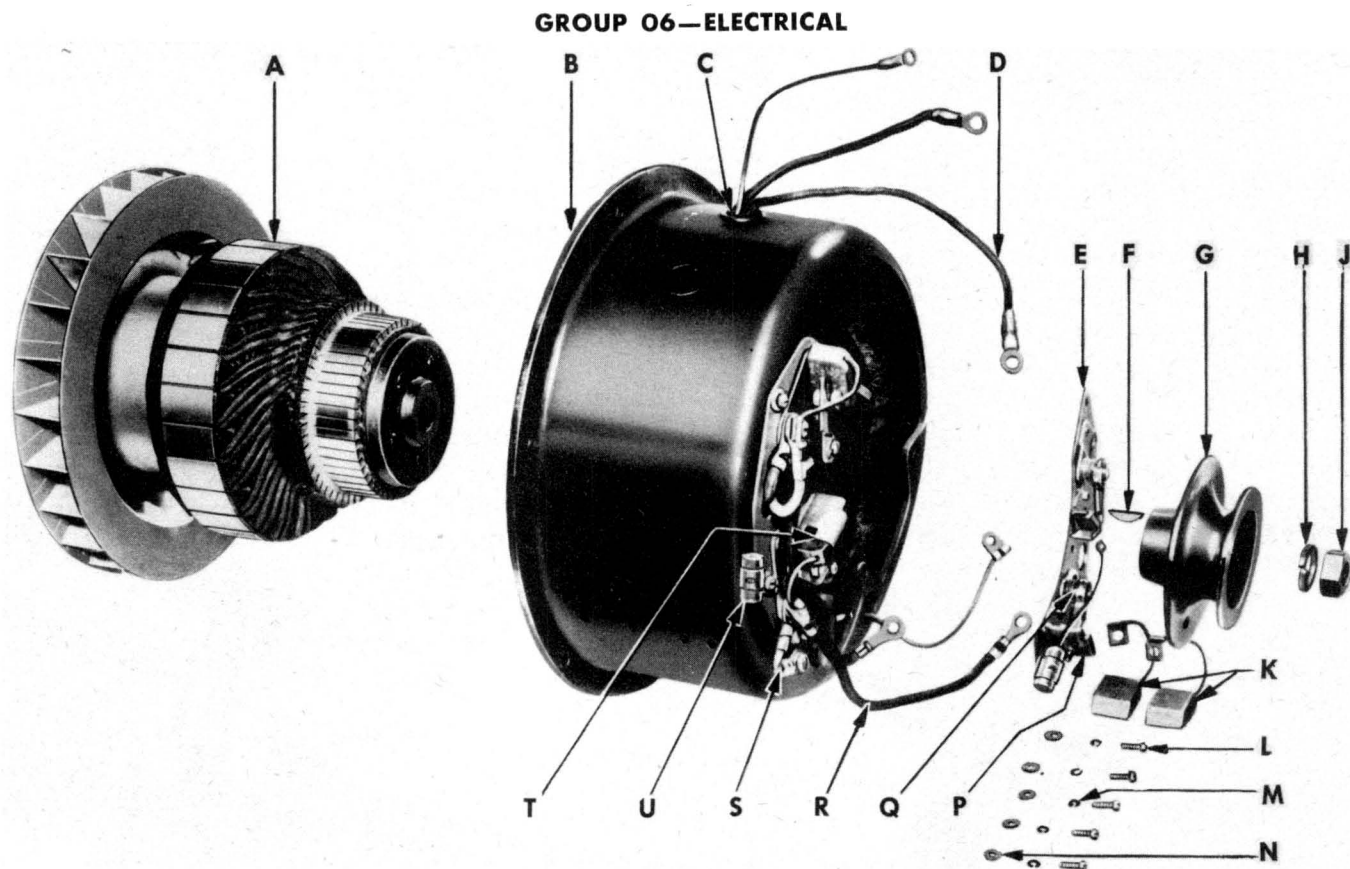


KEY PART NAME	PART No.	GROUP
A ARMATURE, W/FAN, ASS'Y	DA-5066383	.0611A
B RING, ASS'Y	DA-5070989	.0611A
C BUSHING	DA-5066377	.0611A
D LEAD	DA-5066388	.0611H-1
E HOLDER, ASS'Y	DA-5039312	.0611A
F KEY	BGAX6A	.0611
G PULLEY	DA-5066452	.0611
H WASHER	DECX1M	.0611
J NUT	BBBX1E	.0611
K BRUSH, ASS'Y	DA-5066519	.0611A

KEY PART NAME	PART No.	GROUP
L SCREW	BCFX1EE	.0611A
M WASHER	BEEX2C	.0611A
N WASHER	BEEX1C	.0611A
P HOLDER	DA-5029593	.0611A
Q SPRING	DA-5027397	.0611A
R LEAD	DA-5050826	.0611A
S LEAD	DA-5066387	.0611A
T LEAD	DA-5050827	.0611A
U CONDENSER	FA-5067878	.0611A

RA PD 341121

FIGURE 06-37—AUXILIARY GENERATOR ARMATURE W/FAN AND FIELD COIL RING—EXPLODED VIEW

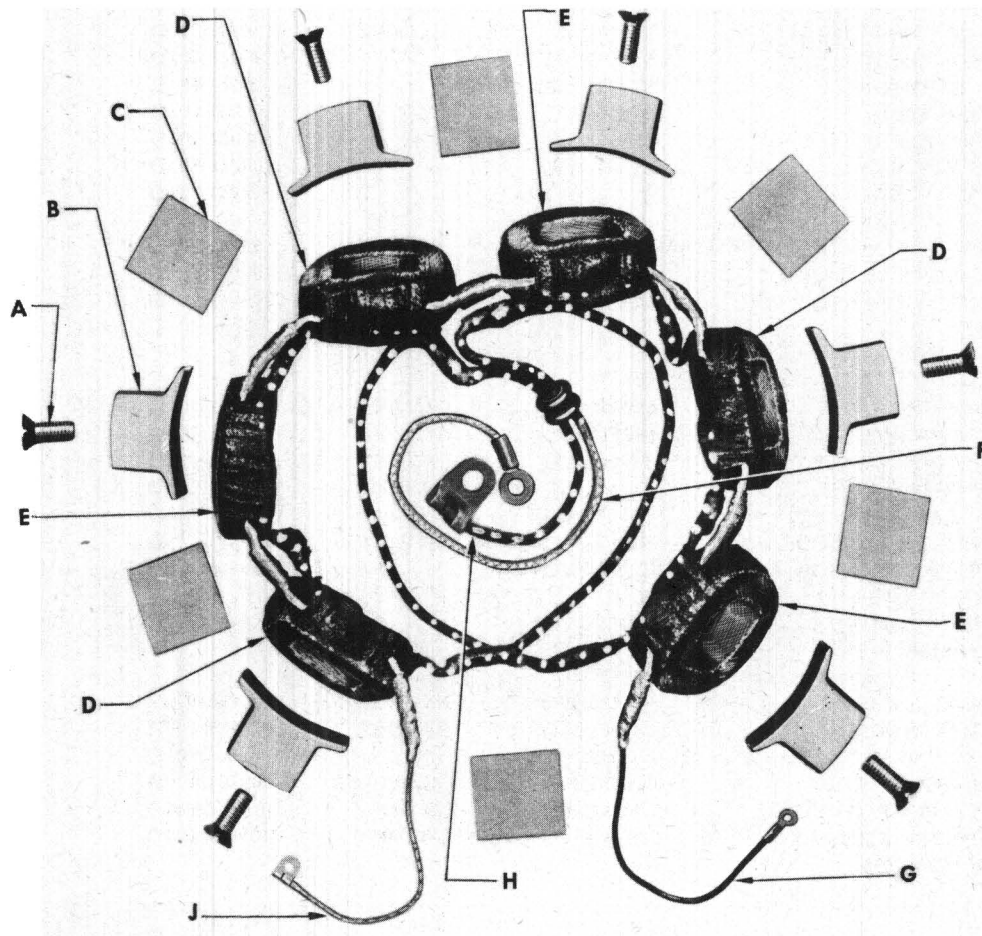

KEY	PART NAME	PART No.	GROUP
A	SCREW.....	BCLX1.1EH.....	0611A
B	POLE PIECE.....	DA-5054833.....	0611A
C	INSULATION.....	DA-5051273.....	0611A
D	COIL, ASS'Y.....	DA-5066381.....	0611A
E	COIL, ASS'Y.....	DA-5066382.....	0611A
F	LEAD, ASS'Y.....	DA-5053123.....	0611A
G	LEAD, ASS'Y.....	DA-5066406.....	0611A
H	LEAD, ASS'Y.....	DA-5066514.....	0611A
J	LEAD, ASS'Y.....	DA-5067545.....	0611A


FIGURE 06-38—AUXILIARY GENERATOR FIELD COILS AND POLE PIECES—EXPLODED VIEW

RA PD 341122

0611B-1

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-39	G103-1594018	A309223	DA-5066315	0611B-2—AUXILIARY GENERATOR ENGINE CYLINDER HEAD	
06-39	G103-2111403	A309358	DA-5067855	GASKET, auxiliary generator engine cylinder head (steelbestos)	1
06-39	H001-1518003	BBAX1C	GM-120377	HEAD, auxiliary generator engine cylinder	1
06-39	G103-1792051		DA-5043460	NUT, regular, hex., s-fin., S., 3/8-16NC-2	8
06-39	H001-1516009	BECX3K	GM-108580	STUD, alloy-S., 3/8-16NC-2 (9/16) x 1-13/16 x 3/8-16NC-2 (9/16)	8
06-39	H001-1530009	BEBX1K	GM-120394	WASHER, lock, hv., S., 3/8 in.	8
				WASHER, plain, S., SAE std., 3/8 in.	8
06-36,40	G103-1518042		DA-5064005	0611B-3—AUXILIARY GENERATOR ENGINE CRANKSHAFT	
06-36	G214-7036691		DA-5064016	BEARING, needle, straight, 0.875 bore x 1.125 O.D. x 1.00 in. width (auxiliary generator engine crankshaft)	2
06-36	G103-1787176	A309198	DA-5043485	BUSHING, spacing, auxiliary generator engine crankshaft bearing	1
06-40	G103-1541425	A309217	DA-5064056	COLLAR, oil slinger, auxiliary generator engine crankshaft	1
06-36	G103-1787175	A309192	DA-5043427	CRANKSHAFT, auxiliary generator engine, w/COUNTERWEIGHT, assembly	1
06-40	G103-1740254	A309196	DA-5043441	CUP, oil slinger, auxiliary generator engine crankshaft	1
06-40	H001-1026125	BECX2DG	GM-114354	PLATE, thrust, auxiliary engine crankshaft	1
06-40	H001-1518007	BECX1G	GM-103319	SCREW, mach., fil-hd., S., 1/4-20NC-2 x 5/8	3
				WASHER, lock, reg., S., 1/4 in.	3
06-40	G103-1738583	A309232	DA-5066350	0611B-4—AUXILIARY GENERATOR ENGINE PISTONS, PINS, AND RINGS	
06-40	G103-1738930	B267939	DA-5066337	PIN, piston, auxiliary generator engine	1
	G103-1738927	A309276	DA-5067619	PISTON, auxiliary generator engine	1
				PISTON, auxiliary generator engine, w/RINGS and PIN, assembly	1
				(Includes:	
				1 PIN, auxiliary generator engine piston	
				1 PISTON, auxiliary generator engine	
				1 RING, compression, auxiliary generator engine piston	
				2 RING, lock, auxiliary generator engine piston pin retaining	
				1 RING, oil, auxiliary generator engine piston	
				1 RING, scraper, auxiliary generator engine piston)	
06-40	G103-1769679	A309237	DA-5066355	RING, piston, auxiliary generator engine, compression	1
06-40	G103-1769875	A309235	DA-5066353	RING, piston, auxiliary generator engine, oil	1
06-40	G103-1768678	A309236	DA-5066354	RING, piston, auxiliary generator engine, scraper	1
06-40	G103-1789608	A309231	DA-5066349	RING, lock, auxiliary generator engine piston pin	2

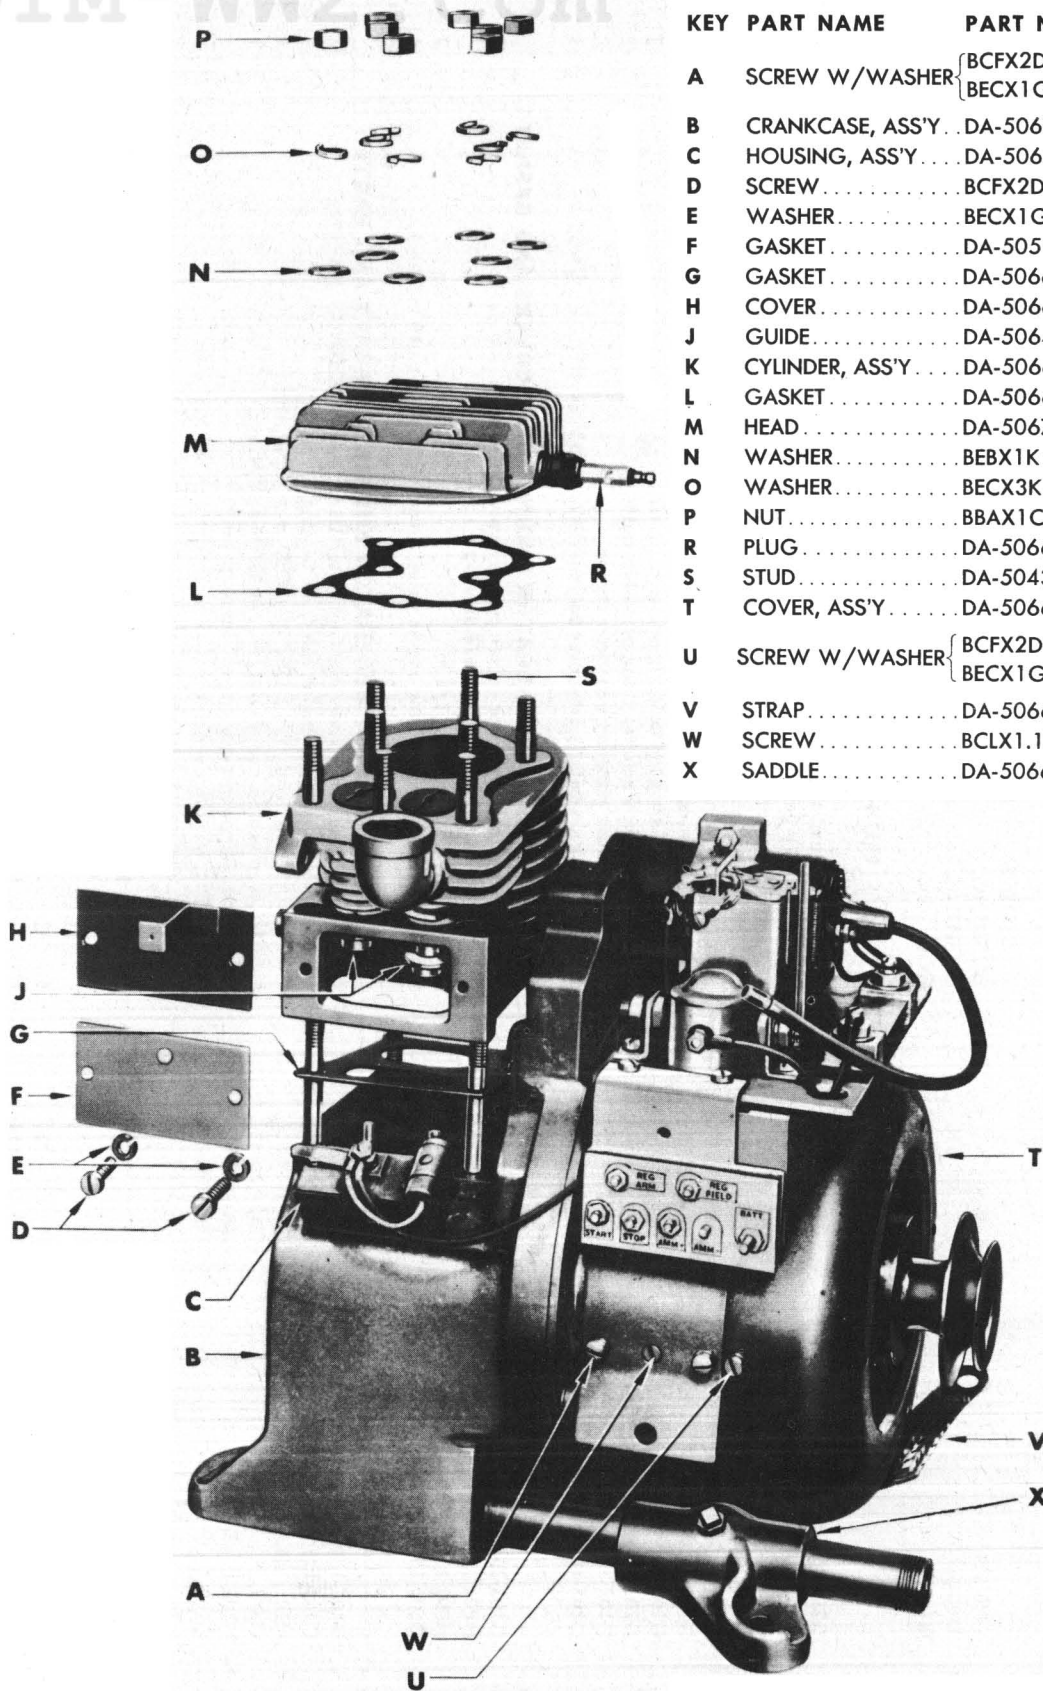

KEY	PART NAME	PART No.	GROUP
A	SCREW W/WASHER	BCFX2DE.....0611H-1 BECX1G.....0611H-1	
B	CRANKCASE, ASS'Y	DA-5067754	0611B-1
C	HOUSING, ASS'Y	DA-5066008	0611H-2
D	SCREW	BCFX2DC.....0611B-7	
E	WASHER	BECX1G.....0611B-7	
F	GASKET	DA-5051173	0611B-7
G	GASKET	DA-5066378	0611B-1
H	COVER	DA-5066314	0611B-7
J	GUIDE	DA-5064001	0611B-6
K	CYLINDER, ASS'Y	DA-5066306	0611B-1
L	GASKET	DA-5066315	0611B-2
M	HEAD	DA-5067855	0611B-2
N	WASHER	BEBX1K.....0611B-2	
O	WASHER	BECX3K.....0611B-2	
P	NUT	BBAX1C.....0611B-2	
R	PLUG	DA-5066265	0611H-4
S	STUD	DA-5043460	0611B-2
T	COVER, ASS'Y	DA-5066316	0611A
U	SCREW W/WASHER	BCFX2DC.....0611A BECX1G.....0611A	
V	STRAP	DA-5066376	0611H-3
W	SCREW	BCLX1.1AC.....0611H-1	
X	SADDLE	DA-5066336	0611

RA PD 341111


FIGURE 06-39—AUXILIARY GENERATOR ENGINE
CYLINDER AND HEAD—EXPLODED VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611B-5—AUXILIARY GENERATOR ENGINE CONNECTING RODS	
06-40	2520-5043451		DA-5043451	BUSHING, auxiliary generator engine connecting rod.....	1
06-40	3500-5066346		DA-5066346	BUSHING, auxiliary generator engine connecting rod piston pin.....	1
06-40	G103-1773315	A309230	DA-5066344	ROD, connecting, auxiliary generator engine, w/BUSHING, assembly.....	1
				0611B-6—AUXILIARY GENERATOR ENGINE VALVES, SEATS, GUIDES AND SPRINGS	
06-36	G214-7036675		DA-5031463	BUSHING, auxiliary generator engine cam follower lock plate.....	1
06-41	G103-1538554	A309127	DA-5037246	CLIP, auxiliary generator engine valve spring.....	2
06-41	G103-1531504	A309226	DA-5066330	FOLLOWER, cam, auxiliary generator engine intake and exhaust valve.....	2
06-39	G214-7036680		DA-5064001	GUIDE, valve, auxiliary generator engine cylinder.....	2
06-36	G103-1740246	A309227	DA-5066331	PLATE, lock, auxiliary generator engine intake and exhaust valve cam follower.....	1
06-41	G103-1767686	A309181	DA-5035386	RETAINER, auxiliary generator engine valve spring.....	2
06-41	G103-1827082	A309280	DA-5067746	SPRING, auxiliary generator engine, valve, inner.....	2
06-41	G103-1789802	A309201	DA-5053060	SPRING, auxiliary generator engine, valve, outer.....	2
06-41	G103-1827202	A309183	DA-5038969	VALVE, exhaust, auxiliary generator engine.....	1
06-41	G103-1827201	A309182	DA-5038968	VALVE, intake, auxiliary generator engine.....	1
				0611B-7—AUXILIARY GENERATOR ENGINE VALVE COVERS AND GASKETS	
06-39	G103-1540155	A309220	DA-5066314	COVER, auxiliary generator engine cylinder valve, assembly.....	1
06-39	H001-1026121	BCFX2DC	GM-114350	SCREW, machine, fil.-hd., S., 1/4-20NC-2 x 5/16	
06-39	H001-1518007	BECX1G	GM-103319	WASHER, lock, reg., S., 1/4 in.....	2
06-39	G103-1594017	A309199	DA-5051173	GASKET, auxiliary generator engine valve cover (vellumoid, 0.010 in. thk.).....	1
				0611B-8—AUXILIARY GENERATOR ENGINE CAMSHAFT AND PARTS	
06-41	G103-1531535	A309251	DA-5066510	CAMSHAFT, auxiliary generator engine, w/GEAR and BUSHINGS, assembly.....	1
06-41	G103-1736582	A309193	DA-5043432	PIN, auxiliary generator engine camshaft bearing.....	1
06-41	G103-1842961	A309215A	DA-5031222	WASHER, thk. cop., 1/4 I.D. x 7/16 O.D. x 0.032 in. thk.....	1
06-41	H001-1026535	BCGX1.1DH	GM-173353	SCREW, machine, oval-fil.-hd., S., 1/4-28NF-2 x 3/4.....	1
06-36	G103-1740725	A309194	DA-5043433	PLUG, auxiliary generator engine camshaft pin.....	1
06-41	G103-1740851	A309195	DA-5043434	PLUNGER, auxiliary generator engine camshaft to breaker lever.....	1
06-41	G103-1789667	B258779	DA-5067765	SPRING, ignition plunger, auxiliary generator engine.....	1
				0611B-9—AUXILIARY GENERATOR ENGINE OIL FILLER	
06-36	H006-0255420	CPKX1AB		CAP, pipe, M.I., black, 3/4 in. auxiliary generator oil filler and drain (For shipping purposes only).....	1
06-35	G103-1594110	A309270	DA-5067506	GAGE, bayonet, auxiliary generator engine.....	1
	G103-1582907	B267947	DA-5067498	OIL FILLER and DRAIN, auxiliary generator engine, assembly (Includes: vertical pipe, tee, coupling, and drain plug).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-35,36	G103-1738775	B267934B	DA-5067575	PIPE, oil filler and drain, auxiliary generator engine.....	1
06-35	G103-2128016	A309268	DA-5067500	PIPE, oil filler, auxiliary generator engine.....	1
06-35	G103-1796441	A309271	DA-5067507	TEE, auxiliary generator engine oil filler pipe.....	1
				0611C—AUXILIARY GENERATOR ENGINE FUEL TANK AND LINES	
	G214-7035574		FOM-8X1038B	ANGLE, auxiliary generator engine fuel tube clip support.....	5
	G214-7035575		FOM-2X1875B	BRACKET, auxiliary generator engine fuel tube support.....	1
	G167-0137989		FOM-8X1014B	CLIP, cable, closed, 7/8 in.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., S., s-fin., 1/4-20NC-2.....	1
	H001-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	1
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	1

KEY	PART NAME	PART No.	GROUP
A	BREATHER, ASS'Y.....	DA-5067408...	0611E
B	SCREW.....	BCFX2DG-1...	0611E
C	HOUSING.....	DA-5067395...	0611E
D	GASKET.....	DA-5043461...	0611E
E	SCREW.....	DA-5067393...	0611E
F	WEIGHT.....	DA-5067392...	0611E
G	PLATE.....	DA-5067388...	0611E
H	PIN.....	BFDX1DT.....	0611E
J	PLATE.....	DA-5067410...	0611E
K	PLATE.....	DA-5067390...	0611E

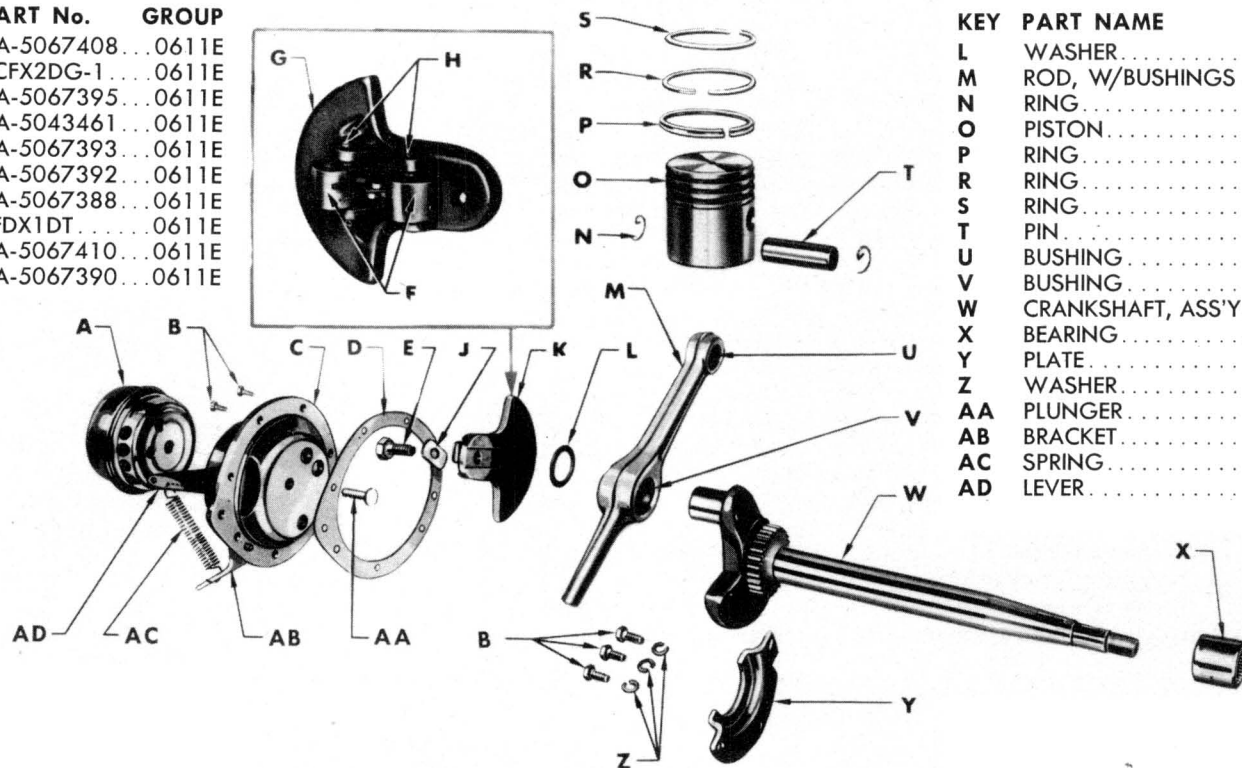

KEY	PART NAME	PART No.	GROUP
L	WASHER.....	DA-5067403.	0611E
M	ROD, W/BUSHINGS.....	DA-5066344.	0611B-5
N	RING.....	DA-5066349.	0611B-4
O	PISTON.....	DA-5066337.	0611B-4
P	RING.....	DA-5066353.	0611B-4
R	RING.....	DA-5066354.	0611B-4
S	RING.....	DA-5066355.	0611B-4
T	PIN.....	DA-5066350.	0611B-4
U	BUSHING.....	DA-5066346.	0611B-5
V	BUSHING.....	DA-5043451.	0611B-5
W	CRANKSHAFT, ASS'Y.....	DA-5064056.	0611B-3
X	BEARING.....	DA-5064005.	0611B-3
Y	PLATE.....	DA-5043441.	0611B-3
Z	WASHER.....	BECX1G.....	0611B-3
AA	PLUNGER.....	DA-5067400.	0611E
AB	BRACKET.....	DA-5067402.	0611E
AC	SPRING.....	DA-5066403.	0611E
AD	LEVER.....	DA-5067401.	0611E


FIGURE 06-40—AUXILIARY GENERATOR ENGINE CRANKSHAFT, PISTON, CONNECTING ROD, GOVERNOR, AND BREATHER—EXPLODED VIEW

RA PD 341123


GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-34	H006-0210060 G167-0137987		FOM-P177 FOM-8X1012B FOM-8X1048B	0611C—AUXILIARY GENERATOR ENGINE FUEL TANK AND LINES (Contd) BUSHING, pipe, br., 3/8 to 1/4 in. (auxiliary generator fuel line)..... CLIP, auxiliary generator engine fuel line support (Mk I; LVT (A) (1) only)..... CLIP, cable, closed, 3/16 in. (auxiliary generator engine fuel tube support)..... NUT, regular, hex., s-fin., S., 1/4-20NC-2..... SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4..... WASHER, lock, internal teeth, reg., S., 1/4 in..... CONNECTOR, tube, heavy duty, short, 3/16 in., 1/8 in. female pipe end, complete (with nut and sleeve) (WH-8255X3) (auxiliary generator engine carburetor fuel tube).. ELBOW, street, br. 90 deg., 1/8 in. (auxiliary generator engine carburetor fuel tube).... ELBOW, street, br., 90 deg., 3/8 in. (auxiliary generator engine fuel line)..... ELBOW, tube, heavy duty, short, 90 deg., 3/8 in., 1/4 in. male pipe end, complete (with nut and sleeve) (WH-8405X6) (auxiliary generator fuel line)..... ELBOW, tube, heavy duty, short, 90 deg., 1/4 in., 1/8 in. male pipe end, complete (with nut and sleeve) (WH-8405X4) (auxiliary generator engine fuel tube)..... HOSE, engine right fuel tank filler pipe to auxiliary generator fuel tank, assembly (Includes: CONNECTORS, FOM-P165 and FOM-P166)..... HOSE, tube to auxiliary generator engine carburetor, assembly (Includes: CONNECTORS, FOM-P271 and FOM-P657)..... PLUG, pipe, sq-hd., black, 1/2 in. (drain, auxiliary generator fuel tank)..... TANK, fuel, auxiliary generator, assembly..... TUBE, auxiliary generator fuel tank to auxiliary generator engine carburetor hose (Mk I; LVT (A) (1) only)..... TUBE, auxiliary generator fuel tank to auxiliary generator engine carburetor hose (Mk IV; LVT (A) (4) only)..... VALVE, shut-off, auxiliary generator engine fuel, assembly..... BUSHING, pipe, shoulder, br. 1/4 x 1/6 in..... CONNECTOR, tube, heavy duty, short, 3/16 in. x 1/8 in. male pipe end, complete, (with sleeve and nut) (WH-8205X3C)..... NIPPLE, pipe, br., std., close, 1/4 x 7/8.....	1 1 11 11 11 11 1 1 1 1 1 1 1 1
	H001-0718001 H001-0121887 H001-1519009	BBAX1A BCVX2AH-1 BEAX1H	FOM-P45 FOM-P44 FOM-P24 FOM-P667		
	G167-0168012 H006-0265110 H006-0331090	B7270A B7270C B183361E	FOM-P394 FOM-P181 FOM-P655		
	H006-0331060	A183361C	FOM-P414		
			FOM-60X1087B		
			FOM-60X1086B		
	H006-0283805 G168-7039474	CPMX1FB	FOM-P98 FOM-60X1085C FOM-6X1088B		
			FOM-6X1098B		
	G167-0128015 H006-0318105	A145825 B18358B	FOM-P656 FOM-P339 FOM-P278		
	H006-0270010	CPNX2BB	FOM-P242		
06-35	G103-1515770	B267942	DA-5066392	0611D—AUXILIARY GENERATOR ENGINE CARBURETOR AND AIR CLEANER BAFFLE, air, auxiliary generator engine carburetor choke, w/DEFLECTOR, assembly.	1
06-35	H001-1076075	BCXX3CC	DA-5033646	SCREW, self-tapping, rd-hd., S., No. 6 (0.138)-32NC-2 x 3/8.....	2
06-42	G214-7036679		DA-5043112	BUTTERFLY, choke, auxiliary generator engine carburetor.....	1
06-42	G103-1781866	A309189	DA-5043114	SCREW, attaching auxiliary generator engine carburetor choke butterfly (Also listed as part of KIT, DA-5070526).....	2
06-42	H001-1517003	BE CX2C	GM-106495	WASHER, lock, light, S., No. 6 (0.138).....	2

KEY	PART NAME	PART No.	GROUP
A	VALVE.....	DA-5038968..	0611B-6
B	VALVE.....	DA-5038969..	0611B-6
C	SPRING.....	DA-5067746..	0611B-6
D	SPRING.....	DA-5053060..	0611B-6
E	RETAINER.....	DA-5035386..	0611B-6
F	CLIP.....	DA-5037246..	0611B-6
G	FOLLOWER.....	DA-5066330..	0611B-6
H	SCREW.....	BCGX1.1DH..	0611B-8
J	WASHER.....	DA-5031222..	0611B-8
K	PIN.....	DA-5043432..	0611B-8
L	CAMSHAFT, ASS'Y..	DA-5066510..	0611B-8
M	PLUNGER.....	DA-5043434..	0611B-8
N	SPRING.....	DA-5067765..	0611B-8

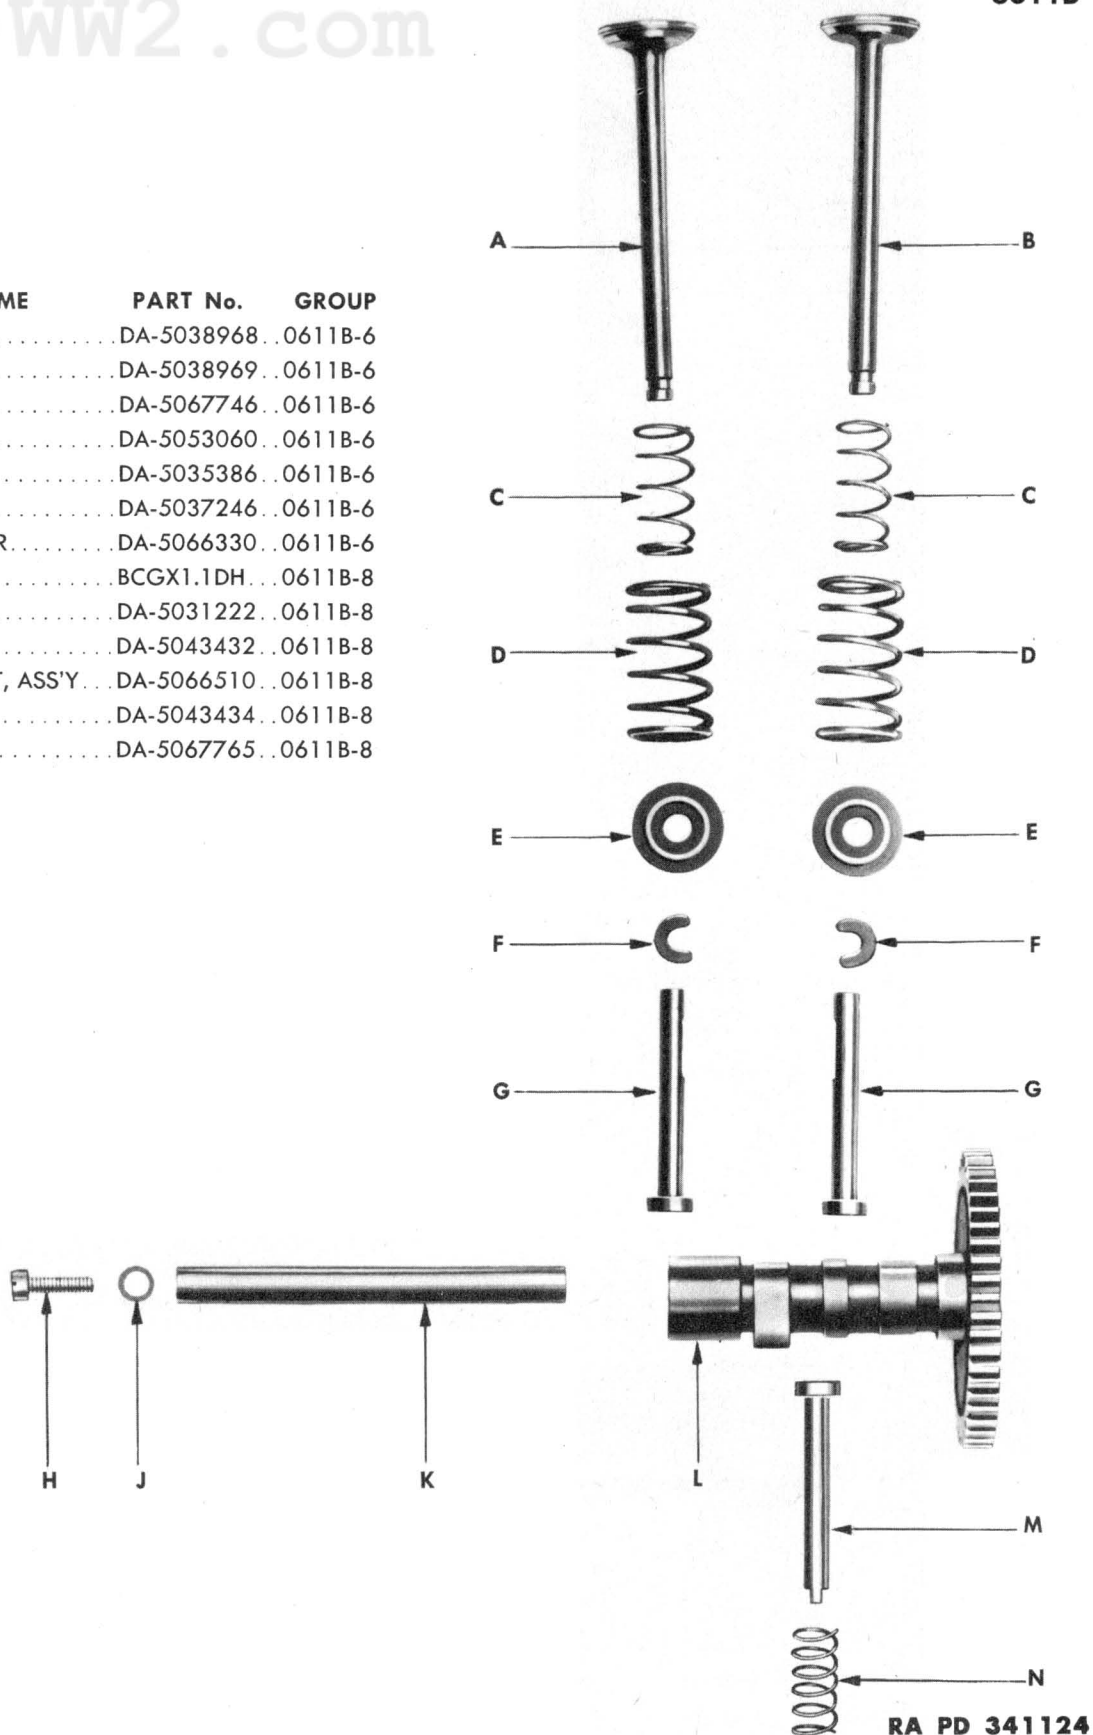

**FIGURE 06-41—AUXILIARY GENERATOR ENGINE CAMSHAFT
AND VALVES—EXPLODED VIEW**

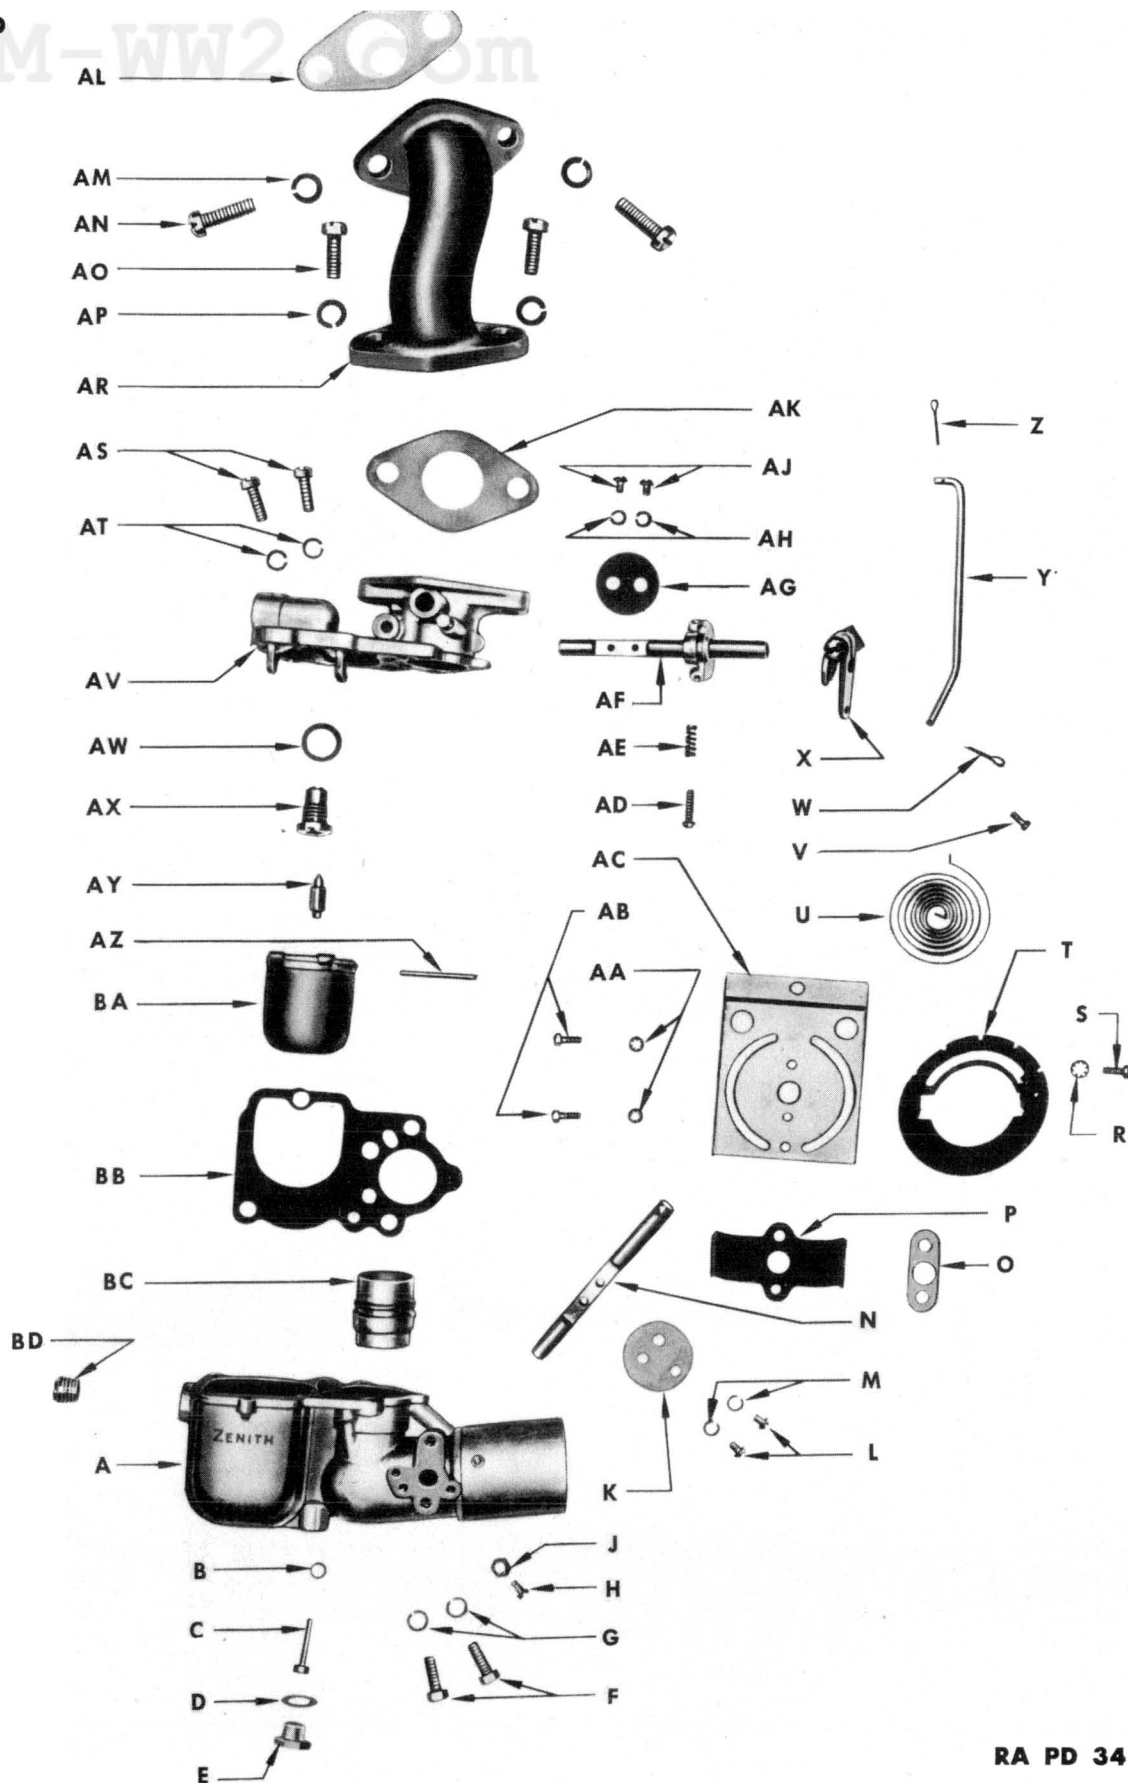

RA PD 341125

**FIGURE 06-42—AUXILIARY GENERATOR ENGINE
CARBURETOR—EXPLODED VIEW**

KEY	PART NAME	PART No.	GROUP
A	HOUSING.....	DA-5067608.....	0611D
B	GASKET.....	DA-5053960.....	0611D
C	JET.....	DA-5055425.....	0611D
D	GASKET.....	DA-5050418.....	0611D
E	PLUG.....	DA-5050417.....	0611D
F	SCREW.....	DA-5054013.....	0611D
G	WASHER.....	GM-106497.....	0611D
H	SCREW.....	GM-100711.....	0611D
J	NUT.....	GM-120622.....	0611D
K	BUTTERFLY.....	DA-5043112.....	0611D
L	SCREW.....	DA-5043114.....	0611D
M	WASHER.....	GM-106495.....	0611D
N	SHAFT.....	DA-5043113.....	0611D
O	SPACER.....	DA-5067724.....	0611D
P	PLATE.....	DA-5053456.....	0611D
R	WASHER.....	GM-106495.....	0611D
S	SCREW.....	GM-132695.....	0611D
T	PLATE.....	DA-5053455.....	0611D
U	COIL.....	DA-5036174.....	0611D
V	SCREW.....	DA-5041521.....	0611D
W	PIN.....	DA-5067438.....	0611D
X	LEVER.....	DA-5067646.....	0611D
Y	LINK.....	DA-5066402.....	0611D
Z	PIN.....	DA-5067438.....	0611D
AA	WASHER.....	GM-115543.....	0611D
AB	SCREW.....	GM-132695.....	0611D
AC	HOUSING.....	DA-5067609.....	0611D
AD	SCREW.....	DA-5050415.....	0611D
AE	SPRING.....	DA-5050412.....	0611D
AF	SHAFT.....	DA-5067608.....	0611D
AG	BUTTERFLY.....	DA-5053614.....	0611D
AH	WASHER.....	GM-106495.....	0611D
AJ	SCREW.....	DA-5043114.....	0611D
AK	GASKET.....	DA-5040671.....	0611D
AL	GASKET.....	DA-5066596.....	0611
AM	WASHER.....	GM-103320.....	0611D
AN	SCREW.....	GM-106325.....	0611D
AO	SCREW.....	GM-132264.....	0611D
AP	WASHER.....	GM-103319.....	0611D
AR	ELBOW.....	DA-5066310.....	0611D
AS	SCREW.....	DA-5054013.....	0611D
AT	WASHER.....	GM-106497.....	0611D
AV	HOUSING.....	DA-5054083.....	0611D
AW	WASHER.....	DA-5053967.....	0611D
AX	SEAT W/VALVE...	DA-5054011.....	0611D
AY	VALVE W/SEAT...	DA-5054011.....	0611D
AZ	PIN.....	DA-5054012.....	0611D
BA	FLOAT.....	DA-5052056.....	0611D
BB	GASKET.....	DA-5054085.....	0611D
BC	VENTURI.....	DA-5054008.....	0611D
BD	PLUG.....	DA-5054972.....	0611D

RA PD 341125A

**FIGURE 06-42A—AUXILIARY GENERATOR ENGINE
CARBURETOR—EXPLODED VIEW**


GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611D—AUXILIARY GENERATOR ENGINE CARBURETOR AND AIR CLEANER (Contd)	
06-42	G214-7036676		DA-5053614	BUTTERFLY, throttle, auxiliary generator engine carburetor	1
06-42	G103-1781866	A309189	DA-5043114	SCREW, attaching, auxiliary generator engine carburetor throttle butterfly (Also listed as part of KIT, DA-5070526)	2
06-42	H001-1517003	BE CX2C	GM-106495	WASHER, lock, lght., S., No. 6 (0.138)	2
06-35	G103-1537954	B226650	AC-1542710	CLEANER, air, auxiliary generator engine, assembly	1
06-35	G103-1531640	B267936	DA-5066309	CARBURETOR, auxiliary generator engine, assembly	1
06-42	G214-7036677		DA-5036174	COIL, thermostat, auxiliary generator engine carburetor choke	1
	G103-1539988	A260994	GM-142555	CONNECTOR, bz. 1/4 O.D. tubing and 1/4-18PT (auxiliary generator engine carburetor fuel line)	1
06-35	G103-1569121	B267948	DA-5067584	ELBOW, auxiliary generator engine carburetor to air cleaner	1
06-42	G103-1569120	B267937	DA-5066310	ELBOW, auxiliary generator engine carburetor to cylinder	1
06-42	H001-1026126	BC EX2DH	GM-132264	SCREW, machine, oval-fil-hd., S., 1/4-20NC-2 x 5/8 (to carburetor)	2
06-42	H001-1013018	BC AX1BB	GM-106325	SCREW, cap, hex-hd., S., 5/16-18NC-2 x 7/8 (to cylinder)	2
06-42	H001-1518008	BE CX1H	GM-103320	WASHER, lock, reg., S., 5/16 in.	2
06-42	H001-1518007	BE CX1G	GM-103319	WASHER, lock, reg., S., No. 10 (0.190)	2
06-42	G214-7036678		DA-5052056	FLOAT, auxiliary generator engine carburetor, assembly	1
06-42	G103-1593656		DA-5050418	GASKET, auxiliary generator engine carburetor drain plug (fibre)	1
06-42	G103-1594020	A309254	DA-5066596	GASKET, auxiliary generator engine carburetor elbow to cylinder (vellumoid)	1
06-42	G103-1593655		DA-5053960	GASKET, auxiliary generator engine carburetor jet	1
06-42	G103-1594015	A309184	DA-5040671	GASKET, auxiliary generator engine carburetor to elbow (vellumoid, 1/32 in. thk.)	1
06-42	G103-1593654	A309204	DA-5054085	GASKET, auxiliary generator engine carburetor upper and lower housing	1
	G214-5410245	A410245		GASKET SET, auxiliary generator engine carburetor overhaul (Note: Data to follow when available)	1
06-42	G214-7036681		DA-5067608	HOUSING, auxiliary generator engine carburetor body, lower, assembly	1
06-42	G103-1781868	A309571	DA-5054013	SCREW, attaching, auxiliary generator engine carburetor lower to upper housing (Also listed as part of KIT, DA-5070526)	4
06-42	H001-1518005	BE CX1E A410244	GM-106497 DA-5054014	WASHER, lock, reg., S., No. 10 (0.190)	4
				WASHER, lock, auxiliary generator engine carburetor lower to upper housing attaching screw (Also listed as part of KIT, DA-5070526)	4
06-42	G214-7036682		DA-5054083	HOUSING, auxiliary generator engine carburetor body, upper, assembly	1
06-42	G214-7036683		DA-5067609	HOUSING, auxiliary generator engine carburetor thermostat, assembly	1
06-42	G103-1643000	A309206	DA-5055425	JET, No. 16, auxiliary generator engine carburetor	1
	G103-6258838	B258838	DA-5070526	KIT, repair, carburetor, auxiliary generator engine	1
				(Consists of:	
	G103-1738581	A309570	DA-5054012	1 PIN, auxiliary generator engine carburetor float	
	G103-1781866	A309189	DA-5043114	2 SCREW, attaching, auxiliary generator engine carburetor choke butterfly	
	G103-1781868	A309571	DA-5054013	4 SCREW, attaching, auxiliary generator engine carburetor lower to upper housing	

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G103-1781866 G168-5309569	A309189 A309569 A410244	DA-5043114 DA-5054011 DA-5054014	2 SCREW, attaching, auxiliary generator engine carburetor throttle lever 1 VALVE, needle, auxiliary generator engine carburetor float, w/SEAT, assembly 4 WASHER, lock, auxiliary generator engine carburetor lower to upper housing attaching screw 4 WASHER, lock, internal teeth, reg., S., No. 5 (0.125) (auxiliary generator engine carburetor thermostat plate screw)	
	H001-1519004	BEAX1D	GM-115543	LEVER, clamping, auxiliary generator engine carburetor throttle shaft, w/SHAFT and NUT, assembly	1
06-42	G103-1674152		DA-5067646	LINK, auxiliary generator engine carburetor to governor lever	1
06-42	G103-2276499	A309246	DA-5066402	PIN, cotter, auxiliary generator engine carburetor to governor link	2
06-42	G103-1738584	A309267	DA-5067438	NUT, machine screw, hex., S., No. 6 (0.138)—32NC-1 (auxiliary generator engine carburetor air shutter stop screw)	1
06-42	H001-0716530	BBKX2A	GM-120622	PIN, auxiliary generator engine carburetor float (Also listed as part of KIT, DA-5070526)	1
06-42	G103-1738581	A309570	DA-5067438	PLATE, adjusting, auxiliary generator engine carburetor choke	1
06-42	G214-7036692		DA-5053455	SCREW, machine, rd-hd., S., No. 6 (0.138)-32NC-2 x 5/16	3
06-42	H001-1030064	BCNX1ED	GM-132695	WASHER, lock, light, S., No. 6 (0.138)	3
06-42	H001-1517003	BECX2C	GM-106495	PLATE, friction, auxiliary generator engine carburetor thermostat housing	1
06-42	G214-7036693		DA-5053456	PLUG, auxiliary generator engine carburetor fuel sight	1
06-42	G214-7036684		DA-5054972	PLUG, drain, auxiliary generator engine carburetor	1
06-42	G103-1740567		DA-5050417	SCREW, attaching, auxiliary generator engine carburetor throttle lever (Also listed as part of KIT, DA-5070526)	2
06-42	G103-1781866	A309189	DA-5043114	SCREW, machine, oval-fil-hd., S., No. 6 (0.138)-32NC-2 x 3/8 in. (auxiliary generator engine carburetor air shutter stop)	1
06-42	H001-1026055	BECFX1EE	GM-100711	SHAFT, auxiliary generator engine carburetor choke	1
06-42	G214-5309188	A309188	DA-5043113	SCREW, auxiliary generator engine carburetor shaft	1
06-42	G103-1781667	A309187	DA-5041521	SHAFT, throttle, auxiliary generator engine carburetor, w/STOP LEVER, assembly	1
06-42	2520-5067608		DA-5067608	SPACER, auxiliary generator engine thermostat housing	1
06-42	G214-7036685		DA-5067724	SPRING, auxiliary generator engine carburetor stop lever	1
06-42	G103-1789763		DA-5050412	SCREW, auxiliary generator engine carburetor throttle stop lever spring	1
06-42	G103-1781865		DA-5050415	STUD, attaching, auxiliary generator engine carburetor to air cleaner elbow	1
06-35	G103-1792102	A309279A	DA-5067585	VALVE, needle, auxiliary generator engine carburetor float, w/SEAT, assembly (Also listed as part of KIT, DA-5070526)	1
06-42	G168-5309569	A309569	DA-5054011	VENTURI, auxiliary generator engine carburetor	1
06-42	G214-7036686		DA-5054008	WASHER, fibre, gray, 0.57 O.D. x 0.039 in. thick (auxiliary generator engine carburetor valve seat)	1
06-42	G103-1593657		DA-5053967	WASHER, lock, internal teeth, reg., S., No. 5 (0.125) (auxiliary generator engine carburetor thermostat plate screw) (Also listed as part of KIT, DA-5070526)	3
06-42	H001-1519004	BEAX1D	GM-115543	WASHER, lock, reg., S., No. 10 (0.190) (auxiliary generator engine carburetor lower housing screw)	2
06-42	H001-1518005	BECX1E	GM-106497		
				0611E—AUXILIARY GENERATOR GOVERNOR AND BREATHER HOUSING	
06-40	G103-1525904	A309261	DA-5067402	BRACKET, auxiliary generator engine governor outer operating lever spring	1
06-40	G103-1525950	A309262	DA-5067408	BREATHER, auxiliary generator engine, assembly	1
06-40	G103-1594016	A309197	DA-5043461	GASKET, auxiliary generator engine governor and breather housing (vellumoid, 1/64 in. thk.)	1

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611E—AUXILIARY GENERATOR GOVERNOR AND BREATHING HOUSING (Contd)	
06-40	G103-1616151	A309257	DA-5067395	HOUSING, auxiliary generator engine governor and breather, w/BUSHING, assembly . . .	1
06-40	H001-5128641	BCFX2DG-1	GM-114353	SCREW, machine, oval-fil-hd., S., cd.-pltd., 1/4-20NC-2 x 5/8	7
	H001-1518007	BEEX1G	GM-103319	WASHER, lock, reg., S., 1/4 in.	7
06-40	G103-1674151	A309260	DA-5067401	LEVER, operating, auxiliary generator engine governor plunger, outer	1
06-40	G103-1740253	A309255	DA-5067390	PLATE, auxiliary generator engine governor, w/WEIGHT, assembly	1
06-40	G103-1740247	A309263	DA-5067410	PLATE, lock, auxiliary generator engine governor plate to crankshaft screw	1
06-40	G103-1781895	A309256	DA-5067393	SCREW, cap, hex-hd., alloy-S., 5/16-18NC-1 x 7/8	1
06-40	G214-7036695		DA-5067388	PLATE, auxiliary generator engine governor	1
06-40	G103-1773321	A309259	DA-5067400	PLUNGER, auxiliary generator engine governor housing	1
	G103-1784781	A309258	DA-5067397	SHAFT, auxiliary generator engine governor housing, w/LEVER, assembly	1
06-40	G103-1789609	A309247	DA-5066403	SPRING, auxiliary generator engine governor outer operating lever	1
	G103-1842951	A309211A	DA-5063518	WASHER, S., 0.140 I.D., 11/32 O.D., 0.04 thk. (auxiliary generator engine governor outer lever to carburetor link)	2
06-40	G103-1842856	A309216A	DA-5067403	WASHER, thrust, S., 0.760 I.D. x 1 5/32 O.D. x 0.010 thk. (auxiliary generator engine governor plate to crankshaft)	1
06-40	G214-7036694		DA-5067392	WEIGHT, auxiliary generator engine governor plate	2
06-40	H001-0829752	BFDX1DT	GM-103711	PIN, stght., drill rod, 0.15625 x 1 1/4 in.	2
				0611F—AUXILIARY GENERATOR ENGINE EXHAUST	
	G214-7035577		FOM-2X1920B	ANGLE, auxiliary generator engine exhaust support	3
	G214-7035578		FOM-2X1876B	BRACKET, pipe support, auxiliary generator engine exhaust (Mk I; LVT (A) (1) only)	3
			FOM-P938	CLAMP, hose, 1 1/8 in. I.D., single bolt (auxiliary generator engine exhaust tubing)	2
	G167-0137990		FOM-8X1016B	CLIP, cable, closed, 1 in. (auxiliary generator engine exhaust line support)	4
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in.	5
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	4
	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4	4
	H001-5417600	BCVX2AF	FOM-P419	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 5/8	1
	H006-0264258	CPBX1AE	FOM-P660	ELBOW, stght., M.I., 90 deg., beaded, black, 3/4 in. (auxiliary generator engine exhaust nipple)	4
06-34	H006-0265620	CPBX5AE	FOM-P658	ELBOW, street, M.I., 90 deg., black, 3/4 in. (auxiliary engine port exhaust)	1
06-34			FOM-2X1916B	NIPPLE, auxiliary generator engine exhaust flexible tube	2
06-34			FOM-2X1927B	NIPPLE, auxiliary generator engine exhaust flexible tube (14 1/4 in. long)	1
06-34			FOM-2X1918B	NIPPLE, auxiliary generator engine exhaust	3
			FOM-2X1919B	NIPPLE, auxiliary generator engine exhaust (Mk I; LVT (A) (1) only)	2
			FOM-2X1959B	NIPPLE, auxiliary generator engine exhaust (Mk IV; LVT (A) (4) only)	2
	G214-7035579		FOM-2X1921B	PAD, auxiliary generator engine exhaust support	1
06-34			FOM-2X1917B	TUBE, flexible, auxiliary generator engine exhaust	1

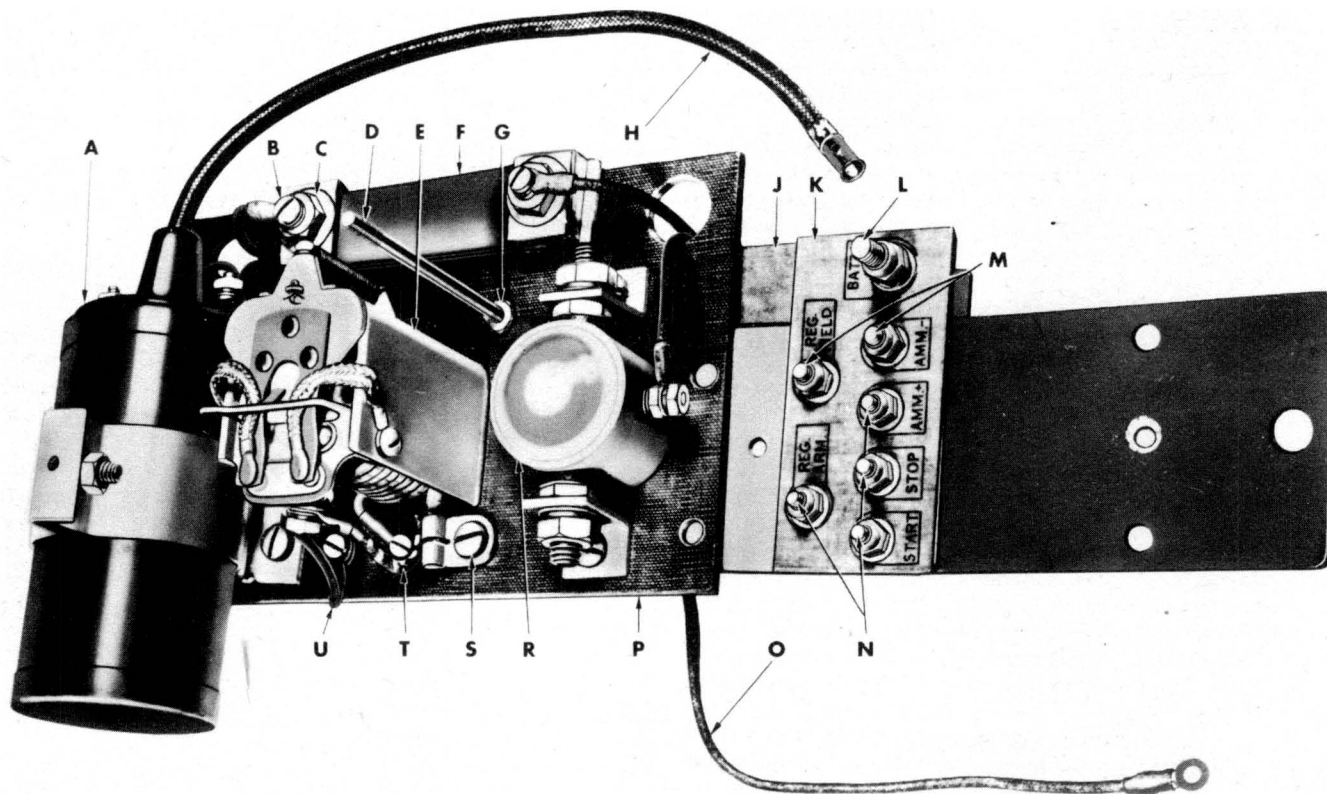

KEY	PART NAME	PART No.	GROUP
A	COIL, ASS'Y	DA-5066384	0611H-1
B	SCREW	BCGX2.1BD	0611H-1
C	WASHER	BECX1E	0611H-1
D	STUD	DA-5066476	0611H-1
E	CUTOUT	DA-5066400	0611H-1
F	SHUNT, ASS'Y	DA-5066318	0611H-1
G	NUT	BBMX1C	0611H-1
H	LEAD	DA-5066472	0611H-1
J	STRAP	DA-5066343	0611H-1

KEY	PART NAME	PART No.	GROUP
K	BOARD	DA-5066471	0611H-1
L	SCREW	BCFX4DP	0611H-1
	WASHER	BECX1G	0611H-1
	WASHER	DA-5061871	0611H-1
	NUT	A293419	0611H-1
M	NUT	DA-5066320	0611H-1
	SCREW	BCGX1.1BL	0611H-1
	WASHER	BECX1E	0611H-1
	WASHER	DA-5061999	0611H-1
N	NUT	BBMX1C	0611H-1
	NUT	DA-5066394	0611H-1

KEY	PART NAME	PART No.	GROUP
N	SCREW	DA-5066477	0611H-1
	WASHER	BECX2D	0611H-1
	WASHER	DA-5062179	0611H-1
	NUT	BBKX2B	0611H-1
O	NUT	DA-5066511	0611H-1
	LEAD, ASS'Y	DA-5066474	0611H-1
P	BOARD	DA-5066321	0611H-1
R	SWITCH, ASS'Y	DR-001462	0611H-1
S	SCREW	BCFX4DH	0611H-1
T	SCREW	BCGX1.1BG	0611H-1
	WASHER	DA-5061999	0611H-1
U	LEAD, ASS'Y	DA-5066417	0611H-1


FIGURE 06-43—AUXILIARY GENERATOR PANEL BOARD ASSEMBLY—TOP VIEW

RA PD 341112

0611F

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G168-7039475		FOM-20X1912D	0611G—AUXILIARY GENERATOR ENGINE COOLING	
			FOM-P55	DUCT, air intake, auxiliary generator engine cooling blower, assembly.....	1
			FOM-P257	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	6
			FOM-P25	SCREW, cap. hex-hd., S., 5/16-18NC-3 x 5/8.....	6
			FOM-2X1879B	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK 1218).....	12
				PAD, auxiliary generator engine cooling blower air intake duct (felt).....	1
				0611H—AUXILIARY GENERATOR ELECTRICAL GROUP	
				0611H-1—AUXILIARY GENERATOR PANEL BOARD AND PARTS	
06-34	0040-1500726		AC-1500726	AMMETER, auxiliary generator panel board, assembly.....	1
06-46	G214-7036703		DA-5028997	ARMATURE, auxiliary generator panel board cutout, assembly.....	1
06-46			DA-5015815	SCREW, machine, rd-hd., S., No. 5 (0.125)-44NF-2 x 7/32.....	2
06-46	H001-1517003	BECX2C	GM-106495	WASHER, lock, lgt., S., No. 6.....	2
06-46			DA-5013523	WASHER, plain, S., 9/64 I.D. x 5/16 O.D. x 0.031 in. thk.....	2
06-43,45	G103-1523975	A309248	DA-5066471	BOARD, insulating, auxiliary generator panel board binding posts, front.....	1
06-45	G103-1632675	A309238	DA-5066359	BOARD, insulating, auxiliary generator panel board binding posts, rear.....	1
06-43	G214-7036696		DA-5066321	BOARD, panel, auxiliary generator mounting ammeter, stop and start switches.....	1
	G103-1733840	D73179	DA-5066389	BOARD, panel, auxiliary generator, w/COIL and CUTOUT, assembly (Includes: starting switch, leads, and ammeter shunt).....	1
06-45	G103-1524461	A309225	DA-5066327	BOX, auxiliary generator panel board cutout, w/COVER, assembly.....	1
06-45	H001-0716610	BBMX1C	GM-120614	NUT, machine, screw, hex., S., No. 10 (0.190) 32NF-1.....	1
06-43,45	G103-1792360	A309250	DA-5066476	STUD, No. 10 (0.190)-32NF-2 (11/16) x 4 3/32 x No. 10 (0.190)-32NF-2 (11/16).....	1
06-46	H001-1518005	BECX1E	GM-106497	WASHER, lock, reg., S., No. 10.....	4
06-46	G103-1842855	A309209A	DA-5061999	WASHER, plain, S., No. 10 (0.190).....	1
06-35	G085-3303340		DA-857408	BRACKET, auxiliary generator ammeter support.....	1
06-45	G214-7036687		DA-5066348	BRACKET, mounting, auxiliary generator panel board, left, assembly.....	1
06-45	G214-7036697		DA-5066347	BRACKET, mounting, auxiliary generator panel board, right, assembly.....	1
06-45	2520-5066329		DA-5066329	BRACKET, mounting, auxiliary generator panel board starting switch, w/BOLT, assembly.....	1
06-44	G103-1527759	A309264	DA-5067434	BUSHING, auxiliary generator ammeter shunt terminal (br., 3/8 internal thd.).....	2
06-46	G103-1527760	A309266	DA-5067436	BUSHING, auxiliary generator panel board cutout head (br., 5/16-18NC-1 internal thd.).....	1
06-45	G103-1527760	A309265	DA-5067436	BUSHING, auxiliary generator panel board cutout head (5/16-18NC-1 internal thd.).....	1
06-44,45	G103-1526304	A309265	DA-5067435	BUSHING, auxiliary generator panel board starting switch mounting screw and cutout coil terminal screw (br., 1/4-20NC-1 internal thd.).....	3
06-44	G103-1527757	A309234	DA-5066352	BUSHING, insulating, auxiliary generator panel board binding post bolts (fibre, 1/4 I.D. x 11/32 O.D. x 0.240 in. width).....	6
	G103-1527756	A309233	DA-5066351	BUSHING, insulating, auxiliary generator panel board terminal post bolt marked "BATT" (fibre, 9/32 I.D. x 3/8 O.D. x 0.120 in. width).....	1

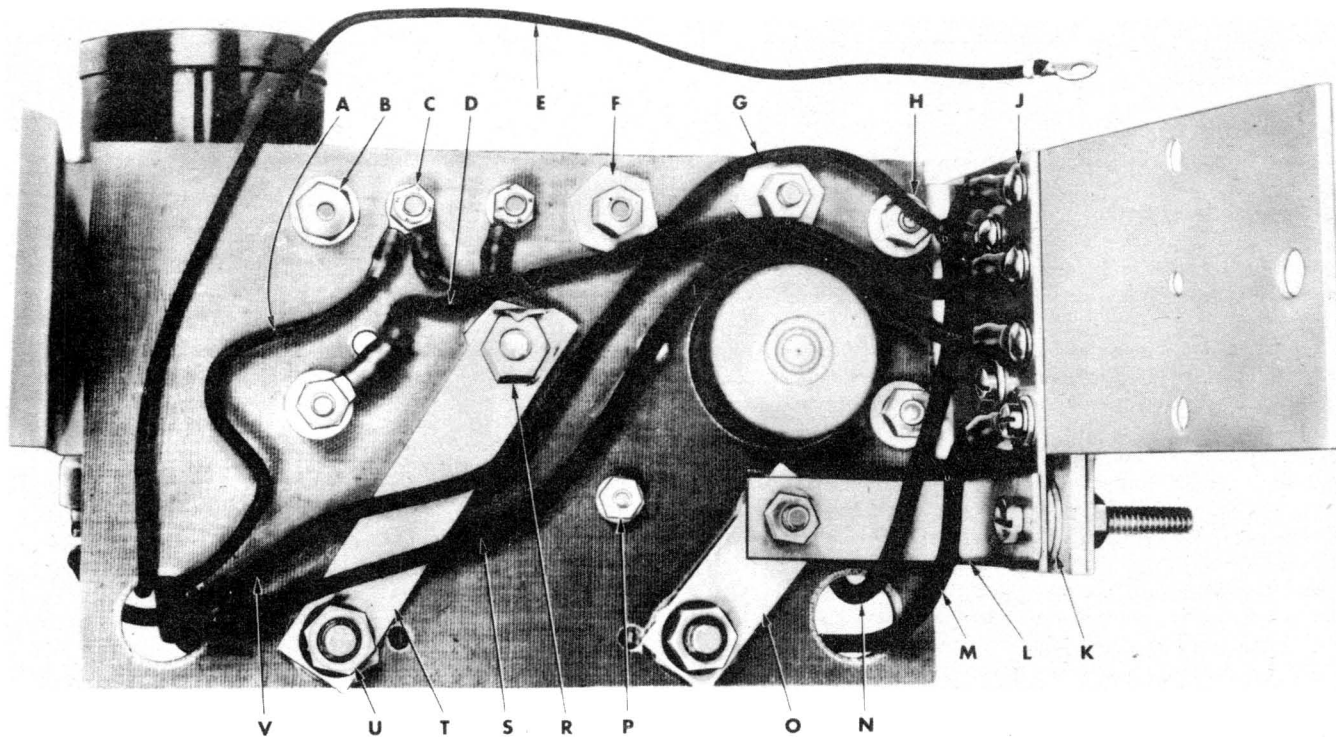

KEY	PART NAME	PART No.	GROUP
A	LEAD, ASS'Y.....	DA-5067770.....	0611H-1
B	WASHER.....	DA-5061730.....	0611H-1
	WASHER.....	BECX1G.....	0611H-1
	NUT.....	BBJX1A.....	0611H-1
C	WASHER.....	DA-5061730.....	0611H-1
	NUT.....	DA-5066394.....	0611H-1
D	LEAD, ASS'Y.....	DA-5066395.....	0611H-1
E	LEAD, ASS'Y.....	DA-5066474.....	0611H-1
F	BUSHING.....	DA-5067435.....	0611H-1
	WASHER.....	BECX1G.....	0611H-1
	NUT.....	BBJX1A.....	0611H-1

KEY	PART NAME	PART No.	GROUP
G	LEAD, ASS'Y.....	DA-5066396.....	0611H-1
H	SCREW.....	BCFX4DH.....	0611H-1
	WASHER.....	DA-5061730.....	0611H-1
	WASHER.....	BECX1G.....	0611H-1
J	NUT.....	BBJX1A.....	0611H-1
	BUSHING.....	DA-5066352.....	0611H-1
K	WASHER.....	DA-5056886.....	0611H-1
L	STRAP.....	DA-5066343.....	0611H-1
M	LEAD, ASS'Y.....	DA-5067723.....	0611H-1
N	LEAD, ASS'Y.....	DA-5067721.....	0611H-1
O	STRAP.....	DA-5067778.....	0611H-1


KEY	PART NAME	PART No.	GROUP
P	WASHER.....	DA-5061999.....	0611H-1
	WASHER.....	BECX1E.....	0611H-1
	NUT.....	BBMX1C.....	0611H-1
R	BUSHING.....	DA-5067436.....	0611H-1
	NUT.....	GM-134561.....	0611H-1
S	LEAD, ASS'Y.....	DA-5066399.....	0611H-1
T	STRAP.....	DA-5066338.....	0611H-1
U	BUSHING.....	DA-5067434.....	0611H-1
	WASHER.....	BECX1K.....	0611H-1
	NUT.....	BBDX1C.....	0611H-1
V	LEAD, ASS'Y.....	DA-5066399.....	0611H-1

RA PD 341113

FIGURE 06-44—AUXILIARY GENERATOR PANEL BOARD ASSEMBLY—BOTTOM VIEW

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611H-1—AUXILIARY GENERATOR PANEL BOARD AND PARTS (Contd)	
06-34	G103-1793650		DA-1996022	BUTTON, start switch, auxiliary generator engine panel board, assembly	1
06-34	G103-1793670	A265590	DA-1996023	BUTTON, stop switch, auxiliary generator engine panel board, assembly	1
06-46	G214-7036698		DA-5066450	COIL, auxiliary generator panel board cutout, assembly	1
06-43,45	G103-1539670	B267941	DA-5066384	COIL, ignition, auxiliary generator panel board, w/NUT and WASHER, assembly	1
06-45	H001-0720001	BBJX1A	GM-134551	NUT, reg., hex., S., 1/4-20NC-2	1
06-45	H001-1026128	BCFX2DL-1	GM-132273	SCREW, mach., fil-hd., S., cd-pltd., 1/4-20NC-2 x 1	1
06-45	H001-1518007	BECX1G	GM-103319	WASHER, lock, reg., S., 1/4 in.	1
06-46	2520-5036149		DA-5036149	CONTACT, auxiliary generator panel board cutout, assembly	1
06-46	H001-0716610	BBMX1C	GM-120614	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1	1
06-46	H001-1026462	BCGX1.1BC	GM-113626	SCREW, machine, oval-fil-hd., S., No. 10 (0.190) 32NF-2 x 5/16	2
06-46	H001-1518005	BECX1E	GM-106497	WASHER, lock, reg., S., No. 10	3
06-43,45	G103-1543550	B267943	DA-5066400	CUTOUT, auxiliary generator panel board, assembly (Includes: armature, coil, contact, frame, head, lead, and spring)	1
06-46	G214-7036688		DA-5066478	FRAME, auxiliary generator panel board cutout coil, assembly	1
06-45	G103-1593658	A309274	DA-5067616	GASKET, auxiliary generator panel board cutout cover (vellumoid)	1
06-46	G214-7036699		DA-5067439	HEAD, auxiliary generator panel board cutout, w/CORE, assembly	1
06-46	G214-7036700		DA-5013533	INSULATION, auxiliary generator panel board cutout coil to core (varnish cloth)	2
06-46	G214-7036702		DA-5052691	INSULATION, auxiliary generator panel board cutout coil (varnish cloth)	2
06-46	G214-7036701		DA-5035237	INSULATION, auxiliary generator panel board cutout (fish paper)	1
06-35	G103-1632681	B267931A	DA-5054383	INSULATION, loom, auxiliary generator panel board to hood leads	1
06-44,45	G103-1673810	B267945K	DA-5067723	LEAD, auxiliary generator ammeter, assembly (No. 14 wire, black, 6 in. long)	1
06-37	G103-1673828		DA-5066388	LEAD, auxiliary generator armature brush to panel board cutout, assembly	1
06-35,44	G103-1673833	B267945B	DA-5066399	LEAD, auxiliary generator panel board coil to binding post marked "STOP" and binding post marked "AMM.+" , assembly	2
06-44	G103-1673816	B267945L	DA-5067770	LEAD, auxiliary generator panel board coil to cutout terminal screw, assembly	1
06-45,43	G103-1673835	A309249A	DA-5066472	LEAD, auxiliary generator panel board coil to spark plug, assembly	1
06-44	G103-1673830		DA-5066396	LEAD, auxiliary generator panel board cutout terminal screw to binding post bolt marked "REG. ARM", assembly	1
06-43	G214-7036690		DA-5066417	LEAD, auxiliary generator cutout to panel board binding post bolt, assembly	1
06-44	G103-1673829		DA-5066395	LEAD, auxiliary generator panel board mounting bracket screw to cutout terminal screw, assembly	1
06-44,45	G103-1673810	B267945K	DA-5067723	LEAD, auxiliary generator panel board shunt to binding post marked "AMM.—", assembly (No. 14 wire, black, 6 in. long)	1
06-44,45	G103-1673814	B267945G	DA-5067721	LEAD, auxiliary generator panel board starting switch to binding post bolt marked, assembly	1
	G103-1673809		DA-5067600	LEAD, auxiliary generator panel board to ammeter, assembly (yellow)	1
06-35	G103-1673807	A309180C	DA-5067598	LEAD, auxiliary generator panel board to "START" button, assembly (green)	1

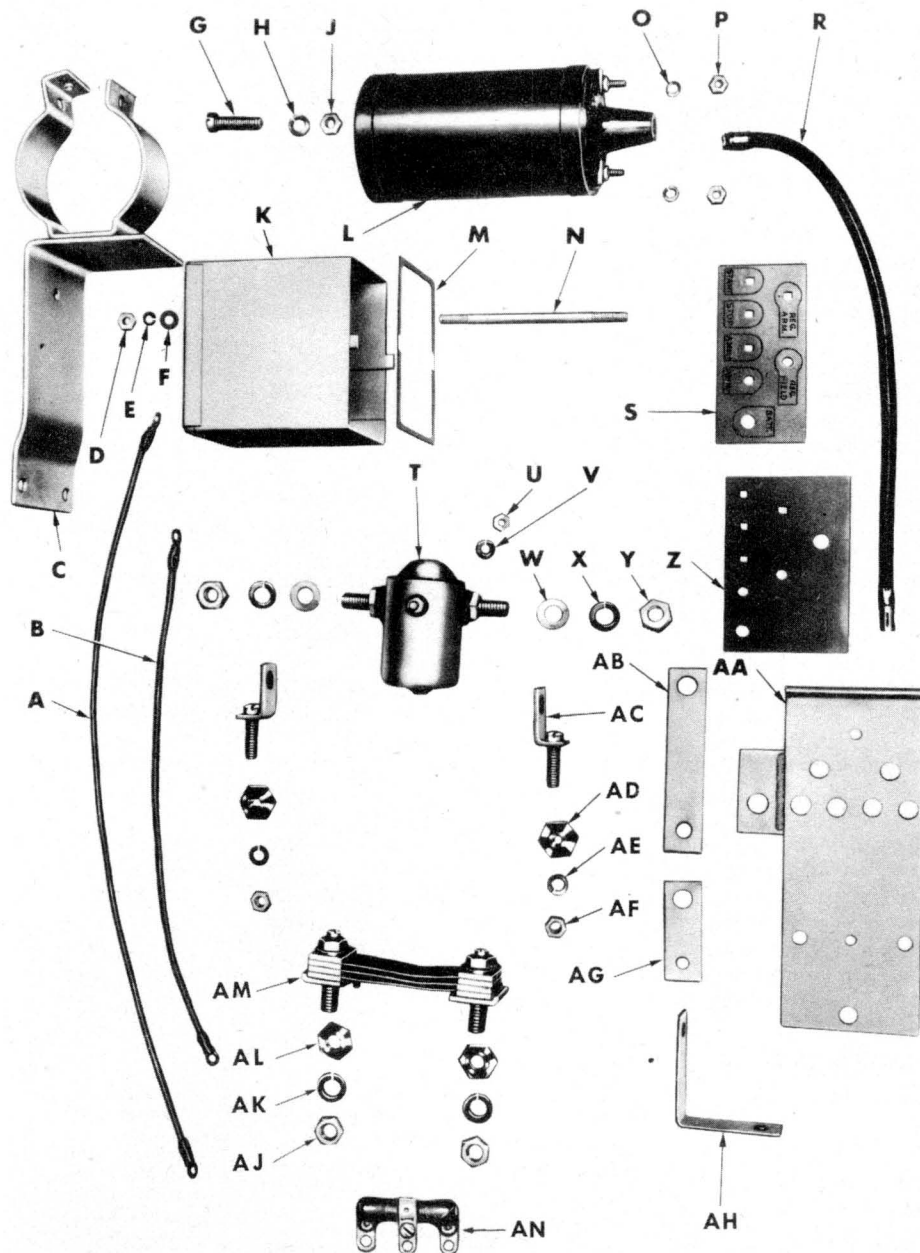


KEY	PART NAME	PART No.	GROUP
A	LEAD, ASS'Y.....	DA-5067721	0611H-1
B	LEAD, ASS'Y.....	DA-5067723	0611H-1
C	BRACKET, ASS'Y....	DA-5066347	0611H-1
D	NUT.....	BBMX1C	0611H-1
E	WASHER.....	BECX1E	0611H-1
F	WASHER.....	DA-5061999	0611H-1
G	SCREW.....	BCFX2DL-1	0611H-1
H	WASHER.....	BECX1G	0611H-1
J	NUT.....	BBJX1A	0611H-1
K	BOX, ASS'Y.....	DA-5066327	0611H-1
L	COIL, ASS'Y.....	DA-5066384	0611H-1
M	GASKET.....	DA-5067616	0611H-1
N	STUD.....	DA-5066476	0611H-1
O	WASHER.....	BECX1E	0611H-1
P	NUT.....	BBMX1C	0611H-1
R	LEAD, ASS'Y.....	DA-5066472	0611H-1
S	BOARD.....	DA-5066471	0611H-1
T	SWITCH, ASS'Y....	DA-001462	0611H-1
U	NUT.....	DA-5066394	0611H-1
V	WASHER.....	BECX1E	0611H-1
W	WASHER.....	BEBX1K	0611H-1
X	WASHER.....	BECX1K	0611H-1
Y	NUT.....	GM-117062	0611H-1
Z	BOARD.....	DA-5066359	0611H-1
AA	BRACKET.....	DA-5066348	0611H-1
AB	STRAP.....	DA-5066338	0611H-1
AC	BRACKET, ASS'Y....	DA-5066329	0611H-1
AD	BUSHING.....	DA-5067435	0611H-1
AE	WASHER.....	BECX1G	0611H-1
AF	NUT.....	BBKX2B	0611H-1
AG	STRAP.....	DA-5067778	0611H-1
AH	STRAP.....	DA-5066343	0611H-1
AJ	NUT.....	BBDX1C	0611H-1
AK	WASHER.....	BEAX1L	0611H-1
AL	BUSHING.....	DA-5067434	0611H-1
AM	SHUNT, ASS'Y.....	DA-5066318	0611H-1
AN	RESISTOR.....	DA-5067605	0611H-1

FIGURE 06-45—AUXILIARY GENERATOR PANEL BOARD ASSEMBLY—EXPLODED VIEW

RA PD 341114

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611H-1—AUXILIARY GENERATOR PANEL BOARD AND PARTS (Contd)	
06-35	G103-1673805		DA-5067596	LEAD, auxiliary generator panel board to "STOP," and "START" switch, assembly . . .	1
06-35	G103-1673806	A309180B	DA-5067597	LEAD, auxiliary generator panel board to "STOP" button, assembly (red)	1
	G103-1673811	B267945H	DA-5067722	LEAD, auxiliary generator regulator cutout, assembly (No. 18 wire, black)	1
06-35	G214-7033326	A309180F	DA-5067854	LEAD, auxiliary generator "STOP" switch (short, white)	1
	G103-1673803	B267945F	DA-5067606	LEAD, black, No. 18 wire, 10 in. long (auxiliary generator panel board)	1
06-43,44	G103-1673836	B267945A	DA-5066474	LEAD, breaker, auxiliary generator panel board coil to condenser, assembly	1
06-45	G103-1673817	A309572	DA-5067778	LEAD, ground, auxiliary generator panel board	1
06-44			GM-134561	NUT, hex., br., 5/16-18NC-1 (auxiliary generator panel board cutout head bushing)	1
06-46			GM-134561	NUT, hex., br., 5/16-18NC-1 (auxiliary generator panel board cutout head)	1
06-43	G103-1714780	A293419	GM-118557	NUT, hex., br., 1/4-20NC-1 (auxiliary generator panel board binding post bolt marked "BATT.")	1
06-45	H001-4171580	BBTXIEA	GM-117062	NUT, hex., S., 3/8-16NC-1 (auxiliary generator panel board starting switch terminal)	2
06-44	H001-0716023	BBDX1C		NUT, jam, hex., S-fin., S., 3/8-24NF-2 (auxiliary generator engine panel board shunt strap screw)	2
06-43	H001-0716535	BBKX2B	GM-120622	NUT, machine screw, hex., S., No. 8 (0.164)-32NC-1 (auxiliary generator panel board binding post screw marked "REG. ARM," "START," "STOP," and "AMM+.")	4
06-45	H001-0716535	BBKX2B	GM-120622	NUT, machine screw, hex., S., No. 8 (0.164)-32NC-1 (auxiliary generator panel board starting switch)	2
06-43	H001-0716610	BBMX1C	GM-110923	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1 (auxiliary generator cutout stud)	1
06-43	H001-0716610	BBMX1C	GM-110923	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1 (auxiliary generator panel board binding post screw marked "REG. FIELD," and "AMM-")	2
06-45	H001-0716610	BBMX1C	GM-110923	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1 (auxiliary generator panel board coil terminal and binding post)	4
06-44	H001-0716610	BBMX1C	GM-110923	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1 (cutout box stud)	1
06-44	H001-0720001	BBJX1A		NUT, regular, hex., unfin., S., 1/4-20NC-2 (auxiliary generator panel board binding post bolts)	4
06-43	G103-1714787	A309224	DA-5066320	NUT, safety, hex., br., 1/4-20NC-1 (auxiliary generator panel board binding post bolt marked "BATT.")	1
	G103-1714797	A309252	DA-5066511	NUT, safety, hex., S., No. 8 (0.164)-32NC-1 (auxiliary generator panel board binding post bolt)	4
06-43	G103-1714797	A309252	DA-5066511	NUT, safety, hex., S., No. 8 (0.164)-32NC-1 (auxiliary generator panel board binding post screw marked "REG. ARM," "START," "STOP," and "AMM-")	4
06-44	G103-1714788	A309245	DA-5066394	NUT, safety, hex., S., No. 10 (0.190)-32NF-1 (auxiliary generator panel board binding post bolts)	4
06-45	G103-1714788	A309245	DA-5066394	NUT, safety, hex., S., No. 10 (0.190)-32NF-1 (auxiliary generator panel board binding post bolts)	4

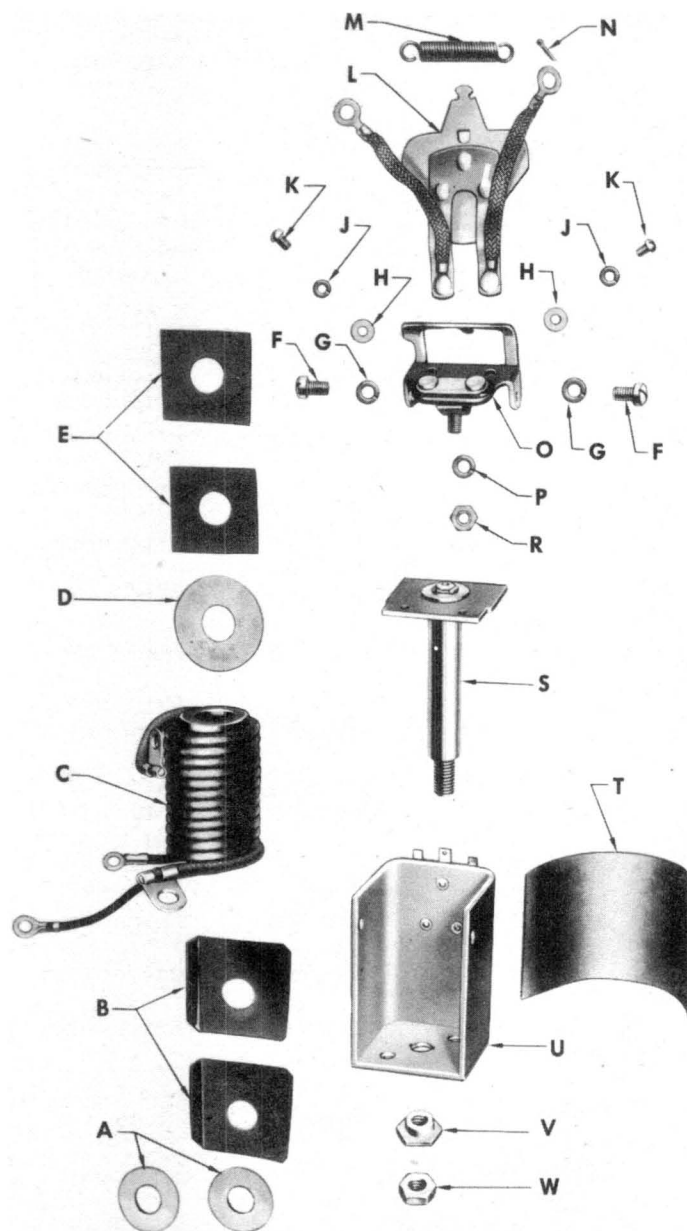


KEY	PART NAME	PART No.	GROUP
A	WASHER.....	DA-5027412.....	0611H-1
B	INSULATION.....	DA-5013533.....	0611H-1
C	COIL, ASS'Y.....	DA-5066450.....	0611H-1
D	WASHER.....	DA-5013543.....	0611H-1
E	INSULATION.....	DA-5052691.....	0611H-1
F	SCREW.....	BCGX1.1BC.....	0611H-1
G	WASHER.....	BECX1E.....	0611H-1
H	WASHER.....	DA-5013523.....	0611H-1
J	WASHER.....	BECX2C.....	0611H-1
K	SCREW.....	DA-5015815.....	0611H-1
L	ARMATURE, ASS'Y.....	DA-5028997.....	0611H-1
M	SPRING.....	DA-5013955.....	0611H-1
N	PIN.....	BFA11BB.....	0611H-1
O	CONTACT, ASS'Y.....	DA-5036149.....	0611H-1
P	WASHER.....	BECX1E.....	0611H-1
R	NUT.....	BBMX1C.....	0611H-1
S	HEAD ASS'Y.....	DA-5067439.....	0611H-1
T	INSULATION.....	DA-5035237.....	0611H-1
U	FRAME, ASS'Y.....	DA-5066478.....	0611H-1
V	BUSHING.....	DA-5067436.....	0611H-1
W	NUT.....	GM-134561.....	0611H-1

FIGURE 06-46—AUXILIARY GENERATOR CUT OUT ASSEMBLY—EXPLODED VIEW

0611H-1

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-43	G103-1714788	A309245	DA-5066394	0611H-1—AUXILIARY GENERATOR PANEL BOARD AND PARTS (Contd)	
06-46	H001-0811024	BFAX1BB	DA-5019859	NUT, safety, hex., S., No. 10 (0.190)-32NF-1 (auxiliary generator panel board binding post screw marked "REG. FIELD" and "AMM.-")	2
06-45	G103-1767563	A390272	DA-5067605	PIN, cotter, split., S., 1/16 x 7/16 (auxiliary generator panel board cutout to frame)	1
06-45	H001-0716535	BBKX2B	GM-120622	RESISTOR, auxiliary generator engine shunt field	1
	H001-1023091	BCKX1FT-1	GM-133527	NUT, hex., plain No. 8-32NC-2	1
06-45	G103-2443016		DA-5066769	SCREW, fil-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 2 1/4	1
06-45	H001-1518004	BE CX1D	GM-121841	WASHER, insulating, auxiliary generator engine shunt field resistor screw	1
06-44	H001-1024123	BCFX4DH	GM-115570	WASHER, lock, reg., S., No. 8 (0.164)	1
06-43,44	H001-1024123	BCFX4DH	GM-115570	SCREW, machine, oval-fil-hd., br., 1/4-20NC-2 x 3/4 (auxiliary generator binding post)	2
				SCREW, machine, oval-fil-hd., br., 1/4-20NC-2 x 3/4 (auxiliary generator panel board starting switch lead post)	1
06-43	H001-1024128	BCFX4DP	GM-132554	SCREW, machine, oval-fil-hd., br., 1/4-20NC-2 x 1 1/2 (auxiliary generator panel board)	1
06-43	H001-1024523	BCGX2.1BD		SCREW, machine, oval-fil-hd., br., No. 10 (0.190)-32NF-2 x 3/8 (auxiliary generator ammeter shunt)	2
06-39	H001-1026125	BCFX2DE	GM-132251	SCREW, machine, oval-fil-hd., S., 1/4-20NC-2 x 7/16 (auxiliary generator panel board to generator cover)	4
06-43	G103-1524305	BCNX1FM	DA-5066477	SCREW, machine, rd-hd., S., No. 8 (0.164)-32NC-2 x 1 (auxiliary generator panel board binding post marked "REG. ARM," "START," "STOP," and "AMM+.")	4
06-43	H001-1024128	BCGX1.1BG	GM-132121	SCREW, machine, oval-fil-hd., S., No. 10 (0.190)-32NF-2 x 5/8 (auxiliary generator panel board cutout lead post)	2
06-39	H001-1023622	BCLX1.1AC	GM-133619	SCREW, machine, oval-fil-hd., S., No. 10 (0.190)-32NF-2 x 7/16 (auxiliary generator panel board to generator)	1
06-43	H001-1026466	BCGX1.1BL	GM-132135	SCREW, machine, oval-fil-hd., S., No. 10 (0.190)-32NF-2 x 1 (auxiliary generator panel board marked "REG. FIELD" and "AMM-")	2
06-43,45	G103-1785145	B267929	DA-5066318	SHUNT, ammeter, auxiliary generator, assembly	1
06-45	G103-1527759	A309264	DA-5067434	BUSHING, br., 3/8 in. internal thd.	2
06-45	H001-0716023	BBDX1C	GM-124925	NUT, jam, s-fin., S., 3/8-24NF-2	2
06-45	H001-1519011	BEAX1L	GM-115549	WASHER, lock, S., int-teeth., 3/8 in.	2
06-46	2520-5013955		DA-5013955	SPRING, auxiliary generator panel board cutout armature to frame	1
06-43,45	G103-1791952	A309229	DA-5066343	STRAP, auxiliary generator panel board battery terminal to starter switch (copper)	1
06-45	G103-1791951	A309228	DA-5066338	STRAP, auxiliary generator panel board cutout to shunt (copper)	1
06-45	G103-1673817		DA-5067778	STRAP, auxiliary generator panel board starter switch to shunt (copper)	1
06-43,45	G103-1793659		DR-001462	SWITCH, starting, auxiliary generator panel board, assembly	1
06-43	H001-1518007	BE CX1G	GM-103319	WASHER, lock, reg., S., 1/4 in. (auxiliary generator panel board battery binding post bolt marked "BATT.")	1
06-44	H001-1518007	BE CX1G	GM-103319	WASHER, lock, reg., S., 1/4 in. (auxiliary generator panel board binding post bolts)	4
06-45	H001-1518007	BE CX1G	GM-103319	WASHER, lock, reg., S., 1/4 in. (auxiliary generator panel board starting switch)	2

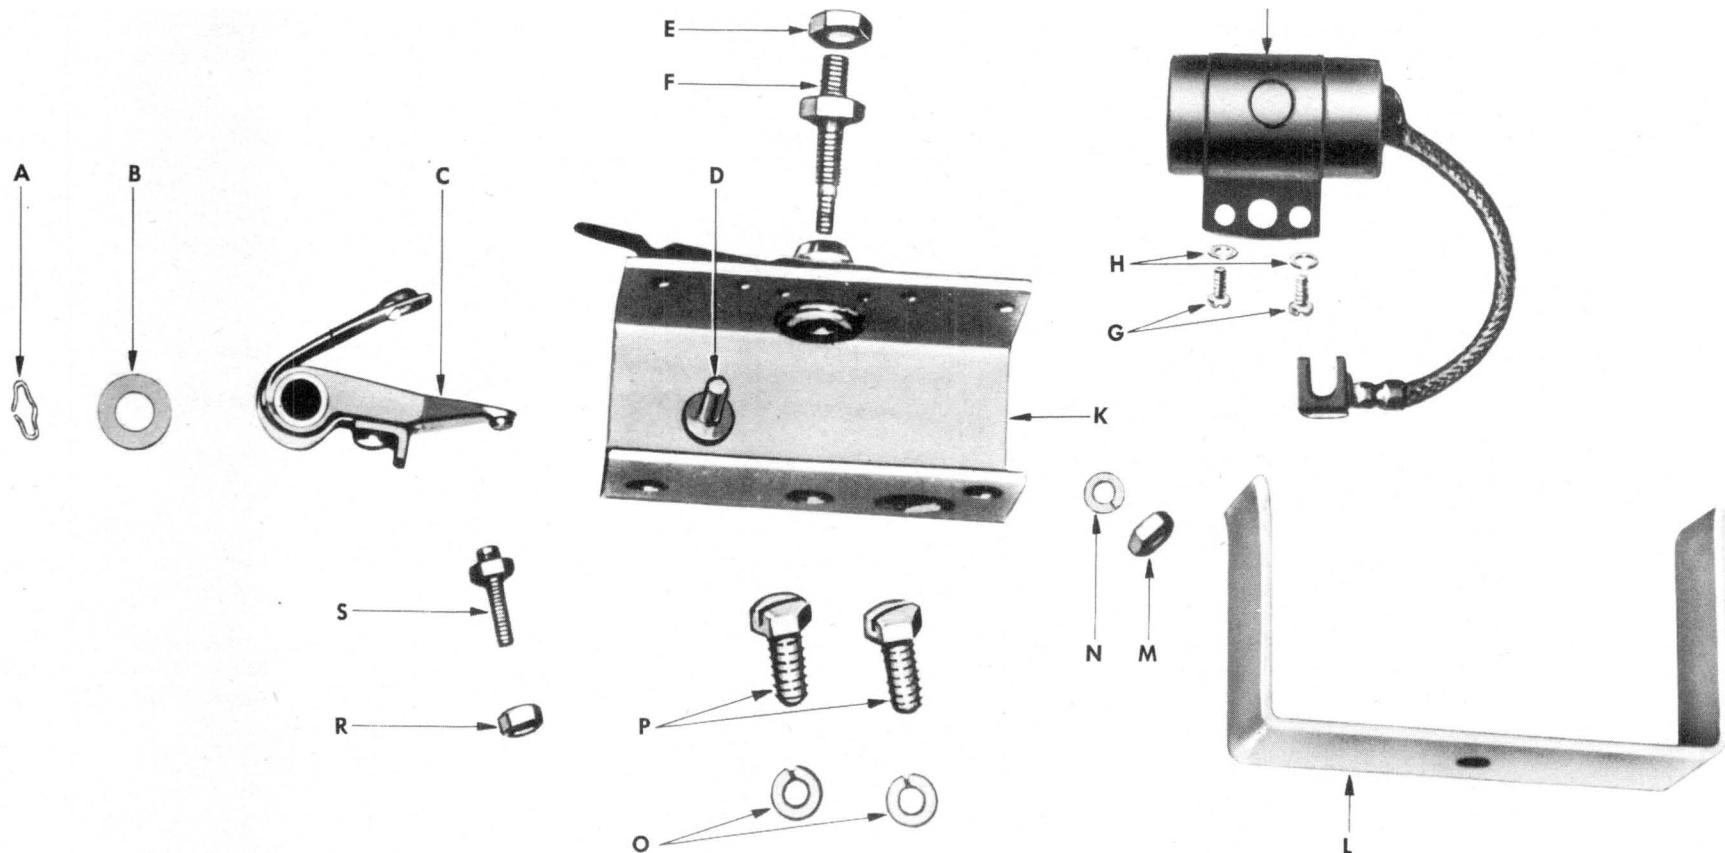

KEY	PART NAME	PART NO.	GROUP	KEY	PART NAME	PART No.	GROUP
A	CLIP.....	DA-5020141...	0611H-2	K	HOUSING, ASS'Y ..	DA-5066008	0611H-2
B	WASHER.....	DA-5020423...	0611H-2	L	COVER.....	DA-5040743	0611H-2
C	LEVER, ASS'Y.....	DA-5025835...	0611H-2	M	NUT.....	GM-110921	0611H-2
D	STUD.....	DA-5024495...	0611H-2	N	WASHER.....	GM-106495	0611H-2
E	NUT.....	GM-120614	0611H-2	O	WASHER.....	GM-103319	0611H-2
F	POST.....	DA-5025836	0611H-2	P	SCREW.....	GM-175156	0611H-2
G	SCREW.....	DA-5016363	0611H-2	R	NUT.....	DA-5010077	0611H-2
H	WASHER.....	GM-106495	0611H-2	S	SCREW.....	DA-5019959	0611H-2
J	CONDENSER.....	DA-5060686	0611H-2				

FIGURE 06-47—AUXILIARY GENERATOR ENGINE IGNITION HOUSING—EXPLODED VIEW


RA PD 341181

0611H-1

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd. Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611H-1—AUXILIARY GENERATOR PANEL BOARD AND PARTS (Contd)	
06-39	H001-1518007	BECX1G	GM-103319	WASHER, lock, reg., S., 1/4 in. (auxiliary generator panel to generator cover screw)	2
06-44	H001-1518009	BECX1K	GM-103321	WASHER, lock, reg., S., 3/8 in. (auxiliary generator engine panel board shunt strap screw)	2
06-45	H001-1519011	BECX1K	GM-103321	WASHER, lock, reg., S., 3/8 in. (auxiliary generator panel board starting switch terminal)	2
06-43	H001-1517004	BECX2D		WASHER, lock, lght., S., No. 8 (0.164) (auxiliary generator panel board binding post marked "REG. ARM," "START," "STOP," and "AMM+.")	4
06-43			DA-5062179	WASHER, plain, S., No. 8 (0.164) (auxiliary generator panel board binding post screw marked "REG. ARM," "START," "STOP," and "AMM+.")	4
06-45	H001-1518005	BECX1E	GM-106497	WASHER, lock, reg., S., No. 10 (auxiliary generator panel board coil terminal and binding post)	4
06-44	H001-1518005	BECX1E	GM-106497	WASHER, lock, reg., S., No. 10 (auxiliary generator panel board cutout box stud)	4
06-43	H001-1518005	BECX1E	GM-106497	WASHER, lock, reg., S., No. 10 (0.190) (auxiliary generator ammeter shunt screw)	2
06-43	H001-1518007	BECX1E	GM-106497	WASHER, lock, reg., S., No. 10 (0.190) (auxiliary generator panel board, binding post screw marked "REG. FIELD" and "AMM—")	2
06-44	G103-1842851	A309215A	DA-5056886	WASHER, auxiliary generator panel board mounting bracket, insulating (plain fibre)	2
06-43	G103-1842853	A309210A	DA-5061871	WASHER, plain, br., 1/4 in. (auxiliary generator panel board binding post bolt marked "BATT." and cutout terminal bolt)	4
06-46			DA-5027412	WASHER, plain, fibre (insulating, auxiliary generator panel board cutout)	2
06-46			DA-5013543	WASHER, plain, fibre (insulating, auxiliary generator panel board cutout)	2
06-44	G103-1842950		DA-5061730	WASHER, plain, S., 9/32 (0.281) x 5/8 x 0.064 in. (auxiliary generator panel board to mounting bracket screws)	4
06-43,44,45	G103-1842855		DA-5061999	WASHER, plain, S., No. 10 (0.190) (auxiliary generator panel board binding post bolt (4), cutout terminal (2), cutout terminal lead bolt (2), cutout cover stud (3))	11
06-45	H001-1530009	BEBX1K	GM-120394	WASHER, plain, S., SAE std., 3/8 in. (auxiliary generator panel board starting switch terminal)	2
				0611H-2—AUXILIARY GENERATOR ENGINE IGNITION HOUSING	
06-47	G103-1539730	A309208	DA-5060686	CONDENSER, auxiliary generator engine ignition housing, assembly	1
06-47	G103-1781831	A309168	DA-5016363	SCREW, machine, rd-hd., S., No. 5 (0.125) 40NC-2 x 1/4	2
06-47	H001-1517003	BECX2C	GM-106495	WASHER, lock, lght., S., No. 6 (0.138)	2
06-47	G103-1540113	A309186	DA-5040743	COVER, auxiliary generator engine ignition housing	1
06-39,47	G103-1618156	A309218	DA-5066008	HOUSING, ignition, auxiliary generator engine w/CONDENSER and LEVER, assembly	1
06-47	H001-5488501	A311721	GM-175156	SCREW, slotted, hex-hd., S., cd-pltd., 1/4-20NC-2 x 1/2	2
06-47	H001-1518007	BECX1G	GM-103319	WASHER, lock, reg., S., 1/4 in.	2
06-47	G103-1674150	A309172	DA-5025835	LEVER, breaker, auxiliary generator engine ignition housing, assembly	1
06-47	G103-1538553	A309171	DA-5020141	CLIP, spring, auxiliary generator engine housing breaker lever	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-47	G103-1842799	A309214	DA-5020423	WASHER, auxiliary generator engine ignition housing breaker lever stud (plain, fibre).	1
06-47	G103-1714786	A306167	DA-5010077	NUT, auxiliary generator engine ignition housing contact adjusting screw	1
06-47	G214-7036689		DA-5025836	POST, terminal, auxiliary generator engine ignition housing	1
06-47	H001-0716530	BBKX2A	GM-110921	NUT, machine screw, hex., S., No. 6 (0.138)-32NC-1	1
06-47	H001-0716610	BBMX1C	GM-120614	NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1	4
06-47	H001-1517003	BEEX2C	GM-106495	WASHER, lock, lght., S., No. 6 (0.138)	1
06-47	G103-1740000	A309170	DA-5019959	SCREW, contact, auxiliary generator engine ignition housing	1
06-47			DA-5024495	STUD, auxiliary generator engine ignition housing breaker lever	1
0611H-3—AUXILIARY GENERATOR CABLES AND CONDUITS					
06-34	G168-7037135		FOM-70X1038E-22	CABLE, auxiliary generator to cooling blower (shielded, 3 ft. 10 1/2 in. long)	1
			FOM-70X1075B	CABLE, control tunnel junction box to auxiliary generator (Mk IV; LVT (A) (4) only) . .	1
06-37,39	G103-1791954	A309240	DA-5066376	STRAP, ground, auxiliary generator engine	1

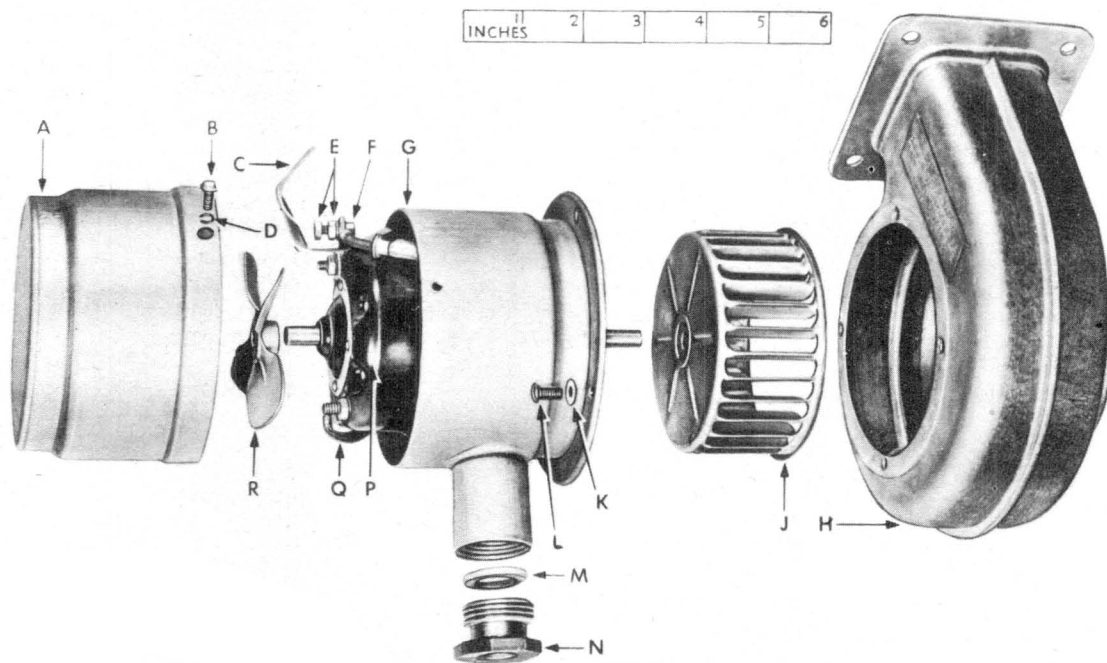

Key	Part Name	Part Number	Group Number
A	CAP	TWF-B173-2	0612
B	SCREW	BCNX2CC	0612
C	COVER	TWF-A191	0612
D	WASHER	BEEX1G	0612
E	NUT	TWF-E200-18	0612
F	SCREW	BCNX4CE	0612
G	HOUSING, assembly	TWF-B197	0612
H	HOUSING, assembly	TWF-B196	0612
J	WHEEL	TWF-A189	0612
K	WASHER	BEAX1H-1	0612
L	SCREW	BCNX2CC-1	0612
M	RING	FOM-P259-2	0612
N	NUT	FOM-P259-1	0612
P	MOTOR, assembly	TWF-B192	0612
Q	JUMPER	TWF-A193	0612
R	FAN	TWF-A192	0612


FIGURE 06-48—BLOWER ASSEMBLY—EXPLODED VIEW

RA PD 341127

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0611H-4—AUXILIARY GENERATOR ENGINE SPARK PLUG AND SUPPRESSORS	
06-39	G103-1740566	A309219	DA-5066265	PLUG, spark, auxiliary generator engine (10 mm., type 104).....	1
	G103-1767562	A309269	DA-5067502	SUPPRESSOR, auxiliary generator engine spark plug.....	1
				0612—INTERIOR VENTILATING EQUIPMENT	
06-48	G167-0178259		FOM-P154	BLOWER, ventilating, assembly (engine room (2), and auxiliary generator (1)) (TWF-E200).....	3
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	12
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap., hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	8
	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap., hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4.....	4
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	12
	3267-P911		FOM-P911	BLOWER, ventilating, cab, assembly.....	1
	G214-7035580		FOM-2X1503B	BOTTOM, engine room gas exhaust blower upper duct.....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	4
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	4
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	4
06-48	G214-7035581		TWF-B173-2	CAP, blower motor housing.....	4
06-48	H001-1030132	BCNX2CC		SCREW, machine, rd-hd., S., 1/4-20NC-3 x 3/8.....	8
06-48	H001-1518007	BE CX1G		WASHER, lock, reg., S., 1/4 in.....	8
06-48	G214-7035582		TWF-A191	COVER, blower terminal post (paper).....	4
	G214-7035583		FOM-2X1500B	DUCT, engine room gas exhaust blower, horizontal.....	2
	G214-7035584		FOM-21X1497B	DUCT, engine room gas exhaust blower, lower, assembly.....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	8
	H001-5417720	BCVX2AN	FOM-P256	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1 1/4.....	8
	H001-1500011	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	8
06-48	G214-7035585		TWF-A192	FAN, cooling, blower motor.....	4
06-48	G214-7035586		TWF-B197	HOUSING, blower motor, assembly (Includes: terminal tube).....	4
06-48	H001-5150111	BCNX2CC-1		SCREW, machine, rd-hd., S., cd-pltd., 1/4-20NC-3 x 3/8.....	16
06-48	H001-7021741	BEAX1H-1		WASHER, lock, internal teeth, reg., S., cd-pltd., 1/4 in.....	16
06-48	G214-7035587		TWF-B196	HOUSING, blower wheel, assembly.....	4
06-48	G214-7035588		TWF-A193	JUMPER, blower motor to ground.....	4
06-48	G214-7035589		TWF-B192	MOTOR, blower, assembly.....	4
06-48			FOM-P259-1	NUT, gland, terminal tube (size C). (blower).....	4
06-48	H001-4024520	BBAX1AG	TWF-E200-18	NUT, regular, hex., s-fin., br., 1/4-20NC-2 (blower terminal post).....	8
06-48	G214-7035590		FOM-P259-2	RING, gland, terminal tube (size C). (blower).....	4
06-48	H001-1028120	BCNX4CE		SCREW, machine, rd-hd., br., 1/4-20NC-3 x 1/2 (blower terminal post).....	4
			FOM-P653	THUMB SCREW, plain, S., elec-zn-pltd., 5/16-18NC-2 x 3/4 (auxiliary generator blower mount).....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-48	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218) (auxiliary generator blower mount thumb screw).....	4
	H001-1500011	BEAX1H	TWF-A189	WASHER, lock, internal teeth, reg., S., 1/4 in. (blower terminal post).....	4
	G214-7035591			WHEEL, blower.....	4
				0613—TURRET ELECTRICAL PARTS (Mk I; LVT (A) (1) ONLY)	
	G214-7035592		CHB-AT1081	BEAD, sealing, turret .30 cal. gun solenoid.....	2
	G168-7035315		CHB-AT1080	DIAPHRAGM, turret .30 cal. gun solenoid (rubber).....	1
	G168-7035314		CHB-AT1079	DIAPHRAGM, turret 37mm. gun solenoid (rubber).....	1
			CHB-XAT531	PLUG, turret gun mount recoil mechanism.....	1
			CHB-AT1082	PLUG, turret gun mount solenoid (rubber).....	2

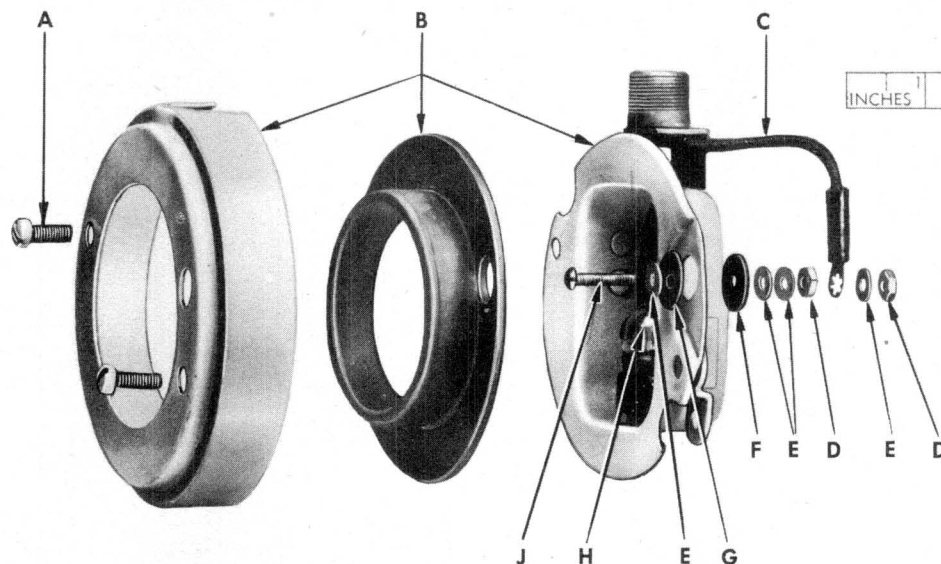

KEY	PART NAME	PART No.	GROUP
A	SCREW.....	BCYX3ED-1....	0613A
B	LIGHT, ASS'Y.....	C121140-B....	0613A
C	CONDUIT, ASS'Y..	CHB-AT2035...	0613F
D	NUT.....	BBKX3AE.....	0613A
E	WASHER.....	BEBX1BC.....	0613A
F	WASHER.....	CHB-AT1094...	0613A
G	WASHER.....	CHB-AT1095...	0613A
H	BULB.....	A213667B.....	0613A
J	SCREW.....	BCNX3EK.....	0613A

FIGURE 06-49—DOME LIGHT ASSEMBLY—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)


RA PD 341128

0612-0613

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0613—TURRET ELECTRICAL PARTS (MK IV; LVT (A) (4) ONLY)	
	G127-0330440	C108086	FOM-P1355	OUTLET, 75 mm. howitzer firing cable, w/CONDUITS, upper, assembly (PC-5279035)...	1
	G127-0382016	A293756		SCREW, cap, hex-hd., 1/4-28NF-3 x 1/2 w/external-teeth lockwasher.....	2
	D023-8800176		FOM-P1276	PLUG, 75 mm. howitzer firing cable receptacle.....	1
	G168-7037141		FOM-P1277	RECEPTACLE, cable, 75 mm. howitzer firing mechanism.....	1
	H001-3020131	BAOX4CB-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 3/8-24NF-2 x 5/8 (75 mm. howitzer firing switch bracket mounting).....	2
	G103-1781724	A262053	GM-190515	SCREW, cap, hex-hd., S., 3/8-24NF-3 x 5/8, w/internal teeth lockwasher (attaching, 75 mm. howitzer firing switch bracket).....	2
	G103-1793726	C107756	FOM-P1353	SWITCH, firing, 75 mm. howitzer.....	1
	H001-7021801	BEAX1L	GM-138542	WASHER, lock, internal teeth, reg., S., 3/8 in. (75 mm. howitzer firing switch bracket mounting screw).....	2
				0613A—DOME LIGHT (Mk I; LVT (A) (1) ONLY)	
06-49	M001-0213263	A213667B		BULB, turret dome light.....	1
			CHB-AT1096	GASKET, turret dome light.....	1
	G103-1673982	A293299		LENS, turret dome light.....	1
	G168-7035334		CHB-BAT3039	LIGHT, dome, turret, assembly.....	1
19-2,3	G103-1671609	C121140B		LIGHT, dome turret, w/o SWITCH, assembly.....	1
06-49	H101-0178469	BCYX3ED-1		SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 3/8.....	2
06-49	H001-4133580	BBKX3AE	GM-113102	NUT, machine screw, hex., br., No. 6 (0.138)-32NC-2 (turret dome light).....	3
06-49	H001-1023058	BCNX3EK	GM-100948	SCREW, machine, rd-hd., br., No. 6 (0.138)-32NC-2 x 3/4 (turret dome light).....	1
06-49	H001-1522003	BEBX1BC	GM-113818	WASHER, plain, br., SAE std., No. 6 (0.138) (turret dome light).....	4
06-49			CHB-AT1094	WASHER, turret dome light (fiber).....	1
06-49			CHB-AT1095	WASHER, turret dome light (fiber).....	1
				0613B—SLIP RING (Mk I; LVT (A) (1) ONLY)	
06-55	G148-0110500	B243757		ARM, turret slip ring contact brush, assembly (Also listed as part of KIT, CHB-XAT115).....	8
	G148-0110592	A265422		ARROW, indicator, turret slip ring (Also listed as part of KIT, CHB-XAT115).....	1
06-54	G214-7035593		FOM-20X1808C	BRACKET, mounting, turret basket slip ring.....	1
06-54	H001-1013243	BCBX1CA		SCREW, cap, hex-hd., S., 3/8-24NF-2 x 3/4.....	2
	H001-1519011	BEAX1L		WASHER, lock, internal teeth, reg., S., 3/8 in.....	2
06-55	G104-1526217	A265484		BRUSH, contact, turret slip ring (Also listed as part of KIT, CHB-XAT115).....	8
06-55	G104-1526216	A265482		BRUSH, turret slip ring radio ring (Also listed as part of KIT, CHB-XAT115).....	10
06-54,55	G214-7035594		BKE-CR200	BUSHING, turret slip ring terminal tube (Also listed as part of KIT, CHB-XAT115)...	3
06-55	G104-0500471	A172174		BUSHING, turret slip ring (br., hex-hd., 1 3/16-18NS-2 thd., 1 1/16 in. lg.).....	1
06-55	G104-0502216	A213567D		NUT, lock, hex., br., 1 3/16-18NS-2	

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-54	G103-1540085 G214-7035596	C105826	BKE-CR183 BKE-CR182	COVER, turret slip ring lower terminal box, assembly.....	1
06-55	G214-7035597			GASKET, turret slip ring lower terminal box cover (Also listed as part of KIT, CHB-XAT115).....	1
06-54	G148-0131553 H001-1013005 H001-1519009 G168-7035333	B243750 BCAX1AC BEAX1H	BKE-CR188	GROMMET, turret slip ring (rubber) (Also listed as part of KIT, CHB-XAT115).....	2
				HOOD, turret slip ring, upper (Also listed as part of KIT, CHB-XAT115).....	1
				SCREW, cap, hex-hd., S., 1/4-20NC-2 x 1.....	5
				WASHER, lock, internal teeth., reg., S., 1/4 in.....	5
			CHB-XAT115	KIT, repair, turret slip ring.....	1
				(Consists of:	
				8 ARM, turret slip ring contact brush, assembly	
				2 ARROW, indicator, turret slip ring	
				24 BRUSH, contact turret slip ring	
				30 BRUSH, turret slip ring radio ring	
	G148-0110500 G148-0110592 G104-1526217 G104-1526216	B243757 A265422 A265484 A265482			

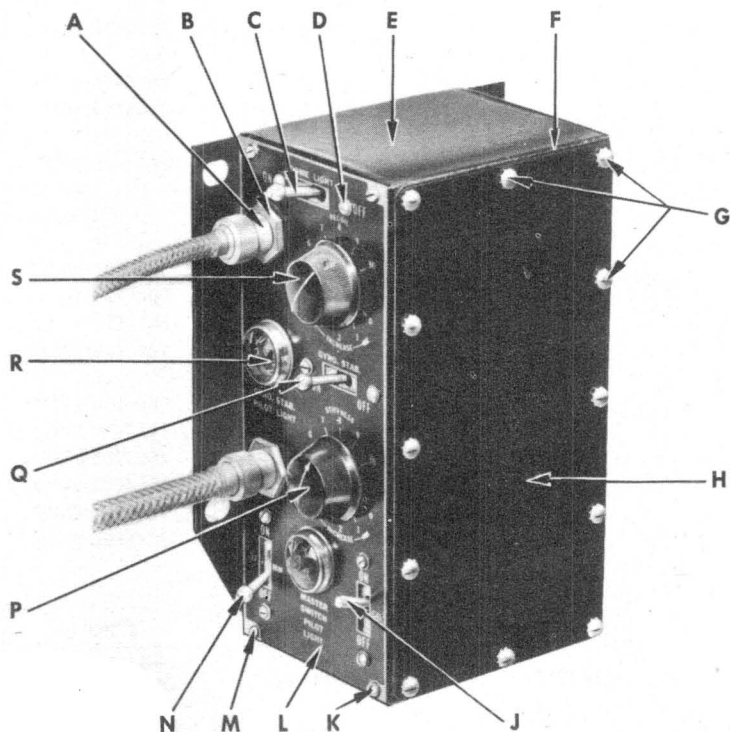

KEY	PART NAME	PART No.	GROUP
A	BUSHING.....	A266323.....	0613D
B	NUT.....	A213567A.....	0613D
C	SWITCH.....	CHB-XAT110.....	0613D
D	SCREW.....	BCYX1CD-1.....	0613D
E	BOX, ASS'Y.....	CHB-BAT4016.....	0613D
F	GASKET.....	CHB-AT1015.....	0613D
G	SCREW.....	BCYX3ED-1.....	0613D
H	COVER.....	CHB-AT1014.....	0613D
J	SWITCH.....	CHB-XAT111.....	0613D
K	SCREW.....	BCYX1CD-1.....	0613D
L	PLATE.....	CHB-AT3026.....	0613D
M	SCREW.....	BCYX1CD-1.....	0613D
N	SWITCH.....	CHB-XAT112.....	0613D
P	KNOB.....	A334762.....	0613D
Q	SWITCH.....	CHB-XAT111.....	0613D
R	LIGHT, ASS'Y.....	A240908.....	0613D
S	RHEOSTAT, ASS'Y.....	A240907.....	0613D

FIGURE 06-50—GYRO SWITCH BOX ASSEMBLY (MK I; LVT (A) (1) ONLY)


RA PD 341129

0613B

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0631B—SLIP RING (Mk I; LVT (A) (1) ONLY) (Contd)	
	G214-7035594		BKE-CR200	3 BUSHING, turret slip ring terminal tube	
	G103-1540085		BKE-CR183	1 COVER, turret slip ring lower terminal box, assembly	
	G214-7035596		BKE-CR182	10 GASKET, turret slip ring lower terminal box cover	
	G214-7035597		BKE-CR188	8 GROMMET, turret slip ring plate (rubber)	
	G145-0131553	B243750		1 HOOD, turret slip ring, upper	
	H001-0716535	BBKX2B		5 NUT, machine screw, hex., S., No. 8 (0.164)-32NC-1	
	H001-0716610	BBMX1C		30 NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1	
	H001-0720001	BBJX1A		15 NUT, regular, hex., unfin., S., 1/4-20NC-2	
	H001-0725480	BBSX2AA		10 NUT, safety, S., (elastic stop nut type) 1/4-20NC-3 (turret slip ring ground)	
	H001-1013005	BCAX1AC		8 SCREW, cap, hex-hd., S., 1/4-20NC-2 x 1 (turret slip ring hood)	
	H001-1028067	BCNX3FC		15 SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-2 x 1/4	
	G104-1789604	A265478		8 SPRING, turret slip ring contact brush	
	G104-1789606	A265485		10 SPRING, turret slip ring radio ring brush	
	H001-1519006	BEAX1E		50 WASHER, lock, internal-teeth., reg., S., No. 8 (0.164)	
	H001-1519007	BEAX1F		100 WASHER, lock, internal-teeth., reg., S., No. 10 (0.190)	
	H001-1519009	BEAX1H		24 WASHER, lock, internal-teeth., reg., S., 1/4 in. (turret slip ring hood screw)	
	H001-1522005	BEBX1BE		30 WASHER, plain, br., SAE std., No. 10 (0.190)	
	H001-1522007	BEBX1BG		10 WASHER, plain, br., SAE std., 1/4 in.	
			BKE-CR201	6 WASHER, turret slip ring terminal tube bushing)	
	H001-0716535	BBKX2B		NUT, machine screw, hex., S., No. 8 (0.164)-32NC-1 (Also listed as part of KIT, CHB-XAT115)	3
	H001-0716610	BBMX1C		NUT, machine screw, hex., S., No. 10 (0.190)-32NF-1 (Also listed as part of KIT, CHB-XAT115)	22
	H001-0720001	BBJX1A		NUT, regular, hex., unfin., S., 1/4-20NC-2 (Also listed as part of KIT, CHB-XAT115)	6
	H001-0725480	BBSX2AA		NUT, safety, S., (elastic stop nut type) 1/4-20NC-3 (turret slip ring ground) (Also listed as part of KIT, CHB-XAT115)	4
	H001-1028067	BCNX3FC		SCREW, machine, rd-hd., br., No. 8 (0.164)-32NC-2 x 1/4 (Also listed as part of KIT, CHB-XAT115)	20
06-54	G214-7035595		CHB-AT1108	SEGMENT, clamp, turret basket slip ring	4
F,19-35	G168-7035538		CHB-XAT114	SLIP RING, turret basket, assembly (BKE-CR105)	1
	H001-1013229	BCBX1BA-1	GM-120741	SCREW, cap, hex-hd., S., cd-pltd., 5/16-24NF-2 x 3/4	4
	H001-7025711	BECX1H-1	GM-120214	WASHER, lock, reg., S., cd-pltd., 5/16 in.	4
06-55	G104-1789604	A265478		SPRING, turret slip ring contact brush (Also listed as part of KIT, CHB-XAT115)	8
06-55	G104-1789606	A265485		SPRING, turret slip ring radio ring brush (Also listed as part of KIT, CHB-XAT115)	10
06-54	G214-7035598		CHB-AT3028	SUPPORT, turret basket slip ring	2
	G103-1524211	A266058		BOLT, carriage, special, S., cd-pltd., 3/8-24NF-3 x 1 1/8	6
	H001-0725853	BBWX1CA-1		NUT, safety, hex., S., cd-pltd., 3/8-24NF-3	6

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-1519006	BEAX1E		WASHER, lock, internal-teeth, reg., S., No. 8 (0.164) (turret basket slip ring) (Also listed as part of KIT, CHB-XAT115).....	25
	H001-1519007	BEAX1F		WASHER, lock, int-teeth., reg., S., No. 10 (0.190) and 3/16 turret basket slip ring) (Also listed as part of KIT, CHB-XAT115).....	9
	H001-1522005	BEBX1BE		WASHER, plain, br., SAE std., No. 10 (0.190) (turret basket slip ring) (Also listed as part of KIT, CHB-XAT115).....	10
	H001-1522007	BEBX1BG		WASHER, plain, br., SAE std., 1/4 in. (turret basket slip ring) (Also listed as part of KIT, CHB-XAT115).....	2
	G103-1842741	A265806	CHB-AT1061-3	WASHER, turret slip ring conduit and master switch box (fiber).....	1
	G127-0382035		GM-116422	WASHER, turret slip ring retaining collar (plain, S., 5/16 (3/8 x 2 x 3/22).....	2
	H001-7025711	BE CX1H-1	GM-120214	SCREW, cap, hex-hd., br., 5/16-18NC-3 x 3/4.....	2
			BKE-CR201	WASHER, lock, reg., S., cd-pltd., 5/16 in.....	2
				WASHER, turret slip ring terminal tube bushing (Also listed as part of KIT, CHB-XAT115).....	3

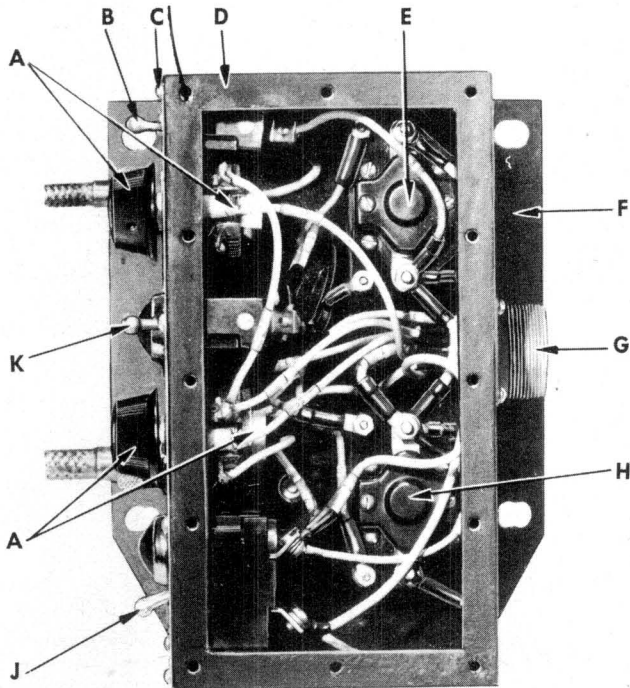

KEY	PART NAME	PART No.	GROUP
A	RHEOSTAT.....	A240907.....	0613D
B	SWITCH.....	CHB-XAT110.....	0613D
C	SCREW.....	BCYX1CD-1.....	0613D
D	GASKET.....	CHB-AT1015.....	0613D
E	RELAY.....	CHB-XAT109.....	0613D
F	BOX.....	CHB-AT4008.....	0613D
G	RECEPTACLE, ASS'Y.....	CHB-AT2037.....	0613D
H	RELAY.....	CHB-XAT109.....	0613D
J	SWITCH.....	CHB-XAT111.....	0613D
K	SWITCH.....	CHB-XAT111.....	0613D

FIGURE 06-51—GYRO SWITCH BOX ASSEMBLY—COVER REMOVED (MK I; LVT (A) (1) ONLY)


RA PD 341130

0613B

0613C-0613D

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-51 06-50,19-2	G103-1525873	B225879		0613C—DISENGAGING SWITCH (Mk I; LVT (A) (1) only)	
	H001-4027501	BBBX1A-1		BRACKET, turret gun mount disengaging switch.....	1
	H001-5025821	BCBX1AA-1	GM-12350	NUT, regular, hex., s-fin., S., cd-pltd., 1/4-28NF-2 (mounting bracket to conduit assembly).....	2
		BCYX4BD-1	CHB-XAT519	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-2 x 3/4 (mounting bracket to conduit assembly).....	2
	H001-1519009	BEAX1H-1		SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., 1/4-28NF-2 x 3/8 (mounting bracket to gun mount).....	2
	G214-7035599		CHB-XAT546	WASHER, lock, internal teeth., reg., S., cd-pltd., 1/4 in. (mounting bracket to conduit assembly).....	2
		BCYX4BD-1	CHB-XAT519	FINGER, turret gun mount disengaging switch.....	1
	C056-0393784	B201152	CHB-1231043	SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., 1/4-28NF-2 x 3/8.....	2
	H001-4027501	BBBX1A-1		SWITCH, disengaging turret, assembly.....	2
	H001-5025821	BCBX1AA-1	GM-123450	NUT, regular, hex., s-fin., S., cd-pltd., 1/4-28NF-2.....	2
	H001-1519009	BEAX1H-1		SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-2 x 3/4.....	2
				WASHER, lock, internal teeth., reg., S., cd-pltd., 1/4 in.....	2
				0613D—GYRO SWITCH (Mk I; LVT (A) (1) only)	
	G168-7035319		CHB-AT1086	BOOT, turret gyro switch box conduit.....	1
06-50	G214-7035600		CHB-AT4008	BOX, turret gyro switch.....	1
	G168-7035340		CHB-BAT4016	BOX, turret gyro switch, assembly.....	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-2 x 5/8.....	4
	H001-7025741	BEBXIK-1		WASHER, plain S., cd-pltd., SAE std., 3/8 in.....	3
	M001-0213263	A213667B		BULB, turret gyro switch box pilot light.....	2
	G103-1540059	A266323		BUSHING, turret gyro switch box.....	2
				0613D—GYRO SWITCH (Mk I; LVT (A) (1) only) (Contd)	
	G214-7036201		CHB-AT1014	COVER, turret gyro switch box.....	1
	H101-0178469	BCYX3ED-1		SCREW, ext-teeth-lockwasher., rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 3/8.....	12
	G168-7035330		CHB-AT1060	GASKET, turret gyro switch box circuit breaker.....	4
	G168-7035329		CHB-AT1059	GASKET, turret gyro switch box conduit receptacle.....	1
	G168-7035328		CHB-AT1015	GASKET, turret gyro switch box cover.....	1
	C056-0263923	A334762		KNOB, turret gyro switch box rheostat.....	2
	G402-5240908	A240908		LIGHT, pilot, turret gyro switch box, assembly.....	2
	G104-0502190	A213567A		NUT, lock, turret gyro switch box bushing (brass).....	2
06-50	G214-7036202		CHB-AT3026	PLATE, panel, turret gyro switch box.....	1
	H001-4133580	BBKX3AE-1	GM-113102	NUT, machine screw, hex-hd., br., No. 6 (0.138)-32NC-2.....	4
		BCYX1CD-1	CHB-XAT518	SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x 3/8.....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
06-51	G168-7035336	BBKX3AE-1 BCYX1CD-1	CHB-AT2037	RECEPTACLE, turret gyro switch box, w/WIRES, assembly.....	1
	H001-4133580		GM-113102	NUT, machine screw, hex-hd., br., No. 6 (0.138)-32NC-2.....	4
			CHB-XAT518	SCREW, ext-teeth-lockwasher., rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x 3/8.....	4
	G168-7035337	BBKX2CA-1 BCOX1.1AF-1 BEAX1F-1	CHB-XAT109	RELAY, turret gyro switch box (for 37 mm. and 30 cal. firing).....	2
	H001-4135681		GM-120614	NUT, machine screw, hex-hd., S., cd-pltd., No. 10 (0.190)-32NF-2.....	4
	H001-5148851			SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 1/2.....	4
	H001-7021681			WASHER, lock, internal teeth., reg., S., cd-pltd., No. 10 (0.190).....	4
	H001-7021651	BEBX1E-1	GM-120391	WASHER, plain, S., cd-pltd., SAE std., No. 10 (0.190).....	4
06-50,51	G104-0305496	A240907		RHEOSTAT, turret gyro switch box, assembly.....	2
06-50	G168-7035343		CHB-XAT110	SWITCH, circuit breaker, turret dome light (5 amp.).....	1
06-50		BCYX1CD-1	CHB-XAT518	SCREW, ext-teeth-lock washer., rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x 3/8.....	2
06-50,51	G168-7035344		CHB-XAT111	SWITCH, circuit breaker, turret .30 cal. gun firing and gyro stabilizer (10 amp.).....	2
06-50		BCYX1CD-1	CHB-XAT518	SCREW, ext-teeth-lockwasher., rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x 3/8.....	2
06-50	G168-7035345		CHB-XAT112	SWITCH, circuit breaker, turret 37mm. gun firing (15 amp.).....	1
		BCYX1CD-1	CHB-XAT518	SCREW, ext-teeth-lockwasher., rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x 3/8.....	2
			CHB-AT1061-2	WASHER, turret gyro switch box bushing (fiber).....	2
			CHB-AT1061-1	WASHER, turret gyro switch box rheostat (fiber).....	2

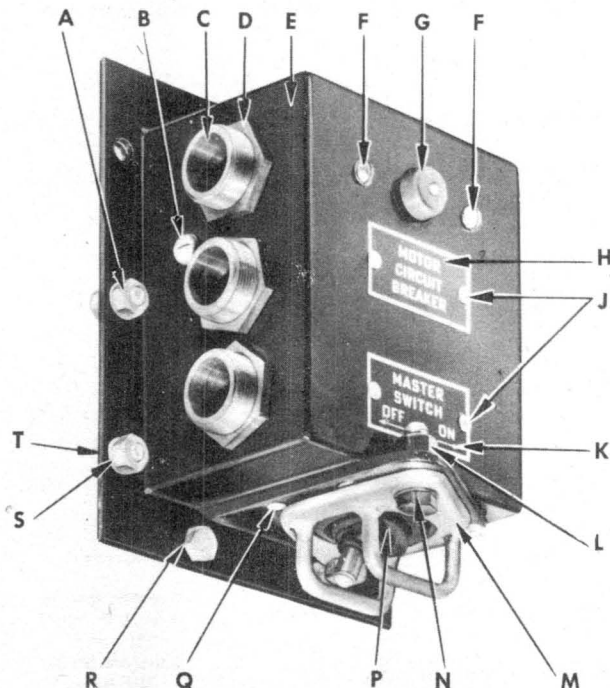

KEY	PART NAME	PART No.	GROUP
A	NUT.....	BBBX1B-1.....	0613E
B	SCREW.....	BCYX4BE-1.....	0613E
C	BUSHING.....	A172174.....	0613E
D	NUT.....	A213567D.....	0613E
E	BOX.....	CHB-AAT4012.....	0613E
F	SCREW.....	BCOX1.1AF-1.....	0613E
G	BREAKER.....	CHB-XAT107.....	0613E
H	PLATE.....	CHB-AT1069.....	2203
J	RIVET.....	GM-140133.....	2203
K	PLATE.....	CHB-AT1068.....	2203
L	NUT.....	BBBX1C-1.....	0613E
M	RETAINER, ASS'Y.....	A292990.....	0613E
N	SCREW.....	BCBX1CC-1.....	0613E
P	BOOT.....	B226872.....	0613E
Q	SCREW.....	BCKX1FG-1.....	0613E
R	SCREW.....	BCBX5BB-1.....	0613E
S	WASHER.....	BECX1H-1.....	0613E
T	SCREW.....	BCBX5BB-1.....	0613E


RA PD 341131

FIGURE 06-52—MASTER SWITCH BOX ASSEMBLY (MK I; LVT (A) (1) ONLY)

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-4135681 H001-7021681 H001-7021651 G214-7036203	BBKX2CA-1 BEAX1F-1 BEBX1E-1	CHB-AT1073 GM-120614 GM-121801 GM-120391 CHB-AT2038 CHB-AT2038A CHB-AT2038B CHB-AT2038C CHB-AT2038D CHB-AT2038E CHB-AT2038F CHB-AT2038G CHB-AT2038H	0613D—GYRO SWITCH (Mk I; LVT (A) (1) ONLY) (Contd) WIRE, jumper and ground, turret gyro switch box (.30 cal. relay to 37mm. to ground)... NUT, machine screw, hex-hd., S., cd-pltd., No. 10 (0.190)-32NF-2..... WASHER, lock, internal teeth, reg., S., cd-pltd., No. 10 (0.190) WASHER, plain, S., cd-pltd., SAE std., No. 10 (0.190)..... WIRE SET, jumper, turret gyro switch box..... (Consists of: 1 WIRE, 10 in. lg. (Terminal both ends) 1 WIRE, 6 in. lg. (Terminal both ends) 1 WIRE, 3 in. lg. (Terminal both ends) 2 WIRE, 5 in. lg. (Terminal both ends). 1 WIRE, 5 1/2 in. lg. (Terminal one end) 1 WIRE, 5 1/2 in. lg. (Terminal one end) 1 WIRE, 5 1/2 in. lg. (Terminal one end) 1 WIRE, 5 in. lg. (Both ends plain))	1 2 2 5 1
06-52 06-52,53 06-52,53 19-4 06-52 06-52 06-52 06-53	G103-1524350 G214-7036204 G168-7035341 H001-5419781 H001-7025711 G168-7035320 H001-4135681 H001-5148851 H001-7021681 G103-0300720 G103-1539732 H001-4027501 H001-7043681 G214-7036205 H001-4167561	B226872 BCBX5BB-1 BECX1H-1 BBKX2CA-1 BCOX1.1AF-1 BEAX1F-1 A172174 A293761 BBBX1A-1 BCYX4BE-1 BEBX1G-1 BBBX1B-1	CHB-AAT4012 CHB-BAT4021 GM-123473 GM-120214 CHB-XAT107 GM-132908 GM-121301 CHB-XAT510 GM-120392 CHB-AT1021 GM-120368	0613E—MASTER SWITCH (Mk I; LVT (A) (1) ONLY) BOOT, turret master switch..... BOX, turret master switch..... BOX, turret master switch, assembly..... SCREW, cap, hex-hd., S., cd-pltd., 5/16-24NF-2 x 5/8..... WASHER, lock, reg., S., cd-pltd., 5/16 in..... BREAKER, circuit, turret master switch..... NUT, machine screw, hex., S., cd-pltd., No. 10 (0.190)-32NF-2..... SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 1/2..... WASHER, lock, internal teeth, reg., S., cd-pltd., No. 10 (0.190)..... BUSHING, turret master switch box (brass)..... CONDENSER, turret master switch, w/WIRE, assembly..... NUT, regular, hex., s-fin., S., cd-pltd., 1/4-28NF-2..... SCREW, ext-teeth-lockwasher; rd-hd., S., cd-pltd., 1/4-28NF-2 x 1/2..... WASHER, plain, S., cd-pltd., SAE std., 1/4 in..... COVER, turret master switch box..... NUT, regular, hex., s-fin., S., cd-pltd., 5/16-24NF-2.....	1 1 1 4 4 1 2 2 2 3 1 1 1 1 1 1 1 6

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-5419781	BCBX5BB-1	GM-123473	SCREW, cap, hex-hd., S., cd-pltd., 5/16-24NF-2 x 5/8.....	6
	H001-7025711	BECC1H-1	GM-120214	WASHER, lock, reg., S., cd-pltd., 5/16 in.	6
06-53	G168-7035327		CHB-AT1023	DIAPHRAGM, turret master switch circuit breaker.....	1
	G168-7035335		CHB-AT1022	GASKET, turret master switch box cover.....	1
06-53	G214-7036206		CHB-AT1089	INSULATOR, turret master switch box circuit breaker.....	1
06-52	G104-0502216	A213567D		NUT, lock, turret master switch box bushing (brass).....	3
06-52	G103-1767692	A292990		RETAINER, turret master switch boot, assembly.....	1
06-52	H001-4027541	BBBX1C-1		NUT, regular, hex., s-fin., S., cd-pltd., 3/8-24NF-2.....	2
06-52	H001-5027131	BCBX1CC-1	CHB-XAT506	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 1.....	2
	H001-7025741	BECC1K-1	GM-120382	WASHER, lock, reg., S., cd-pltd., 3/8 in.....	2
06-53	G168-7035339		CHB-AT1072	STRAP, turret master switch box (wire).....	1

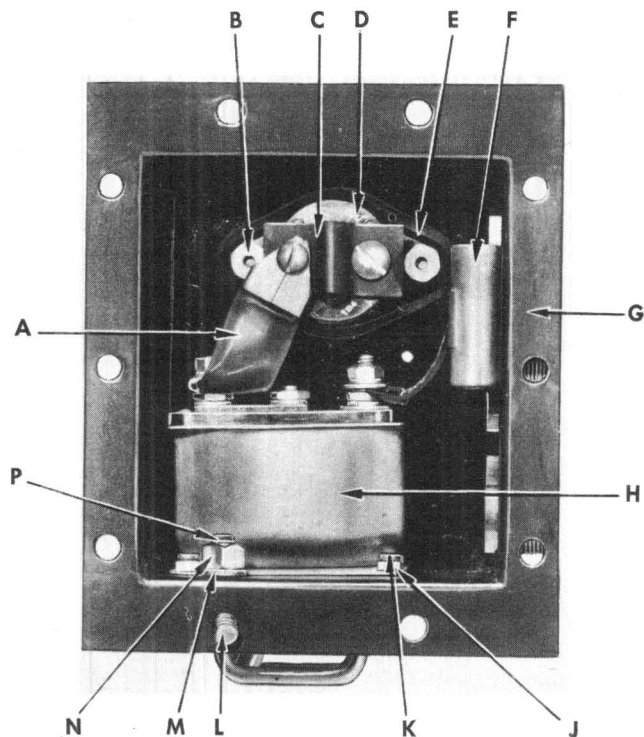

KEY	PART NAME	PART No.	GROUP
A	STRAP.....	CHB-AT1072...	0613E
B	NUT.....	BBKX2CA-1....	0613E
C	INSULATOR.....	CHB-AT1089....	6130E
D	BREAKER.....	CHB-XAT107....	0613E
E	DIAPHRAGM.....	CHB-AT1023....	0613E
F	CONDENSER.....	A293761.....	0613E
G	BOX.....	CHB-AAT4012...	0613E
H	SWITCH.....	CHB-XAT108....	0613E
J	NUT.....	BBKX2BA-1....	0613E
K	SCREW.....	BCKX1FG-1....	0613E
L	SCREW.....	BCBX5BB-1....	0613E
M	WASHER.....	BECC1K-1.....	0613E
N	NUT.....	BBBX1C-1.....	0613E
P	SCREW.....	BCBX1CC-1....	0613E


FIGURE 06-53—MASTER SWITCH BOX ASSEMBLY—COVER REMOVED (MK I; LVT (A) (1) ONLY)

RA PD 341132

0613E

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0613E—MASTER SWITCH (Mk I; LVT (A) (1) ONLY) (Contd)	
06-53	G168-7035342		CHB-XAT108	SWITCH, turret master switch box	1
06-53	H001-4135621	BBKX2BA-1		NUT, machine screw, hex., S., cd-pltd., No. 8 (0.164)-32NC-2	4
06-53	H001-5087951	BCKX1FG-1	GM-133491	SCREW, machine, fl.-hd., S., cd-pltd., No. 8 (0.164)-32NC-2 x 1/2	4
			CHB-AT1061-3	WASHER, turret master switch box bushing (fibre)	3
				0613F—WIRING AND CONNECTIONS (Mk I; LVT (A) (1) ONLY)	
	G168-7035318		CHB-AT1085	BOOT, turret conduit connector, upper and lower	2
	G103-1540059	A266323		BUSHING, turret dome light and firing switch conduit	2
	G104-0502190	A213567A		NUT, br., hex., 11/16-24NF-2	2
19-35	G168-7035332		CHB-AT1071	CABLE, ground, turret (motor to slip ring and slip ring to hull)	2
	G168-7039410		FOM-70X1038E-17	CABLE, radio junction box to slip ring (shielded, 9 ft. 8 in. long)	1
	G168-7039413		FOM-70X1038E-20	CABLE, slip ring to control tunnel junction box (shielded, 5 ft. 7 1/2 in. long)	1
	G168-7039412		FOM-70X1038E-19	CABLE, slip ring to intercommunication speaker junction box (shielded, 6 ft. 7 1/4 in. long)	1
	G038-0116580		GM-5276385	CLEAT, turret conduit	1
	G103-1538111	A265718	GM-5276304	CLEAT, turret conduit, 11/32 (S., 3/4 wide, 13/32 hole)	2
	G103-1538108	A265712	GM-5276386	CLEAT, turret conduit, 13/32 (S., 3/4 wide, 13/32 hole)	3
	G103-1538115	A265892	GM-5276307	CLEAT, turret conduit, 17/32 (S., 3/4 wide, 9/32 hole, 7/8 long)	1
	G103-1538125	A266165	GM-5276653	CLEAT, turret conduit, 17/32 (S., 3/4 wide, 9/32 hole, 1 1/8 in. long)	2
	G103-1538110	A265715	GM-5276305	CLEAT, turret conduit, 17/32 (S., 3/4 wide, 13/32 hole)	4
	G103-1538112	A265719	GM-5276311	CLEAT, turret conduit, 25/32 (S., 3/4 wide, 13/32 hole)	5
	G168-7035323		CHB-AT2035	CONDUIT, turret dome light, assembly	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher; hex.-hd., S., cd-pltd., 3/8-24NF-2 x 5/8	2
	G168-7035321		CHB-AT2033	CONDUIT, turret firing and traverse control switch, assembly	1
	G168-7035322		CHB-AT3034	CONDUIT, turret, lower, assembly	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex.-hd., S., cd-pltd., 3/8-24NF-2 x 5/8	2
06-55	G168-7035324		CHB-AT2036	CONDUIT, turret motor to master switch, assembly	1
06-55	G168-7035322		CHB-AT2034	CONDUIT, turret slip ring to master switch, assembly	1
19-2,3	G168-7035326		CHB-AT4020	CONDUIT, turret, upper, assembly	1
	H001-4027501	BBBX1A-1		NUT, regular, hex., s-fin., S., cd-pltd., 1/4-28NF-2	2
	H001-5418301	BCBX5BA-1	GM-123435	SCREW, cap, hex.-hd., S., cd-pltd., 1/4-28NF-2 x 5/8	2
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex.-hd., S., cd-pltd., 3/8-24NF-2 x 5/8	6
	H001-7021741	BEAX1H-1		WASHER, lock, internal teeth, reg., S., cd-pltd., 1/4 in.	2
	G214-7036207		CHB-AAT2047	GUARD, conduit, turret right seat post	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex.-hd., S., cd-pltd., 3/8-24NF-2 x 5/8	2

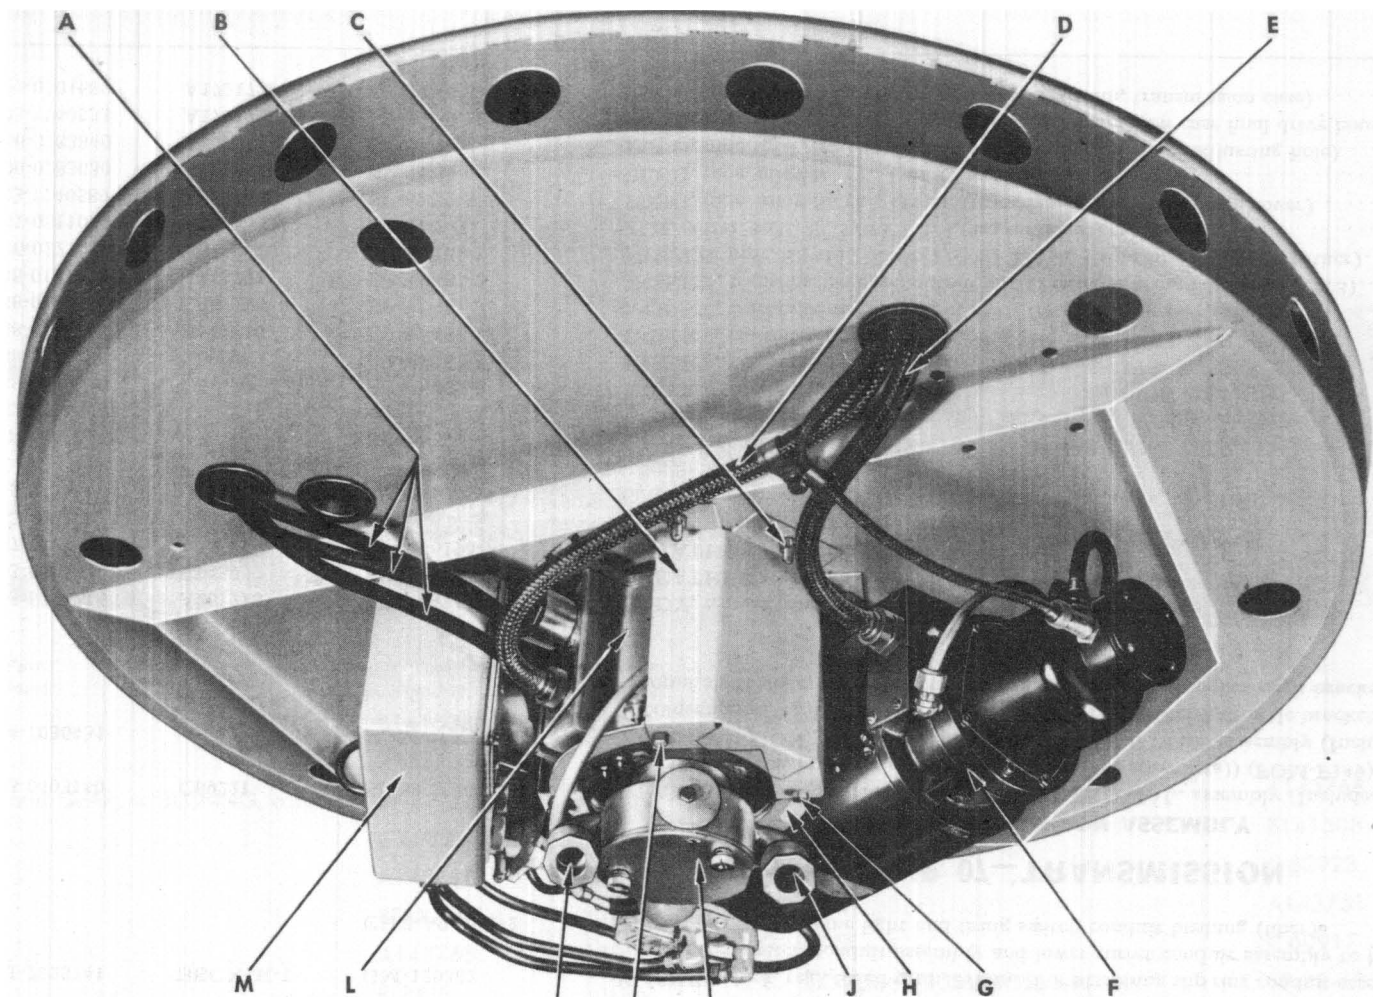

KEY PART NAME	PART No.	GROUP
A TUBES.....	1903G	
B SUPPORT.....	CHB-AT3028	.0613B
C BOLT.....	A266058	.0613B
D CONDUIT, ASS'Y.....	CHB-AT2034	.0613B
E CONDUIT, ASS'Y.....	CHB-AT2036	.0613B
F MOTOR W/PUMP, ASS'Y	CHB-XAT101	.1903E

J G K

KEY PART NAME	PART No.	GROUP
G SCREW.....	BCBX1CA	.0613B
H SEGMENT.....	CHB-AT1108	.0613B
J BUSHING.....	BKE-CR200	.0613B
K COVER, ASS'Y.....	C105826	.0613B
L HOOD.....	B243750	.0613B
M OIL POT, ASS'Y.....	D59738	.1903F


FIGURE 06-54—SLIP RING AND ELECTRICAL CONDUITS—INSTALLED VIEW (MK I; LVT (A) (1) ONLY)

RA PD 341133

0613F

GROUP 06—ELECTRICAL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-5027111	BCBX1CA-1	CHB-XAT505	0613F—WIRING AND CONNECTIONS (Mk I; LVT (A) (1) ONLY) (Contd) SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4 (For attaching slip ring conduit assembly motor to master switch conduit assembly and lower turret conduit assembly to basket).....	1
	H001-7025741	BECX1K-1	GM-120382	WASHER, lock, reg., S., cd-pltd., 3/8 in. (For attaching slip ring conduit assembly, motor to master switch conduit assembly and lower turret conduit assembly to basket).....	1
			CHB-AT1061-2	WASHER, turret dome light and firing switch conduit bushing (fiber).....	2
				GROUP 07—TRANSMISSION	
				0700—TRANSMISSION ASSEMBLY	
07-1	G103-0403140	C69221	SP-89-3680	TRANSMISSION, synchro-mesh, w/DIFFERENTIAL, assembly (Includes: gearshift lever, brake levers, and final drive (less sprockets)) (FOM-P149).....	1
F,M,	G214-7036431		FOM-41X1062E	TRANSMISSION, synchro-mesh, w/HAND THROTTLE, assembly (Includes: transmission w/differential assembly, hand throttle, hand throttle bracket, input shaft yoke, transmission mounting yokes, and propeller shaft bracket).....	1
				0701—CASE	
07-1	G103-5261216	A261216	SP-89-415-2	BODY, transmission case final drive housing breather.....	2
	G103-0111670	B143957	SP-89-5740-X	BREATHER, transmission case, assembly (in hand hole cover).....	1
	G167-0125892	A261215	SP-89-6190-X	BREATHER, transmission case final drive housing assembly.....	2
	G103-5261217	A261217	SP-89-427-5	CAP, transmission case final drive housing breather.....	2
	G103-2131617		SP-89-5901-X	CASE, transmission, w/COVERS, assembly (Includes: case w/inserts assembly, and all caps and covers).....	1
07-1	8080-89-5902-X		SP-89-5902-X	CASE, transmission, w/INSERTS, assembly (Includes: differential hub bearing, caps, transmission rear cover, shift rod support, bushing, and plugs).....	1
	G038-0131630	D30180	SP-89-487-6	INSERT, transmission case, bevel pinion bearing (WIS-4ES12602).....	1
	G038-0131680	C60946	SP-89-487-5	INSERT, transmission case, differential bearing (WIS-3ES12601).....	2
	G038-0131740	B141526	SP-89-487-12	INSERT, transmission case, first speed gear shaft (WIS-2ES12604).....	1
	G038-0131690	D141524	SP-89-487-3	INSERT, transmission case, input shaft front bearing (WIS-3ES12605).....	1
	G038-0131710	A143791	SP-89-487-2	INSERT, transmission case, output shaft center bearing (WIS-3ES12603).....	1
	H006-0273020	B6498CA	SP-89-102-1	NIPPLE, pipe, S., std., black, 1/4 x 1 1/2 in. (transmission case breather).....	1
	H001-0811055	BFAX1DL	SP-89-7-G	PIN, cotter, split, S., 1/8 x 1 3/4 (transmission case breather).....	1
	G103-1740589	A164342B	SP-89-39-5	PLUG, pipe, alloy-S., ck., 1/4 in. (transmission case hand hole cover).....	1
	H006-0283030	A164342F	SP-89-39-6	PLUG, pipe, alloy-S., ck., 1 in. (transmission case, front).....	2
	H006-0283840	CPMX1AK	SP-89-39-7	PLUG, pipe, M.I., sq-hd., 2 in. (transmission case brake adjusting hole).....	2
	G103-1740533	A172172C	SP-89-39-12	PLUG, pipe, sq-hd., S., magnetic, 1/2 in. (transmission case final drive housing).....	4
	G103-0501680	A172172F	SP-89-39-8	PLUG, pipe, sq-hd., S., magnetic, 1 1/4 in. (drain, transmission case).....	2

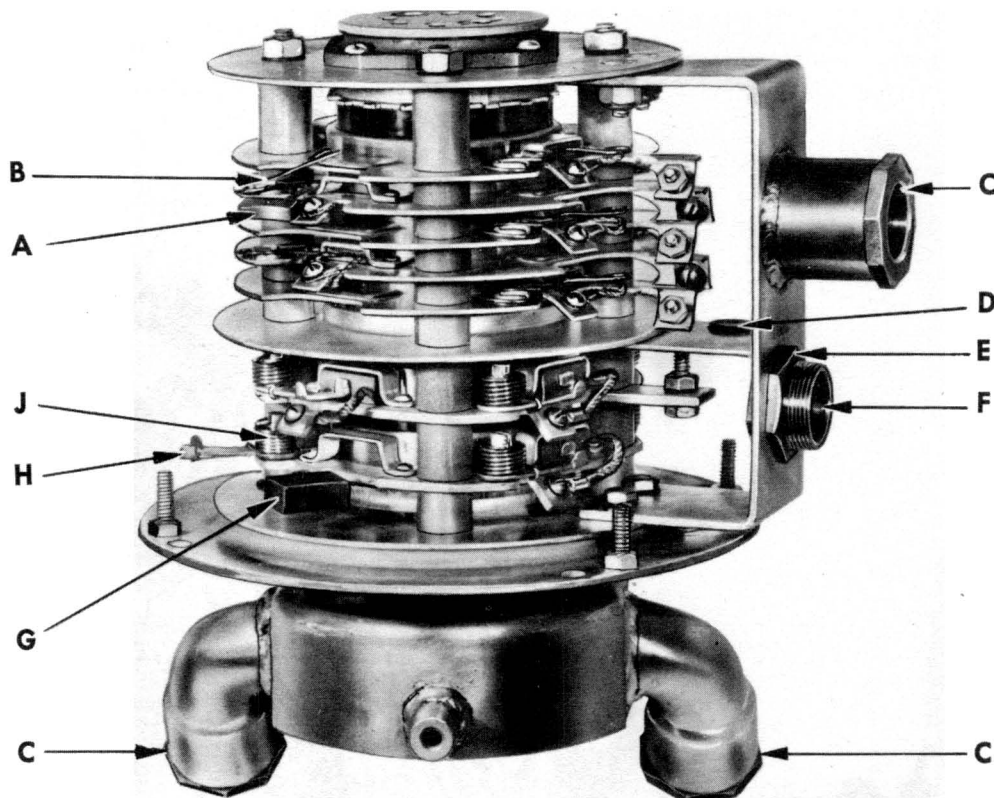

KEY	PART NAME	PART No.	GROUP
A	BRUSH.....	A265482.....	0613B
B	SPRING.....	A265485.....	0613B
C	BUSHING.....	BKE-CR200.....	0613B
D	GROMMET.....	BKE-CR188.....	0613B
E	NUT.....	A213567D.....	0613B

KEY	PART NAME	PART No.	GROUP
F	BUSHING.....	A172174.....	0613B
G	BRUSH.....	A265484.....	0613B
H	ARM, ASS'Y.....	B243757.....	0613B
J	SPRING.....	A265478.....	0613B

RA PD 341134

FIGURE 06-55—SLIP RING ASSEMBLY—HOOD REMOVED (MK I; LVT (A) (1) ONLY)

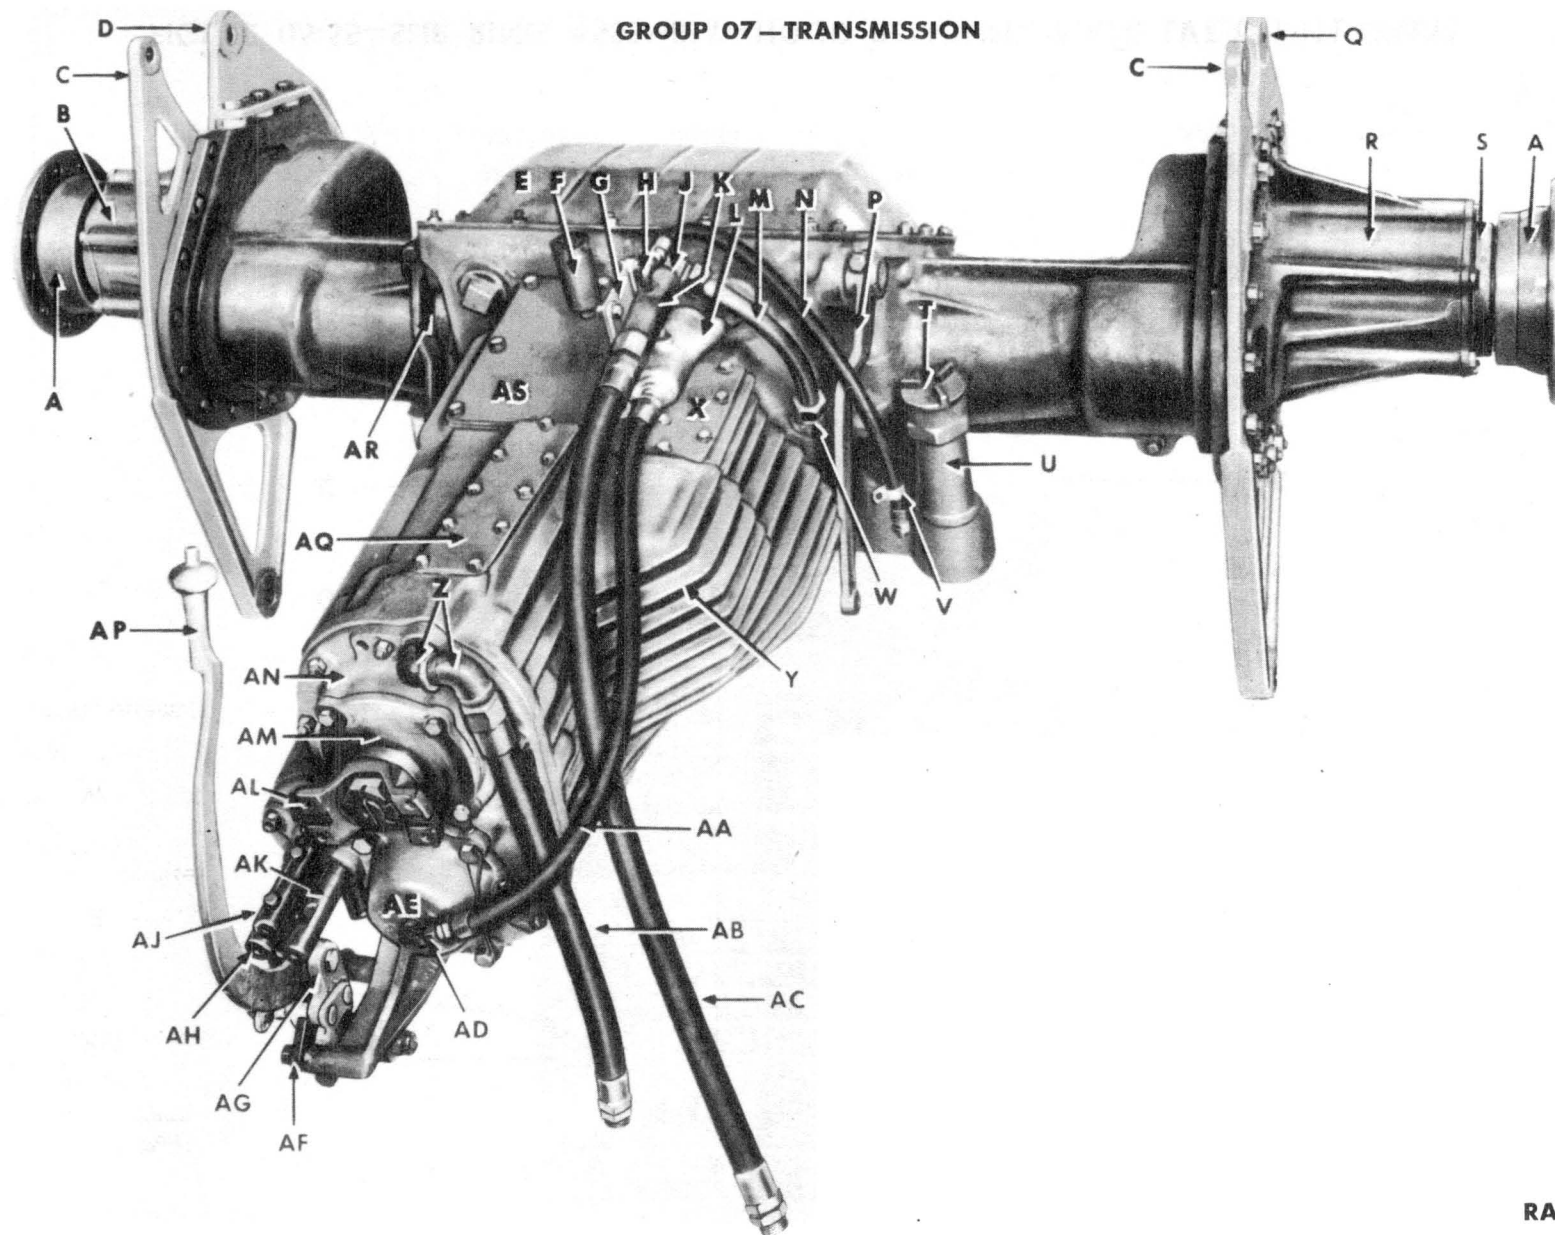


FIGURE 07-1—TRANSMISSION ASSEMBLY AND RELATED PARTS—ASSEMBLED VIEW

RA PD 76356

Key	Part Name	Part Number	Group Number
A	ADAPTER	FOM-4A13C	1008
B	BRACKET	D31689	1008A
C	YOKE	FOM-4X1014C	0713
D	YOKE	FOM-4X1013CL	0713
E	COVER	C60945	0701A
F	BREATHER, assembly	B143957	0701
G	BRACKET	FOM-41X1009B	0709D
H	ELBOW	B7270A	0709D
J	ELBOW	FOM-P326	0709D
K	VALVE, assembly	FOM-41X1007B	0709D
L	STRAINER, assembly	C74536	0709C
M	LINE	FOM-4X1053B	0709D
N	HOSE, assembly	FOM-40X1048B	0709D
P	LEVER	C62973	15A1
Q	YOKE	FOM-4X1013CR	0713
R	BRACKET	D27412	1008A
S	COVER	B132935	1008A
T	GAGE, assembly	B145161	0709B
U	PIPE	B140800	0709D
V	CLIP	FOM-8X1013B	0709D
W	NUT	FOM-P391	0709D
	ELBOW	FOM-4X1008B	0709D
X	COVER	B141517	0701A


Key	Part Name	Part Number	Group Number
Y	CASE, assembly, w/INSERTS	SP-5902-X	0701
Z	ELBOW	B7270E	0709D
AA	HOSE, assembly	FOM-40X1049B	0709D
AB	HOSE, assembly	FOM-40X1051B	0709D
AC	HOSE, assembly	FOM-40X1050B	0709D
AD	ELBOW	B7269B	0709D
	NIPPLE	A155920	0709D
AE	CAP	C68508	0701A
AF	PLATE	B157706	0706A
AG	BLOCK	C68510	0706A
AH	ROD	C60960	0706A
AJ	ROD	C68502	0706B
AK	ROD	C68500	0706B
AL	YOKE	FOM-P106	0703A
AM	CAP	C60931	0701A
AN	COVER	D30177	0701A
AP	LEVER, assembly	FOM-40X1073E	0706A
AQ	COVER	B141534	0701A
AR	LEVER	C60948	15A1
AS	COVER	C60949	0701A

RA PD 76356-C

FIGURE 07-1—TRANSMISSION ASSEMBLY AND RELATED PARTS—ASSEMBLED VIEW

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0701A—COVERS, CAPS, AND GASKETS	
07-1,3	G038-0115030	C60931	SP-89-19-3	CAP, transmission input shaft bearing (WIS-3ES12613).....	1
	G103-0402425	BCAX4AC	SP-89-842-D	SCREW, cap, hex-hd., S., dld. f/lkg-wire., 1/2-13NC-2 x 1 1/4.....	4
	H001-1518011	BE CX1M	SP-89-83-W	WASHER, lock, reg., S., 1/2 in.....	4
07-1	G103-0400380	C68508	SP-89-19-1	CAP, transmission output shaft rear bearing (WIS-3ES14590).....	1
	H001-1031017	BCAX4S	SP-89-849-D	SCREW, cap, hex-hd., S., dld. f/lkg-wire., 1/2-13NC-2 x 1 1/2.....	3
	H001-1031019	BCAX4AD	SP-89-850-D	SCREW, cap, hex-hd., S., dld. f/lkg-wire., 1/2-13NC-2 x 2 1/2.....	1
	H001-1518011	BE CX1M	SP-89-83-W	WASHER, lock, reg., S., 1/2 in.....	4
07-1	G103-0400600	C60945	SP-89-16-10	COVER, transmission case, differential (WIS-3ES12700).....	1
	H001-0725670	BBSX4AD	SP-89-344-J	NUT, safety, S., (elastic stop nut type) 7/16-20NF-3.....	18
	G103-0403060	A172140	SP-89-183-V	STUD, S., 7/16-14NC-5 (27/32) x 7/16-20NF-3 (7/8) x 29/32 in. long (WIS-1ES14767).....	18
	H001-1530010	BE BX1L		WASHER, plain, S., SAE std., 7/16 in.....	13
07-1	G038-0120490	C60949	SP-89-96-1	COVER, transmission case, hand hole (WIS-3ES12703).....	1
	H001-1013032	BCAX1CC	SP-104-D	SCREW, cap, hex-hd., S., 3/8-16NC-2 x 1.....	8
	H001-1518009	BE CX1K	SP-1-W	WASHER, lock, reg., S., 3/8 in.....	8
07-1	G038-0120670	B141534	SP-89-96-3	COVER, transmission case, oil return, large (WIS-2ES12717).....	1
	H001-1013017	BCAX1BA	SP-89-1-D	SCREW, cap, hex-hd., S., 5/16-18NC-2 x 3/4.....	9
	H001-1518008	BE CX1H	SP-89-3-W	WASHER, lock, reg., S., 5/16 in.....	9
07-1	G038-0120680	B141517	SP-89-96-2	COVER, transmission case, oil return, small (WIS-2ES12718).....	1
	H001-1013017	BCAX1BA	SP-89-1-D	SCREW, cap, hex-hd., S., 5/16-18NC-2 x 3/4.....	6
	H001-1518008	BE CX1H	SP-89-3-W	WASHER, lock, reg., S., 5/16 in.....	6
07-1	G038-0120870	D30177	SP-89-16-3	COVER, transmission case, rear (WIS-4ES12607).....	1
	H001-0725670	BBSX4AD	SP-89-344-J	NUT, safety, S., (elastic stop nut type) 7/16-20NF-3.....	11
	G038-8809530	A172135	SP-89-161-V	STUD, S., 7/16-14NC-5 (1 1/2) x 7/16-20NF-3 (13/16) x 4 1/4 in. long (WIS-1ES14768).....	11
	G103-0400880	C60938	SP-89-155-4	GASKET, transmission case differential cover (vellumoid, 1/16 in. thk.) (WIS-3ES12702).....	1
	G103-0400960	C60950	SP-89-118-3	GASKET, transmission case hand hole cover (WIS-3ES12704).....	1
	G103-1593670	B141535	SP-89-118-2	GASKET, transmission case large oil return cover (vellumoid, 1/32 in. thk.) (WIS-2ES12719).....	1
	G103-0401140	C60929	SP-89-155-1	GASKET, transmission case rear cover (vellumoid, 1/32 in. thk.) (WIS-3ES12608).....	1
	G103-0401040	B141518	SP-89-118-1	GASKET, transmission case small oil return cover (vellumoid, 1/32 in. thk.) (WIS-2ES12720).....	1
	G103-0400980	A143766	SP-89-223-2	GASKET, transmission input shaft bearing cap (vellumoid, 1/32 in. thk.) (WIS-2ES12617).....	1
	G103-0401100	A143792	SP-89-223-3	GASKET, transmission output shaft rear bearing cap (vellumoid, 1/32 in. thk.) (WIS-2ES12654).....	1
07-3	G103-0402520	B142064	SP-89-463-1	OIL SEAL, transmission input shaft bearing (3 I.D. x 4.010 O.D. x 0.765 in. thk.) (WIS-1ES12783).....	1
	G038-0151080	A143784	SP-89-331-SP	PIN, dowel, transmission case rear cover (S., 0.5005 x 1 1/4) (WIS-1ES12634).....	2

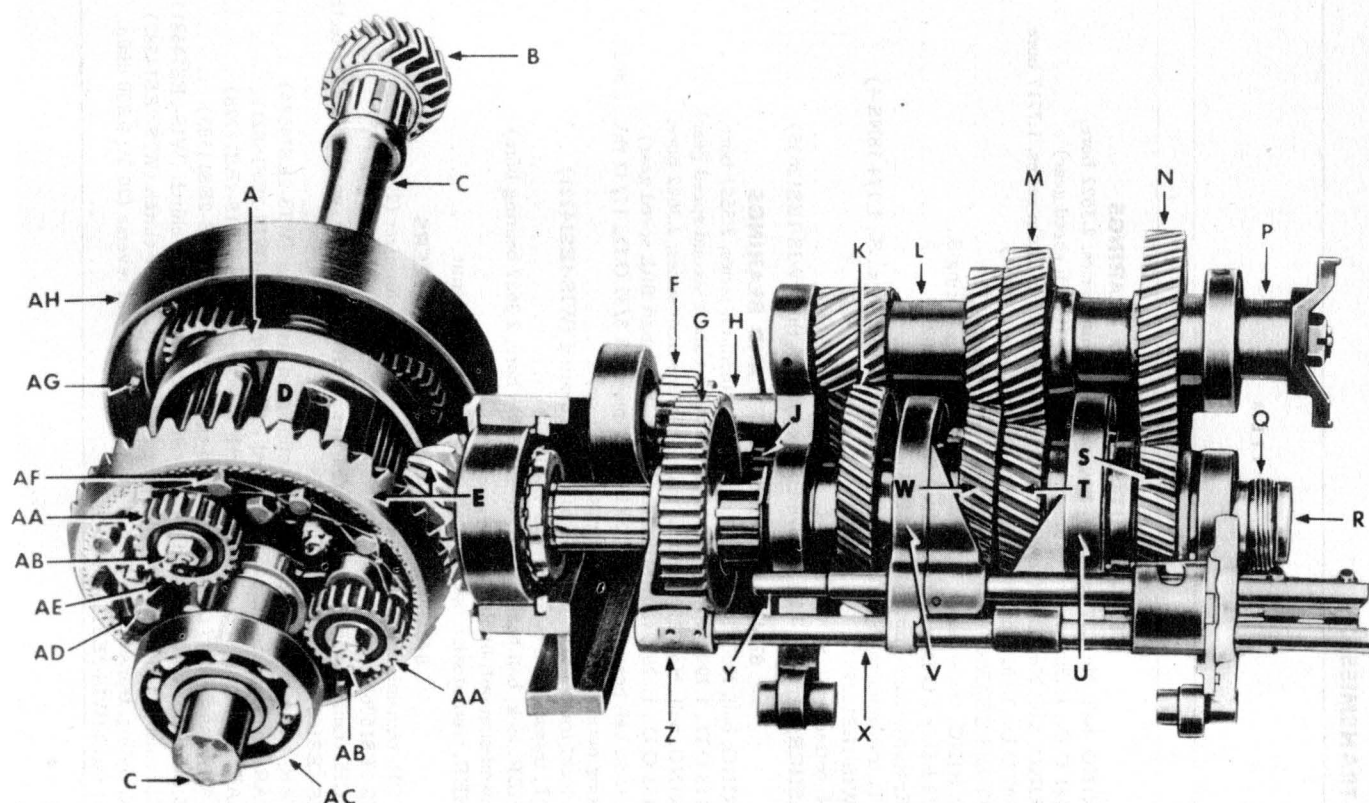

Key	Part Name	Part Number	Group Number
A	COVER	C 60920	1003
B	GEAR	SP-89-8-34	1008A
C	SHAFT	D27413	1008A
D	CASE	C 60917	1003
E	GEAR and PINION, assembly	SP-89-6033-X	1003
F	GEAR	B141510	0704B
G	GEAR	C 60958	0704B
H	SHAFT and GEAR	C 60955	0704C
J	GEAR	C 60954	0704B
K	GEAR	C 68501	0704B
L	SHAFT and GEARS	D32707	0703A
M	GEAR	C 68506	0704B
N	GEAR	C 60944	0704B
P	YOKE	FOM-P106	0703A
Q	GEAR	A158377	0705
R	SHAFT	D34371	0704A
S	GEAR	C 68511	0704B
T	GEAR	C 68503	0704B
U	FORK	C 73338	0706C
V	FORK	C 73337	0706C

Key	Part Name	Part Number	Group Number
W	GEAR	C 68499	0704B
X	ROD	C 60960	0706B
Y	ROD	C 68502	0706B
Z	FORK	C 60919	0706C
AA	PINION	B141509	1003
AB	KEY	A143768	1003
	NUT	A143798	1003
	PIN	BFAX2AA	1003
AC	BEARING	CAAX3AT	1003
AD	BOLT	A143765	1003
	NUT	A143797	1003
	PIN	BFAX2AK	1003
AE	COVER	C 61410	1003
AF	SCREW	A144527	1003
	WIRE	BFWX1B	1003
AG	SCREW	A143752	1009
	NUT	BBFX1E	1009
	PIN	BFAX1CR	1009
AH	RIM	C 60924	1009


RA PD 337694

FIGURE 07-2—TRANSMISSION INTERNAL MECHANISM—ASSEMBLED VIEW

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0703A—INPUT SHAFT AND BEARINGS	
07-3	H012-1400060	CAAX3AP	SP-89-76-1	BEARING, ball, No. 312 (annular, single row, medium series, 2.3622 bore, 5.1181 O.D., 1.2205 width) (transmission input shaft fifth speed gear).....	1
07-3	H012-1700045	CABX3AL	SP-89-76-7	BEARING, ball, No. 5309 (annular, double row, regular medium series, 1.7717 bore, 3.9307 O.D., 1.5625 width) (transmission input shaft, front).....	1
07-2,3	G103-0402580	D32707	SP-89-30-1	SHAFT and GEARS, transmission input (WIS-4ES15087).....	1
07-3	G103-0402280	A143795	SP-89-381-3	SNAP RING, transmission input shaft front bearing (spring-S., 1 5/8 I.D. x 2 O.D. x 0.064 in. thk.) (WIS-1ES12621).....	1
07-1,3	G167-0482432		FOM-P106	YOKE, transmission input shaft (MJ-6506J).....	1
07-3	G103-0401800	A143813	SP-89-350-J	NUT, transmission input shaft yoke (special, slotted, hex., S., 1 1/4-18NS-4) (WIS-1ES16278).....	1
07-3	H001-0811058	BFAX1DX	SP-89-30-G	PIN, cotter, split, S., 1/8 x 2 1/2.....	1
07-3	G038-0179490	A130413	SP-89-184-W	WASHER, S., 19/32 I.D. x 2 3/8 O.D. x 3/16 in. thk. (WIS-1ES12635).....	1
				0704A—OUTPUT SHAFT AND BEARINGS	
07-4	H012-1400065	CAAX3AQ	SP-89-76-2	BEARING, ball, No. 313 (annular, single row, medium series, 2.5591 bore, 5.5118 O.D., 1.2992 width) (transmission output shaft second speed gear).....	1
07-4	H012-1400060	CAAX3AP	SP-89-76-1	BEARING, ball, No. 312 (annular, single row, medium series, 2.3622 bore, 5.1181 O.D., 1.2205 width) (transmission output shaft fifth speed gear).....	1
07-4	G103-0401840	BBRX1AP	SP-89-357-J	NUT, lock, ball bearing, No. N-12 (18 thds. per in. 3 5/32 O.D., 17/32 thk., 2.3622 bearing bore) (transmission output shaft, rear).....	1
07-4	G103-0401820	A170352	SP-89-351-J	NUT, lock, transmission output shaft center bearing (WIS-1ES14221).....	1
07-2,4	G103-0402640	D34371	SP-89-362-1	SHAFT, transmission output (WIS-4ES14208).....	1
07-4	M005-0259100	BEFX1AP	SP-89-275-W	WASHER, lock, ball bearing, No. W-12 (2-406 bore, 2.3622 bearing bore) (transmission output shaft, rear).....	1
07-4	G103-0403420	A188188	SP-89-704-W	WASHER, transmission output shaft center bearing lock nut.....	1
				0704B—GEARS AND SYNCHRONIZERS	
07-6	G103-0400420	C73100	SP-89-465-2	CLUTCH, transmission second and third speed gear synchronizer (22 teeth) (WIS-3ES16062).....	1
07-6	G103-0400560	C73099	SP-89-465-1	CLUTCH, transmission output shaft fourth and fifth speed gear synchronizer (17 teeth) (WIS-3ES16063).....	1
07-5	G103-0400460	B157705	SP-89-37-2	COLLAR, transmission output shaft second speed gear roller (WIS-2ES14584).....	1
07-5	G103-0400480	B157939	SP-89-37-4	COLLAR, transmission output shaft third speed gear roller (WIS-2ES14821).....	1
07-5	G103-0400500	B155703	SP-89-37-1	COLLAR, transmission output shaft fourth speed gear roller (WIS-2ES14228).....	1
07-5	G103-0400520	B157711	SP-89-37-3	COLLAR, transmission output shaft fifth speed gear roller (WIS-2ES14583).....	1
07-6	G103-0400540	B157708	SP-89-494-2	CONE, transmission second and third speed gear synchronizer clutch (WIS-2ES14581)....	2
07-6	G103-0400560	B157707	SP-89-494-1	CONE, transmission fourth and fifth speed gear synchronizer clutch (WIS-2ES14582)....	2
07-2,4	G103-0401160	C60958	SP-89-8-3	GEAR, sliding, transmission output shaft, first speed and reverse (20 T., 9.300 diam., 1.661 face) (WIS-3ES12640).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-2	G103-0401180	C60954	SP-89-8-5	GEAR, transmission, first speed (26 teeth, 4.667 O.D., 1.473 face, and 30 T., 5.333 O.D., 1.567 face) (WIS-3ES12663).....	1
07-2,3	G103-0401280	C68506	SP-89-196-3	GEAR, transmission input shaft, fourth speed (34 T., 6.559 O.D., 1.505 face) (WIS-3ES14586).....	1
07-2,3	G103-0401320	C60944	SP-89-196-1	GEAR, transmission input shaft, fifth speed (42 teeth, 7.813 O.D., 1.38 face) (WIS-3ES12618).....	1
07-4	G103-0401300	B157702	SP-89-466-1	GEAR, transmission output shaft second and third speed clutch (22 T., 3.8295 O.D., 2.690 face, and 17 T., 2.588 I.D.) (WIS-2ES14217).....	1
07-2,4,5	G103-0401200	C68501	SP-89-8-7	GEAR, transmission output shaft, second speed (48 T., 9.902 O.D., and 36 T., 4 5/16 I.D.) (WIS-3ES14585).....	1
07-2,4,5	G103-0401220	C68499	SP-89-8-9	GEAR, transmission output shaft, third speed (43 T., 8.554 O.D.) (WIS-3ES14592).....	1
07-2,4,5	G103-0401240	C68503	SP-89-8-11	GEAR, transmission output shaft, fourth speed (37 T., 7.108 O.D., 1.505 face) (WIS-3ES14595).....	1
07-2,4,5	G103-0401260	C68511	SP-89-8-13	GEAR, transmission output shaft, fifth speed (31 T., 5.854 O.D., 1.380 face) (WIS-3ES14589).....	1

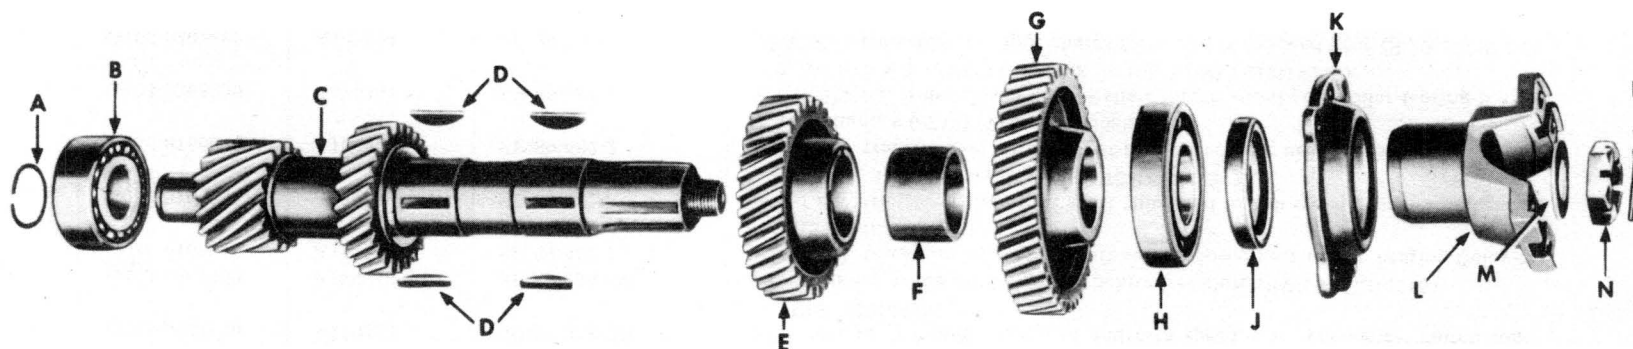

Key	Part Name	Part Number	Group Number
A	SNAP RING.....	A143795	0703A
B	BEARING.....	CABX3AL	0703A
C	SHAFT and GEARS.....	D32707	0703A
D	KEY.....	BGAX3H	0704B
E	GEAR.....	C 68506	0704B
F	SPACER.....	A143794	0704B
G	GEAR.....	C 60944	0704B

Key	Part Name	Part Number	Group Number
H	BEARING.....	CAAX3AP	0703A
J	OIL SEAL.....	B142064	0701A
K	CAP.....	C 60931	0701A
L	YOKE.....	FOM-P106	0703A
M	WASHER.....	A130413	0703A
N	NUT.....	A143813	0703A
P	PIN.....	BFAX1DX	0703A

FIGURE 07-3—TRANSMISSION INPUT SHAFT, GEARS, AND BEARINGS—EXPLODED VIEW


RA PD 76344

0704B

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0704B—GEARS AND SYNCHRONIZERS (Contd)	
07-2,7	G103-0401400 H001-0518066	B141510 BGAX3H	SP-89-5-1 SP-89-210-1	GEAR, transmission, reverse idler (20 T., 3.667 O.D., 1.567 face) (WIS-3ES12659).....	1
				KEY, Woodruff, S., 3/8 x 2 3/4 (No. TX) (transmission input shaft, fourth speed gear).....	2
07-3	H001-0518066	BGAX3H	SP-89-210-1	KEY, Woodruff, S., 3/8 x 2 3/4 (No. TX) (transmission input shaft, fifth speed gear)...	2
07-6	G103-0402000	A170340	SP-89-339-SP	PIN, locking, transmission second and third speed gear synchronizer clutch cone (WIS-1ES14580).....	6
07-6	G103-0401980	A170333	SP-89-338-SP	PIN, locking transmission fourth and fifth speed gear synchronizer clutch cone (WIS-1ES14579).....	6
07-6	G103-0401960	A170338	SP-89-336-SP	PIN, locking, transmission gear synchronizer clutch (WIS-1ES14216).....	12
07-4,5	G038-0166010	A164556	SP-89-482-1	ROLLER, transmission output shaft second speed gear needle bearing (alloy-S., 3/16 diam. x 1) (WIS-1ES13726).....	112
07-4,5	G038-0166035	A170349	SP-89-482-3	ROLLER, transmission output shaft third and fourth speed gear needle bearing (alloy-S., 3/16 diam. x 1 3/8) (WIS-1ES14234).....	112
07-5	G038-0166020	A164557	SP-89-482-2	ROLLER, transmission output shaft fifth speed gear needle bearing (alloy-S., 3/16 diam. x 0.745) (WIS-1ES13688).....	100
07-4	G103-0303280	A170341	SP-89-381-4	SNAP RING, transmission output shaft fourth speed gear collar (spring-S., 2 3/4 I.D. x 3 1/8 O.D. x 0.158 in. thk.) (WIS-1ES14229).....	1
07-3	G103-0402860	A143794	SP-89-37-5	SPACER, transmission input shaft fourth and fifth speed gear (S., 2 17/32 I.D. x 3 O.D. x 2.065 in. thk., chamf., 1/32 x 45 degrees) (WIS-1ES12620).....	1
07-5	G103-0402820	A170342	SP-89-37-6	SPACER, transmission output shaft second speed gear needle bearing (alloy-S., 3 21/64 I.D. x 3.575 O.D. x 0.325 in. thk.) (WIS-1ES14236).....	1
07-5	G103-0402840	A170343	SP-89-37-7	SPACER, transmission output shaft fifth speed gear needle bearing (alloy-S., 2 31/32 I.D. x 3.219 O.D. x 0.273 in. thk.).....	1
07-6	G103-0402960	A170351	SP-89-72-2	SPRING, transmission gear synchronizer clutch locking pin (helical, alloy-S., 7/64 in. stock, 3/16 O.D., 14 coils) (WIS-1ES14298).....	12
07-4	G167-0395099		SP-89-5762-X	SYNCHRONIZER, transmission, second and third speed gear, assembly.....	1
07-4	G167-0395100		SP-89-5763-X	SYNCHRONIZER, transmission fourth and fifth speed gear, assembly.....	1
07-4	G103-0403360	A170348	SP-89-675-W	WASHER, spacing, transmission output shaft third and fourth speed gears (WIS-1ES14227).....	1
	G167-0443029	A193137-3	SP-89-37-19	WASHER, thrust, transmission first speed gear, front.....	1
	G104-0403461	A193137	SP-89-37-18	WASHER, thrust, transmission first speed gear, rear (WIS-1ES18616).....	1
07-4	G103-0403340	A170344	SP-89-678-W	WASHER, thrust, transmission output shaft second speed gear (alloy-S., 2 37/64 I.D. x 4 1/4 O.D. x 0.252 in. thk.) (WIS-1ES14224).....	1
07-4	G103-0403380	A170350	SP-89-677-W	WASHER, thrust, transmission output shaft fifth speed gear (alloy-S., 2 25/64 I.D. x 4 1/16 O.D. x 0.252 in. thk.) (WIS-2ES14230).....	1
				0704C—FIRST SPEED GEAR SHAFT AND REVERSE SHAFT	
07-7	H012-1600060	CABX1AP	SP-89-76-4	BEARING, ball, No. 5212 (annular, double row, regular light series, 2.3622 bore, 4.3307 O.D., 1.4375 width) (transmission reverse shaft, rear).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-7	H012-1700040	CABX3AK	SP-89-76-6	BEARING, ball, No. 5308 (annular, double row, regular medium series, 1.5748 bore, 3.5433 O.D., 1.4375 width) (transmission reverse shaft, front).....	1
	H012-708251	708251	SP-89-76-8	BEARING, roller, cylindrical, no outer or inner race, 1.7500 bore, 3.0000 O.D., 2.500 width (transmission first speed gear) (HY-RA99044 or RO-RA3240).....	2
	G038-0129230	B141525	SP-89-487-1	GUIDE, transmission first speed gear shaft (WIS-2ES12606).....	1
07-7	M005-0101480	BBRX1AK	SP-89-345-J	NUT, lock, ball bearing, No. N-08 (transmission reverse shaft ball bearing).....	1
07-2,7	G103-0169560	C60955	SP-89-496-1	SHAFT and GEAR, transmission, reverse (WIS-3ES12657).....	1
	G103-0402540	A143744	SP-89-187-2	SHAFT, transmission first speed gear (WIS-1ES12664).....	1
07-7	G103-0402300	A143734	SP-89-381-2	SNAP RING, transmission reverse shaft ball bearing (spring-S, 2 7/32 I.D. x 2 19/32 O.D. x 0.095 in. thk.) (WIS-2ES12658).....	1
07-7	M005-0259060	BEFX1AK	SP-89-289-W	WASHER, lock, ball bearing, No. W-08 (1.625 bore, 1.5748 bearing bore) (transmission reverse shaft ball bearing).....	1

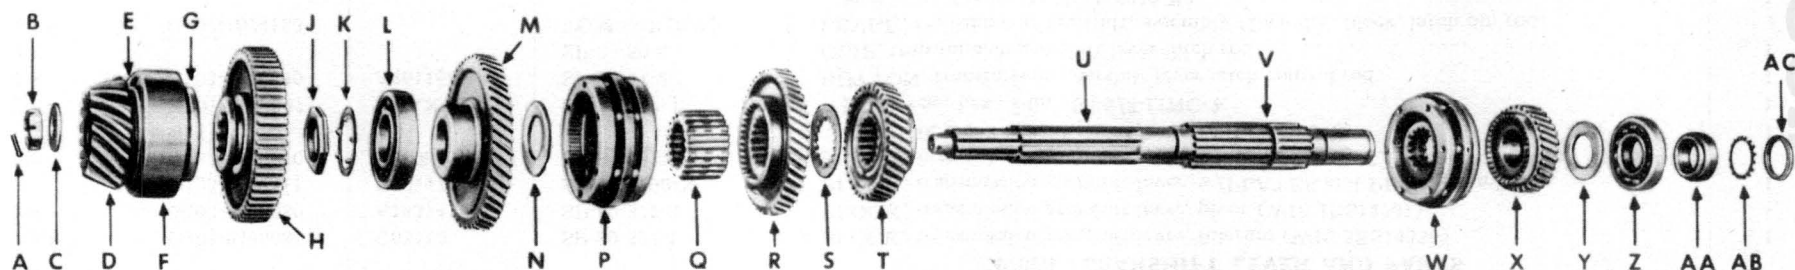

Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	PIN	BFAX2BD	1003	H	GEAR	C 60958	0704B	T	GEAR	C 68503	0704B
B	NUT	A143742	1003	J	NUT	A170352	0704A	T	ROLLER	A170349	0704B
C	WASHER	A143743	1003	K	WASHER	A188188	0704A	U	SHAFT	D34371	0704A
D	PINION (serviced only as part of GEAR and PINION, assembly —SP-89-6033-X)	C 60939		L	BEARING	CAAX3AQ	0704A	V	SNAP RING	A170341	0704B
E	SHIM	B141531A	1003	M	GEAR	C 68501	0704B	W	SYNCHRONIZER, assembly	SP-89-5763-X	0704B
E	SHIM	B141531B	1003	N	WASHER	A170344	0704B	X	GEAR	C 68511	0704B
E	SHIM	B141531C	1003	P	SYNCHRONIZER, assembly	SP-89-5762-X	0704B	Y	WASHER	A170350	0704B
F	BEARING	CABX1AX	1003	Q	GEAR	B157702	0704B	Z	BEARING	CAAX3AP	0704A
G	NUT	BBRX1AX	1003	R	GEAR	C 68499	0704B	AA	GEAR	A158377	0705
G	WASHER	BEFX1AX	1003	S	WASHER	A170348	0704B	AB	WASHER	BEFX1AP	0704A
								AC	NUT	BBRX1AP	0704A


RA PD 341150

FIGURE 07-4—TRANSMISSION OUTPUT SHAFT, GEARS, BEARINGS, AND SYNCHRONIZERS—EXPLODED VIEW

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-2,4	G104-0400310	A143714	SP-89-475-1	0705—SPEEDOMETER DRIVE PARTS	
				BUSHING, speedometer driven gear shaft (S., 0.469 I.D. x 0.6295 O.D. x 19/32 in. thk.) (SW-P34671).....	1
	G103-0107935	A158377	SP-89-453-1	GEAR, speedometer drive, transmission output shaft (spiral, 3 teeth, 3.445 O.D., 3/4 face) (WIS-1ES14840).....	1
	G103-0700120	A172160	SP-89-452-1	GEAR, speedometer, driven (in transmission output shaft rear bearing cap) (spiral, 15 T., 0.889 O.D., 0.565 face) (SW-103305) (WIS-1ES14841).....	1
	G103-0700200	B141505	SP-89-535-1	JOINT, angle, speedometer drive, assembly.....	1
	G104-0401883	B141506	SP-89-454-1	SLEEVE, speedometer driven gear (SW-65950).....	1
	H001-5026131	BCAX1BB	SP-89-2-D	SCREW, cap, hex-hd., S., 5/16-18NC-2 x 7/8.....	2
	H001-7025711	BE CX1H	SP-89-3-W	WASHER, lock, reg., S., 5/16 in.....	2
0706A—GEARSHIFT LEVER AND PARTS					
07-1,8	G103-0400081	C68510	SP-89-527-1	BLOCK, transmission gearshift lever, fulcrum (WIS-3ES14336).....	1
07-8	G103-0400080	A143741	SP-89-527-3	BLOCK, transmission gearshift lever, pivot (WIS-1ES12707).....	1
	G103-1522411	C90147	SP-89-6290-X	BLOCK, transmission gearshift lever, w/PLATES and PINS, assembly.....	1
07-8	G103-0400140	A170346	SP-89-833-D	BOLT, gearshift lever to fulcrum block (hex-hd., alloy-S., 5/8-11NC-3 x 2 5/8, chamf. 1/16) (WIS-1ES14348).....	1
07-8	H001-0718007	BBAX2B	SP-89-342-J	NUT, reg., hex., s-fin., S., 5/8-11NC-2.....	1
07-8	G103-0400340	A261168	SP-89-47-2	BUTTON, transmission gearshift lever latch control rod.....	1
07-8			SP-89-69-6	CLIP, transmission gearshift lever latch rod.....	1
07-1,8	G103-1674153		FOM-40X1073E	LEVER, transmission gearshift, assembly (Includes: block, latch pin rod, button, and spring) (SP-89-6259-X).....	1
	8080-896258		SP-89-6258-X	LEVER, transmission gearshift, assembly (Includes: upper and lower shift levers)	
	G103-0438609	A170334	SP-89-335-SP	PIN, locking, gearshift lever block latch plate, collared (WIS-1ES14349).....	1
	G103-1602020	A170345	SP-89-337-SP	PIN, locking, gearshift lever block latch plate, stght. (WIS-1ES14341).....	1
07-1,8	G103-0104485	B157706	SP-89-215-4	PLATE, fulcrum, gearshift lever support (WIS-2ES14591).....	1
07-8	H001-1013702	BCAX1EE	SP-459-D	SCREW, cap, hex-hd., S., 1/2-13NC-2 x 1 1/2.....	2
07-8	H001-7025808	BE CX1M	SP-89-83-W	WASHER, lock, reg., S., 1/2 in.....	2
07-8	G103-0303014	A170347	SP-89-215-3	PLATE, latch, gearshift lever block, long (WIS-1ES14339).....	1
07-8	G103-0303013	A170339	SP-89-215-2	PLATE, latch, gearshift lever block, short (WIS-1ES14340).....	1
07-8	G103-1773232		SP-89-65-13	ROD, latch, transmission gearshift lever.....	1
07-8	H001-0811037	BFAX1CC	SP-89-1-G	PIN, cotter, split, S., 3/32 x 1/2.....	1
07-8	G103-0402460	A143735	SP-89-836-D	SCREW, locking, transmission gearshift lever pivot and fulcrum blocks (special hex-hd., alloy-S., 0.623 diam., 1/2-20NF-2 x 1 23/32) (WIS-1ES12709).....	1
07-8	H001-0713001	BBFX1E	SP-89-354-J	NUT, castle, S., 1/2-20NF-2.....	1
07-8	H001-0811041	BFAX1CR	SP-89-40-G	PIN, cotter, split, S., 3/32 x 1 1/4.....	1
07-8	G103-0402480	A143739	SP-89-837-D	SCREW, transmission gearshift lever pivot block (special, hex-hd., alloy-S., 0.873, 0.625 diam., 5/8-18NF-2 x 7/8) (WIS-1ES12708).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-8	H001-0713003	BBFX2B	SP-89-355-J	NUT, castle, S., 5/8-18NF-2.....	1
07-8	H001-0811053	BFAX1DH	SP-89-4-G	PIN, cotter, split, S., 1/8 x 1 1/4.....	1
07-8	G103-0105704	A261172	SP-89-72-11	SPRING, transmission gearshift lever latch control rod button.....	1
0706B—GEAR SHIFTER RODS AND PARTS					
07-9	H002-0100160	CCAX1F	SP-89-80-1	BALL, chr-alloy-S., grade 2, 7/16 in. (transmission gear shifter rod support, poppet).....	3
07-9	H002-0100220	CCAX1M	SP-89-80-2	BALL, chr-alloy-S., grade 2, 1 in. (transmission gear shifter rod support, interlock).....	1
07-9	G103-0400360	A143782	SP-89-459-1	BUTTON, transmission gear shifter rod support ball (WIS-1846-B-2).....	3
07-9	G103-0400940	A143748	SP-89-223-1	GASKET, transmission gear shifter rod support (vellumoid, 1/32 in. thk.) (WIS-1ES12731).....	1
	G103-0401680	B157704	SP-89-354-1	LUG, transmission second and third speed gearshift rod (WIS-2ES14593).....	1
	H001-0118026	BAOX7CD	SP-89-834-D	BOLT, hex-hd., s-fin., alloy-S., dld. f/lkg-wire., 3/8-24NF-2 x 1 1/4.....	2
	H009-0102230	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 diam.....	as req.
07-9	G103-0402200	A143749	SP-89-835-D	PLUG, transmission gear shifter rod support ball retaining spring (special, 1/2-20NF-2 x 3/8) (WIS-1ES12727).....	3
07-9	H001-1518011	BECX1M	SP-89-83-W	WASHER, lock, reg., S., 1/2 in.....	3
07-1,2,9	G038-0165790	C60960	SP-89-67-1	ROD, shifter, transmission first speed and reverse gear (WIS-3ES12723).....	1
07-1,2,9	G038-0125471	C68502	SP-89-67-2	ROD, shifter, transmission second and third speed gear (WIS-3ES14594).....	1
07-1,9	G103-0402360	C68500	SP-89-67-3	ROD, shifter, transmission fourth and fifth speed gear (WIS-3ES14226).....	1
07-9	G103-0402500	A143761	SP-89-840-D	SCREW, retaining, transmission gear shifter rod support interlock ball (special S., 0.341 diam. x 2 7/8 plain shank, 7/16-14NC-2 threaded head, 3 3/8 over-all) (WIS-1ES12732).....	1

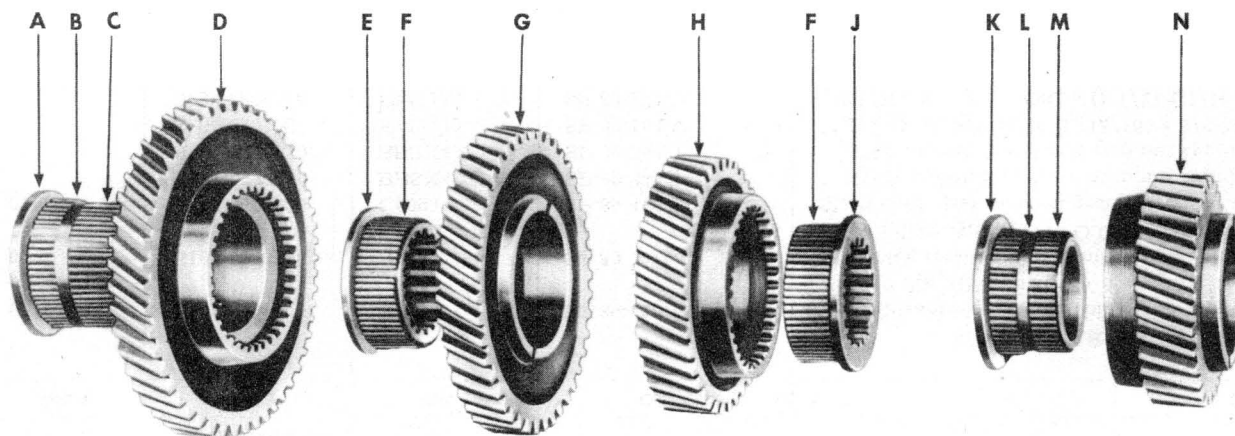

Key	Part Name	Part Number	Group Number
A	COLLAR.....	B157705.....	0704B
B	SPACER.....	A170342.....	0704B
C	ROLLER.....	A164556.....	0704B
D	GEAR.....	C68501.....	0704B
E	COLLAR.....	B157939.....	0704B
F	ROLLER.....	A170349.....	0704B
G	GEAR.....	C68499.....	0704B
H	GEAR.....	C68503.....	0704B
J	COLLAR.....	B155703.....	0704B
K	COLLAR.....	B157711.....	0704B
L	SPACER.....	A170343.....	0704B
M	ROLLER.....	A164557.....	0704B
N	GEAR.....	C68511.....	0704B


RA PD 76292

FIGURE 07-5—TRANSMISSION OUTPUT SHAFT GEARS AND ROLLERS—EXPLODED VIEW

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0706B—GEAR SHIFTER RODS AND PARTS (Contd)	
07-9	G104-0401945		SP-89-228-15	SHIM, transmission gear shifter rod support (S., 4 3/4 x 4 1/2 over-all, 0.010 thk.) (WIS-1ES18625).....	2
07-9	G103-0403000	A143725	SP-89-72-3	SPRING, retaining, transmission gear shifter rod support ball (helical, S., 3/16 diam. stock, 7/16 O.D., 9 coils) (WIS-1ES12726).....	3
07-9	G103-0403120	C60934	SP-89-476-1	SUPPORT, transmission gear shifter rod (WIS-3ES12730).....	1
	H001-0725660	BBSX4AC	SP-89-343-J	NUT, safety, S., (elastic stop nut type) 3/8-24NF-3.....	2
	H001-0725670	BBSX4AD	SP-89-344-J	NUT, safety, S., (elastic stop nut type) 7/16-20NF-3.....	2
	G103-0403061	A172139	SP-89-163-V	STUD, S., 3/8-16NC-5 (13/16) x 3/8-24NF-3 (5/8) x 2 1/2 in. long (WIS-1ES14766)...	2
	G038-8809540	A172138	SP-89-162-V	STUD, S., 7/16-14NC-5 (1 1/2) x 7/16-20NF-3 (13/16) x 7/8 in. long (WIS-1ES14769)	2
				0706C—GEAR SHIFTER FORKS	
07-2,9	G103-0400820	C60919	SP-89-66-1	FORK, shifter, transmission output shaft first speed and reverse gear (WIS-3ES12721)...	1
	G038-0166830	A143772	SP-89-583-D	SCREW, hex-hd., alloy-S., 7/16-14NC-3 (9/16) x 1 9/16 (WIS-1ES12737).....	2
	22W-1642100	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black, anld., 0.0625 diam.....	as req.
07-2,9	G103-0400840	C73337	SP-89-66-3	FORK, shifter, transmission output shaft second and third speed gear (WIS-3ES16060)...	1
07-9	G038-0166830	A143772	SP-89-583-D	SCREW, hex-hd., alloy-S., 7/16-14NC-3 (9/16) x 1 9/16 (WIS-1ES12737).....	2
	22W-1642100	BFWX1B	SP-89-LW-1	WIRE, S., low carbon black anld., 0.0625 diam.	as req.
07-2,9	G103-0400860	C73338	SP-89-66-5	FORK, shifter, transmission output shaft fourth and fifth speed gears (WIS-3ES16061)...	1
	G038-0166830	A143772	SP-89-583-D	SCREW, hex-hd., alloy-S., 7/16-14NC-3 (9/16) x 1 9/16 (WIS-1ES12737).....	2
	22W-1642125	BFWX1B	SP-89-LW-1	WIRE, locking, S., low carbon, black anld., 0.0625 diam.....	as req.
				0709—TRANSMISSION OIL COOLER	
	G214-7036208		FOM-2X1597BL	BRACKET, mounting, oil cooler, lower, left.....	1
	G214-7036209		FOM-2X1597BR	BRACKET, mounting, oil cooler, lower, right.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	4
	H001-1013003	BCAX1AA	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-2 x 3/4.....	4
	H001-1519008	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	4
	G214-7036251		FOM-2X1596BL	BRACKET, mounting, oil cooler, upper, left (Welded to rear bulkhead).....	1
	G214-7036252		FOM-2X1596BR	BRACKET, mounting, oil cooler, upper, right (Welded to rear bulkhead).....	1
	G167-0139945		FOM-P341	COOLER, oil, transmission, assembly (YR-37822-5) (Same as COOLER, oil, engine, assembly).....	1
	G214-7036704		YR-37332	FLANGE, oil cooler, inlet and outlet.....	2
	H001-5025521	BCAX1AA-1		SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-2 x 3/4.....	4
	H001-7025681	BECC1G-1		WASHER, lock, reg., S., cd-pltd., 1/4 in.....	4
	G214-7036705		YR-37422	GASKET, oil cooler, inlet and outlet flange.....	2
	G214-7036706		YR-39630	VALVE, temperature control, oil cooler, assembly.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0709A—TRANSMISSION OIL PUMP	
07-10	G103-1524100	C91535	SP-89-501-7	BODY, transmission oil pump, lower (WIL-ER-3140) (WIS-3ES18659).....	1
07-10	G103-0100510	A231458	SP-89-68-1	BODY, transmission oil pump relief valve (WIL-ER-9361).....	1
07-10	G103-0100533	C91536	SP-89-501-8	BODY, transmission oil pump, upper (WIL-ER-3139) (WIS-3ES18658).....	1
	G103-0401060	B141512	SP-89-223-5	GASKET, transmission oil pump (vellumoid, 1/32 in. thk.) (WIS-1ES12675).....	1
07-10	G103-0102231	A231455	SP-89-747-W	GASKET, transmission oil pump relief valve (cop., 7/8 I.D. x 1 1/8 O.D. x 1/32 in. thk.) (WIL-ER-9387).....	1
07-10	G103-0401501	A231456	SP-89-210-9	KEY, transmission oil pump inner rotor (WIL-ER-9316).....	1
07-10	H001-0811335	BFAX1DA	SP-89-43-G	PIN, cotter, split, S., 1/8 x 1 3/8 (transmission oil pump relief valve).....	1

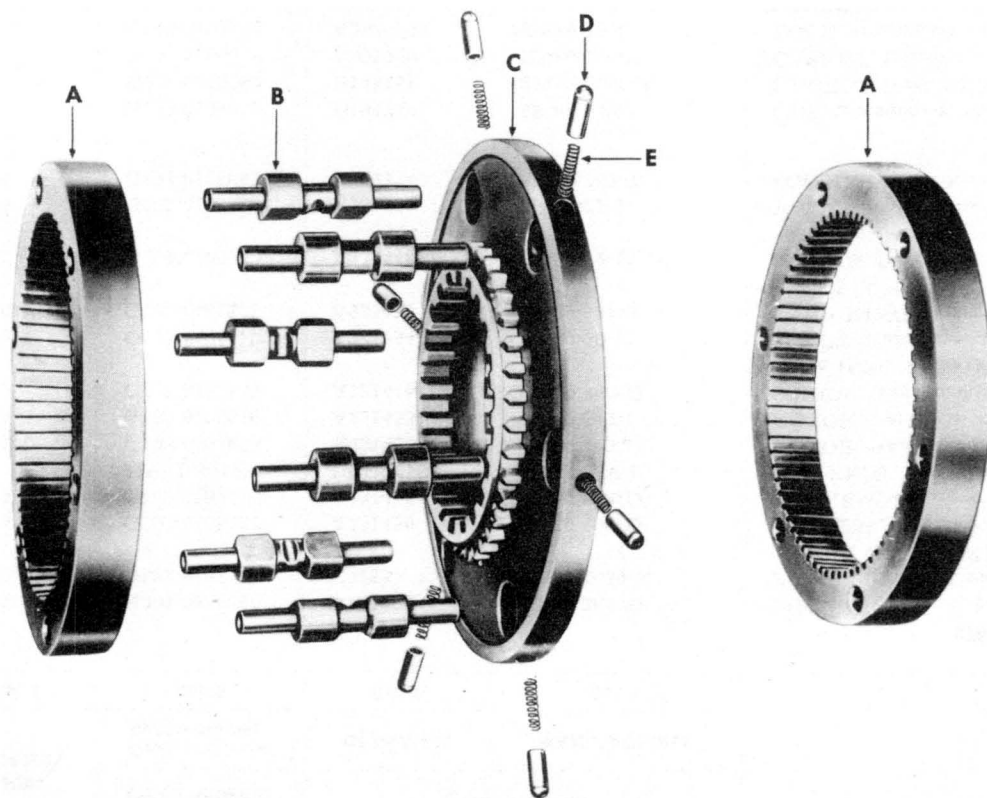

Key	Part Name	Part Number	Group Number
A	CONES (2nd and 3rd).....	B157708.....	0704B
	CONES (4th and 5th).....	B157707.....	0704B
B	PIN (2nd and 3rd).....	A170340.....	0704B
	PIN (4th and 5th).....	A170333.....	0704B
C	CLUTCH (2nd and 3rd).....	C73100.....	0704B
	CLUTCH (4th and 5th).....	C73099.....	0704B
D	PIN.....	A170338.....	0704B
E	SPRING.....	A170351.....	0704B

FIGURE 07-6—TRANSMISSION GEAR SYNCHRONIZER ASSEMBLY—EXPLODED VIEW


RA PD 76297

0709A

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		I T E M	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0709A—TRANSMISSION OIL PUMP (Contd)	
07-10	H001-0830080 G103-0402219	BFDX2AC C91537	SP-89-364-SP SP-89-6059-X	PIN, straight, drill rod, 0.250 x 1 (dowel, transmission oil pump body).....	2
				PUMP, oil, transmission, assembly (Includes: all parts illustrated on plate 07-10 except G, J, and R) (WIS-A3ES18658) (WIL-ER-1219).....	1
07-10	G103-0105137	A231450	SP-89-899-D	SCREW, cap, hex-hd., S., dld. f/lkg-wire., 3/8-16NC-3 x 1 15/16.....	1
07-10	G103-0105136 22W-1642125	A231449 BFWX1B	SP-89-898-D SP-89-LW-1	SCREW, cap, special, hex-hd., S., dld. f/lkg-wire., 1/2-13NC-3 x 2 1/4.....	2
07-10	G103-0505083	A231452	SP-89-543-1	WIRE, S., low carbon, black anld., 0.0625 diam.....	as req.
07-10	G103-0105086	A231453	SP-89-542-1	ROTOR, transmission oil pump, inner (WIL-ER-4206).....	1
07-10	G103-0105135	A231446	SP-89-908-D	ROTOR, transmission oil pump, outer (WIL-ER-4207).....	1
				SCREW, transmission oil pump body (special, cap. hex-hd., S., 3/8-16NC-3 x 1) (WIL-ER-9384).....	1
07-10	G103-0105510	A231454	SP-89-60-10	SHAFT, transmission oil pump rotor (WIL-ER-6118).....	1
07-10	G103-0402275	A231451	SP-89-381-9	SNAP RING, transmission oil pump rotor shaft (S., 0.584 I.D. x 0662 O.D. x 0.095 in. thk.) (WIL-ER-9385).....	2
07-10	G103-0105770	A231448	SP-89-72-10	SPRING, transmission oil pump relief valve (helical, S., 0.090 diam. stock, 0.615 O.D., 6.8 coils).....	1
07-10	G103-0105490	A231457	SP-89-71-2	VALVE, relief, transmission oil pump.....	1
07-10	G103-0106663	A232374	SP-89-768-W	WASHER, transmission oil pump relief valve spring (special, 23/32 O.D.).....	1
				0709B—TRANSMISSION OIL SCREEN	
07-1	G103-0101850	B194783	SP-89-530-2	CUP, transmission oil screen.....	1
	G038-0125580	B145161	SP-89-6106-X	GAGE, oil level, transmission, assembly.....	1
	G103-1594058	A231969	SP-89-759-W	GASKET, transmission oil level gage.....	1
	G103-0103573	A230579	SP-89-75-1	LOCK, transmission oil screen.....	1
	G103-0105089	B195820	SP-89-6136-X	SCREEN, transmission oil, assembly.....	1
	G103-0105635	C91053	SP-89-6063-X	SHROUD, transmission oil screen, assembly.....	1
	G103-0100535	A232252	SP-89-900-D	BOLT, hex-hd., S., shank, dld. f/lkg-wire., 3/8-24NF-3 x 1 3/4, 1/64 shoulder.....	2
	H001-0722030	BBHX2D	SP-89-236-J	NUT, slotted, heavy, S., 3/8-24NF-2.....	2
	G038-0179080	A143767	SP-89-267-W	WASHER, plain, hard-cop., 25/64 I.D. x 5/8 O.D. x 1/16 in. thk.....	2
	G103-0107001	A232254	SP-89-769-W	WASHER, plain, S., 13/32 I.D. x 3/4 O.D. x 1/16 in. thk.....	2
	22W-1642125	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 diam.....	as req.
				0709C—TRANSMISSION OIL STRAINER	
07-11	H002-0100160	CCAX1F		BALL, chr-alloy-S., grade 2, 7/16 in. (transmission oil strainer, by-pass).....	1
07-11	G103-0105100	B141600		GASKET, transmission oil strainer plug.....	2
07-11	G103-0301433	A143889		GASKET, transmission oil strainer screen.....	1
07-11	G104-1617714	C74535		HOUSING, transmission oil strainer.....	1
07-11	G103-0104560	A136001		PLUG, transmission oil strainer by-pass spring (1), transmission oil strainer screen (1)...	2
	22W-1642125	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 diam.....	as req.
07-11	G038-0125890	A136002		SCREEN, transmission oil strainer.....	1


Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-11	G103-0105705	A139812		SPRING, transmission oil strainer, by-pass.....	1
07-1	G103-0403040	C74536	FOM-P203	STRAINER, oil, transmission, assembly.....	1
	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
	H001-5419141	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	2
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2
	H001-1530007	BEBX1G	FOM-P160	WASHER, plain, S., SAE std., 1/4 in.....	2
				0709D—TRANSMISSION OIL PIPING AND PRESSURE REGULATOR	
07-12	G167-0101801		FOM-4X1026A	ADAPTER, transmission oil pressure valve.....	1
07-12	G214-7036253		FOM-4B93A	BAR, plunger, transmission oil pressure valve.....	1
07-12	G214-7036254		FOM-4X1006B	BODY, transmission oil pressure valve.....	1
07-1	G214-7036255		FOM-41X1009B	BRACKET, transmission oil pressure valve and strainer, assembly.....	1
	8080-89-39-17		SP-89-39-17	CAP, transmission case oil filler pipe (Part of GAGE, assembly, B145161—listed in group 0709B).....	1

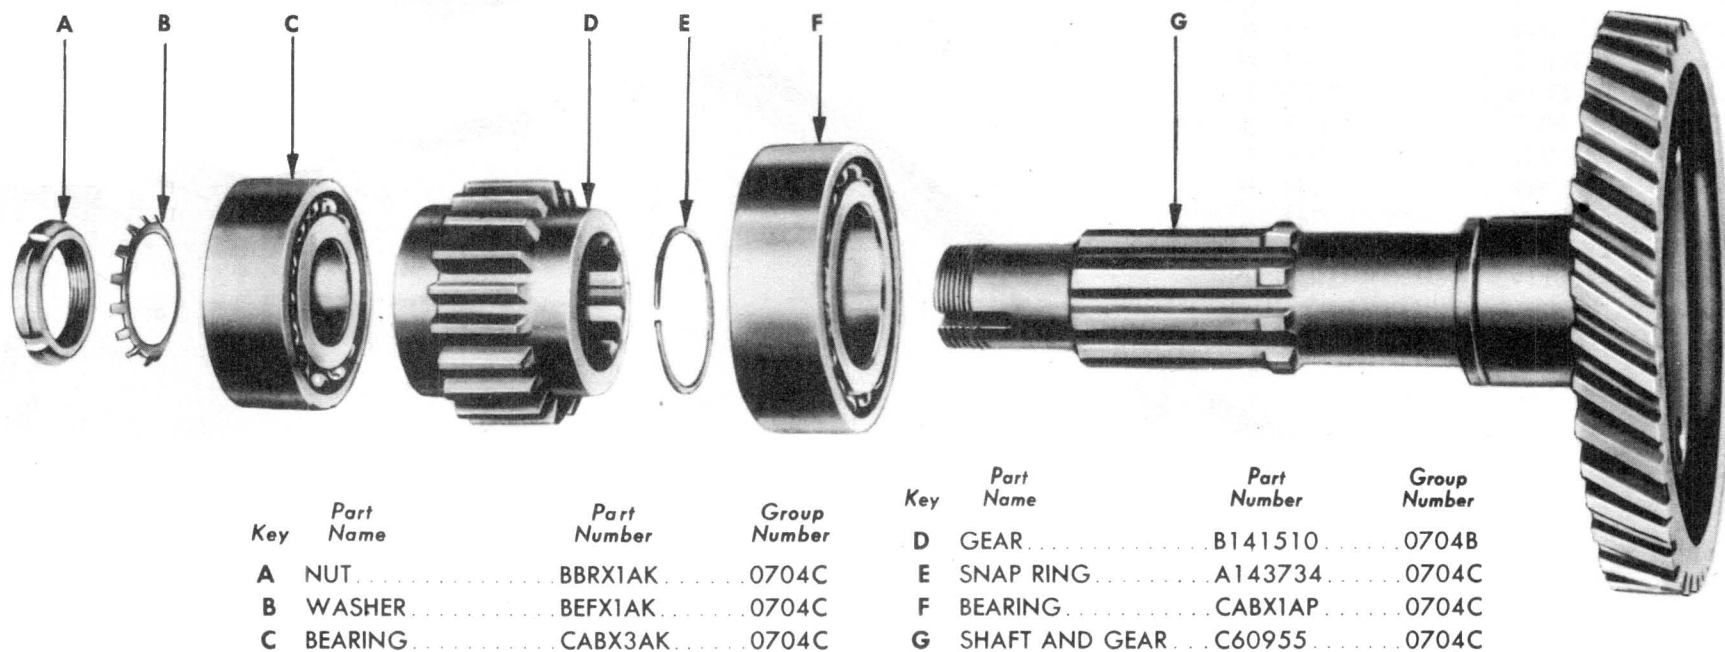

RA PD 76311

FIGURE 07-7—TRANSMISSION REVERSE SHAFT AND GEAR, IDLER GEAR, AND BEARING—EXPLODED VIEW

GROUP 07—TRANSMISSION

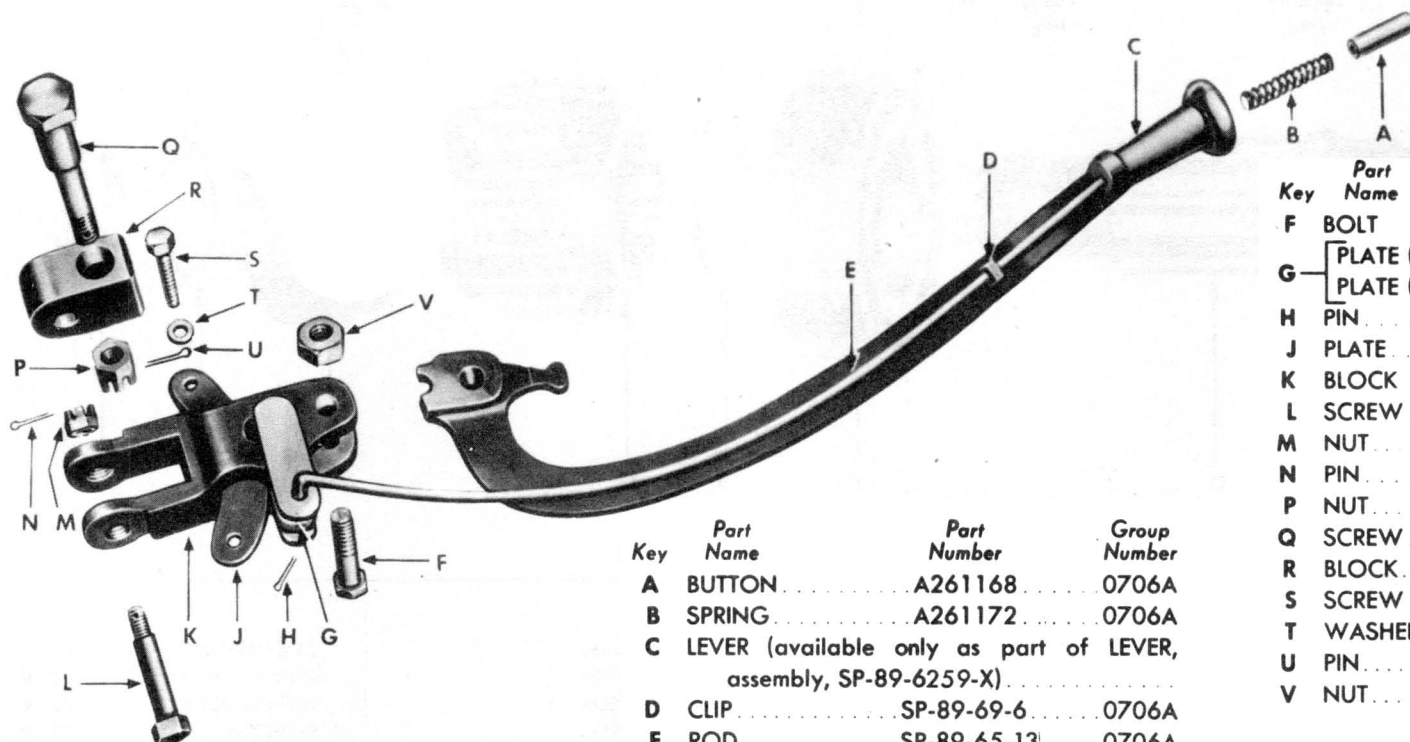

Key	Part Name	Part Number	Group Number
A	BUTTON	A261168	0706A
B	SPRING	A261172	0706A
C	LEVER (available only as part of LEVER, assembly, SP-89-6259-X)		
D	CLIP	SP-89-69-6	0706A
E	ROD	SP-89-65-13	0706A

Key	Part Name	Part Number	Group Number
F	BOLT	A170346	0706A
G	PLATE (long)	A170347	0706A
	PLATE (short)	A170339	0706A
H	PIN	BFAX1CC	0706A
J	PLATE	B157706	0706A
K	BLOCK	C 68510	0706A
L	SCREW	A143735	0706A
M	NUT	BFFX1E	0706A
N	PIN	BFAX1CR	0706A
P	NUT	BBFX2B	0706A
Q	SCREW	A143739	0706A
R	BLOCK	A143741	0706A
S	SCREW	BCAX1EE	0706A
T	WASHER	BECX1M	0706A
U	PIN	BFAX1DH	0706A
V	NUT	BBAX2B	0706A

RA PD 337695

FIGURE 07-8—TRANSMISSION GEAR SHIFT LEVER ASSEMBLY—EXPLODED VIEW

243

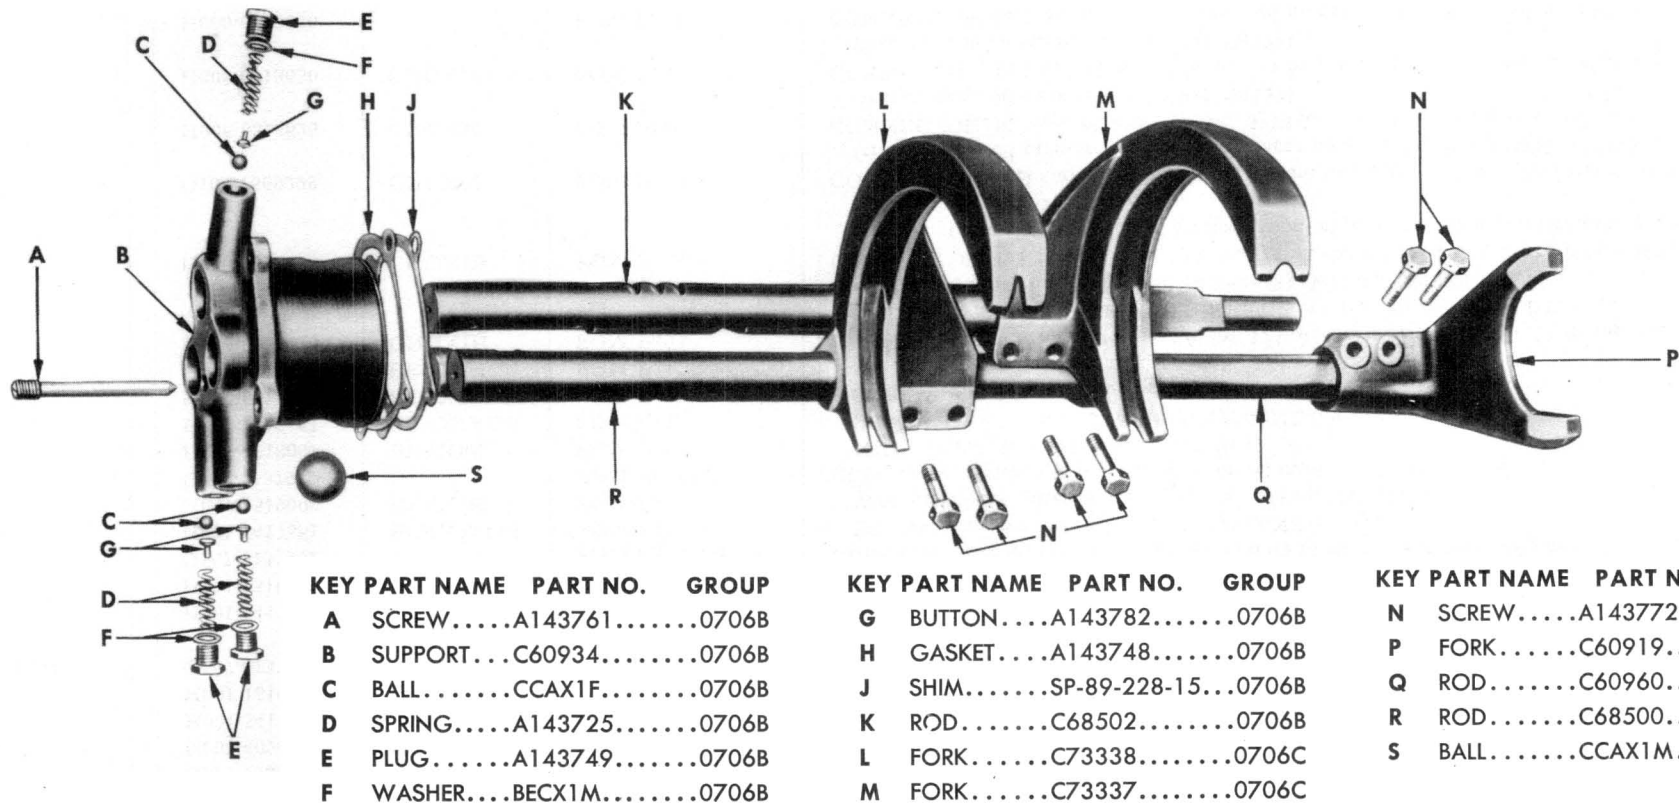


FIGURE 07-9—TRANSMISSION SHIFTER RODS, FORKS, AND SUPPORT—EXPLODED VIEW

RA PD 76310

0709D

GROUP 07—TRANSMISSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-1	G214-7036256		FOM-8X1160B	0709D—TRANSMISSION OIL PIPING AND PRESSURE REGULATOR (Contd)	
	H001-4026501	BBAX1A	FOM-P45	CLAMP, transmission oil cooler intake and return line.....	2
	H001-5417680	BCVX2AL-1	FOM-P189	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
	H001-1519009	BEAX1H	FOM-P24	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1.....	2
	G167-0137988		FOM-8X1013B	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
				CLIP, cable, closed, 3/4 in. (transmission oil pressure valve to instrument panel oil line hose).....	1
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	1
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	1
	G167-0137992		FOM-8X1020B	CLIP, cable, closed, 1/4 in. (transmission hose to instrument panel oil line).....	2
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
	G167-0137989		FOM-8X1014B	CLIP, cable, closed, 7/8 in. (transmission oil intake and return lines).....	16
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	16
	H001-5417561	BCVX2AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	2
	H001-5417680	BCVX2AL-1	FOM-P189	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1.....	14
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	16
	H006-0313120	CNGX1B	FOM-P393	CONNECTOR, fuel and oil hose, 1/4 in., 1/4 in. short, heavy duty, tube fitting end, complete (with nuts and sleeves) (transmission intermediate warm oil lines (2), transmission intermediate cooled oil lines (2) (WH-8305X14C).....	4
	H006-0313120	CNGX1B	FOM-P398	CONNECTOR, fuel and oil hose, 1/4 in., 1/4 in. short, heavy duty, tube fitting end, complete (with nuts and sleeve) (transmission oil pressure valve to instrument panel oil line hose) (WH-281147C).....	1
	G104-1569298	CNGX2AA	FOM-P269	CONNECTOR, fuel and oil hose, 1/4 in., 1/8 in. male pipe end, complete (with nut) (transmission oil pressure valve to instrument panel oil line hose) (WH-281166).....	1
	H006-0314625	CNGX3C	FOM-P166	CONNECTOR, fuel and oil hose, 1/4 in., 5/16 in., tube end, complete (with nut) (transmission oil strainer hose) (WH-281132).....	1
	H006-0313650	CNGX2AC	FOM-P165	CONNECTOR, fuel and oil hose, 3/8 in., 1/4 in. male pipe end, complete (with nut) (transmission oil strainer hose) (WH-281122).....	1
07-1	H006-0313680		FOM-P344	CONNECTOR, fuel and oil hose, 3/4 in., 3/4 in. male pipe end, complete (with nut) (transmission oil intake hose (1), and oil outlet hose (1)) (WH-281125).....	2
	H006-0313180	CNGX3K	FOM-P396	CONNECTOR, fuel and oil hose, 3/4 in., 7/8 in. tube end, complete (with nut) (transmission oil intake hose (1), and oil outlet hose (1)) (WH-281146C).....	2
07-1	H006-0318125	B183358E	FOM-P178	CONNECTOR, tube, heavy duty, short, 3/8 in., 1/4 in. male pipe end, complete (with sleeve) (transmission hose to oil strainer) (WH-8205X6).....	1
	G167-0168000		FOM-4X1008B	ELBOW, reducing, br., 55°, 3/4 x 1/2 in. (transmission oil pump, outlet).....	1
07-1	H006-0264042	B7269B	FOM-P645	ELBOW, stght., br., 90°, 1/4 in. (oil strainer hose to output shaft rear bearing cap).....	1
07-1	G167-0168012	A7270A	FOM-P394	ELBOW, street, br., 90°, 1/8 in. (instrument panel oil line hose to transmission oil pressure valve).....	1

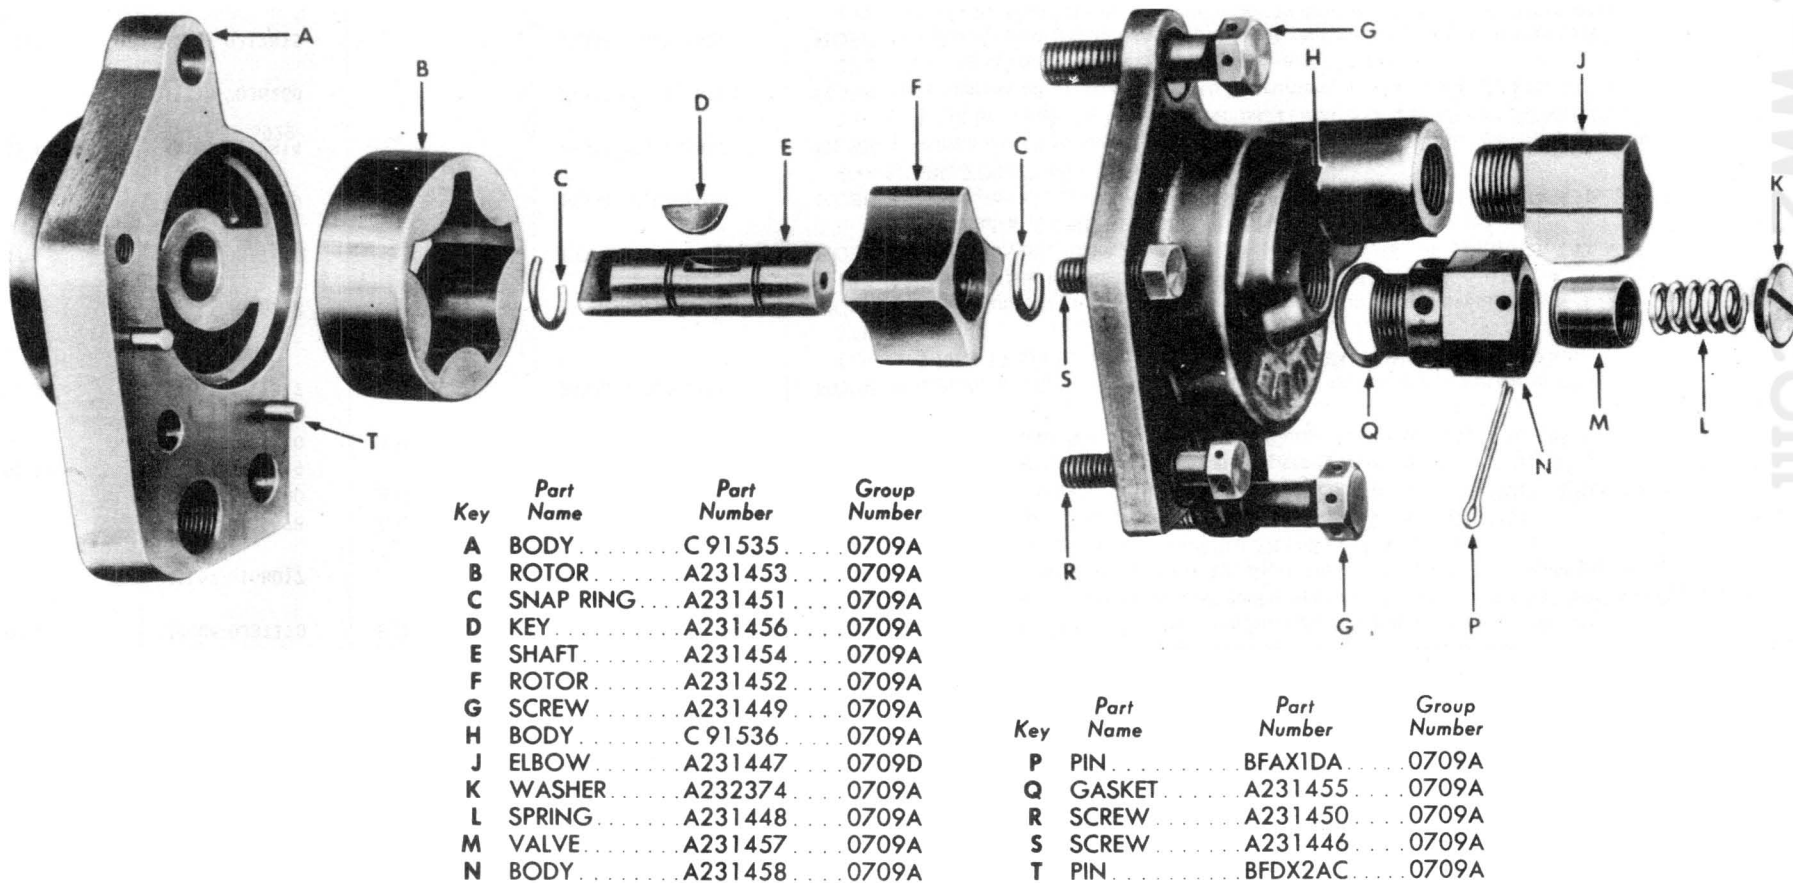



FIGURE 07-10—TRANSMISSION OIL PUMP ASSEMBLY—EXPLODED VIEW

RA PD 76369

0709D

GROUP 07—TRANSMISSION


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				0709D—TRANSMISSION OIL PIPING AND PRESSURE REGULATOR (Contd)	
07-1	H006-0265120	B7270E	FOM-P335	ELBOW, street, br., 90°, 3/4 in. (transmission oil intake hose to rear cover).....	2
07-10	G103-1569100	A231447	SP-89-39-16	ELBOW, transmission oil pump, inlet.....	1
	H006-0329140	A191243L	FOM-P325	ELBOW, tube, heavy duty, short, 90°, 7/8 in., 3/4 in. female pipe end, complete (with sleeve and nut) (transmission oil cooler lower line) (WH-8455X14).....	1
07-1	H006-0331170	B183361L	FOM-P326	ELBOW, tube, heavy duty, short, 90°, 7/8 in., 3/4 in. male pipe end, complete (with sleeve and nut) (transmission oil cooler upper and lower line) (WH-8405X14C)...	4
	G167-0168017		FOM-P329	ELBOW, tube, union, female, heavy duty, short, 90°, 7/8 in., 3/4 in. female pipe end, complete (with sleeves and nuts) (WH8505X14C) (oil cooler upper line).....	1
	G103-5230678	A230678	SP-89-529-2	FLANGE, transmission oil pump intake tube to sump (WIS-1ES18635).....	1
	G103-0401000	A144084	SP-89-223-4	GASKET, transmission case oil filler pipe to case (cop., 0.034 thk.) (WIS-1ES12878)....	1
07-12	G167-0194024		FOM-4B95A	GASKET, transmission oil pressure valve adapter (cop-asbestos, 1/16 in. thk.).....	1
	G103-0102230	A232255	SP-89-480-1	GASKET, transmission oil pump intake tube flange (vellumoid, 1/16 in. thk.) (WIS-1ES18649).....	1
07-1	G167-0217817		FOM-40X1051B	HOSE, transmission oil, intake, assembly (to elbow in transmission rear cover) (3/4 in. I.D. x 19 1/2 in. long) (Includes: CONNECTORS, FOM-P344 and FOM-P396).....	1
	G214-7036258		FOM-40X1051B-1	HOSE, transmission oil, intake (to elbow in transmission rear cover) (3/4 in. I.D. x 19 1/2 in. long) (See HOSE, FOM-P4604, group 2304P).....	1
07-1	G167-0217816		FOM-40X1050B	HOSE, transmission oil, outlet, assembly (from oil pressure valve) (3/4 in. I.D. x 34 in. long) (Includes: CONNECTORS, FOM-P344 and FOM-P396).....	1
	G214-7036259		FOM-40X1050B-1	HOSE, transmission oil, outlet (from oil pressure valve) (3/4 in. I.D. x 34 in. long) (See HOSE, FOM-P4604, group 2304P).....	1
07-1	G167-0217814		FOM-40X1048B	HOSE, transmission oil pressure valve to instrument panel oil line, assembly (1/4 in. I.D. x 24 7/8 in. long) (Includes: CONNECTORS, FOM-P269 and FOM-P398).....	1
	G214-7036260		FOM-40X1048B-1	HOSE, transmission oil pressure valve to instrument panel oil line (1/4 in. I.D. x 22 3/4 in. long) (See HOSE, FOM-P4601, group 2304P).....	1
07-1	G167-0217815		FOM-40X1049B	HOSE, transmission oil strainer to output shaft rear bearing cap, assembly (3/8 in. I.D. x 27 7/8 in. long) (Includes: CONNECTORS, FOM-P165 and FOM-P166).....	1
	G214-7036261		FOM-40X1049B-1	HOSE, transmission oil strainer to output shaft rear bearing cap (3/8 in. I.D. x 25 1/4 in. long) (See HOSE, FOM-P4602, group 2304P).....	1
	G167-0407834		FOM-4X1054B	LINE, transmission cooled oil, front (68 1/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407836		FOM-4X1056B	LINE, transmission cooled oil, intermediate (37 3/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407838		FOM-4X1058B	LINE, transmission cooled oil, rear (57 3/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407841		FOM-4X1061B	LINE, transmission oil cooler, lower (40 1/2 in. long) (See TUBING, FOM-P4409, group 2304P).....	1

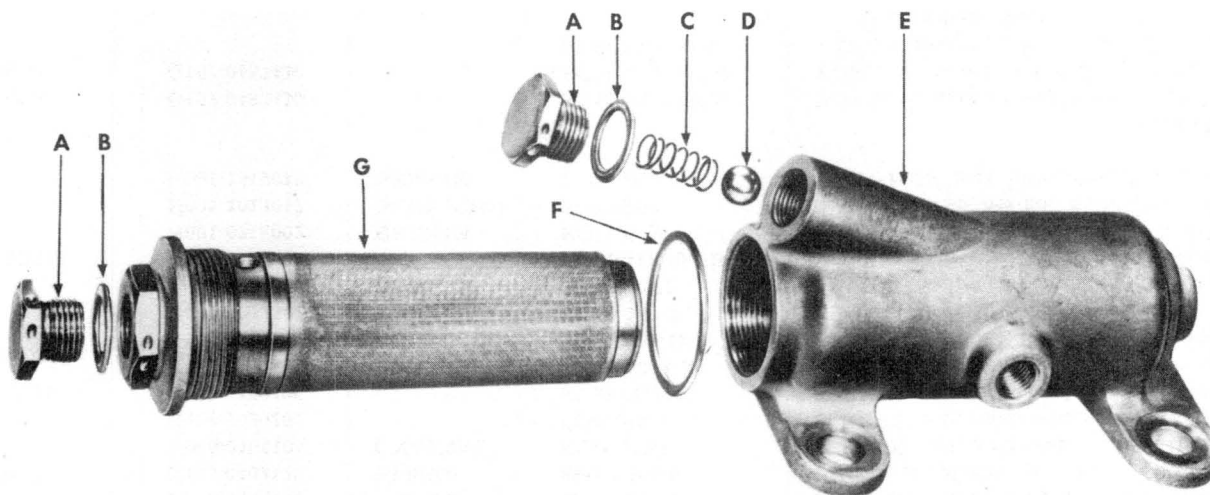

Key	Part Name	Part Number	Group Number
A	PLUG	A1360010709C
B	GASKET	B1416000709C
C	SPRING	A1398120709C
D	BALL	CCAX1F0709C
E	HOUSING	C745350709C
F	GASKET	A1438890709C
G	SCREEN	A1360020709C

RA PD 337696

FIGURE 07-11—TRANSMISSION OIL STRAINER ASSEMBLY—EXPLODED VIEW

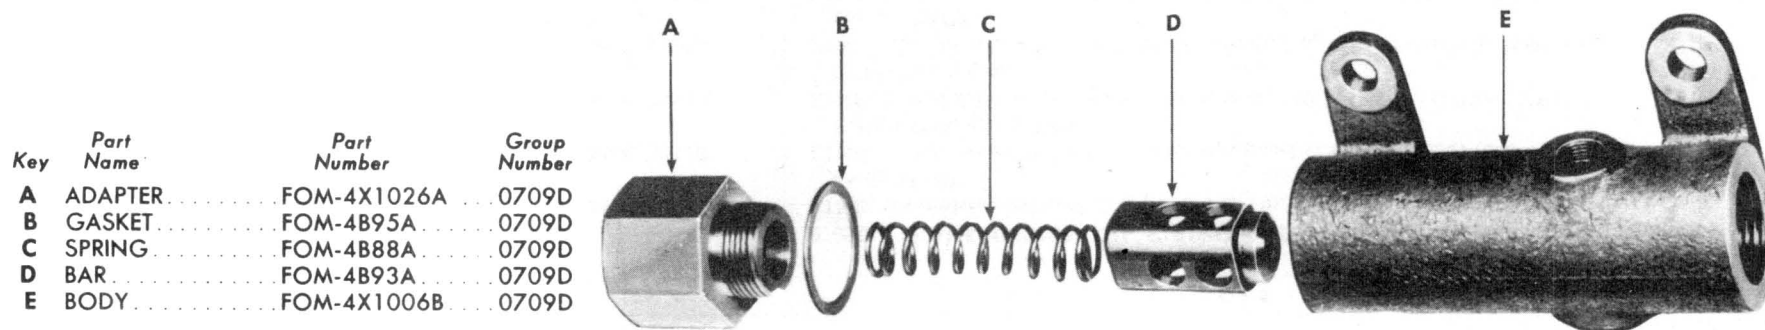

Key	Part Name	Part Number	Group Number
A	ADAPTER	FOM-4X1026A0709D
B	GASKET	FOM-4B95A0709D
C	SPRING	FOM-4B88A0709D
D	BAR	FOM-4B93A0709D
E	BODY	FOM-4X1006B0709D

RA PD 76251

FIGURE 07-12—TRANSMISSION OIL PRESSURE VALVE ASSEMBLY—EXPLODED VIEW

GROUP 07—TRANSMISSION


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-1	G167-0407840		FOM-4X1060B	0709D—TRANSMISSION OIL PIPING AND PRESSURE REGULATOR (Contd) LINE, transmission oil cooler, upper (56 1/8 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407832		FOM-4X1052B	LINE, transmission oil, hose to instrument panel (25 3/4 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407833		FOM-4X1053B	LINE, transmission oil pump to pressure valve (10 7/8 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407835		FOM-4X1055B	LINE, transmission warm oil, front (72 1/2 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407837		FOM-4X1057B	LINE, transmission warm oil, intermediate (29 5/8 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
	G167-0407839		FOM-4X1059B	LINE, transmission warm oil, rear (61 1/2 in. long) (See TUBING, FOM-P4409, group 2304P).....	1
07-1	H006-0773020	B6498CA	FOM-P161	NIPPLE, transmission oil pressure valve to strainer (pipe, S., ext-strong., short, black)...	1
	G103-0401700	A155920	SP-89-102-2	NIPPLE, transmission output shaft bearing cap (pipe, br., 1/4-18NPT x 1-5/8) (WIS-1ES12880).....	1
07-1	H006-0104054	CNAX9BE		NUT, compression tube fitting, 3/8 in.....	1
			FOM-P391	NUT, compression tube fitting, 7/8 in. (WH-8105X14).....	1
07-1	H006-0104148	A230680	SP-89-380-J	NUT, transmission oil pump intake tube (WIS-1ES18636).....	1
	G103-0402120	B140800	SP-89-203-1	PIPE, transmission case oil filler (WIS-2ES12877).....	1
07-12	H006-0105105	CNAX9AC	FOM-P781	SLEEVE, ball, compression tube fittings 1/4 in.....	1
	G214-7036262		FOM-P392	SLEEVE, ball, compression tube fitting 7/8 in. (WH-8155X14).....	1
07-12	G167-0389496		FOM-4B88A	SPRING, transmission oil pressure valve.....	1
	G103-0106367	C91054	SP-89-6062-X	TUBE, intake, transmission oil pump, assembly.....	1
07-1	G103-0105138	A232253	SP-89-901-D	BOLT, attaching, transmission oil pump intake tube.....	2
	H001-4013501	BBFX1A	SP-89-163-J	NUT, castle, S., 1/4-28NF-2.....	2
07-1	22W-1642100	BFWX1A	SP-89-LW2	WIRE, S., low carbon, black anld., 0.041 diam.....	as req.
	G167-0427253		FOM-41X1007B	VALVE, oil pressure, transmission, assembly.....	1
07-1	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
	H001-1013017	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	2
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2
0713—MOUNTINGS					
07-1	G167-0482430		FOM-4X1013CL	YOKE, mounting, transmission, front, left.....	1
07-1	G167-0482430		FOM-4X1013CR	YOKE, mounting, transmission, front, right.....	1
			FOM-4X1042B	BOLT, hex-hd., s-fin., S., dld. f/c-pin., 5/8-18NF-2 (15/16) x 2 1/16 (to hull-upper attachment).....	2
			FOM-4X1043B	BOLT, hex-hd., s-fin., S., dld. f/c-pin., 5/8-18NF-2 (15/16) x 2 1/2 (to hull-lower attachment).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-1	H001-4044541	BBHX1B	FOM-P192	NUT, slotted, heavy, S., 5/8-18NF-2	4
	H001-0811053	BFAX1DH	FOM-P194	PIN, cotter, split, S., 1/8 x 1 1/4	4
			FOM-4X1045B	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire., 5/8-11NC-3 x 1 1/2 (to transmission)	16
	H001-1516013	BECX3P	FOM-P190	WASHER, lock, hv., S., 5/8 in.	4
	G167-0482431		FOM-P196	WIRE, br., grade A., anld., soft, 0.051 in. diam.	as req.
			FOM-4X1014C	YOKE, mounting, transmission, rear	2
			FOM-4X1043B	BOLT, hex-hd., s-fin., S., dld. f/c-pin., 5/8-18NF-2 (1) x 2 1/2 (to hull-upper attachment)	2
			FOM-4X1044B	BOLT, hex-hd., s-fin., S., dld. f/c-pin., 1-14NF-2 (1 1/2) x 4 1/4 (to hull-lower attachment)	2
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2	20
		BBHX1B	FOM-P192	NUT, slotted, heavy, S., 5/8-18NF-2	2
	H001-0722025	BBHX1E	FOM-P13	NUT, slotted, heavy, S., 1-14NF-2	2
	H001-0811053	BFAX1DH	FOM-P194	PIN, cotter, split, S., 1/8 x 1 1/4	2
	H001-0811055	BFAX1DL	FOM-P195	PIN, cotter, split, S., 1/8 x 1 3/4	2
	H001-1013074	BCVX2LW-1	FOM-P652	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 2 (to transmission)	18
	H001-1516013	BECX3P	FOM-P190	WASHER, lock, hv., S., 5/8 in.	2
	H001-1516017	BECX3T	FOM-P191	WASHER, lock, hv., S., 1 in.	2
	H001-1519013	BEAX2B	FOM-P896	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1424)	20
	GROUP 09—PROPELLER SHAFT AND UNIVERSAL JOINT				
	0901—PROPELLER SHAFT				
	G167-0184601		FOM-4X1018C	FLANGE, front propeller shaft housing	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2	4
			FOM-P49	SCREW, cap, hex-hd., S., 1/2-13NC-3 x 1 1/4	4
	H001-1519013	BEAX2B	FOM-P19	WASHER, lock, internal teeth, heavy, S., 1/2 in. (SK-1424)	4
	G167-0217861		FOM-4X1017C	HOUSING, bell, front propeller shaft universal joint, rear	1
	G167-0217860		FOM-4X1016C	HOUSING, bell, rear propeller shaft universal joint, front	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	8
	G167-0392300		FOM-P97	STUD, S., 3/8-16NC-2 x 1 1/2	8
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	8
	G167-0184602		FOM-4X1019C	HOUSING, bell, rear propeller shaft universal joint, rear	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2	4
			FOM-P49	SCREW, cap, hex-hd., S., 1/2-13NC-3 x 1 1/4	4
	H001-1519013	BEAX2B	FOM-P19	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1424)	4
	G167-0217863		FOM-4X1025B	HOUSING, front propeller shaft	1
	G167-0217862		FOM-4X1024B	HOUSING, rear propeller shaft	1
	G167-0340206		FOM-4X1020B	PLATE, lubrication access, propeller shaft universal joint (rear propeller shaft (1), front propeller shaft (1))	2
	G167-0381995		FOM-P96	SCREW, mach., binding recess head, S., cd-pltd., 1/4-20NC-3 x 3/8	4
	G167-0340204		FOM-41X1033B	PLATE, lubrication access, rear propeller shaft universal joint, rear	1
	G167-0381995		FOM-P96	SCREW, mach., binding-recess-head, S., cd-pltd., 1/4-20NC-3 x 3/8	4

GROUP 09—PROPELLER SHAFT AND UNIVERSAL JOINT

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
F,M09-1	H006-0283805	CPMX1AB	FOM-P98	0901—PROPELLER SHAFT (Contd)	
	G168-7039435		FOM-41X1030D	PLUG, pipe, sq-hd., black, 1/4 in. (front propeller shaft universal joint rear bell housing (1), and rear propeller shaft universal joint front bell housing (1)).....	2
	G168-7037047		FOM-41X1029D	SHAFT, propeller, front, assembly (Includes: universal joint, shaft housing, housing flange, and bell housing).....	1
F,M09-1				SHAFT, propeller, rear, assembly (Includes: joint, shaft housing, and bell housings)....	1
09-1	G214-7036263	BBAX1A	FOM-20X1742CL	0901A—HANGERS AND SUPPORTS	
	G214-7036264		FOM-20X1742CR	BRACKET, front bulkhead, propeller shaft, left.....	1
	G214-7036265		FOM-20X1712C	BRACKET, front bulkhead, propeller shaft, right.....	1
	G214-7036266		FOM-20X1740D	BRACKET, front propeller shaft.....	1
	H001-0718001		FOM-P45	GUARD, front propeller shaft.....	1
		BEAX1H	FOM-P408	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	6
	H001-1519009		FOM-P24	SCREW, mach., rd-hd., cross-recess type, S., cd-pltd., 1/4-20NC-3 x 1/2.....	6
	G214-7036267		FOM-21X1741D	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	6
	G214-7036268		FOM-21X1443D	GUARD, front propeller shaft, assembly (Includes: attaching hardware).....	1
			FOM-21X2995D	SUPPORT, front propeller shaft, assembly (Includes: left and right uprights, upper and lower brackets) (Mk I; LVT (A) (1) only).....	1
09-1	G214-7036269		FOM-21X1702D	SUPPORT, front propeller shaft, assembly (Includes: left and right uprights, upper and lower brackets) (Mk IV; LVT (A) (4) only).....	1
09-1	G214-7036270		FOM-21X1703D	SUPPORT, rear propeller shaft, front, assembly (Includes: left and right uprights, upper and lower brackets).....	1
				SUPPORT, rear propeller shaft, rear, assembly (Includes: left and right uprights, upper and lower brackets).....	1
09-2			MJ-113-5007	0902—UNIVERSAL JOINTS	
09-2	6260-113-6001	B246193	MJ-113-6001	BEARING, trunnion, universal joint, assembly.....	8
09-2	G162-1187082	A291566	MJ-6205J	BEARING, trunnion, universal joint, assembly.....	8
09-2	H002-0223020	CLDX3A	MJ-8X127	CUP, grease, universal joint slip yoke.....	2
				FITTING, lubricating, hydraulic type, stght., 1/8-27NPT, male, short (universal joint spider).....	4
	G167-0248784		FOM-P95	JOINT, universal, propeller shaft, assembly (MJ-2343A).....	2
	G137-0340255	A291733,	MJ-3550J	PLATE, lock, universal joint trunnion bearing.....	8
	G137-0382000	A291732	MJ-3544J	SCREW, cap, special, hex-hd., alloy-S., 3/8-24NF-2 x 27/32.....	16
09-2	H006-0283800	CPMX1AA	MJ-7X4	PLUG, pipe, sq-hd., black, 1/8 in. (universal joint slip yoke).....	2
09-2	G137-0367640	A291576	MJ-863J	RETAINER, universal joint slip yoke washer.....	2
09-2	G137-0384784	A291578	MJ-3542J	SHIELD, dust, universal joint trunnion bearing.....	16
09-2	G147-0369903	A291564	MJ-5785J	SNAP RING, universal joint trunnion bearing.....	8
09-2	G162-1681969		MJ-112-6000	SPIDER, universal joint, w/grease RETAINER, assembly.....	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
09-2			MJ-42-3805	TUBE, universal joint, assembly (Includes: yoke, and stub end).....	2
09-2	G137-0442612	A291575	MJ-3543J	WASHER, universal joint trunnion bearing (cork).....	16
09-2	G137-0442610	A291577	MJ-6X45	WASHER, universal joint slip yoke (felt, 1/2 in. thk.).....	2
09-2	G137-0442613	A196079	MJ-328J	WASHER, universal joint slip yoke washer retainer.....	4
09-2	G214-7036272		MJ-6504J	YOKE, slip, universal joint.....	2

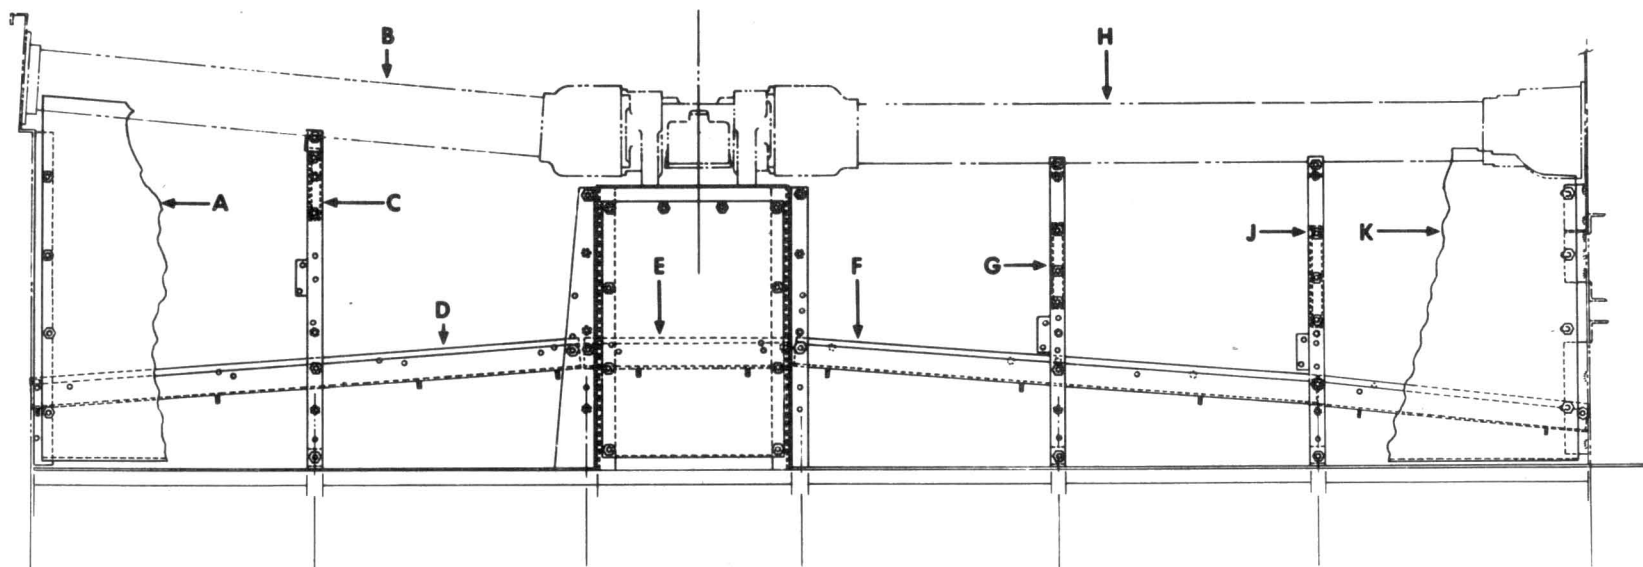

Key	Part Name	Part Number	Group Number
A	PLATE.....	FOM-2X1317DL..	1801B
B	SHAFT, assembly ..	FOM-41X1030D..	.0901
C	SUPPORT, assembly ..	FOM-21X1443D..	.0901A


Key	Part Name	Part Number	Group Number
D	CHANNEL, assembly ..	FOM-20X1362B..	1801B
E	CHANNEL, assembly ..	FOM-20X1334B..	1801B
F	CHANNEL, assembly ..	FOM-20X1608C..	1801B

Key	Part Name	Part Number	Group Number
G	SUPPORT, assembly ..	FOM-21X1702D..	.0901A
H	SHAFT, assembly ..	FOM-41X1029D..	.0901
J	SUPPORT, assembly ..	FOM-21X1703D..	.0901A
K	PLATE.....	FOM-2X1887D...	1801B

RA PD 337693

FIGURE 09-1—PROPELLER SHAFTS AND SUPPORTS

GROUP 09—PROPELLER SHAFT AND UNIVERSAL JOINT

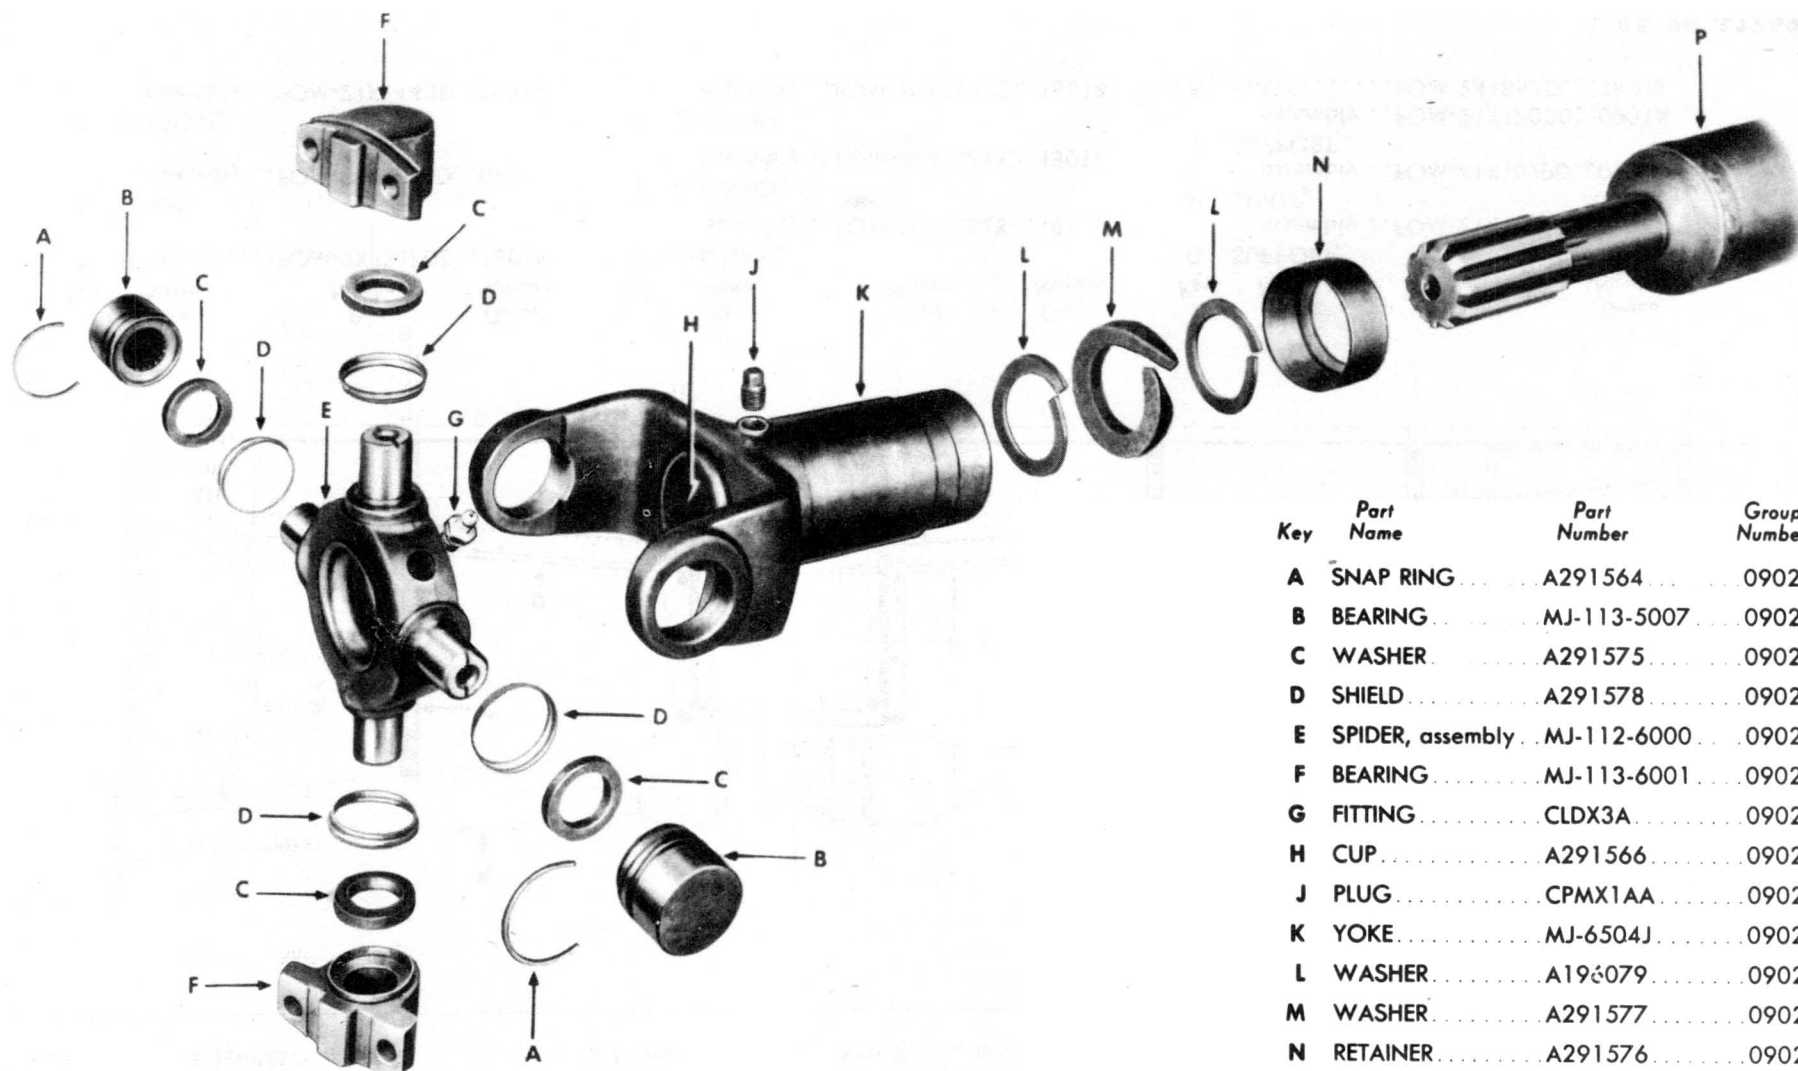

Key	Part Name	Part Number	Group Number
A	SNAP RING	A291564	0902
B	BEARING	MJ-113-5007	0902
C	WASHER	A291575	0902
D	SHIELD	A291578	0902
E	SPIDER, assembly	MJ-112-6000	0902
F	BEARING	MJ-113-6001	0902
G	FITTING	CLDX3A	0902
H	CUP	A291566	0902
J	PLUG	CPMX1AA	0902
K	YOKE	MJ-6504J	0902
L	WASHER	A196079	0902
M	WASHER	A291577	0902
N	RETAINER	A291576	0902
P	TUBE, assembly	MJ-42-3805	0902


RA PD 76357

FIGURE 09-2—PROPELLER SHAFT UNIVERSAL JOINT ASSEMBLY—EXPLODED VIEW

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				GROUP 10—DIFFERENTIAL AND FINAL DRIVE	
				1002—DIFFERENTIAL ASSEMBLY	
10-1	G167-0151715		SP-89-5903-X	DIFFERENTIAL, controlled, assembly (Includes: gear case, compensating gear, bevel gear, external pinion, internal pinion, and rim).....	1
				1003—DIFFERENTIAL GEARS, PINIONS, AND BEARINGS	
07-2	H012-1400080	CAAX3AT	SP-89-76-3	BEARING, ball, No. 316 (annular single row, medium series, 3.1496 bore, 6.6929 O.D., 1.5354 width) (differential).....	2
07-4	H012-1600090	CABX1AX	SP-89-76-5	BEARING, ball, No. 5219 (annular, double row, regular light series, 3.7402 bore, 6.6929 O.D., 2.1875 width) (transmission spiral bevel pinion).....	1
	G103-0400280	A143799	SP-89-24-19	BUSHING, differential compensating gear case cover (bz., 3.3755 I.D. x 3.632 O.D. x 1 in. thk.) (WIS-1ES12767).....	2
	G038-0112130	A143804	SP-89-24-20	BUSHING, differential internal pinion (bz., 1.196 I.D. x 1.319 O.D. x 1 5/8 in. long (WIS-1ES12765).....	12
	G038-0114780	C60953	SP-89-19-5	CAP, differential hub bearing (Serviced only as part of CASE, w/INSERTS, assembly, SP-89-6338-X).....	2
	H001-0713005	BBFX2D	SP-89-349-J	NUT, castle, S., 7/8-14NF-2.....	4
	G103-0403080	A143755	SP-89-41-V	STUD, S., 7/8-9NC-5 (3 5/16) x 7/8-14NF-3 (1 1/4) x 9 1/4 in. long (WIS-1ES12694).....	4
	H009-0102230	BFWX1B	SP-LW-1	WIRE, S., low carbon, black anld., 0.0625.....	as req.
07-2,10-1	G103-1531704	C60917	SP-89-15-3	CASE, differential compensating gear (WIS-3ES12756).....	1
07-2	G038-0120260	C61410	SP-89-16-5	COVER, differential compensating gear case, left (flanged) (WIS-3ES12789).....	1
10-1	G167-0140180		SP-89-6234-X	COVER, differential compensating gear case, left, w/BUSHINGS, assembly (flanged).....	1
10-1	G103-0400120	A143765	SP-89-831-D	BOLT, special, hex-hd., S., dld. f/c-pin., 3/4-16NF-2 (1 3/8) x 9 (WIS-1ES12771).....	3
10-1	G103-0401760	A143797	SP-89-348-J	NUT, castle, S., 3/4-16NF-2 (Make from BBFX2C) (WIS-1ES12764).....	3
10-1	H001-0811077	BFAX2AK	SP-89-27-G	PIN, cotter, split, S., 3/16 x 1 1/2.....	3
07-2	G038-0120270	C60920	SP-89-16-6	COVER, differential compensating gear case, right (plain) (WIS-3ES12761).....	1
10-1	G167-0140181		SP896235-X	COVER, differential compensating gear case, right, w/BUSHINGS, assembly (plain).....	1
07-2,10-1	G103-0400120	A143765	SP-89-831-D	BOLT, special, hex-hd., S., dld f/c-pin., 3/4-16NF-2 (1 3/8) x 9 (WIS-1ES12771).....	3
07-2,10-1	G103-0401760	A143797	SP-89-348-J	NUT, castle, S., 3/4-16NF-2 (Make from BBFX2C) (WIS-1ES12764).....	3
07-2	H001-0811077	BFAX2AK	SP-89-27-G	PIN, cotter, split, S., 3/16 x 1 1/2.....	3
	G167-0196030		SP-89-5863-X	GEAR AND PINION, transmission, spiral bevel, assembly (generated) (Optional with GEAR AND PINION, SP-89-6033-X).....	
07-2	G167-0196031		SP-89-6033-X	GEAR AND PINION, transmission, spiral bevel, assembly (formate) (Optional with GEAR AND PINION, SP-89-5863-X).....	1
10-1	G103-0496017	C60923	SP-89-8-1	GEAR, compensating, differential (39 T., 6.750 O.D., 1 1/2 face) (WIS-2ES12758).....	2
07-2,10-1	G103-0402420	A144527	SP-89-839-D	SCREW, special, hex-hd., S., 1/2-20NF-3 x 1 1/4 (WIS-1ES1279D).....	12
07-2	22W-1642125	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 diam.....	as req.
07-2,10-1	G038-0134114	A143768	SP-89-210-2	KEY, Woodruff, alloy-S., 5/16 x 15/16 (Make from BGAX21B) (WIS-1ES12766) (differential external pinion).....	6

GROUP 10—DIFFERENTIAL AND FINAL DRIVE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
07-4	G103-1714475	BBRX1AX	SP-89-352-J	1003—DIFFERENTIAL GEARS, PINION, AND BEARINGS (Contd) NUT, lock, ball bearing, No. AN-19 (12 thds. per in., 4 15/16 O.D., 23/32 in. thk., 3.7402 bearing bore) (transmission spiral bevel pinion ball bearing).....	1
10-1	G038-0151070	A143751	SP-89-327-SP	PIN, dowel, differential compensating gear case (S., 0.752 x 1 3/4) (WIS-1ES12772).....	6
07-2,10-1	G103-0402060	B141509	SP-89-5-2	PINION, differential, external (21 teeth, 3.750 O.D.) (WIS-2ES12773).....	6
07-2,10-1	G103-0401780	A143798	SP-89-349-J	NUT, castle, S., 7/8-14NF-2 (WIS-1ES12763).....	6
07-2,10-1	H001-0811078	BFAX2AA	SP-89-31-G	PIN, cotter, split, S., 3/16 x 1 3/4.....	6
10-1	G103-0402080	B141508	SP-89-60-1	PINION, differential, internal (9 teeth, 1.750 O.D.) (WIS-2ES12759).....	6
07-4	G103-0401900	A143742	SP-89-346-J	NUT, slotted, hex., S., 1 3/8-12NF-3. (WIS-1ES12649).....	1
07-4	H001-0811092	BFAX2BD		PIN, cotter, split, S., 7/32 x 2 1/2.....	1
07-4	G103-0403440	A143743	SP-89-680-W	WASHER, plain, alloy-S., 1 13/32 I.D. x 2 5/8 O.D. x 0.250 in. thk. (WIS-1ES12650).....	1
	G038-0163990	C60952	SP-89-360-1	RETAINER, transmission spiral bevel pinion bearing.....	1
	H001-0713003	BBFX2B	SP-89-355J	NUT, castle, S., 5/8-18NF-2.....	4
	G103-0403100	A143746	SP-89-180-V	STUD, S., 5/8-11NC-5 (1 11/16) x 5/8-18NF-3 (1) x 4 11/16 in. long (WIS-1ES12692).....	4
	H009-0102230	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 in. diam.....	as req.
	G167-0384824		SP-89-228-16	SHIM, differential bearing.....	as req.
10-1	G103-0402720	B141538B	SP-89-228-5	SHIM, differential bearing (S., 0.005 thk.) (WIS-1ES12696).....	as req.
	G038-0170530	B141538C	SP-89-228-6	SHIM, differential bearing (S., 0.031 thk.) (WIS-1ES12695).....	as req.
07-4	G038-0170571	B141531A	SP-89-228-1	SHIM, transmission spiral bevel pinion bearing (S., 0.020 thk.) (WIS-1ES12889).....	as req.
07-4	G103-0402780	B141531B	SP-89-228-2	SHIM, transmission spiral bevel pinion bearing (S., 0.026 thk.) (WIS-1ES12890).....	as req.
07-4	G028-0170590	B141531C	SP-89-228-3	SHIM, transmission spiral bevel pinion bearing (S., 0.034 thk.) (WIS-1ES12891).....	as req.
07-4	M005-0259140	BEFX1AX	SP-89-679-W	WASHER, lock, ball bearing, No. W-19 (3.781 bore, 3.7402 bearing bore) (transmission bevel pinion ball bearing).....	1
10-1	G103-0403460	A143764	SP-89-674-W	WASHER, thrust, differential bearing (3.152 I.D. x 4.00 O.D. x 11/16 in. thk., flange 4 1/2 diam. x 7/32 in. thk.) (WIS-1ES12770).....	2
	G214-7036273		FOM-51X1073D	1008—FINAL DRIVE ASSEMBLY DRIVE, final, exterior, assembly (Includes: shaft w/bearing assembly, through bolt, bell housing, coupling hub and ring, sprockets, sprocket hub, and attaching hardware).....	2
	8080-896342-X		SP-89-6342-X	DRIVE, final, interior, left, assembly (Includes: bearing, gear, shaft, and sprocket hub).....	1
	G168-7037152		SP-89-6392-X	DRIVE, final, interior, left, assembly (Does not include: hub).....	1
	8080-89-6341-X		SP-89-6341-X	DRIVE, final, interior, right, assembly (Includes: bearing, gear, shaft, and sprocket hub).....	1
	G168-7037151		SP-89-6391-X	DRIVE, final, interior, right, assembly (Does not include: hub).....	1
07-1	G167-0101800		FOM-4A13C	1008A—GEARS, BEARINGS, AND SHAFTS ADAPTER, interior to exterior final drive shaft.....	2
	H001-0725710	BBSX4AH	SP-89-370-J	NUT, safety, alloy-S., 3/4-16NF-3.....	16
10-2	G103-0304160	A188473	SP-89-172-V	STUD, alloy-S., 3/4-16NF-5 (1 1/16) x 3/4-16NF-2 (1 1/8) x 5 1/16 in. long.....	16

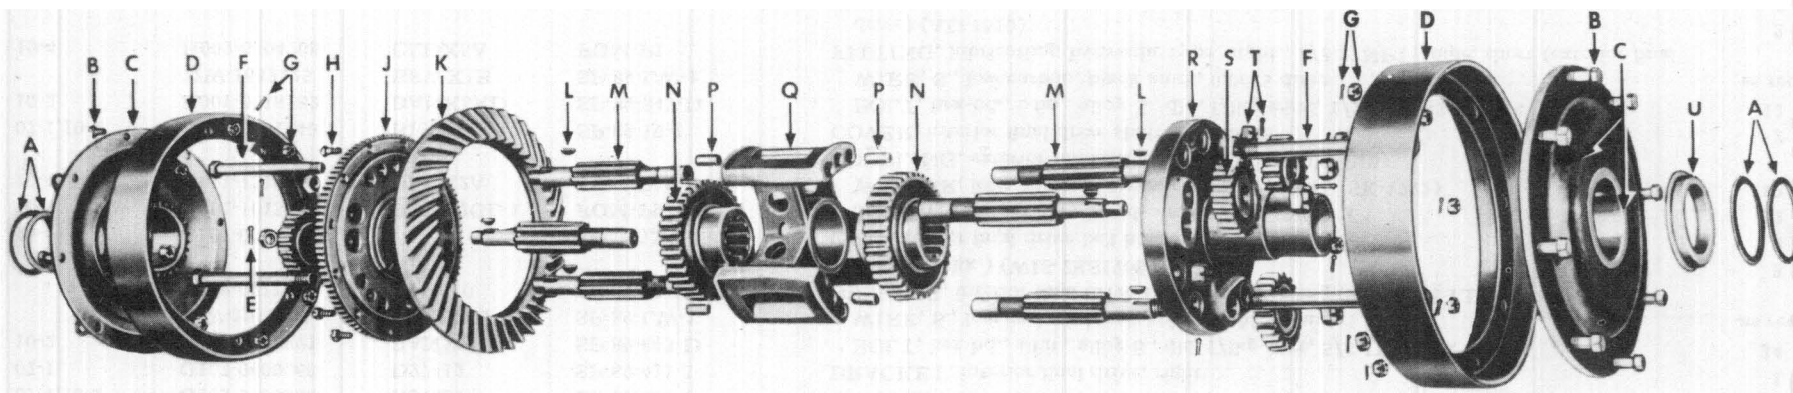

Key	Part Name	Part Number	Group Number
A	SHIM	B141538B	1003
B	SCREW	A143752	1009
C	FLANGE and GEAR, w/BUSHING, assembly	SP-89-6412-X	1009
D	RIM	C 60924	1009
E	NUT	A143798	1003
	PIN	BFA2AA	1003
F	BOLT	A143765	1003
G	NUT	BBFX1E	1009
	PIN	BFA1CR	1009
H	SCREW	A144527	1003
J	COVER, w BUSHINGS, assembly	SP-89-6234-X	1003

Key	Part Name	Part Number	Group Number
K	GEAR (served only as part of GEAR and PINION, assembly, SP-89-6033-X)		
L	KEY	A143768	1003
M	PINION	B141508	1003
N	GEAR	C 60923	1003
P	PIN	A143751	1003
Q	CASE	C 60917	1003
R	COVER, w BUSHINGS, assembly	SP-89-6235-X	1003
S	PINION	B141509	1003
T	NUT	A143797	1003
	PIN	BFA2AK	1003
U	WASHER	A143764	1003


FIGURE 10-1—CONTROLLED DIFFERENTIAL—EXPLODED VIEW

RA PD 337689

GROUP 10—DIFFERENTIAL AND FINAL DRIVE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1008A—GEARS, BEARINGS, AND SHAFTS (Contd)	
10-2	H012-1400800	CAAX3AT	SP-89-76-3	BEARING, ball, No. 316 (type A, annular, single row, medium series, 3.1496 bore, 6.6929 O.D., 1.5354 width) (interior final drive axle shaft, inner)	2
10-2	H012-1400090	CABX3AW	SP-89-76-11	BEARING, ball, No. 5318 (type D, annular, double row, regular medium series, 3.5433 bore, 7.4803 O.D., 2.850 width) (interior final drive shaft, outer)	2
10-2	H012-5100075	CAAX3CS	SP-89-76-9	BEARING, roller, No. 315 (type A, annular, narrow, medium series, 2.9528 bore, 6.2992 O.D., 1.4567 width) (interior final drive axle shaft, outer)	2
10-2	H012-5100100	CABX1CZ	SP-89-76-10	BEARING, roller, No. 5220 (type B, annular wide, regular light series, 3.9370 bore, 7.0866 O.D., 2.3750 width) (interior final drive shaft, inner)	2
10-4	G167-0118023		FOM-P8	BEARING, roller, spherical, self-aligning, 4.3307 bore, 7.0866 O.D., 2.2047 width (SKF-23122) (exterior final drive shaft)	2
10-4	M005-0101471	BBRX1BB	FOM-P6	NUT, lock, ball bearing No. AN-22 (12 threads per in., 5 23/32 O.D., 25/32 thk., 4.3307 bearing bore) (ND-AN-22)	2
10-4	M005-0259156	BEFX1BB	FOM-P7	WASHER, lock, ball bearing, No. W-22 (4.406 bore, 4.3307 bearing bore) (ND-W-22)	2
10-3	G167-0124252		FOM-41X1005B	BOLT, through, exterior final drive, w/PIN, assembly	2
	H001-0722025	BBHX1E	FOM-P13	NUT, slotted, heavy, S., 1-14NF-2	2
			FOM-P14	PIN, cotter, split, br. (type A), 5/32 x 1 1/2	2
07-1,10-2	G103-0400240	D31689	SP-89-411-5	BRACKET, interior final drive, left	1
07-1	G103-0400260	D27412	SP-89-411-3	BRACKET, interior final drive, right	1
10-2	H001-0118321	BANX5BD	SP-89-843-D	BOLT, hex-hd., s-fin., alloy-S., dld. f/lkg-wire, 5/8-11NC-2 x 1 1/4	34
	22W-1642125	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 diam.	as req.
	G038-0111930	B141520	SP-89-24-5	BUSHING, interior final drive shaft inner bearing (S., 6.6945 I.D. x 7.251 O.D. x 1.906 in. thk.) (WIS-2ES12689)	2
10-4	G167-0131549		FOM-5X1023C	CAP, exterior final drive bell housing	2
10-4	H001-1013053	BCVX2GL-1	FOM-P91	SCREW, cap, hex-hd., S., cd-pltd., 7/16-14NC-3 x 1	12
10-4	H001-1519012	BEAX2A	FOM-P16	WASHER, lock, internal teeth, reg., S., 7/16 in. (SK-1222)	12
				COUPLING, exterior final drive (See RING-FOM-P10)	
07-1,10-2	G103-0301040	B132935	SP-89-19-7	COVER, interior final drive shaft oil retainer	2
10-2	H001-0118282	BANX5AD	SP-89-842-D	BOLT, hex-hd., s-fin., alloy-S., dld. f/lkg-wire., 1/2-13NC-2 x 1 1/4	12
	22W-1642125	BFWX1B	SP-89-LW-1	WIRE, S., low carbon, black anld., 0.0625 diam.	as req.
10-4	H002-0504208	CLDX5A	FOM-P1	FITTING, lubricating, hydraulic type, stght., 1/8-27NPT, male, short (exterior final drive) (AD-1610)	2
10-3				GASKET, exterior final drive coupling ring (Endura paper, 1/64 in. thk.)	2
10-2	G103-0400900	C63234	SP-89-155-3	GASKET, interior final drive bracket	2
10-2	G103-0400920	A130731	SP-89-223-6	GASKET, interior final drive shaft oil retainer cover	2
	8080-89-6288-X		SP-89-6288-X	GEAR, herringbone, interior final drive shaft and axle shaft, assembly	2
07-2,10-2	G103-2196001	C129753	SP-89-8-34	GEAR, herringbone, interior final drive axle shaft (Serviced only as part of GEAR assembly, SP-89-6288-X)	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
10-2	G103-2196002	C129752	SP-89-8-33	GEAR, herringbone, interior final drive shaft (Serviced only as part of GEAR assembly, SP-89-6288-X).....	2
	G167-0217864		FOM-5X1048D	HOUSING, bell, exterior final drive.....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	22
	H001-0718008	BBAX2C	FOM-P12	NUT, regular, hex., s-fin., S., 3/4-10NC-2.....	10
	H001-1013071	BCVX2LN-1	FOM-P209	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	18
			FOM-P50	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 3/4.....	2
			FOM-P51	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 3 1/2.....	2
			FOM-P48	SCREW, cap, hex-hd., S., cd-pltd., 3/4-10NC-3 x 2.....	4
			FOM-P47	SCREW, cap, hex-hd., S., cd-pltd., 3/4-10NC-3 x 3 3/4.....	6
	H001-1519013	BEAX2B	FOM-P896	WASHER, lock, internal teeth, regular, S., 1/2 in.....	22
		BEAX7R	FOM-P910	WASHER, lock, reg., S., 3/4 in.....	10
10-3	G167-0221023		FOM-4X1001B	HUB, coupling, exterior final drive.....	2
10-2	G103-0302540	B132938	SP-89-356-J	NUT, interior final drive shaft (slotted, alloy-S., 2 5/8-12NS).....	4
10-2	H001-0811108	BFAX2CP	SP-89-41-G	PIN, cotter split, S., 1/4 x 4 1/2.....	4
	G103-0303580	A143754	SP-89-463-2	OIL SEAL, interior final drive axle shaft, inner (2 1/2 I.D. x 3.507 O.D. x 1/2 in. thk.) (UN-208 type A-2) (WIS-1ES12699).....	4

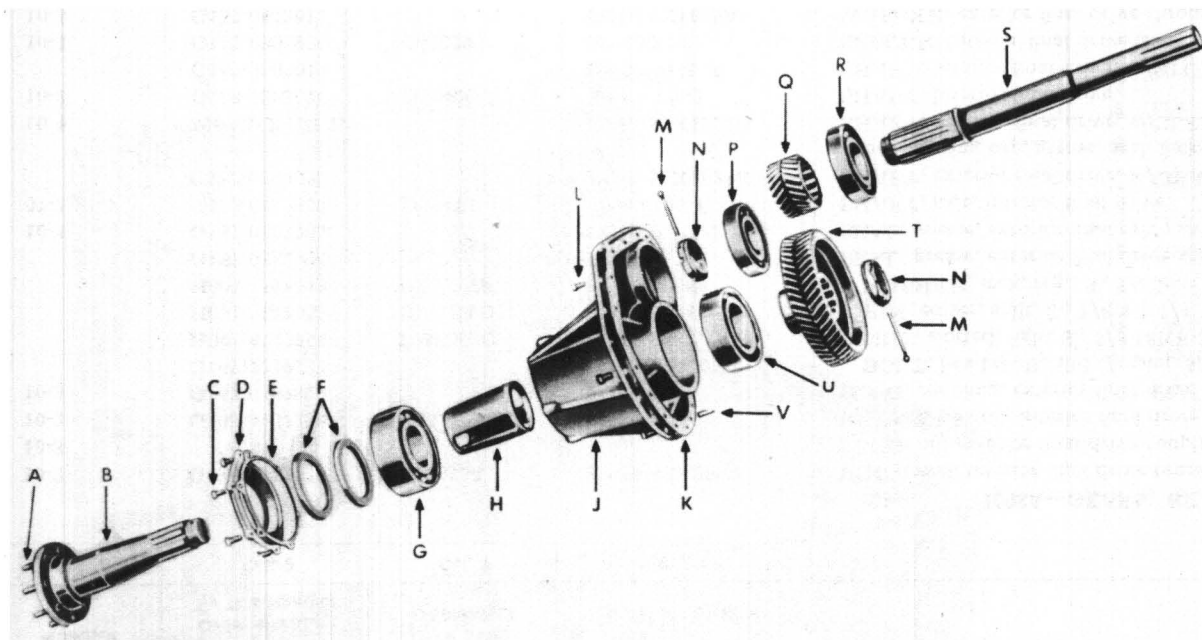

Key	Part Name	Part Number	Group Number
A	STUD.....	A188473.....	1008A
B	SHAFT.....	D27406.....	1008A
C	BOLT.....	BANX5AD.....	1008A
D	COVER.....	B132935.....	1008A
E	GASKET.....	A130731.....	1008A
F	RETAINER.....	B132705AD.....	1008A
G	BEARING.....	CABX3AW.....	1008A
H	SPACER.....	C63229.....	1008A
J	BRACKET.....	D31689.....	1008A
K	GASKET.....	C63234.....	1008A
L	BOLT.....	BANX5BD.....	1008A
M	PIN.....	BFAX2CP.....	1008A
N	NUT.....	B132938.....	1008A
P	BEARING.....	CAAX3CS.....	1008A
Q	GEAR.....	SP-89-8-34.....	1008A
R	BEARING.....	CAAX3AT.....	1008A
S	SHAFT.....	D27413.....	1008A
T	GEAR.....	SP-89-8-33.....	1008A
U	BEARING.....	CABX1CZ.....	1008A
V	PIN.....	A130739.....	1008A

FIGURE 10-2—LEFT INTERIOR FINAL DRIVE ASSEMBLY—EXPLODED VIEW


RA PD 337690

1008A

GROUP 10—DIFFERENTIAL AND FINAL DRIVE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1008A—GEARS, BEARINGS, AND SHAFTS (Contd)	
10-2	G038-0122770	A130739	SP-89-326-SP	PIN, dowel, interior final drive bracket	4
10-3				PLUG, oil, exterior final drive coupling ring	2
10-2	G103-0402250	B132705AD	SP-89-463-3	RETAINER, oil, interior final drive shaft	4
10-3	G167-0369899		FOM-P10	RING, coupling, exterior final drive (to adapter)	2
	G167-7039739		FOM-5X1106B	BOLT, hex-hd., S., dld f/c-pin., 5/8-18NF-3 x 1 3/4	24
	H001-4215760	BBHX3QA	FOM-P834	NUT, slotted, light S., 5/8-18NF-3	24
	H001-0811053	BFAX1DH	FOM-P194	PIN, cotter, split, S., 1/8 x 1 1/4	24
	H001-1518013	BECX1P	FOM-P836	WASHER, lock, reg., S., 5/8 in.	24
	G167-0382904		FOM-P17	SEAL, grease, exterior final drive shaft bearing, inner (GPC-2466, type L)	2
10-4	G167-0382903		FOM-P5	SEAL, grease, exterior final drive shaft bearing, outer (GPC-2873)	2
07-2,10-2	G103-0402560	D27413	SP-89-496-4	SHAFT, axle, interior final drive	2
	G167-0384628		FOM-51X1024C	SHAFT, exterior final drive, w/BEARING, assembly (Includes: studs, bell housing cap, grease, seal, lock nut, and lock washer)	2
10-4	3267-51X1022B		FOM-51X1022B	SHAFT, exterior final drive, w/SLEEVE, assembly	2
10-2	G103-0303620	D27406	SP-89-496-2	SHAFT, interior final drive	2
	G167-7007019		SP-89-5958-X	SHAFT, interior final drive, w/STUDS and NUTS, assembly	2
10-2	G103-0303920	C63229	SP-89-37-8	SPACER, interior final drive shaft	2
10-4	G167-0443017		FOM-5X1025A	WASHER, exterior final drive through bolt (plain, S., 3 3/4 O.D. x 3/4 in. thk.)	2
				1009—STEERING BRAKE EQUIPMENT	
	G103-0400040	D30272	SP-89-5758-X	BAND, differential steering brake, assembly (Includes: shoe assemblies and pins)	2
	G103-0400320	A143803	SP-89-24-18	BUSHING, differential steering brake flange (bz., 3.375 I.D. x 3.566 O.D. x 2 15/32 in. long) (WIS-1ES12768)	2
	G103-5309412		SP-89-24-17	BUSHING, differential steering brake shaft	4
	G103-0400800	C60918	SP-89-8-48	FLANGE and GEAR, differential steering brake, assembly (WIS-3ES12776)	2
	G103-1584614		SP-89-6412-X	FLANGE and GEAR, differential steering brake w/BUSHING, assembly	2
	G103-0401620	B141519	SP-89-528-1	LINING, differential steering brake shoe	6
	H001-0929009		SP-89-227-R	RIVET, tub., br., fl-hd., 3/16 x 3/8 (GM-104952)	54
	G103-0401640	B141530	SP-89-239-6	LINK, differential steering brake bottom shoe and steering shaft (WIS-1ES12747)	2
	G103-0401720	A143773	SP-89-347-J	NUT, adjusting, steering brake shoe (WIS-1ES12746)	2
	G103-5309413	A309413	SP-89-463-13	OIL SEAL, differential steering brake shaft	2
	G038-0150690	A143777	SP-89-329-SP	PIN, locking, differential steering brake band link (stght., S., 0.187 x 1 1/2) (WIS-1ES12750)	2
	G038-0150680	A143779	SP-89-413-SP	PIN, locking, differential steering brake band link to shaft (stght., S., 0.625 x 2 3/8, dld. 0.189 f/lkg-pin) (WIS-1ES12749)	2
	G038-0151610	A144984	SP-89-334-SP	PIN, locking, differential steering brake bottom shoe to link (stght., S., 1/2 x 3 1/2, dld. f/c-pins) (WIS-1ES1279)	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-0811054 G038-0151620	BFAX1DK A143800	SP-89-16-G SP-89-332-SP	PIN, cotter, split, S., 1/8 x 1 1/2.....	4
				PIN, locking, differential steering brake center shoe (stght., S., 1/2 x 3 1/2, dld. 1/8 f/c-pins.) (WIS-1ES12753).....	4
	H001-0811040 G103-0401940	BFAX1CG A143776	SP-89-11-G SP-89-328-SP	PIN, cotter, split, S., 3/32 x 1.....	8
				PIN, locking, differential steering brake shaft to adjusting yoke (stght., S., 1.125 x 2 3/8, 3/32 hole) (WIS-1ES12748).....	2
	G103-1751630	A143802	SP-89-333-SP	PIN, locking, differential steering brake top shoe and adjusting yoke (stght., S., 0.625 x 3 5/8, dld. 7/32 f/c-pins.) (WIS-1ES12752).....	2
	H001-0811077 G103-0402260	BFAX2AK C60924	SP-89-27-G SP-89-504-I	PIN, cotter, split, S., 3/16 x 1 1/2.....	4
07-2,10-1				RIM, differential steering brake drum (WIS-3ES12757).....	2
07-2,10-1	H001-0713001	BBFX1E	SP-89-354-J	NUT, castle, S., 1/2-20NF-2.....	17
07-2,10-1	H001-0811041	BFAX1CR	SP-89-40-G	PIN, cotter, split, S., 3/32 x 1 1/4.....	17
07-2,10-1	G038-0168030	A143752	SP-89-838-D	SCREW, special, hex-hd., S., 1/2-20NF-2 x 1 3/8 (WIS-1ES12769).....	16

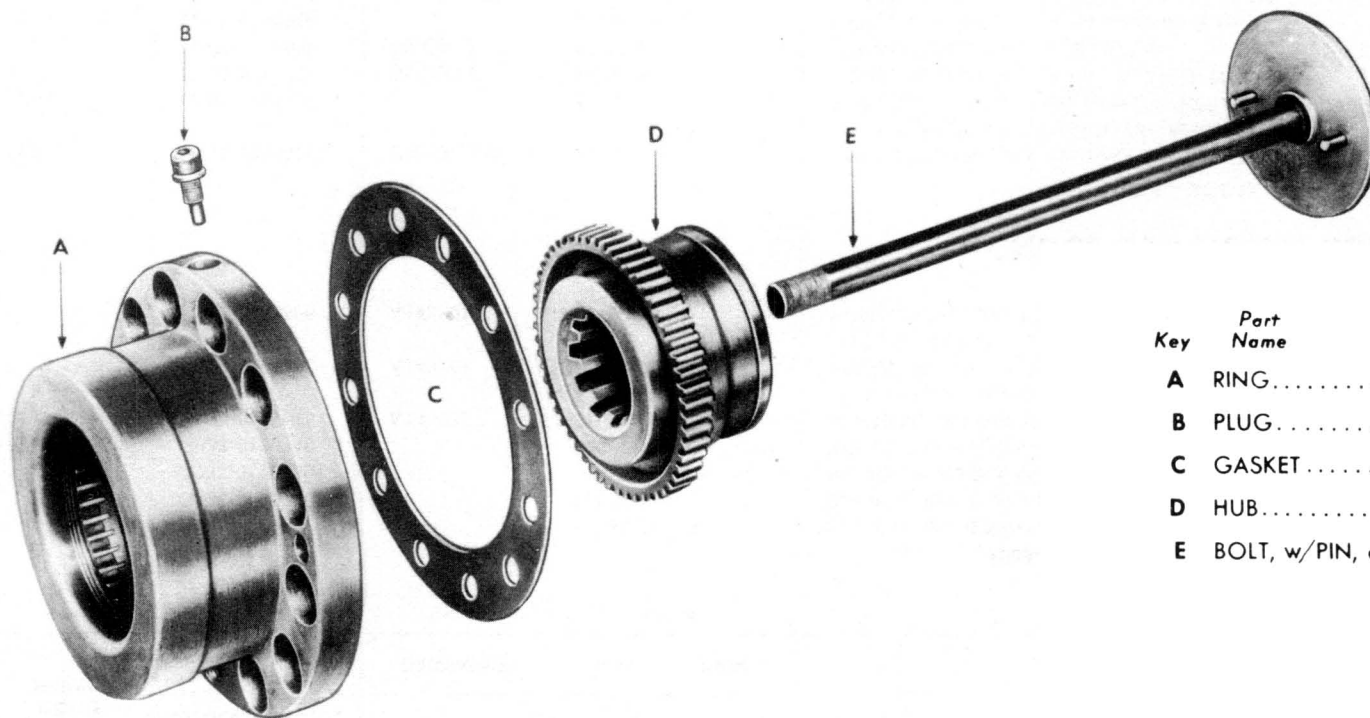

Key	Part Name	Part Number	Group Number
A	RING.....	FOM-P10.....	1008A
B	PLUG.....		1008A
C	GASKET.....		1008A
D	HUB.....	FOM-4X1001B.....	1008A
E	BOLT, w/PIN, assembly...	FOM-41X1005B.....	1008A


RA PD 337691

FIGURE 10-3—EXTERIOR FINAL DRIVE COUPLING RING, HUB, AND THROUGH BOLT

GROUP 10—DIFFERENTIAL AND FINAL DRIVE

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1009—STEERING BRAKE EQUIPMENT (Contd)	
			SP-89-975-D	SCREW, set, differential steering brake shoe link pin.....	2
	G038-0170720		SP-89-486-1	SHOE, differential steering brake, bottom, assembly (Includes: lining) (WIS-A3ES12745)	2
	G038-0170730		SP-89-486-3	SHOE, differential steering brake, center, assembly (Includes: lining) (WIS-A3ES12744)..	2
	G038-0170740		SP-89-486-5	SHOE, differential steering brake, top, assembly (Includes: lining) (WIS-A3ES12743)....	2
	G038-0172610	A143733	SP-89-72-5	SPRING, differential steering brake band adjusting yoke (helical, S., 11/16 diam. stock, 15/16 O.D., 15 coils) (WIS-1ES12754).....	2
	G104-0402025	A143763	SP-89-676-W	WASHER, differential steering brake band adjusting yoke spring (S., 21/32 I.D. x 1 O.D. x 3/32 in. thk.) (WIS-1ES12778).....	2
	G103-0403500	A143801	SP-89-506-1	YOKE, adjusting, differential steering brake band (WIS-1ES12751).....	2
				GROUP 13—TRACK SUSPENSION	
				1303—BOGIE ASSEMBLY	
13-2	H012-1303055	CAAX1AS	FOM-P65	BEARING, ball, No. 211 type A, annular, single row, light series, 2.1654 bore, 3.9370 O.D., 0.8268 width) (bogie wheel shaft) (ND-3211).....	44
13-1	G167-0127876		FOM-51X1008A	BUMPER, rubber, bogie wheel, w/BOLT, assembly.....	44
	H001-0718023	BBBX1C	FOM-P60	NUT, regular, hex., s-fin., S., 3/8-24NF-2.....	88
	H001-1518009	BECX1K	FOM-P941	WASHER, lock, reg., S., 3/8 in.....	88
13-1	G167-0131548		FOM-5X1003A	CAP, bogie wheel torsional suspension arm.....	44
13-1	H001-5427901	BCVX2QX-1	FOM-P58	SCREW, cap, hex-hd., S., cd-pltd., 5/8-18NF-3 x 2 1/4.....	88
	H001-1518013	BECX1P	FOM-P836	WASHER, lock, reg., S., 5/8 in.....	88
	G214-7036274		FOM-5B163A	CUP, leather, bogie wheel lubricating spring.....	44
	H001-1030121	BCNX2BK	FOM-P68	SCREW, mach., rd-hd., cross-recess-type, S., cd-pltd., No. 12 (0.216) 24NC-3 x 1.....	22
13-2	G214-7036275		FOM-51X1001B	CYLINDER, pressure, bogie wheel lubricating spring, w/PLUG, assembly.....	22
13-2	G167-0183237		FOM-P66	FITTING, grease, bogie wheel (AD-1650).....	22
13-2	G214-7036276		FOM-51B152C	HUB, bogie wheel.....	22
			FOM-5B166A	PIN, stght., br., 0.125 x 1 1/16 (bogie wheel lubricating spring) (Make from BFDX8.1AD).....	22
13-2	G167-0389520		FOM-51B167A	RETAINER, bogie wheel bearing, w/SLEEVE, assembly.....	44
13-2	G167-0367637		FOM-5B108A	RETAINER, bogie wheel grease seal.....	44
			FOM-5B162A	RETAINER, bogie wheel lubricating spring leather cup.....	22
13-2	G167-0382905		FOM-P67	SEAL, grease, bogie wheel bearing (GPC-1945).....	88
13-2	G167-0384602		FOM-5B157C	SHAFT, bogie wheel.....	22
	G214-7036277		FOM-5B165A	SPACER, inner, bogie wheel lubricating spring.....	22
	G214-7036278		FOM-5B164A	SPACER, outer, bogie wheel lubricating spring.....	22
	G214-7036283		FOM-5B160A	SPRING, lubricating, bogie wheel.....	22

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
13-2	G167-0389520		FOM-51B158C	SPRING, lubricating, bogie wheel, assembly	22
13-1	G167-7007017		FOM-51X1101D	SUSPENSION, torsional, bogie wheel, assembly	22
			FOM-P56	SCREW, cap, hex-hd., S., cd-pltd., 3/4-16NF-3 x 3	88
13-2	G167-0400992		FOM-5B38C	TIRE, bogie wheel	22
F,M,13-1	G167-0446892		FOM-51B156C	WHEEL, bogie, assembly	22
1304—TRACK IDLER					
13-3			FOM-5X1053B	BAR, horizontal, rear idler slide	4
13-3	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	28
13-3			FOM-P94	SCREW, cap, socket-hd., S., cd-pltd., 3/8-16NC-3 x 1 3/4	28
13-3	H001-1518009	BECX1K	FOM-P941	WASHER, lock, reg., S., 3/8 in.	28
	G167-0126850		FOM-51X1089D	BRACKET, rear idler, w/slideBAR, assembly	2
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2	4
	H001-0718028	BBBX2C	FOM-P54	NUT, regular, hex., s-fin., S., 3/4-16NF-2	4
			FOM-P92	SCREW, cap, hex-hd., S., cd-pltd., (Make from BCVX2KM-1) 1/2-13NC-3 x 1	4

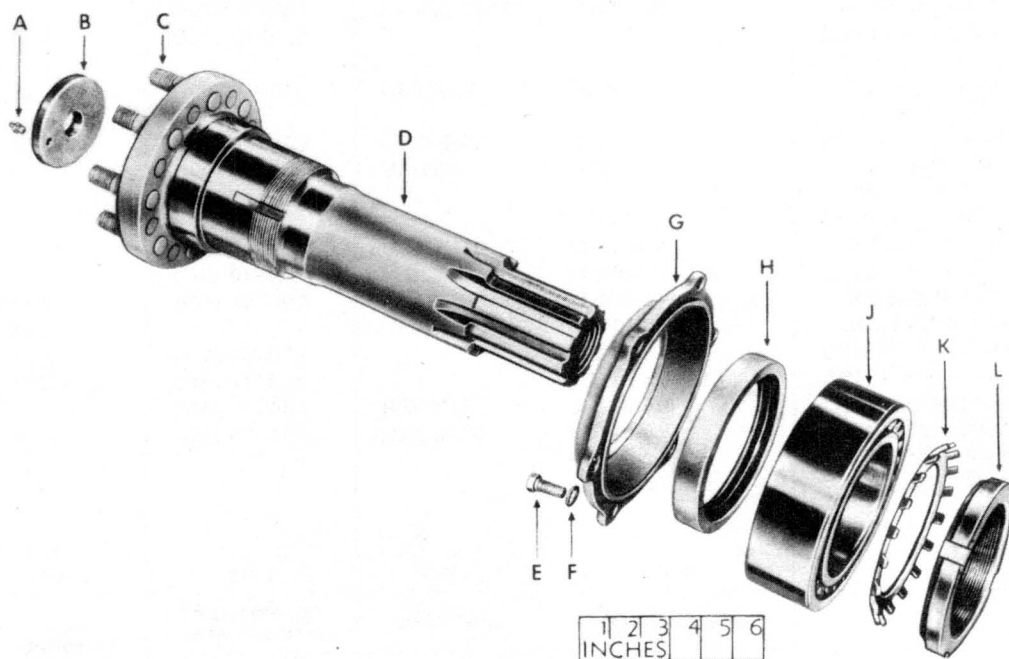

Key	Part Name	Part Number	Group Number
A	FITTING	CLDX3A	1008A
B	WASHER	FOM-5X1025A	1008A
C	STUD	A188473	1307
D	SHAFT w SLEEVE, assembly	FOM-51X1022B	1008A
E	SCREW	BCAX1DC	1008A
F	WASHER	BEAX2A	1008A
G	CAP	FOM-5X1023C	1008A
H	GREASE SEAL	FOM-P5	1008A
J	BEARING	FOM-P8	1008A
K	WASHER	BEFX1BB	1008A
L	NUT	BBRX1BB	1008A

FIGURE 10-4—EXTERIOR FINAL DRIVE SHAFT—EXPLODED VIEW


RA PD 76242

1303-1304

GROUP 13—TRACK SUSPENSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1304—TRACK IDLER	
			FOM-P90	SCREW, cap, hex-hd., S., cd-pltd., 3/4-16NF-3 x 1 3/4.....	4
			FOM-P760	SCREW, cap, hex-hd., S., cd-pltd., 3/4-16NF-3 x 2.....	4
			FOM-P896	WASHER, lock, reg., S., 1/2 in.....	4
			FOM-P910	WASHER, lock, reg., S., 3/4 in.....	8
13-3	H001-1518011	BECX1M	FOM-5X1040C	CAP, rear idler slide head.....	2
13-3	H001-1518015	BECX1R	FOM-5X1051B	CAP, retaining, rear idler sprocket.....	4
13-3	G167-0131550		FOM-P81	SCREW, cap, hex-hd., S., cd-pltd., 5/8-11NC-3 x 2.....	8
13-3	G167-0131551		FOM-P836	WASHER, lock, reg., S., 5/8 in.....	8
			FOM-8X1020B	CLIP, closed, 1/4 in. line (rear idler slide tubing).....	2
			FOM-P86	SCREW, self-tapping, rd-hd., corr-res-S., No. 10 (0.190)-24NC-2 x 1/2.....	2
			FOM-P413	CONNECTOR, tube, heavy duty, 1/4 in., 1/8 in. male pipe end, complete (with sleeve) (rear idler slide tubing) (WH-8205X4).....	4
				COUPLING, pipe, stght., S., black, 1/8 in. (rear idler slide tubing).....	2
13-3	H006-0214010	A145822	FOM-P84	FITTING, lubricating, hydraulic type, elbow, 1/8-27NPT, 90°, male (rear idler slide adjusting screws (2), and follower screws (2)) (AD-1613).....	4
	H002-0222055	CLDX5M	FOM-P79	FITTING, lubricating, hydraulic type, stght., 1/8-27NPT, male, short (rear idler slide) (AD-1610).....	4
			FOM-P1	HEAD, rear idler slide adjusting screw.....	2
13-3	G214-7036279		FOM-50X1042B	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 2.....	8
	H001-5026791	BCAX1CG-1	FOM-P78	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	8
	H001-1519011	BEAXIL	FOM-P28	IDLER, rear, left, assembly (Includes: sprocket, slide, adjusting screw, and screw support).....	1
	G168-7032782		FOM-51X1050DL	IDLER, rear, right, assembly (Includes: sprocket, slide, adjusting screw, and screw support).....	1
			FOM-51X1050DR	NUT, lock, rear idler slide adjusting screw.....	2
13-3	G167-0314839		FOM-5X1045B	PIN, lock, rear idler slide adjusting screw lock nut (1/2-13NC-2).....	2
13-3	G167-0338704		FOM-5X1046A	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 2.....	2
13-3	H001-1013074	BCAX1EG	FOM-P652	WASHER, lock, reg., S., 1/2 in.....	4
13-3	H001-1518011	BECX1M	FOM-P896	SCREW, adjusting, rear idler slide.....	2
13-3			FOM-5X1043B	SCREW, adjusting, rear idler slide, w/HEAD, assembly.....	2
	G167-0382090		FOM-51X1044C	SCREW, follower, rear idler slide tension spring.....	2
13-3	G167-0381991		FOM-5X1041C	NUT, regular, hex., s-fin., S., 5/8-18NF-2.....	4
13-3	H001-0718027	BBBX2B	FOM-P21	STUD, S., 5/8-18NF-2 (7/8) x 5/8-18NF-4 (1) x 3 3/8 in. long.....	4
13-3	G167-0392286		FOM-5X1038A	WASHER, plain, S., SAE std., 5/8 in.....	4
13-3	H001-1530013	BEBX1P	FOM-P77	SLIDE, rear idler, left, assembly (Includes: caps, grease fittings, tubing, clip, and attaching screws).....	1
13-3	G167-0387184		FOM-51X1054DL	SLIDE, rear idler, right, assembly (Includes: caps, grease fittings, tubing, clip, and attaching screws).....	1
			FOM-51X1054DR		

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
13-3	G167-0389404	BECX1R	FOM-5X1039A	SPACER, rear idler follower screw attaching stud (black iron, 0.641 I.D. x 0.840 O.D. x 1 5/8 in. long).....	4
13-3	G167-0389491		FOM-5X1072A	SPRING, tension, rear idler slide.....	2
13-3	G167-0392746		FOM-5X1047C	SUPPORT, rear idler slide adjusting screw.....	2
			FOM-P90	SCREW, cap, hex-hd., S., cd-pltd., 3/4-16NF-3 x 1 3/4.....	8
	H001-1518015		FOM-P910	WASHER, lock, reg., S., 3/4 in.....	8
			FOM-P4402	TUBING, lubrication, rear idler slide (cop., 1/4 in. O.D. x 27 in. long).....	2
1305—TRACKS					
13-4	G214-7036282		FOM-5B139A	BUSHING, track chain link.....	584
13-4	G167-0276520		FOM-51X1097C	CHANNEL, track chain, w/outside LINK, assembly.....	146
	G167-0406000		FOM-51X1096D	CHAIN, track, w/CHANNEL, assembly (Includes: inside and outside links, seals, protectors, bushings, and pins) (Superseded by CHAIN, FOM-51B1D).....	4
	3267-51B1D		FOM-51B1D	CHAIN, track, w/CHANNEL, assembly (Includes: inside and outside links, seals, protectors, bushings, and pins) (Supersedes CHAIN, FOM-51X1096D).....	4

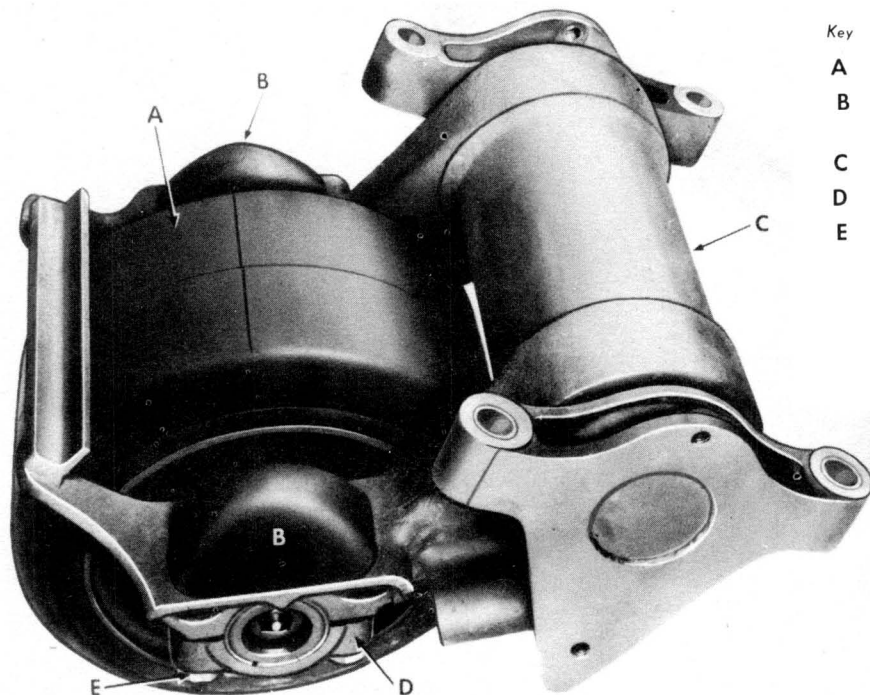


Key	Part Name	Part Number	Group Number
A	WHEEL, assembly.....	FOM-51B156C.....	1303
B	BUMPER, w/BOLT, assembly.....	FOM-51X1008A.....	1303
C	SUSPENSION, assembly.....	FOM-51X1101D.....	1303
D	CAP.....	FOM-5X1003A.....	1303
E	SCREW.....	FOM-P58.....	1303

FIGURE 13-1—BOGIE WHEEL AND TORSIONAL SUSPENSION ASSEMBLY

RA PD 337686

1304-1305

GROUP 13—TRACK SUSPENSION

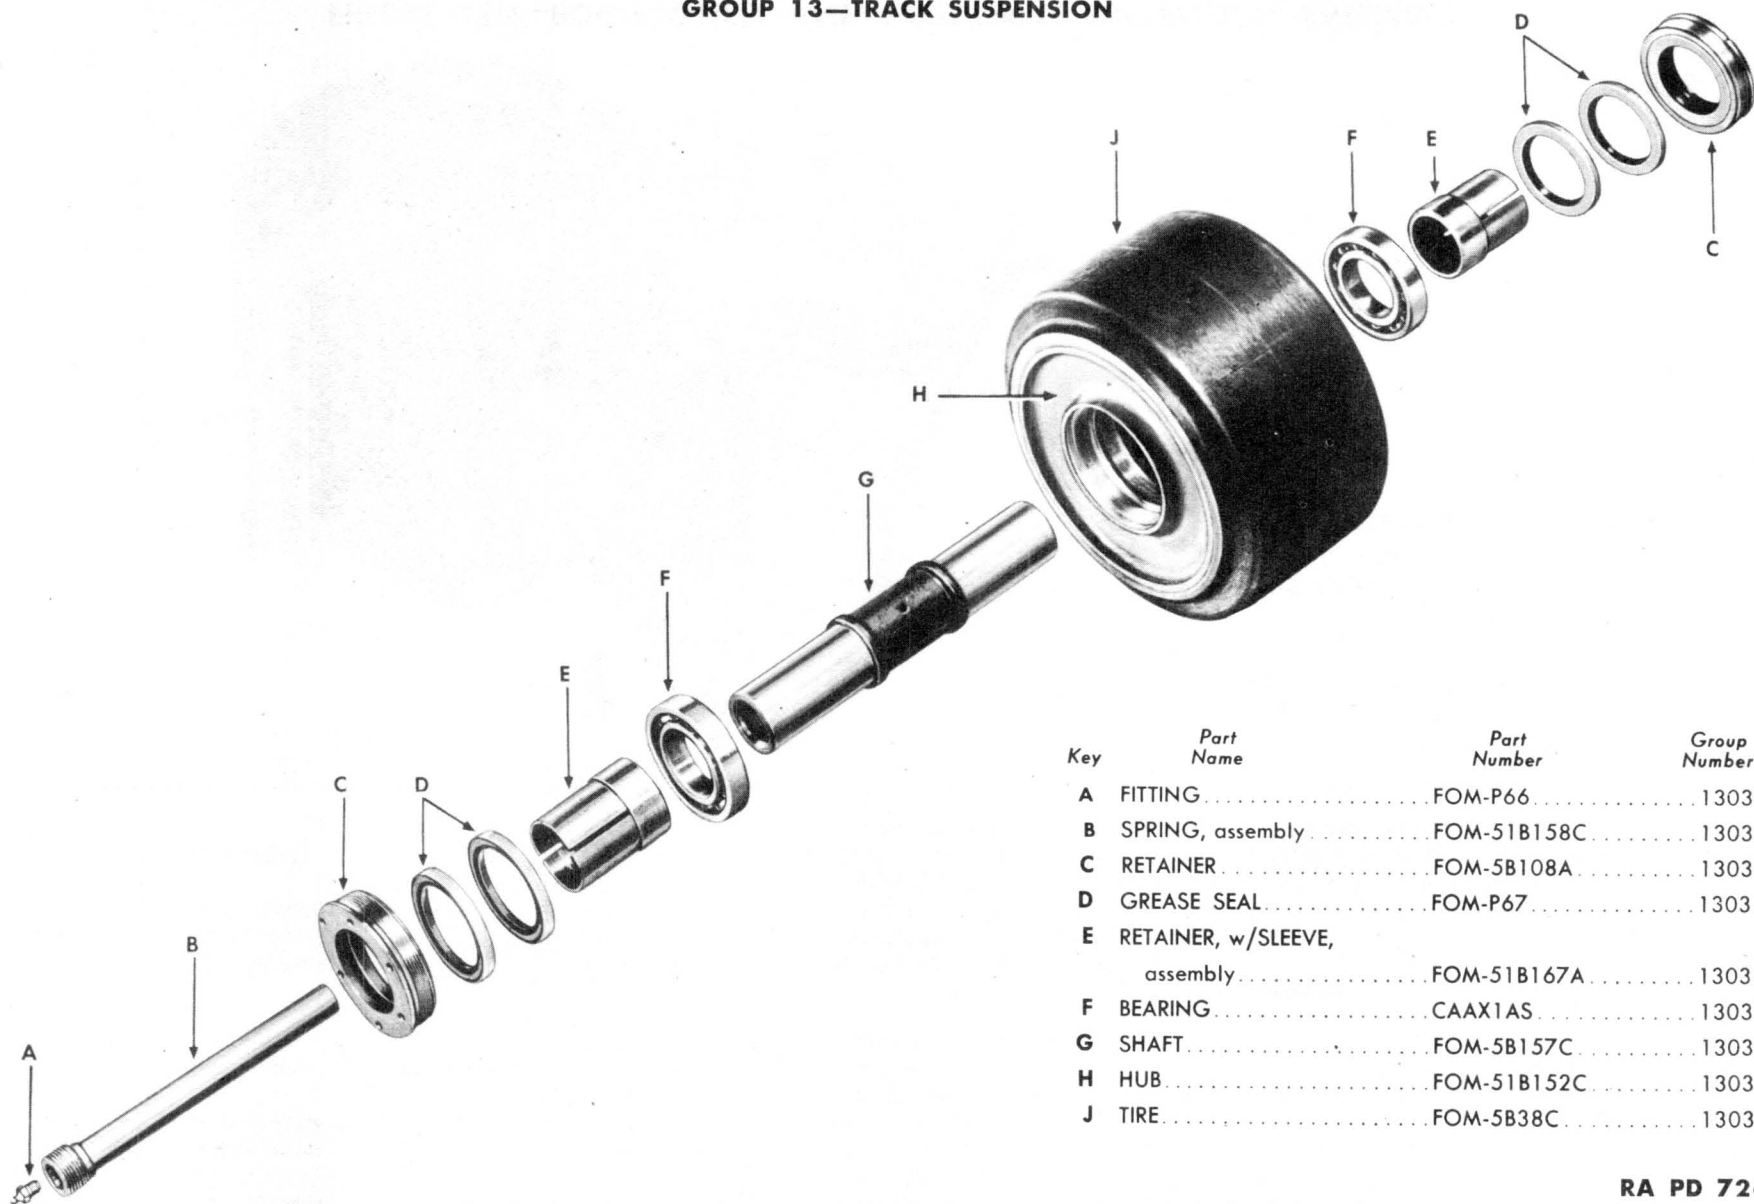


Key	Part Name	Part Number	Group Number
A	FITTING	FOM-P66	1303
B	SPRING, assembly	FOM-51B158C	1303
C	RETAINER	FOM-5B108A	1303
D	GREASE SEAL	FOM-P67	1303
E	RETAINER, w/SLEEVE, assembly	FOM-51B167A	1303
F	BEARING	CAAX1AS	1303
G	SHAFT	FOM-5B157C	1303
H	HUB	FOM-51B152C	1303
J	TIRE	FOM-5B38C	1303

RA PD 72654

FIGURE 13-2—BOGIE WHEEL ASSEMBLY—EXPLODED VIEW

Key	Part Name	Part Number	Group Number
A	SUPPORT	FOM-5X1047C	1304
B	FITTING	FOM-P79	1304
C	SCREW	FOM-P652	1304
D	WASHER	FOM-P896	1304
E	PIN	FOM-5X1046A	1304
F	NUT	FOM-5X1045B	1304
G	SCREW	FOM-5X1043B	1304
H	HEAD	FOM-50X1042B	1304
J	SCREW	FOM-5X1041C	1304
K	NUT	BBBX2B	1304
L	WASHER	BEBX1P	1304
M	CAP	FOM-5X1040C	1304

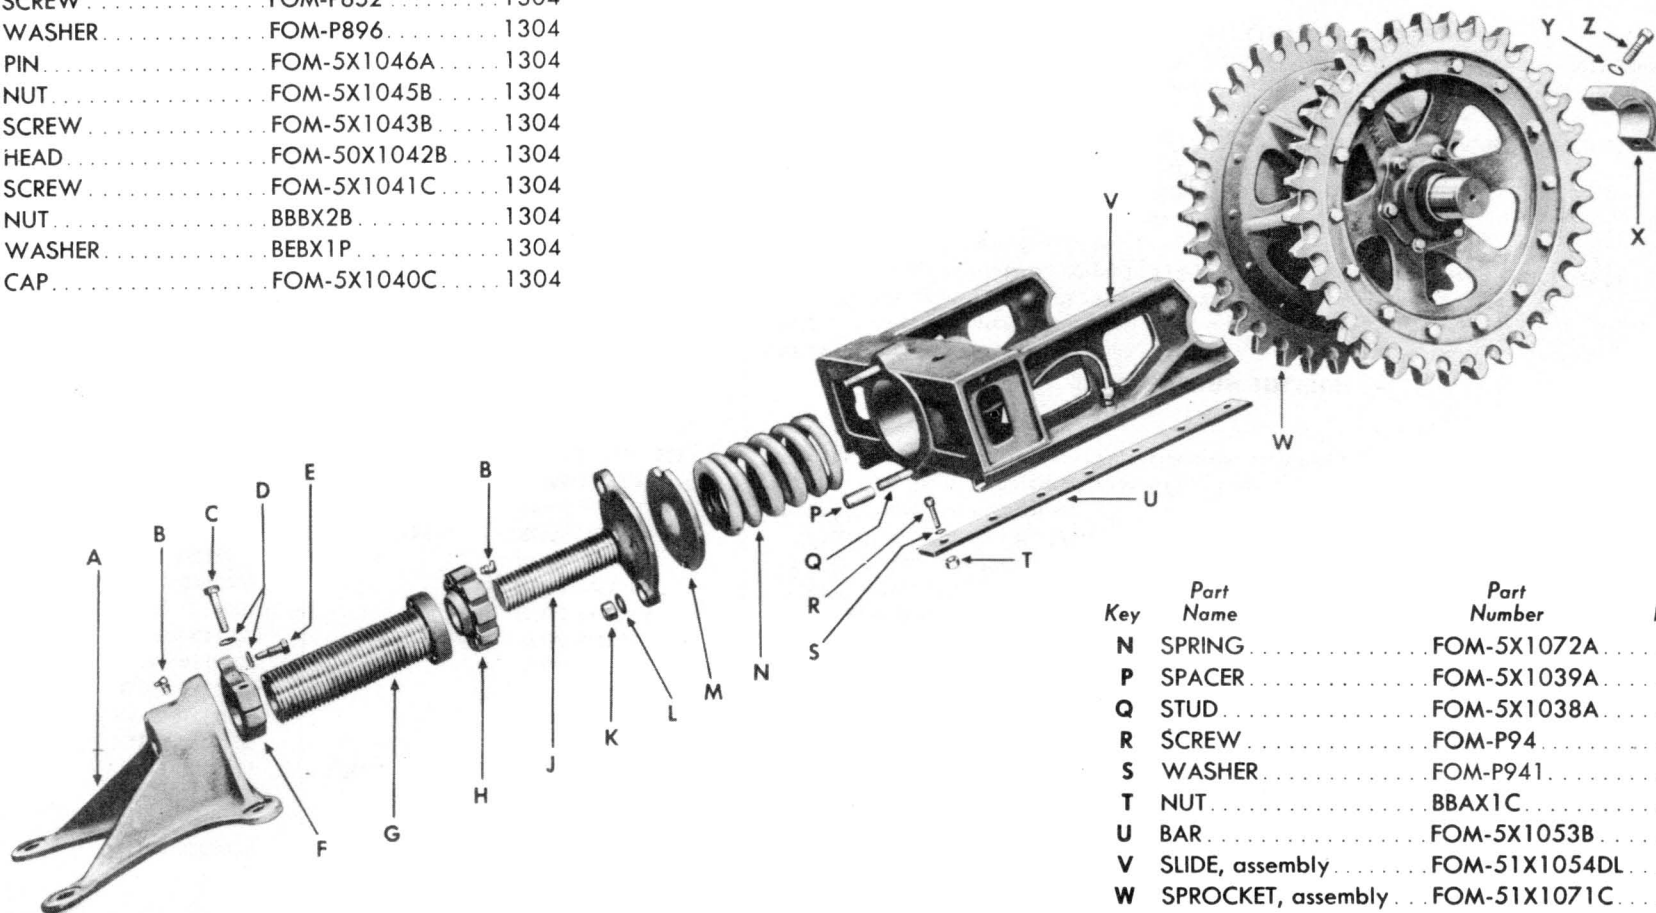


Key	Part Name	Part Number	Group Number
N	SPRING	FOM-5X1072A	1304
P	SPACER	FOM-5X1039A	1304
Q	STUD	FOM-5X1038A	1304
R	SCREW	FOM-P94	1304
S	WASHER	FOM-P941	1304
T	NUT	BBAX1C	1304
U	BAR	FOM-5X1053B	1304
V	SLIDE, assembly	FOM-51X1054DL	1304
W	SPROCKET, assembly	FOM-51X1071C	1307
X	CAP	FOM-5X1051B	1304
Y	WASHER	FOM-P836	1304
Z	SCREW	FOM-P81	1304

RA PD 341152

FIGURE 13-3—REAR IDLER ASSEMBLY—EXPLODED VIEW

GROUP 13—TRACK SUSPENSION

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1305—TRACKS (Contd)	
13-4	G167-0203922	BECX1M	FOM-5B151C	GROUSER, track (Superseded by GROUSER, FOM-5X1110C).....	146
	G214-7036284		FOM-5X1110C	GROUSER, track (Supersedes GROUSER, FOM-5B151C).....	146
13-4	3267-5X1091B		FOM-5X1091B	SCREW, cap, hex-hd., S., 1/2-20NF-3 x 1 1/8.....	584
13-4	H001-1518011		FOM-P896	WASHER, lock, reg., S., 1/2 in.....	584
13-4	G167-0276499		FOM-5B2B	LINK, inside, track chain.....	292
13-4	G167-0314841		FOM-5X1081B	NUT, track link, long.....	292
13-4	G167-0314840		FOM-5X1080B	NUT, track link, short.....	292
13-4	G167-0338708		FOM-P117	PIN, locking, track chain (Superseded by PIN, FOM-5X1107B).....	584
	3267-5X1107B		FOM-5X1107B	PIN, locking, track chain (Supersedes PIN, FOM-P117).....	584
13-4	G167-0338701		FOM-5B138A	PIN, track chain link.....	584
13-4	G167-0340202	BECX1M	FOM-5X1066C	PLATE, cross, track chain.....	146
13-4	3267-5X1091B		FOM-5X1091B	SCREW, cap, hex-hd., S., 1/2-20NF-3 x 1 1/8.....	584
	H001-1518011		FOM-P896	WASHER, lock, reg., S., 1/2 in.....	584
13-4	G167-0344122		FOM-5B86A	PROTECTOR, track chain seal.....	1168
13-4	G167-0382900		FOM-5B87A	SEAL, track chain (neoprene, 1 7/32 I.D. x 1 5/8 O.D. x 0.355 in. thk.).....	1168
F,M	G168-7037162		FOM-51X1111D	TRACK, assembly (Includes: chains, channels, grouser, cross plates, link nuts, and screws).....	2
				1306—RETURN IDLERS	
	G167-0110471	BBAX1E	FOM-5X1034C	ARM, mounting, center return idler, inner.....	2
	G167-0110470		FOM-5X1033C	ARM, mounting, center return idler, outer.....	2
	H001-0718005		FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	16
	H001-1518011	BECX1M	FOM-P209	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4 (Make from BQLX1KP-1)....	16
	G167-0110472		FOM-P896	WASHER, lock, reg., S., 1/2 in.....	16
	G167-0110473		FOM-5X1082C	ARM, mounting, front return idler, inner.....	2
	H001-0718005	BBAX1E	FOM-5X1083C	ARM, mounting, front return idler, outer.....	2
			FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	16
			FOM-P209	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4 (Make from BQLX1KP-1)....	16
13-5	H001-1518011	BECX1M	FOM-P896	WASHER, lock reg., S., 1/2 in.....	16
	H012-1304025		FOM-P3	BEARING, ball, No. 305Y (type H, annular, single row, medium, w/double oil shield, 0.9843 bore, 2.4409 O.D., 0.6693 width) (return idler wheel mounting shaft) (ND-3305)	8
13-5	H002-0504208	CLDX5A	FOM-P1	FITTING, lubricating, hydraulic type, stght., 1/8-27NPT, male, short (return idler wheel) (AD-1610).....	4
13-5	G167-0401020		FOM-51X1098A	HUB, return idler wheel, w/TIRE, assembly.....	4
	G214-7036286		FOM-51X1085C	IDLER, return, center, assembly (Includes: wheel assembly, mounting arms, arm supports, and attaching hardware).....	2
	G214-7036287		FOM-51X1084C	IDLER, return, front, assembly (Includes: wheel assembly, mounting arms, arm supports, and attaching hardware).....	2

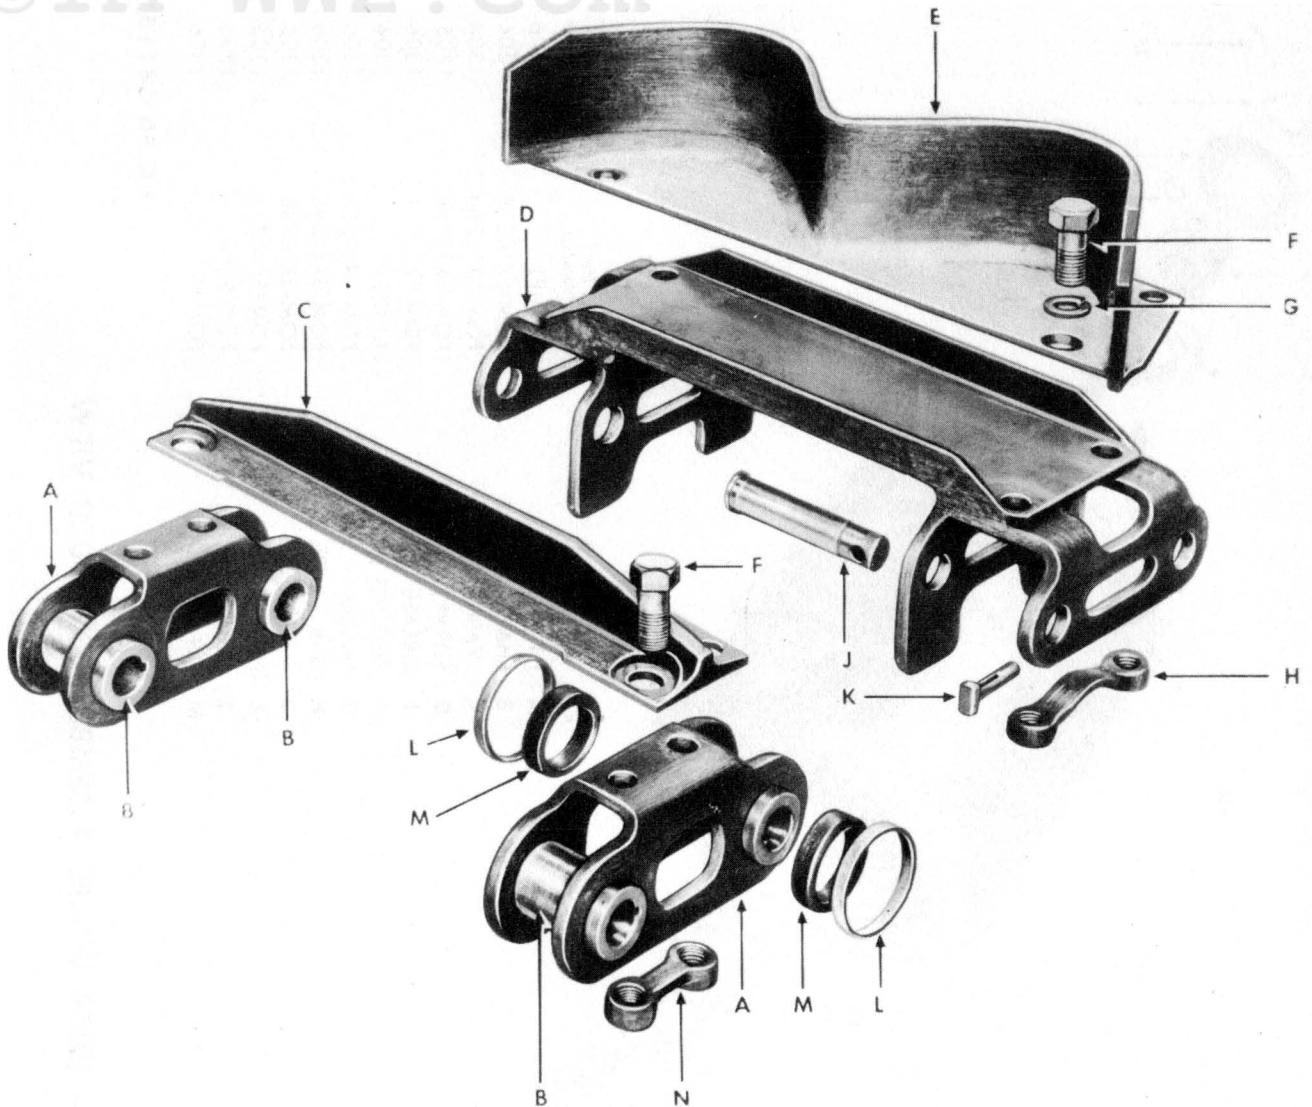

Key	Part Name	Part Number	Group Number
A	LINK	FOM-5B2B	1305
B	BUSHING	FOM-5B139A	1305
C	PLATE	FOM-5X1066C	1305
D	CHANNEL, w/LINK, assembly	FOM-51X1097C	1305
E	GROUSER	FOM-5X1110C	1305
F	SCREW	FOM-5X1091B	1305
G	WASHER	BECX1M	1305
H	NUT	FOM-5X1081B	1305
J	PIN	FOM-5B138A	1305
K	PIN	FOM-5X1107B	1305
L	PROTECTOR	FOM-5B86A	1305
M	SEAL	FOM-5B87A	1305
N	NUT	FOM-5X1080B	1305

RA PD 337687

FIGURE 13-4—TRACK ASSEMBLY—EXPLODED VIEW

GROUP 13—TRACK SUSPENSION


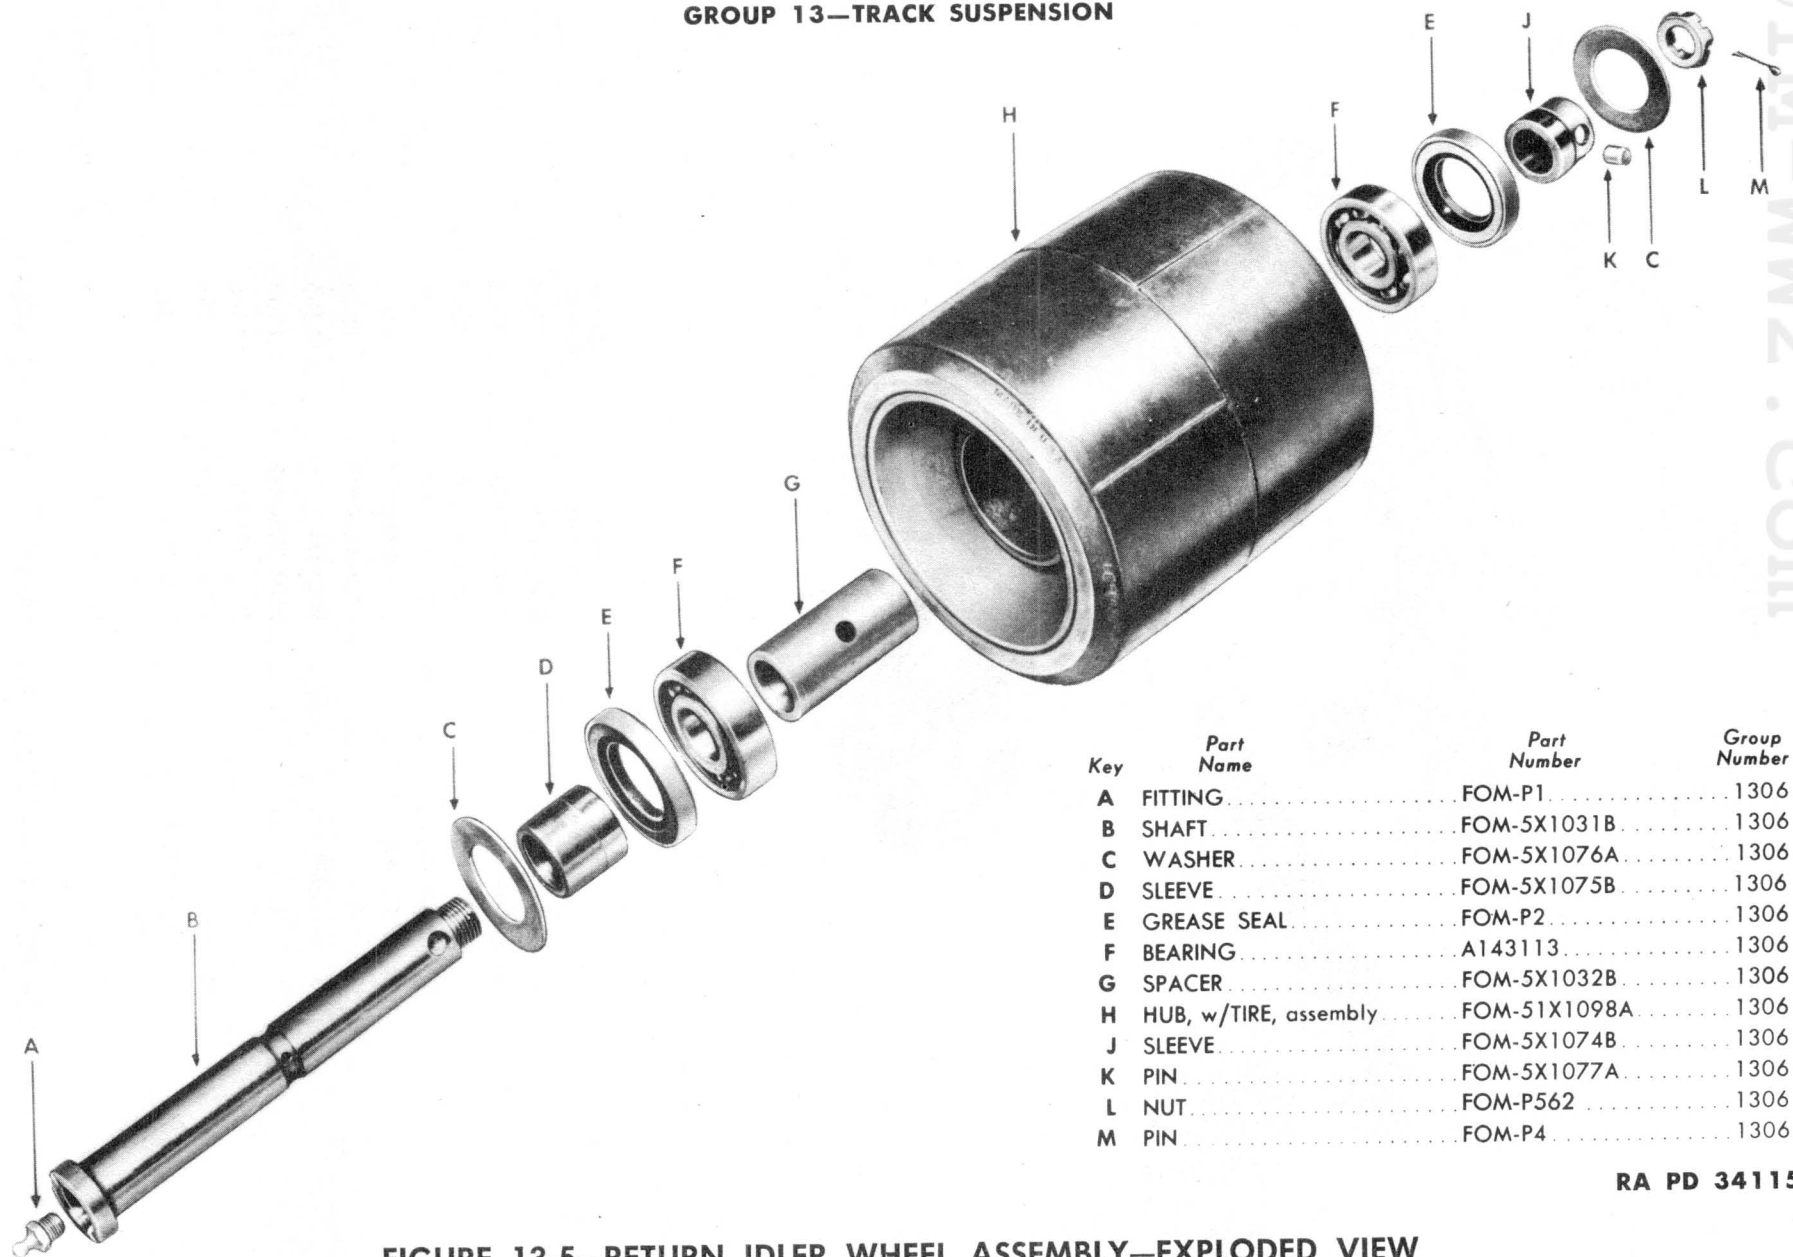


FIGURE 13-5—RETURN IDLER WHEEL ASSEMBLY—EXPLODED VIEW

RA PD 341151

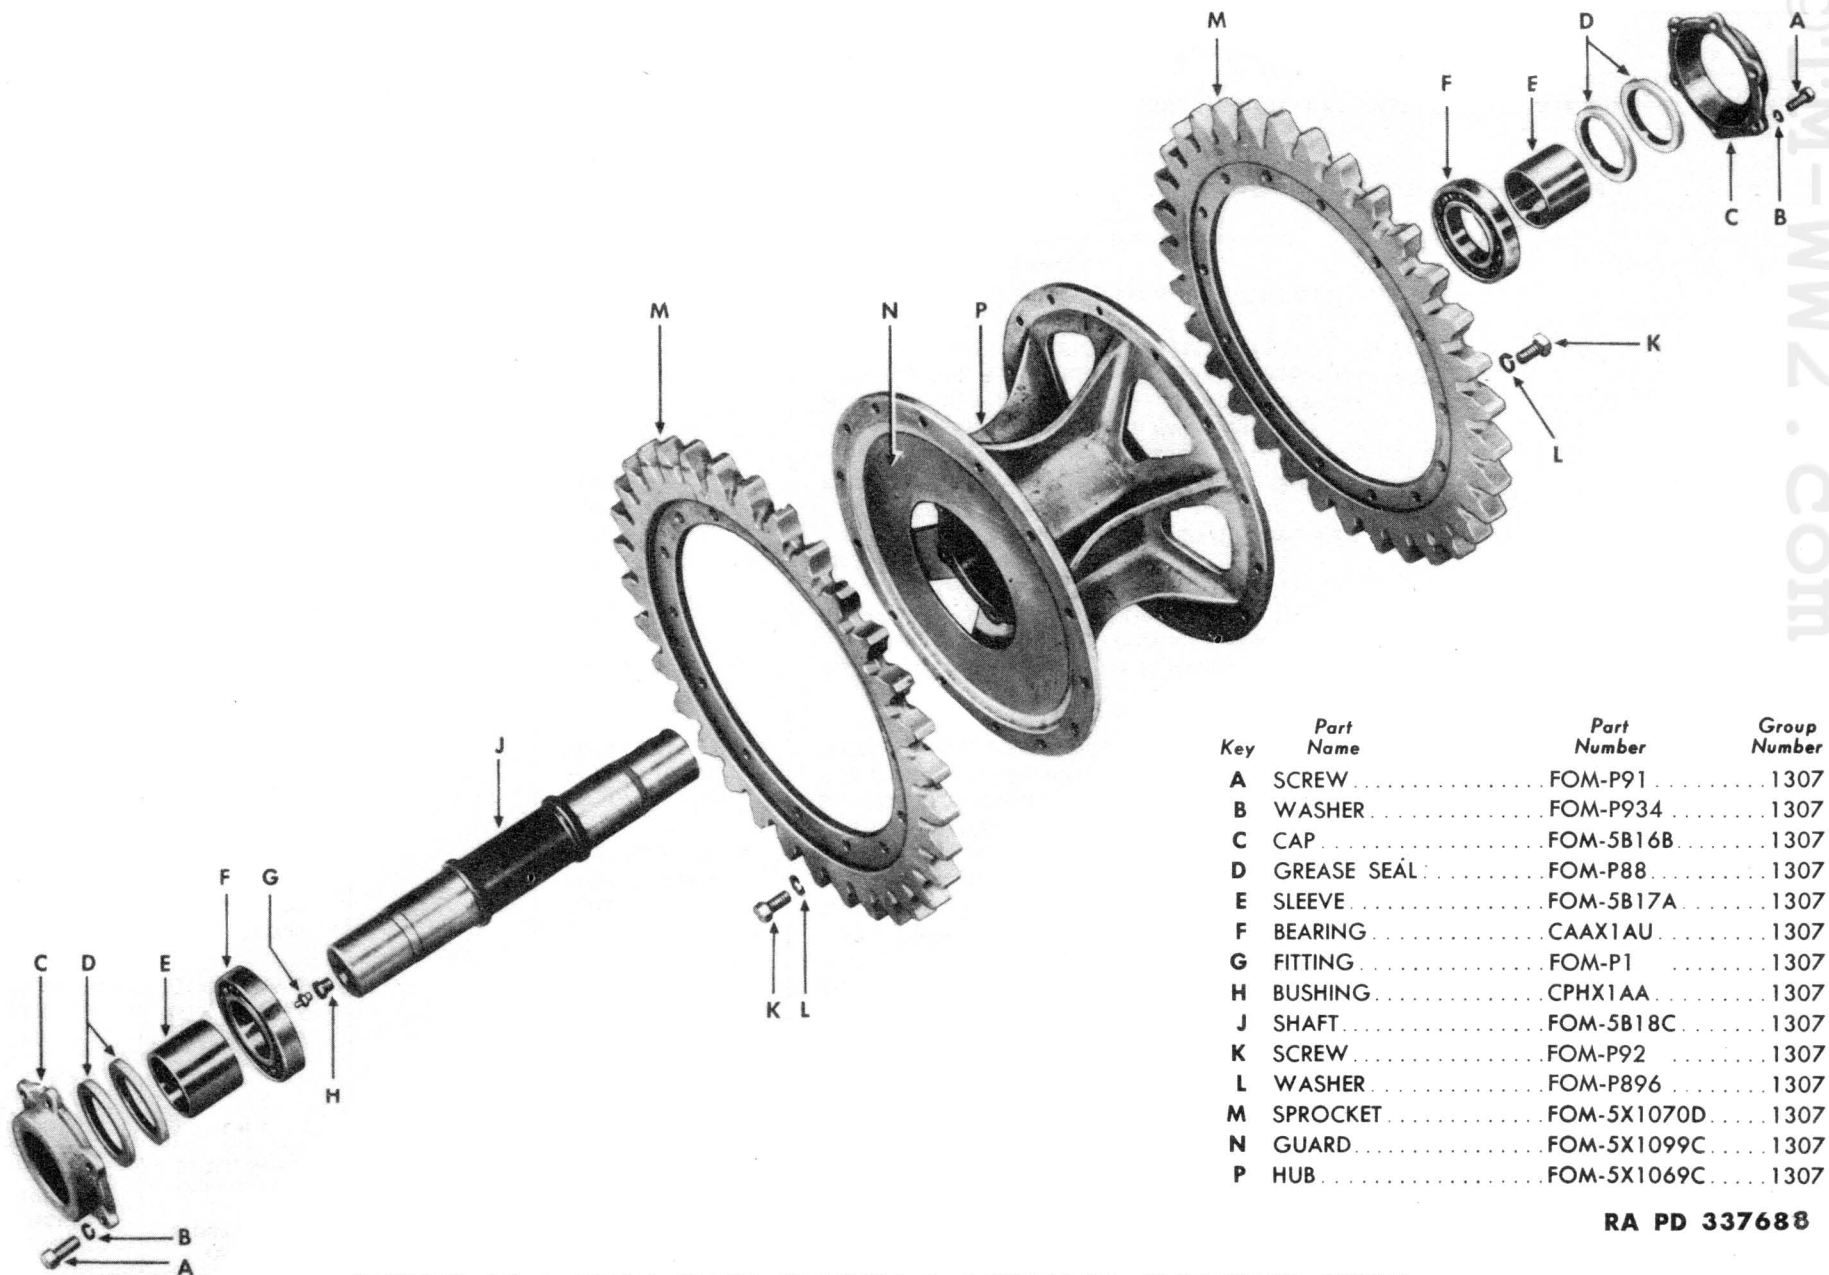

Key	Part Name	Part Number	Group Number
A	SCREW	FOM-P91	1307
B	WASHER	FOM-P934	1307
C	CAP	FOM-5B16B	1307
D	GREASE SEAL	FOM-P88	1307
E	SLEEVE	FOM-5B17A	1307
F	BEARING	CAAX1AU	1307
G	FITTING	FOM-P1	1307
H	BUSHING	CPHX1AA	1307
J	SHAFT	FOM-5B18C	1307
K	SCREW	FOM-P92	1307
L	WASHER	FOM-P896	1307
M	SPROCKET	FOM-5X1070D	1307
N	GUARD	FOM-5X1099C	1307
P	HUB	FOM-5X1069C	1307

RA PD 337688

FIGURE 13-6—REAR IDLER SPROCKET ASSEMBLY—EXPLODED VIEW

GROUP 13—TRACK SUSPENSION


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1306—RETURN IDLERS (Contd)	
13-5	G167-0155706		FOM-5X1077A	PIN, dowel, return idler wheel mounting shaft.....	4
13-5	G167-0382902		FOM-P2	SEAL, grease, return idler wheel mounting shaft bearing.....	8
13-5	G167-0384605		FOM-5X1031B	SHAFT, mounting, return idler wheel.....	4
13-5			FOM-P562	NUT, shear, aircraft, hex., S., 3/4-16NF-3 (AIR-AN320-12).....	4
13-5	G167-0338706		FOM-P4	PIN, cotter, split, br., 3/32 x 1 1/4.....	4
13-5	G167-0387093		FOM-5X1074B	SLEEVE, return idler wheel mounting shaft, inner.....	4
13-5	G167-0387094		FOM-5X1075B	SLEEVE, return idler wheel mounting shaft, outer.....	4
13-5	G167-0389403		FOM-5X1032B	SPACER, return idler wheel mounting shaft bearing (1 I.D. x 1 3/8 O.D. x 2 13/16 in. long).....	4
	G214-7036288		FOM-20X1901B	SUPPORT, front and center return idler mounting arm, assembly (Welded to ponton)...	8
13-5	G167-0443018		FOM-5X1076A	WASHER, 1.346 I.D. x 2.385 O.D. x 0.076 in. thk. (return idler wheel mounting shaft) ..	8
13-5	G167-0446893		FOM-51X1035D	WHEEL, return idler, assembly.....	4
				1307—SPROCKETS	
13-6	H012-1303065	CAAX1AU	FOM-P87	BEARING, ball, No. 213 (type A, annular, single row, light series, 2.5591 bore, 4.7244 O.D., 0.9055 width) (rear idler sprocket shaft) (ND-1213).....	4
13-6	H006-0210040	CPHX1AA	FOM-P89	BUSHING, pipe, shoulder, M.I. black, 1/4 x 1/8 (rear idler sprocket shaft lubricating fitting).....	2
13-6	G167-0131545		FOM-5B16B	CAP, rear idler sprocket bearing.....	4
13-6	H001-1013053	BCVX2GL-1	FOM-P91	SCREW, cap, hex-hd., S., cd-pltd., 7/16-14NC-3 x 1.....	24
13-6	H001-1518010	BECX1L	FOM-P934	WASHER, lock reg., S., 7/16 in.....	24
13-6	H002-0504208	CLDX5A	FOM-P1	FITTING, lubricating, hydraulic type stght., 1/8-27NPT, male, short (rear idler sprocket shaft) (AD-1610).....	2
13-6	G214-7036289		FOM-5X1099C	GUARD, rear idler sprocket hub (Welded to hub).....	2
	G103-0302100		FOM-P11	HUB, final drive sprocket (WIS-4ES16002) (SP-89-282-1).....	2
	H001-072510	BBSX4AH	FOM-P581	NUT, safety, S., cd-pltd., (elastic stop nut type) 3/4-16NF-3.....	16
	G167-0392297	A188473	FOM-P9	STUD, alloy-S., 3/4-16NF-5 (1 1/16) x 1/8-16NF-2 (1 1/8) x 2 7/8 in. long.....	16
13-6	G214-7036290		FOM-5X1069C	HUB, rear idler sprocket.....	2
13-6	G167-0382906		FOM-P88	SEAL, grease, rear idler sprocket bearing (GPC-2154, type L).....	8
13-6	G167-0384601		FOM-5B18C	SHAFT, rear idler sprocket.....	2
13-6	G167-0387092		FOM-5B17A	SLEEVE, rear idler sprocket bearing grease seal.....	4
F,M	G167-0389792		FOM-5X1112D	SPROCKET, final drive (37T.).....	4
			FOM-P92	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 (Make from BCVX2KM-1).....	56
	H001-1518011	BECX1M	FOM-P896	WASHER, lock, reg., S., 1/2 in.....	56
13-6	G167-0389793		FOM-5X1070D	SPROCKET, rear idler (33T.).....	4
13-6			FOM-P92	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 (Make from BCVX2KM-1).....	56
13-6	H001-1518011	BECX1M	FOM-P896	WASHER, lock, reg., S., 1/2 in.....	56
13-3,13-6	G167-0389817		FOM-51X1071C	SPROCKET, rear idler, assembly (Includes: hub, shaft, bearing, cap, grease seal, grease fitting, sleeve bushing, and hub guard).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
GROUP 15—FRAME AND BRACKETS 1501—TOWING ATTACHMENT					
	G168-7039499 G214-7036291 3267-5X1107B		FOM-2X2371C FOM-2X1958B FOM-5X1107B FOM-2X2405B FOM-P1038 FOM-20X2410B FOM-2X2404B FOM-2X1956B	HOOK, tow hitch..... LUG, tow hitch locking pin..... PIN, retaining, tow hitch locking pin (GRV-311)..... PIN, tow hitch hook..... PIN, cotter, S., 3/16 x 1 3/4..... PIN, locking, tow hitch..... SPRING, tow hitch locking pin..... WASHER, tow hitch locking spring.....	1 1 1 1 2 1 1 1
	G168-7039500			GROUP 15A—CONTROLS 15A1—STEERING BRAKE CONTROLS	
15A-1	G214-7136292		FOM-4B37C	BRACKET, steering brake hand lever quadrant.....	2
15A-3	G214-7036293 H001-0718007	BBAX2B	FOM-20X1064C FOM-P201 FOM-P615	BRACKET, steering brake hand lever quadrant, w/BUSHING, assembly..... NUT, regular, hex., s-fin., S., 5/8-11NC-2.....	2 4
	H001-1519015	BEAX2D	FOM-P59	SCREW, cap, hex-hd., S., cd-pltd., 5/8-11NC-3 x 1 1/4.....	4
15A-1	G214-7036294		FOM-4B38C	WASHER, lock, internal teeth, reg., S., 5/8 in. (SK-1228).....	4
15A-3	G214-7036295 H001-0718007	BBAX2B	FOM-40X1065C FOM-P201 FOM-P615	BRACKET, steering brake hand lever shaft..... BRACKET, steering brake hand lever shaft, w/BUSHING, assembly..... NUT, regular, hex., s-fin., S., 5/8-11NC-2.....	1 2 4
	H001-1519015	BEAX2D	FOM-P59	SCREW, cap, hex-hd., S., cd-pltd., 5/8-11NC-3 x 1 1/4.....	4
15A-1	G214-7036296		FOM-P563	WASHER, lock, internal teeth, reg., S., 5/8 in. (SK-1228).....	4
15A-1	H002-0222019	CLDX5G	FOM-P198	BUSHING, steering brake hand lever quadrant bracket and shaft bracket (1 1/4 I.D. x 1 1/2 O.D. x 2 in. long).....	4
15A-2	G103-0401460	B141536	SP-89-489-1	FITTING, lubricating, hydraulic type, elbow, 1/8-27 NPT, 30 degrees, short (left and right steering brake hand lever shafts) (AD-1611).....	4
15A-2	G103-0401520	A143729	SP-89-439-1	GRIP, differential steering brake hand lever.....	2
15A-1,3	G167-0274002		FOM-4B36A	KNOB, differential steering brake hand lever.....	2
15A-1	H001-5028141	BCAX1EE-1	FOM-P74	LEVER, control steering rod (A130820 may be substituted).....	2
15A-1	H001-1520005	BEAX3E	FOM-P19	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/2.....	2
07-1	G103-0401580	C60948	SP-89-348-1	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	2
07-1	G103-0401600	C62973	SP-89-348-3	LEVER, differential steering brake shaft, left (WIS-3ES12685).....	1
	H001-1013075	BCAX1EH	SP-89-847-D	LEVER, differential steering brake shaft, right (WIS-3ES12684).....	1
	H001-1518011	BECX1M	SP-89-83-W	SCREW, cap, hex-hd., S., 1/2-13NC-2 x 2 1/4.....	2
15A-2	G038-0134920		SP-89-348-5 SP-89-6368-X SP-89-6272-X	WASHER, lock, reg., S., 1/2 in. LEVER, hand, differential steering brake..... LEVER, hand, differential steering brake, w/GRIP, assembly.....	2 2 2
15A-1,3	G103-1674061 H001-1013072	C105458 BCAX1EE	SP-459-D	LEVER, hand, differential steering brake, w/QUADRANT, assembly..... SCREW, cap, hex-hd., S., 1/2-13NC-2 x 1 1/2.....	2 2
15A-1	H001-1520005	BEAX3E		WASHER, lock, internal teeth, hv., S., 1/2 in.....	2
15A-2	H001-0718021	BBBX1A	SP-89-341-J	NUT, reg., hex., s-fin., S., 1/4-28NF-2 (differential steering brake hand lever pawl).....	2
15A-2	G103-0401920	A143727	SP-89-532-1	PAWL, differential steering brake hand lever.....	2

GROUP 15A—CONTROLS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				15A1—STEERING BRAKE CONTROLS (Contd)	
15A-1,2	G103-0402240	B141523	SP-89-533-1	QUADRANT, differential steering brake hand lever (FOM-P675).....	2
15A-1			FOM-P18	SCREW, cap, hex-hd., S., 1/2-13NC-3 x 1.....	4
15A-1	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	4
15A-2	G038-0165880	A143756	SP-89-65-4	ROD, differential steering brake hand lever pawl.....	2
15A-1	G214-7036297		FOM-4B41A	ROD, steering, assembly (Includes: sleeve and plain end yoke).....	2
15A-1	H001-0716027	BBDX2B	FOM-P21	NUT, jam, hex., s-fin., S., 5/8-18NF-2.....	2
15A-1	H001-0811052	BFX1DG	FOM-P126	PIN, cotter, split, S. (type B), 1/8 x 1.....	4
15A-1	H001-0823007	BFFX1G	FOM-P133	PIN, rod end, S., 5/8 in. diam.....	4
15A-1	H001-1810080	EEAX1H	FOM-P135	YOKE, rod end, adjustable, heavy, S., 5/8 in.....	2
15A-3	G167-0373272		FOM-41B42B	ROD, steering, assembly (Includes: sleeve, end yokes, and nut).....	2
	G103-0402680	B145583	SP-89-65-2	SHAFT, differential steering brake, left (WIS-2ES12642).....	1
	G103-0402660	B141514	SP-89-65-1	SHAFT, differential steering brake, right (WIS-2ES12643).....	1
15A-1,3	G167-0384611		FOM-4B40B	SHAFT, left steering brake hand lever.....	1
15A-3	G167-0384610		FOM-4B39B	SHAFT, right steering brake hand lever.....	1
15A-2	G103-0403020	A143730	SP-89-72-4	SPRING, differential steering brake hand lever pawl rod.....	2
15A-2	G038-0181290	A143759	SP-89-683-W	WASHER, differential steering brake hand lever knob.....	2
15A-2	G038-0181310	A143757	SP-89-681-W	WASHER, differential steering brake hand lever pawl rod spring.....	2
				15C1—ACCELERATOR AND THROTTLE CONTROLS	
				15C1-A—FOOT CONTROLS	
15A-3	G167-0176892		FOM-3X113B	BLOCK, guide, throttle rod (See group 15D1-CLUTCH CONTROLS)	
15A-3	H001-0718002	BBAX1B	FOM-P55	BOLT, eye, foot pedal return spring (5/16-18NC-2 x 8 3/4 in. long).....	1
15A-8	G214-7036298		FOM-3B44C	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
	G214-7036299		FOM-30X1183C	BRACKET, foot pedal shaft, left (Also listed in group 15D1)	
	H001-0718005	BBAX1E	FOM-P52	BRACKET, foot pedal shaft, left, w/BUSHING, assembly (Also listed in group 15D1)	
			FOM-P49	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	2
	H001-1520005	BEAX3E	FOM-P19	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	2
15A-8	G214-7036300		FOM-3B46C	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	2
	G214-7036301		FOM-30X1187C	BRACKET, foot pedal shaft, right (Also listed in group 15D1)	
	H001-0718005	BBAX1E	FOM-P52	BRACKET, foot pedal shaft, right, w/BUSHING, assembly (Also listed in group 15D1)	
			FOM-P49	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	2
	H001-1520005	BEAX3E	FOM-P19	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	2
15A-5	G214-7036302		FOM-3X1204B	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	2
	G214-7036303		FOM-3X1122B	BRACKET, front bulkhead clutch and accelerator control (Also listed in group 15D1)	
	H001-0718002	BBAX1B	FOM-P55	BRACKET, throttle operating rod control lever.....	1
			FOM-P318	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
	H001-1519010	BEAX1K	FOM-P25	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 2 1/4.....	2
				WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2

Key	Part Name	Part Number	Group Number
A	SCREW	FOM-P74	15A1
B	WASHER	BEAX3E	15A1
C	LEVER, w/QUADRANT, assembly	C105458	15A1
D	SCREW	BCAX1EC	15A1
E	QUADRANT	B141523	15A1
F	FITTING	FOM-P198	15A1
G	BRACKET	FOM-4B37C	15A1
H	BUSHING	FOM-P563	15A1
J	SHAFT	FOM-4B40B	15A1
K	BRACKET	FOM-4B38C	15A1
L	PIN	BFA11DG	15A1
M	ROD, assembly	FOM-4B41-A	15A1
N	NUT	BBDX2B	15A1
P	YOKE	EEAX1H	15A1
Q	PIN	BFFX1G	15A1
R	LEVER	FOM-4B36A	15A1

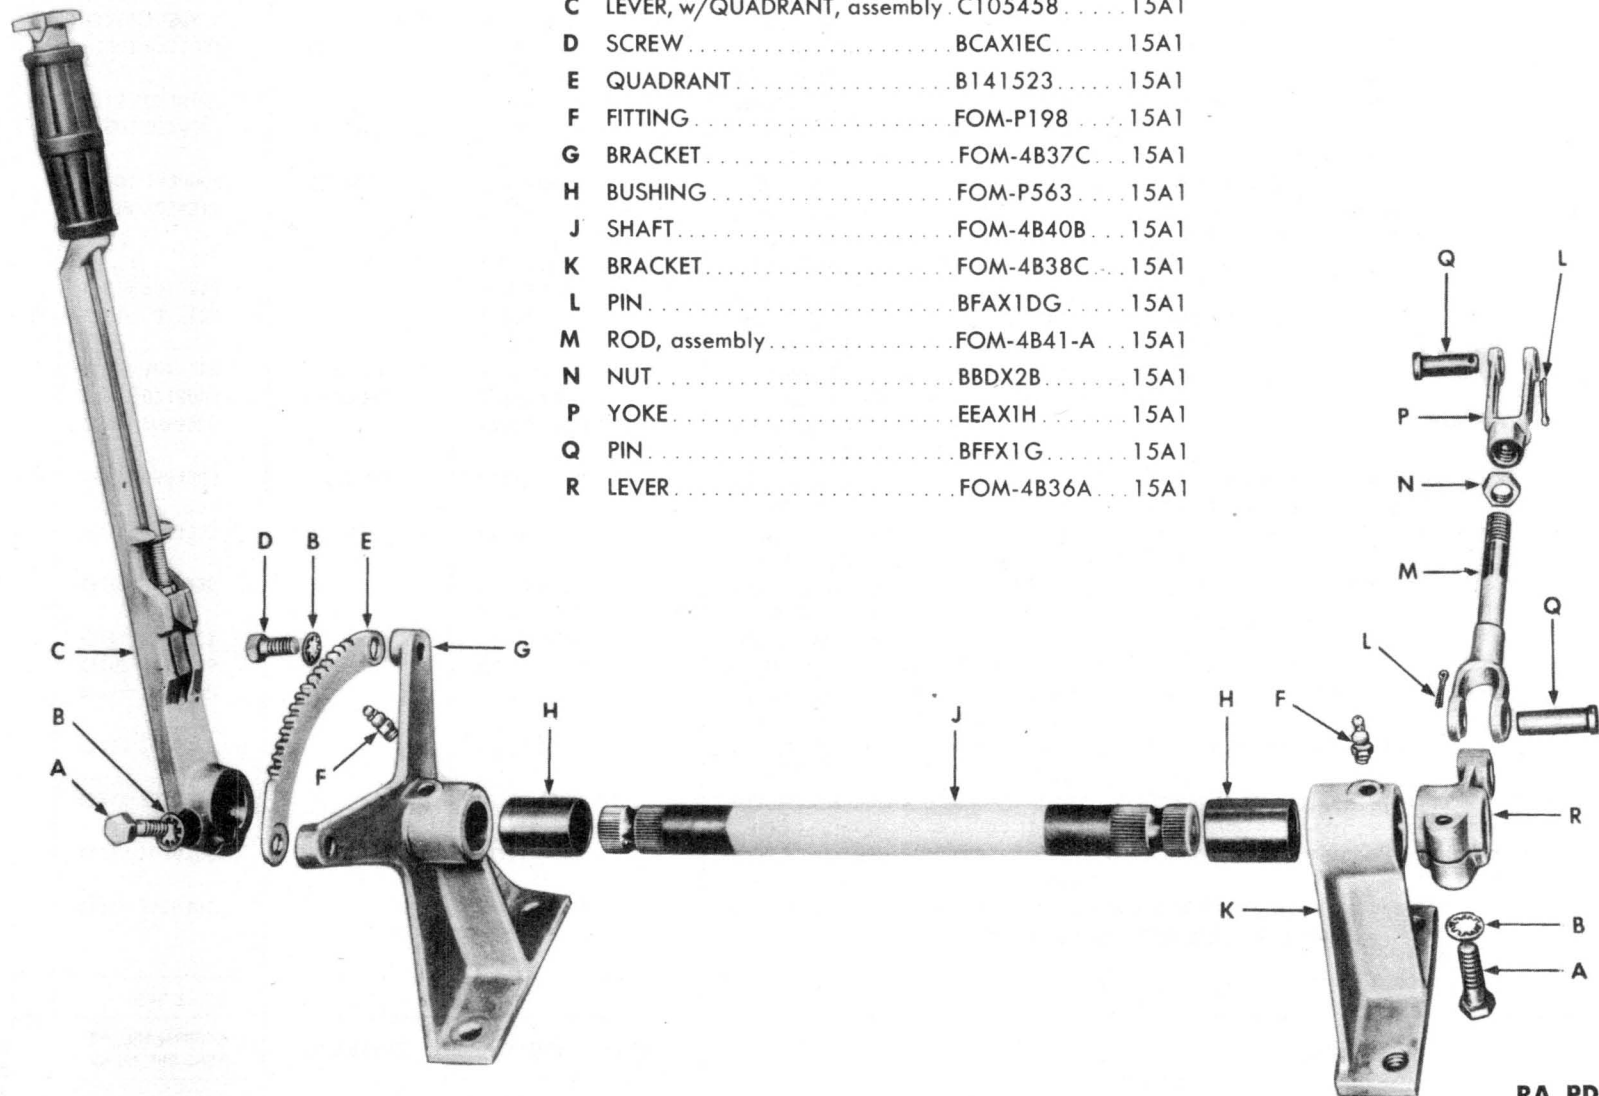


RA PD 341153

FIGURE 15A-1—LEFT STEERING BRAKE HAND LEVER AND SHAFT

GROUP 15A—CONTROLS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				15C1-A—FOOT CONTROLS (Contd)	
15A-8	G214-7036304		FOM-P565	BUSHING, accelerator foot pedal shaft left bracket (1/2 I.D. x 3/4 O.D. x 1 1/2 in. long) (Also listed in group 15D1).....	1
15A-8	G214-7036305		FOM-P566	BUSHING, accelerator foot pedal shaft, right bracket (1/2 I.D. x 3/4 O.D. x 1 in. long) (Also listed in group 15D1).....	1
15A-8	G214-7036306		FOM-P564	BUSHING, clutch foot-pedal shaft, left bracket (1 1/4 I.D. x 1 1/2 O.D. x 2 1/4 in. long) (Also listed in group 15D1)	
15A-8	G214-7036307		FOM-P563	BUSHING, clutch foot pedal shaft, right bracket (1 1/4 I.D. x 1 1/2 O.D. x 2 in. long) (Also listed in group 15D1)	
15A-7	G214-7036308		FOM-3X1121B	BUSHING, throttle rear extension rod (0.494 I.D. x 0.675 O.D. x 1 7/8 in. long).....	1
15A-8	G167-0137985		FOM-3B100A	CLIP, accelerator foot pedal return spring.....	1
15A-8	G167-0139851		FOM-3B67A	COLLAR, retaining, accelerator shaft.....	1
			FOM-P295	RIVET, rd-hd., iron, 1/8 x 1.....	1
15A-7	G167-0139925		FOM-31X1040C	CONTROL, front bulkhead clutch and accelerator, assembly (Includes: bracket, levers, spacers, pins, fitting, and attaching hardware)	
15A-5	H002-0504203	CLDX9A	FOM-P291	FITTING, lubricating, hydraulic type, stght., 1/4-28NS, male (front bulkhead clutch and accelerator control levers) (Also listed in group 15D1) (AD-1641)	
15A-8	H002-0504205	CLDX9C	FOM-P236	FITTING, lubricating, hydraulic type, elbow, 1/4-28NS, male (accelerator foot pedal shaft brackets) (AD-1636).....	2
	G214-7036309		FOM-3X1123B	LEVER, control, throttle operating rod.....	1
15A-5	H001-0718023	BBBX1C	FOM-P60	NUT, regular, hex., s-fin., S., 3/8-24NF-2.....	1
	H001-1013258	BCVX4AH-1	FOM-P211	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-3 x 4 1/2.....	1
15A-5			FOM-P941	WASHER, lock, internal teeth, reg., S., 3/8 in.....	1
01-16,15A-7	G168-7037172		FOM-31X1106B	LEVER, control, throttle operating rod, w/BRACKET, assembly.....	1
15A-5	G214-7036310		FOM-3X1042B	LEVER, front bulkhead accelerator control.....	1
15A-5		BCVX2LL-1	FOM-P289	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-3 x 1.....	1
15A-5			FOM-3X1168B	SCREW, retaining, front bulkhead clutch and accelerator control levers.....	1
15A-5	G214-7036311		FOM-3X1167B	SPACER, tube, front bulkhead clutch and accelerator control levers.....	1
15A-5	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	2
15A-7			FOM-3X1129B	NUT, coupling, rear throttle rod (3/8 sq.-16NC-2 x 3 3/16 in. long).....	1
15A-7,8	H001-0716003	BBCX1C	FOM-P229	NUT, jam, hex., s-fin., S., 3/8-16NC-2.....	1
15A-3,8	G167-0336145		FOM-31B75C	PEDAL, foot, accelerator, assembly (Includes: shaft and control lever).....	1
15A-5			FOM-3X1169B	PIN, front bulkhead accelerator control lever.....	1
15A-5	H001-0811037	BFAX1CC	FOM-P235	PIN, cotter, split, S. (type B), 3/32 x 1/2.....	1
01-16	G214-7036312		FOM-30X1120B-1	ROD, extension, throttle, rear (3/8 in. diam. x 23 5/16 in. long).....	1
01-16	H001-0716023	BBDX1C	FOM-P130	NUT, jam, hex., s-fin., S., 3/8-24NF-2.....	1
01-16	H001-0811033	BFAX1CD	FOM-P129	PIN, cotter, split, S. (type B), 3/32 x 5/8.....	1
01-16	H001-0823004	BFFX1D	FOM-P64	PIN, rod end, S., 3/8 in. diam.....	1
01-16	H001-1810040	EEAX1D	FOM-P131	YOKE, rod end, adjustable, light, S., 3/8 in.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
15A-7	G167-0373275		FOM-30X1120B	ROD, extension, throttle, rear, assembly (Includes: end yoke, yoke pin, jam nut, and cotter pin).....	1
01-16,15A-7	G167-0373274		FOM-30X1086B	ROD, operating, throttle, assembly (Includes: adjustable end yoke, jam nut, clevis, yoke pins, and cotter pins) (5/16 in. diam. x 10 3/16 in. long).....	1
15A-5	H001-0716022	BBDX1B	FOM-P233	NUT, jam, hex., s-fin., S., 5/16-24NF-2.....	1
	H001-0811037	BFAX1CC	FOM-P235	PIN, cotter, split, S. (type B), 3/32 x 1/2.....	2
	H001-0823003	BFFX1C	FOM-P234	PIN, rod end, S., 5/16 in. diam.....	2
	H001-1810030	EEAX1C	FOM-P232	YOKE, rod end, adjustable, light, S., 5/16 in.....	1
15A-3,7	G167-0373375		FOM-31X1018C	ROD, throttle, front, assembly (Includes: end yokes, jam nut, and sleeve) (3/8 in. diam. x 49 3/16 in. long).....	1
01-16	H001-0716023	BBDX1C	FOM-P130	NUT, jam, hex., s-fin., S., 3/8-24NF-2.....	
15A-8	H001-0811027	BFAX1BE		PIN, cotter, split, S. (type B), 1/16 x 3/4.....	1
15A-8	G167-0338709		FOM-3B69A	PIN, end, throttle front rod.....	1
01-16	H001-1810040	EEAX1D	FOM-P131	YOKE, rod end, adjustable, light, S., 3/8 in.....	1

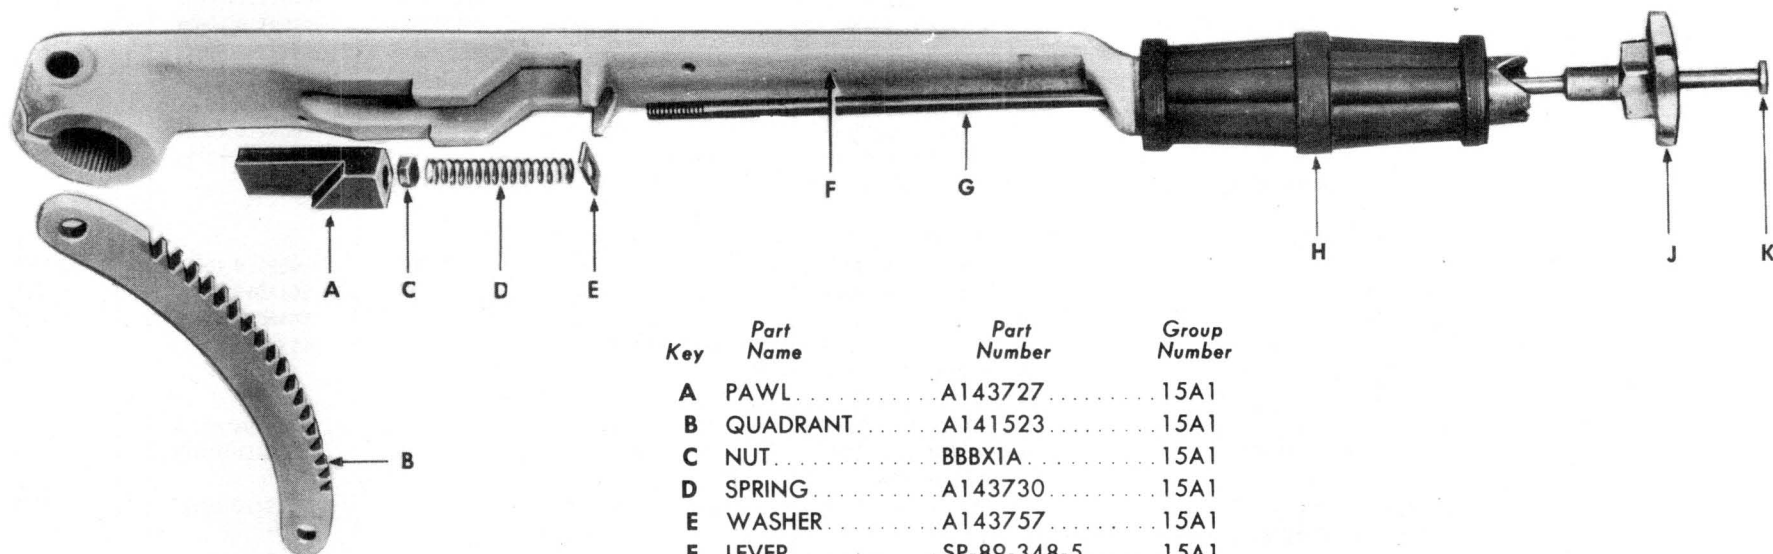


Key	Part Name	Part Number	Group Number
A	PAWL.....	A143727.....	15A1
B	QUADRANT.....	A141523.....	15A1
C	NUT.....	BBBX1A.....	15A1
D	SPRING.....	A143730.....	15A1
E	WASHER.....	A143757.....	15A1
F	LEVER.....	SP-89-348-5.....	15A1
G	ROD.....	SP-89-65-14.....	15A1
H	GRIP.....	B141536.....	15A1
J	KNOB.....	A143729.....	15A1
K	WASHER.....	A143759.....	15A1

RA PD 337697

FIGURE 15A-2—DIFFERENTIAL STEERING BRAKE HAND LEVER ASSEMBLY—EXPLODED VIEW

GROUP 15A—CONTROLS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				15C1-A—FOOT CONTROLS (Contd)	
15A-7	G167-0373276		FOM-31X1022B	ROD, throttle, intermediate, assembly (Includes: sleeve and rod and eye) (3/8 in. diam. x 49 7/16 in. long)	1
15A-7	G167-0373273		FOM-3X1026B	ROD, throttle, rear (3/8 in. diam. x 77 11/16 in. long)	1
	G214-7036313		FOM-31X1103C	SHAFT, foot pedal, assembly (Includes: clutch pedal, clutch lever, accelerator pedal assembly, accelerator lever, collars, brackets, set screw, grease fittings, and attaching hardware) (Also listed in group 15D1)	
	G214-7036314		FOM-3X1151B	SPACER, tube, throttle operating rod control lever	1
15A-3	G167-0389494		FOM-3B54A	SPRING, return, foot pedal	1
15A-7	G167-0408193		FOM-P227	TURNBUCKLE, intermediate and rear throttle rod (3/8-16NC-2)	1
15A-7	H001-0716003	BBCX1C	FOM-P229	NUT, jam, hex., s-fin., S., 3/8-16NC-2	1
15A-7			FOM-P231	NUT, jam, hex., s-fin., S., left-hand, 3/8-16NC-2	1
				15C1-B—HAND CONTROLS	
	G214-7036315		FOM-30X1111C	BRACKET, hand throttle cable, assembly	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2	2
	H001-1013072	BQLX1KQ-1	FOM-P651	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/2	2
	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424)	2
	G168-7037176		FOM-3X1202B	BRACKET, mounting, hand throttle	1
	H001-0716024	BBDX1D	FOM-P415	NUT, jam, hex., s-fin., S., 7/16-20NF-2	6
	H001-1519012	BEAX2A	FOM-P934	WASHER, lock, internal teeth, reg., S., 7/16 in.	3
15A-8	G167-0139851		FOM-3B67A	COLLAR, retaining, accelerator shaft	1
			FOM-P295	RIVET, rd-hd., iron, 1/8 x 1	1
15A-8	G214-7036316		FOM-3B68A	COLLAR, retaining, hand throttle control lever	1
15A-8	H001-0824026	BFCX1BC	FOM-P237	PIN, taper, S., No. 0 (0.156) x 1	1
	G214-7036317		FOM-P914	CONTROL, hand throttle, assembly (Does not include 5/8 in. and 3/4 in. washers) (TRU-SA2821-E-3 1/8)	1
15A-4	H001-0716027	BBDX2B	TRU-RA2133-9	NUT, jam, hex., s-fin., S., 5/8-18NF-2	2
15A-4	H001-0716028	BBDX2C	TRU-RA2133-10	NUT, jam, hex., s-fin., S., 3/4-16NF-2	1
15A-4	H001-1518013	BECX1P	TRU-RA2251-9	WASHER, lock, reg., S., 5/8 in.	1
15A-4	H001-1518015	BECX1R	TRU-RA2251-11	WASHER, lock, reg., S., 3/4 in.	1
15A-4			FOM-P77	WASHER, plain, S., 5/8 in.	2
15A-4			FOM-P239	WASHER, plain, S., 3/4 in.	2
	G167-0400050		FOM-30X1112C	CONTROL, hand throttle, assembly (Includes: 5/8 in. and 3/4 in. washers)	1
15A-4			TRU-RA965-1	NUT, jam, hex., s-fin., S., No. 10 (0.190)-32NF-2	1
	H001-0811039	BFA1X1CE	FOM-P63	PIN, cotter, split, S. (type B), 3/32 x 3/4	1
	H001-0823002	BFFX1B	FOM-P319	PIN, rod end, S., 1/4 in. diam.	1
15A-4	H001-1518005	BECX1E	TRU-RA2251-1	WASHER, lock, reg., S., No. 10 (0.190)	1
15A-4	H001-1810010	EEAX1A	TRU-RA2239	YOKE, rod end, adjustable, light, S., 3/16 in. (No. 10)	1

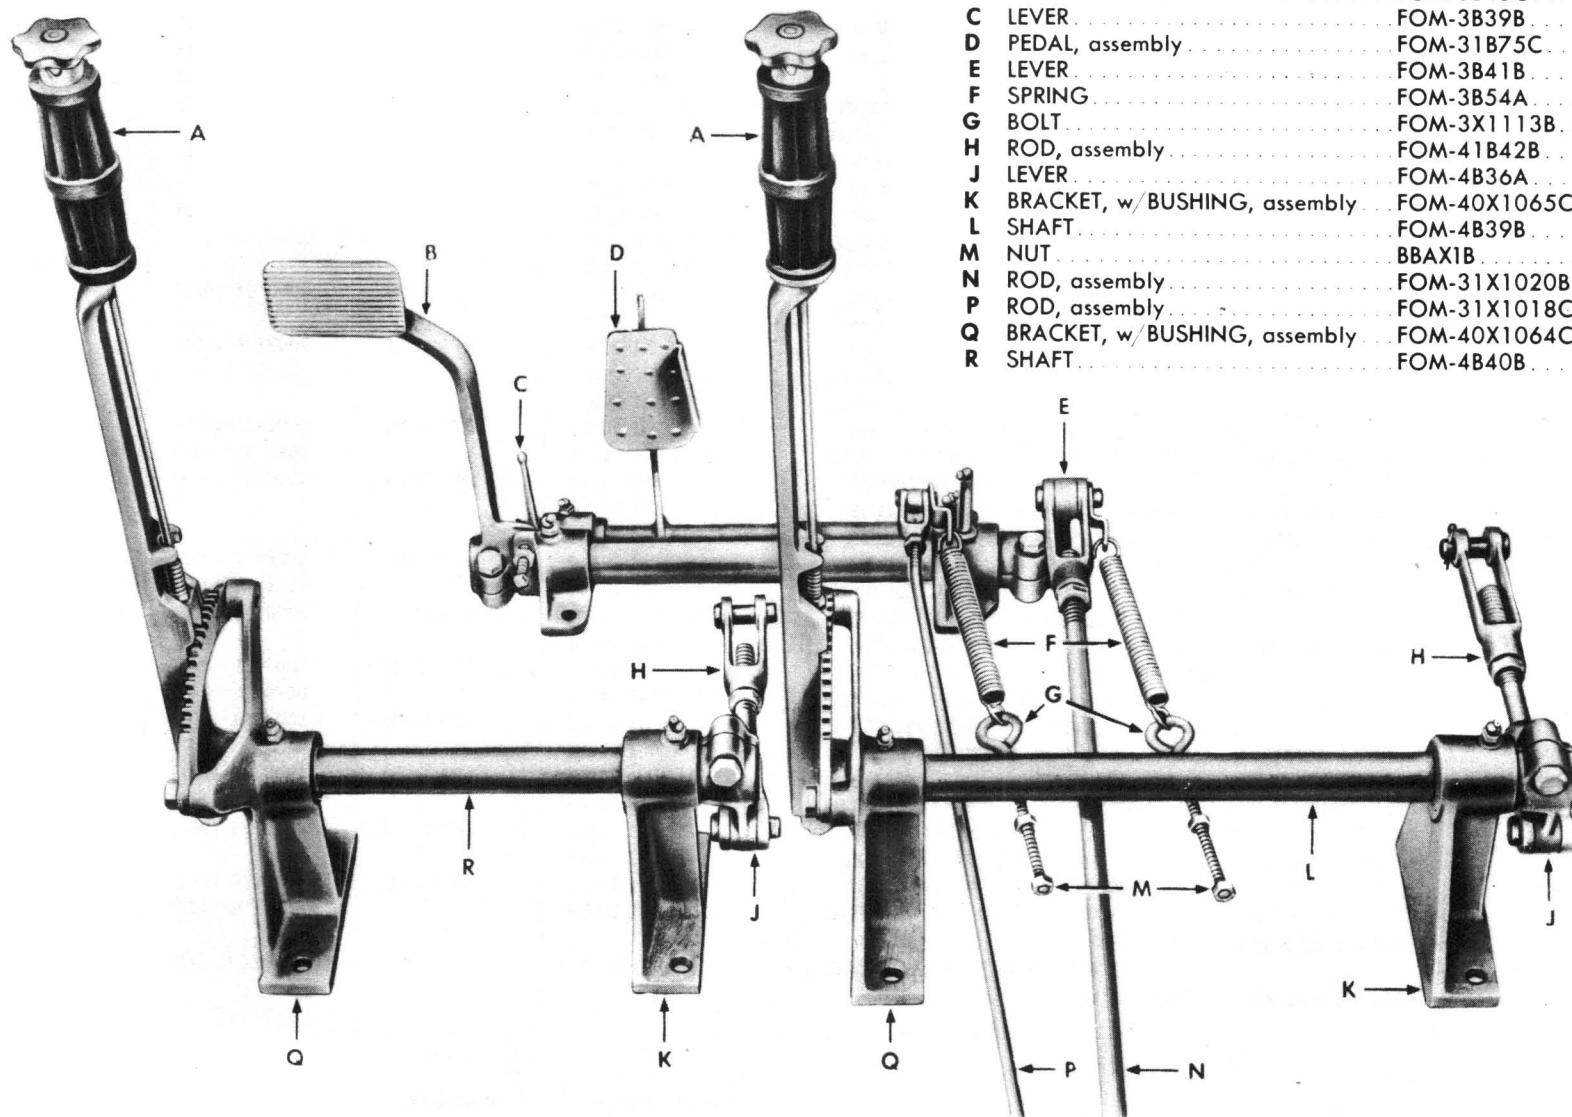

Key	Part Name	Part Number	Group Number
A	LEVER, w/ QUADRANT, assembly	C105458	15A1
B	PEDAL	FOM-3B45C	15D1
C	LEVER	FOM-3B39B	15C1-B
D	PEDAL, assembly	FOM-31B75C	15C1-A
E	LEVER	FOM-3B41B	15D1
F	SPRING	FOM-3B54A	15C1-A, 15D1
G	BOLT	FOM-3X1113B	15C1-A, 15D1
H	ROD, assembly	FOM-41B42B	15A1
J	LEVER	FOM-4B36A	15A1
K	BRACKET, w/ BUSHING, assembly	FOM-40X1065C	15A1
L	SHAFT	FOM-4B39B	15A1
M	NUT	BBAX1B	15C1-A, 15D1
N	ROD, assembly	FOM-31X1020B	15D1
P	ROD, assembly	FOM-31X1018C	15C1-A
Q	BRACKET, w/ BUSHING, assembly	FOM-40X1064C	15A1
R	SHAFT	FOM-4B40B	15A1

FIGURE 15A-3—STEERING CONTROLS AND FOOT PEDALS

RA PD 337698

GROUP 15A—CONTROLS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				15C1-B—HAND CONTROLS (Contd)	
15A-3,8	G167-0274000		FOM-3B39B	LEVER, control, hand throttle.....	1
				15D1—CLUTCH CONTROLS	
15A-7	G214-7036318		FOM-30X1127B	BLOCK, guide, clutch and throttle intermediate rod, assembly.....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	4
			FOM-P240	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 2 1/2.....	4
	H001-1530007	BEBX1G	FOM-P160	WASHER, plain, S., SAE std., 1/4 in.....	4
15A-7	G214-7036319		FOM-30X1124B	BLOCK, guide, clutch and throttle rear rod, assembly.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
			FOM-P240	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 2 1/2.....	2
	H001-1530007	BEBX1G	FOM-P160	WASHER, plain, S., SAE std., 1/4 in.....	2
15A-7	G214-7036320		FOM-30X1125B	BLOCK, guide, clutch and throttle rear rod, assembly.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
			FOM-P240	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 2 1/2.....	2
	H001-1530007	BEBX1G	FOM-P160	WASHER, plain, S., SAE std., 1/4 in.....	2
15A-7	G214-7036321		FOM-30X1126B	BLOCK, guide, clutch and throttle rear rod, assembly.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	3
			FOM-P241	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1 3/4.....	1
			FOM-P240	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 2 1/2.....	2
	H001-1530007	BEBX1G	FOM-P160	WASHER, plain, S., SAE std., 1/4 in.....	4
15A-3	G167-0176892		FOM-3X1113B	BOLT, eye, foot pedal return spring (5/16-18NC-2 x 8 3/4 in. long).....	1
15A-3	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
15A-8			FOM-3B44C	BRACKET, foot pedal shaft, left (Also listed in group 15C1).....	1
			FOM-30X1183C	BRACKET, foot pedal shaft, left, w/BUSHING, assembly (Also listed in group 15C1).....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	2
			FOM-P49	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	2
	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	2
15A-8			FOM-3B46C	BRACKET, foot pedal shaft, right (Also listed in group 15C1).....	1
			FOM-30X1187C	BRACKET, foot pedal shaft, right, w/BUSHING, assembly (Also listed in group 15C1).....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NF-2.....	2
			FOM-P49	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	2
	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424).....	2
15A-5			FOM-3X1204B	BRACKET, front bulkhead clutch and accelerator control (Also listed in group 15C1).....	1
15A-6	G167-0125827		FOM-3X1147C	BRACKET, rear bulkhead clutch control rocker.....	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	4
	H001-5420601	BCVX2EN-1	FOM-P30	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1 1/4.....	4
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	4
15A-8			FOM-P565	BUSHING, accelerator foot pedal shaft, left bracket (1/2 I.D. x 3/4 O.D. x 1 1/2 in. long) (Also listed in group 15C1).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
15A-8			FOM-P566	BUSHING, accelerator foot pedal shaft, right bracket (1/2 I.D. x 3/4 O.D. x 1 in. long) (Also listed in group 15C1).	1
15A-8			FOM-P564	BUSHING, clutch foot pedal shaft, left bracket (1 1/4 I.D. x 1 1/2 O.D. x 2 1/4 in. long) (Also listed in group 15C1).	1
15A-8			FOM-P563	BUSHING, clutch foot pedal shaft, right bracket (1 1/4 I.D. x 1 1/2 O.D. x 2 in. long) (Also listed in group 15C1).	1
15A-6	G167-0128013		FOM-P206	BUSHING, rear bulkhead clutch control rocker (oilite) (5/8 I.D. x 13/16 O.D. x 43/64 in. long).	2
15A-6	G167-0128016		FOM-P440	BUSHING, rear bulkhead clutch control rocker, center (1 I.D. x 1 3/16 O.D. x 7/8 in. long).	2
15A-8	G167-0137986		FOM-3B99A	CLIP, clutch foot pedal return spring.	1
15A-7	G167-0139925		FOM-31X1040C	CONTROL, front bulkhead clutch and accelerator, assembly (Includes: bracket, levers, spacers, pins, fitting, and attaching hardware) (Also listed in group 15C1).	1
15A-7	G214-7036322		FOM-31X1046D	CONTROL, rear bulkhead clutch, assembly (Includes: operating rod, bracket, rocker, pivot pin, pin plate, grease fitting, and attaching hardware).	1


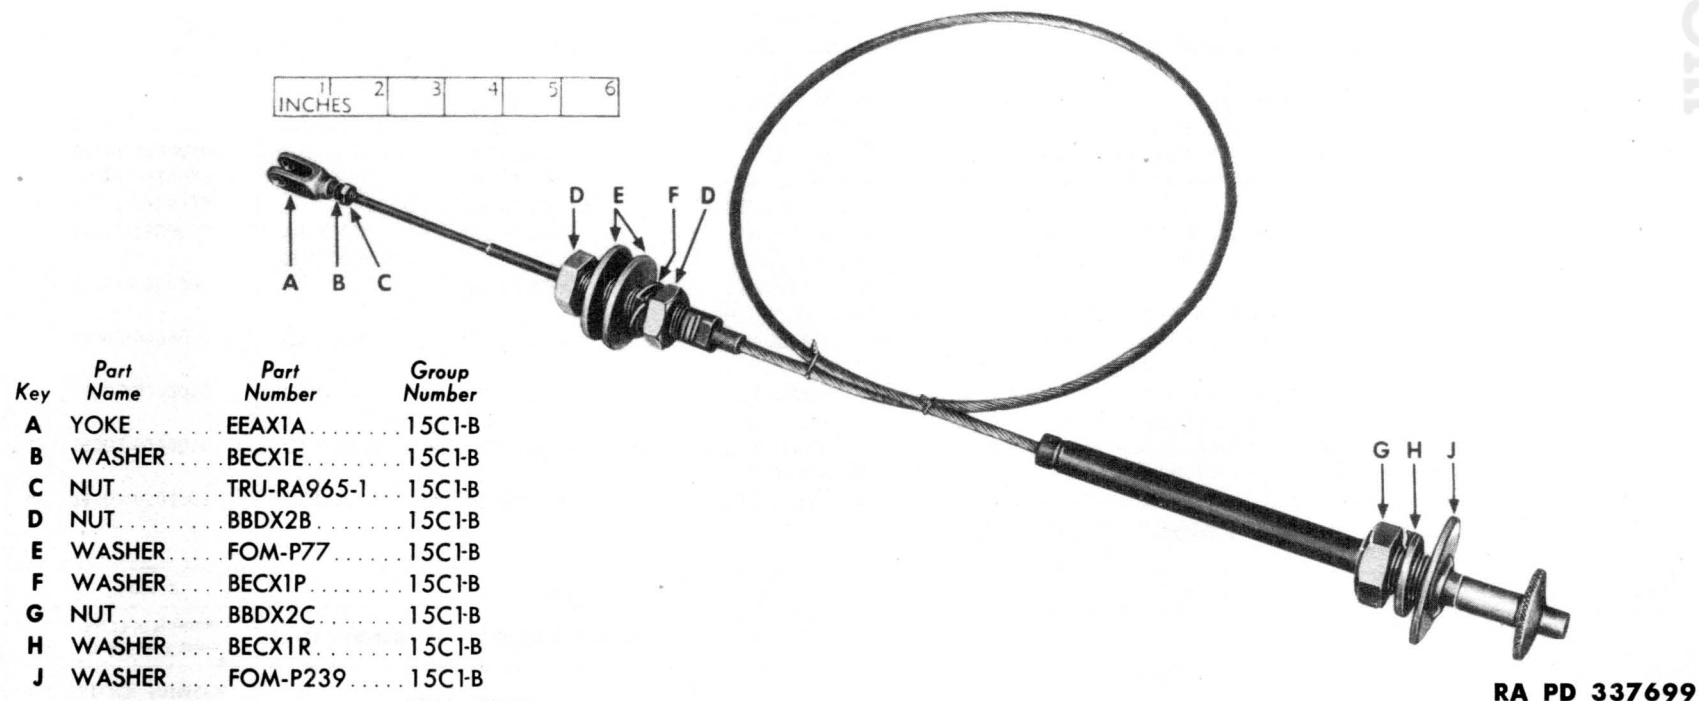


FIGURE 15A-4—HAND THROTTLE CONTROL ASSEMBLY

GROUP 15A—CONTROLS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				15D1—CLUTCH CONTROLS (Contd)	
15A-5	H002-0504203	CLDX9A	FOM-P291	FITTING, lubricating, hydraulic type stght., 1/4-28NS, male (front bulkhead clutch and accelerator control levers) (Also listed in group 15C1) (AD-1641)	1
15A-8	H002-0222010	CLDX5H	FOM-P668	FITTING, lubricating, hydraulic type, elbow, 1/8-27NPT, 30 degrees, male, long (clutch foot pedal shaft, right bracket) (AD-1638)	1
15A-8	H002-0222019	CLDX5G	FOM-P198	FITTING, lubricating, hydraulic type, elbow, 1/8-27NPT, 30 degrees, male, short (clutch foot pedal shaft, left bracket (AD-1611)	1
15A-6	H002-0222055	CLDX5M	FOM-P79	FITTING, lubricating, hydraulic type, elbow, 1/8-27NPT, 90 degrees, male (rear bulkhead clutch control rocker and pivot pin) (AD-1613)	1
15A-3,8	G167-0274001		FOM-3B41B	LEVER, control, clutch foot pedal	1
		BQLX1KQ	FOM-P74	SCREW, cap, hex-hd., S., 1/2-13NC-3 x 1 1/2	1
	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424)	1
15A-5	G214-7036323		FOM-3X1041B	LEVER, front bulkhead clutch control	2
15A-5	H001-0718023	BBBX1C	FOM-P60	NUT, regular, hex., s-fin., S., 3/8-24NF-2 (levers to rods)	1
15A-5	H101-0120640	BCVX2FZ-1	FOM-P290	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-3 x 2 1/2 (levers to rods)	1
15A-5		BCVX2LL-1	FOM-P289	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-3 x 1 (levers to bracket)	1
15A-5			FOM-3X1168B	SCREW, retaining, front bulkhead clutch and accelerator control levers (levers to bracket)	1
15A-5			FOM-3X1167B	SPACER, tube, front bulkhead clutch and accelerator control levers (levers to bracket)	1
15A-5	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (levers to bracket) (SK-1424)	2
15A-5	H001-1519011	BEAX1L	FOM-P941	WASHER, lock, internal teeth, reg., S., 3/8 in. (levers to rods) (SK-1220)	1
15A-3,8	G167-0336092		FOM-3B45C	PEDAL, foot, clutch	1
15A-8		BQLX1KQ	FOM-P74	SCREW, cap, hex-hd., S., 1/2-13NC-3 x 1 1/2	1
15A-8	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, hv., S., 1/2 in. (SK-1424)	1
15A-6	G167-0338711		FOM-3X1052A	PIN, pivot, rear bulkhead clutch control	1
15A-6	G214-7036324		FOM-3X1051A	PLATE, retaining, rear bulkhead clutch control pivot pin	1
15A-6			FOM-P142	SCREW, cap, hex-hd., S., dld. f/lkg wire, 1/4-20NC-3 x 3/8	2
			FOM-P196	WIRE, locking, soft brass, 0.051 in. diam. (#16 GA.)	as req.
15A-6	G167-0139924		FOM-3X1048B	ROCKER, rear bulkhead clutch control	1
	G214-7036325		FOM-30X1186B	ROCKER, rear bulkhead clutch control, w/BUSHINGS, assembly	1
15A-3,7	G167-0373376		FOM-31X1020B	ROD, clutch, front, assembly (Includes: plain end yoke, jam nut, pins, and sleeve) (5/8 in. diam. x 48 1/16 in. long)	1
15A-6	H001-0716027	BBDX2B	FOM-P134	NUT, jam, hex., s-fin., S., 5/8-18NF-2	1
15A-6,8	H001-0811052	BFX1DQ	FOM-P126	PIN, cotter, split, S., (type B), 1/8 x 1	1
15A-8	G167-0338710		FOM-3B70A	PIN, end, clutch front rod	1
15A-6	H001-1810080	EEAX1H	FOM-P135	YOKE, rod end, adjustable, heavy, S., 5/8 in.	1
15A-7	G167-0373277		FOM-31X1024B	ROD, clutch, intermediate, assembly (Includes: sleeve and rod end eye) (5/8 in. diam. x 48 1/16 in. long)	1

as req.

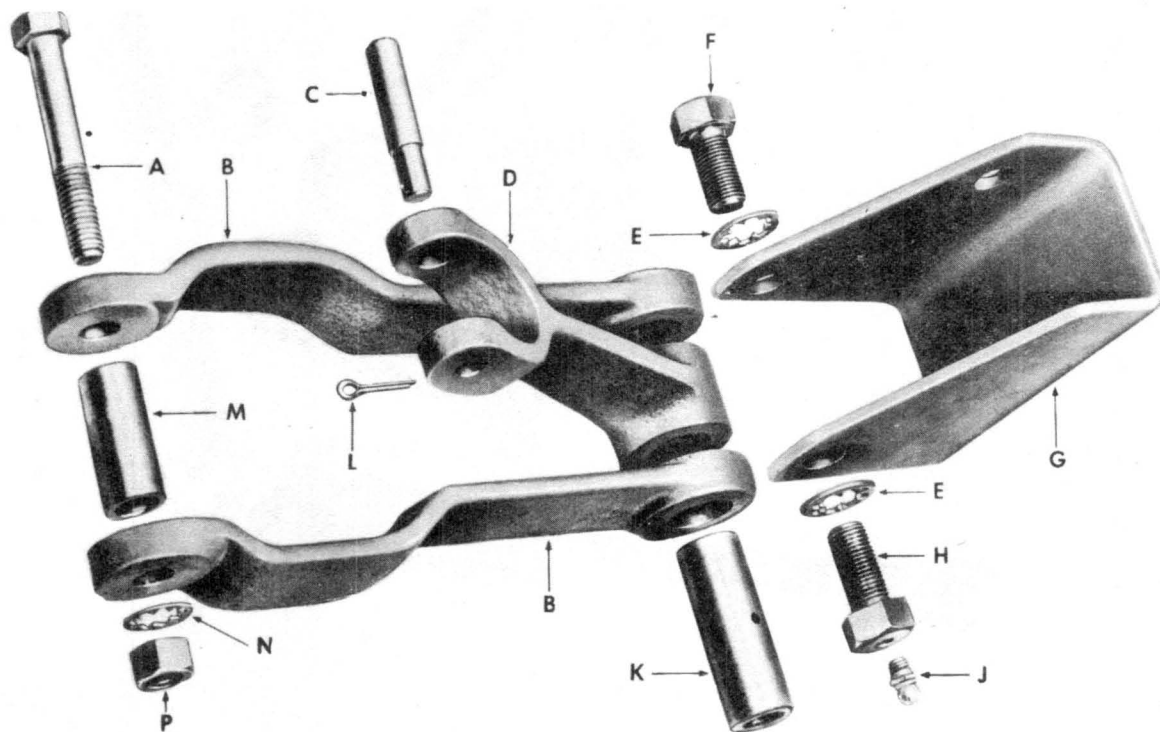


Key	Part Name	Part Number	Group Number
A	SCREW	BCVX2FZ	15D1
B	LEVER	FOM-3X1041B	15D1
C	PIN	FOM-3X1169B	15C1-A
D	LEVER	FOM-3X1042B	15C1-A
E	WASHER	BEAX3E	15C1-A, 15D1
F	SCREW	FOM-P289	15C1-A, 15D1
G	BRACKET	FOM-3X1204B	15C1-A, 15D1
H	SCREW	FOM-3X1168B	15C1-A, 15D1
J	FITTING	FOM-P291	15C1-A, 15D1
K	SPACER	FOM-3X1167B	15C1-A, 15D1
L	PIN	BFAX1CC	15C1-A
M	SPACER	FOM-3X1166B	15D1
N	WASHER	FOM-P941	15C1-A, 15D1
P	NUT	BBBX1C	15C1-A, 15D1

RA PD 341154

FIGURE 15A-5—FRONT BULKHEAD CLUTCH AND ACCELERATOR CONTROL ASSEMBLY—EXPLODED VIEW


GROUP 15A—CONTROLS

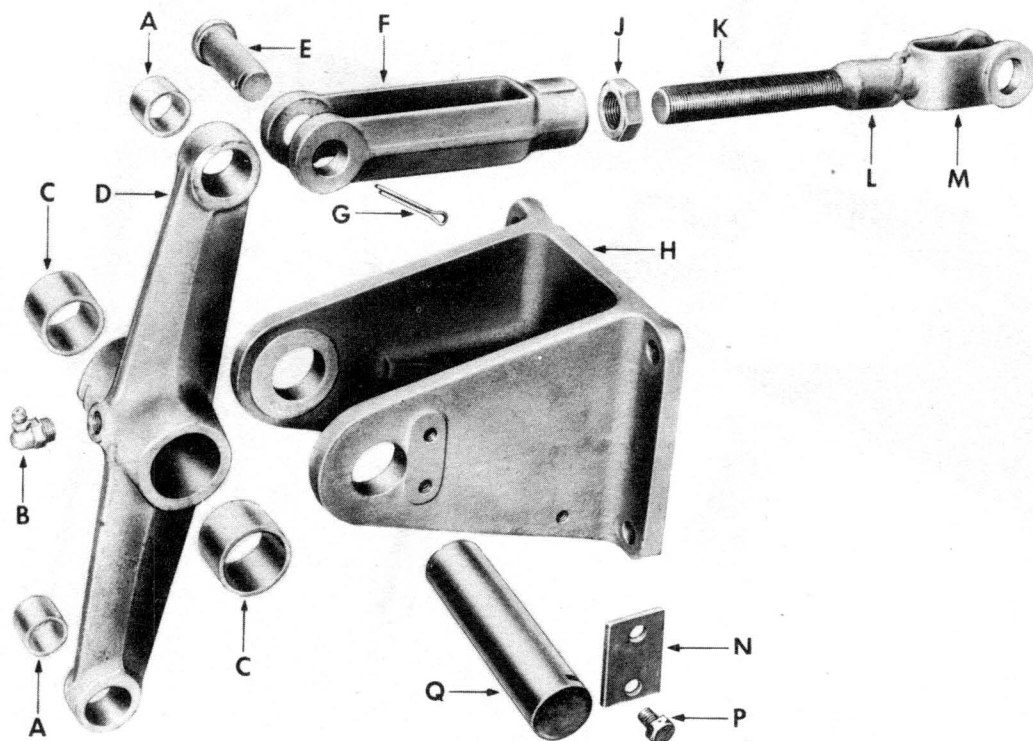

Key	Part Name	Part Number	Group Number
A	BUSHING	FOM-P206	15D1
B	FITTING	CLDX3M	15D1
C	BUSHING	FOM-P440	15D1
D	ROCKER	FOM-3X1048B	15D1
E	PIN	BFFX1G	15D1
F	YOKE	EEAX1H	15D1
G	PIN	BFAX1DG	15D1
H	BRACKET	FOM-3X1147C	15D1
J	NUT	BBDX2B	15D1
K	ROD (Serviced only as a part of ROD, assembly—FOM-31X1047C)		15D1
L	SLEEVE (Serviced only as a part of ROD, assembly—FOM-31X1047C)		15D1
M	YOKE (Serviced only as a part of ROD, assembly—FOM-31X1047C)		15D1
N	PLATE	FOM-3X1051A	15D1
P	SCREW	BCAX4A	15D1
Q	PIN	FOM-3X1052A	15D1

RA PD 337700

FIGURE 15A-6—REAR BULKHEAD CLUTCH CONTROL ASSEMBLY—EXPLODED VIEW

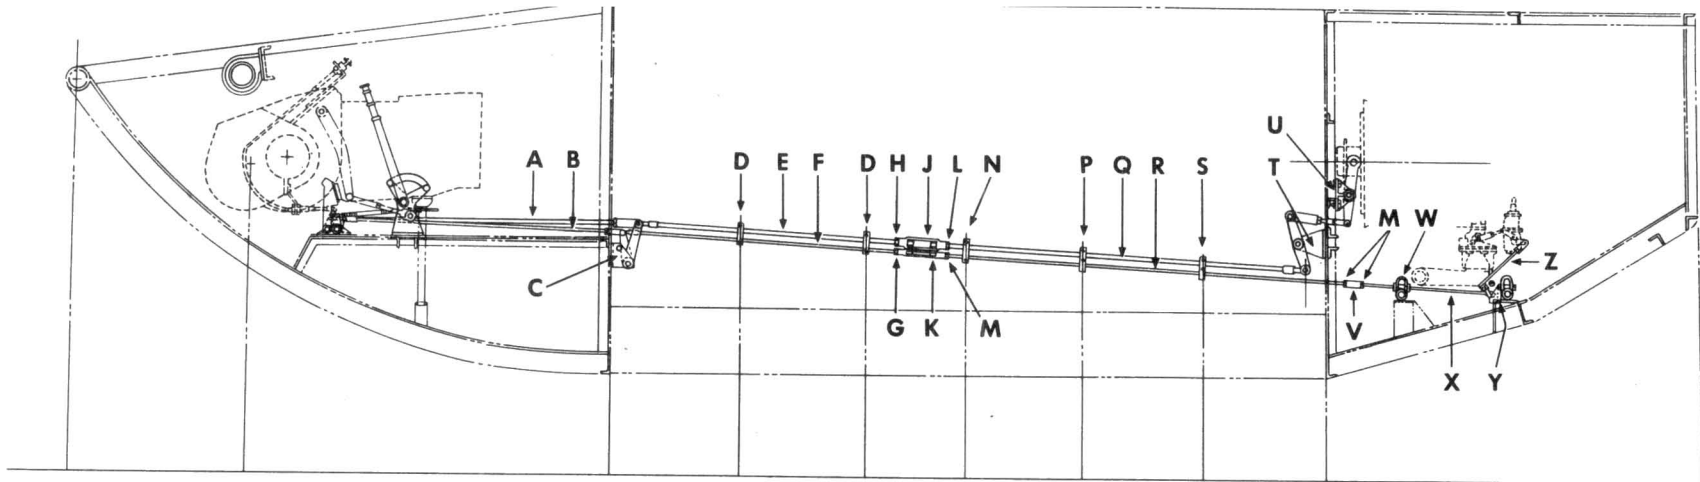

Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	ROD, assembly	FOM-31X1020B	15D1	N	BLOCK	FOM-30X1126B	15D1-A
B	ROD, assembly	FOM-31X1018C	15C1-A	P	BLOCK	FOM-30X1125B	15D1
C	CONTROL, assembly	FOM-31X1040C	15C1-A, 15D1	Q	ROD, assembly	FOM-31X1028B	15D1
D	BLOCK	FOM-30X1127B	15D1	R	ROD	FOM-3X1026B	15C1-A
E	ROD, assembly	FOM-31X1024B	15D1	S	BLOCK	FOM-30X1124B	15D1
F	ROD, assembly	FOM-31X1022B	15C1-A	T	CONTROL, assembly	FOM-31X1046D	15D1
G	NUT	FOM-P231	15C1-A	U	YOKE, assembly	FOM-31X1104D	0203
H	NUT	FOM-P230	15D1	V	NUT	FOM-3X1129B	15C1-A
J	TURNBUCKLE	FOM-P226	15D1	W	BUSHING	FOM-3X1121B	15C1-A
K	TURNBUCKLE	FOM-P227	15C1-A	X	ROD, assembly	FOM-30X1120B	15C1-A
L	NUT	BBCX2B	15D1	Y	LEVER, w/BRACKET, assembly	FOM-31X1106B	15C1-A
M	NUT	BBCX1C	15C1-A, 15D1	Z	ROD, assembly	FOM-30X1086B	15C1-A

RA PD 341155

FIGURE 15A-7—CLUTCH AND THROTTLE RODS AND CONTROLS

GROUP 15A—CONTROLS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
15D1—CLUTCH CONTROLS (Contd)					
15A-7	G167-0373278		FOM-31X1028B	ROD, clutch, rear, assembly (Includes: sleeve and plain end yoke, end pin, and cotter pin) (5/8 in. diam. x 64 13/16 in. long).....	1
	H001-0811052	BFAQ1DG	FOM-P126	PIN, cotter, split, S., (type B), 1/8 x 1.....	1
	H001-0823007	BFFX1G	FOM-P133	PIN, rod end, S., 5/8 in. diam.....	
	G167-0373377		FOM-31X1047C	ROD, operating, rear bulkhead clutch control, assembly (Includes: plain and adjustable end yokes, sleeve, jam nut, end pin, and cotter pin) (5/8 in. diam. x 4 5/16 in. long)...	1
15A-6	H001-0716027	BBDX2B	FOM-P134	NUT, jam, hex., s-fin., S., 5/8-18NF-2.....	1
15A-6	H001-0811052	BFAQ1DG	FOM-P126	PIN, cotter, split, S., (type B), 1/8 x 1.....	2
15A-6	H001-0823007	BFFX1G	FOM-P133	PIN, rod end, S., 5/8 in. diam.....	2
15A-6	H001-1810080	EEAX1H	FOM-P135	YOKE, rod end, adjustable, heavy, S., 5/8 in.....	1
15A-8			FOM-P631	SCREW, set, sq-hd., oval-pt., S., 3/8-16NC-3 x 1 1/2 (clutch foot pedal).....	1
15A-7,8	H001-0716003	BBCX1C	FOM-P229	NUT, jam, hex., s-fin., S., 3/8-16NC-2.....	1
15A-8	G167-0384609		FOM-3B64B	SHAFT, clutch foot pedal.....	1
			FOM-31X1103C	SHAFT, foot pedal, assembly (Includes: clutch shaft, clutch pedal, clutch lever, accelerator pedal assembly, accelerator lever, collars, brackets, set screw, grease fittings, and attaching hardware) (Also listed in group 15C1).....	1
15A-5	G214-7036326		FOM-3X1166B	SPACER, tube, front bulkhead clutch control lever.....	1
15A-3	G167-0389494		FOM-3B54A	SPRING, return, foot pedal.....	1
15A-7	G167-0408192		FOM-P226	TURNBUCKLE, intermediate and rear clutch rod (5/8-11NC-2).....	1
15A-7	H001-0716007	BBCX2B	FOM-P228	NUT, jam, hex., s-fin., S., 5/8-11NC-2.....	1
15A-7			FOM-P230	NUT, jam, hex., s-fin., S., left hand, 5/8-11NC-2.....	1
GROUP 17—FENDERS, SPLASH DEFLECTORS, AND TRACK COVERS					
1701—FENDERS, SPLASH DEFLECTORS, AND TRACK COVERS					
	G214-7036327		FOM-2X1532CL	COVER, rear idler adjusting screw, left.....	1
	G214-7036328		FOM-2X1532CR	COVER, rear idler adjusting screw, right.....	1
	H001-5420520	BCVX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4.....	4
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	4
	G214-7036329		FOM-2X1531BL	COVER, track mud shed, left.....	1
	G214-7036330		FOM-2X1531BR	COVER, track mud shed, right.....	1
	H001-5420520	BCFX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4.....	8
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	8

Key	Part Name	Part Number	Group Number
A	WASHER	BEAX3E	15D1
B	SCREW	BQLX1KQ	15D1
C	PEDAL	FOM-3B45C	15D1
D	COLLAR	FOM-3B68A	15C1-B
E	PIN	BFCX1BC	15C1-B
F	NUT	BBCX1C	15C1-A, 15D1
G	SCREW	FOM-P631	15D1
H	BRACKET	FOM-3B44C	15C1-A, 15D1
J	LEVER	FOM-3B39B	15C1-B

Key	Part Name	Part Number	Group Number
K	FITTING	CLDX3G	15D1
L	FITTING	FOM-P236	15C1-A
M	BUSHING	FOM-P565	15C1-A, 15D1
N	BUSHING	FOM-P564	15C1-A, 15D1
P	SHAFT	FOM-3B64B	15D1
Q	COLLAR	FOM-3B67A	15C1-A
R	PEDAL, assembly	FOM-31B75C	15C1-A
S	PIN	BFAX1BE	15C1-A
T	CLIP	FOM-3B100A	15C1-A
U	PIN	FOM-3B69A	15C1-A
V	BUSHING	FOM-P563	15C1-A, 15D1
W	BUSHING	FOM-P566	15C1-A, 15D1
X	FITTING	CLDX3H	15D1
Y	PIN	BFAX1DG	15D1
Z	CLIP	FOM-3B99A	15D1
AA	PIN	FOM-3B70A	15D1
AB	LEVER	FOM-3B41B	15D1
AC	BRACKET	FOM-3B46C	15C1-A, 15D1


RA PD 341156

FIGURE 15A-8—FOOT PEDAL SHAFT ASSEMBLY—EXPLODED VIEW

GROUP 17—FENDERS, SPLASH DEFLECTORS, AND TRACK COVERS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
1701—FENDERS, SPLASH DEFLECTORS AND TRACK COVERS (Contd)					
17-1	G167-0149315		FOM-20X1940DL	DEFLECTOR, splash, left, assembly	1
17-1	G167-0149316		FOM-20X1940DR	DEFLECTOR, splash, right, assembly	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	18
	H001-5420521	BCVX2EH-1	FOM-P421	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4	10
	H001-5420561	BCVX2EL-1	FOM-P424	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1	8
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	18
17-1	G167-0180698		FOM-2X1584DL	FENDER, rear, left	1
17-1	G167-0180699		FOM-2X1584DR	FENDER, rear, right	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	26
	H001-5420520	BCVX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4	26
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	26
	G168-7039439		FOM-2X1840B	GASKET, rear fender, long (vellumoid, 1/16 in. thk.)	2
			FOM-2X1841B	GASKET, rear fender, short (vellumoid, 1/16 in. thk.)	4
GROUP 18—HULL					
1800—CAB ASSEMBLY					
	G214-7036332		FOM-20X1642E	COVER, cab, assembly (Includes: grab handles, latch bolts, and latch handle stops) (Mk I; LVT (A) (1) only)	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	49
	H001-5454561	BCVX4EL-1	FOM-P29	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1	1
			FOM-P542	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 3/8-16NC-3 x 1	35
			FOM-P543	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 3/8-16NC-3 x 1 1/4	13
	H001-1519011	BEAX1L	FOM-P137	WASHER, plain, M.I., 3/8 in.	13
	G214-7036331		FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	49
			FOM-20X2932E	COVER, cab, assembly (Includes: grab handles, latch bolts, and latch handle stops) (Mk IV; LVT (A) (4) only)	1
	H001-4024600	BBAX1CG	FOM-P27	NUT, regular, hex., s-fin., br., 3/8-16NC-2	49
	H001-5420561	BCVX2EL-1	FOM-P424	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1	1
			FOM-P542	SCREW, machine, fl-hd., cross recess type, S., 3/8-16NC-3 x 1	35
			FOM-P952	SCREW, machine, fl-hd., cross recess type, S., 3/8-16NC-3 x 1 1/2	13
			FOM-P137	WASHER, plain, M.I., 3/8 in.	13
	H001-1518009	BECX1K	FOM-P941	WASHER, lock, reg., S., 3/8 in.	49
	G167-0194020		FOM-2X1207A	GASKET, cab cover, front (vellumoid, 1/16 in. thk.)	2
	G167-0194021		FOM-2X1208A	GASKET, cab cover, rear (vellumoid, 1/16 in. thk.)	2
	G167-0194019		FOM-2X1206A	GASKET, cab cover, side (vellumoid, 1/16 in. thk.)	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
17-1	G214-7036333		FOM-20X1007B	1801A—HULL MOUNTING PARTS	
	G214-7036334		FOM-2X1583C	CHOCK, w/CLEAT, assembly (Welded to hull)	4
	G214-7036335		FOM-2X1764B	HANDLE, grab, catwalk (Welded to hull)	4
	G214-7036336		FOM-2X1563B	HANDLE, grab, exterior cab (Welded to hull)	2
			FOM-2X1802B	HANDLE, grab, interior cab (Welded to hull)	2
	G214-7036337		FOM-20X1884CL	PIPE, retaining, ammunition box	2
	G214-7036338		FOM-20X1884CR	SKID, track, left, assembly (Welded to ponton)	1
				SKID, track, right, assembly (Welded to ponton)	1
				1801B—HULL COVERS	
	G214-7036339		FOM-20X1666D	BAFFLE, engine room, front, left, assembly	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	4
	H001-5451561	BCVX4AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	3
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	4
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	7

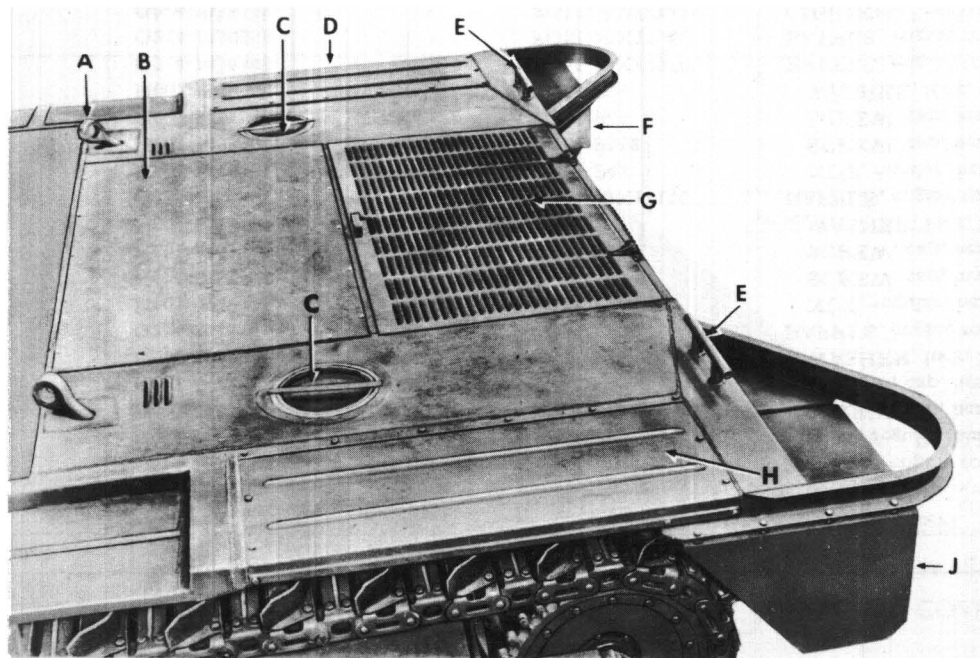

Key	Part Name	Part Number	Group Number
A	EYE	FOM-2X1572B	1801C
B	HATCH	FOM-21X1119C	1805H
C	COVER	FOM-60X1097D	0300
D	FENDER	FOM-2X1584DR	1701
E	CHOCK, w/CLEAT, assembly	FOM-20X1007B	1801A
F	DEFLECTOR	FOM-20X1940DR	1701
G	HATCH, assembly	FOM-21X1192D	1805H
H	FENDER	FOM-2X1584DL	1701
J	DEFLECTOR	FOM-20X1940DL	1701

FIGURE 17-1—DECK OF VEHICLE—REAR VIEW

RA PD 341157

1801A-1801B


GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1801B—HULL COVERS (Contd)	
	G214-7036340		FOM-20X1667D	BAFFLE, engine room, front, right, assembly	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	4
	H001-5451561	BCVX4AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	3
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	4
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	7
	G214-7036341		FOM-2X1675C	BAFFLE, engine room, rear, lower, left	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	2
	H001-5451561	BCVX4AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	3
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	5
	G214-7036342		FOM-20X1811C	BAFFLE, engine room, rear, lower, right, assembly (Includes: fuel filter access cover)	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	5
	H001-5457561	BCVX4AD-1	FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2	3
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	5
	G214-7036343		FOM-20X1797C	BAFFLE, engine room, rear, upper, left, assembly	1
	G214-7036355		FOM-20X1796C	BAFFLE, engine room, rear, upper, right, assembly	1
	G214-7036356		FOM-20X1334B	CHANNEL, control tunnel cable, center, assembly (Includes: 2 cap screws) (Mk I; LVT (A) (1) only)	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	4
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	4
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	4
	G214-7036366		FOM-20X2997	CHANNEL, control tunnel cable, center, assembly (Includes: 2 cap screws) (Mk IV; LVT (A) (4) only)	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex. s-fin., S., 1/4-20NC-2	4
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	4
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	4
	G214-7036357		FOM-2X1973B	CHANNEL, control tunnel cable (Mk IV; LVT (A) (4) only)	1
	G214-7036358		FOM-21X1604B	CHANNEL, control tunnel cable, front, upper, assembly	1
	G214-7036359		FOM-20X1362B	CHANNEL, control tunnel cable, front, assembly (Includes: 4 cap screws)	1
	G214-7036360		FOM-20X1608C	CHANNEL, control tunnel cable, rear, assembly (Includes: 5 cap screws)	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	10
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4	10
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214)	10
	G214-7036361		FOM-2X1827B	CHANNEL, control tunnel cable, upper, intermediate (Mk I; LVT (A) (1) only)	1
	G214-7036362		FOM-2X2996B	CHANNEL, control tunnel cable, upper, intermediate (Mk IV; LVT (A) (4) only)	1
	G214-7036363		FOM-2X1847B	CHANNEL, control tunnel cable, upper, rear	1

GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y			
	Order and Store by This Number	ORDNANCE	MANUFACTURER					
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6			
09-1	G167-0280260	BBAX1C BCVX4EL BEAX1L	FOM-20X1431D	1801B—HULL COVERS (Contd)				
	G214-7036370		FOM-2X1419C	LOUVER, air intake, rear bulkhead, center.....	1			
	H001-0718003		FOM-P40	PLATE, rear bulkhead, center.....	1			
	H001-5454560		FOM-P29	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	10			
	H001-1519011		FOM-P28	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 1.....	10			
	G214-7036371	BCVX4AD-1 BEAX1H BEBX1G	FOM-2X1317DL	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	10			
	G214-7036372		FOM-2X1317DR	PLATE, side, control tunnel, front, left.....	1			
	H001-5451561		FOM-P152	PLATE, side, control tunnel, front, right.....	1			
	H001-1519009		FOM-P24	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	24			
	H001-1530007		FOM-P72	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	24			
	09-1	G214-7036373	BCVX4AD-1 BEAX1H BEBX1G	FOM-2X1887D	WASHER, plain, S., SAE std. 1/4 in.....	24		
		G214-7036374		FOM-20X1848D	PLATE, side, control tunnel, rear, left.....	1		
		H001-5451561		FOM-P152	PLATE, side, control tunnel, rear, right (Mk I; LVT (A) (1) only).....	1		
		H001-1519009		FOM-P24	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	32		
H001-1530007		FOM-P72		WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	32			
G214-7036375		BBAX1C BCVX2EH BEAX1L	FOM-2X1975D	WASHER, plain, S., SAE std., 1/4 in.....	32			
G214-7036376			FOM-20X2899B	PLATE, side, control tunnel, rear, right (Mk IV; LVT (A) (4) only).....	1			
			FOM-20X1673C	PLATE, .30 cal. machine gun shield.....	1			
			G214-7036377	FOM-20X1672C	SUPPORT, channel, engine room baffles, left, assembly (Includes: welded bolts and pipe coupling).....	1		
				H001-0718003	FOM-P40	SUPPORT, channel, engine room baffles, right, assembly (Includes: welded bolts and pipe couplings).....	1	
		H001-5454520			FOM-P39	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	6	
H001-1519011					FOM-P28	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4.....	8	
					17-1	BBDX3A	FOM-2X1518B FOM-P127 FOM-2X1572B FOM-P128 FOM-2X1516B FOM-2X1570B FOM-P127	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....
			1801C—LIFTING EYES					
	EYE, hoisting, vehicle, front.....		2					
	NUT, jam, hex., s-fin., S., 1 1/8-12NF-2.....	2						
EYE, hoisting, vehicle, rear.....	2							
BBDX2E	FOM-2X1516B FOM-2X1570B FOM-P127	NUT, jam, hex., s-fin., S., 1-14NF-2.....	2					
		ROD, vehicle front hoisting eye.....	2					
		ROD, vehicle rear hoisting eye.....	2					
		NUT, jam, hex., s-fin., S., 1 1/8-12NF-2.....	4					
		BBDX3A	FOM-2X1516B FOM-2X1570B FOM-P127					
G214-7036382	FOM-20X1715C FOM 20X1722C FOM-P557 FOM-P556	1803B FLOOR COVERS AND PLUGS						
		FLOOR, cab, center, assembly.....	1					
G214-7036383	FOM-20X1715C FOM 20X1722C FOM-P557 FOM-P556	FLOOR, cab, front, left, assembly, (Mk IV; LVT (A) (4) only).....	1					
		SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.....	4					
		WASHER, lock, internal and external teeth, S., 1/4 in.....	4					

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G214-7036384		FOM-20X1729D	FLOOR, cab, center, rear, assembly (Mk I; LVT (A) (1) only).....	1
	G214-7036385		FOM-20X1793D	FLOOR, cab, left of seat, assembly.....	1
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.....	2
			FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.....	2
	G214-7036386		FOM-2X1730B	FLOOR, cab, front of right seat.....	1
	G214-7036387		FOM-20X1732C	FLOOR, cab, front, right, assembly (Mk I; LVT (A) (1) only).....	1
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.....	5
			FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.....	5
	G214-7036388		FOM-20X1726C	FLOOR, cab, rear of left seat, assembly.....	1
	G214-7036389		FOM-2X1731B	FLOOR, cab, rear of right seat.....	1
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.....	4
			FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.....	4
	G214-7036390		FOM-20X1733D	FLOOR, cab, right of right seat, assembly (Mk I; LVT (A) (1) only).....	1
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.....	4
			FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.....	4
	G214-7036391		FOM-20X1922C	FLOOR, cab, front, left, assembly (Mk I; LVT (A) (1) only).....	1
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.....	4

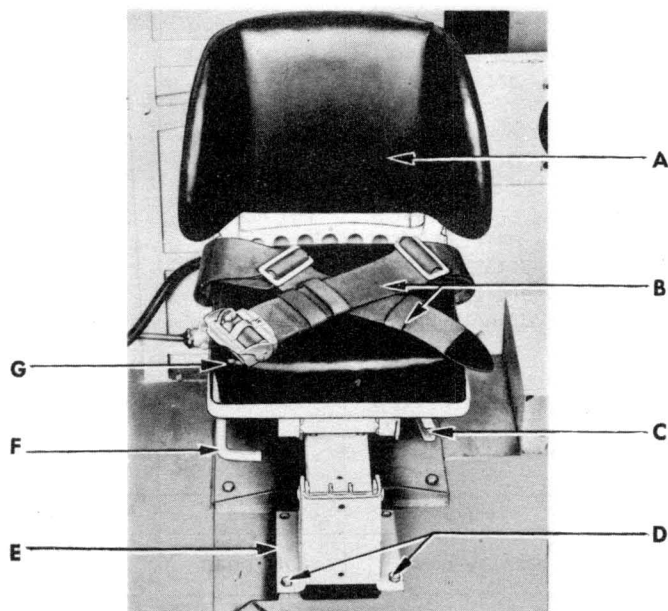

KEY	PART NAME	PART No.	GROUP
A	PAD.....	C91893.....	1804
B	BELT.....	FOM-P622.....	1804
C	LEVER.....	A246224.....	1804
D	SCREW.....	FOM-P39.....	1804
E	BASE.....	C91964.....	1804
F	LEVER.....	B221403.....	1804
G	CUSHION.....	C91932.....	1804


FIGURE 18-2—SEAT ASSEMBLY—INSTALLED VIEW

RA PD 341159

1803B

GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1803B—HULL COVERS AND PLUGS (Contd)	
	G214-7036392		FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.	4
			FOM-2X2946B	FLOOR, cab, right of right seat, assembly (Mk IV; LVT (A) (4) only)	1
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4.	4
			FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.	4
	G214-7036393		FOM-20X2947B	FLOOR, cab, front, right, assembly (Mk IV; LVT (A) (4) only)	1
	G214-7036394		FOM-20X2990B	FLOOR, cab, right, rear, assembly (Mk IV; LVT (A) (4) only)	1
	G214-7036395		FOM-20X3013D	FLOOR, cab, center, rear, assembly (Mk IV; LVT (A) (4) only)	1
	G214-7036396		FOM-2X1310B	PLATE, cargo compartment floor (Covering bilge pump)	1
	H001-1013017	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.	8
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218)	8
	G167-0340200		FOM-2X1311C	PLATE, drain, cargo compartment floor, center.	1
	H001-1013017	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.	4
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218)	4
	G167-0340201		FOM-2X1312C	PLATE, drain, cargo compartment floor, rear.	2
	H001-1013017	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.	4
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218)	4
			FOM-P120	PLUG, pipe, M.I., std., ck., black, 2 in. (oil reservoir (1), fuel tanks (2), and rear of hull drain plug (20))	25
			FOM-P119	PLUG, pipe, M.I. std., ck., black, 1/2 in. (pontoon drain plug (12), hull nose drain plug (1), and hull bottom drain plug (4))	17
				1803C—DRAIN VALVE	
				COVER, bilge flap valve	3
				PIN, cotter, split, S., 3/32 x 3/4.	3
				PIN, rod end, S., 3/8 in. diam.	3
				WASHER, plain, S., SAE std., 3/8 in.	3
				1804—SEATS	
				ARM, seat carriage, lower.	2
				ARM, seat carriage, upper.	2
				AXLE, seat, upper and lower arm.	8
				PIN, cotter, split, S., (type B), 3/32 x 3/4.	16
				WASHER, seat, upper and lower arm axle.	16
				AXLE, vertical release lever.	2
				PIN, cotter, split, S., (type B), 3/32 x 3/4.	4
				BASE, seat.	2
				BELT, safety, 3 in. (driver's and radio operator's seats)	2
				BODY, seat.	2
18-1	G214-7036397		FOM-2X1271B		
18-1	H001-0811039	BFX1CE	FOM-P63		
18-1	H001-0323004	BFFX1D	FOM-P64		
18-1	H001-1530009	BEBX1K	FOM-P62		
18-5	G167-2110460	C91887	ASC-0-3725-5		
18-5	G137-0110475	A91962	ASC-0-3725-6		
18-5	G137-0113895	A233898			
18-5	H001-0811039	BFX1CE	FOM-P63		
18-5	G137-0442650	A233880	FOM-P796		
18-5	G104-5233897	A233897	ASC-0-3725-18		
	H001-0811039	BFX1CE	FOM-P63		
	G104-5591964	C91964	ASC-0-3725-1		
18-2	G214-7036398		FOM-P622		
18-4	G214-5591897	C91897			

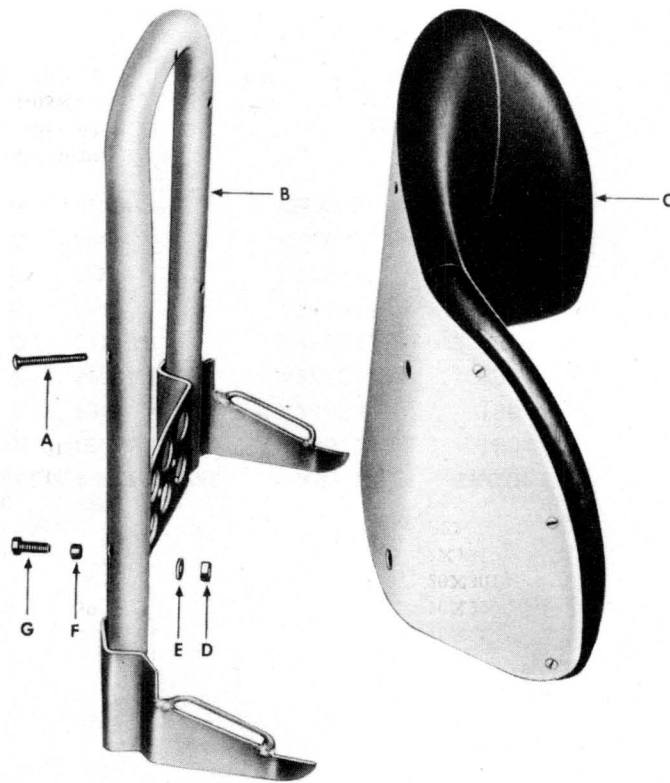


KEY	PART NAME	PART No	GROUP
A	SCREW	A233881	1804
B	FRAME	ASC-O-3725-62	1804
C	PAD	C91893	1804
D	NUT	BBAX1B	1804
E	WASHER	BEBX1H	1804
F	SPACER	A233908	1804
G	SCREW	BCAX1BC	1804

FIGURE 18-3—SEAT BACK ASSEMBLY—EXPLODED VIEW

RA PD 341160

GROUP 18—HULL

KEY	PART NAME	PART No.	GROUP
A	LEVER.....	A246224.....	1804
B	PIN.....	A246240.....	1804
C	SPRING.....	A246247.....	1804
D	COLLAR.....	A246223.....	1804
E	PIN.....	A246248.....	1804
F	BODY.....	C91897.....	1804
G	PIN.....	BFA11CC.....	1804
H	WASHER.....	BEBX1G.....	1804

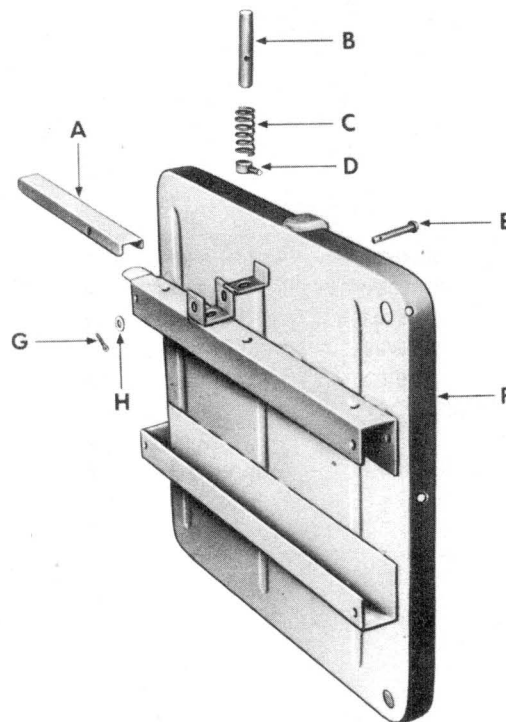

RA PD 341161

FIGURE 18-4—SEAT BASE—EXPLODED VIEW

KEY	PART NAME	PART No.	GROUP
A	PIN.....	BFA11CE.....	1804
B	AXLE.....	A233898.....	1804
C	AXLE.....	A233897.....	1804
D	SPACER.....	A233909.....	1804
E	SPRING.....	A223894.....	1804
F	LEVER.....	B221403.....	1804
G	ARM.....	A91962.....	1804
H	SPRING.....	A233892.....	1804
J	BASE.....	C91964.....	1804
K	ARM.....	A91887.....	1804
L	WASHER.....	A233880.....	1804



RA PD 341162

FIGURE 18-5—SEAT BOTTOM—EXPLODED VIEW

GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1804—SEATS (Contd)	
	G137-0131600	C91899	ASC-0-3725-44	CARRIAGE, seat, assembly (Includes: vertical release, axle, spacer, rollers, and cotter pins)	2
18-4	G104-5246223	A246223	ASC-0-3711-36	COLLAR, horizontal release lever	2
18-4	H001-0811037	BFAX1CC		PIN, cotter, split, S., 3/32 x 1/2	2
18-4		A246248	ASC-0-3711-58	PIN, retaining, horizontal release lever collar	2
18-4	H001-1530007	BEBX1G		WASHER, plain, S., SAE std., 1/4 in.	2
	G167-0143625	C91932	ASC-0-3725-35	CUSHION, seat	2
18-3	G214-7036399		ASC-0-3725-62	FRAME, seat back, assembly	2
18-3	H001-0718002	BBAX1B		NUT, regular, hex., s-fin., S., 5/16-18NC-2	2
18-3	H001-1013019	BCAX1BC		SCREW, cap, hex-hd., S., 5/16-18NC-2 x 1	2
18-3	G137-0389439	A233908		SPACER, seat back frame	2
18-3	H001-1530008	BEBX1H		WASHER, plain, S., SAE std., 5/16 in.	2
18-2,4	G104-2274299	A246224	ASC-0-3711-33	LEVER, horizontal release	2
18-2,5	G104-3068625	B221403	ASC-0-3725-39	LEVER, vertical release	2
18-2,3	G167-0333675	C91893	ASC-0-3725-33	PAD, seat back	2
18-3	G137-0382015	A233881		SCREW, attaching, seat back pad	12
18-4	G104-2338691	A246240	ASC-0-3711-38	PIN, horizontal release lever return spring	2
	G167-0383010		FOM-P430	SEAT, driver's and radio operator's, assembly (ASC-D41219 modified)	2
	G167-0314854	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2	8
18-2	H001-5454520	BCVX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4	8
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	8
	G137-0367453	C91896	ASC-0-3725-37	SEAT, w/horizontal release LEVER, assembly	2
18-5		A233909	ASC-0-3725-41	SPACER, vertical release lever axle	4
18-5	G103-1789591	A233892	FOM-P794	SPRING, extension, driver's and radio operator's seat	2
18-4	G104-2389830	A246247	ASC-0-3711-40	SPRING, return, horizontal release lever	2
18-5	A050-0210180	A223894		SPRING, return, vertical release lever	2
	G214-7036400		FOM-20X1716C	SUPPORT, driver's and radio operator's seat	2
	H001-5454520	BCVX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4	8
			FOM-P557	SCREW, self-tapping, hex-hd., S., 1/4-20NC-2 x 3/4	2
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220)	8
			FOM-P556	WASHER, lock, internal and external teeth, S., 1/4 in.	4
				1805H—HATCHES AND RELATED PARTS	
	G167-1014099		FOM-2X1191B	ARM, operating, engine room hinged hatch hinge	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2	6
	H101-0121887	BCVX2AH-1	FOM-P671	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4	2
			FOM-P43	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 1/4-20NC-3 x 3/4	4
	H001-1518007	BECX1G	FOM-P926	WASHER, lock, reg., S., 1/4 in.	6

KEY	PART NAME	PART No.	GROUP
A	SCREW.....	FOM-P554.....	1805H
B	WASHER.....	FOM-P24.....	1805H
C	BUSHING.....	FOM-2X1774B....	1805H
D	ROLLER.....	FOM-2X1773B....	1805H
E	SCREW.....	FOM-P555.....	1805H
F	HANDLE.....	FOM-2X1766BL....	1805H
G	WASHER.....	FOM-P103.....	1805H
H	NUT.....	FOM-P584.....	1805H


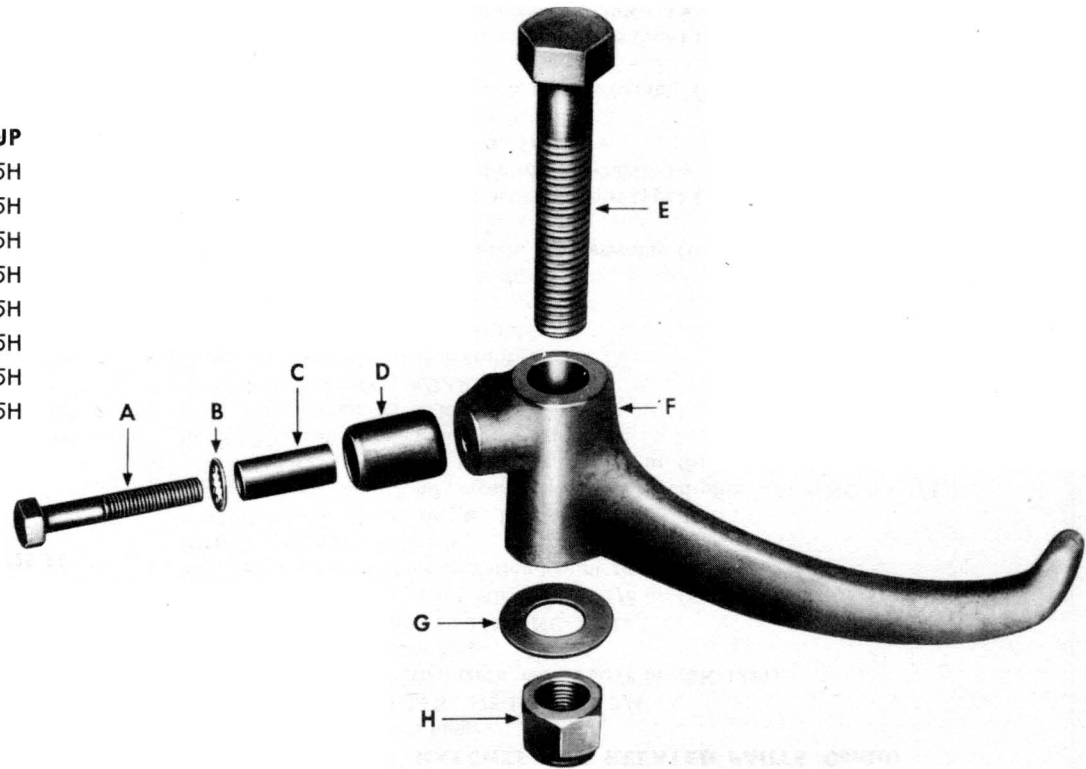


FIGURE 18-6—ESCAPE HATCH LOCK HANDLE—EXPLODED VIEW

RA PD 341163

GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1805H—HATCHES AND RELATED PARTS (Contd)	
	G214-7036101		FOM-2X1377B	BASE, cab escape hatch hinge.....	4
	H001-5420520	BCVX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4.....	8
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	8
	G214-7036101		FOM-2X1377B	BASE, cab window cover hinge.....	2
	H001-5454560	BCVX4EL	FOM-P29	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 1.....	4
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	4
			FOM-2X1771B	BOLT, cab window cover operating handle to operating link.....	1
	G167-0125800		FOM-P41	BRACE, engine room hatch.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	5
			FOM-P43	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 1/4-20NC-3 x 3/4.....	5
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	5
18-6	G214-7036102		FOM-2X1774B	BUSHING, cab escape hatch latch handle.....	2
	G167-0137984		FOM-2X1425B	CLIP, engine room hatch latch.....	1
	G168-7037181		FOM-21X1758B	COVER, cab window, w/LUG, assembly.....	1
	G168-7037190		FOM-2X1640B	GASKET, cab escape hatch (rubber).....	2
	G168-7037183		FOM-2X1404B	GASKET, cab window cover (rubber).....	1
	G168-7037191		FOM-21X1762B	HANDLE, cab escape hatch.....	2
18-6	G214-7036103		FOM-2X1766BL	HANDLE, cab escape hatch latch, left.....	1
	G214-7036104		FOM-21X1772BL	HANDLE, cab escape hatch latch, left, assembly (Includes: roller, bushing and cap screw).....	1
18-6	H001-4440581	BBSX4AE-1	FOM-P584	NUT, safety, S., cd-pltd., (elastic stop nut type) 1/2-20NF-3.....	1
18-6	H101-0124180	BCVX2LZ-1	FOM-P555	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-3 x 2 1/2.....	1
18-6	H001-1530011	BEBX1M	FOM-P103	WASHER, plain, S., SAE std., 1/2 in.....	1
	G214-7036103		FOM-2X1766BR	HANDLE, cab escape hatch latch, right.....	1
	G214-7036104		FOM-21X1772BR	HANDLE, cab escape hatch latch, right, assembly (Includes: roller, bushing, and cap screw).....	1
	H001-4440581	BBSX4AE-1	FOM-P548	NUT, safety, S., cd-pltd., (elastic stop nut type) 1/2-20NF-3.....	1
	H101-0124180	BCVX2LZ-1	FOM-P555	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-3 x 2 1/2.....	1
	H001-1530011	BEBX1M	FOM-P103	WASHER, plain, S., SAE std., 1/2 in.....	1
	G168-1037184		FOM-2X1397B	HANDLE, operating, cab window cover.....	1
17-1	G214-7036156		FOM-21X1119C	HATCH, engine room, assembly (bolted).....	1
	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	16
	H001-1013017	BCVX2CH-1	FOM P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	16
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	16
17-1	G167-0209436		FOM-21X1192D	HATCH, engine room, assembly (hinged) (Includes: hinges, brace, latch, brace bracket, and attaching hardware).....	1
	G168-7037186		FOM-20X1641CL	HATCH, escape, cab, left, assembly (Includes: handle, socket, and latch) (Mk I; LVT (A) (1) only).....	1

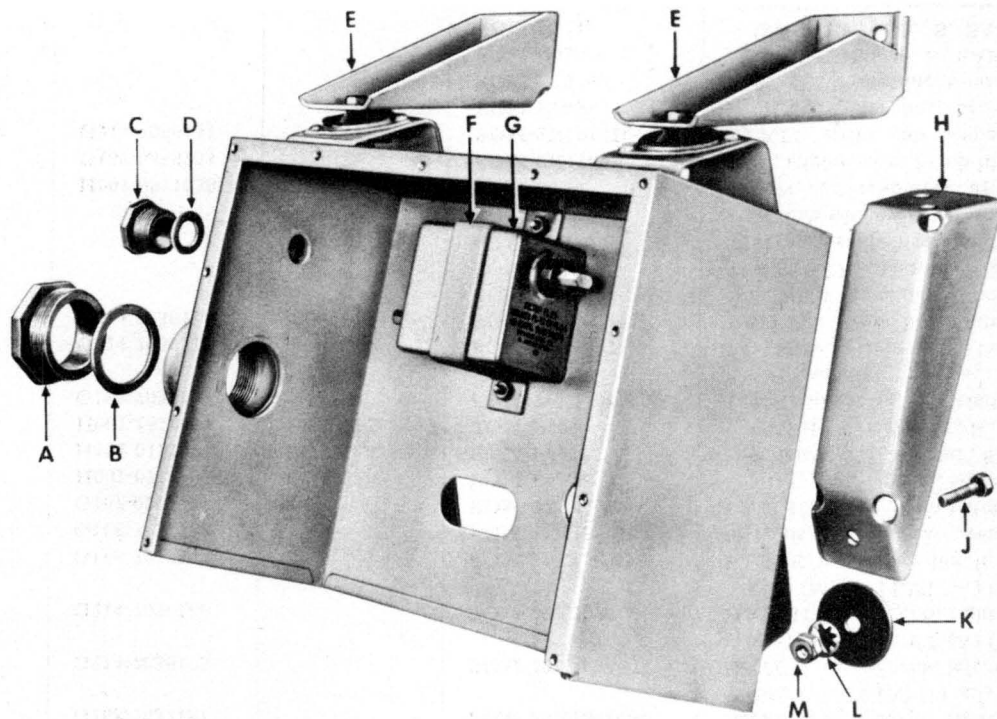

Key	Part Name	Part Number	Group Number
A	NUT.....	FOM-P260-1	1809
B	RING.....	FOM-P260-2	1809
C	NUT.....	FOM-P259-1	1809
D	RING.....	FOM-P259-2	1809
E	BRACKET.....	FOM-8X1028B.....	1809
F	STRAP.....	FOM-8X1041B.....	2603
G	FILTER, assembly...	FOM-P264.....	2603
H	BRACKET.....	FOM-8X1029B.....	1809
J	SCREW.....	FOM-P256	1809
K	WASHER.....	FOM-8X1043B.....	1809
L	WASHER.....	FOM-P24.....	1809
M	NUT.....	FOM-P45.....	1809

FIGURE 18-7—INSTRUMENT BOX AND SUPPORTING BRACKETS—EXPLODED VIEW

RA PD 341164


GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1805H—HATCHES AND RELATED PARTS (Contd)	
	G168-7037187		FOM-20X1641CR	HATCH, escape, cab, right, assembly (Includes: handle, socket, and latch loop) (Mk I; LVT (A) (1) only).....	1
	G214-7036105		FOM-20X3024CL	HATCH, escape, cab, left, assembly (Includes: handle, socket, latch, strike, and latch pad) (Mk IV; LVT (A) (4) only).....	1
	G214-7036106		FOM-20X3024CR	HATCH, escape, cab, right, assembly (Includes: handle, socket, latch, strike, and latch pad) (Mk IV; LVT (A) (4) only).....	1
	G168-7037192		FOM-21X1383B	HINGE, cab escape hatch, assembly (Includes: base, strap, and pin).....	4
	G168-7037182		FOM-21X1380B	HINGE, cab window cover, assembly (Includes: base, strap, and pin).....	2
	G167-0271837		FOM-2X1424B	LATCH, engine room hatch.....	1
	H001-0718001	BBAX1A BCVX2AH-1 BECX1G	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20-NC-2.....	2
	H101-0121887		FOM-P671	SCREW, cap, hex-hd., S., cd-pltd, 1/4-20NC-3 x 3/4.....	2
	H001-1518007		FOM-P926	WASHER, lock, reg., S., 1/4 in.....	2
	G168-7037185		FOM-21X1396B	LINK, operating, cab window cover, assembly (Includes: adjustable yoke, sleeve, eye, and jam nut).....	1
	G214-7036113		FOM-2X1767B	LOOP, cab escape hatch latch (Welded to hatch).....	2
	G214-7036111		FOM-2X2941B	PAD, cab escape hatch latch (Mk IV; LVT (A) (4) only).....	2
			FOM-P32	SCREW, machine, rd-hd., cross recess type, br., cd-pltd., No. 10 (0.190)-24NC-3 x 1/2.....	4
			FOM-P412	WASHER, plain, br., US std., No. 10 (0.190).....	4
			FOM-2X1379B	PIN, cab escape hatch and window cover hinge (bz., 3/8 in. diam. x 3 1/4 in. long).....	6
			FOM-2X1400B	PIN, cab window cover operating link.....	1
	H001-0811038	BFAX1CD	FOM-P129	PIN, cotter, split, S., 3/32 x 5/8.....	1
	G167-0338703		FOM-2X1189A	PIN, engine room hatch hinge (bz., 3/8 diam. x 2 1/2 in. long).....	2
	G214-7036141		FOM-2X2940B	PLATE, strike, cab escape hatch latch (Mk IV; LVT (A) (4) only).....	2
			FOM-P1495	NUT, regular, hex., br., 5/16-18NC-2.....	4
			FOM-P1576	SCREW, machine, fl-hd., br., 5/16-18NC-3 x 1.....	4
			FOM-P928	WASHER, lock, S., SAE std., 5/16 in.....	4
			FOM-P1218	WASHER, plain, S., SAE std., 5/16 in.....	8
	G214-7036114		FOM-2X1773B	ROLLER, cab escape hatch handle.....	2
18-6			FOM-P554	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 1 1/2.....	2
18-6			FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
18-6	H001-1519009	BEAX1H	FOM-2X1763B	SOCKET, cab escape hatch handle (Welded to hatch).....	2
	G214-7036115		FOM-2X1382B	STRAP, cab escape hatch hinge.....	4
			FOM-P147	SCREW, machine, fl-recessed-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	12
			FOM-2X1378B	STRAP, cab window cover hinge.....	2
			FOM-P624	SCREW, machine, fl-recessed-hd., S., cd-pltd., 5/16-18NC-3 x 1.....	6
	G214-7036117		FOM-2X1440B	SUPPORT, engine room hatch.....	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex, s-fin., S., 3/8-16NC-2.....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-5420520	BCVX2EH	FOM-P39	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 3/4.....	2
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	2
	G167-0214098		FOM-2X1190B	SUPPORT, engine room hatch hinge operating arm.....	2
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	4
	H001-5454561	BCVX4EL-1	FOM-P424	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1.....	4
	H001-1518009	BECX1K	FOM-P941	WASHER, lock, reg., S., 3/8 in.....	4
	H001-1810040	EEAX1D	FOM-P131	YOKE, rod end, adjustable, light, S., 3/8 in. (cab window cover operating link).....	1
	H001-0716023	BBDX1C	FOM-P130	NUT, jam, hex., s-fin., S. 3/8-24NF-2.....	1
	H001-0811038	BFX1CD	FOM-P129	PIN, cotter, split, S., 3/32 x 5/8.....	1
	H001-0823004	BFFX1D	FOM-P64	PIN, rod-end, S., 3/8 in. diam.....	1
				1809—INSTRUMENT PANEL AND MOUNTING PARTS	
	G214-7036118		FOM-81X1002D	BOX, instrument, assembly (Includes: terminal tubes and radio noise filter).....	1
18-7	G214-7036119		FOM-8X1029B	BRACKET, instrument box, lower.....	1
18-7	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	1
	H001-5419101	BCVX2CF	FOM-P257	SCREW, cap, hex-hd., S, 5/16-18NC-3 x 5/8.....	2
18-7		BCVX2AN-1	FOM-P256	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1 1/4.....	1
18-7	G167-0443031		FOM-8X1043B	WASHER, instrument case snubber mount.....	1
18-7	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	1
18-7	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2
18-7	G214-7036120		FOM-8X1028B	BRACKET, instrument box, upper.....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2
	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
		BCVX2AN-1	FOM-P256	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1 1/4.....	2
	H001-1013017	BCVX2CH-1	FOM-P22	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 3/4.....	2
	G167-0443031		FOM-8X1043B	WASHER, instrument case snubber mount.....	2
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2
	G214-7036121		FOM-81X1042B	BRACKET, instrument box, w/CLIP, assembly.....	1
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	1
		BCVX2AN-1	FOM-P256	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1 1/4.....	1
	H001-5419101	BCVX2CF	FOM-P257	SCREW, cap, hex-hd., S., 5/16-18NC-3 x 5/8.....	2
			FOM-8X1043B	WASHER, instrument case snubber mount.....	1
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	2
	G167-0194028		FOM-8X1032B	GASKET, instrument panel, side (cloth inserted rubber, 1/16 in. thk.).....	2
	G167-0194027		FOM-8X1006B	GASKET, instrument panel, top (cloth inserted rubber, 1/16 in. thk.).....	1
	G167-0294800		FOM-P262	MOUNT, snubber, instrument case.....	4
18-7			FOM-P259-1	NUT, gland, terminal tube (size C) (instrument box).....	1
18-7			FOM-P260-1	NUT, gland, terminal tube (size P) (instrument box).....	1
	G214-7036122		FOM-80X1004C	PANEL, instrument.....	1
	G167-0333951		FOM-81X1035C	PANEL, instrument, assembly (Includes: tachometer, ammeter, dash light, temperature gage, and oil pressure gages).....	1
	G167-0381999		FOM-P251	SCREW, machine, rd-hd., cross recess type, br., No. 10 (0.190) 32NF-3 x 3/8.....	11
18-7	G214-7036123		FOM-P259-2	RING, gland, terminal tube (size C) (instrument box).....	1
18-7	G214-7036124		FOM-P260-2	RING, gland, terminal tube (size P) (instrument box).....	1

GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1816—PERISCOPE MOUNTINGS	
19-37	G103-1501812	C97209	FOM-2X1933C	ADAPTER, periscope housing.....	2
19-37	G103-1518022	A227831	FOM-P1113	BEARING, trunnion, periscope holder.....	4
	G104-2137982	A248086A	FOM-P1084	CLIP, supporting, periscope wiper, left.....	2
	H001-1030046	BCNX1DB		SCREW, machine, rd-hd., S., No. 5 (0.125)-40NC-2 x 3/16.....	4
	H001-1519004	BEAX1D		WASHER, lock, internal teeth, reg., S., No. 5 (0.125).....	4
	G104-2137983	A248086B	FOM-P1085	CLIP, supporting, periscope wiper, right.....	2
	H001-1030046	BCNX1DB		SCREW, machine, rd-hd., S., No. 5 (0.125)-40NC-2 x 3/16.....	4
	H001-1519004	BEAX1D		WASHER, lock, internal teeth, reg., S., No. 5 (0.125).....	4
	G168-7039471		FOM-2X1932C	COVER, periscope.....	2
			FOM-P1169	SCREW, machine, oval-fil-hd., cross recess type, br., 1/4-20NC-3 x 5/8.....	12
	H001-1522007	BEBX1BG	FOM-P160	WASHER, plain, br., SAE std., 1/4 in.....	12
	G168-7039472		FOM-2X2838B	GASKET, periscope cover.....	2
19-37	G168-7039469		FOM-2X1409B	GASKET, periscope housing adapter filler ring (rubber, 1/8 in. thk.).....	2
19-37	G103-1738452	A226815	FOM-P799	GASKET, periscope housing top segment (felt).....	2
19-37	G103-1617701	C96670	FOM-P561	HOLDER, periscope.....	2
	G104-1617710	C97292	FOM-20X1965D	HOUSING, periscope, assembly.....	2
19-37	G104-0303373	A226797	FOM-P1185	KNOB, adjuster, periscope holder.....	2
19-37	G103-1663904	A265219	FOM-P800	KNOB, periscope housing segment.....	2
			FOM-P1137	SCREW, machine, oval-fil-hd., S., cd-pltd., 1/4-28NF-3 x 1.....	2
	G103-1671704	A265215	FOM-P1116	LATCH, periscope holder.....	2
	G103-1738547	A265216	FOM-P1117	PIN, S., 7/32 x 1/4.....	2
	G103-1842738	A265217	FOM-P1121	WASHER, spring, S., 0.260 I.D. x 0.047 thk.....	2
19-37	G103-1767661	A226798	FOM-P1187	PLATE, guide, periscope holder adjuster knob.....	2
	H001-1026177	BCGX1DE	FOM-P1179	SCREW, machine, oval-fil-hd., S., No. 5 (0.125)-44NF-2 x 3/8.....	2
	H001-1519004	BEAX1D	FOM-P539	WASHER, lock, internal teeth, reg., S., No. 5 (0.125).....	2
19-37	G103-1737453	A265218	FOM-P1186	PLATE, periscope housing segment knob.....	2
19-37	G168-7039470		FOM-2X1410B	RING, filler, periscope housing adapter.....	2
19-37	G103-1769674	C97211	FOM-P548	RING, periscope housing adapter.....	2
19-37	G104-1781743	A245256	FOM-P549	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-2 x 5/8.....	16
19-37	H001-1518007	BECX1G	FOM-P926	WASHER, lock, reg., S., 1/4 in.....	16
19-37	G103-1783260	C96667A	FOM-P1126	SEGMENT, periscope housing, bottom, left.....	2
19-37	H001-1023794	BCLX1.1EL	FOM-P1180	SCREW, machine, fl-hd., S., 3/8-24NF-2 x 1.....	8
19-37	H001-1521007	BEAX4G	FOM-P1165	WASHER, lock, external teeth, countersunk, S., 3/8 in.....	8
19-37	G103-1783270	C96667B	FOM-P1188	SEGMENT, periscope housing, bottom, right.....	2
		BCLX1.1EL	FOM-P1180	SCREW, machine, fl-hd., S., 3/8-24NF-2 x 1.....	8
	H001-1521007	BEAX4G	FOM-P1165	WASHER, lock, external teeth, countersunk, S., 3/8 in.....	8
19-37	G103-1783276	C96668	FOM-P1189	SEGMENT, periscope housing top.....	2

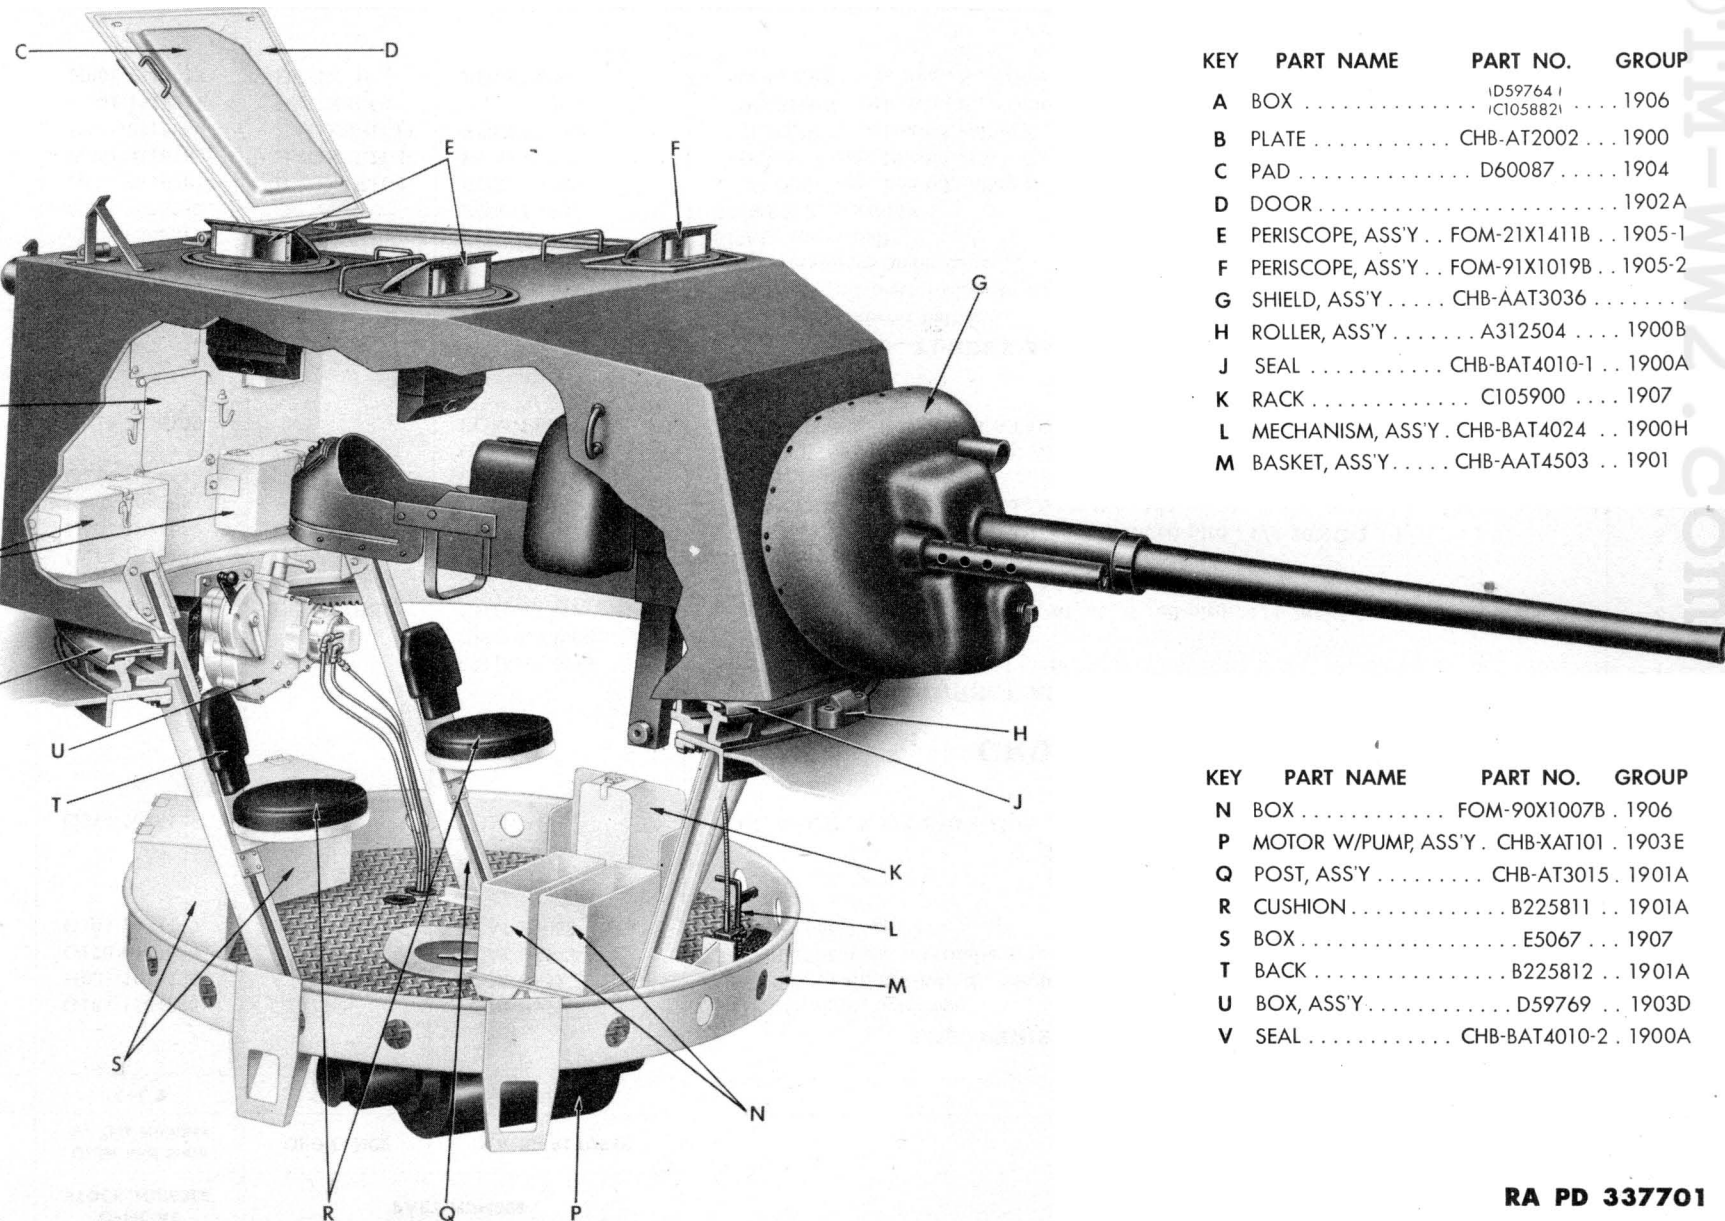

KEY	PART NAME	PART NO.	GROUP
A	BOX	ID59764 I IC105882I	1906
B	PLATE	CHB-AT2002	1900
C	PAD	D60087	1904
D	DOOR		1902A
E	PERISCOPE, ASS'Y	FOM-21X1411B	1905-1
F	PERISCOPE, ASS'Y	FOM-91X1019B	1905-2
G	SHIELD, ASS'Y	CHB-AAT3036	
H	ROLLER, ASS'Y	A312504	1900B
J	SEAL	CHB-BAT4010-1	1900A
K	RACK	C105900	1907
L	MECHANISM, ASS'Y	CHB-BAT4024	1900H
M	BASKET, ASS'Y	CHB-AAT4503	1901

KEY	PART NAME	PART NO.	GROUP
N	BOX	FOM-90X1007B	1906
P	MOTOR W/PUMP, ASS'Y	CHB-XAT101	1903E
Q	POST, ASS'Y	CHB-AT3015	1901A
R	CUSHION	B225811	1901A
S	BOX	E5067	1907
T	BACK	B225812	1901A
U	BOX, ASS'Y	D59769	1903D
V	SEAL	CHB-BAT4010-2	1900A

FIGURE 19-1—TURRET ASSEMBLY—CROSS-SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)

RA PD 337701


GROUP 18—HULL

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-37	G104-1784846	C107366	FOM-P551	1816—PERISCOPE MOUNTINGS (Contd)	
19-37	H001-1913220	A266406	FOM-P552	SHIELD, sight, periscope.	2
19-37	G170-0443048	A246608H	FOM-P1173	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 3/8.	4
19-37	G104-2447740	A248087	FOM-P1088	WASHER, lock, internal-external teeth, reg., S., 1/4 in.	4
				WIPER, periscope.	2
N,P	G214-7036125		FOM-P441	1817—TOOL BOX	
				BOX, tool, S., 9 1/2 x 10 x 21 in.	1
				GROUP 19 — TURRET	
				1900—TURRET ASSEMBLY (Mk I; LVT (A) (1) only)	
	G168-7035357		CHB-AT2008	GASKET, turret gun removal plate.	1
	G214-7036126		CHB-AT4009	GUARD, leg, turret, right.	1
	H001-1921550	BCYX2BE-1	CHB-AT512	SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., 1/4-20NC-2 x 1/2.	8
	H001-7043681	BEEX1G-1	GM-120392	WASHER, plain, S., cd-pltd., SAE., std., 1/4 in.	8
	G214-7036127		CHB-AT4011	GUARD, leg, turret, left.	1
	H001-1921550	BCYX2BE-1	CHB-AT512	SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., 1/4-20NC-2 x 1/2.	5
	H001-7043681	BEEX1G-1	GM-120392	WASHER, plain, S., cd-pltd., SAE std., 1/4 in.	5
	G214-7036128		CHB-AT2002	PLATE, removal, turret gun.	1
F,19-1	G214-7036129	BCBX1EC-1	CHB-XAT514	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-2 x 1.	4
			FOM-P684	TURRET, assembly (CHB-AT4504).	1
				1900—TURRET ASSEMBLY (Mk IV; LVT (A) (4) only)	
	G103-0303246	C107591	FOM-P1231	RETAINER, turret ball seal.	6
	G127-0382040	A293226	FOM-P1258	SCREW, int-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-3 x 1/2.	24
		A293856		ROD, retaining, turret cover.	1
	G103-0303575	A293224	FOM-P1230	SEAL, turret ball.	6
	G214-7036130		FOM-P1206	TURRET, assembly.	1
	H001-0116283	BAOX1EH-1	FOM-P1260	SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-2 x 2 1/4.	2
	H001-0116280	BAOX4EH-1	FOM-P1227	SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-3 x 1 5/8.	17
	H001-0116699	BAOX5BP-1	FOM-P1259	SCREW, cap, hex-hd., alloy-S., cd-pltd., 5/8-18NF-2 x 1 5/8 (turret to turret ball ring)	2
	H001-1518011	BECX4M-1	FOM-P896	WASHER, lock, reg., S., cd-pltd., 1/2 in.	19
	H001-1518013	BECX1P	FOM-P836	WASHER, lock, reg., S., 5/8 in.	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1900-1—.50 CAL. ANTI-AIRCRAFT MACHINE GUN HOLD DOWN LATCH (Mk IV; (A) (4) only)	
19-5A	G127-0102010	A293254	FOM-P1432	ADJUSTER, eye bolt, .50 cal. anti-aircraft machine gun.....	1
	G127-0124262	A293259		BOLT, eye, .50 cal. anti-aircraft machine gun, long.....	1
19-5A	G127-0124263	A293279	FOM-P1435	BOLT, eye, .50 cal. anti-aircraft machine gun, short, left.....	1
19-5A	G127-0124264	A293278	FOM-P1434	BOLT, eye, .50 cal. anti-aircraft machine gun, short, right.....	2
19-5A	G127-0137804	B230543	FOM-P1411	CLAMP, .50 cal. anti-aircraft gun hold down latch.....	1
19-5A	G127-0209250	B230544	FOM-P1412	HANDLE, .50 cal. anti-aircraft gun hold down latch.....	1
19-5A	H001-4185601	BBXX1FB-1	GM-124925	NUT, hex., jam, S., cd-pltd., 3/8-24NF-2 (anti-aircraft gun hold down eye bolt).....	2
	H001-0811038	BFAX1CD	GM-107762	PIN, cotter, S., 3/32 x 5/8 in. (hold down latch clevis pin).....	5
19-5A	G127-0338706	A293294	FOM-P1436	PIN, clevis, .50 cal. anti-aircraft machine gun hold down latch handle latch clamp and machine gun eyebolt.....	5
	G127-0384794	A293225A	FOM-P1429	SHIM, .50 cal. anti-aircraft machine gun mounting ring support (0.010 thk.).....	as req.
	G127-0384795	A293225B		SHIM, .50 cal. anti-aircraft machine gun mounting ring support (0.030 thk.).....	as req.
	G127-0384778	A293225C		SHIM, .50 cal. anti-aircraft machine gun mounting ring support (0.125 thk.).....	as req.
	G127-0384787	A293570A	FOM-1442	SHIM, .50 cal. anti-aircraft machine gun mounting ring to turret roof.....	as req.
19-5A	G127-0392188	A293251	FOM-P1431	STRAP, hold down, .50 cal. anti-aircraft machine gun, assembly (CAD-3600499).....	1
19-5A	H001-7043741	BEBX1K-1		WASHER, plain, S., cd-pltd., 3/8 in. (hold down bracket eyebolt adjuster).....	2
19-5A	H001-1810040	EEAX1D	GM-144254	YOKE, rod end, adjustable, S., 3/8-24NF-2 (.50 cal. anti-aircraft machine gun hold down latch handle).....	1
				1900-2—ANTI-AIRCRAFT MACHINE GUN MOUNTING BRAKE (Mk IV; (A) (4) only)	
19-6A	G163-0125837	A312122		BRACKET, .50 cal. anti-aircraft machine gun mounting brake.....	1
	G103-1525920	C107860	FOM-P1354	BRAKE, .50 cal. anti-aircraft machine gun mounting, assembly.....	1
19-6A	G163-0209301	B230399		HANDLE, .50 cal. anti-aircraft machine gun mounting brake.....	1
	H001-0811038	BFAX1CD	GM-107762	PIN, .50 cal. anti-aircraft machine gun brake handle retaining washer.....	1
19-6A	G163-0384975	A312126		SHOE, .50 cal. anti-aircraft machine gun brake, w/LINING, assembly.....	1
19-6A	G163-0389821	A312125		SPRING, .50 cal. anti-aircraft machine gun mounting brake handle.....	1
19-6A	G163-0443069	A293155		WASHER, .50 cal. anti-aircraft machine gun brake mounting handle retainer.....	1
				1900A—TURRET BASE SEALS (Mk I; LVT (A) (1) only)	
	H002-0504208	CLDX5A	FOM-P1	FITTING, lubricating, hydraulic type, stght., 1/8-27NPT, male, short (turret base seals) (AD-1610).....	6
19-1	G168-7035303		CHB-BAT4010-1	SEAL, turret base, front, assembly (Includes: segments, strip, and attaching hardware)	
	G127-0382035		GM-116422	SCREW, cap, hex-hd., br., 5/16-18NC-2-3/4.....	6
	H001-7045561	BEBX2C-1	GM-120387	WASHER, plain, S., cd-pltd., US std., 5/16 in.....	6
	H001-7025711	BECC1H-1	GM-120214	WASHER, lock, S., cd-pltd., 5/16 in.....	6

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-1	G168-7035304	BEBX2C-1 BECX1H-1	CHB-BAT4010-2	1900A—TURRET BASE SEALS (Mk I; LVT (A) (1) only) (Contd)	
	G127-0382035		GM-116422	SEAL, turret base, rear, assembly (Includes: segments, strip, and attaching hardware)...	1
	H001-7045561		GM-120387	SCREW, cap, hex-hd., br., 5/16-18NC-2-3/4.....	6
	H001-7025711		GM-120214	WASHER, plain, S., cd-pltd., US std., 5/16 in.....	6
	G168-7035305	BEBX2C-1 BECX1H-1	CHB-BAT4010-3	WASHER, lock, S., cd-pltd., 5/16 in.....	6
	G127-0382035		GM-116422	SEAL, turret base, side, assembly (Includes: segments, strip, and attaching hardware)	
	H001-7045561		GM-120387	SCREW, cap, hex-hd., br., 5/16-18NC-2-3/4.....	7
	H001-7025711		GM-120214	WASHER, plain, S., cd-pltd., US std., 5/16 in.....	7
	G168-7035306	BCKX4DH BEAX4F-1	CHB-AT3012-1	WASHER, lock, S., cd-pltd., 5/16 in.....	7
	G168-7035307		CHB-AT3012-2	STRIP, sealing, turret base, long.....	2
			CHB-AT3019-2	STRIP, sealing, turret base, short.....	1
	G214-7036131		CHB-AT3019-1	SEGMENT, backing ring, turret base seal, front.....	1
	G214-7036132	BCKX4DH BEAX4F-1	CHB-AT3019-3	SEGMENT, backing ring, turret base seal, rear.....	1
	G214-7036133		CHB-AT3013-2	SEGMENT, backing ring, turret base seal, side.....	1
	H001-1021138		GM-114422	SEGMENT, clamp ring, turret base seal, front.....	1
			GM-134512	SCREW, fl-hd., br., 5/16-18NC-2 x 7/8.....	7
		BCKX4DH BEAX4F-1	CHB-AT3013-1	WASHER, lock, external-teeth, countersunk, S., cd-pltd., 5/16 in.....	7
	H001-1021138		GM-114422	SEGMENT, clamp ring, turret base seal, rear.....	1
			GM-134512	SCREW, fl-hd., br., 5/16-18NC-2 x 7/8.....	7
	G214-7036134		CHB-AT3013-3	WASHER, lock, external-teeth, countersunk, S., cd-pltd., 5/16 in.....	7
	H001-1021138	BCKX4DH BEAX4F-1	GM-114422	SEGMENT, clamp ring, turret base seal, side.....	1
			GM-134512	SCREW, fl-hd., br., 5/16-18NC-2 x 7/8.....	3
	G168-7035308		CHB-AT3024-1	WASHER, lock, external-teeth, countersunk, S., cd-pltd., 5/16 in.....	3
	G168-7035309		CHB-AT3024-2	SEGMENT, cone ring, turret base seal, front.....	1
	G168-7035310	FOM-9X1010B FOM-9X1011B FOM-9X1012B FOM-9X1014B	CHB-AT3024-3	SEGMENT, cone ring, turret base seal, rear.....	1
	G168-7035311		CHB-AT4005	SEGMENT, cone ring, turret base seal, side.....	1
			FOM-9X1010B	SEGMENT, turret base ring shield.....	6
			FOM-9X1011B	SHIM, turret base seal segment (vellumoid) (CHB-AT3011-1).....	10
		FOM-9X1012B FOM-9X1014B	FOM-9X1012B	SHIM, turret base seal segment (paper) (CHB-AT3011-2).....	10
			FOM-9X1014B	SHIM, turret base seal segment (CHB-AT2005-1).....	20
				SHIM, turret base seal segment (CHB-AT2005-2).....	20
	G168-7039450		FOM-21X1778C	1900B—TURRET RETAINING ROLLERS (Mk I; LVT (A) (1) only)	
				BEARING, turret traversing support, assembly (Includes: housing, pin,	
				shaft, bearing, nut, and fitting).....	3
19-7	H012-0700234	A143699	FOM-P580	BEARING, ball, annular, single row, 1.9685 bore, 5.1181 O.D., 1.2201 width,	
				shielded both sides (turret traversing support) (ND-77610-A).....	3
19-7	G168-7035302		CHB-BAT2003	BRACKET, retaining, turret, w/ROLLERS, assembly (Includes:	
				horizontal and vertical rollers, shaft, and pin).....	6

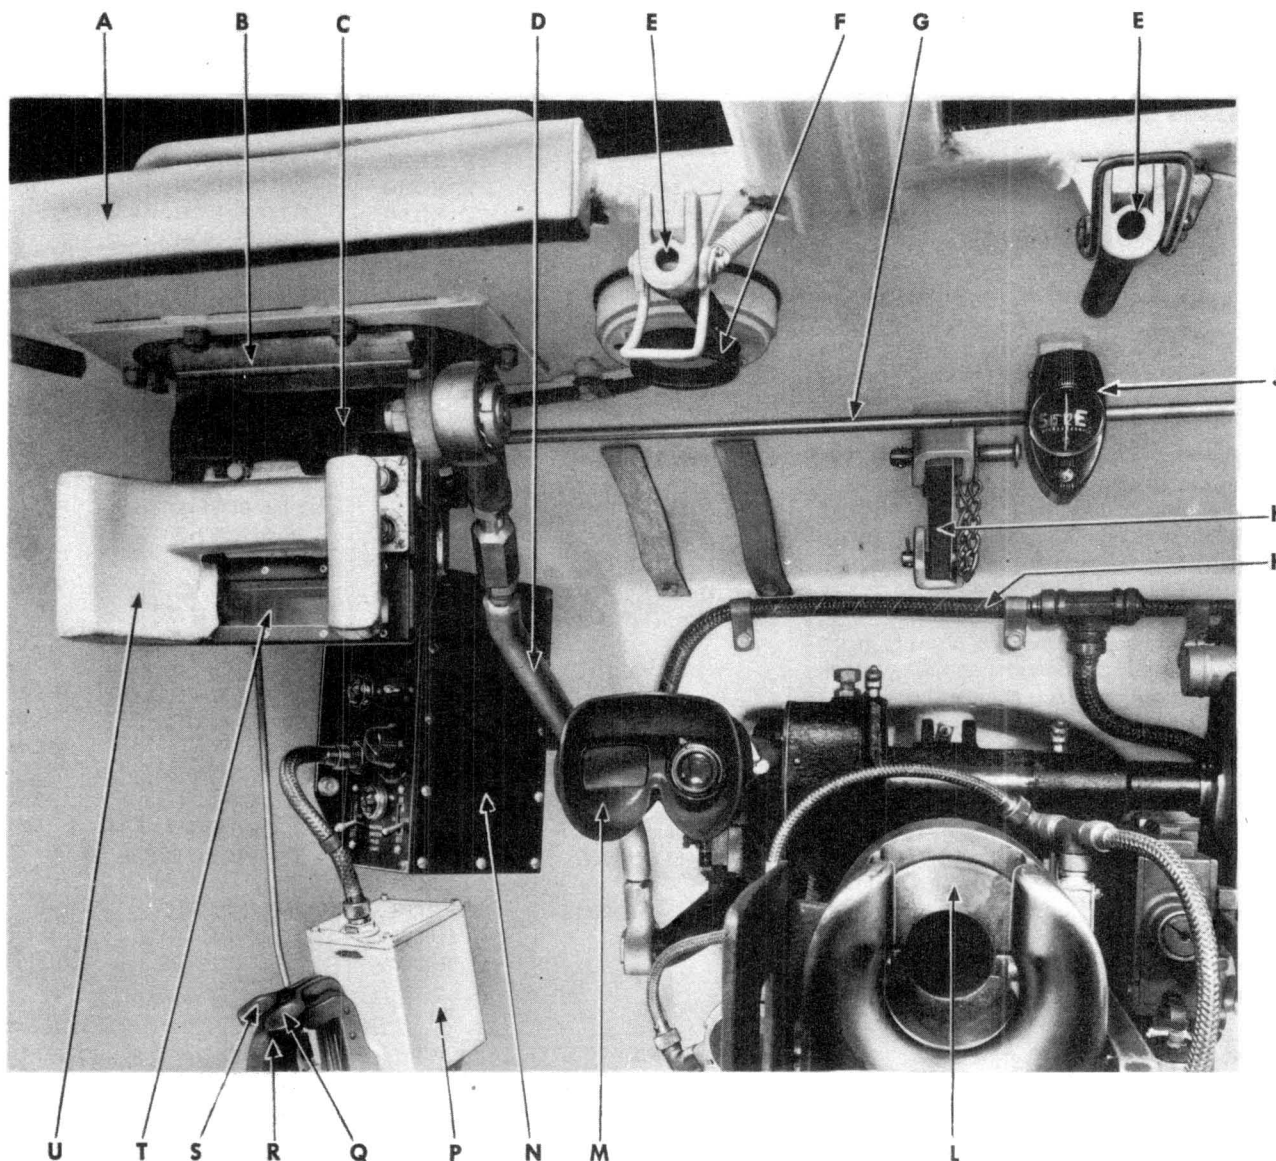


KEY	PART NAME	PART No.	GROUP
A	PAD.....	D60087.....	1904
B	HOUSING, ASS'Y..	B201190.....	1905-2
C	HOLDER.....	B96670.....	1905-2
D	LINKAGE, ASS'Y..	CHB-CAT-209...	1905
E	HANDLE, ASS'Y...	CHB-AAT1054. .	1902A
F	LIGHT, ASS'Y....	C121140-B.....	0613A
G	ROD.....	B229962.....	1903C
H	BAR.....	CHB-AT1048....	2218
J	COMPASS.....	B243760.....	2210
K	CONDUIT, ASS'Y..	CHB-AT4020....	0613F
L	GUN.....	37 MM.	
M	TELESCOPE		
N	BOX, ASS'Y....	CHB-BAT4016...0613D	
P	SWITCH, ASS'Y..	A235660.....	1903C
Q	TRIGGER.....	B220977.....	1903C
R	GRIP.....	C100740.....	1903C
S	TRIGGER.....	B220978.....	1903C
T	PERISCOPE, ASS'Y.....	D50897.....	1905-2
U	SHIELD.....	C107366.....	1905-2

FIGURE 19-2—INTERIOR OF TURRET—LEFT FRONT VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-7	G103-1527773	A232046	FOM-P1	1900B—TURRET RETAINING ROLLERS (Mk I; LVT (A) (1) only) (Contd)	
	G103-1527774	A232047		BUSHING, turret horizontal retaining roller.....	6
	H002-0504208	CLDX5A		BUSHING, turret vertical retaining roller.....	6
	G214-7036135	BBSX4AH-1	FOM-2X1749C	FITTING, lubricating, hydraulic type, stght., 1/8-27NPT, male, short (turret traversing support bearing) (AD-1610).....	3
	G214-7036136		CHB-AT4004	HOUSING, turret traversing support bearing.....	3
	H001-0725710		FOM-P581	HOUSING, turret retaining roller.....	6
	H001-4525220		FOM-2X1904B	NUT, safety, S., cd-pltd., 3/4-16NF-3 (turret traversing support bearing).....	3
		A293405	CHB-AT1051	PIN, dowel, turret traversing support bearing.....	3
				PIN, turret vertical retaining roller.....	6
				ROLLER, retaining, turret, vertical, w/BUSHING, assembly.....	6
19-7	G103-1518055	A312503	CHB-XAT504	ROLLER, retaining, turret, horizontal, w/BUSHING, assembly.....	6
19-1	G103-1518056	A312504		SCREW, set, hdls., cup-pt., S., cd-pltd., 5/16-18NC-2 x 1/4 (turret vertical roller).....	6
19-7	G103-0303621	A194142		SHAFT, turret horizontal retaining roller bearing.....	6
	G214-7036137		FOM-P578	SHAFT, turret traversing support bearing (CHB-AT2027).....	3
			FOM-9X1013B	SHIM, turret retaining roller housing (CHB-AT2004-1).....	10
			FOM-9X1015B	SHIM, turret retaining roller housing (CHB-AT2004-2).....	10
	G168-7039453	A262038	FOM-2X1930B	SHIM, turret traversing support bearing (set of 4) (#20BXS Gage).....	12
	G168-7039454		FOM-2X1931B	SHIM, turret traversing support bearing (set of 4) (#30BXS Gage).....	12
	G103-1789465		FOM-P573	SPACER, turret traversing support bearing (3/8 in. thick).....	3
19-7			CHB-AT1006	WASHER, thrust, turret vertical retaining roller.....	12
19-1				1901—TURRET BASKET (Mk I; LVT (A) (1) only)	
	G214-7036138	A293304	CHB-AAT4503	BASKET, turret, assembly.....	1
	G103-1603614			GROMMET, turret basket floor.....	6
	G214-7036139		CHB-AT3035	SHIELD, splash, turret basket.....	1
	G168-7035361		CHB-AAT2029	SUPPORT, basket, front, assembly (Includes: channel reinforcement, ring, pin, and clip).....	1
	H001-4039541	BBW1CA-1	CHB-XAT505	NUT, safety, S., cd-pltd., 3/8-24NF-3.....	4
	H001-5027111	BCBX1CA-1		SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4.....	8
	H001-7025741	BECX1K-1		WASHER, lock, reg., S., cd-pltd., 3/8 in.....	4
	H001-7043741	BEBX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.....	2
			GM-120382		
19-1,4	G103-1543506	B225812		1901A—TURRET SEATS (Mk I; LVT (A) (1) only)	
	G103-1518302	B154723		BACK, turret seat.....	2
19-1,4	G103-1543508	B225811		BELT, safety, turret seat.....	2
				CUSHION, turret seat.....	2

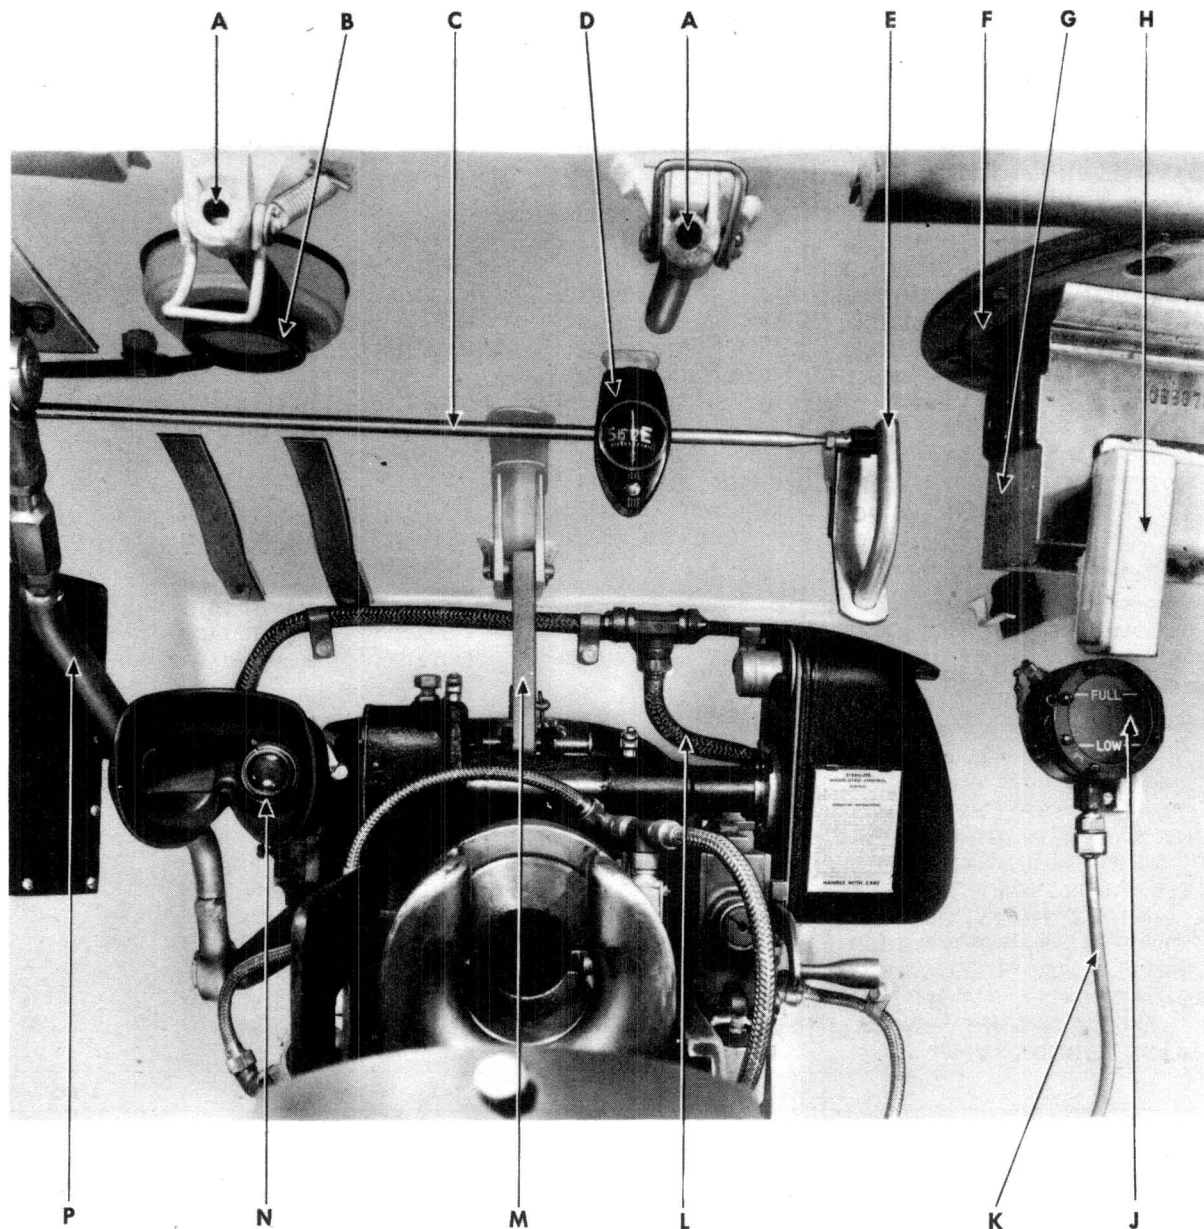


KEY PART NAME	PART No.	GROUP
A	HANDLE, ASS'Y....CHB-AAT1054...	1902A
B	LIGHT, ASS'Y.....C121140B.....	0613A
C	ROD.....B229962.....	1903C
D	COMPASS.....B243760.....	2210
E	HANDLE.....CHB-AAT2025...	1903C
F	HOUSING, ASS'Y...C97292.....	1905-1
G	HOLDER.....C96670.....	1905-1
H	SHIELD.....C107366.....	1905-1
J	RESERVOIR.....1277550.....	1903F
K	TUBE, ASS'Y.....CHB-XAT113....	1903G
L	CONDUIT, ASS'Y...CHB-AT4020....	0613F
M	BAR.....CHB-AT1048....	2218
N	TELESCOPE	
P	LINKAGE, ASS'Y....CHB-CAT209....	1905

RA PD 337703

FIGURE 19-3—INTERIOR OF TURRET—RIGHT FRONT VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-1	G168-7035359		CHB-AT3015	1901A—TURRET SEATS (Mk I; LVT (A) (1) only) (Contd)	
	H001-4039541	BBWX1CA-1		POST, turret seat, left, assembly	1
	H001-5027111	BCBX1CA-1	CHB-XAT505	NUT, safety, S., cd-pltd., 3/8-24NF-3 (post to bracket)	3
	H001-5027131	BCBX1CC-1	CHB-XAT506	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4 (post to basket)	3
	H001-7025741	BE CX1K-1	GM-120382	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 1 (post to turret)	4
	H001-7043741	BE BX1K-1		WASHER, lock, reg., S., cd-pltd., 3/8 in. (post to turret)	4
				WASHER, plain, S., cd-pltd., SAE std., 3/8 in. (post to turret)	4
	G168-7035360		CHB-AT3016	POST, turret seat, right, assembly	1
	H001-4039541	BBWX1CA-1		NUT, safety, S., cd-pltd., 3/8-24NF-3 (post to basket)	3
	H001-5027111	BCBX1CA-1	CHB-XAT505	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4 (post to basket)	3
19-4	H001-5027131	BCBX1CC-1	CHB-XAT506	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 1 (post to turret)	4
	H001-7025741	BE CX1K-1	GM-120382	WASHER, lock, reg., S., cd-pltd., 3/8 in. (post to turret)	4
	H001-7043741	BE BX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in. (post to turret)	4
				1901A—TURRET SEATS (Mk IV; LVT (A) (4) only)	
	G127-0125808	C107646	FOM-P1460	BRACKET, holder, turret gunner's and loader's seat	2
	H101-0190927	A266502	GM-190927	SCREW, int-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-1	4
	G103-0303591	D59891	FOM-P1228	SEAT, turret gunner's and loader's, w/PAN, assembly	2
				1902—TURRET HATCHES (Mk I; LVT (A) (1) only)	
	G214-7032799		FOM-21X1393B	COVER, turret escape hatch	2
	G168-7039451		FOM-2X1392B	GASKET, turret escape hatch	2
	G168-7037189		FOM-21X1772BR	HANDLE, turret escape hatch latch, right, assembly	2
			FOM-P545	NUT, acorn, reg., S., 1/2-20NF-2	2
	H001-0716025	BBDX1E	FOM-P576	NUT, jam, hex., s-fin., S., 1/2-20NF-2	2
	H001-1530011	BE BX1M	FOM-P103	WASHER, plain, S., SAE std., 1/2 in.	4
	G168-7037192		FOM-21X1383B	HINGE, turret escape hatch, assembly	4
	H001-5420521	BCVX2EH-1	FOM-P421	SCREW, cap., hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4	8
			FOM-P147	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 5/16-18NC-3 x 3/4	12
	H001-1519011	BE AX1L	FOM-P28	WASHER, lock, internal teeth, S., 3/8 in. (SK-1220)	8
	G168-7039452		FOM-2X1784B	PLATE, strike, turret escape hatch	2
			FOM-P577	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 1/4-20NC-3 x 1/2	2
			FOM-P43	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 1/4-20NC-3 x 3/4	2
				1902—TURRET HATCHES (Mk IV; LVT (A) (4) oniy)	
	G168-7039455		FOM-20X1937B	COVER, turret escape hatch	2
	G168-7039456		FOM-2X1938B	GASKET, turret escape hatch	2
			FOM-21X1882BR	HANDLE, turret escape hatch latch, right, assembly	2
			FOM-P545	NUT, acorn, reg., S., 1/2-20NF-2	2
	H001-0726025	BBDX1E	FOM-P576	NUT, jam, hex., s-fin., S., 1/2-20NF-2	2
	H001-1530011	BE BX1M	FOM-P103	WASHER, plain, S., SAE std., 1/2 in.	4

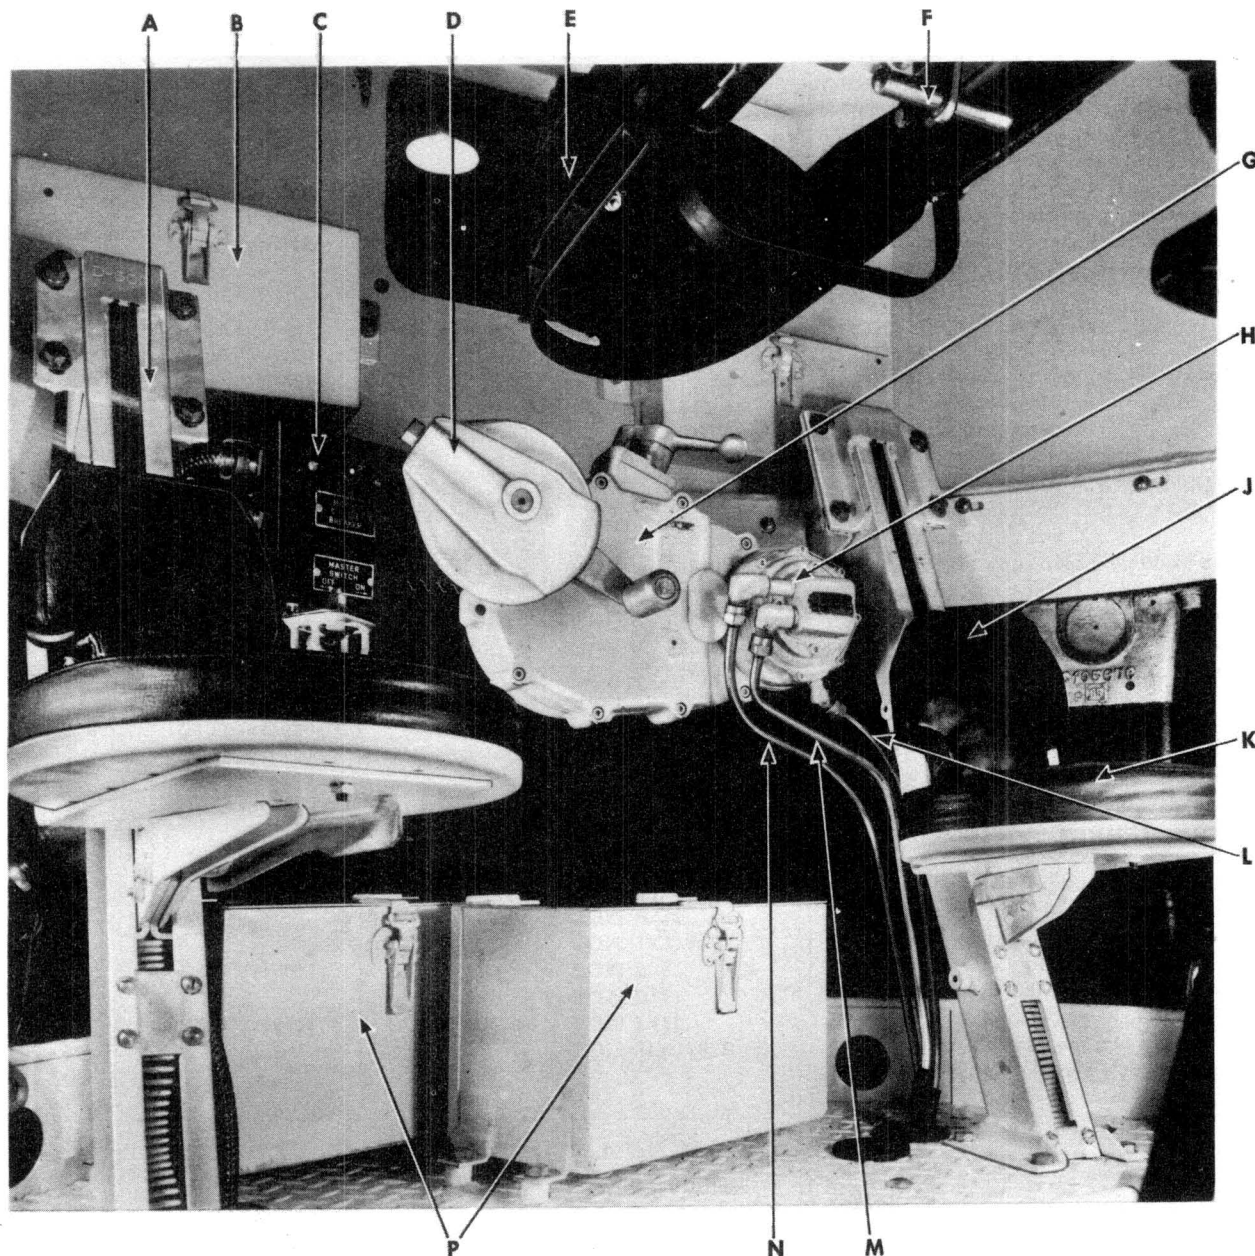


KEY PART NAME	PART No.	GROUP
A POST, ASS'Y.....	CHB-AT3016....	1901A
B BOX.....	C105882.....	1906
C BOX, ASS'Y.....	CHB-BAT4021...	0613E
D COVER.....	OG-54143.....	1903D
E GUARD		
F HANDLE		
G BOX, ASS'Y.....	D59769.....	1903D
H MOTOR, ASS'Y.....	D60068.....	1903D
J BACK.....	B225812.....	1901A
K CUSHION.....	B225811.....	1901A
L TUBE.....	A312184C.....	1903G
M TUBE.....	A312184B.....	1903G
N TUBE.....	A312184D.....	1903G
P BOX.....	E5067.....	1905

RA PD 337704

FIGURE 19-4—INTERIOR OF TURRET—REAR VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1902—TURRET HATCHES (Mk IV; LVT (A) (4) only (Contd))	
	H001-5420521	BCVX2EH-1	FOM-21X1383B	HINGE, turret escape hatch, assembly	4
			FOM-P421	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4	8
			FOM-P147	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 5/16-18NC-3 x 3/4	12
			FOM-P28	WASHER, lock, internal teeth, S., 3/8 in. (SK-1220)	8
	H001-1519011	BEAX1L	FOM-2X1784B	PLATE, strike, turret escape hatch	2
			FOM-P577	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 1/4-20NC-3 x 1/2	2
			FOM-P43	SCREW, machine, fl-hd., cross recess type, S., cd-pltd., 1/4-20NC-3 x 3/4	2
				1902A—TURRET DOORS (Mk I; LVT (A) (1) only)	
	G103-1527775	A260907		BUSHING, turret door female hinge	4
	2300-XAT543		CHB-XAT543	BUSHING, turret door latch (bronze)	4
	G103-1527776	A260908		BUSHING, turret door male hinge	2
19-5,8	G103-1847620	A266108		CLIP, turret door latch	4
	H002-0221015		AD-1688	FITTING, lubricating, hydraulic type, 45 deg. elbow, 1/8 NPT x 1 1/32 (turret door)	2
19-2,3,8	G214-7036143		CHB-AAT1054	HANDLE, turret door latch, w/PIN, assembly	4
19-5	G168-7035349		CHB-AAT2015	HINGE, turret left and right door, assembly	4
19-5	G168-7035350		CHB-AAT2013	LATCH, turret left door hold open, assembly (Includes: arm assembly, locking finger, and pin)	1
19-5	G168-7035350		CHB-AAT2012	LATCH, turret right door hold open, assembly (Includes: arm assembly, locking finger and pin)	1
19-8	G103-1738561	A266244		PIN, clevis, turret door latch	4
19-8	H001-4417121	BFAX1BC-1	GM-112726	PIN, cotter, split, S., cd-pltd., 1/16 x 1/2 (turret door latch)	4
			CHB-AT1032	PIN, hinge, turret door	4
19-8	G103-1738613	A293095		PIN, hinge, turret door latch	4
	2300-XAT542		CHB-XAT542	SPRING, tension, turret door hold-open latch	2
19-8	G103-1789649	A293353		SPRING, tension, turret door latch handle	4
	H006-0282430		GM-103891	WASHER, expansion, turret door retaining hinge pin (5/8 in.)	2
19-8	H001-7043681	BEBX1G-1	GM-120392	WASHER, plain, S., cd-pltd., SAE std., 1/4 in. (turret door latch)	4
				1903—TRAVERSING HAND CONTROL AND MECHANISM (Mk I; LVT (A) (1) only)	
	G103-2110476	B140602		ARM, hand operated turret traversing mechanism rotating lever index	1
	G103-2124070	B140623		BODY, hand operated turret traversing gear box handle lever	1
19-15	H001-2012400	NAAX1EB		BUSHING, bz., 7/8 I.D., 1 1/8 O.D., 1 lgh. (hand operated turret traversing mechanism gear box crank shaft)	2
19-9	G081-0119000	B140601		DISK, hand operated turret traversing handle lever	1
19-9	H001-5090641	BCKX2CF-1	GM-120585	SCREW, machine, fl-hd., S., 1/4-20NC-2 x 5/8	4
	G168-7035287		CHB-AT1103	GASKET, hand operated turret traversing control unit	1

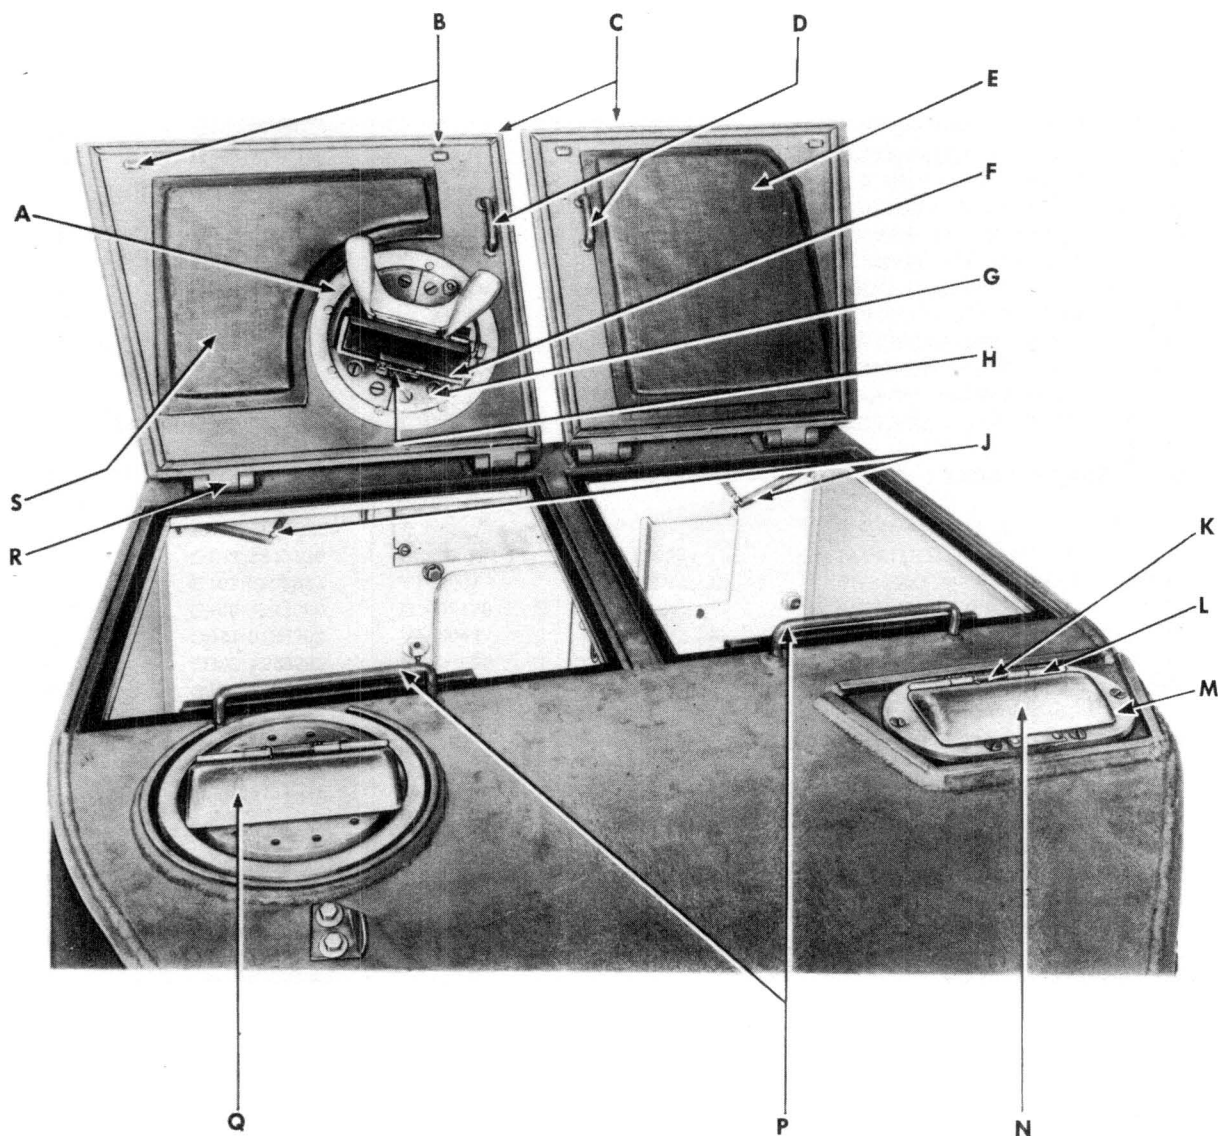

KEY PART NAME	PART No.	GROUP
A RING.....	C97211.....	1905-1
B CLIP.....	A266108.....	1902-A
C DOOR		
D HANDLE		
E PAD.....	D60087.....	1904
F HOLDER.....	C96670.....	1905-1
G HOUSING, ASS'Y...	C97292.....	1905-1
H KNOB.....	A265219.....	1905-1
J LATCH		
K SPRING.....	A308212.....	1905-1
L HINGE.....	A228028.....	1905-1
M HOUSING, ASS'Y...	B201190.....	1905-2
N DOOR, ASS'Y.....	B257848.....	1905-1,2
P HANDLE		
Q DOOR, ASS'Y.....	B257848.....	1905-1,2
R HINGE.....	CHB-AAT2015.	1902A
S PAD.....	D60086.....	1904


RA PD 337705

FIGURE 19-5—EXTERIOR OF TURRET WITH DOOR OPEN (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903—TRAVERSING HAND CONTROL AND MECHANISM (Mk I; LVT (A) (1) only) (Contd)	
19-9	G038-1028840	C60344		GUARD, hand operated turret traversing handle lever	1
	G214-7036144		CHB-AT1111	HANDLE, hand operated turret traversing mechanism wheel crank	1
19-9	G103-0131590	B141840	CHB-AT1101	INDEX, hand operated turret traversing lever, assembly (Includes: arm and pin)	1
	G081-0136781	C60345	CHB-AT2040	LEVER, hand operated turret traversing handle, assembly (Includes: body, handle, and pins)	1
	G038-0151840	A141817		PIN, hand operated turret traversing mechanism handle lever	2
	G103-1738573	A141802		PIN, hand operated turret traversing mechanism handle lever	1
	G038-0151790	A143852		PIN, straight, S., 1/4 x 25/32 (hand operated turret traversing mechanism handle lever index)	2
19-9	G103-1738565	A266412	CAD-103741	PIN, straight, S., 1/4 x 1 1/4 (hand operated turret traversing mechanism lever guard)	1
19-15	G103-1738682	A7002655	OG-214388	PINION, spur, hand operated turret traversing mechanism gear box drive	1
19-9	G081-0152500	A142643	CHB-XAT545	PLUNGER, hand operated turret traversing mechanism index	1
19-15	G103-2384600	B7068150	OG-38397	SHAFT, hand operated turret traversing mechanism gear box crank and pinion	1
19-9	G103-0303977	A142001	CHB-XAT537	SPRING, compression, hand operated turret traversing mechanism index plunger	1
19-9	G103-1842736	BECX1M-1	GM-120384	WASHER, lock, reg., S., cd-pltd., 1/2 in. (hand operated turret traversing mechanism index plunger)	1
				1903A—TURRET TRAVERSING MECHANISM BEARINGS (Mk I; LVT (A) (1) only)	
19-18,21,25	G103-1518095		MRC-110R	BEARING, ball, angular contact, single row, light series, narrow, single direction thrust. 1.9685 bore, 3.5433 O.D., 0.4331 wide (turret traversing mechanism variable displacement pump and motor cylinder)	2
19-15	H012-1303025	CAAX1AL	MRC-205S	BEARING, ball, annular, single row, light series, deep groove, 0.9843 bore, 2.0472 O.D., 0.5906 wide (turret traversing mechanism gear box output shaft cover)	1
19-15	H012-1303030	CAAX1AM	MRC-206SF	BEARING, ball, annular, single row, light series, w/SNAP RING 1.1811 bore, 2.4409 O.D., 0.6299 wide (turret traversing mechanism gear box output shaft body)	1
19-18,21,25, 27	H012-0305020	CADX2AE	MRC-7304	BEARING, ball (Type B)-angular contact, medium series, 0.7874 bore, 2.0472 O.D., 0.5906 wide (turret traversing mechanism variable displacement pump and hydraulic motor shaft)	2
19-15	H012-709422		TR-B-1012X	BEARING, needle, 5/8 bore, 13/16 O.D., 3/4 (turret traversing mechanism gear box intermediate shaft)	2
19-21,22,25	G103-2118001	A235657	OG-217422	BEARING, roller, turret traversing mechanism variable displacement pump piston reaction, w/o outer RACE (BN-O-825A)	1
19-18	H012-707735	A235661	OG-217421	BEARING, roller, 2.687 bore, 3.8750 O.D., 0.750 wide (turret traversing mechanism hydraulic piston reaction) (BN-O-824A)	1
			FOM-P688	FITTING, lubricating, hydraulic type, stght., 1/8-NPT x 1 3/4 (AD-1669)	12
	G103-1596015	C105644	FOM-P572	GEAR, ring, turret (246T)	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903A—TURRET TRAVERSING BALL RING (Mk IV; LVT (A) (4) only)	
19-7A	G104-0300079	A212907	FOM-P1507	BALL, turret traversing (chr-S., 1 1/4 in.)	120
19-7A	H002-0504208	CLDX6A	FOM-P1236	FITTING, lubricating, hydraulic, stght., 1/8-27NPT., male (turret ball ring) (AD-1980)	3
19-7A	G127-0364855	D59864		RACE, turret ball, inner	1
19-7A	G103-1764600	E5200	CV-3671339	RACE, turret ball, outer, w/ring GEAR, assembly	1
19-7A	G081-0154101	C84804	FOM-P1508	RETAINER, turret ball (CV-3670300)	12
19-7A	G127-0364865	D60056	FOM-P1211	RING, ball, assembly	1
	H001-0725856	BBWX1GA		NUT, safety, S., 5/8-18NF-3	40
	H001-3021321	BAOX1EH-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF x 2 1/4	2
	H001-0116342	BAOX2BF		SCREW, cap, hex-hd., alloy-S., 5/8-18NF-2 x 2 1/4	2
	H001-0116280	BAOX4EH		SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-2 x 1 5/8	17

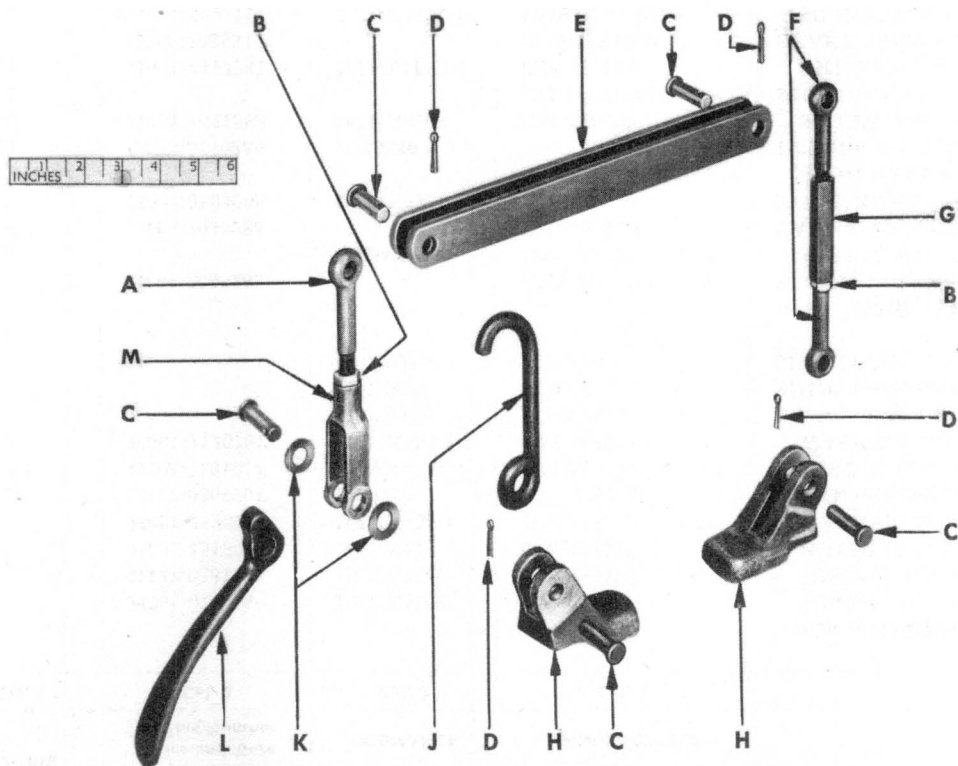


KEY	PART NAME	PART No.	GROUP
A	BOLT.....	G127-01-24263....	1900-1
B	NUT.....	BBXX1FB-1.....	1900-1
C	PIN.....	G127-03-38706....	1900-1
D	PIN.....	BFA1CD.....	1900-1
E	STRAP.....	G127-03-92188....	1900-1
F	BOLT.....	G127-01-24264....	1900-1
G	ADJUSTOR.....	G127-01-02010....	1900-1
H	BRACKET....(welded to turret—not serviceable)		
J	CLAMP.....	G127-01-37804....	1900-1
K	WASHER.....	BEBX1K-1.....	1900-1
L	HANDLE.....	G127-02-09250....	1900-1
M	YOKE.....	EEAX1D-5.....	1900-1

RA PD 341173

**FIGURE 19-5A—ANTI-AIRCRAFT MACHINE GUN HOLD-DOWN LATCH—EXPLODED VIEW
(MK IV; LVT (A) (4) ONLY)**

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-7A	H001-0116699	BAOX5BP		1903A—TURRET TRAVERSING BALL RING (Mk IV; LVT (A) (4) ONLY) (Contd)	
	G127-0381997	BCVX4QT	GM-181483	SCREW, cap, hex-hd., alloy-S., 5/8-18NF-2 x 1 5/8.....	2
	H001-1518013	BECEX1P	GM-103325	SCREW, cap, hex-hd., S., 5/8-18NF-3 x 1 7/8.....	40
	H001-7126781	BECEX4M-1	GM-187130	WASHER, lock, reg., S., 5/8 in.....	2
	G127-0369901	C84803	CV-3671175	WASHER, lock, reg., S., cd-pltd., 1/2 in.....	19
	G103-1781914	BCVX4LN-1	GM-181698	RING, retaining, turret ball.....	1
	H001-7126781	BECEX4M-1	GM-187130	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-2 x 1 1/4.....	39
		C107997B	FOM-P1212	WASHER, lock, reg., S., cd-pltd., 1/2 in.....	39
		C107997C	FOM-P1213	SHIM, turret traversing ball ring (11 gage).....	as req.
		C107997A	FOM-P1219	SHIM, turret traversing ball ring (3/16 in. thk.).....	as req.
19-10				SHIM, turret traversing ball ring (16 gage).....	as req.
				1903B—TURRET TRAVERSING LOCK (Mk I; LVT (A) (1) only)	
	G168-7035285		CHB-AT1031	BLOCK, extension, turret traversing lock shaft.....	1
		Q83WC-1	GM-127818	SCREW, set, hds., dog-pt., S., cd-pltd., 1/4-20NC-2 x 7/8.....	1
	G168-7035286		CHB-XAT517	CAM, operating, turret traversing lock, w/HANDLE.....	1
	H002-0504208	CLDX5A	AD-1610	FITTING, lubricating, hydraulic type, stght., 1/8-27NPT., male, short, (turret traversing lock).....	1
	G038-0140380	A159830		PAD, friction, turret traversing lock (fibre).....	1
	H001-1021088	BCKX4AF	GM-110597	SCREW, machine, fl-hd., br., No. 10 (0.190)-24NC-2 x 5/8.....	4
			CHB-AT1044	PIN, turret traversing lock operating cam.....	1
	H001-4417731	BFAX1DG-1	GM-137185	PIN, cotter, split, S., cd-pltd., 1/8 x 1.....	1
19-10A	G168-7035312		CHB-AT1030	SHAFT, turret traversing lock cam lever.....	1
	H001-5027111	BCBX1CA-1	CHB-XAT505	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4.....	1
			CHB-AT1065	SHIM, turret traversing lock shaft adjusting cap screw.....	as req.
			CHB-AT1064	WASHER, thrust, turret traversing lock operating cam.....	2
				1903B—TURRET TRAVERSING LOCK (Mk IV; LVT (A) (4) only)	
	G134-0124155	B195624		BOLT, lock, turret traversing lock.....	1
	G214-5614258	C114258		BRACKET, turret traversing lock.....	1
	G133-0140003	A23081		COVER, turret traversing lock plunger rod.....	1
	H001-1030188	BCOX1DB		SCREW, machine, rd-hd., S., No. 5 (0.123)-44NF-2 x 3/16.....	2
	H001-1519004	BEAX1D		WASHER, lock, internal teeth, reg., S., No. 6.....	2
19-10A	H002-0101880	CLFX2A		CUP, oil drive type, 1/4 in. diam. (turret traversing lock).....	1
	G103-1679900	C114259	FOM-P1229	LOCK, turret traversing, assembly.....	1
	G103-1738630	BFBX1NG	GM-141277	PIN, dowel, S., 1/2 x 5/8 in.....	1
	H001-0116278	BAOX1ED		SCREW, cap, hex-hd., s-fin., alloy-S., 1/2-20NF-2 x 1 1/4.....	2
	H001-1530011	BEBX1M-1	GM-103343	WASHER, plain, SAE std., S., cd-pltd., 1/2 in.....	2
	H001-7126781	BECEX4M-1	GM-187130	WASHER, lock, reg., S., cd-pltd., 1/2 in.....	2

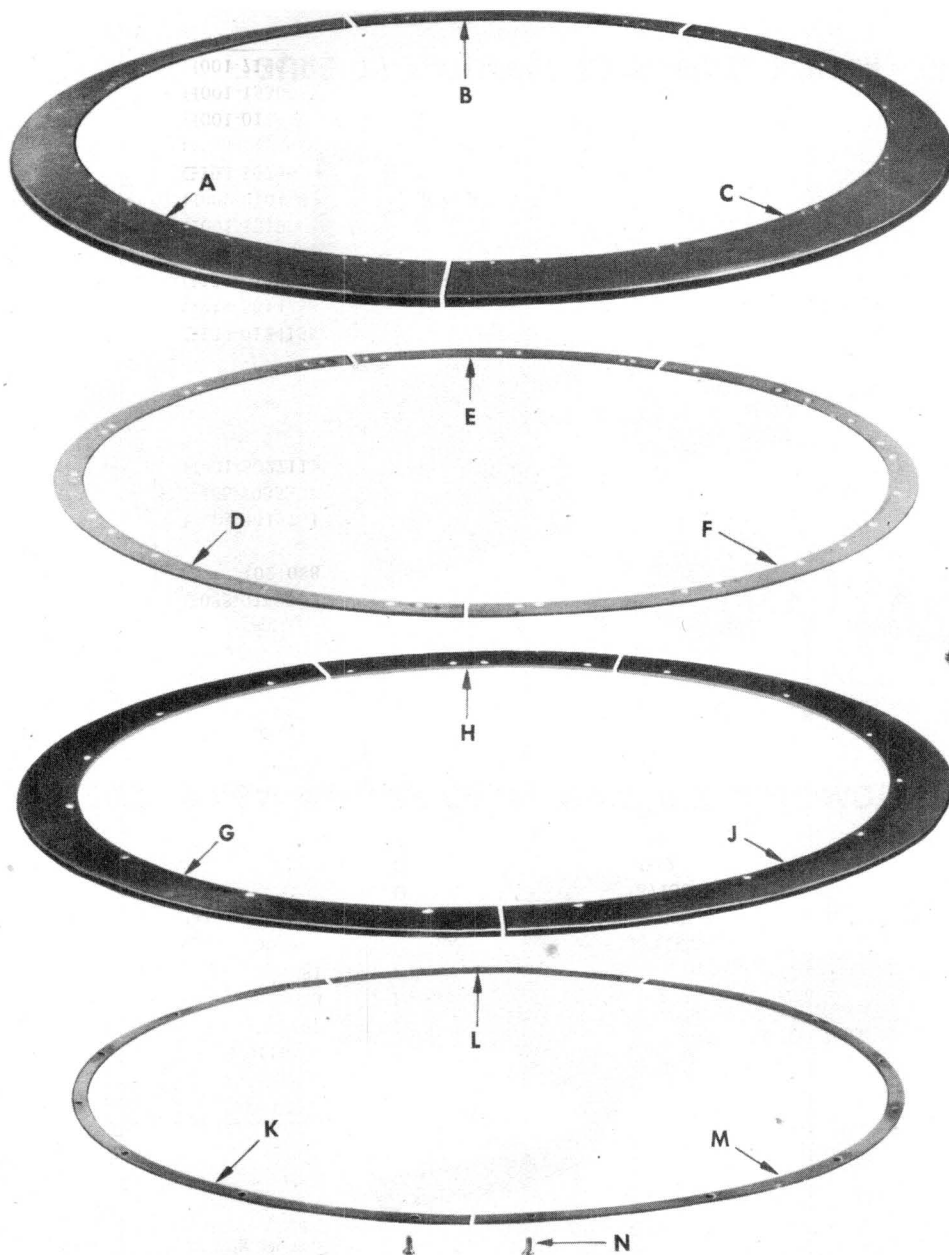


KEY	PART NAME	PART No.	GROUP
A	SEGMENT, cone ring, front.....	CHB-AT3024-1.....	1900A
B	SEGMENT, cone ring, side.....	CHB-AT3024-3.....	1900A
C	SEGMENT, cone ring, rear.....	CHB-AT3024-2.....	1900A
D	SEGMENT, backing ring, front.....	CNB-HT3019-2.....	1900A
E	SEGMENT, backing ring, side.....	CNB-HT3019-3.....	1900A
F	SEGMENT, backing ring, rear.....	CNB-HT3019-1.....	1900A
G	STRIP, sealing, long.....	CHB-AT3012-1.....	1900A
H	STRIP, sealing, short.....	CHB-AT3012-2.....	1900A
J	STRIP, sealing, long.....	CHB-AT3012-1.....	1900A
K	SEGMENT, clamp ring, front.....	CHB-AT3013-2.....	1900A
L	SEGMENT, clamp ring, side.....	CHB-AT3013-3.....	1900A
M	SEGMENT, clamp ring, rear.....	CHB-AT3013-1.....	1900A
N	SCREW.....	GM-114422.....	1900A

FIGURE 19-6—TURRET BASE SEALS—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

RA PD 337706

1903B


GROUP 19—TURRET

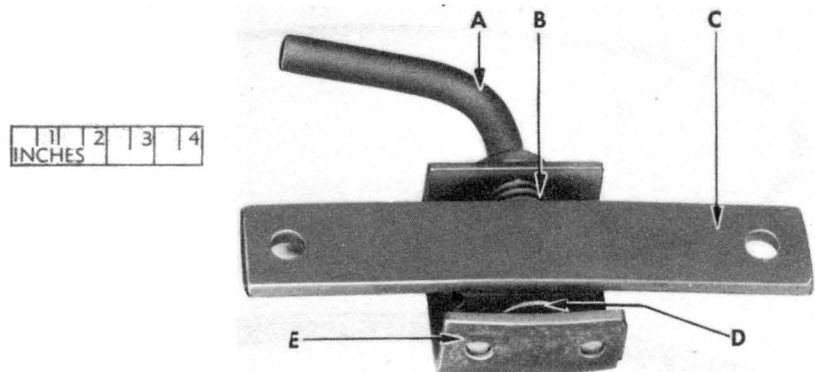

KEY	PART NAME	PART No.	GROUP
A	HANDLE.....	G163-02-09301....	1900-2
B	SPRING.....	G163-02-89821....	1900-2
C	BRACKET.....	G163-01-25837....	1900-2
D	WASHER.....	A293155.....	1900-2
E	SHOE.....	G163-03-84975....	1900-2

RA PD 341174


FIGURE 19-6A—ANTI-AIRCRAFT MACHINE GUN MOUNTING BRAKE ASSEMBLY (MK IV; LVT (A) (4) ONLY)

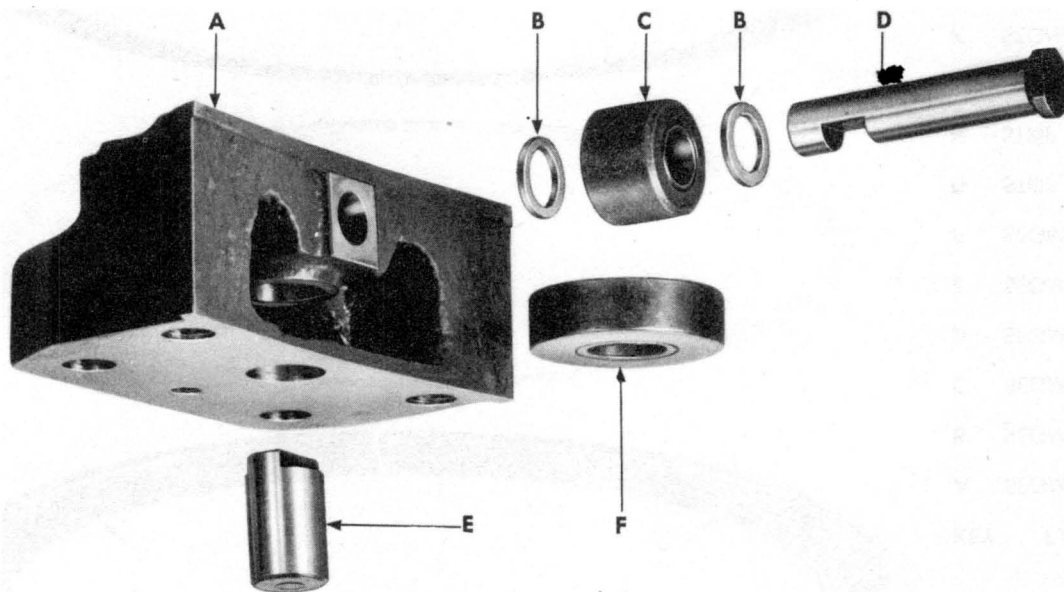

KEY	PART NAME	PART No.	GROUP
A	HOUSING.....	CHB-AT4004....	1900B
B	WASHER.....	CHB-AT1006....	1900B
C	ROLLER.....	A312503.....	1900B
D	PIN.....	CHB-AT1051....	1900B
E	BEARING.....	A143699.....	1900B
F	SHAFT.....	A194142.....	1900B

RA PD 337707

FIGURE 19-7—TURRET RETAINING ROLLER—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

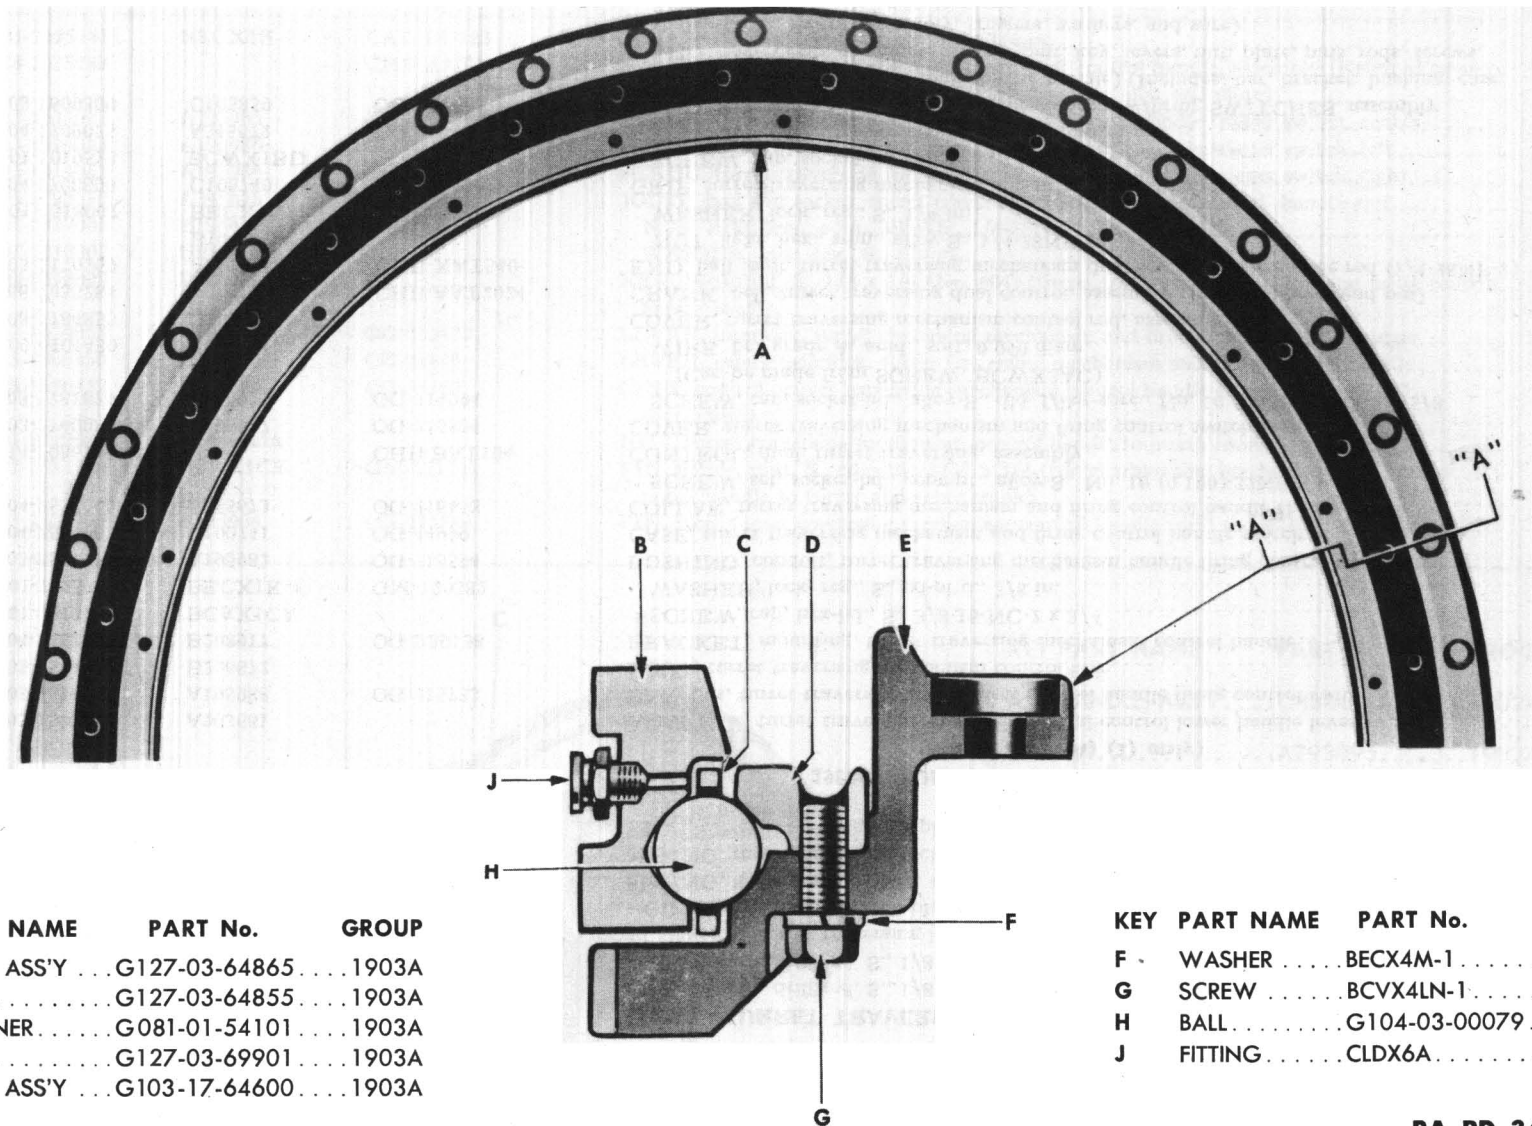

KEY	PART NAME	PART No.	GROUP
A	RING, ASS'Y . . .	G127-03-64865 . . .	1903A
B	RACE	G127-03-64855 . . .	1903A
C	RETAINER	G081-01-54101 . . .	1903A
D	RING	G127-03-69901 . . .	1903A
E	RACE, ASS'Y . . .	G103-17-64600 . . .	1903A

KEY	PART NAME	PART No.	GROUP
F	WASHER	BE CX4M-1	1903A
G	SCREW	BCVX4LN-1	1903A
H	BALL	G104-03-00079 . . .	1903A
J	FITTING	CLDX6A	1903A


RA PD 341183

FIGURE 19-7A—TURRET TRAVERSING BALL RING ASSEMBLY—CROSS SECTIONAL VIEW
(MK IV; LVT (A) (4) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-10A	H001-0829612	BFDX4U		1903B—TURRET TRAVERSING LOCK (Mk IV; LVT (A) (4) only) (Contd)	
19-10A	H001-0829578	BFDX1CG		PIN, straight, drill rod, S., 1/8 x 1 1/2 in. (turret traversing lock bolt).....	1
19-10A	G133-0340671	B195626		PIN, straight, drill rod, S., 1/8 x 1/2 in. (turret traversing lock plunger).....	1
19-10A	G133-0373251	A232055		PLUNGER, turret traversing lock.....	1
19-10A	G133-0389707	A232057		ROD, turret traversing lock plunger.....	1
19-10A	G133-0389709	A232058		SPRING, helical, 0.063 diam. stock, 0.925 O.D., 17 coils (turret traversing lock plunger).....	1
19-10A	G133-0392001	A232056		SPRING, turret traversing lock plunger.....	1
				STOP, turret traversing lock plunger spring.....	1
				1903C—TURRET TRAVERSING CONTROLS (Mk I; LVT (A) (1) only)	
19-12	G103-1501820	A293661		ADAPTER, turret traversing mechanism, dual control lower handle lever to rod.....	1
19-13	G103-1516104	A195988	OG-215733	BAR, bus, turret traversing mechanism control handle firing control switch.....	1
	G103-1524350	B226872		BOOT, turret traversing mechanism control link.....	1
19-11	G104-2551752	B208917	OG-L39158	BRACKET, mounting, turret traversing mechanism control handle.....	1
19-11	H001-1013243	BCAX1CA		SCREW, cap, hex-hd., S., 3/8-16-NC-2 x 3/4.....	3
	H001-7025741	BECX1K-1	GM-120382	WASHER, lock, reg., S., cd-pltd., 3/8 in.....	3
19-13	G103-1527779	A195982	OG-215594	BUSHING, conduit, turret traversing mechanism handle firing control trigger.....	1
19-11	G104-2564003	C100741	OG-44999	CASE, turret traversing mechanism and firing control handle switch.....	1
19-11	G104-2577000	A345673	OG-216458	COLLAR, turret traversing mechanism and firing control handle shaft.....	1
19-11				SCREW, set, socket-hd., cone-pt., alloy-S., No. 10 (0.190)-32NF-2 x 1/4.....	2
	G214-7036146		CHB-BAT104	CONTROL, dual, turret traversing, assembly.....	1
19-13	G103-2140087	A195987	OG-215804	COVER, turret traversing mechanism and firing control switch case.....	1
19-13	G103-1781874	A244976	OG-214994	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., No. 10 (0.190)-32NF-2 x 5/8 (Can be made from SCREW, BCWX3AC).....	4
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
	G103-1784850	D59789		COVER, turret traversing mechanism control rod, assembly.....	
19-12	G168-7035284		CHB-AAT2024	CRANK, bell, turret traversing dual control, assembly (Includes: lever and pin).....	1
	G103-2170269	A311875	CHB-XAT540	END, ball joint, turret traversing mechanism dual control lower handle rod (1/4-28NF-2).....	4
19-11		B19444BA		NUT, light, hex., s-fin., alloy-S., 1/4-28NF-2.....	1
19-11	H001-1518007	BECX1G		WASHER, lock, reg., S., 1/4 in.....	1
19-2,11	G104-2708800	C100740	OG-45000	GRIP, turret traversing mechanism and firing control handle.....	1
19-11	H001-1019523	BCWX1BD		SCREW, cap, socket-hd., alloy-S., 1/4-20NC-3 x 3/4.....	1
19-11	G104-2709025	A345672	OG-216832	GROMMET, turret traversing mechanism control rod.....	1
19-11	G103-1609309	C105859	OG-L45003	HANDLE, control, turret traversing mechanism, w/firing SWITCHES, assembly (Referred to as "lower" of dual control handle) (Includes: bar, bracket, bushing, case, collar, cover, grip, grommet, hinges, joint, key, levers, nut, plate, pins, rods, screws, shaft, spring, switch, assembly, triggers, washers, and wire).....	1
	H001-1013243	BCBX1CA		SCREW, cap, hex-hd., S., 3/8-24NF-2 x 3/4.....	3

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-11 19-3,12	H001-7025741 G168-7035288	BECX1K-1	CAD 187123 CHB-AAT2025	WASHER, lock, reg., S., cd-pltd., 3/8 in. HANDLE, turret traversing mechanism dual control handle, assembly (Referred to as "upper" of dual control handle) (Includes: grip, pin, and plate).....	3 1
19-13	G103-1614012	A195985	OG-215409	HINGE, turret traversing mechanism firing control handle trigger switch, center.....	1
19-13	G103-1614013	A195986	OG-215410	HINGE, turret traversing mechanism firing control handle trigger switch, left.....	1
19-13	G103-1614011	A195984	OG-215408	HINGE, turret traversing mechanism firing control handle trigger switch, right.....	1
19-12	G104-2798770	A345675	OG-216402	JOINT, ball and socket, turret traversing mechanism control rod handle end.....	1
19-12	H001-0717001	B19444BA		NUT, light, hex., s-fin., alloy-S., 1/4-28NF-2.....	5
19-12	H001-1518007	BECX1G		WASHER, lock, reg., S., 1/4 in.	5
19-11	H001-0518009	BGAX5A		KEY, Woodruff, S., 1/8 x 1/4 (No. 404) (turret traversing mechanism and firing control handle shaft).....	1
19-11	G103-1674053	A195977	OG-215422	LEVER, interlock, turret traversing mechanism and firing control handle trigger.....	1
19-11	G103-1806150	B220976	OG-28896	LEVER, safety interlock, turret traversing mechanism and firing control handle.....	1
19-11	G103-1676412	B226771	OG-39162	LINK, control, turret traversing mechanism control handle to pump (See ROD, connecting).....	1
19-11	H001-0717001 H001-0811039	B19444BA BFAX1CE	GM-121222	NUT, turret traversing mechanism control handle to pump connecting rod.....	4
19-11	G103-2338701	A195964	OG-215744	PIN, cotter, split, S., cd-pltd., 3/32 x 3/4 (turret traversing mechanism dual control upper handle to turret and relay crank).....	2
				PIN, stop, turret traversing mechanism control handle (drill rod, 0.1875 diam. x 17/32)...	1

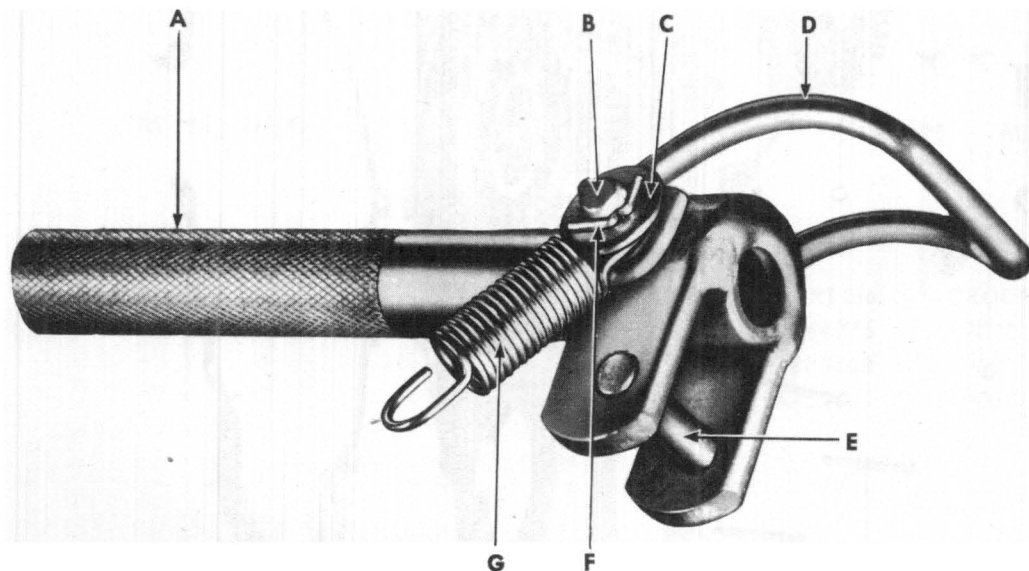


KEY PART NAME	PART No.	GROUP
A HANDLE, ASS'Y....	CHB-AAT1054 ..	1902A
B PIN.....	A293095.....	1902A
C WASHER.....	BEEX1G-1	1902A
D CLIP.....	A266108.....	1902A
E PIN.....	A266244.....	1902A
F PIN.....	BFAX1BC-1	1902A
G SPRING.....	A293353.....	1902A

FIGURE 19-8—TURRET DOOR LATCH ASSEMBLY (MK I; LVT (A) (1) ONLY)

RA PD 337708

1903C

GROUP 19—TURRET

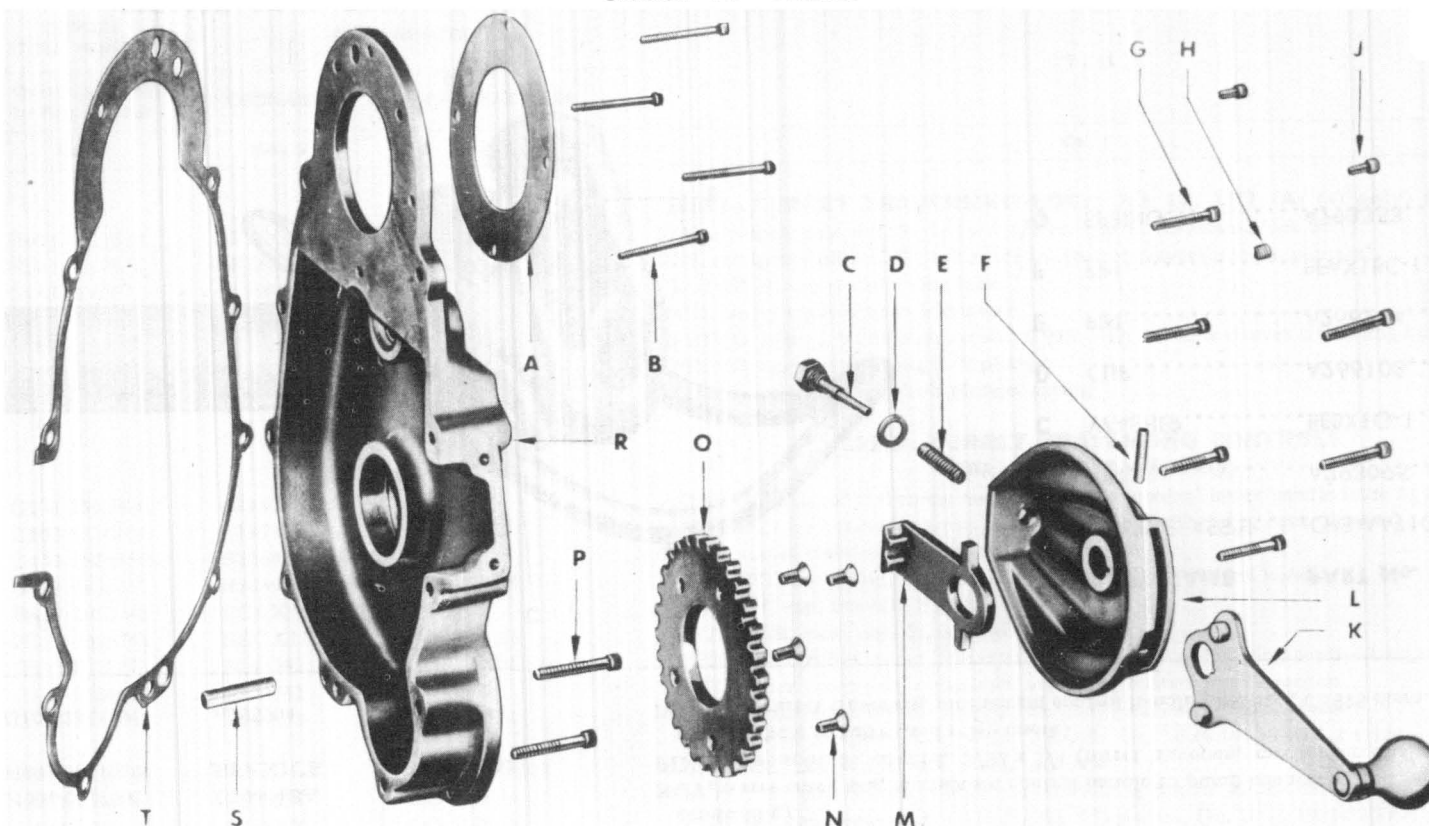

KEY PART NAME	PART No.	GROUP	KEY PART NAME	PART No.	GROUP	KEY PART NAME	PART No.	GROUP
A GASKET.....	A7002660.....	1903D	G SCREW.....	1903D		N SCREW.....	BCKX2CF.....	1903
B SCREW.....	A231049.....	1903D	H PLUG.....	A164342A.....	1903D	O DISK.....	B140601.....	1903
C PLUNGER.....	A142643.....	1903	J SCREW.....	BCWX1BA.....	1903D	P SCREW.....		1903D
D WASHER.....	BECX1M-1.....	1903	K LEVER, ASS'Y....	C60345.....	1903	R COVER.....	OG-54143.....	1903D
E SPRING.....	A142001.....	1903	L GUARD.....	C60344.....	1903	S PIN.....	BFDX2CG.....	1903D
F PIN.....	A266412.....	1903	M INDEX, ASS'Y....	B141840.....	1903	T GASKET.....	B7068149.....	1903D

FIGURE 19-9—TURRET TRAVERSING GEAR BOX AND HAND OPERATING MECHANISM—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

RA PD 341049

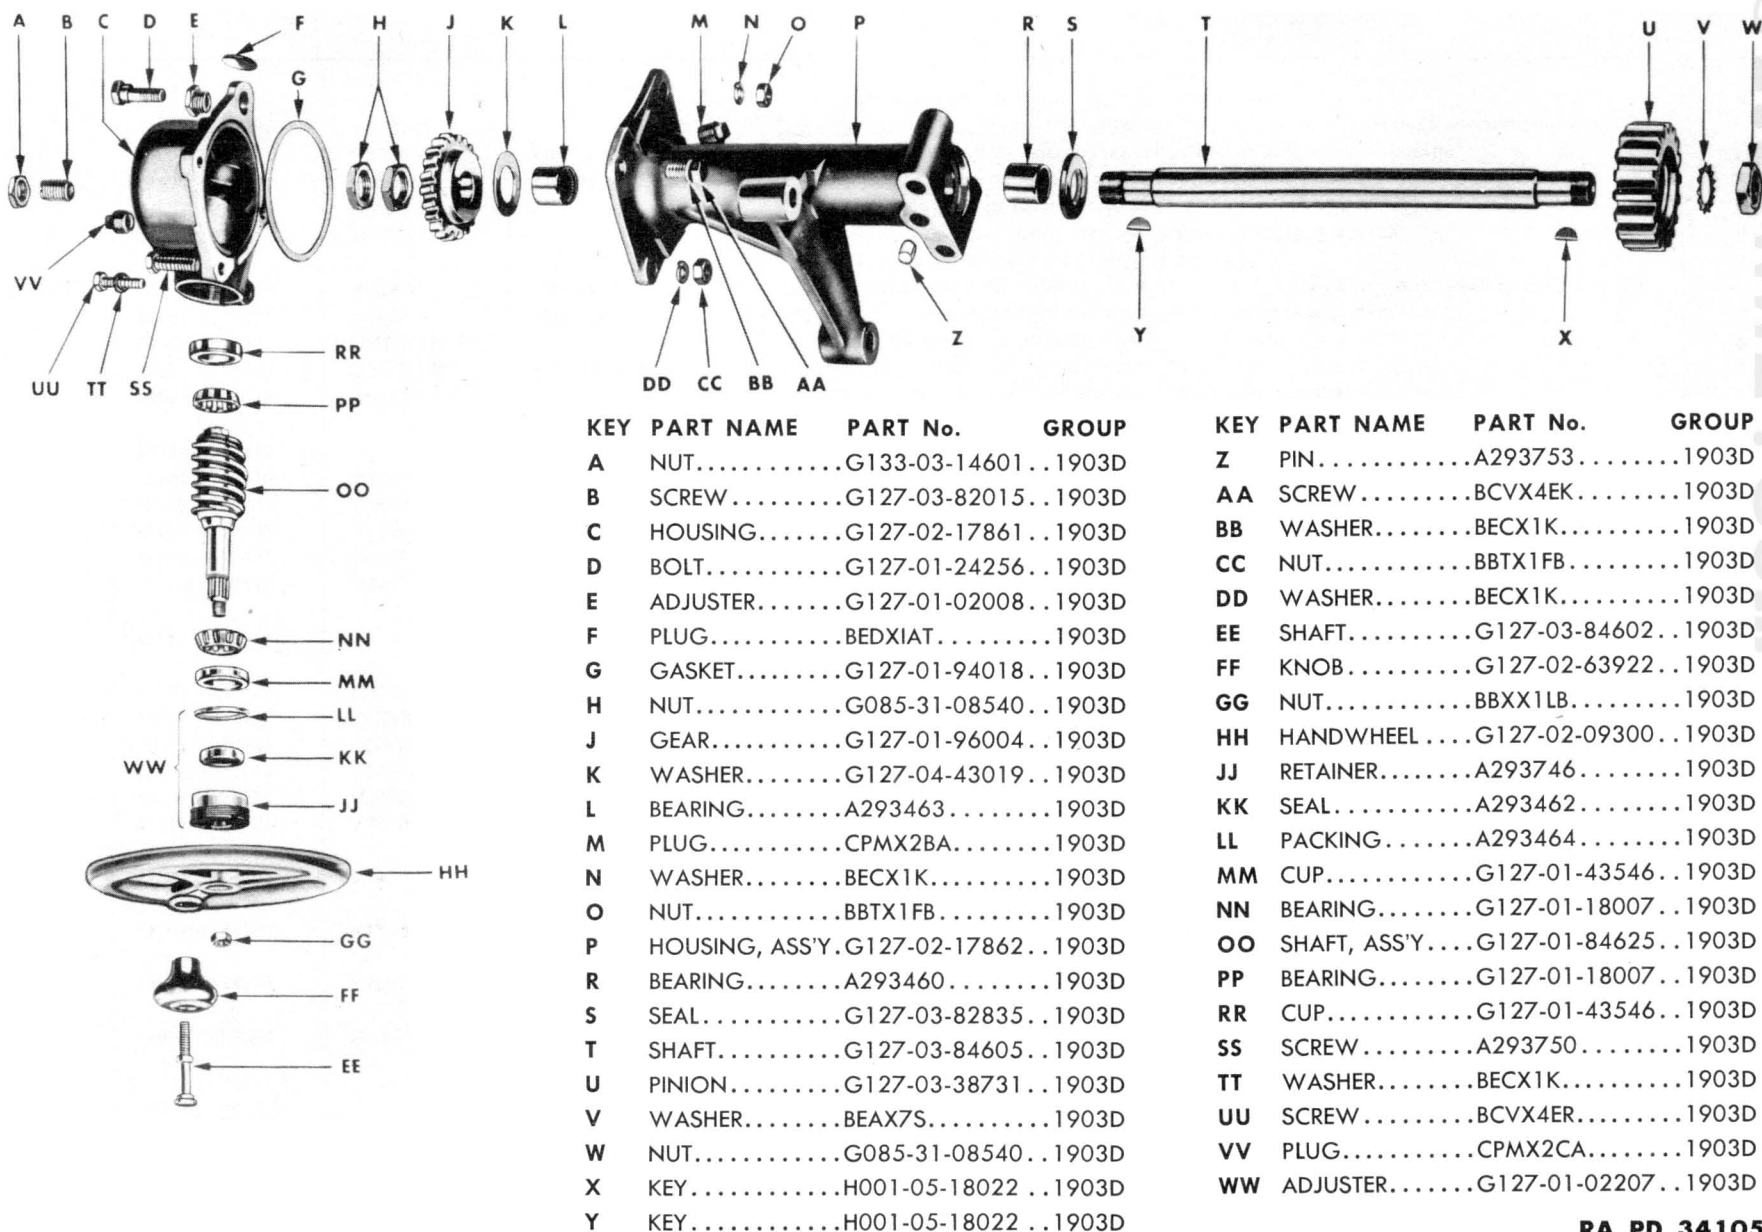



FIGURE 19-9A—TURRET TRAVERSING GEAR BOX ASSEMBLY—EXPLODED VIEW
(MK IV; LVT (A) (4) ONLY)

RA PD 341050

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903C—TURRET TRAVERSING CONTROLS (Mk I; LVT (A) (1) only (Contd))	
	H001-0823004	BFFX1D		PIN, turret traversing mechanism dual control handle and crank (rod end, S., 3/8 in. diam.)	2
	G103-1738589	A195969	OG-215798	PIN, turret traversing mechanism firing control handle switch (part of control HANDLE, C105859)	2
19-11	G103-2338702	A195965	OG-215728	PIN, turret traversing mechanism firing control trigger safety interlock lever (straight, cold-fin., S., 0.2500 x 15/16)	1
19-11,13	G103-2338703	A195966	OG-215727	PIN, turret traversing mechanism firing control trigger (straight, cold-fin., S., 0.1875) (trigger to handle grip)	2
	G214-5293657	A293657		PLATE, body, turret traversing mechanism dual control, upper handle	1
	G104-2982794	A345669	OG-216882	PLATE, number, turret traversing mechanism and firing control	1
	G168-5293015	A293015		PLATE, turret traversing control link boot	1
	H001-4039541	BBWX1CA-1		NUT, safety, S., cd-pltd., 3/8-24NF-3	2
	H001-5027111	BCBX1CA-1	CHB-XAT505	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4	2
19-11,22	G103-1676412	B226771	OG-39162	ROD, connecting, turret traversing mechanism control handle to pump (Also known as link)	1
19-11	G214-7036711		OG-L73836	ROD, connecting, turret traversing mechanism control handle to pump, assembly (Includes: grommet, nut, and rod)	1
19-12	G103-1773248	A293658		ROD, connecting, turret traversing mechanism dual control lower handle to bell crank	1
19-2,3,12	G103-1773247	B229962		ROD, connecting, turret traversing mechanism dual control upper handle to bell crank	1
19-11	G103-1773302	A195989	OG-215797	ROD, push, turret traversing mechanism firing control trigger, long	1
19-11	G103-1773303	A195990	OG-215799	ROD, push, turret traversing mechanism firing control trigger, short	2
19-11	G104-3072016	A345676	OG-216401	SHAFT, turret traversing mechanism and firing control handle	1
	G214-7036147		CHB-AAT4007	SHIELD, turret traversing mechanism control rod to pump, assembly (Includes: control link, clips, and shield)	1
	H001-5027111	BCBX1CA-1	CHB-XAT505	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4	2
	H001-7027541	BECX1K-1	GM-120382	WASHER, lock, reg., S., cd-pltd., 3/8 in.	2
	H001-7043741	BEBX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.	2
	G103-1789767	A195978	OG-215424	SPRING, turret traversing mechanism control handle trigger	3
19-10,13,27	G103-2393784	A235660	OG-217420	SWITCH, turret traversing mechanism control handle gun firing, assembly (Army Air Corps push-button type A1) (MRC-YZ-RQ41)	3
	H001-1030521	BCOX1EB		SCREW, machine, rd-hd., S., No. 6 (0.138)-40NF-2 x 3/16	6
	H001-1519004	BEAX1D		WASHER, lock, internal teeth, reg., S., No. 6 (0.138)	6
19-10,11,27,	G103-1674051	B220977	OG-38910	TRIGGER, gun firing, offset, turret traversing mechanism control handle	1
19-2,11	G103-1674057	B220978	OG-38911	TRIGGER, gun firing, turret traversing mechanism control handle	1
	G163-0443069	A293155		WASHER, plain, S., cd-pltd., SAE std., 3/8 in. (turret traversing mechanism dual control upper handle to turret and relay crank)	4

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-13	G103-2443014	A235506	CHB-XAT539 OG-217011	WASHER, spring, turret traversing dual control.....	2
				WASHER, turret traversing mechanism control handle firing switch bushing.....	1
19-14	G103-1516202 H001-1019521	BCWX1BB	OG-215660	1903D—GEAR BOX AND HYDRAULIC MOTOR (Mk I; LVT (A) (1) only)	1
19-14,15	G103-2124069 H001-1019520		OG-54142	BASE, turret traversing mechanism gear box shifter lever shaft.....	4
	G103-1596036	BCWX1BA	OG-L54145	SCREW, cap, socket-hd., alloy-S., 1/4-20NC-3 x 1/2.....	1
19-1,4	G103-1596018	D60069	CHB-XAT103	BODY, turret traversing mechanism gear box.....	4
		D59769	CHB-XAT536	SCREW, cap, socket-hd., alloy-S., 1/4-20NC-3 x 3/8.....	1
	H001-1519019	BEAX2D-1	GM-138557	BOX, gear, hydraulic, turret traversing mechanism, assembly.....	1
19-16,17,19	G103-1531710	B220983	OG-38742	BOX, gear, turret traversing mechanism, w/hydraulic MOTOR, assembly (OG-73999)...	3
19-16,19	G103-1781880	A195975	OG-215182	SCREW, cap, socket-hd., alloy-S., 5/8-18NF-3 x 1 3/4.....	3
				WASHER, lock, internal teeth reg., S., cd-pltd., 5/8 in.....	1
19-19	H009-0101430	ACNX3		CASE, turret traversing mechanism hydraulic motor.....	4
				SCREW, socket-hd., alloy-S., s-fin., dld.f/lkg-wire , No. 10 (0.190) 32NF-2 x 1 1/2 (Can be made from SCREW, BCWX3AH).....	as req.
				WIRE, br., grade A, anld., soft, 0.040 diam.....	

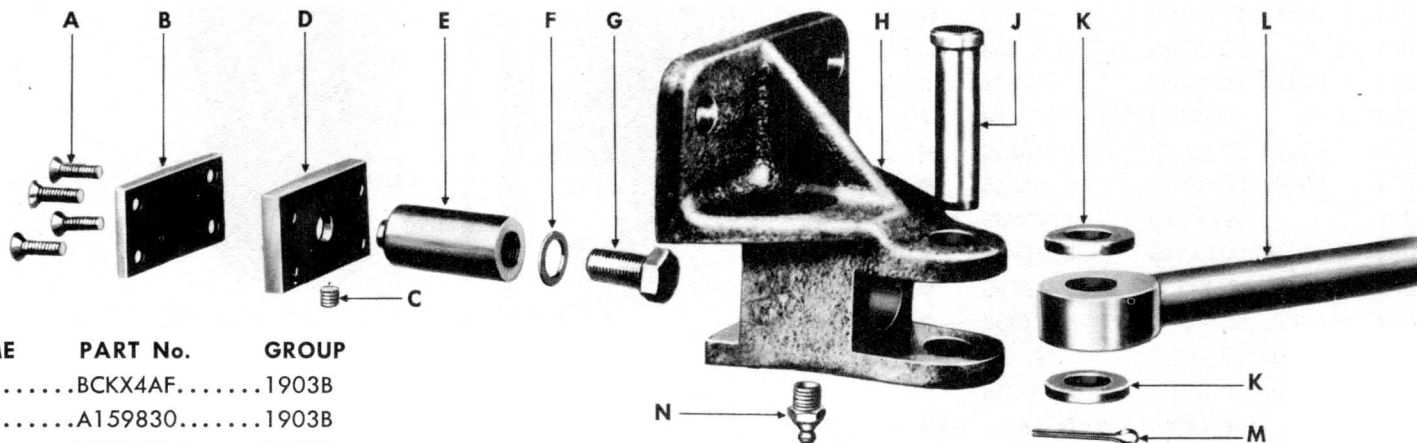


KEY PART NAME	PART No.	GROUP
A SCREW.....	BCKX4AF.....	1903B
B PAD.....	A159830.....	1903B
C SCREW.....	Q83WC-1.....	1903B
D BLOCK.....	CHB-AT1031....	1903B
E SHAFT.....	CHB-AT1030....	1903B
F SHIM.....	CHB-AT1065....	1903B
G SCREW.....	BCBXICA-1	1903B

KEY PART NAME	PART No.	GROUP
H BRACKET (NOT SERVICED)		
J PIN.....	CHB-AT1044....	1903B
K WASHER.....	CHB-AT1064....	1903C

KEY PART NAME	PART No.	GROUP
L CAM.....	CHB-XAT517....	1903B
M PIN.....	BFAX1DG-1.....	1903B
N FITTING.....	CLDX3A.....	1903B

RA PD 341175


**FIGURE 19-10—TURRET TRAVERSING LOCK ASSEMBLY—EXPLODED VIEW
(MK I; LVT (A) (1) ONLY)**

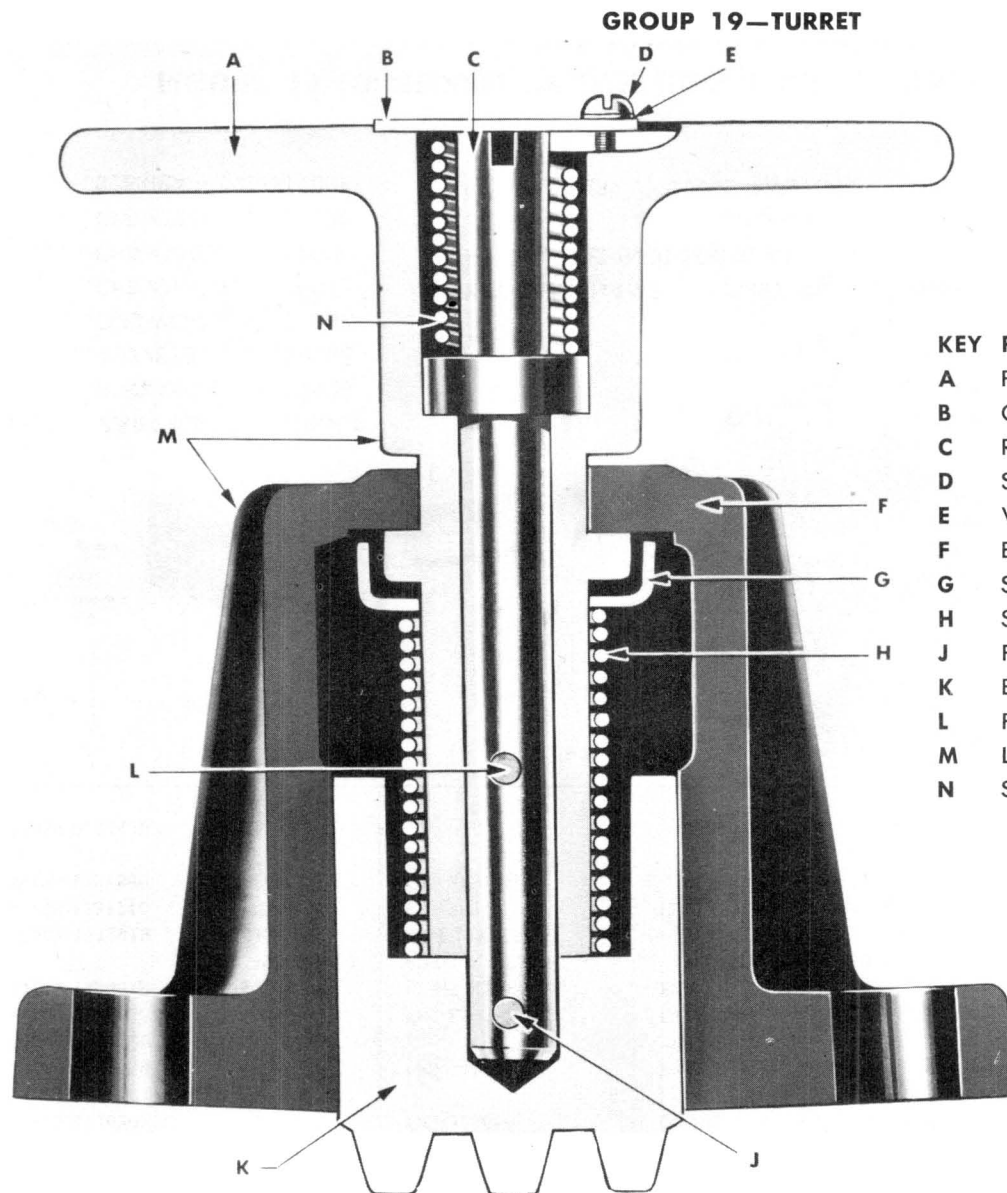

KEY	PART NAME	PART No.	GROUP
A	PLUNGER.....	G133-03-40671....	1903B
B	COVER.....	G133-01-40003....	1903B
C	ROD.....	G133-03-73251....	1903B
D	SCREW.....	BCOX1DB.....	1903B
E	WASHER.....	BEAX1D.....	1903B
F	BRACKET.....	C114258.....	1903B
G	STOP.....	G133-03-92001....	1903B
H	SPRING.....	G133-03-89707....	1903B
J	PIN.....	BFDX4U.....	1903B
K	BOLT.....	G134-01-24155....	1903B
L	PIN.....	BFDX1CG.....	1903B
M	LOCK.....	G103-16-79900....	1903B
N	SPRING.....	G133-03-89709....	1903B

RA PD 341051

**FIGURE 19-10A—TURRET TRAVERSING LOCK ASSEMBLY—CROSS SECTIONAL VIEW
(MK IV; LVT (A) (4) ONLY)**

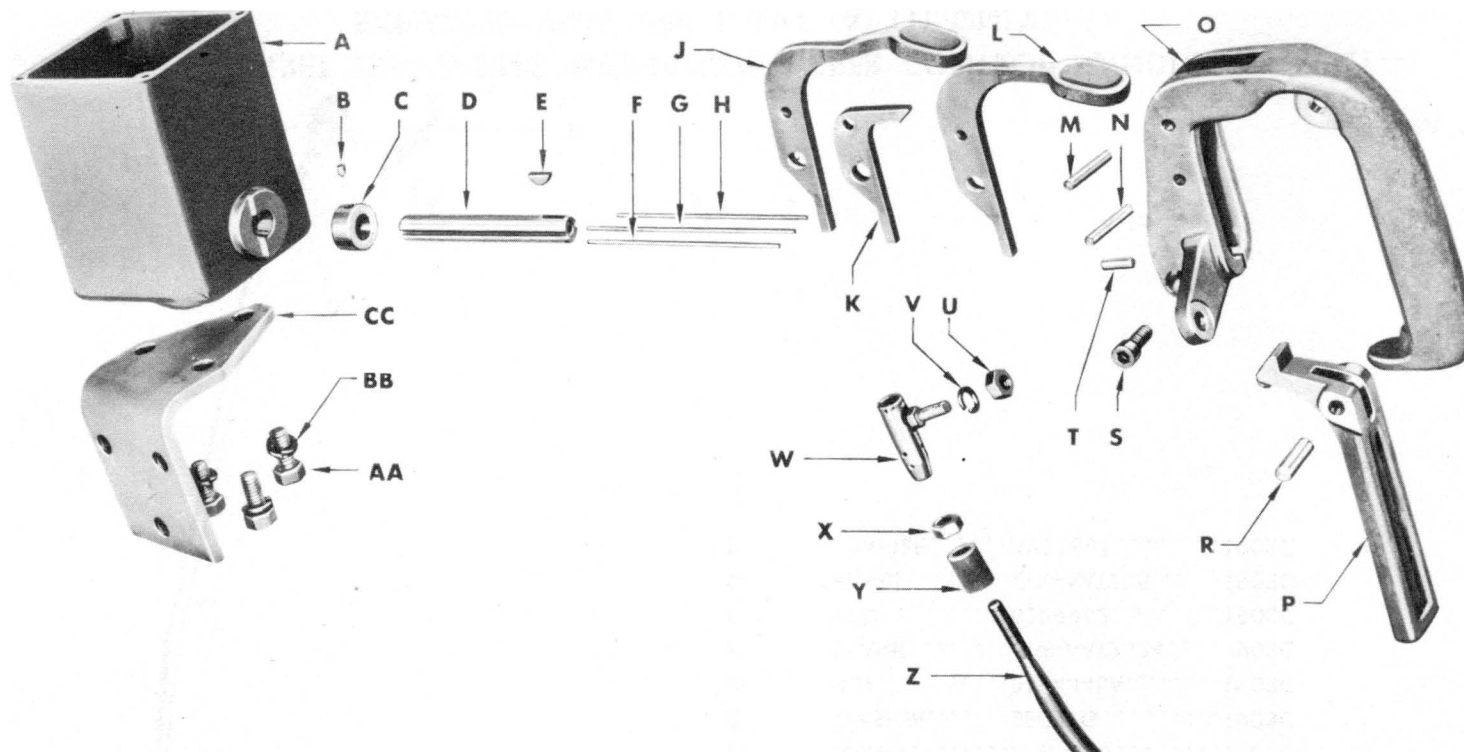

KEY PART NAME	PART No.	GROUP
A CASE.....	OG-44999.....	1903C
B SCREW.....		1903C
C COLLAR.....	OG-216458.....	1903C
D SHAFT.....	A345676.....	1903C
E KEY.....	BGAX5A.....	1903C
F ROD.....	A194990.....	1903C
G ROD.....	A195989.....	1903C
H ROD.....	A194990.....	1903C
J TRIGGER.....	B220978.....	1903C


KEY PART NAME	PART No.	GROUP
K LEVER.....	A195977.....	1903C
L TRIGGER.....	B220977.....	1903C
M PIN.....	A195966.....	1903C
N PIN.....	A195966.....	1903C
O GRIP.....	C100740.....	1903C
P LEVER.....	B220976.....	1903C
R PIN.....	A195965.....	1903C
S SCREW.....	BCWX1BD.....	1903C
T PIN.....	A195964.....	1903C

KEY PART NAME	PART No.	GROUP
U NUT.....	B19444BA.....	1903C
V WASHER.....	BECX1G.....	1903C
W JOINT.....	A345675.....	1903C
X NUT.....	B19444BA.....	1903C
Y GROMMET.....	A345672.....	1903C
Z ROD.....	B226771.....	1903C
AA SCREW.....	BCAX1CA.....	1903C
BB WASHER.....	A262191.....	1903C
CC BRACKET.....	B208917.....	1903C

**FIGURE 19-11—TURRET TRAVERSING MECHANISM AND FIRING CONTROL HANDLE—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)**


RA PD 341052

GROUP 19—TURRET

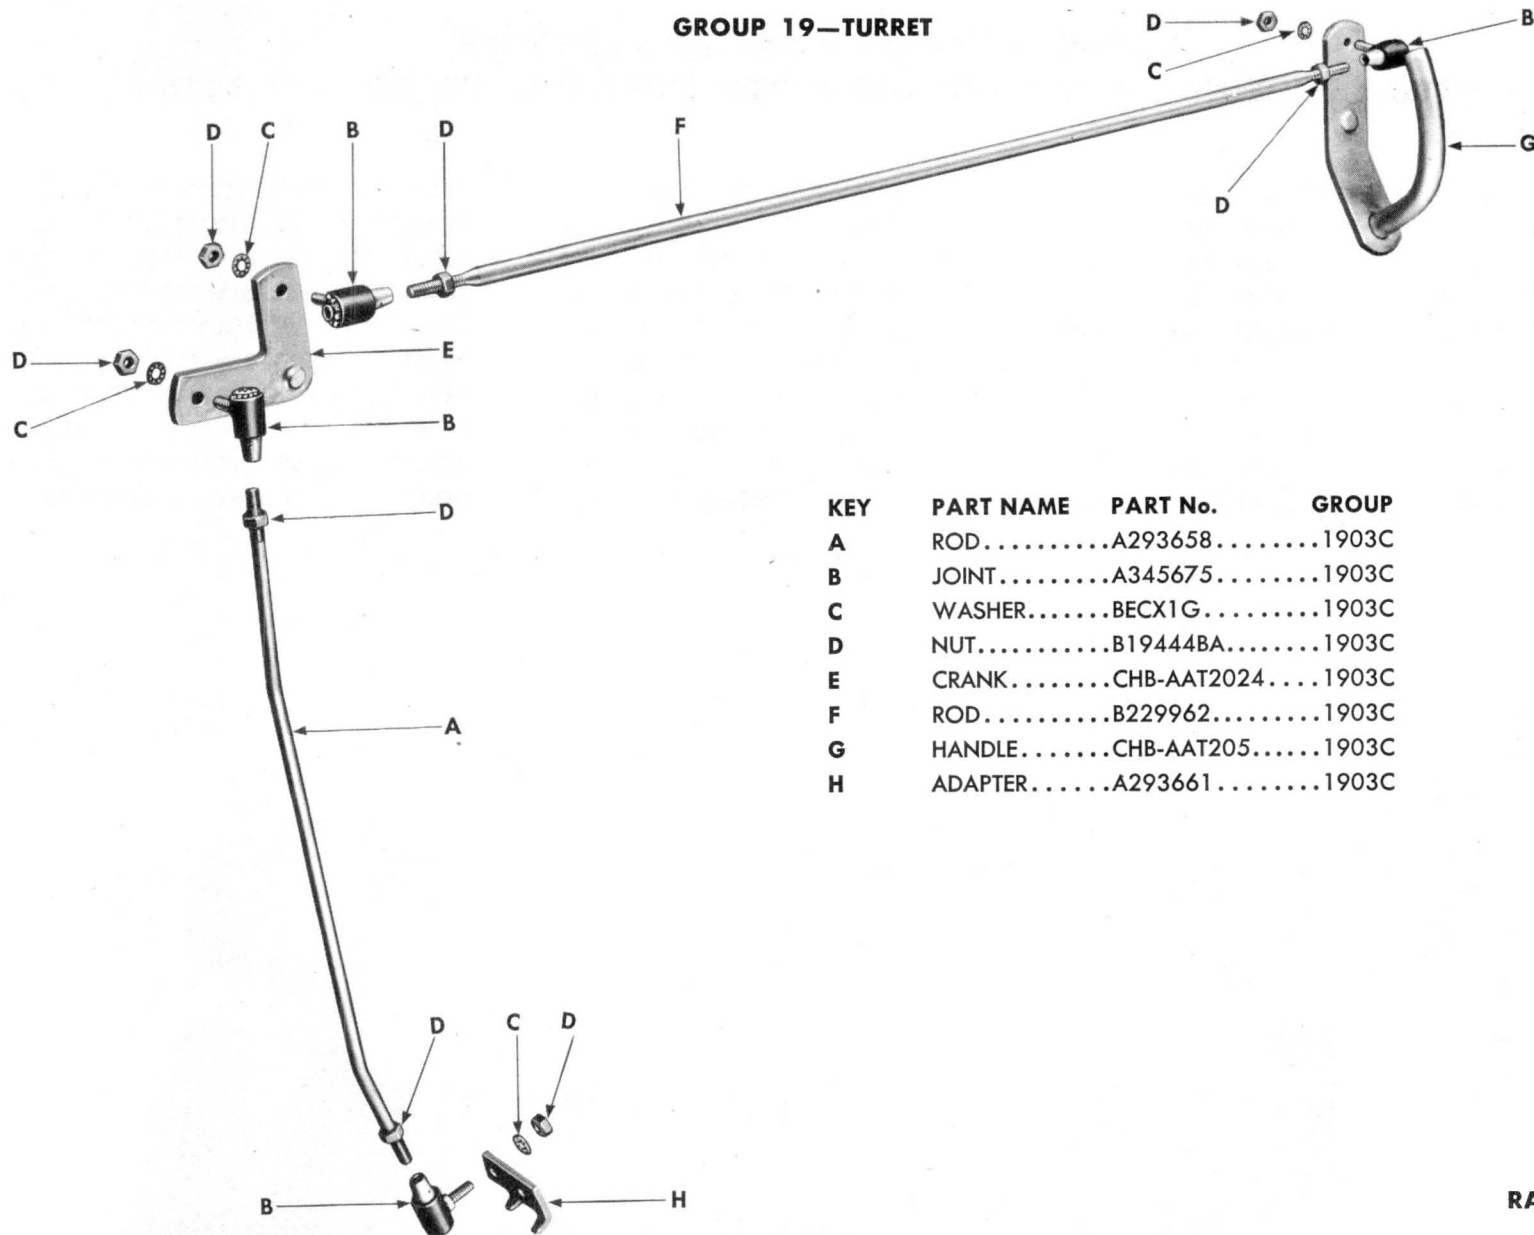

RA PD 341053

FIGURE 19-12—TURRET TRAVERSING MECHANISM UPPER CONTROL HANDLE ASSEMBLY—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

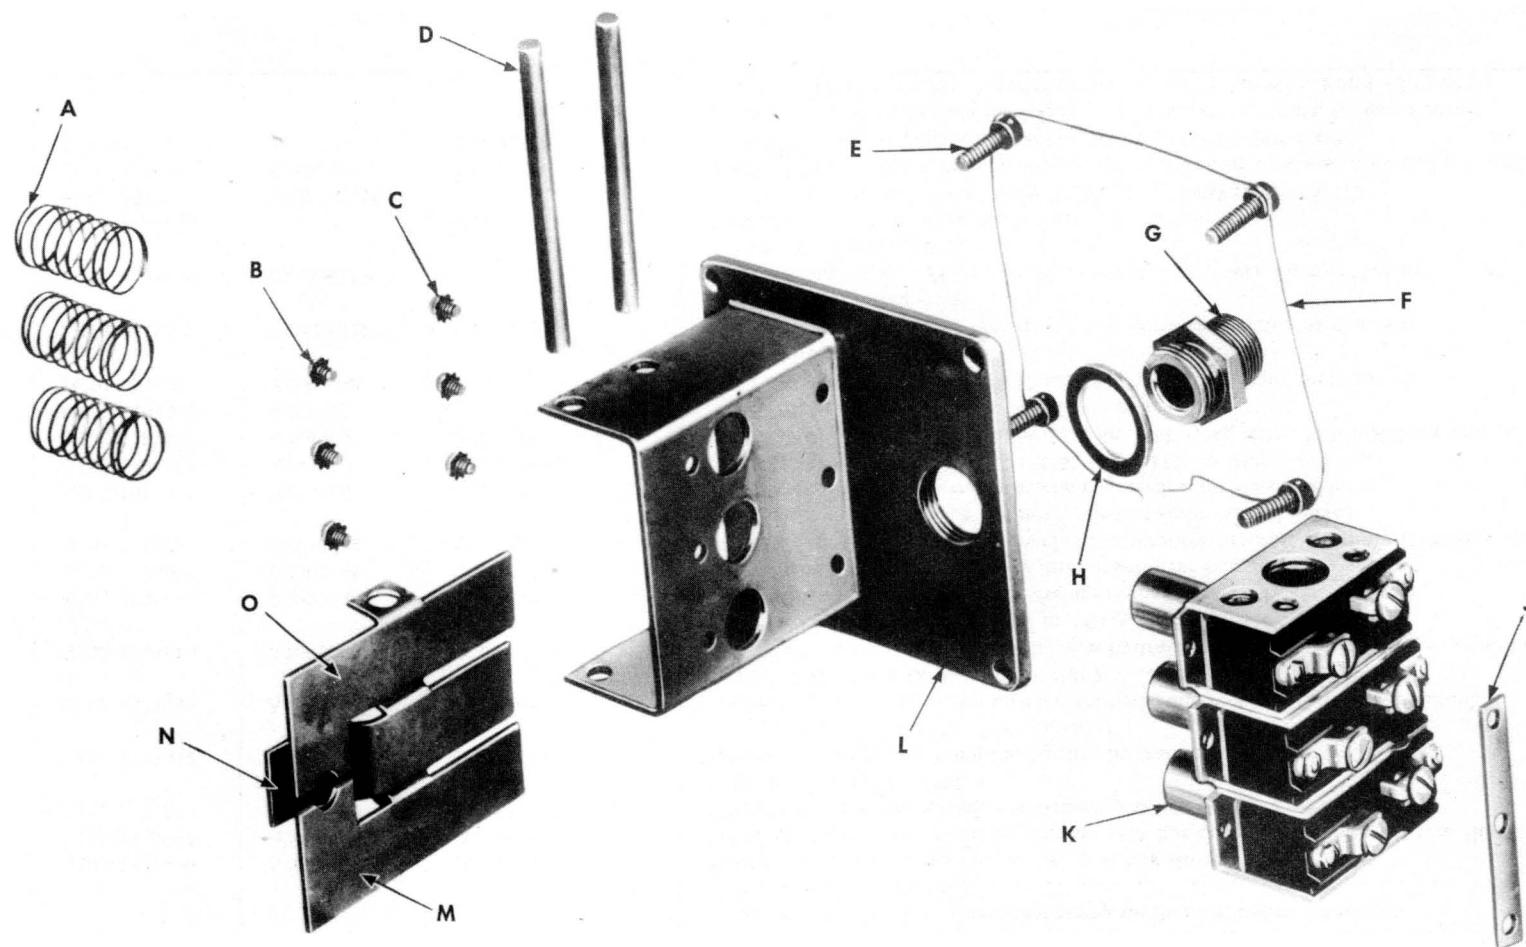

KEY PART NAME	PART No.	GROUP	KEY PART NAME	PART No.	GROUP
A SPRING.....	A195978.....	1903C	F WIRE.....	ACNX3.....	1903C
B WASHER.....	BEAX1D.....	1903C	G BUSHING.....	A195982.....	1903C
C SCREW.....	BCOX1EB.....	1903C	H WASHER.....	A235506.....	1903C
D PIN.....	A195966.....	1903C	J BAR.....	A195988.....	1903C
E SCREW.....	244976.....	1903C	K SWITCH, ASS'Y....	A235660.....	1903C


KEY PART NAME	PART No.	GROUP
L COVER.....	A195987.....	1903C
M HINGE.....	A195984.....	1903C
N HINGE.....	A195985.....	1903C
O HINGE.....	A195986.....	1903C

RA PD 341054

**FIGURE 19-13—TURRET TRAVERSING MECHANISM FIRING CONTROL SWITCH, AND COVER—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)**

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903D—GEAR BOX AND HYDRAULIC MOTOR (Mk I; LVT (A) (1) only) (Contd)	
19-4,19	G103-2140084		OG-54143	COVER, hand operated turret traversing mechanism gear box	1
				SCREW, cap, socket-hd., alloy-S., 1/4-20NC-3 x 1 5/8 (Make from	
				SCREW, BCWX1BK)	8
19-16,19	G103-1540133	A195959	OG-214150	COVER, turret traversing mechanism hydraulic motor head	1
19-19	H006-0102421		WH-8355X6	ELBOW, tube, heavy duty, short, 45 deg., 3/8 in., 1/4 in. male pipe end (with nut and sleeve) (port No. 3 in turret traversing mechanism hydraulic motor, and port No. 14 oil pot)	2
19-14	G103-1585400	A7002653	OG-214383	FORK, turret traversing mechanism gear box shifter	1
19-9	G103-1593997	B7068149	OG-38395	GASKET, turret traversing mechanism gear box cover (vellumoid, 1/32 in. thk.)	1
19-14	G103-1593662	A7002654	OG-214384	GASKET, turret traversing mechanism gear box shifter lever base (vellumoid, 1/32 in. thk.)	1
19-16,19	G103-1593999	A231047	OG-214151	GASKET, turret traversing mechanism hydraulic motor case (vellumoid, 4 5/32 I.D., 4 7/8 O.D., 1/32 in. thk.)	1
19-16,20	G103-1593998	A195960	OG-214149	GASKET, turret traversing mechanism hydraulic motor end head (vellumoid, 2 3/8 I.D., 3 3/8 O.D., 1/32 in. thk.)	1
19-9	G103-1594010	A7002660	OG-215679	GASKET, turret traversing mechanism hydraulic motor mounting flange (vellumoid, 2 25/32 I.D., 4 7/8 O.D., 1/32 in. thk.)	1
19-15	G103-1596030	B7002696	OG-38394	GEAR, intermediate, turret traversing mechanism gear box	1
19-14,15	G103-2196000	B7002695	OG-38393	GEAR, sliding, turret traversing mechanism gear box	1
19-16,20	G103-2211424	B7002701	OG-L39339	HEAD, end, turret traversing mechanism hydraulic motor, assembly (Includes: head, pins, pistons, plate, plug, screws, springs, tumblers, and valve)	1
19-16,20	G103-1611411	B220985	OG-38746	HEAD, end, turret traversing mechanism hydraulic motor, stripped	1
19-16,20	G103-1594004	A244989	OG-214602	GASKET, cop., 17/64 I.D., 1 3/32 O.D., 1/32 in. thk.	4
19-16,20	G103-1781879	A244990	OG-215181	SCREW, cap, socket-hd., alloy-S., s-fin., dld. f/lkg-wire., 1/4-20NC-2 x 3/4	4
19-20	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.	as req.
19-14,15	H001-0518011	BGAX6A		KEY, Woodruff, S., 1/8 x 5/8 (No. 405) (turret traversing mechanism gear box gear shaft)	4
19-15	H001-0519625	BGHX1NT	OG-214378	KEY, square, type A, S., 1/4 sq. x 2 3/4 (turret traversing mechanism gear box sliding gear)	1
19-16,18	H001-0518021	BGAX11A		KEY, Woodruff, S., 9/16 x 3/4 (No. 606) (turret traversing mechanism hydraulic motor shaft)	1
19-14	G103-1674056		OG-215656	LEVER, turret traversing mechanism gear box shifter	1
19-14	H001-1019751	BCWX3AB		SCREW, cap, socket-hd., alloy-S., No. 10 (0.190)-32NF-3 x 1/2	1
19-4	G103-1695705	D60068	OG-L73821	MOTOR, hydraulic, turret traversing mechanism gear box, assembly (Oilgear type S-211)	1
	G103-1781877	A231049	OG-215000	SCREW, cap, socket-hd., alloy-S., No. 10 (0.190)-32NF-2 x 2	4
19-20,27				NIPPLE, turret traversing mechanism hydraulic motor (pipe, S., extra strong, 1/4 x 1 1/16) (port No. 2 hydraulic motor, and ports Nos. 3 and 4 in pump)	3

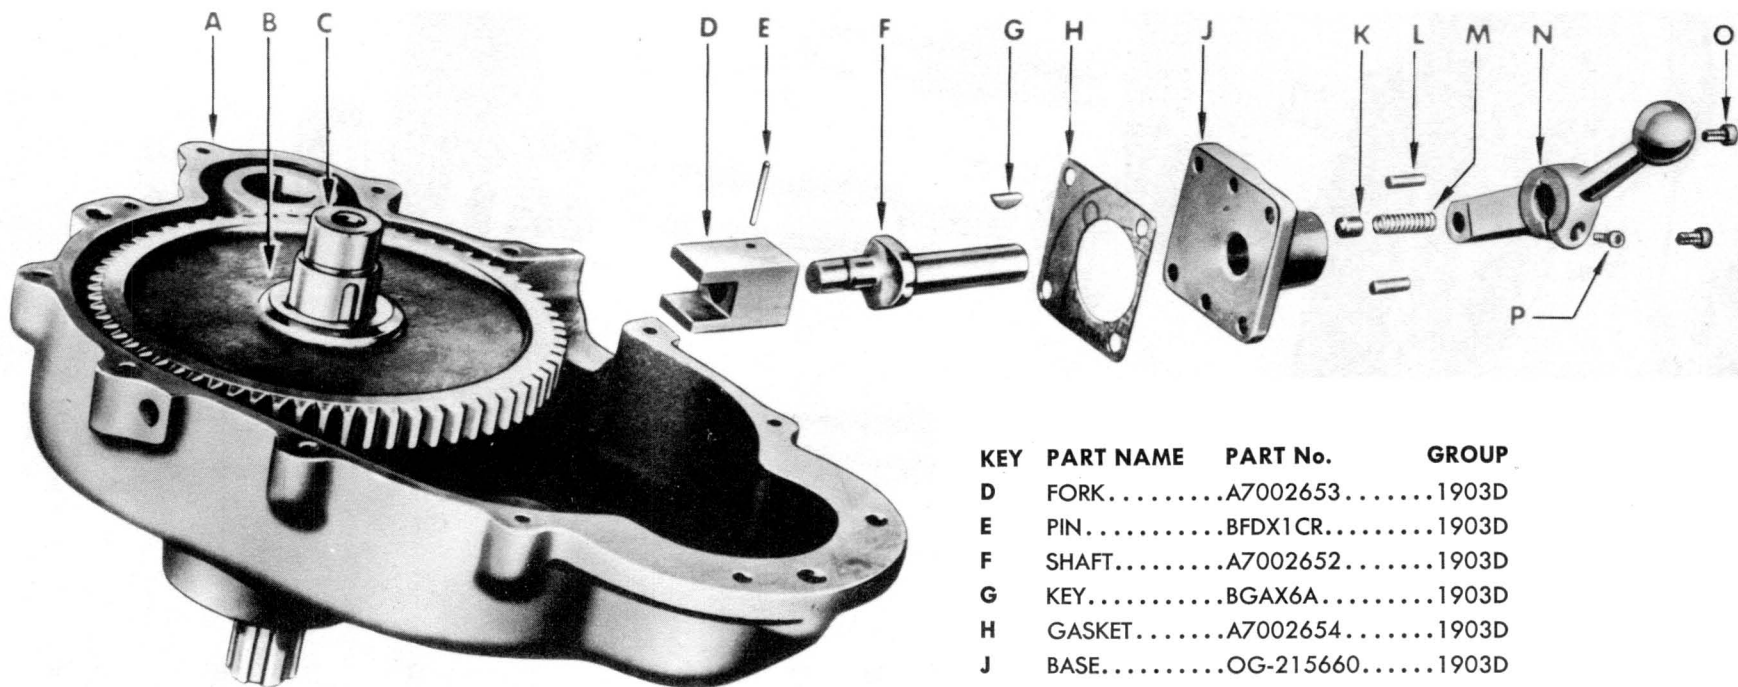

KEY	PART NAME	PART No.	GROUP
A	BODY.....	OG-54142.....	1903D
B	GEAR.....	B7002695.....	1903D
C	SHAFT.....	B7002693.....	1903D

KEY	PART NAME	PART No.	GROUP
D	FORK.....	A7002653.....	1903D
E	PIN.....	BFDX1CR.....	1903D
F	SHAFT.....	A7002652.....	1903D
G	KEY.....	BGAX6A.....	1903D
H	GASKET.....	A7002654.....	1903D
J	BASE.....	OG-215660.....	1903D
K	PLUNGER.....	A7002658.....	1903D
L	PIN.....	BFDX2AA.....	1903D
M	SPRING.....	A7002659.....	1903D
N	LEVER.....	OG-215656.....	1903D
O	SCREW.....	BCWX1BB.....	1903D
P	SCREW.....	BCWX3AB.....	1903D

FIGURE 19-14—TURRET TRAVERSING MECHANISM GEAR BOX BODY, SHIFTER FORK AND LEVER—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)


RA PD 341055

GROUP 19—TURRET

KEY	PART NAME	PART No.	GROUP
A	SCREW.....	BCWX4BK-1.....	1903D
B	PIN.....	A266456.....	1900D
C	BEARING.....	CAAXIAL.....	1903A
D	GEAR.....	B7002695.....	1903D
E	BUSHING.....	NAAX1EB.....	1903
F	KEY.....	BGHX1NT.....	1903D
G	KEY.....	BGAX6A.....	1903D
H	SHAFT.....	B7068150.....	1903


KEY	PART NAME	PART No.	GROUP
J	KEY.....	BGAX6A.....	1903D
K	BEARING.....	CAAX1AM.....	1903A
L	PINION.....	A7002655.....	1903
M	BUSHING.....	NAAX1EB.....	1903
N	BODY.....	OG-54142.....	1903D
O	PIN.....	BFCX1FG.....	1903D
P	PINION.....	B157817.....	1903D
R	SCREW.....	BCWX1BA.....	1903D

KEY	PART NAME	PART No.	GROUP
S	PIN.....	BFDX2CG.....	1903D
T	PLUG.....	A164342A.....	1903D
U	BEARING.....	TR-B-1012X.....	1903A
V	GEAR.....	B7002696.....	1903D
W	KEY.....	BGAX6A.....	1903D
X	SHAFT.....	A7002651.....	1903D
Y	BEARING.....	TR-B-1012X.....	1903A
Z	SHAFT.....	B7002693.....	1903D

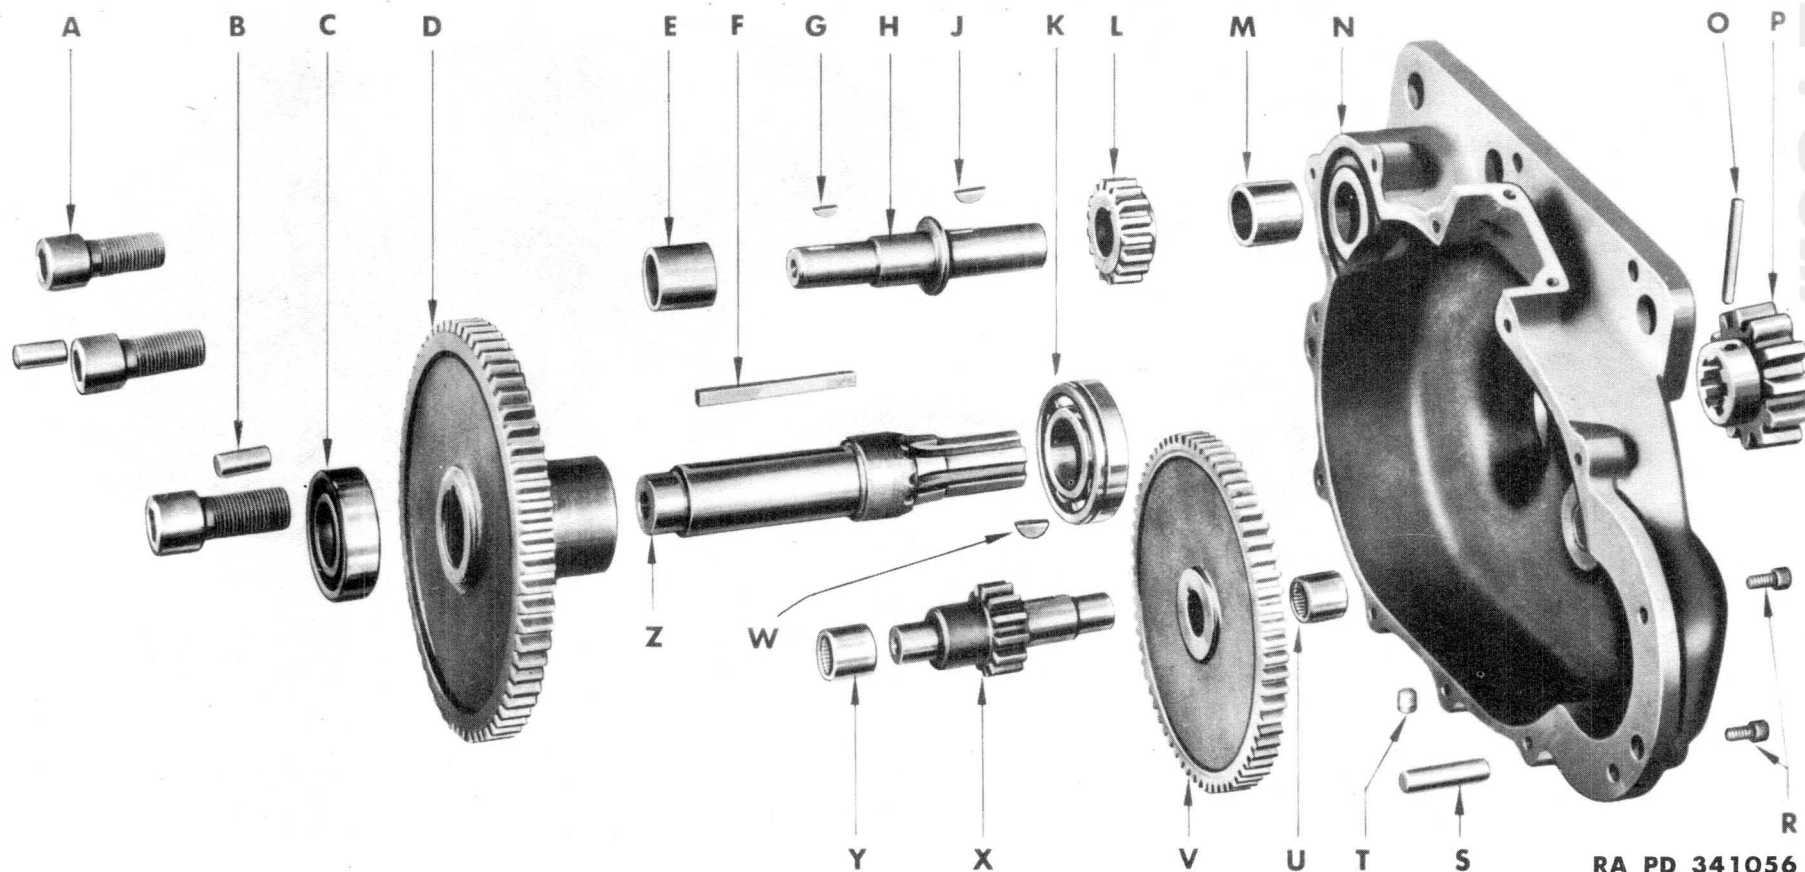

RA PD 341056

FIGURE 19-15—TURRET TRAVERSING MECHANISM GEAR BOX—EXPLODED VIEW
(MK I; LVT (A) (1) ONLY)

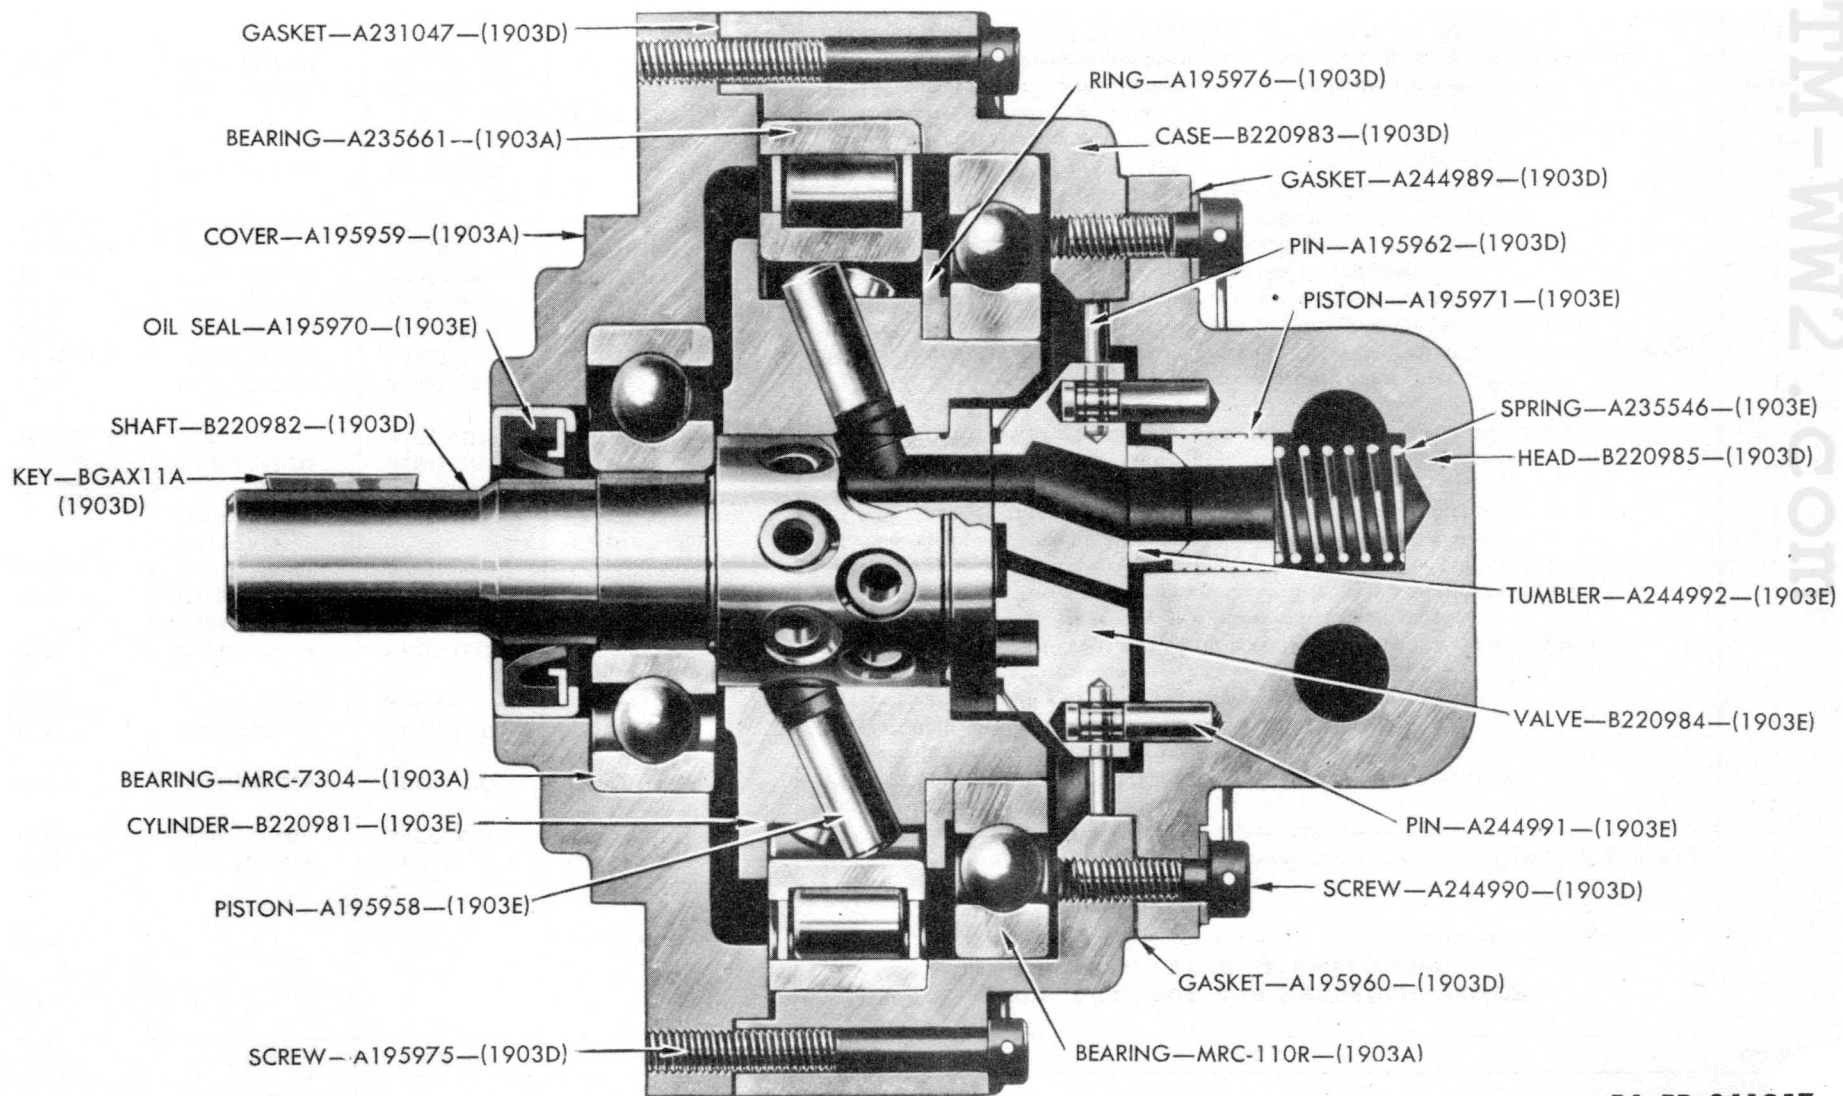


**FIGURE 19-16—TURRET TRAVERSING MECHANISM HYDRAULIC MOTOR—
CROSS SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)**

RA PD 341057

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903D—GEAR BOX AND HYDRAULIC MOTOR (Mk I; LVT (A) (1) only) (Contd)	
19-20		A7051589	OG-218407	NIPPLE, turret traversing mechanism hydraulic motor (pipe, S., extra strong, 1/4 x 2) (port No. 1)	1
			CHB-AT1036	PIN, dowel, turret traversing gear box	2
19-16,20	G103-1738615	A195962	OG-215989	PIN, locking, turret traversing mechanism hydraulic motor (0.125 diam., 17/32 chamf.)	2
19-14	H001-0830074	BFDX2AA	OG-20020	PIN, stop, straight, drill rod, 0.125 x 1 (turret traversing mechanism gear box shifter lever)	2
19-9,15	H001-0830333	BFDX2CG	OG-QH-406	PIN, straight, cold-fin., S., 0.375 x 1 1/2 (3/8 diam.) (hydraulic turret traversing mechanism gear box body)	2
19-14	H001-0829600	BFDX1CR	OG-Z-407	PIN, straight, drill rod, 0.125 x 1 (gear box shifter fork)	1
19-15	G103-1738568	A266456	CAD-141240	PIN, straight, S., 3/8 x 3/4 (turret traversing mechanism gear box and hydraulic motor assembly)	4
19-15	H001-0824059	BFCX1FG		PIN, taper, S., No. 4 (0.250) x 2 (turret traversing mechanism rotating pinion)	1
	G168-7035300		CHB-AT2010	PINION, bevel, turret traversing gear box and hydraulic motor	1
19-15	G103-1738678	B157817		PINION, rotating, turret traversing mechanism (gear box to turret ring gear)	1
19-18	G103-1738683	A7002656	OG-215653	PINION, spur, turret traversing mechanism hydraulic motor output shaft	1
	G214-7036148		CHB-AT1062	PLATE, clamping, turret traversing gear box and hydraulic motor	3
	G104-2982795	A345671	OG-216879	PLATE, number, turret traversing mechanism gear box and motor	1
19-15,26,28, 29,30,32	H006-0283005	A164342A		PLUG, turret traversing mechanism gear box body (pipe, alloy-S., ck., 1/8 in.)	7
19-20,32,34	H006-0283010	A164342B		PLUG, turret traversing mechanism hydraulic motor pump end head and oil pot (pipe, alloy-S., ck., 1/4 in.) (ports 1 and 2)	5
19-14	G103-1740855	A7002658	OG-215661	PLUNGER, turret traversing mechanism gear box shifter lever detent	1
19-16,18,21,25	G103-1789451	A195976	OG-214155	RING, turret traversing mechanism hydraulic motor and variable displacement pump	1
19-15	G103-1784699	A7002651	OG-214379	SHAFT, turret traversing mechanism gear box intermediate pinion and gear	1
19-14	G103-1784702	A7002652	OG-214382	SHAFT, turret traversing mechanism gear box shifter fork lever	1
19-14,15	G103-1784698	B7002693	OG-38392	SHAFT, turret traversing mechanism gear box sliding gear	1
19-16	G103-1784666	B220982	OG-38556	SHAFT, turret traversing mechanism hydraulic motor, stripped	1
19-17,18	G103-1784704	B7002700	OG-L39338	SHAFT, turret traversing mechanism hydraulic motor, w/CYLINDER and PISTONS, assembly	1
	H001-0811053	BFAX1DH		PIN, cotter, split, S., 1/8 x 1 1/4 lg.	1
			CHB-AT549	SHIM, turret traversing gear box	1
			CHB-XAT534	SHIM, turret traversing gear box	2
	G103-1784812	B226820		SHIM, turret traversing mechanism gear box and hydraulic motor	as req.
19-14	G103-1789771	A7002659	OG-215667	SPRING, turret traversing mechanism gear box shifter lever detent (0.054 diam. 0.3665 O.D., 12 coils, 1 3/16 free lgth.)	1

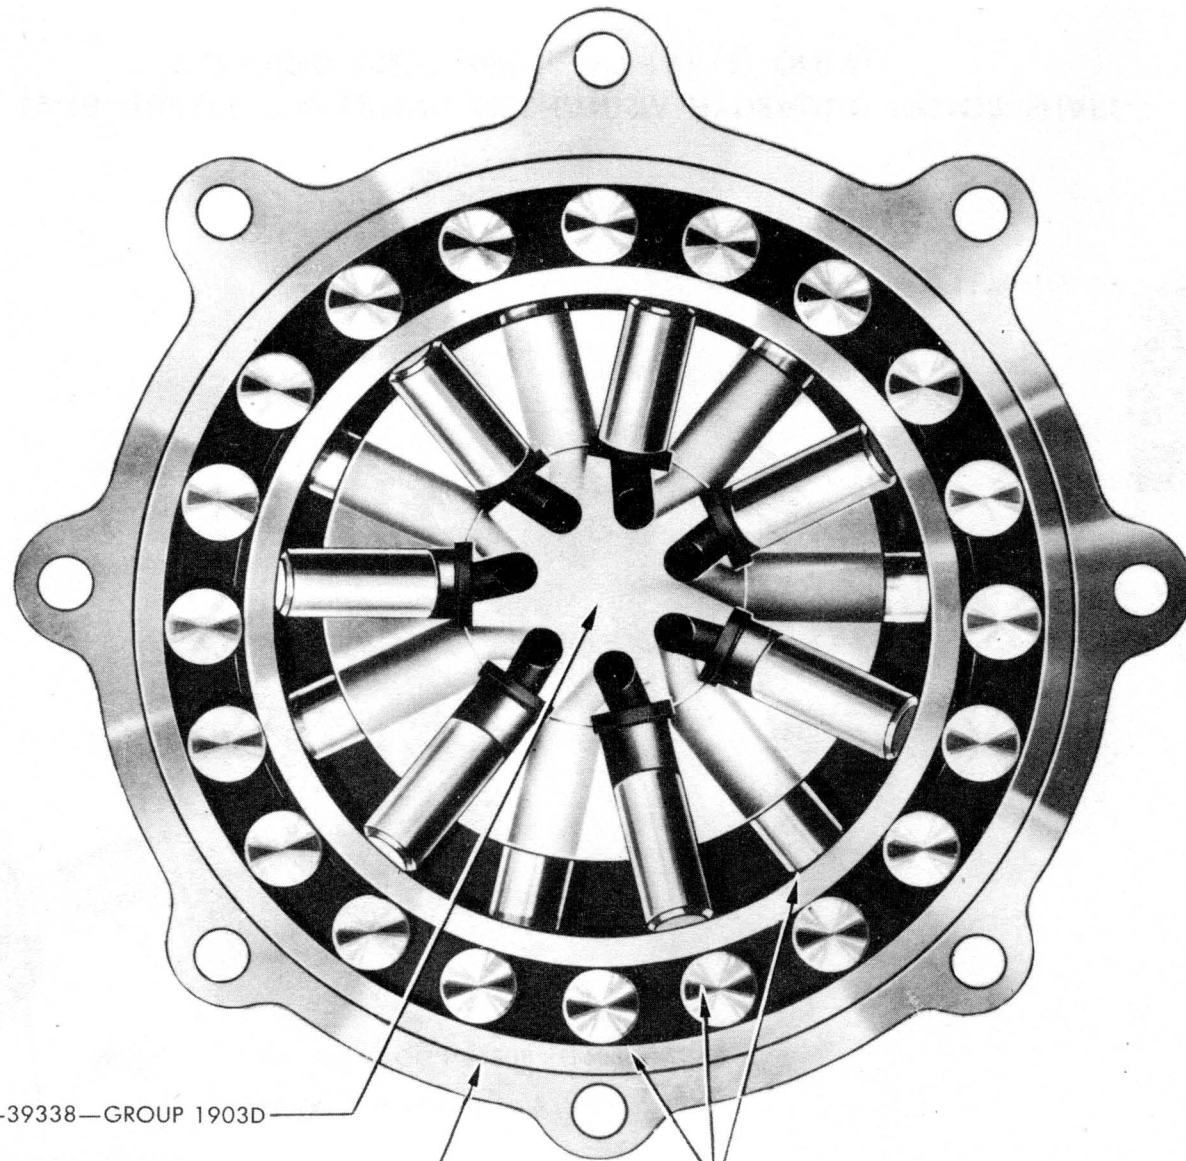

SHAFT, ASS'Y—OG-L-39338—GROUP 1903D

CASE—B220983—GROUP 1903D

BEARING—A235661—GROUP 1903A

RA PD 341176


**FIGURE 19-17—TURRET TRAVERSING MECHANISM HYDRAULIC MOTOR PISTON ASSEMBLY
CROSS SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)**

GROUP 19—TURRET



RA PD 341177

FIGURE 19-18—TURRET TRAVERSING MECHANISM HYDRAULIC MOTOR SHAFT—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

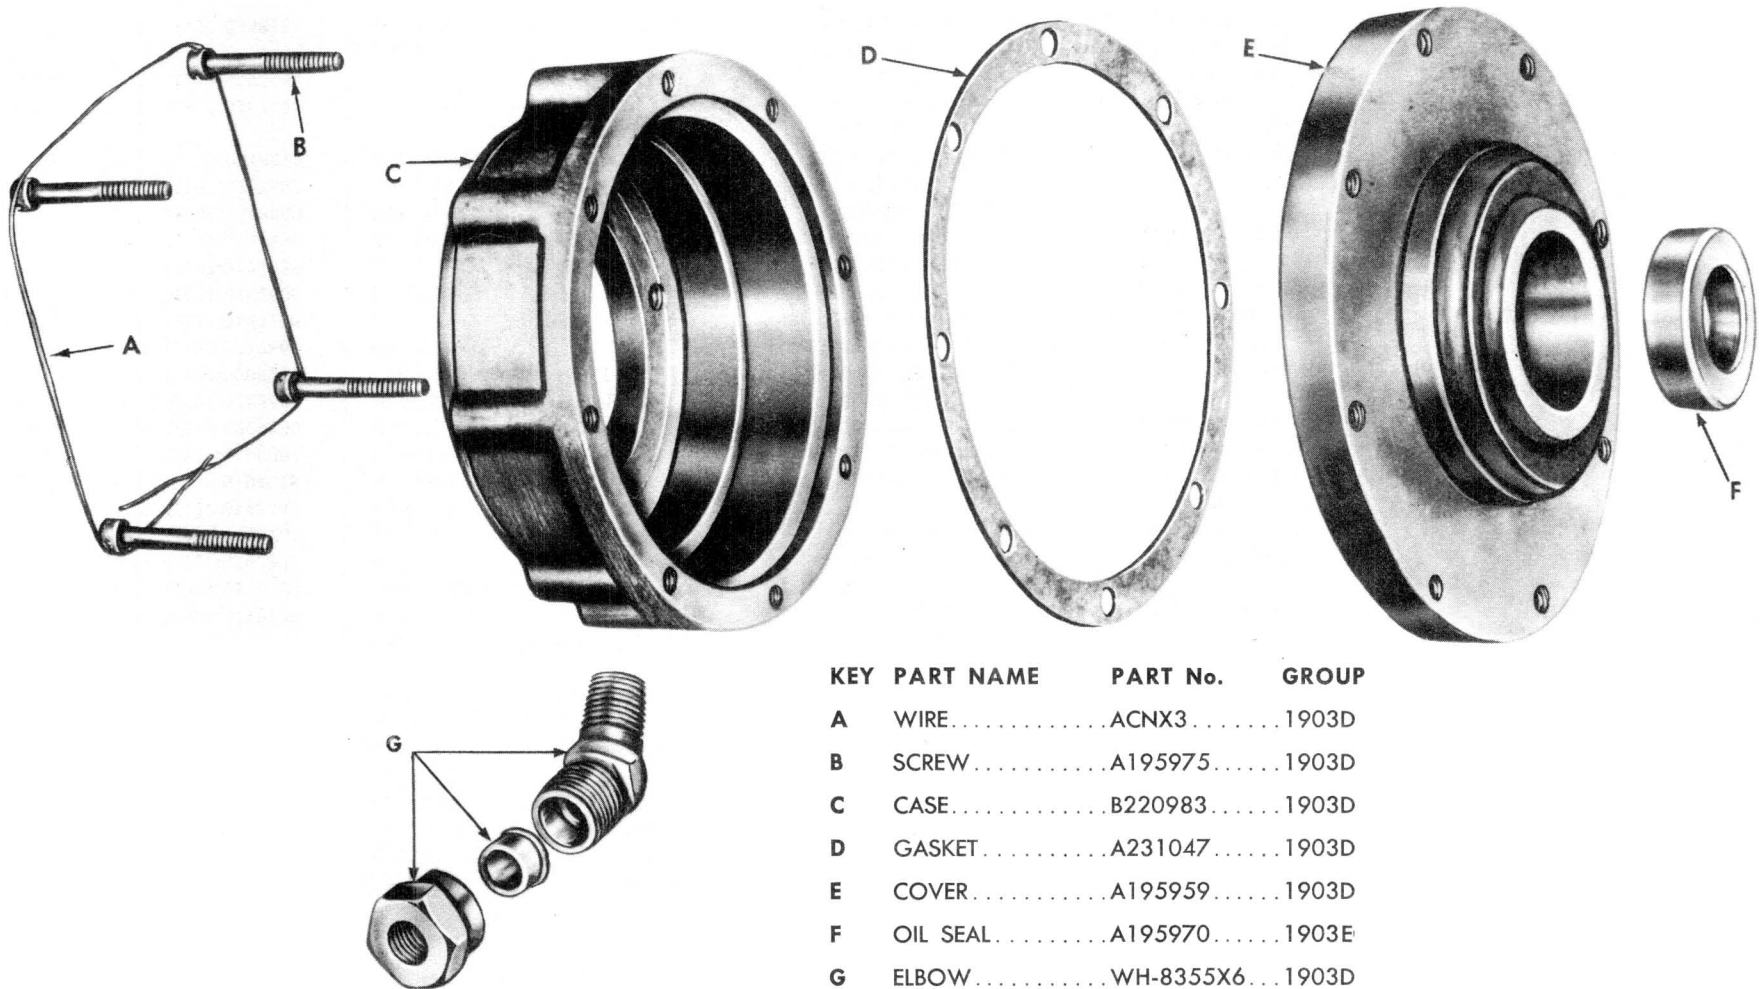


RA PD 341058

FIGURE 19-19—TURRET TRAVERSING HYDRAULIC MOTOR CASE AND COVER—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903D—TURRET TRAVERSING GEAR BOX (Mk IV; LVT (A) (4) only)	
19-9A	G127-0102008	A293749	SSG-259265	ADJUSTER, turret traversing gear box housing flange.....	1
	G127-0102207	A293745		ADJUSTER, turret traversing mechanism worm gear, assembly.....	1
19-9A	G127-0124254	BCVX4ER	GM-179844	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 1 5/8.....	1
19-9A	H001-1518009	BECX1K	GM-103321	WASHER, lock, reg., S., 3/8 in.....	1
19-9A	H012-709500	A293463		BEARING, turret traversing gear box lower housing.....	1
19-9A	G127-0118007	B230027	SSG-261866	BEARING, thrust, turret traversing mechanism worm.....	2
19-9A	H012-709430	A293460		BEARING, turret traversing mechanism shaft, pinion end.....	1
	G127-0196007	D59903	FOM-P1341	BOX, gear, turret traversing, w/HANDWHEEL and PINION GEAR, assembly (SSG-268680).....	1
	H001-4167681	BBTX1LB-1	GM-120371	NUT, reg., s-fin., S., cd-pltd., 1/2-20NF-2.....	1
	H001-0116286	BAOX1EM-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-2 x 3.....	2
	H001-0116283	BAOX1EH-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-2 x 3.....	1
	G127-0392261	A293697	FOM-P1261	STUD, S., 1/2-20NF-2 (1) x 3 7/8 x 1/2-20NF (1).....	1
	H001-7126781	BECX4M-1	GM-187130	WASHER, lock, reg., S., cd-pltd., 1/2 in.....	4
19-9A	G127-0143546	A293744	SSG-259782	CUP, bearing, turret traversing mechanism worm thrust.....	2
19-9A	G127-0194018	A293752	FOM-P1449	GASKET, turret traversing gear box upper to lower housing.....	1
19-9A	G127-0196004	B230024		GEAR, worm, turret traversing mechanism (22 teeth, 2.980 O.D. 7/16 in. face).....	1
19-9A	G127-0209300	C107713		HANDWHEEL, turret traversing gear box.....	1
19-9A	H001-4185680	BBXX1LB	GM-114496	NUT, hex., S., 1/2-20NF-3.....	1
	G127-0209299	C107712	FOM-P1352	HANDWHEEL, turret traversing gear box, w/KNOB, assembly.....	1
19-9A	G127-0217861	C107711		HOUSING, turret traversing gear box, upper.....	1
19-9A	G127-0124256	A293751	SSG-259255	BOLT, turret traversing gear box upper to lower housing flange adjustment.....	1
19-9A	H001-4167600	BBTX1FB	GM-103026	NUT, reg., hex., s-fin., S., 3/8-24NF-2.....	2
19-9A	G127-0124255	BCVX4EK	GM-179838	SCREW, cap, hex-hd., S., 3/8-16NC-2 x 7/8.....	2
19-9A	G127-0124257	A293750	SSG-261882	SCREW, cap, hex-hd., S., 3/8-24NF-2 x 1 7/16.....	1
19-9A	H001-1518009	BECX1K	GM-103321	WASHER, lock, reg., S., 3/8 in.....	4
19-9A	G127-0217862	C107709		HOUSING, turret traversing gear box, lower, w/BEARING, assembly.....	1
19-9A	H001-0518022	BGAX11B	GM-124549	KEY, Woodruff, alloy-S., 3/16 x 3/4 in. (No. 606) (turret traversing mechanism worm gear and pinion gear).....	2
19-9A	G127-0263922	A311989		KNOB, turret traversing gear box handwheel.....	1
19-9A	G214-5293464	A293464		PACKING, turret traversing mechanism worm gear adjuster.....	1
19-9A		A293753		PIN, turret traversing mechanism lower housing.....	1
19-9A	G127-0338731	B230760	FOM-P1414	PINION, turret traversing mechanism (18T., 3.266 in. O.D., 1 in. face).....	1
19-9A	H006-0282480	BEDX1AT	GM-103895	PLUG, expansion, S., 1 1/4 in. diam. (turret traversing gear housing, upper).....	1
19-9A	H006-0283900	CPMX2BA		PLUG, pipe, sq-hd., 1/4 in. (drain, turret traversing gear housing).....	1
19-9A	H006-0283572	CPMX2CA		PLUG, pipe, sq-hd., 3/8 in. (turret traversing gear housing filler).....	1
19-9A		A293746		RETAINER, adjusting, turret traversing mechanism worm gear.....	1

KEY	PART NAME	PART No.	GROUP
A	NIPPLE.....	1903D	
B	NIPPLE.....	A7051589.....	1903D
C	ELBOW.....	WH-8455X6.....	1903E
D	GASKET.....	A195960.....	1903D
E	PIN.....	A195962.....	1903D
F	VALVE.....	B220984.....	1903E
G	PISTON.....	A195979.....	1903E
H	TUMBLER.....	A244992.....	1903E
J	PISTON.....	A195971.....	1903E

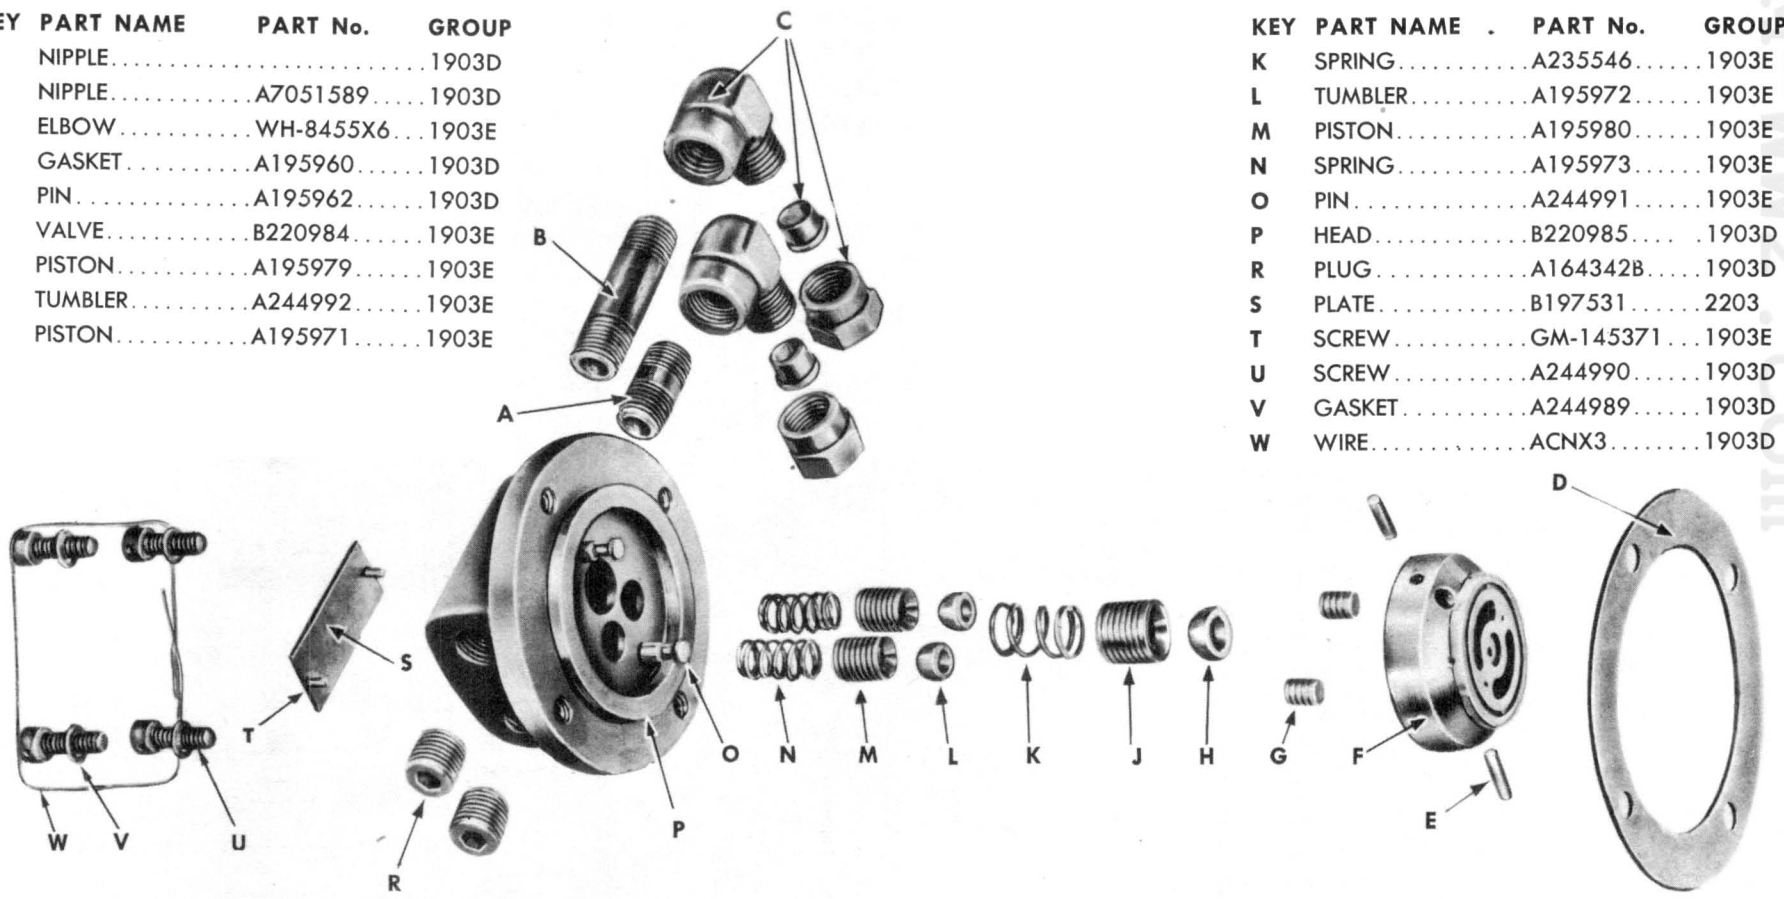


KEY	PART NAME	PART No.	GROUP
K	SPRING.....	A235546.....	1903E
L	TUMBLER.....	A195972.....	1903E
M	PISTON.....	A195980.....	1903E
N	SPRING.....	A195973.....	1903E
O	PIN.....	A244991.....	1903E
P	HEAD.....	B220985.....	1903D
R	PLUG.....	A164342B.....	1903D
S	PLATE.....	B197531.....	2203
T	SCREW.....	GM-145371.....	1903E
U	SCREW.....	A244990.....	1903D
V	GASKET.....	A244989.....	1903D
W	WIRE.....	ACNX3.....	1903D

RA PD 341178

FIGURE 19-20—TURRET TRAVERSING MECHANISM HYDRAULIC MOTOR END
HEAD AND VALVE—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

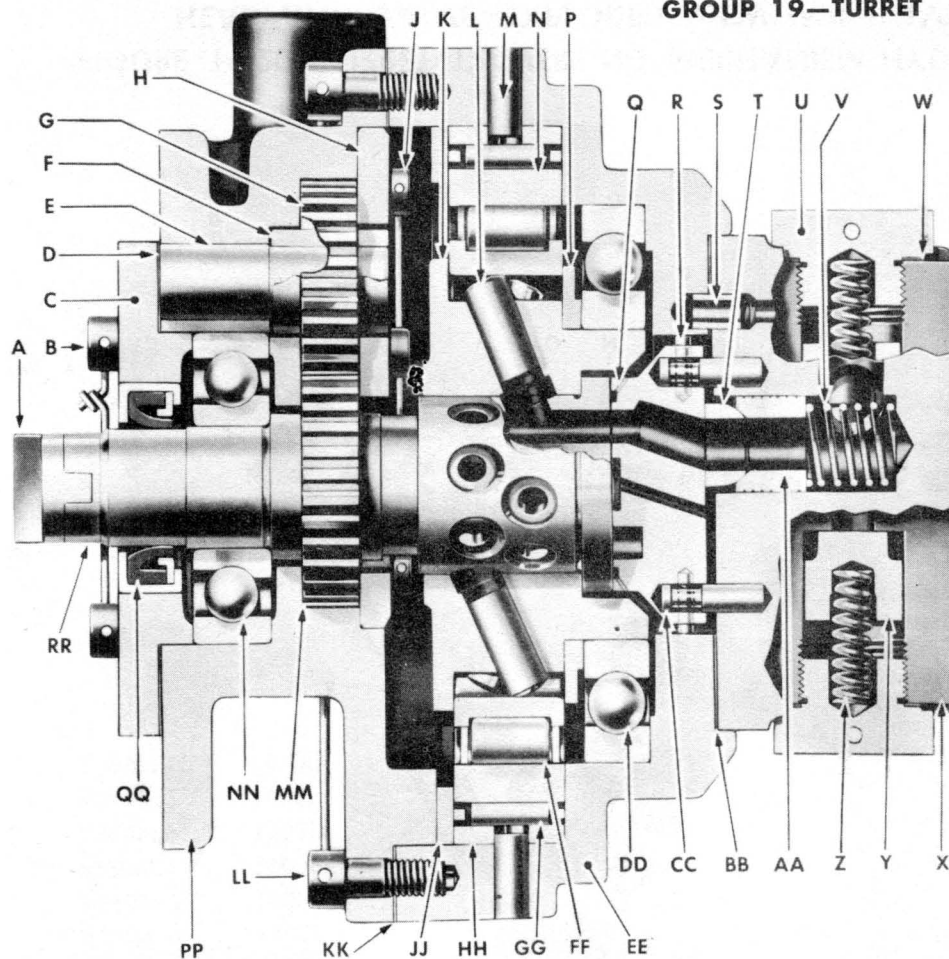

KEY	PART NAME	PART No.	GROUP
A	COUPLING...	A235552.....	1903E
B	SCREW.....	A244976.....	1903E
C	HOUSING....	A235543.....	1903E
D	GASKET.....	A245583.....	1903E
E	SHAFT.....	A245581.....	1903E

KEY	PART NAME	PART No.	GROUP
F	BUSHING....	A245577.....	1903E
G	GEAR.....	A245575.....	1903E
H	COVER.....	A245582.....	1903E
J	SCREW.....	A245585.....	1903E
K	CYLINDER...	B220981.....	1903E

KEY	PART NAME	PART No.	GROUP
L	PISTON.....	A195958.....	1903E
M	PIN.....	A235560.....	1903E
N	RACE.....	B220996.....	1903E
P	RING.....	A195976.....	1903E
Q	VALVE.....	B220984.....	1903E
R	PIN.....	A245584.....	1903E
S	CONNECTOR..	A245587.....	1903E
T	TUMBLER....	A244992.....	1903E
U	CAP.....	A235545.....	1903E
V	SPRING.....	A235546.....	1903E
W	GASKET.....	A235544.....	1903E
X	HEAD.....	C92265.....	1903E
Y	DISK.....	A235542.....	1903E
Z	SPRING.....	A235547.....	1903E
AA	PISTON.....	A195971.....	1903E
BB	GASKET.....	A235567.....	1903E
CC	PIN.....	A244991.....	1903E
DD	BEARING....	MRC-110R....	1903A
EE	CASE.....	D53155.....	1903E
FF	BEARING....	A235657.....	1903A
GG	ROLLER....	A235558.....	1903E
HH	PLATE.....	A235562.....	1903E
JJ	RING.....	A235553.....	1903E
KK	GASKET.....	A235566.....	1903E
LL	SCREW.....	A245579.....	1903E
MM	GEAR.....	A245574.....	1903E
NN	BEARING....	CADX2AE.....	1903A
PP	HOUSING....	C92266.....	1903E
QQ	OIL SEAL....	A195970.....	1903E
RR	SHAFT.....	B220995.....	1903E

RA PD 341059

FIGURE 19-21—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP—LONGITUDINAL-SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)

KEY	PART NAME	PART No.	GROUP
A	SCREW	A245580	1903E
B	FLANGE	A235555	1903E
C	CONNECTOR	A245587	1903E
D	GASKET	A235556	1903E
E	PISTON	A235568	1903E
F	SPRING	A235548	1903E
G	CASE	D53155	1903E
H	RACE	B220996	1903E
J	BEARING	A235657	1903A
K	SHAFT	B220995	1903E
L	ROLLER	A235558	1903E
M	PIN	A235560	1903E
N	PIN	A235561	1903E
P	GASKET	A245606	1903E
Q	SCREW	A245614	1903E
R	SCREW	A244976	1903E
S	PISTON	A235554	1903E
T	CAM	D78407	1903E
U	PIN	A235539	1903E
V	COVER	A235569	1903E
W	GASKET	A235537	1903E
X	ROLLER	A235536	1903E
Y	BALL	CCAX1D	1903E
Z	SCREW	A235535	1903E
AA	LEVER	OG-39077	1903E
BB	SCREW	A244976	1903E
CC	JOINT	A226713	1903E
DD	ROD	B226771	1903E
EE	PIN	A235539	1903E
FF	PISTON	A235531	1903E
GG	GASKET	A235564	1903E
HH	COVER	A235563	1903E
JJ	SCREW	A244976	1903E
KK	CAGE	A235559	1903E

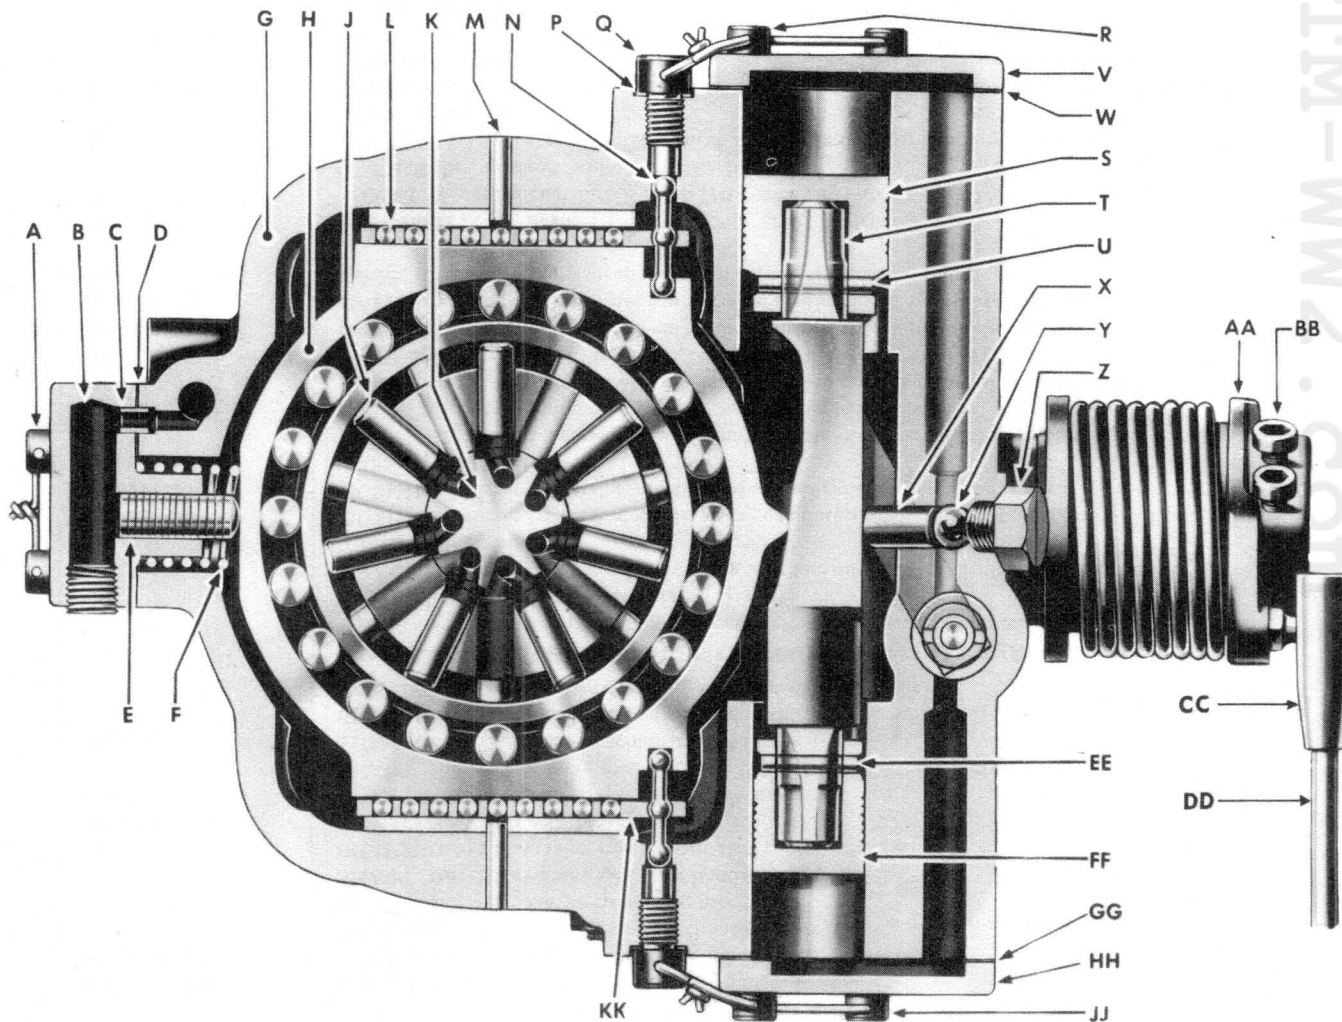


FIGURE 19-22—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP—
CROSS SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)


RA PD 341060

1903D

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903D—TURRET TRAVERSING GEAR BOX Mk IV; LVT (A) (4) only (Contd)	
19-9A	G127-0382015	A293754	SSG-262566	SCREW, thrust, turret traversing mechanism gear shaft	1
19-9A	G133-0314601	B245668	SSG-262567	NUT, lock, turret traversing mechanism thrust screw	1
	G127-0382835	A293461		SEAL, grease, turret traversing mechanism shaft	1
19-9A	G103-1842925	A293462		SEAL, worm gear, turret traversing mechanism	1
19-9A	G127-0384602	A311711		SHAFT, turret traversing gear box handwheel knob	1
19-9A	G127-0384605	B230023		SHAFT, turret traversing mechanism gear	1
19-9A	G085-3108540	B245669	SSG-256853	NUT, hex., s-fin., S., 7/8-20 special	3
19-9A	H001-7017860	BEAX7S	GM-138510	WASHER, lock, external teeth, S., 7/8 in.	1
19-9A	G127-0384625	B230025		SHAFT, turret traversing mechanism w/WORM GEAR, assembly	1
	G127-0384800	A311977A	FOM-P1250	SHIM, turret traversing mechanism (0.010 thk.)	as req.
	G127-0384801	A311977B		SHIM, turret traversing mechanism (0.030 thk.)	as req.
19-3	G127-0443019	A293741		WASHER, thrust, turret traversing mechanism worm gear	1
				1903E—VARIABLE DISPLACEMENT PUMP (Mk I; LVT (A) (1) only)	
19-22,23,30	H002-0100130	CCAX1D		BALL, turret traversing mechanism variable displacement pump control cam back-up (chr-alloy-S., grade 2., 5/16 in.)	1
	G103-1525873	B226579		BRACKET, mounting, turret traversing mechanism variable displacement pump disengaging switch	1
19-34	G103-1527755	A244956	OG-214436	BUSHING, turret traversing mechanism gear pump relief valve plunger (in oil pot)	2
19-21,27	G103-1527754	A245577	OG-214223	BUSHING, turret traversing mechanism variable displacement pump gear (bz. 1/2 I.D., 11/16 O.D., 3/4 lgh.)	1
19-24,29	G103-1527781	A245576	OG-214219	BUSHING, turret traversing mechanism variable displacement pump pilot valve	1
19-22	G103-2131338	A235559	OG-216271	CAGE, turret traversing mechanism variable displacement pump roller	2
19-22,23,24,28	G103-1531401	D78407	OG-54755	CAM, turret traversing mechanism variable displacement pump slide block control	1
19-22,23	G103-1781875	A235535	OG-214208	SCREW, cap, hex-hd., S., dld. f/lkg-wire, 3/8-16NC-2 x 0.356	1
19-21,32	G103-1531619	A235545	OG-215274	CAP, turret traversing mechanism variable displacement pump check valve	2
19-24,29	G103-1531613	A245573	OG-214210	CAP, turret traversing mechanism variable displacement pump valve spring	1
19-21,22,23, 24,26,28,29,30	G103-2131616	D53155	OG-54344	CASE, turret traversing mechanism variable displacement pump	1
	G103-1594004	A244989	OG-214602	GASKET, cop., 17/64 I.D., 13/32 O.D., 1/32 in. thk.	5
19-21	G103-1781872	A245579	OG-214992	SCREW, cap, socket-hd., S, dld. f/lkg-wire., 1/4-20NC-2 x 11/16	5
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft., 0.040 diam.	as req.
19-21,22,29,30	G104-1527712	A245587	OG-215747	CONNECTOR, turret traversing mechanism variable displacement pump slide block back-up piston cover	2
19-30	G104-2139982	B208915	OG-L39159	CONTROL, spring centering, turret traversing mechanism variable displacement pump, assembly (Includes: housing, joint, lever, pins, screws, shaft, spring, and washers)	1
	H006-0256010	B7270M	CHB-XAT521	COUPLING, pipe, stght., br., R.H. 1/4 in. (turret traversing mechanism variable displacement pump)	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-21,25	G103-1540058	A235552	OG-215360	COUPLING, jaw, turret traversing mechanism variable displacement pump drive.....	1
19-24,29	G103-2140088	A235549	OG-215348	COVER, turret traversing mechanism variable displacement pump control box.....	1
19-24,29	G103-1781874	A244976	OG-214994	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., No. 10 (0.190)-32NF-2 x 5/8 (Can be made from SCREW, BCWX3AC).....	4
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
19-22	G103-2140090	A235569	OG-216716	COVER, turret traversing mechanism variable displacement pump control cam large piston.....	1
19-22	G103-1781874	A244976	OG-214994	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., No. 10 (0.190)-32NF-2 x 5/8 (Can be made from SCREW, BCWX3AC).....	4
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
19-22,28	G103-2140089	A235563	OG-216275	COVER, turret traversing mechanism variable displacement pump control cam small piston	1
19-22,28	G103-1781874	A244976	OG-214994	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., No. 10 (0.190)-32NF-2 x 5/8 (Can be made from SCREW, BCWX3AC).....	4
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
19-21,27	G103-1540062	A245582	OG-215265	COVER, turret traversing mechanism variable displacement pump gear.....	1
19-21,27	G103-1781873	A245585	OG-215598	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., No. 10 (0.190)-32NF-2 x 1/2.....	6
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.

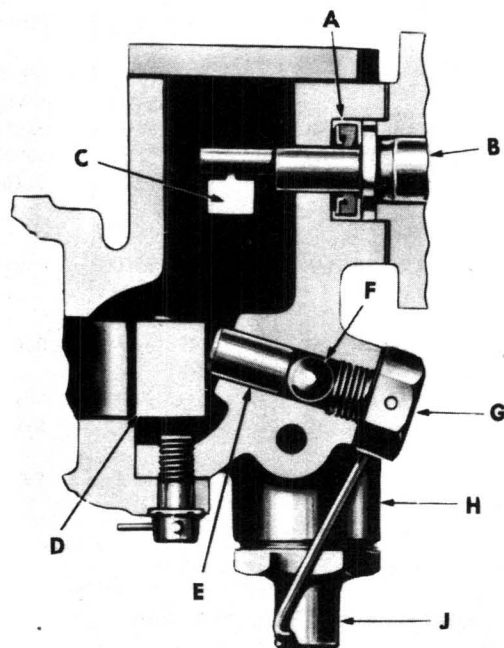

KEY	PART NAME	PART No.	GROUP
A	OIL SEAL.....	A245572.....	1903E
B	SHAFT.....	A195974.....	1903E
C	LEVER.....	A235551.....	1903E
D	CAM.....	D78407.....	1903E
E	ROLLER.....	A235536.....	1903E
F	BALL.....	CCAX1D.....	1903E
G	SCREW.....	A235535.....	1903E
H	CASE.....	D53155.....	1903E
J	CAP.....	A245573.....	1903E


RA PD 341061

FIGURE 19-23—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP BACK-UP PISTON—
CROSS SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-16,21	G103-1545653	B220981	OG-38554	1903E—VARIABLE DISPLACEMENT PUMP (Mk I; LVT (A) (1) only) (Contd) CYLINDER, turret traversing mechanism variable displacement pump and hydraulic motor.....	2
19-21,32	G103-1551855 H006-0265105	A235542 B7270B	OG-215263 CHB-XAT522	DISK, turret traversing mechanism variable displacement pump check valve.....	2
19-20,27	H006-0329070	A191243E	WH-8455X6	ELBOW, street, br., 90 deg., 1/4 in. (turret traversing mechanism variable displacement pump).....	1
19-33	H006-0331090	B183361E	WH-8405X6	ELBOW, tube, heavy duty, short, 90 deg., 3/8 in., 1/4 in. female pipe end, complete (with sleeve and nut) (ports Nos. 1 and 2 in turret traversing mechanism hydraulic motor, and port Nos. 3 and 4 variable displacement pump).....	4
	G103-1569136	A293731		ELBOW, tube, heavy duty, short, 90 deg., 3/8 in., 1/4 in. male pipe end, complete (with nut and sleeve) (port No. 8 in turret traversing mechanism variable displacement pump, and port No. 11 in oil pot).....	2
19-22,30	G103-2184600	A235555	OG-216267	ELBOW, turret traversing mechanism variable displacement pump cylinder hose.....	2
19-22,30	G103-1781876 H009-0101430	A245580 ACNX3	OG-214995	FLANGE, turret traversing mechanism variable displacement pump slide block piston.....	1
19-34	G103-1593996	A244949	OG-27027	SCREW, cap, socket-hd., alloy-S., No. 10 (0.190)-32NF-3 x 7/8.....	4
				WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
19-21,26	G103-2194023	A235566	OG-216280	GASKET, turret traversing mechanism gear pump relief valve cap (in oil pot) (copper, 1 1/64 I.D., 1 15/64 O.D., 1/16 in. thick).....	2
19-21,32	G103-1594008	A235544	OG-215273	GASKET, turret traversing mechanism variable displacement pump case (vellumoid, 1/32 in. thick).....	1
19-24,29	G103-1674055	A235550	OG-215350	GASKET, turret traversing mechanism variable displacement pump check valve cap (copper, 21/32 I.D., 13/16 O.D., 1/32 in. thick).....	2
19-22,28	G103-1594001	A235537	OG-214213	GASKET, turret traversing mechanism variable displacement pump control box cover (vellumoid, rectangular, 1 3/8, 3 1/8, 1/32 in. thick).....	1
19-22,28	G103-2194022	A235564	OG-216276	GASKET, turret traversing mechanism variable displacement pump control cam piston cover (vellumoid, 1/32 in. thick).....	1
19-30	G103-1594000	A235534	OG-214201	GASKET, turret traversing mechanism variable displacement pump control cam piston cover (vellumoid, 1/32 in. thick).....	1
19-21,31	G103-2194024	A235567	OG-216306	GASKET, turret traversing mechanism variable displacement pump control housing (vellumoid, 49/64 I.D., 1 7/16 O.D., 1/32 in. thick).....	1
	6900-217765	A318391	OG-217765	GASKET, turret traversing mechanism variable displacement pump end head (vellumoid, 1/32 in. thick).....	1
19-21,27	G103-1594007	A245583	OG-215269	GASKET, turret traversing mechanism variable displacement pump oil seal housing.....	1
19-24,29	G103-1593995	A245570	OG-25532	GASKET, turret traversing mechanism variable displacement pump oil seal housing (vellumoid, 2 1/16 I.D., 3 1/16 O.D., 1/64 in. thick).....	1
19-22,30	G103-2194021	A235556	OG-216268	GASKET, turret traversing mechanism variable displacement pump pilot valve cap (copper, 25/32 I.D., 1 O.D., 1/32 in. thick).....	1
				GASKET, turret traversing mechanism variable displacement pump slide block piston flange (vellumoid, 1/32 in. thick).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-21,27	G103-1596020	A245575	OG-214212	GEAR, driven, turret traversing mechanism variable displacement pump.....	1
19-21,27	G103-1596019	A245574	OG-214211	GEAR, driver, turret traversing mechanism variable displacement pump.....	1
	G214-7036149		CHB-AT1077	GROMMET, split, turret traversing mechanism variable displacement pump oil reservoir tube.....	1
19-24	G103-1605551	A244952	OG-214432	GUIDE, turret traversing mechanism gear pump relief valve spring (in oil pot).....	2
19-9	G103-2311423	B7002698	OG-L39335	HEAD, end, turret traversing mechanism variable displacement pump, assembly (Includes: caps, disks, gaskets, head, pins, pistons, plugs, screws, springs, tumblers, and valve).....	1
19-21,31	G103-2211402	C92265	OG-44966	HEAD, end, turret traversing mechanism variable displacement pump.....	1
19-31	G103-1781878	A235540	OG-214993	SCREW, cap, socket-hd., alloy-S., dld. f/lkg., wire., No. 10 (0.190)-32NF-2 x 1 7/8....	2
19-31	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
	G103-1617916	A293726B		HOSE, turret traversing mechanism variable displacement pump cylinder, long, assembly.	1
	G103-1617918	A293726A		HOSE, turret traversing mechanism variable displacement pump cylinder, short, assembly.	1

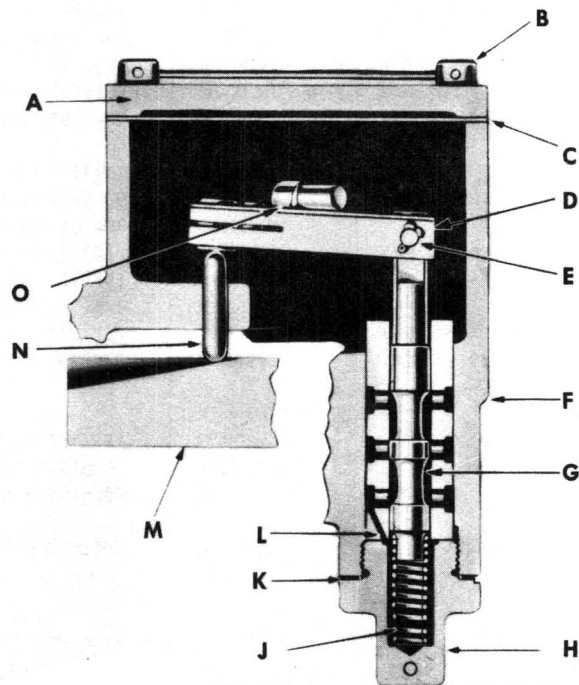

KEY	PART NAME	PART No.	GROUP
A	COVER.....	A235549.....	1903E
B	SCREW.....	A244976.....	1903E
C	GASKET.....	A235550.....	1903E
D	LEVER.....	A235551.....	1903E
E	PIN.....	A245578.....	1903E
F	CASE.....	D53155.....	1903E
G	PLUNGER.....	A235538.....	1903E
H	CAP.....	A245573.....	1903E
J	SPRING.....	A245571.....	1903E
K	GASKET.....	A245570.....	1903E
L	BUSHING.....	A245576.....	1903E
M	CAM.....	D78407.....	1903E
N	PIN.....	A235533.....	1903E
O	SHAFT.....	A195974.....	1903E


RA PD 341179

FIGURE 19-24—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP PILOT VALVE
AND EQUALIZER BAR—CROSS SECTIONAL VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-30	G104-2737001	B208916	CHB-AT4004	1903E—VARIABLE DISPLACEMENT PUMP (Mk I; LVT (A) (1) only) (Contd) HOUSING, turret traversing mechanism variable displacement pump control (OG-38948).....	1
19-30	H001-1019756	BCWX3AG		SCREW, cap, socket-hd., alloy-S., No. 10 (0.190)-32NF-3 x 1 1/4.....	3
19-30	H001-1519007	BEAX1F		WASHER, lock, internal teeth, reg., S., 3/16 in.....	3
	G103-2217884	B7002699	OG-L39337	HOUSING, turret traversing mechanism variable displacement pump gear pump, assembly (Includes: bearing, bushing, cover, gasket, gears, housings, oil seal, screws, shaft, and wire).....	1
19-21,27	G103-1618025	A235543	OG-215267	HOUSING, turret traversing mechanism variable displacement pump gear pump oil seal.....	1
19-21,27	G103-1781874	A244976	OG-214994	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., No. 10 (0.190)-32NF-2 x 5/8.....	4
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
19-21,27	G103-2217863	C92266		HOUSING, turret traversing mechanism variable displacement pump gear pump.....	1
19-21,27	G103-1781872	A245579	OG-214992	SCREW, cap, socket-hd., alloy-S., dld. f/lkg-wire., 1/4-20NC-2 x 11/16.....	4
	H009-0101430	ACNX3		WIRE, br., grade A, anld., soft, 0.040 diam.....	as req.
19-22,30	G103-1648626	A226713	OG-215704	JOINT, ball and socket, variable displacement pump control rod, pump end.....	1
19-25	H001-0518005	BGAX4C		KEY, turret traversing mechanism variable displacement pump shaft (Woodruff, S., 3/32 x 1/2 (No. 304).....	1
19-22,30	G103-1674069	B7002694	OG-39077	LEVER, turret traversing mechanism variable displacement pump control.....	1
19-30	H001-1019753	BCWX3AD		SCREW, cap, socket-hd., alloy-S., No. 10 (0.190)-32NF-3 x 3/4.....	1
19-23,24,29	G103-1674055	A235551	OG-215351	LEVER, turret traversing mechanism variable displacement pump control equalizer.....	1
19-29	G104-1781797	A245624		SCREW, set, socket-hd., flat-pt., alloy-S., No. 10 (0.190)-32NF-2 x 1/4.....	1
19-29	G104-1781798	A245625	GM-138647	SCREW, set, socket-hd., flat-pt., alloy-S., 1/4-28NF-2 x 1/2.....	1
19-1,35	G214-7036150		CHB-XAT101	MOTOR AND PUMP, turret traversing mechanism variable displacement, assembly.....	1
	H001-5027131	BCBX1CC-1	CHB-XAT506	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 1.....	4
	H001-7025741	BECX1K-1	GM-120382	WASHER, lock, reg., S., cd-pltd., 3/8 in.....	4
	H006-0270150	CPNX2BM	CHB-XAT523	NIPPLE, pipe, br., std., long, 1/4 x 2 1/2 (turret traversing mechanism variable displacement pump).....	1
	H001-0189898	CNHX8AE	WH-8105X6	NUT, tube, heavy duty, short, 3/8 in. O.D. tube (ports No.'s 1, 2, 3, 4, 5, 6, and 8 in turret traversing mechanism pump, ports No.'s 1, 2, and 3 in hydraulic motor, and ports No.'s 10 to 14 in oil pot).....	20
19-16,19,21,27	G103-1733603	A195970	OG-205823	OIL SEAL, turret traversing mechanism variable displacement pump and hydraulic motor drive shaft (Neoprene, 3/4 I.D., 1.378 O.D., 13/32 in. thick).....	2
19-23,30	G103-1733604	A245572	OG-214194	OIL SEAL, turret traversing mechanism variable displacement pump control shaft (Neoprene, 3/8 I.D., 0.0751 O.D., 1/4 in. thick).....	1
19-16,20,21,31	G103-1738545	A244991	OG-215262	PIN, retaining, turret traversing mechanism hydraulic motor and variable displacement pump valve.....	4
19-30	G103-1738595	A244982	OG-215046	PIN, stop, turret traversing mechanism variable displacement pump control lever.....	1
19-21,22,26	G103-2338708	A235560	OG-216272	PIN, straight, drill rod, 3/16 x 11/16 (turret traversing mechanism variable displacement pump retaining plate).....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-30	G104-1738482	A244981	OG-216162	PIN, straight, drill rod, 3/16 x 3/4 (turret traversing mechanism variable displacement pump case plate and spring center control)	1
19-29	G103-1738579	A235533	OG-214196	PIN, straight, drill rod, 3/16 x 1 (turret traversing mechanism variable displacement pump control cam and equalizer lever followup).....	1
19-29	G103-2338705	A235532	OG-214193	PIN, straight, drill rod, 3/16 x 1 (turret traversing mechanism variable displacement pump control equalizer lever guide).....	2
19-30	G103-1738596	A244977	OG-215041	PIN, straight, drill rod 3/16 x 3/8 (turret traversing mechanism variable displacement pump control spring).....	2
19-22,28	G103-2338707	A235539	OG-214277	PIN, straight, drill rod, 1/8 x 27/32 (turret traversing mechanism variable displacement pump control cam piston).....	2
19-21,31	G103-1738616	A245584	OG-215572	PIN, straight, drill rod, 1/8 x 11/32 (turret traversing mechanism variable displacement pump flat valve).....	2
19-24,29	G103-1738601	A245578	OG-214322	PIN, straight, drill rod, 1/8 x 11/16, dld. f/c-pin., 2 holes (turret traversing mechanism variable displacement pump pilot valve plunger)	1
	H001-0811025	BFAX1BC		PIN, cotter, split, S., 1/16 x 1/2.....	2

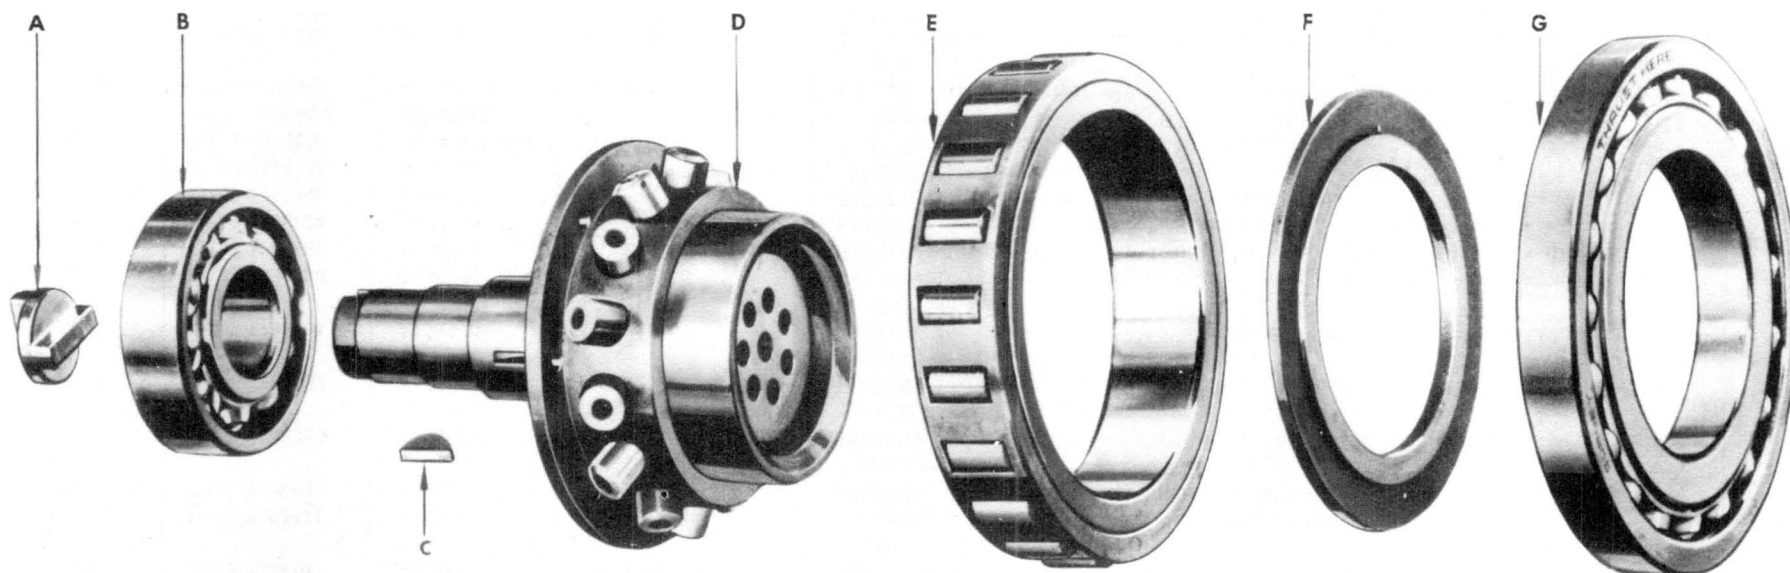

KEY	PART NAME	PART No.	GROUP
A	COUPLING.....	A235552.....	1903E
B	BEARING.....	CADX2AE.....	1903A
C	KEY.....	BGAX4C.....	1903E
D	SHAFT, ASS'Y.....	B7002697.....	1903E

KEY	PART NAME	PART No.	GROUP
E	BEARING.....	A2356757.....	1903A
F	RING.....	A195976.....	1903D
G	BEARING.....	MRC-110R.....	1903A


RA PD 341062

**FIGURE 19-25—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)**

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-22,28	G103-2338709	A235561	OG-216273	1903E—VARIABLE DISPLACEMENT PUMP (Mk I; LVT (A) (1) only) (Contd)	
				PIN, turret traversing mechanism variable displacement pump cage roller retaining plate.	2
	G104-0302421	A245606	OG-215818	GASKET, copper, 21/64 I.D., 15/32 O.D., 1/32 thk.)	2
19-16,21	G103-1738934	A195958	OG-214153	PISTON, turret traversing mechanism variable displacement pump and hydraulic motor cylinder	28
19-20,31	G103-1738933	A195979	OG-215264	PISTON, turret traversing mechanism variable displacement pump and hydraulic motor flat valve equalizer	4
19-16,20,21,31	G103-1738932	A195971	OG-215271	PISTON, turret traversing mechanism variable displacement pump and hydraulic motor, large, back-up	2
19-20,31	G103-1738931	A195980	OG-215268	PISTON, turret traversing mechanism variable displacement pump and hydraulic motor, small, back-up	4
19-22,28	G103-2338820	A235554	OG-216266	PISTON, turret traversing mechanism variable displacement pump control cam, large	1
19-22,28	G103-1738882	A235531	OG-214186	PISTON, turret traversing mechanism variable displacement pump control cam, small	1
19-22,30	G103-2338821	A235568	OG-216307	PISTON, turret traversing mechanism variable displacement pump slide block	1
	G103-1740440	A293147		PLATE, mounting, turret traversing pump and motor	1
	G103-1524211	A266058	CHB-XAT533	BOLT, carriage, special, rd-hd., alloy-S., cd-pltd., 3/8-24NF-3 x 1 1-8	4
	H001-0725853	BBWX1CA-1		NUT, safety, S., cd-pltd., 3/8-24NF-3	4
	H001-1530009	BEBX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.	4
19-21,26	G103-2340204	A235562	OG-216274	PLATE, retaining, turret traversing mechanism variable displacement pump caged roller	2
19-34	G103-1740850	A244953	OG-214434	PLUNGER, turret traversing mechanism gear pump relief valve (in oil pot)	2
19-24,29	G103-1740854	A235538	OG-214217	PLUNGER, turret traversing mechanism variable displacement pump control valve	1
19-35	G103-1746153	D59967	OG-L73832	PUMP, turret traversing mechanism variable displacement, assembly	1
	H001-5025511	BCAX3K-1	GM-120854	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-2 x 5/8	4
	H001-1519009	BEAX1H-1		WASHER, lock, internal teeth, reg., S., cd-pltd., 1/4 in.	4
19-21,22,26	G103-2364848	B220996	OG-39112	RACE, slide block, turret traversing mechanism two-way variable displacement pump	1
19-26	G103-2364847	A235565	OG-L216277	RACE, slide block, turret traversing mechanism two-way variable displacement pump, w/BEARING, assembly	1
19-34	G103-1767701	A244951	OG-214431	RETAINER, turret traversing mechanism gear pump relief valve bushing (in oil pot)	2
19-21	G103-1769852	A235553	OG-216031	RING, retaining, turret traversing mechanism variable displacement pump slide block roller bearing	1
	H101-0189917		WH-8165X6	RING, tube, heavy duty, short, 3/8 in. O.D. tube (ports No.'s 1,2,3,4,5,6 and 8 in turret traversing variable displacement pump, ports No.'s 1, 2, and 3 in hydraulic motor, and ports No.'s 10 to 14 in oil pot)	20
19-22,23,30	G103-1773381	A235536	OG-214209	ROLLER, turret traversing mechanism variable displacement pump control cam back-up	1
19-21	G103-2373454	A235558	OG-216270	ROLLER, turret traversing mechanism variable displacement pump	14

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-26	G103-2373474	A235557	OG-L216269	ROLLER, turret traversing mechanism variable displacement pump, w/CAGE, assembly	1
19-22,28	G104-1781839	A245614	OG-216163	SCREW, turret traversing mechanism variable displacement pump roller cage pin	2
19-34	G103-1783131	A244957	OG-214435	SEAT, turret traversing mechanism gear pump relief valve plunger (in oil pot)	2
19-21,27	G103-1784709	A245581	OG-215260	SHAFT, turret traversing mechanism variable displacement pump gear pump	1
19-23,24,30	G103-1784721	A195974	OG-215036A	SHAFT, turret traversing mechanism variable displacement pump pilot valve	1
19-21,22	G103-2384604	B220995	OG-38743	SHAFT, drive, turret traversing mechanism variable displacement pump	1
19-25	G103-1784705	B7002697	OG-L39333	SHAFT, drive, turret traversing mechanism variable displacement pump, w/CYLINDER and PISTONS, assembly	1
19-34	G103-1784946	A244967	OG-214429	SHIM, turret traversing mechanism gear pump relief valve spring (in oil pot)	4
	G103-2384804	A7002665	OG-217450	SHIM, turret traversing mechanism variable displacement pump slide block roller plate (S., 23/32 x 2 x 0.002 in. thk.)	1
19-30	G103-1789602	A244980	OG-215038	SPRING, centering, turret traversing mechanism variable displacement pump control	1
	G103-2389798	A312333	OG-217380	SPRING, centering, turret traversing mechanism variable displacement pump control	1
19-34	G103-1789601	A244950	OG-214430	SPRING, turret traversing mechanism gear pump relief valve (in oil pot)	1
19-34	G103-1789603	A244955	OG-215846	SPRING, turret traversing mechanism gear pump relief valve (in oil pot)	1
19-20,31	G103-1789772	A195973	OG-215301	SPRING, turret traversing mechanism variable displacement pump and hydraulic motor small back-up piston (S. 11/32 O.D., 0.0475 diam. wire, 6 1/2 coils)	2

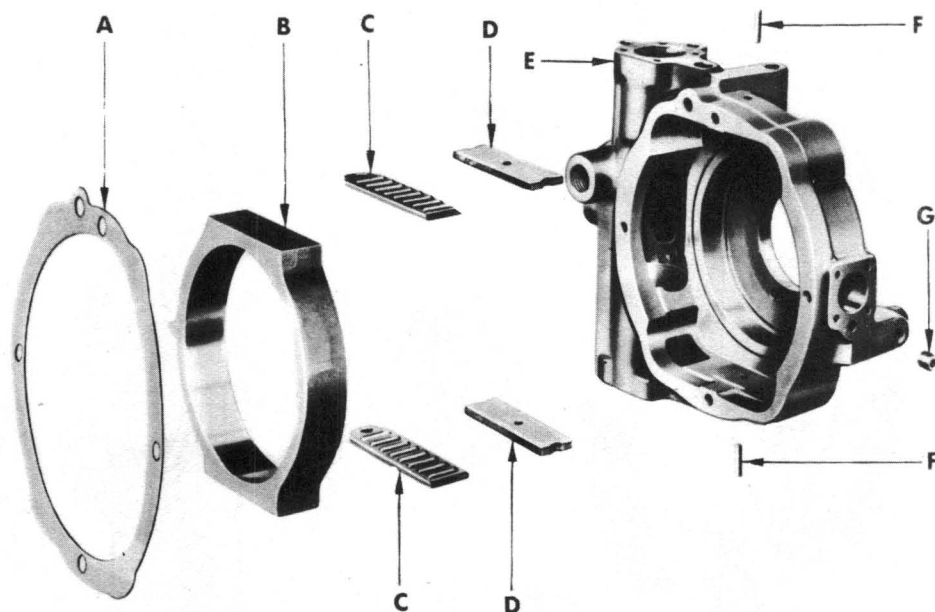


KEY	PART NAME	PART No.	GROUP
A	GASKET	A235566	1903E
B	RACE	B220996	1903E
C	ROLLER	A235557	1903E
D	PLATE	A235562	1903E
E	CASE	D53155	1903E
F	PIN	A235560	1903E
G	PLUG	A164342A	1903D

RA PD 341063

**FIGURE 19-26—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP CASE
SLIDE BLOCK AND WAYS—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)**


GROUP 19—TURRET

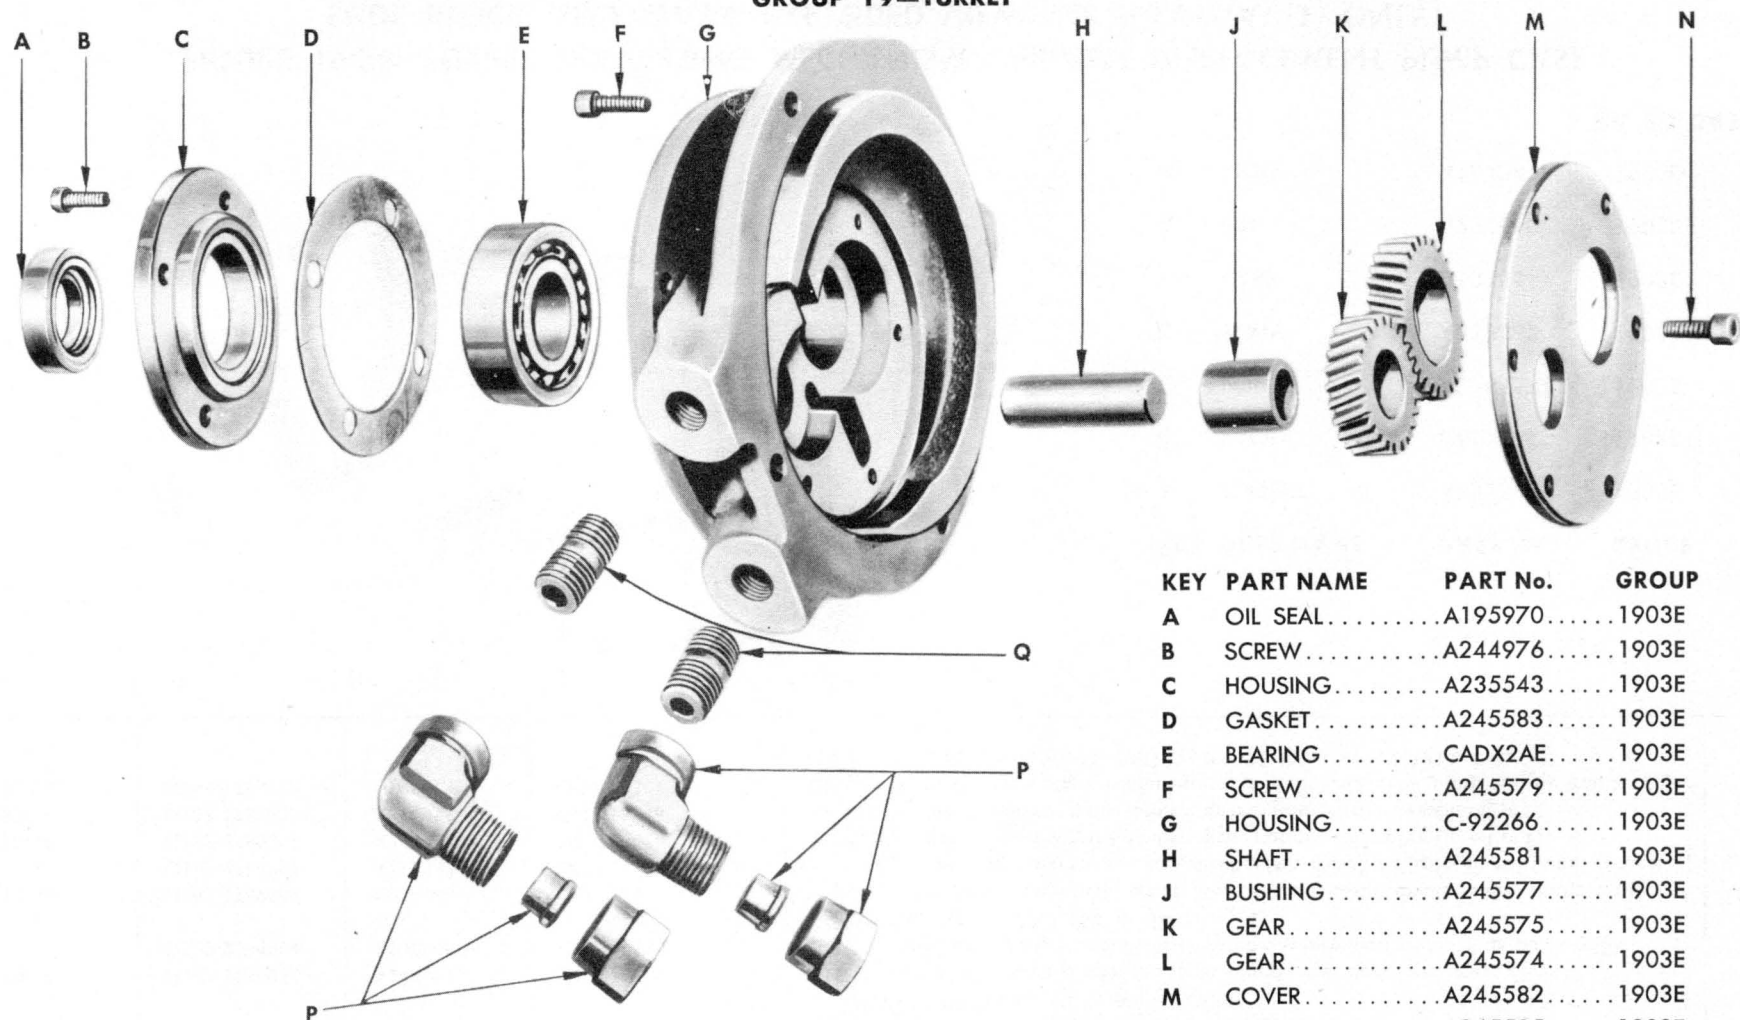

KEY	PART NAME	PART No.	GROUP
A	OIL SEAL.....	A195970.....	1903E
B	SCREW.....	A244976.....	1903E
C	HOUSING.....	A235543.....	1903E
D	GASKET.....	A245583.....	1903E
E	BEARING.....	CADX2AE.....	1903E
F	SCREW.....	A245579.....	1903E
G	HOUSING.....	C-92266.....	1903E
H	SHAFT.....	A245581.....	1903E
J	BUSHING.....	A245577.....	1903E
K	GEAR.....	A245575.....	1903E
L	GEAR.....	A245574.....	1903E
M	COVER.....	A245582.....	1903E
N	SCREW.....	A245585.....	1903E
P	ELBOW.....	WH-8455X6...	1903E
Q	NIPPLE.....		1903D

RA PD 341064

FIGURE 19-27—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP GEAR HOUSING—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

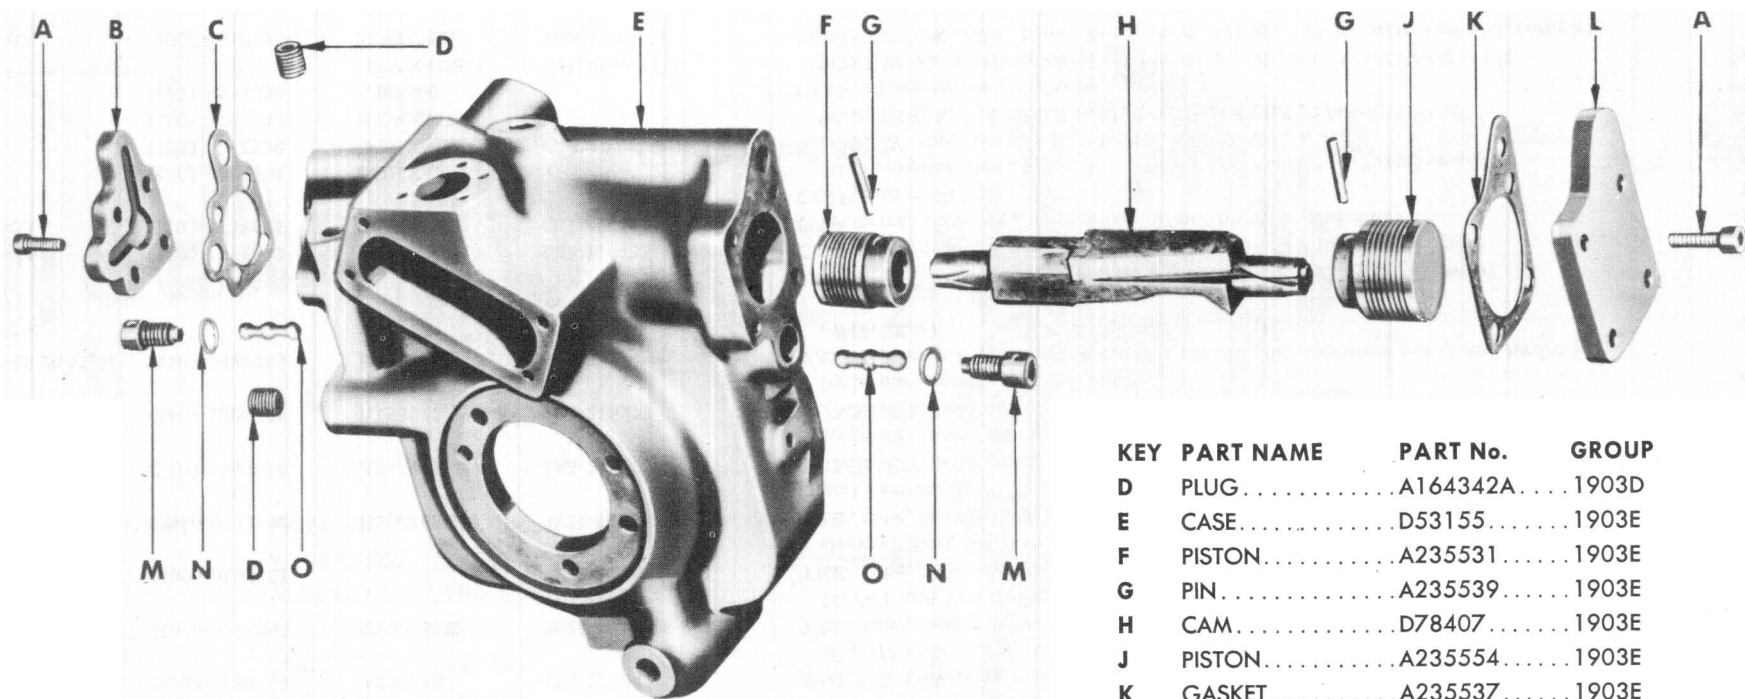

KEY	PART NAME	PART No.	GROUP
A	SCREW.....	A244976.....	1903E
B	COVER.....	A235563.....	1903E
C	GASKET.....	A235564.....	1903E

KEY	PART NAME	PART No.	GROUP
D	PLUG.....	A164342A....	1903D
E	CASE.....	D53155.....	1903E
F	PISTON.....	A235531.....	1903E
G	PIN.....	A235539.....	1903E
H	CAM.....	D78407.....	1903E
J	PISTON.....	A235554.....	1903E
K	GASKET.....	A235537.....	1903E
L	COVER.....	A235569.....	1903E
M	SCREW.....	A245614.....	1903E
N	GASKET.....	A245606.....	1903E
O	PIN.....	A235561.....	1903E


RA PD 341065

FIGURE 19-28—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP CASE, CONTROL CAM, AND PISTONS—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

1903E

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-16,20,21,31	G103-1789773	A235546	OG-215302	1903E—VARIABLE DISPLACEMENT PUMP (Mk I; LVT (A) (1) only) (Contd) SPRING, turret traversing mechanism variable displacement pump and hydraulic motor large back-up piston (S., 17/32 O.D., 0.0625 diam. wire., 4 1/2 coils)..... SPRING, turret traversing mechanism variable displacement pump check valve (S., 0.306 O.D., 0.025 diam. wire, 12 coils)..... SPRING, turret traversing mechanism variable displacement pump pilot valve (S., 9/32 O.D., 0.035 diam. wire, 19 coils)..... SPRING, traversing mechanism variable displacement pump slide block (S., 3/4 O.D., 0.080 diam. wire, 8 1/2 coils)..... TEE, tube, heavy duty, short, 3/8 in., complete (with sleeves and nuts) (ports No.'s 1 and 2 in turret traversing mechanism variable displacement pump)..... TEE, tube, heavy duty, short, 3/8 in, 1/4 in. female pipe, complete (with nuts and sleeves) (port No. 4 in turret traversing mechanism variable displacement pump)..... TEE, tube, heavy duty, short, 3/8 in., 1/4 in. male pipe side, complete (with nuts and sleeves) (port No. 5 in turret traversing mechanism variable displacement pump).. TUMBLER, hold down, turret traversing mechanism variable displacement pump and hydraulic motor end head, large..... TUMBLER, hold down, turret traversing mechanism variable displacement pump and hydraulic motor end head, small..... VALVE, turret traversing mechanism variable displacement pump and hydraulic motor (flat).....	1
19-21,32	G103-1789774	A235547	OG-215346		2
19-24,29	G103-1789768	A245571	OG-214154		1
19-22	G103-1789769	A235548	OG-215347		1
19-32	H006-0378090	B200167E	WH-8605X6		2
	H006-0105261		WH-8655X6		1
19-29	H006-0379590	B200163E	WH-8755X6		1
19-16,20,21,31	G103-1808270	A244992	OG-215270		2
19-20,31	G103-1808271	A195972	OG-215272		4
19-16,20,21,31	G103-2427253	B220984	OG-38744		2
19-34	G103-1531612	A244954	OG-214433	1903F—OIL POT (Mk I; LVT (A) (1) only) CAP, turret traversing mechanism gear pump relief valve (in oil pot)..... CAP, turret traversing mechanism oil pot breather and filler..... CLIP, turret oil lines..... NUT, regular, hex., s-fin., S., cd-pltd., 1/4-28NF-2..... SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-2 x 5/8..... WASHER, lock, internal teeth, reg., S., cd-pltd., 1/4 in..... CLIP, turret oil reservoir tube..... SCREW, ext-teeth-lockwasher., rd-hd., S., cd-pltd., 1/4-28NF-2 x 1/2..... CONNECTOR, tube, heavy duty, short, 3/8 in., 1/4 in. male pipe end, complete (with nut and sleeve) (ports No.'s 10, 12, and 13 in turret traversing mechanism oil pot)..... COVER, inspection, turret traversing mechanism oil pot..... SCREW, cap, socket-hd., alloy-S., No. 10 (0.190)-32NF-3 x 1/2..... GASKET, turret traversing mechanism oil pot inspection cover..... NIPPLE, turret traversing mechanism oil pot filler, strainer and breather (Soldered to strainer).....	2
19-33	G103-1531611	A244958	OG-215694		1
			CHB-AT1050		1
	H001-4027501	BBBX1A-1			1
	G103-1781729	BCBX5BA-1	GM-123435		1
	H001-7021741	BEAX1H-1			1
	G103-1538560	A266460			1
		BCYX4BE-1	CHB-XAT510		1
19-33	H006-0318125	B183358E	WH-8205X6		3
19-34	G104-2580241	A345674	OG-216416		1
19-34	H001-1019751	BCWX3AB			10
19-34	G103-1594011	A7002661	OG-215689		1
19-33	G104-2917493	A195996	OG-216418		1

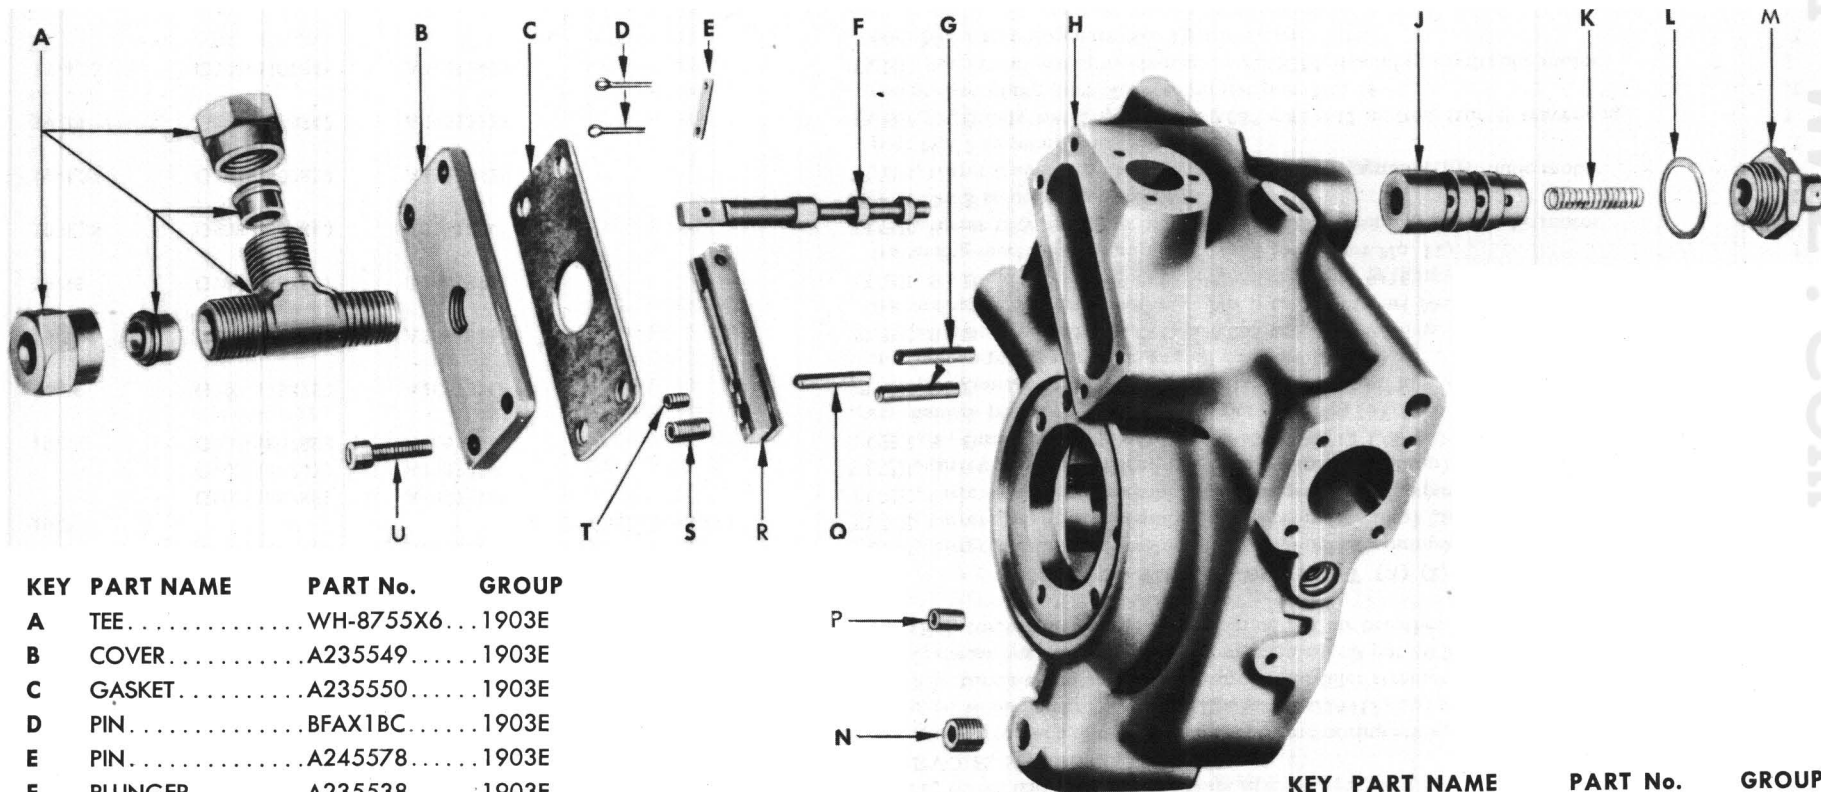

KEY	PART NAME	PART No.	GROUP
A	TEE.....	WH-8755X6...	1903E
B	COVER.....	A235549.....	1903E
C	GASKET.....	A235550.....	1903E
D	PIN.....	BFA1BC.....	1903E
E	PIN.....	A245578.....	1903E
F	PLUNGER.....	A235538.....	1903E
G	PIN.....	A235532.....	1903E
H	CASE.....	D53155.....	1903E
J	BUSHING.....	A245576.....	1903E
K	SPRING.....	A245571.....	1903E
L	GASKET.....	A245570.....	1903E

KEY	PART NAME	PART No.	GROUP
M	CAP.....	A245573.....	1903E
N	PLUG.....	A164243A.....	1903D
P	CONNECTOR.....	A245587.....	1903E


KEY	PART NAME	PART No.	GROUP
Q	PIN.....	A235533.....	1903E
R	LEVER.....	A235551.....	1903E
S	SCREW.....	A245625.....	1903E
T	SCREW.....	A245624.....	1903E
U	SCREW.....	A244976.....	1903E

RA PD 341066

FIGURE 19-29—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP CASE, PILOT VALVE, AND EQUALIZER BAR—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-33,34,35	G103-1742850 G103-1524211 H001-0725853 H001-1530009	D59738 A266058 BBWX1CA-1 BEBX1K	OG-L44995 CHB-XAT533	1903F—OIL POT (Mk I; LVT (A) (1) only) (Contd) POT, oil, turret traversing mechanism, assembly BOLT, carriage, special, rd-hd., alloy-S., cd-pltd., 3/8-24NF-3 x 1 1/8 NUT, safety, S., cd-pltd., 3/8-24NF-3 WASHER, plain, S., SAE std., 3/8 in.	1 3 3 3
19-33,34 19-3 19-33	G104-2983701 C056-0367630 G103-1769695	D78250 A244960	OG-54377 WE-1277550 OG-215426	POT, oil, turret traversing mechanism, assembly RESERVOIR, oil, turret, assembly RING, turret traversing mechanism oil pot measuring stick (Hooked to oil level measuring STICK, OG-216417)	1 1 1 1
19-33 19-33 19-33	G104-3066790 G103-1674053 G103-1842794	A195995 A195977 A244959	OG-216419 OG-216417 OG-215403	SCREEN, turret traversing mechanism oil pot filler strainer (Soldered to nipple) STICK, measuring, turret traversing mechanism oil pot oil level WASHER, turret traversing mechanism oil pot air breather filter (felt)	1 1 1 1
19-3	G103-1807951	A266157	CHB-XAT113	1903G—TUBES (Mk I; LVT (A) (1) only) TUBE, turret stabilizer, assembly (top of cylinder to pump) (1/4 in.) TUBE, turret stabilizer, assembly (oil reservoir to pump) (3/8 in.) TUBE, turret stabilizer, assembly (bottom of cylinder to pump) (3/8 in.) TUBE, turret stabilizer, assembly (top of cylinder to pump) (3/8 in.)	1 1 1 1
19-35	G103-1807881 G103-1807879 G103-1807898	A293727B A293727A A266137L		TUBE, S., Bundy weld, 3/8 O.D. x 0.035 wall x 12 1/8 in. long (turret traversing mechanism pump port No. 1 to oil pot port No. 10)	1
19-35	G103-1738750	A266137G		TUBE, S., Bundy weld, 3/8 O.D. x 0.035 wall x 13 in. long (turret traversing mechanism pump port No. 4 to oil pot port No. 12)	1
19-35	G103-1738751	A266137H		TUBE, S., Bundy weld, 3/8 O.D. x 0.035 wall x 14 5/16 in. long (turret traversing mechanism pump port No. 3 to oil pot port No. 13)	1
19-35	G103-1807897	A266137K		TUBE, S., Bundy weld, 3/8 O.D. x 0.035 wall x 16 9/16 in. long (turret traversing mechanism pump port No. 2 to oil pot port No. 11)	1
19-4,35	G103-2407840	A312184C		TUBE, turret traversing mechanism, w/LOOM, assembly (hydraulic motor port No. 3 to pump port No. 5)	1
19-4,35	G103-2407839	A312184B		TUBE, turret traversing mechanism, w/LOOM, assembly (hydraulic motor port No. 2 to pump port No. 1)	1
19-35	G103-1738747	A266137D		TUBE, S., Bundy weld, 3/8 O.D. x 0.035 wall x 11 in. long (turret traversing mechanism pump port No. 5 to oil pot port No. 14)	1
19-4,35	G103-2407841	A312184D		TUBE, turret traversing mechanism, w/LOOM, assembly (hydraulic motor port No. 1 to pump port No. 2)	1
19-36 19-36 19-36	G103-0806685 H001-4027501 H001-1040003	B110622 BBBX1A-1 BCSX1AC-1	GM-102872	1903H—TURRET FOOT FIRING MECHANISM (Mk I; LVT (A) (1) only) CABLE, turret foot firing mechanism NUT, regular, hex., s-fin., S., cd-pltd., 1/4-28NF-2 SCREW, set, sq-hd., cup-pt. S., cd-pltd., 1/4-20NC-3 x 3/4	1 2 1

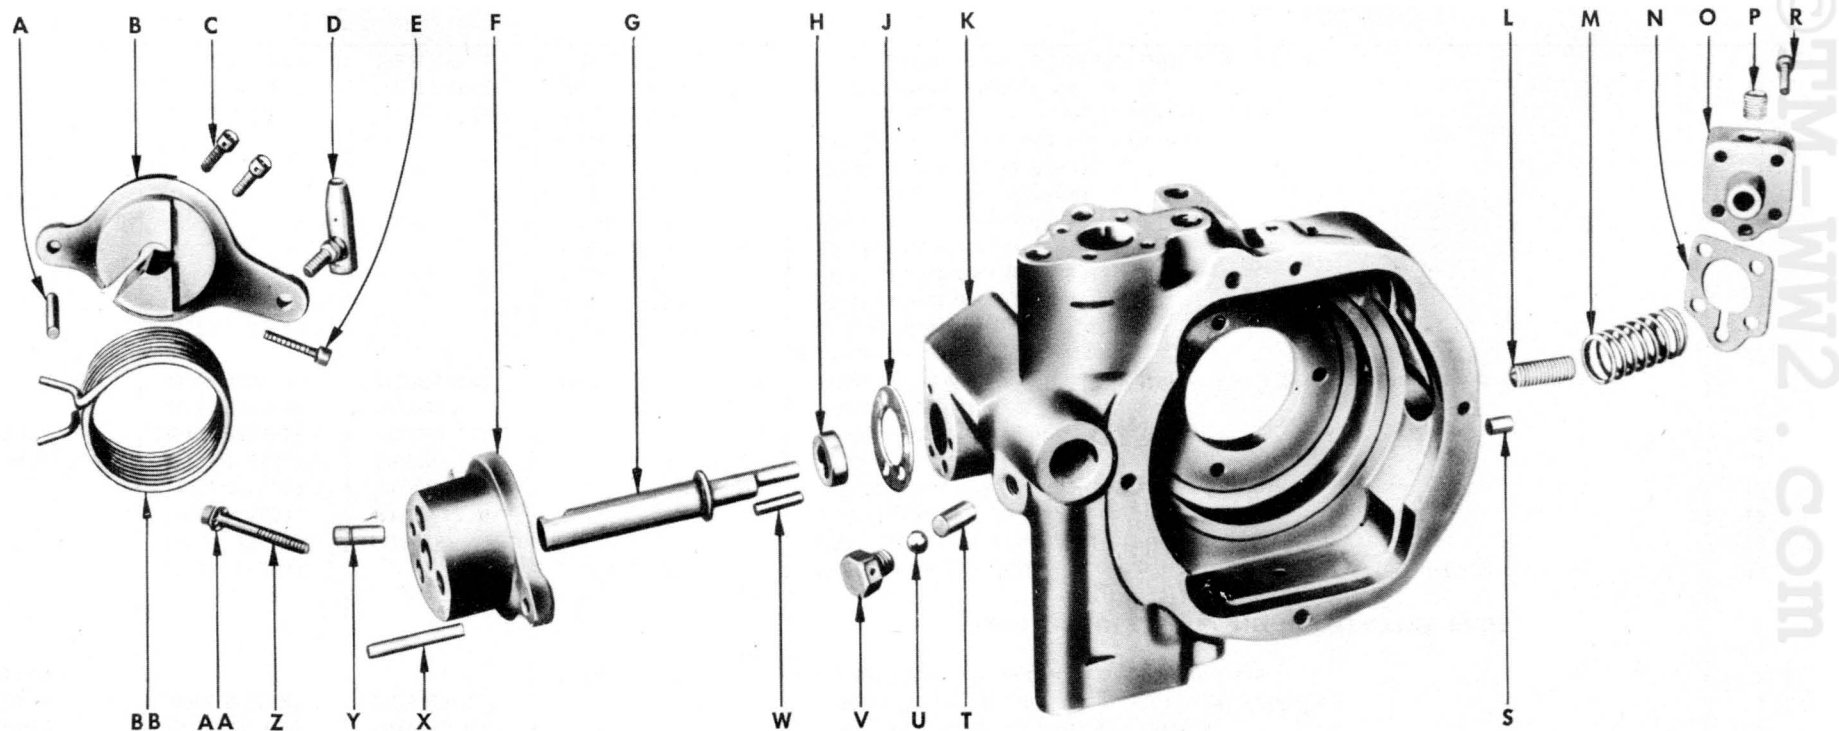

KEY	PART NAME	PART No.	GROUP
A	PIN.....	A244977.....	1903E
B	LEVER.....	OG-39077.....	1903E
C	SCREW.....	A244976.....	1903E
D	JOINT.....	A226713.....	1903E
E	SCREW.....	BCWX3AD.....	1903E
F	HOUSING.....	B208916.....	1903E
G	SHAFT.....	A195974.....	1903E
H	OIL SEAL.....	A245572.....	1903E
J	GASKET.....	A235534.....	1903E

KEY	PART NAME	PART No.	GROUP
K	CASE.....	D53155.....	1903E
L	PISTON.....	A235568.....	1903E
M	SPRING.....	A235548.....	1903E
N	GASKET.....	A235556.....	1903E
O	FLANGE.....	A235555.....	1903E
P	PLUG.....	A164342A.....	1903D
R	SCREW.....	A245580.....	1903E
S	CONNECTOR.....	A245587.....	1903E
T	ROLLER.....	A235536.....	1903E

KEY	PART NAME	PART No.	GROUP
U	BALL.....	CCAX1D.....	1903E
V	SCREW.....	A235535.....	1903E
W	PIN.....	A244981.....	1903E
X	PIN.....	A244977.....	1903E
Y	PIN.....	A244982.....	1903E
Z	SCREW.....	BCWX3AG.....	1903E
AA	WASHER.....	BEAX1F.....	1903E
BB	SPRING.....	A244980.....	1903E


RA PD 341067

FIGURE 19-30—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP CASE, CONTROL MECHANISM, AND SLIDE-BLOCK PISTON—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1903H—TURRET FOOT FIRING MECHANISM (Mk I; LVT (A) (1) only) (Contd)	
19-36	G214-7036152	BFAX1DG-1	CHB-AT1107	GUIDE, turret foot firing cable	1
19-36	G168-7635280		CHB-AAT2044	LATCH, turret foot firing mechanism	1
19-36	H001-4417731			PIN, cotter, split, S., cd-pltd., 1/8 x 1	3
19-1,36	G214-7036153		CHB-BAT4024	MECHANISM, foot firing, turret, assembly (Includes: cable, guide, latch, nuts, pedal, screws, spring, support, and washers)	1
19-36	G168-7035282	BBBX1C-1 BCBX1CG-1	CHB-AAT2046	PEDAL, turret foot firing mechanism	1
19-36	H001-4027541			NUT, regular, hex-hd., s-fin., S., cd-pltd., 3/8-24NF-2	2
19-36				SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 2	1
19-36	G168-7035279		CHB-XAT118	SPRING, turret foot firing mechanism cable	1
19-36	G168-7035281	BBWX1AA-1 BCVX2BL-1	CHB-XAT117	SPRING, turret foot firing mechanism latch	1
19-36	G168-7035278		CHB-AAT3040	SUPPORT, turret foot firing mechanism	1
19-36	H001-4039501			NUT, safety, S., cd-pltd., 1/4-28NF-3	4
19-36	H001-5418381			SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 1	4
19-36			CHB-AT1105	WASHER, turret foot firing mechanism latch	2
				1904—INSULATING AND PROTECTIVE PADS (Mk I; LVT (A) (1) only)	
	H001-4165540	B230182 BBBX1A-1 BEAX1H-1	GM-113740	NUT, turret gun shield seal clamping strip (hex., br., 5/16-18NC-2)	22
	G103-1733679			PAD, crash, turret right and left door	2
	H001-0718021			NUT, reg., hex., s-fin., S., cd-pltd., 1/4-28NF-2	12
	H001-1519009			WASHER, lock, internal teeth, reg., S., cd-pltd., 1/4 in.	12
19-1,2,5	G103-1733676	D60087		PAD, head, turret left door	1
19-1	G103-1733675	D60086		PAD, head, turret right door	1
	G134-0333660	A223129		PAD, turret flashlight bracket	1
	H001-1028136	BCNX4DG	GM-114407	SCREW, machine, rd-hd., br., 5/16-18NC-2 x 3/4 (upper and lower gun shield seals to turret)	20
	G103-1789649		CHB-AT3038	SEAL, rubber strip, turret door	16
			CHB-AT3038-1	SEAL, turret door (rubber)	2
			CHB-AT3038-2	SEAL, turret door (rubber)	2
			CHB-AT3038-3	SEAL, turret door (rubber)	1
			CHB-AT3038-4	SEAL, turret door (rubber)	1
			CHB-AT3038-5	SEAL, turret door (rubber)	1
			CHB-AT3038-6	SEAL, turret door (rubber)	1
			CHB-AT3030	SEAL, turret gun shield, lower (rubber)	1
	H001-4024560	BBAX1BG	GM-113740	NUT, regular, hex., s-fin., br., 5/16-18NC-2	11
	H001-1021139	BCKX4DK	GM-114423	SCREW, machine, fl-hd., br., 5/16-18NC-2 x 1	11
	H001-7043711	BEBX1H-1	GM-120393	WASHER, plain, S., cd-pltd., SAE std., 5/16 in.	11

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-4024560	BBAX1BG	CHB-AT3029	SEAL, turret gun shield, upper (rubber).....	1
	H001-1021139	BCKX4DK	GM-113740	NUT, regular, hex., s-fin., br., 5/16-18NC-2.....	11
	H001-7043711	BEBX1H-1	GM-114423	SCREW, machine, fl-hd., br., 5/16-18NC-2 x 1.....	11
	G214-7036116		GM-120393	WASHER, plain, S., cd-pltd., SAE std., 5/16 in.....	11
	G214-7036154		CHB-AT1056	STRIP, clamping, turret gun shield seal.....	5
	G214-7036155		CHB-AT2028	STRIP, clamping, turret gun shield seal, long.....	1
	G168-7035354		CHB-AT1057	STRIP, clamping, turret gun shield seal, short.....	1
	H001-7043711	BEBX1H-1	CHB-AT1034	STRIP, retaining, turret door crash pad.....	2
			GM-120393	WASHER, plain, S., cd-pltd., SAE std., 5/16 in. (upper and lower gun shield seals to turret).....	20

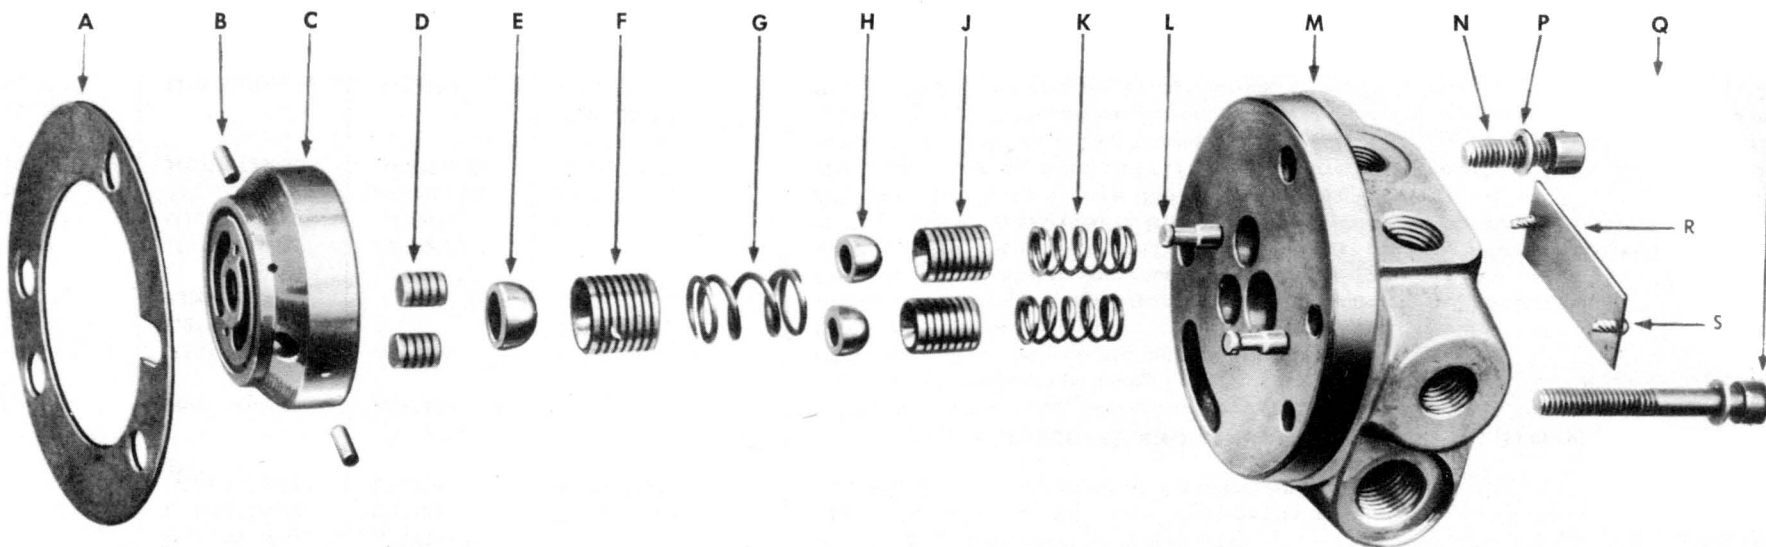

KEY	PART NAME	PART No.	GROUP
A	GASKET.....	A235567.....	1903E
B	PIN.....	A245584.....	1903E
C	VALVE.....	B220984.....	1903E
D	PISTON.....	A195979.....	1903E
E	TUMBLER.....	A244992.....	1903E
F	PISTON.....	A195971.....	1903E

KEY	PART NAME	PART No.	GROUP
G	SPRING.....	A235546.....	1903E
H	TUMBLER.....	A195972.....	1903E
J	PISTON.....	A195980.....	1903E
K	SPRING.....	A195973.....	1903E
L	PIN.....	A244991.....	1903E
M	HEAD.....	C92265.....	1903E

KEY	PART NAME	PART No.	GROUP
N	SCREW.....	A245579.....	1903E
P	GASKET.....	A244989.....	1903E
Q	WIRE.....	ACNX3.....	1903E
R	PLATE.....	B197531.....	2203
S	SCREW.....	B197562K.....	2203
T	SCREW.....	A235540.....	1903E

FIGURE 19-31—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP END HEAD AND VALVE—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

RA PD 341180

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1904—INSULATING AND PROTECTIVE PADS (Mk IV; LVT (A) (4) only) (Contd)	
	G168-7035316		CHB-AT2020	WEIGHT, balance, turret gun breech.....	as req.
	H001-4039501	BBWX1AA-1	GM-311907	NUT, safety, S., cd-pltd., 1/4-28NF-3.....	2
	H101-0124058	BCBX1AH-1	GM-124058	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-2 x 2 1/4.....	2
	G127-0333669	A293342		PAD, 75 mm. ammunition ready shell rack.....	6
	G104-1733802	C97329	FOM-P1348	PAD, shoulder, .50 cal. anti-aircraft machine gun mount, left.....	1
	G104-1733801	C97328	FOM-P1347	PAD, shoulder, .50 cal. anti-aircraft machine gun mount, right.....	1
				1905—PERISCOPES AND LINKAGE (Mk I; LVT (A) (1) only)	
19-38	H012-1402020	A213104		BEARING, ball, annular, shielded, single row, 0.787 bore, 1.850 O.D., 0.625 width (turret sighting periscope linkage).....	2
19-38	G103-1539977	A312109	CHB-XAT548	CONNECTOR, turret periscope linkage (5/8-18NF-2).....	1
19-38	G214-7036157		CHB-AAT3041	LINK, turret periscope linkage.....	1
19-2,3	2300-CAT-209		CHB-CAT209	LINKAGE, periscope, turret, assembly (Includes: connector, ball bearing, link, turn buckle, nuts, washers, ring, and stud).....	1
19-38	H001-4019621	BBDX2B-1		NUT, jam, hex., s-fin., S., cd-pltd., 5/8-18NF-2 (turret periscope linkage turnbuckle)....	1
19-38	G103-0802130	A206632	CHB-XAT527	NUT, jam, hex., S., 5/8-18NF-2, left hand thread (turret periscope linkage).....	1
19-38	M005-0101440	BBRX1AE	CHB-XAT529	NUT, lock, ball bearing, bore 0.7874 (turret periscope linkage).....	2
19-38	H001-0725680	BBSX4AE	CHB-XAT513	NUT, safety, hex-hd., S., cd-pltd., 1/2-20NF-3 (turret periscope linkage stud).....	1
			CHB-XAT524	SHIM, turret periscope linkage bearing.....	as req.
19-38			CHB-XAT525	SHIM, turret periscope linkage bearing.....	as req.
19-38	G104-0305530	A213106	CHB-XAT526	SNAP RING, turret periscope linkage bearing.....	2
19-38	G103-1792080	A263023	CHB-XAT528	STUD, turret periscope linkage.....	1
19-38	G103-1808300	A293596	CHB-AT1040	TURNBUCKLE, turret periscope linkage.....	1
19-38	M005-0259020	BEFX1AE		WASHER, lock, ball bearing, S., bore 0.801, 0.7874 bearing bore (turret periscope linkage ball bearing).....	2
	G167-0333600	A293184	FOM-P533	WASHER, lock, ext-internal-teeth, S., cd-pltd., 1/4 in. (SK-4014-20) (turret periscope)...	2
	H001-1530011	BEBX1M	CHB-XAT530	WASHER, plain, SAE std., S., 1/2 in. (turret periscope linkage stud).....	1
				1905-1—ROTATING PERISCOPES (Mk I; LVT (A) (1) only)	
19-37	G103-1501812	C97209	FOM-2X1933C	ADAPTER, turret rotating periscope housing.....	4
19-37	G103-1518022	A227831	FOM-P1113	BEARING, turret rotating periscope holder (graphited bz., 1/16 wall, split type, 1/2 I.D. x 5/8 O.D. x 7/16 in. long) (CGB-405C).....	4
	G168-7035346		CHB-AT2026	CLIP, turret rotating periscope holder.....	2
	G104-2137983	A248086B	FOM-P1085	CLIP, turret rotating periscope holder, left.....	2
		BCNX1DB-1	FOM-P1178	SCREW, machine, rd-hd., S., cd-pltd., No. 5 (0.125)-40NC-3 x 1/4.....	8
	H001-7021621	BEAX1D-1	FOM-P539	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 6 (0.138).....	8

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G104-2137982	A248086A	FOM-P1084	CLIP, turret rotating periscope holder, right.....	2
		BCNX1DB-1	FOM-P1178	SCREW, machine, rd-hd., S., cd-pltd., No. 5 (0.125)-40NC-3 x 1/4.....	8
	H001-7021621	BEAX1D-1	FOM-P539	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 6 (0.138).....	8
	G168-7039471		FOM-2X1932C	COVER, turret rotating periscope.....	4
			FOM-P1169	SCREW, machine, oval-fil-hd., cross recess type, br., 1/4-20NC-3 x 5/8.....	6
19-5,37	H001-1522007	BEBX1BG	FOM-P160	WASHER, plain, br., SAE std., 1/4 in.....	6
19-37	G104-1555302	B257848	FOM-P801	DOOR, turret rotating periscope housing, assembly.....	2
19-37	H001-7021681	BEAX1F-1	FOM-P1177	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 5/16.....	4
	G168-7039472		FOM-P36	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 10 (0.190).....	4
19-37	G168-7039471		FOM-2X2838B	GASKET, turret rotating periscope cover.....	2
			FOM-2X1409B	GASKET, turret rotating periscope housing adapter filler ring (rubber, 1/8 in. thk.).....	2


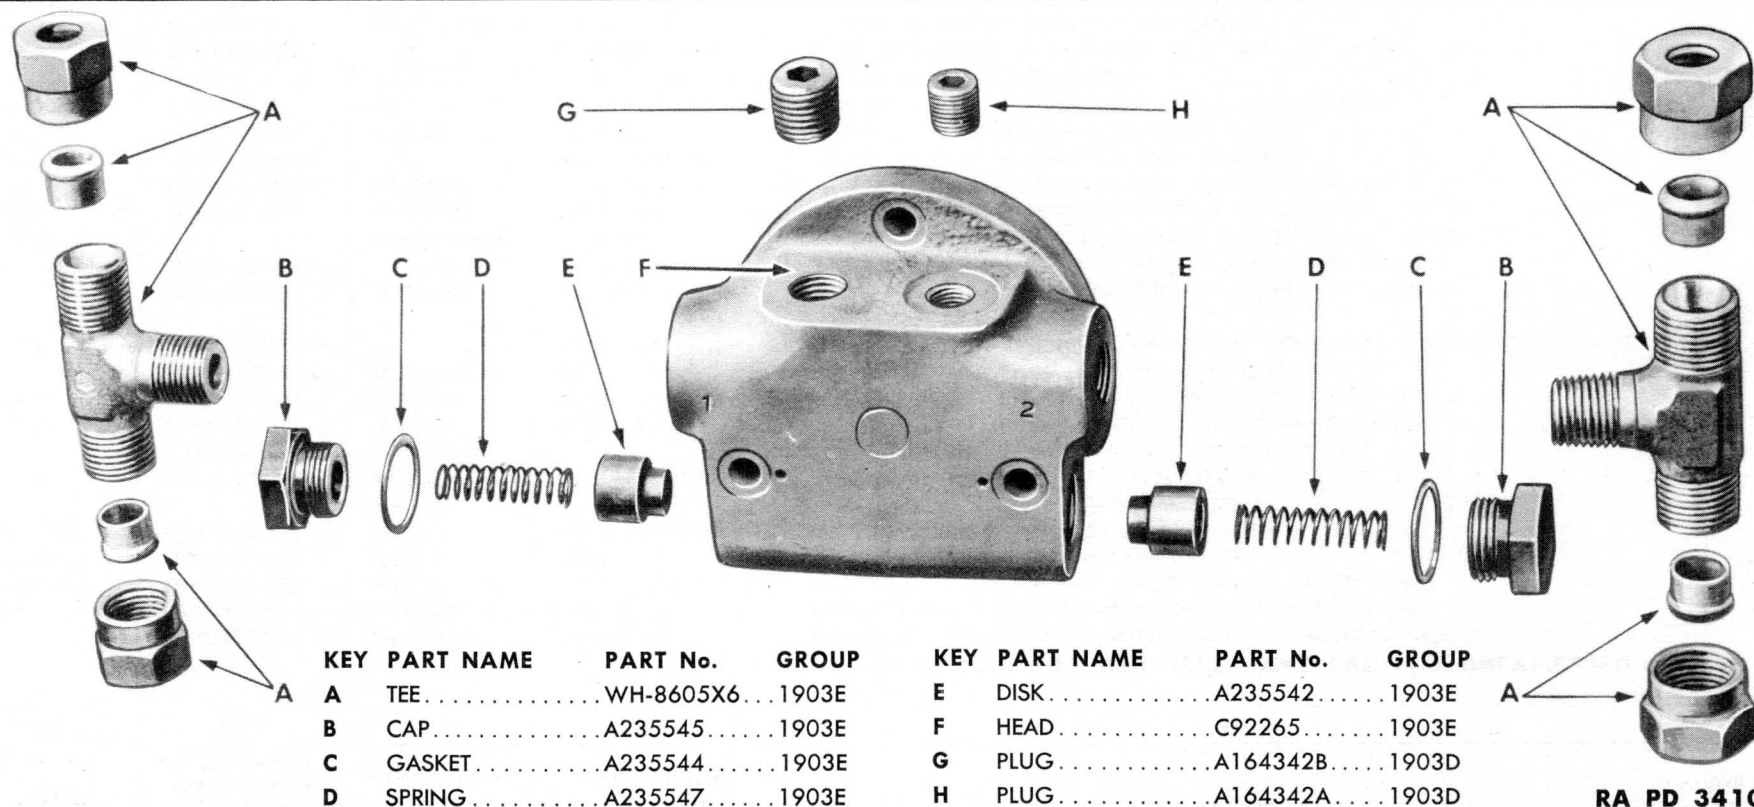


FIGURE 19-32—TURRET TRAVERSING MECHANISM VARIABLE DISPLACEMENT PUMP END HEAD AND CHECK VALVES—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1905-1—ROTATING PERISCOPES (Mk I; LVT (A) (1) ONLY) (Contd)	
	G197-7008462	A348044B	FOM-P798	GASKET, turret rotating periscope housing bottom segment (felt).....	4
19-37	G103-1738452	A226815	FOM-P799	GASKET, turret rotating periscope housing top segment (felt).....	2
19-5	G103-1614017	A228028	FOM-P1111	HINGE, turret rotating and sighting periscope housing door.....	3
19-3,37	G103-1617701	C96670	FOM-P561	HOLDER, turret rotating periscope (bronze).....	2
19-3,5,37	G104-1617710	C97292	FOM-20X1965D	HOUSING, turret rotating periscope, assembly.....	2
		A293200		NUT, safety, reg., S., cd-pltd., 3/8-24NF-2.....	4
	H001-5027111	BCBX1CA-1	CHB-XAT505	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4.....	4
	G163-0443069	A293155		WASHER, plain, reg., S., cd-pltd., SAE std., 3/8 in.....	4
19-37	G104-0303373	A226797	FOM-P1185	KNOB, adjuster, turret rotating and sighting periscope holder.....	3
19-5,37	G103-1663904	A265219	FOM-P800	KNOB, adjuster, turret rotating periscope housing segment.....	2
	H001-1026537	BCGX1.1DL	FOM-P1137	SCREW, machine, oval-fil-hd., S., 1/4-28NF-2 x 1.....	2
19-1	G214-7036158		FOM-21X1411B	PERISCOPE, rotating, turret, assembly (Includes: cover, gasket, housing assembly, screws, and washers).....	2
	G103-1738513	A228029	FOM-P803	PIN, turret rotating and sighting periscope housing door hinge.....	3
19-37	G103-1767661	A226798	FOM-P1187	PLATE, guide, turret rotating periscope holder adjuster knob.....	2
19-37		BCGX3DF-1	FOM-P1179	SCREW, machine, oval-fil-hd., S., No. 5 (0.125)-44NF-3 x 3/8.....	2
19-37	H001-1519004	BEAX1D	FOM-P539	WASHER, lock, internal teeth, reg., S., No. 6 (0.138).....	2
19-37	G103-1737453	A265218	FOM-P1186	PLATE, turret rotating periscope housing segment knob.....	2
19-37	G168-7039470		FOM-2X1410B	RING, filler, turret rotating periscope mounting.....	2
19-5,37	G103-1769674	C97211	FOM-P548	RING, turret rotating periscope housing adapter.....	4
19-37	G104-1781743	A245256	FOM-P549	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 1/2.....	16
19-37	H001-1518007	BECX1G	FOM-P926	WASHER, lock, reg., S., 1/4 in.....	16
19-37	G103-1783260	C96667A	FOM-P1126	SEGMENT, turret rotating periscope housing, bottom, left.....	2
19-37	H001-1023794	BCLX1.1EL	FOM-P1180	SCREW, machine, fl-hd., S., 3/8-24NF-2 x 1.....	8
19-37	H001-1521007	BEAX4G	FOM-P1165	WASHER, lock, external teeth, countersunk, S., 3/8 in.....	8
19-37	G103-1783270	C96667B	FOM-P1188	SEGMENT, turret rotating periscope housing, bottom, right.....	2
19-37	H001-1023794	BCLX1.1EL	FOM-P1180	SCREW, machine, fl-hd., S., 3/8-24NF-2 x 1.....	8
19-37	H001-1521007	BEAX4G	FOM-P1165	WASHER, lock, external teeth, countersunk, 3/8 in.....	8
19-37	G103-1783276	C96668	FOM-P1189	SEGMENT, turret rotating periscope housing, top.....	2
19-3,37	G104-1784846	C107366	FOM-P551	SHIELD, sight, turret rotating periscope holder.....	2
19-37	G103-1781754	A266406	FOM-P552	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 3/8.....	4
19-37	G170-0443048	A246608H	FOM-P1173	WASHER, lock, internal-external-teeth, reg., S., 1/4 in.....	4
19-37				SHIM, turret rotating periscope housing top segment.....	8
19-5	G214-5308212	A308212		SPRING, turret rotating and sighting periscope housing door.....	3
19-37	G104-2447740	A248087	FOM-P550 FOM-P1088	WASHER, lock, 1/4 in. (special) (turret rotating periscope).....	16
				WIPER, turret rotating periscope.....	2


KEY	PART NAME	PART No.	GROUP
A	ELBOW.....	WH-8355X6...	1903D
B	CONNECTOR.....	WH-8205X6...	1903F
C	ELBOW.....	WH-8405X6...	1903E
D	POT.....	D78250.....	1903F
E	SCREEN.....	A195995.....	1903F
F	NIPPLE.....	A195996.....	1903F
G	STICK.....	A195997.....	1903F
H	RING.....	A244960.....	1903F
J	WASHER.....	A244959.....	1903F
K	CAP.....	A244958.....	1903F

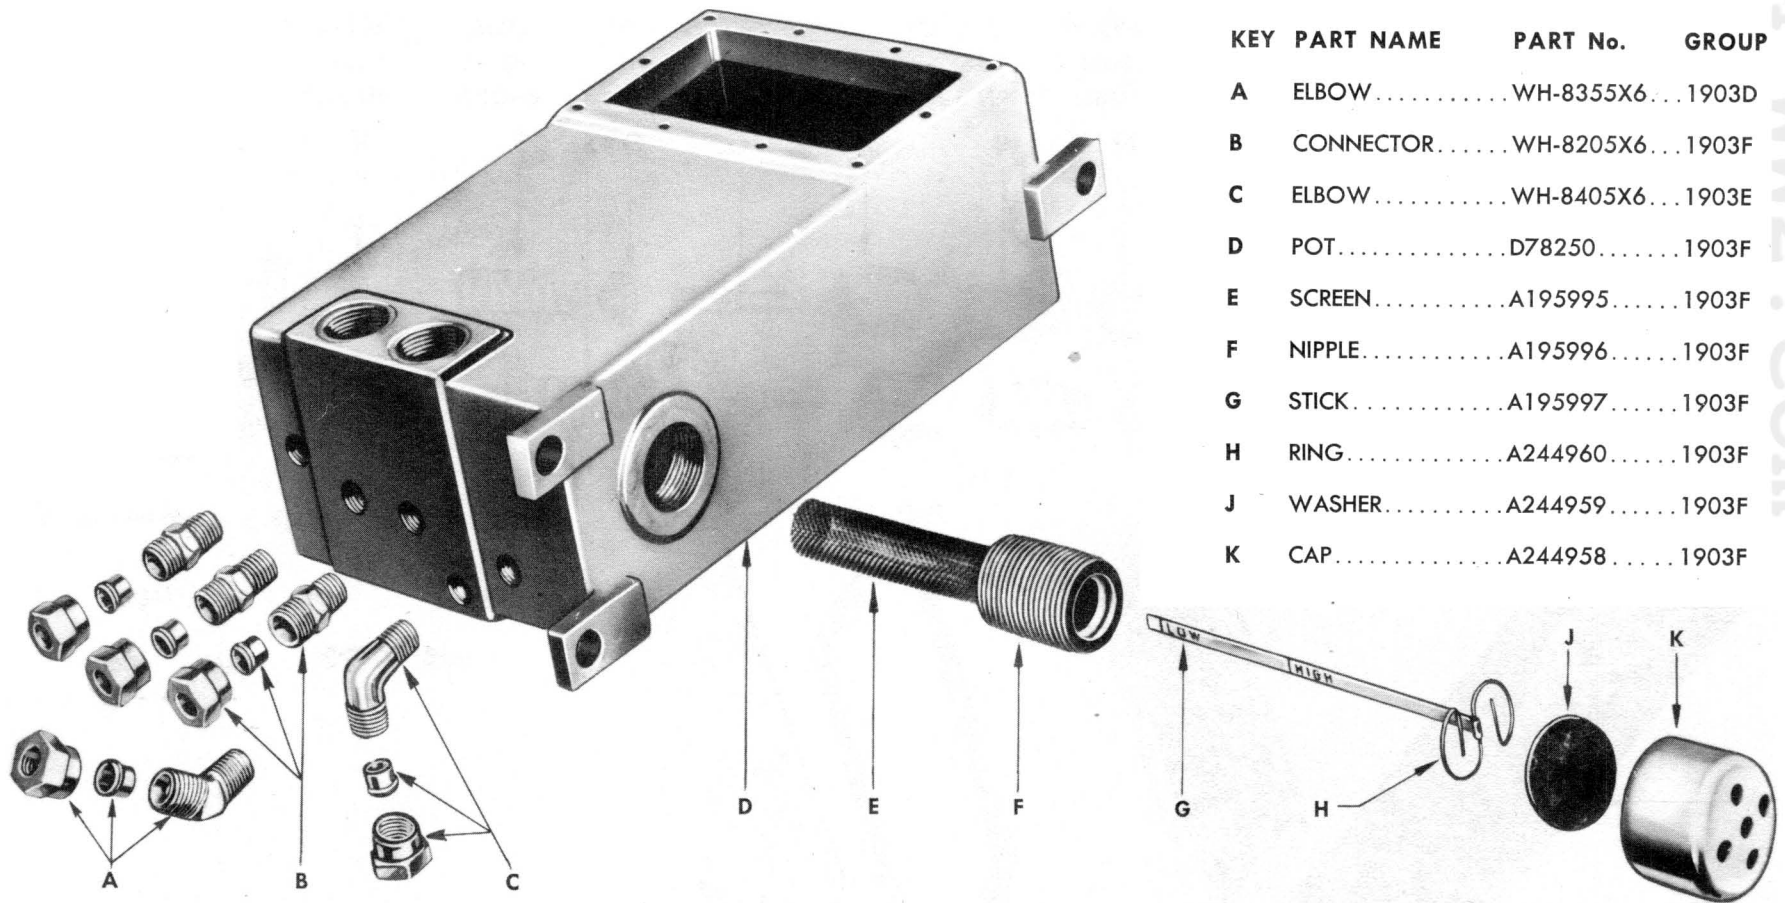

RA PD 341069

**FIGURE 19-33—TURRET TRAVERSING MECHANISM OIL POT, FILLER, STRAINER, AND FITTINGS—
EXPLODED VIEW (MK I; LVT (A) (1) ONLY)**

GROUP 19—TURRET

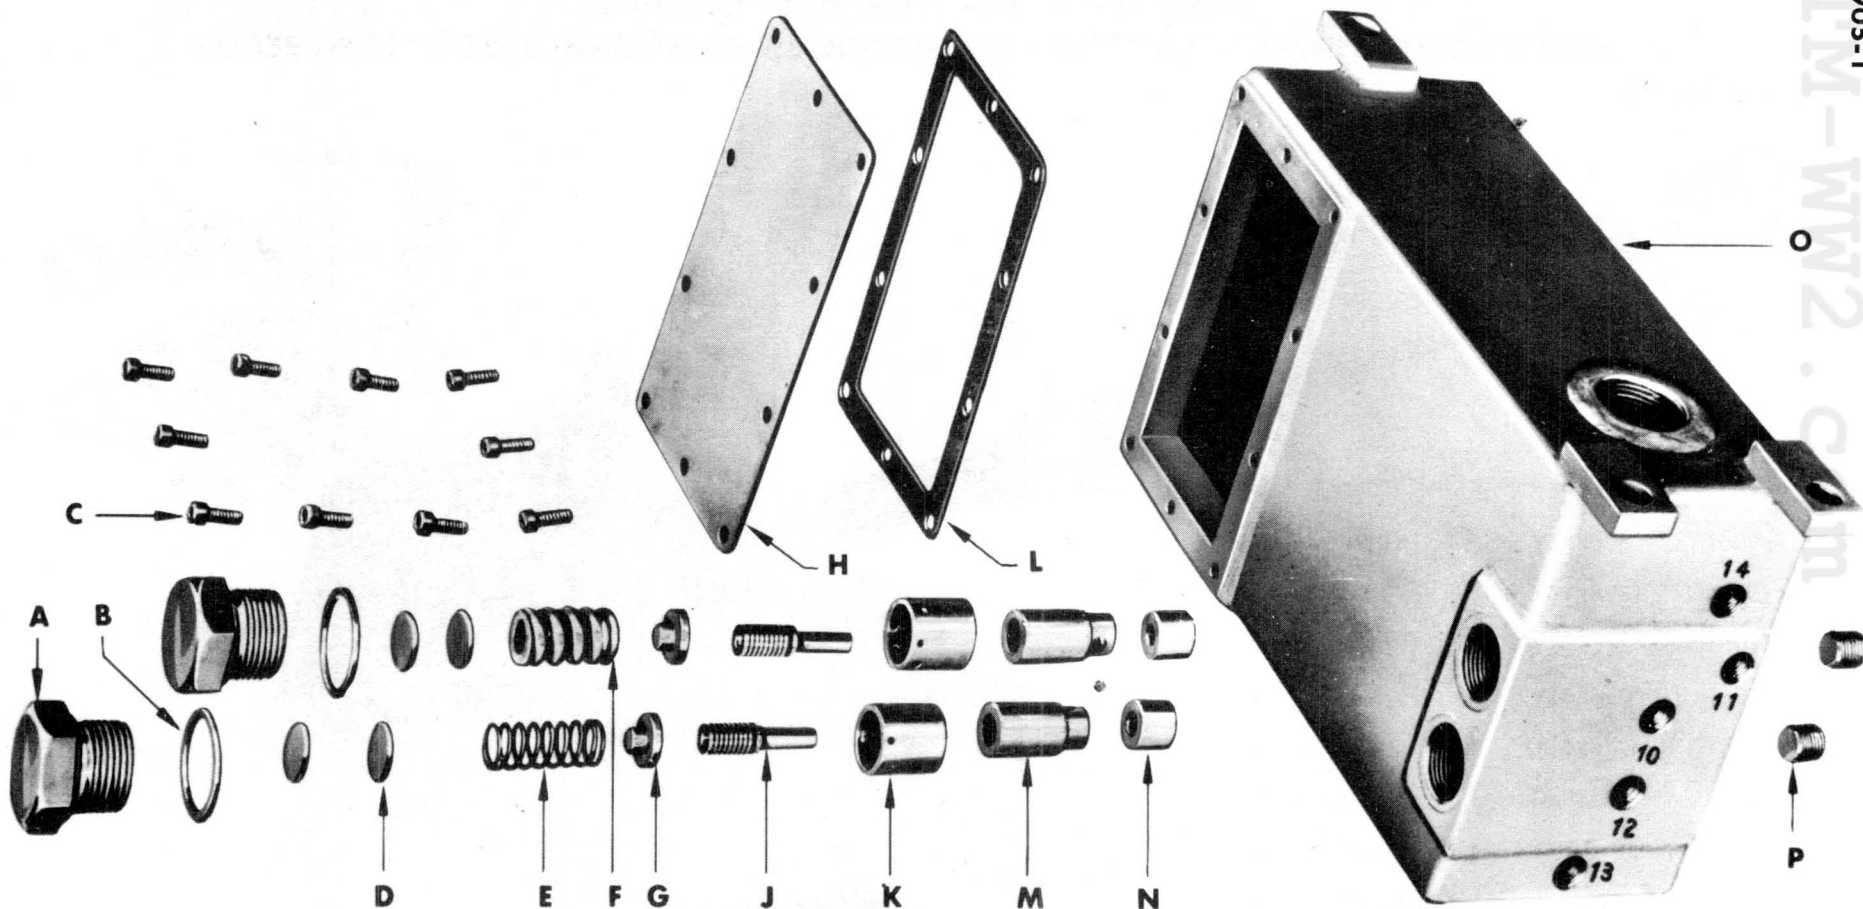


KEY	PART NAME	PART No.	GROUP
A	CAP.....	A244954.....	1903F
B	GASKET.....	A244949.....	1903E
C	SCREW.....	BCWX3AB.....	1903E
D	SHIM.....	A244967.....	1903E
E	SPRING.....	A244955.....	1903E

KEY	PART NAME	PART No.	GROUP
F	SPRING.....	A244950.....	1903E
G	GUIDE.....	A244952.....	1903E
H	COVER.....	A345674.....	1903F
J	PLUNGER.....	A244953.....	1903E
K	RETAINER.....	A244951.....	1903E

KEY	PART NAME	PART No.	GROUP
L	GASKET.....	A7002661.....	1903F
M	BUSHING.....	A244956.....	1903E
N	SEAT.....	A244957.....	1903E
O	POT.....	D78250.....	1903F
P	PLUG.....	A164342B.....	1903D

RA PD 341070

FIGURE 19-34—TURRET TRAVERSING MECHANISM OIL POT, RELIEF VALVE, AND INSPECTION COVER—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

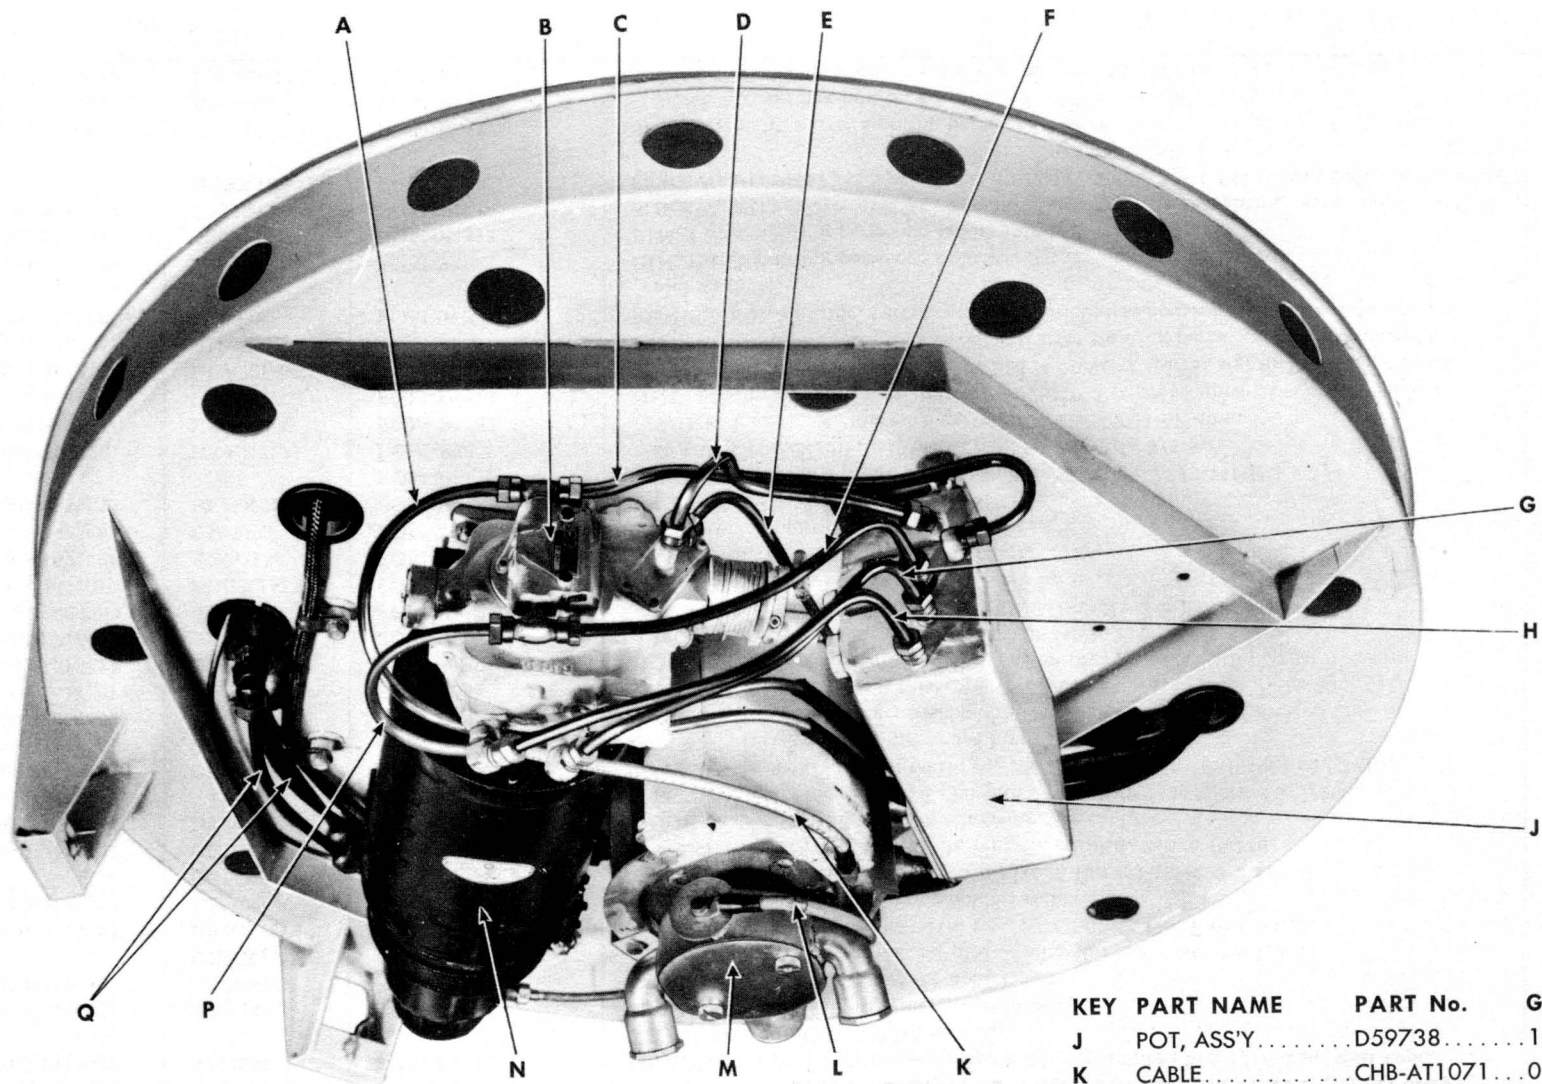

KEY	PART NAME	PART No.	GROUP
A	TUBE, ASS'Y.....	A312184D.....	1903G
B	PUMP, ASS'Y.....	D59967.....	1903E
C	TUBE.....	A266137K.....	1903G
D	TUBE.....	A266137D.....	1903G

KEY	PART NAME	PART No.	GROUP
E	TUBE, ASS'Y.....	A312184C.....	1903G
F	TUBE.....	A266137L.....	1903G
G	TUBE.....	A266137G.....	1903G
H	TUBE.....	A266137H.....	1903G

KEY	PART NAME	PART No.	GROUP
J	POT, ASS'Y.....	D59738.....	1903F
K	CABLE.....	CHB-AT1071...	0613F
L	CABLE.....	CHB-AT1071...	0613F
M	SLIP RING, ASS'Y...	CHB-XAT114...	0613
N	MOTOR, ASS'Y....	CHB-XAT101...	1903E
P	TUBE.....	A312184B.....	1903G
Q	TUBING.....		1903G


RA PD 341071

FIGURE 19-35—TURRET TRAVERSING MECHANISM TUBES—INSTALLED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1905-2—SIGHTING PERISCOPES (Mk I; LVT (A) (1) only)	
19-37	G103-1518022	A227831	FOM-P1113	BEARING, turret sighting periscope holder (graphited bz., 1/16 wall, split type, 1/2 I.D. x 5/8 O.D. x 7/16 in. long)	2
	H012-0710051	B201146	FOM-P1183	BEARING, turret sighting periscope housing	2
	G104-2137983	A248086B	FOM-P1085	CLIP, turret sighting periscope holder, left	1
		BCNX1DB-1	FOM-P1178	SCREW, machine, rd-hd., cd-pltd., No. 5 (0.125)-40NC-3 x 1/4	4
	H001-7021621	BEAX1D-1	FOM-P539	WASHER, lock, internal-teeth, reg., S., cd-pltd., No. 6 (0.138)	4
	G104-2137982	A248086A	FOM-P1084	CLIP, turret sighting periscope holder, right	1
		BCNX1DB-1	FOM-P1178	SCREW, machine, rd-hd., cd-pltd., No. 5 (0.125)-40NC-3 x 1/4	4
	H001-7021621	BEAX1D-1	FOM-P539	WASHER, lock, internal-teeth, reg., S., cd-pltd., No. 6 (0.138)	4
19-5,37	G104-1555302	B257848	FOM-P801	DOOR, turret sighting periscope housing, assembly	1
19-37			FOM-P1177	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 5/16	2
19-37	H001-7021681	BEAX1F-1	FOM-P36	WASHER, lock, internal-teeth, reg., S., cd-pltd., No. 10 (0.190) and 3/16	2
	G103-1593641	B229520	FOM-P829	GASKET, turret sighting periscope housing	1
	G197-7008462	A348044B	FOM-P798	GASKET, turret sighting periscope housing bottom segment (felt)	2
19-2,37	G103-1617701	C96670	FOM-P561	HOLDER, turret sighting periscope (bronze)	1
19-2,5,37	G103-1618024	B201190	FOM-90X1021D	HOUSING, turret sighting periscope, assembly	1
	H001-0718023	BBBX1C-1	FOM-P60	NUT, reg., hex., s-fin., S., cd-pltd., 3/8-24NF-2	6
	H001-1023797	A311919	FOM-P830	SCREW, machine, fl-hd., S., cd-pltd., 3/8-24NF-3 x 1 1/2	6
	H001-1519011	BECX1K-1	FOM-P941	WASHER, lock, reg., S., cd-pltd., 3/8 in.	6
	G103-1671704	A265215	FOM-P1116	LATCH, turret sighting periscope holder	1
	G103-1676403	C106393	FOM-P1115	LINK, turret sighting periscope	1
	H001-0830073	BFDX5R	FOM-P1181	PIN, straight, drill rod, 0.250 x 5/8	2
			FOM-P1176	SCREW, cap, hex-hd., S., cd-pltd., dld. f/lkg-wire, 3/8-24NF-3 x 3/4	2
	H001-7021801	BEAX1L-1	FOM-P28	WASHER, lock, internal teeth, reg., S., cd-pltd., 3/8 in.	2
	22W-1642100	BFWX1A	FOM-P1182	WIRE, locking, S., low carbon, bright anld., 0.041 in. diam.	as req.
	H001-4019501	BBDX1A-1	FOM-P1112	NUT, jam, hex., s-fin., S., cd-pltd., 1/4-28NF-3 (turret sighting periscope holder)	2
	H001-4026501	BBAX1A-1	FOM-P45	NUT, regular, hex., s-fin., S., cd-pltd., 1/4-20NC-2 (turret sighting periscope link)	2
	H001-0725853	BBWX1CA-1		NUT, safety, S., cd-pltd., 3/8-24NF-3 (turret sighting periscope holder segment)	2
19-1	G104-2137983	D50897	FOM-91X1019B	PERISCOPE, sighting, turret, assembly (Includes: housing assembly, nuts, screws, and washers)	1
	G104-2338656	A292945	FOM-P1086	PIN, turret sighting periscope holder	2
	G103-1738547	A265216	FOM-P1117	PIN, turret sighting periscope holder latch	2
	G103-2381997	A292947	FOM-P1114	SCREW, set, hex-hd., oval-pt., 1/4-28NF-3 x 7/8 (turret sighting periscope holder)	2
		BCSX1AF-1	FOM-P1175	SCREW, set, sq-hd., oval-pt., S., cd-pltd., 1/4-20NC-3 x 1 1/4 (turret sighting periscope link)	2
19-2,37	G104-1784846	C107366	FOM-P551	SHIELD, sight, turret sighting periscope holder	1
19-37	H001-1913220	A266406	FOM-P552	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 3/8	2
19-37	G170-0443048	A246608H	FOM-P1173	WASHER, lock, external teeth, reg., S., cd-pltd., 1/4 in.	2

KEY PART NAME	PART NO.	GROUP
A PEDAL.....	CHB-AAT2046.....	1903H
B NUT.....	BBBX1C-1.....	1903H
C WASHER.....	CHB-AT1105.....	1903H
D SPRING.....	CHB-XAT117.....	1903H
E PIN.....	BFAX1DG-1.....	1903H
F LATCH.....	CHB-AAT2044.....	1903H
G CABLE.....	B110622.....	1903H
H SUPPORT.....	CHB-AAT3040.....	1903H
J SCREW.....	BCSX1AC-1.....	1903H
K NUT.....	BBWX1AA-1.....	1903H
L SCREW.....	BCVX2BL-1.....	1901
M SPRING.....	CHB-XAT118.....	1903H
N NUT.....	BBBX1A-1.....	1903H
P SCREW.....	BCBX1CG-1.....	1903H

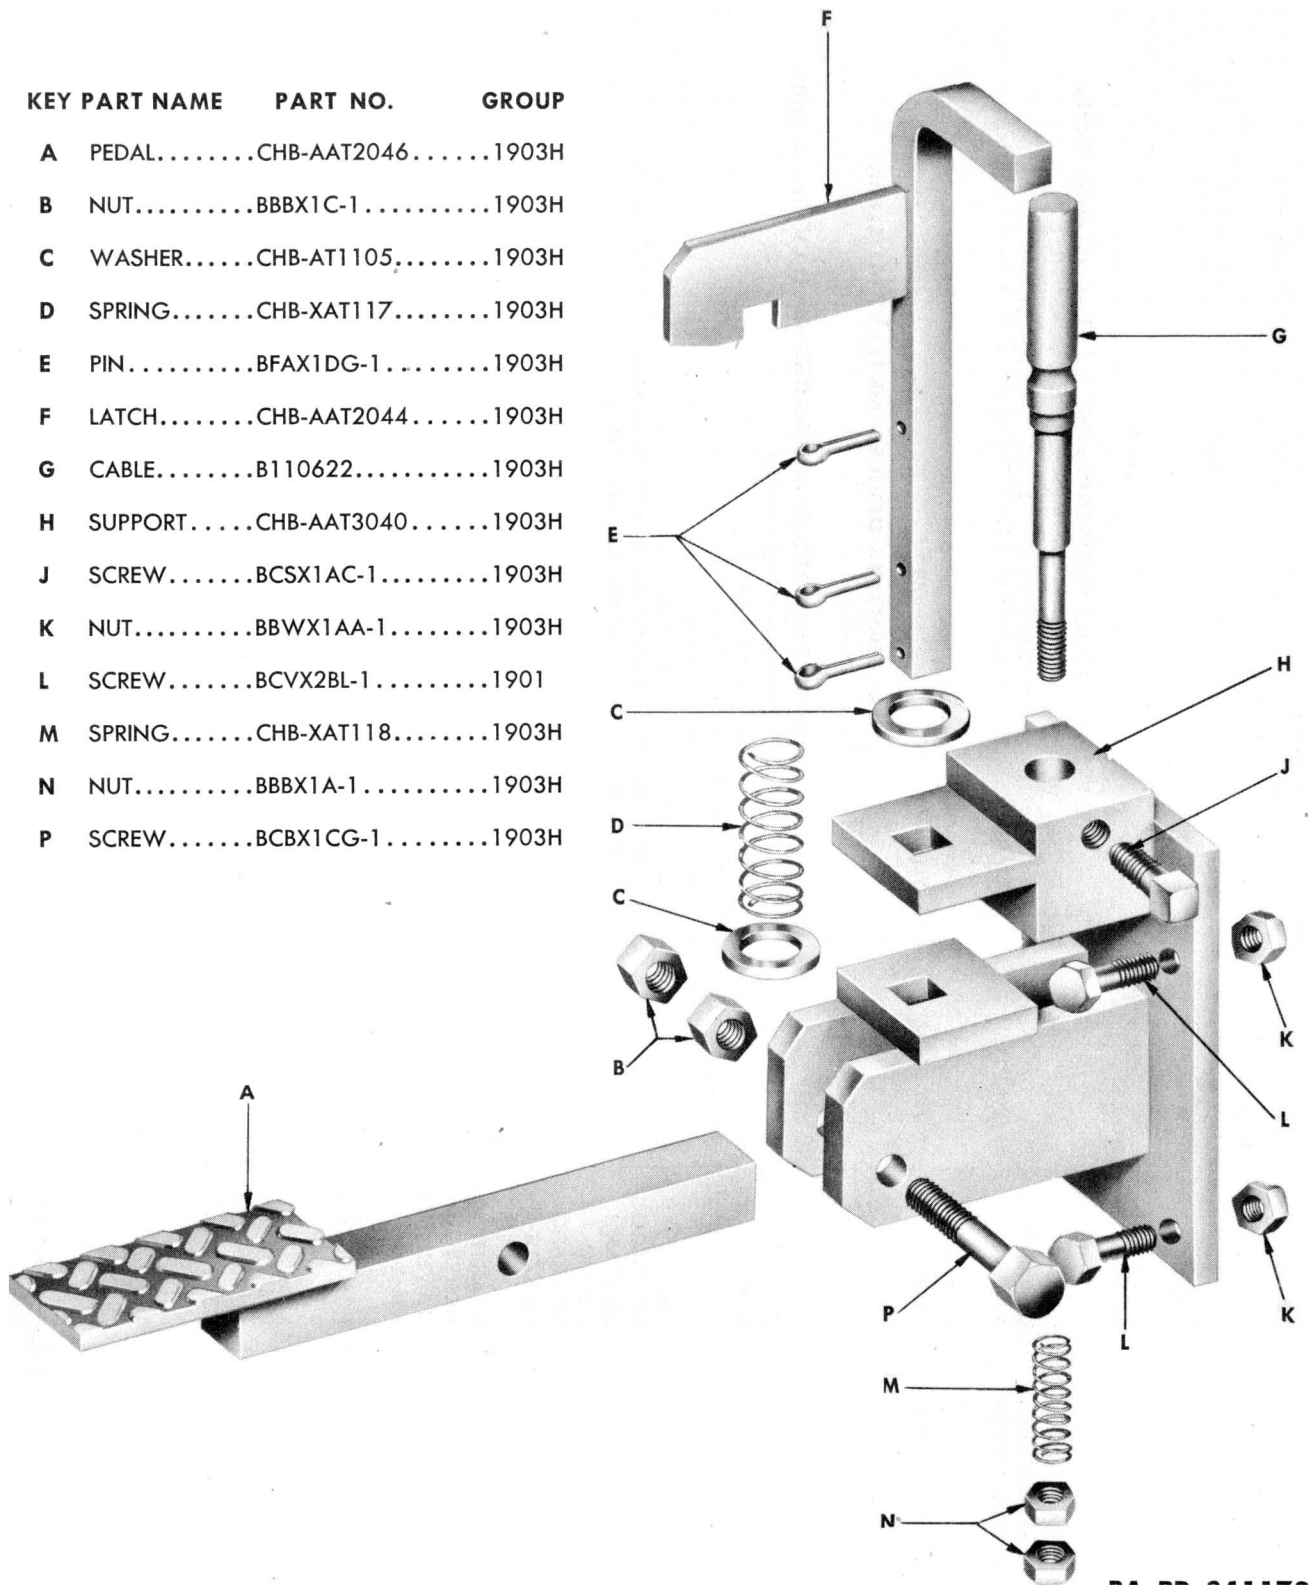

RA PD 341172

**FIGURE 19-36—FOOT FIRING MECHANISM—EXPLODED
VIEW (MK I; LVT (A) (1) ONLY)**

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-37	G103-1784963	B230319A	FOM-P1121	1905-2—SIGHTING PERISCOPES (Mk I; LVT (A) (1) only) (Contd)	
	G103-1784964	B230319B		SHIM, turret sighting periscope housing.....	as req.
	G103-1842738	A265217		SHIM, turret sighting periscope housing.....	as req.
		A348045	FOM-P1088	WASHER, spring, S., 0.260 I.D. x 1/2 O.D. x 0.047 in. thick (turret sighting periscope holder).....	1
	G104-2447740	A248087		WASHER, turret sighting periscope mount (felt).....	1
				WIPER, turret sighting periscope.....	1
			CHB-AT1016	1905A—SIGHTING DEVICES (Mk I; LVT (A) (1) only)	
				WASHER, rubber, telescope.....	1
				1906—AMMUNITION BOXES AND RACKS (Mk I; LVT (A) (1) only)	
19-1	M008-0100008	C105754	FOM-90X1007B	BAG, .30 cal. machine gun empty cartridge.....	1
	M008-0100007	D59945		BAG, 37 mm. gun empty cartridge.....	1
	G214-7036159			BOX, ammunition, .30 cal.....	2
19-1	G214-7032796		FOM-91X1001D	BOX, ammunition, 37 mm.....	2
	G103-1524407	D59764		BOX, grenade, fragmentation.....	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-2 x 5/8.....	2
	H001-7043741	BEBX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.....	2
19-1,4	G103-1524403	C105882		BOX, grenade, smoke and thermite.....	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-2 x 5/8.....	2
		BEBX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.....	2
	H001-7043741		CHB-XAT511	LATCH, turret ammunition box support.....	1
	2300-XAT511		GM-112726	PIN, cotter, split, S., cd-pltd., 1/16 x 1/2.....	1
	H001-4417121	BFAX1BC-1	GM-120392	WASHER, plain, S., cd-pltd., SAE std., 1/4 in.....	2
	H001-7043681	BEBX1G-1		NUT, safety, S., cd pltd., 3/8-24NF-3 (ammunition box support to turret).....	1
	H001-4039541	BBWX1CA-1		PIN, turret ammunition box latch.....	1
	G103-1738561	A266244	CHB-XAT503	RING, holding, cartridge bag.....	2
			GM-120677	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 1 1/2 (ammunition box support to turret).....	1
	H001-5027151	BCBX1CE-1	CHB-AAT1083	SCREW, locking, turret ammunition box.....	2
				SUPPORT, turret ammunition box.....	1
	A055-5605718	C105718		SCREW, ext-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-2 x 5/8.....	2
		BCYX6GG-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.....	2
	H001-7043741	BEBX1K-1			
				1906—AMMUNITION RACKS AND BOXES (Mk IV; LVT (A) (4) only)	
	A055-0115990	A265350	FOM-P1462	BAR, spring, .50 cal. anti-aircraft machine gun ammunition box.....	1
	G103-1524442	D60365	FOM-91X1028D	BOX, flares and projector.....	1
			FOM-P1320	SCREW, cap, hex-hd., S., 7/16-20NF-3 x 3/4.....	2
	H001-1518010		FOM-P934	WASHER, reg., S., SAE std., 7/16 in.....	2

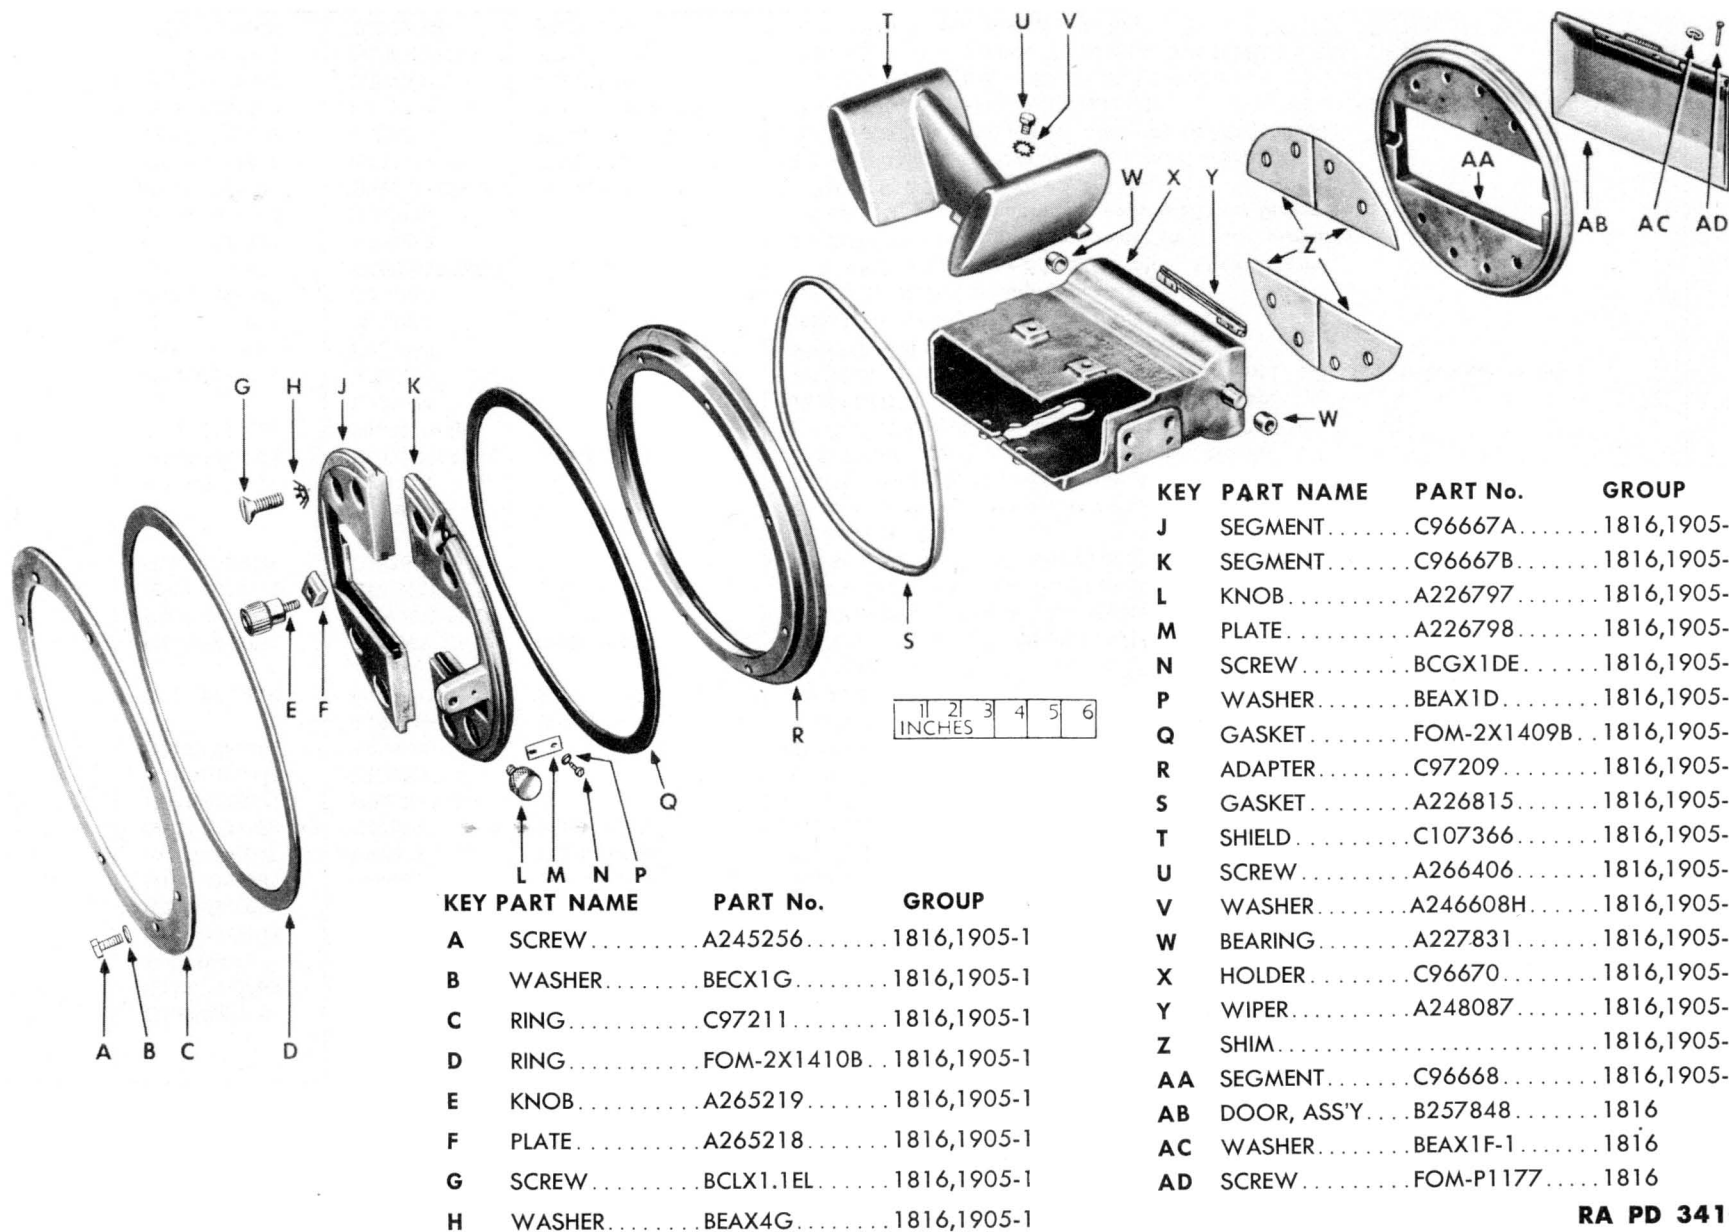



FIGURE 19-37—PERISCOPE HOUSING ASSEMBLY—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

RA PD 341072

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G168-7037067		FOM-21X1991D	1906—AMMUNITION RACKS AND BOXES (Mk I; LVT (A) (4) only) (Contd)	
	G168-7037068		FOM-90X1022D	BOX, ration, turret, assembly.....	1
	4450-P1031		FOM-P1031	BOX, 75 mm. ammunition.....	4
	H001-1518011		FOM-P986	NUT, hex., jam, s-fin., S., 1/2-13NC-2.....	16
	A032-0300055	C108139	CAD-3600863	WASHER, reg., S., SAE std., 1/2 in.....	16
	G127-0124535	D60012	FOM-P1273	BOX, .45 cal. ammunition, assembly.....	1
	A037-0300001	D68375	FOM-P1343	BOX, .45 cal. ammunition (CAD-3600668).....	1
	G103-2124538	C108197	FOM-P1505	BOX, .50 cal. anti-aircraft machine gun ammunition.....	6
	H001-0116277	BAOX1EC-1		BOX, grenade (CAD-3600909).....	2
	H101-0180447	BEAX3E-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-2 x 1.....	2
	G214-5266308	A266308		WASHER, lock, internal teeth, hv., S., 1/2 in.....	2
		A293449	GM-178458	BRACKET, .45 cal. ammunition box handle.....	2
	G127-0125810	C107602	FOM-P1350	RIVET, wagon, box-hd., S., 1/8 x 3/8 in.....	12
				BRACKET, .50 cal. anti-aircraft machine gun ammunition box, assembly (CAD-3600498).....	1
	H001-5467561	BBTX1DB-1	GM-120368	NUT, reg., hex., S., cd-pltd., 5/16-24NF-2.....	3
	H001-5419821	BCVX2DH-1		SCREW, cap, hex-hd., S., cd-pltd., 5/16-24NF-2 x 3/4.....	3
	H001-7025711	BECX1H-1	GM-120214	WASHER, lock, reg., S., cd-pltd., 5/16 in.....	3
	G103-1525821	B183616A		BRACKET, latch, .45 cal. ammunition box cover, assembly (3), pamphlet storage box cover (1).....	4
		B293610		CLAMP, .50 cal. ammunition rack, assembly.....	3
	A055-0138147	A265321		CLIP, spring, .50 cal. ammunition box.....	2
	H001-5148851	BCOX1.1AF-1	GM-132908	SCREW, machine, rd-hd., S., cd-pltd., No. 10.....	2
	H001-7025621	BECX1E-1		WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
		B229944		FASTENER, 75 mm. ammunition rack, assembly.....	6
	G103-1614004	A266212		HINGE, .45 cal. ammunition box cover, assembly (4), grenade box covers (4).....	8
	G200-6258943	B258943		HINGE, .50 cal. ammunition rack, assembly.....	3
	G214-6293611	B293611		HOLDER, clamp, .50 cal. ammunition rack.....	3
	G245-5293645	A293645		LATCH, 75 mm. ammunition rack spacer.....	10
	G103-1769974	BMCX1BBE-1	GM-178457	RIVET, wagon, box-hd., S., cd-pltd., 1/8 x 5/16 in.....	20
	G127-6229988	B229988		LATCH, 75 mm. ammunition ready shell rack, assembly.....	2
	G104-1674191	B200225		LEVER, 75 mm. ammunition ready shell rack fastener.....	6
	H001-0926040	BMCX1CBW	GM-104227	RIVET, fl-hd., S., 1/8 x 1 1/4 in.....	6
	G214-5614357	C114357	CAD-3600967	PLATFORM, .50 cal. ammunition rack, assembly.....	2
	G214-6575932	D75932	FOM-91X1057D	RACK, .50 cal. ammunition, assembly (CAD-3600968).....	2
	G127-0364889	C107752	FOM-91X1070D	RACK, 75 mm. ready shell, assembly.....	1
	H001-0718003	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	6
	H001-5420521	BCVX2EH-1	FOM-P421	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4.....	6
	H001-1518009	BECX1K	FOM-P941	WASHER, lock, reg., S., 3/8 in.....	6

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-1,4			FOM-P1491	SLIDE, 75 mm. ammunition box strap.....	8
			FOM-91X1024B	STRAP, 75 mm. ammunition box.....	4
			FOM-P1480	STRAP, 75 mm. ammunition box, w/BUCKLE, assembly.....	4
				1907—TURRET MISCELLANEOUS STOWAGE (Mk I; LVT (A) (1) only)	
	G103-1515801	D59774		BAG, cleaning staff.....	1
	G103-1524434	E5067		BOX, turret periscope.....	2
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, S., cd-pltd., 3/8-24NF-2 x 5/8.....	6
		BEBX1K-1		WASHER, plain, S., cd-pltd., SAE std., 3/8 in.....	6
	H001-7043741		CHB-XAT509	CLIP, retaining, map, turret (plated).....	4
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-2 x 5/8.....	4
19-1	G214-5605887	C105887		CONTAINER, stowage, lubrication gun.....	1
	G214-7036161		CHB-AT2041	HOLDER, card, turret	
	H101-0178469	BCYX3ED-1		SCREW, ext-teeth-lockwasher, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-2 x 3/8.....	2
	G214-7036162		CHB-AAT1076	HOOK, turret radio head set.....	2
	H001-4135681		GM-120614	NUT, regular, hex., S., cd-pltd., No. 10 (0.190)-32NF-2.....	2
	H001-7021681	BEAX1F-1	GM-121801	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 10 (0.190).....	2
	G103-1576454	B194460		HOSE, turret gun recoil mechanism and gun mount oil, w/SPOUT, assembly.....	1
	G103-1764803	C105900		RACK, oil, turret recoil mechanism and stabilizer.....	1
		BCYX6GG-1		SCREW, ext-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-2 x 5/8.....	2

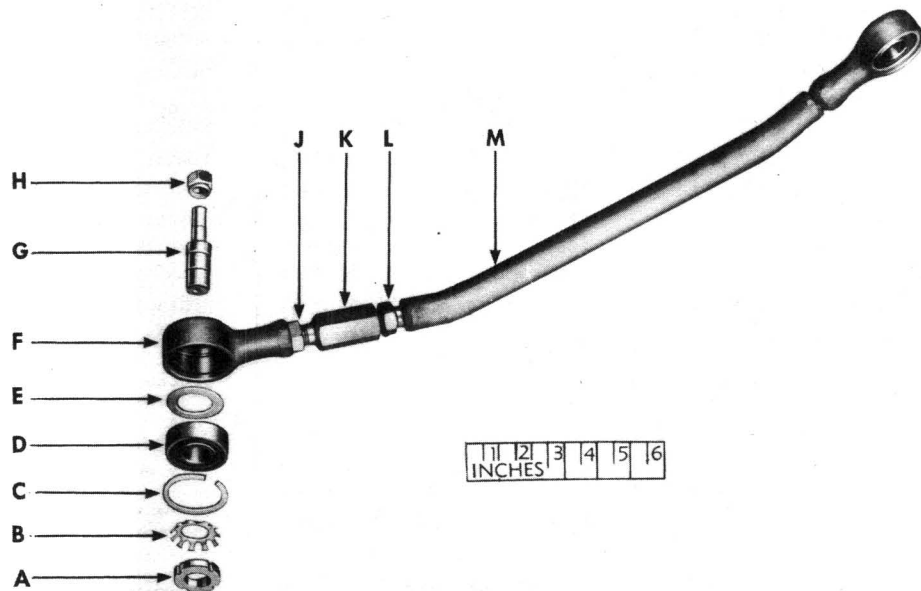

KEY	PART NAME	PART No.	GROUP
A	NUT.....	CHB-XAT529.....	1905
B	WASHER.....	BEFX1AE.....	1905
C	SNAP RING.....	CHB-XAT526.....	1905
D	BEARING.....	A213104.....	1905
E	SHIM.....	CHB-XAT525.....	1905
F	CONNECTOR.....	A312109.....	1905
G	STUD.....	CHB-XAT528.....	1905
H	NUT.....	BBSX4AE.....	1905
J	NUT.....	BBDX2B.....	1905
K	TURNBUCKLE.....	A293596.....	1905
L	NUT.....	A206632.....	1905
M	LINK.....	CHB-AAT3041.....	1905

RA PD 341073

FIGURE 19-38—PERISCOPE LINKAGE ASSEMBLY—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 19—TURRET

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				1907—MISCELLANEOUS STOWAGE (Mk IV; LVT (A) (4) only)	
	H002-0100090	CCAX1A	GM-115529	BALL, chr-alloy-S., 1/8 in. (turret roof seat stowage locking pin).....	2
	CO44-5601039	C101039	FOM-P1473	BOX, battery and bulb stowage.....	1
	M008-0100044	D60386	FOM-91X1026D	BOX, .45 and .50 cal. spare parts (CAD-360089).....	1
	H001-0116277	BAOX1EC-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/2-20NF-2 x 1.....	2
	H101-0180447	BEAX3E-1		WASHER, lock, lgt., S., cd-pltd., 1/2 in.....	2
	G127-0124534	D59957	FOM-91X1077D	BOX, 75 mm. howitzer spare parts.....	1
	G214-6575994	D75994	CAD-3600985	BOX, pamphlet stowage, assembly.....	1
	G168-7037106		FOM-91X1063D	BOX, recoil oil.....	1
			FOM-P1320	SCREW, cap., hex-hd., S., 7/16-20NF-3 x 3/4.....	2
	H001-1518010		FOM-P934	WASHER, reg., S., SAE std., 7/16 in.....	2
	G214-5608285	C108285	CAD-3600913	BOX, binocular, assembly.....	1
	H001-5421221	BCVX2FH-1	GM-123520	SCREW, cap, hex-hd., S., cd-pltd., 3/8-24NF-2 x 3/4.....	2
	H001-7126741	BECX4K-1		WASHER, lock, reg., S., cd-pltd., 3/8 in.....	2
	H001-7043741	BEBX1K-1	GM-120394	WASHER, plain, S., cd-pltd., 3/8 in.....	1
	G103-6327393	B327393		BUCKLE, sighting light chest strap, horizontal and vertical water can straps, and tarpaulin straps.....	8
	G103-1538351	B226739		CLIP, retaining, map.....	2
	G103-1781753	A266393	GM-190599	SCREW, int-teeth-lockwasher, hex-hd., S., 3/8-24NF-3 x 3/4.....	2
	G214-5266307	A266307		HANDLE, 75 mm. howitzer spare parts box.....	1
	G103-1614004	A266212		HINGE, 75 mm. howitzer spare parts box, assembly.....	2
	G104-1769974	BMCX1BBE-1	GM-178457	RIVET, wagon, box-hd., S., cd-pltd., 1/8 x 5/16 in.....	12
	G214-5410143	A410143		HINGE, pamphlet stowage box, assembly.....	2
	G127-0392192	A266251C	FOM-P1463	STRAP, horizontal water can mount.....	1
	G103-1845030	A266251B		STRAP, pamphlet stowage box.....	1
	G127-0392220	A293803B	FOM-P1490	STRAP, pamphlet stowage box and vertical water can mount.....	2
	G103-1792013	A293803D	FOM-P1503	STRAP, rifle stowage rack, front and rear.....	4
	G127-0392193	A266251D	FOM-P1464	STRAP, sighting lights chest.....	1
	G127-0392196	A293803A	FOM-P1466	STRAP, sighting light chest and horizontal water can mount.....	2
	G103-1791998	A293803G	FOM-1504	STRAP, sponge and staff cleaning.....	1
	G127-0392191	A293803F	FOM-P1575	STRAP, telescope stowage, w/BUCKLE, assembly.....	2
	G103-1791959	A266251E	FOM-P1465	STRAP, vertical water can mount.....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
GROUP 20—POWER TAKE-OFF					
2012—POWER TAKE-OFF ASSEMBLY					
20-1	H012-1376020	CAAX1GX	FOM-P111	BEARING, ball, annular, single row, double-sealed (0.7874 bore x 1.8504 O.D. x 0.6988 width) (power take-off vertical shaft, lower) (ND-88504).....	1
20-1	H012-1323060		FOM-P109	BEARING, ball, No. 212Y (type H, single row, light, w/double oil shield, 2.3622 bore x 4.3307 O.D. x 0.8661 width) (power take-off transverse shaft) (ND-77512).....	2
20-1	H012-1324017		FOM-P110	BEARING, ball, No. 303Y (type H, annular, single row, medium, w/double oil shield, 0.6693 bore x 1.8504 O.D. x 0.5512 width) (power take-off vertical shaft, upper) (ND-77603).....	1
20-1	G167-0131547	BCVX2BK-1 BEAX1H	FOM-4X1034B	CAP, end, power take-off transverse shaft.....	2
20-1	H001-5418361		FOM-P116	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 7/8.....	12
20-1	H001-1519009		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	12

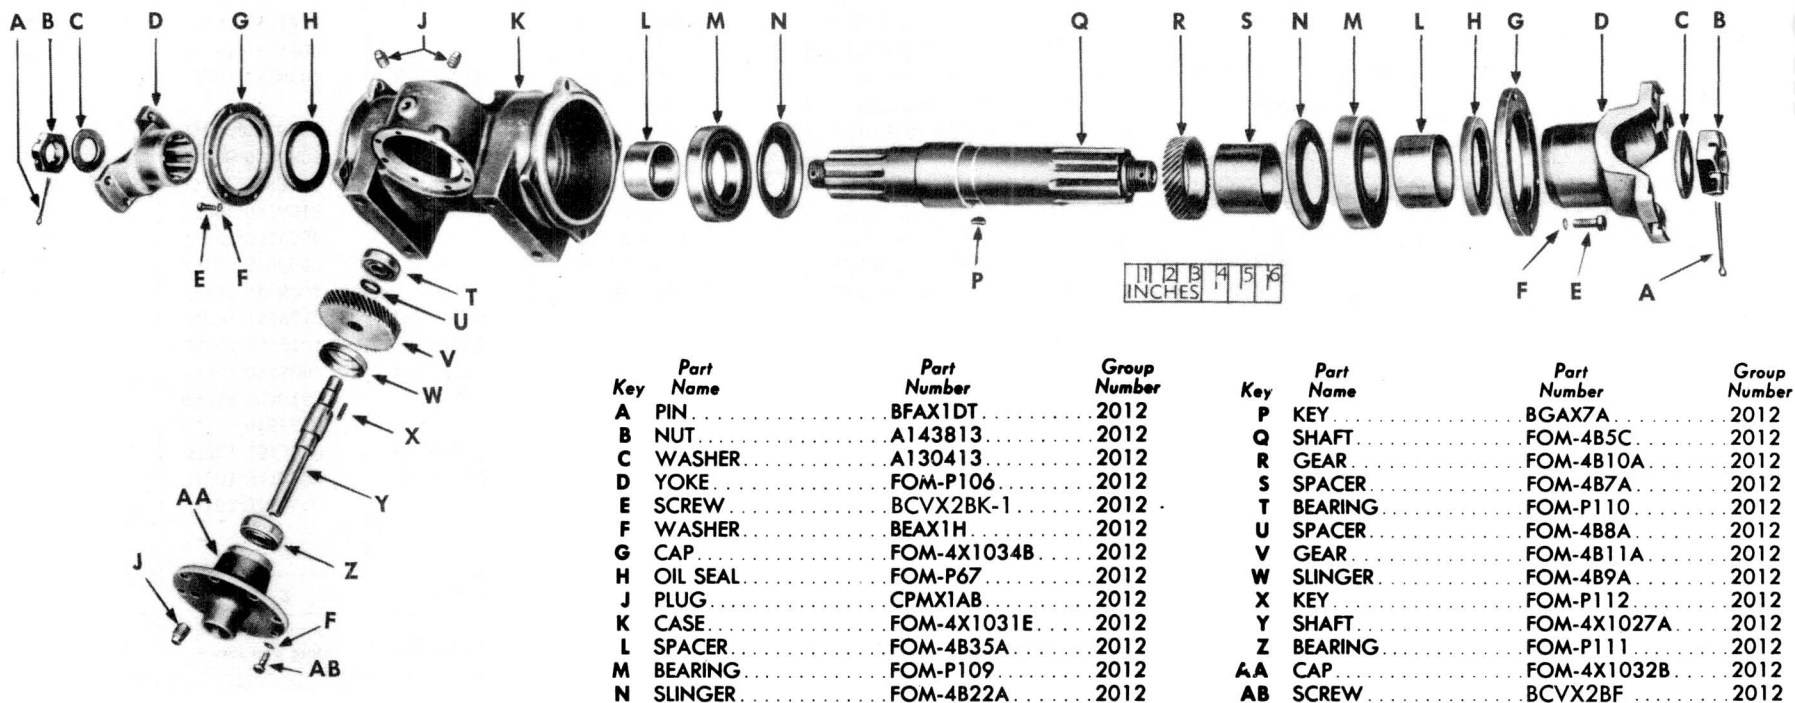


FIGURE 20-1—POWER TAKE-OFF ASSEMBLY—EXPLODED VIEW

RA PD 341165

GROUP 20—POWER TAKE-OFF

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
2012—POWER TAKE-OFF ASSEMBLY (Contd)					
20-1	G167-0131546		FOM-4X1032B	CAP, power take-off vertical shaft.....	1
20-1	H001-5418300	BCVX2BF-1	FOM-P115	SCREW, cap, hex-hd., S., cd-pltd., 1/4-28NF-3 x 5/8.....	8
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	8
20-1	G167-0131546		FOM-4X1031E	CASE, gear, power take-off.....	1
	G214-7036163		FOM-2X1375C	COVER, power take-off support.....	1
	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	10
	H001-5419101	BCVX2CF-1	FOM-P321	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 5/8.....	10
	H001-1519010	BEAX1K	FOM-P25	WASHER, lock, internal teeth, reg., S., 5/16 in. (SK-1218).....	10
20-1	G167-0186001		FOM-4B11A	GEAR, driven, power take-off vertical shaft.....	1
20-1	G167-0196000		FOM-4B10A	GEAR, driving, power take-off transverse shaft.....	1
20-1	H001-0519596		FOM-P112	KEY, square, type A,S., 1/8 sq. x 21/32 (power take-off driven gear).....	1
20-1	H001-0518013	BGAX7A	FOM-P113	KEY, Woodruff, S., 1/8 x 3/4 (No. 406) (power take-off transverse shaft driving gear)...	1
20-1	G167-0382905		FOM-P67	OIL SEAL, power take-off transverse shaft bearing (GPC-1945).....	2
20-1	H006-0283805	CPMX1AB	FOM-P98	PLUG, pipe, sq-hd., black, 1/4 in. (drain, power take-off).....	3
F,M	G167-0396230		FOM-41X1028D	POWER TAKE-OFF, assembly.....	1
		BCVX2LL-1	FOM-P289	SCREW, cap, hex-hd., S., cd-pltd., 1/2-20NF-3 x 1.....	4
	H001-1520005	BEAX3E	FOM-P19	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1424).....	4
20-1	G167-0384600		FOM-4B5C	SHAFT, transverse, power take-off.....	1
20-1	G167-0384603		FOM-4X1027A	SHAFT, vertical, power take-off.....	1
20-1	G167-0387205		FOM-4B22A	SLINGER, oil, power take-off transverse shaft.....	2
20-1	G167-0387204		FOM-4B9A	SLINGER, oil, power take-off vertical shaft.....	1
20-1	G167-0389400		FOM-4B7A	SPACER, power take-off transverse shaft, inner.....	1
20-1	G167-0389402		FOM-4B35A	SPACER, power take-off transverse shaft, outer.....	2
20-1	G167-0389401		FOM-4B8A	SPACER, power take-off vertical shaft.....	1
20-1	G167-0482432		FOM-P106	YOKE, power take-off transverse shaft, (MJ-6506J).....	2
20-1	G103-0401800	A143813	FOM-P107	NUT, attaching, power take-off transverse shaft yoke.....	2
20-1	H001-0811056	BFA1D1T	FOM-P108	PIN, cotter, split, S., 1/8 x 2.....	2
20-1	CO25-0202610	A130413	FOM-P105	WASHER, power take-off transverse shaft yoke nut.....	2
GROUP 21—GUARDS					
2103A—HEADLIGHT GUARDS					
	G214-7036164		FOM-2X1755B	GUARD, headlight.....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	8
	H001-5451640	BCVX4AH	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4.....	8
	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	8

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				GROUP 22—MISCELLANEOUS HULL AND ACCESSORIES	
				2201—TARPAULIN AND COVERS	
	G214-7036168 G214-7036178		FOM-80X1024C FOM-80X1162C	COVER, canvas (Mk I; LVT (A) (1) only).....	1
				TARPAULIN, hull cover (canvas).....	1
				2201C—GUN COVERS (Mk IV; LVT (A) (4) only)	
	G127-0137802 G103-1781753	B230243 A266393	GM-190599	CLAMP, turret cover support.....	1
				SCREW, int-teeth-lockwasher, hex-hd., S., cd-pltd., 3/8-24NF-3.....	1

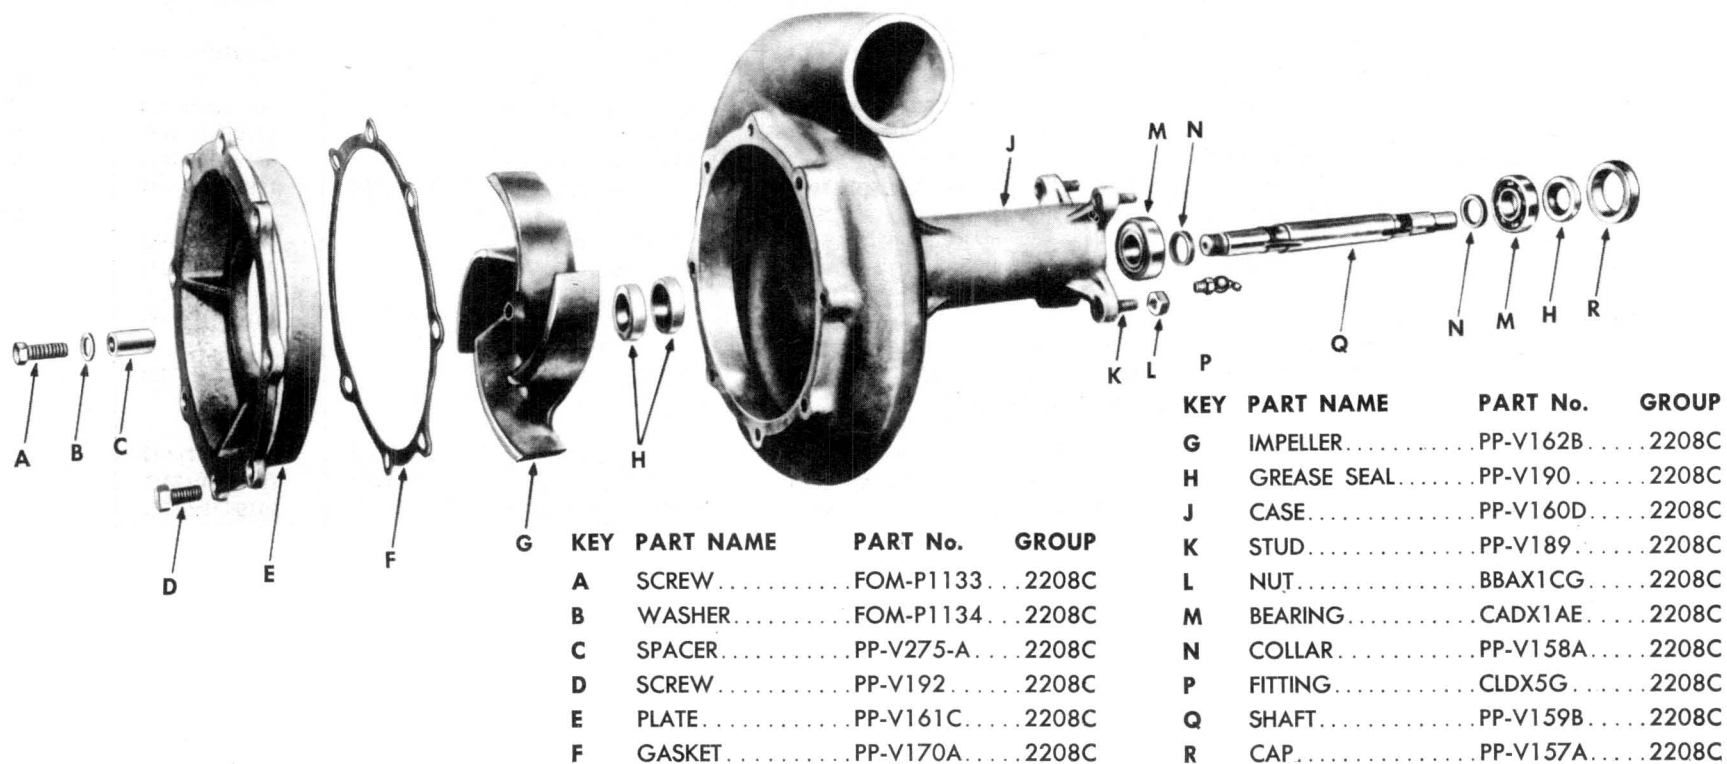


FIGURE 22-1—BILGE PUMP ASSEMBLY—EXPLODED VIEW

RA PD 341166

GROUP 22—MISCELLANEOUS HULL AND ACCESSORIES

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2201C—GUN COVERS (Mk IV; LVT (A) (4) only) (Contd)	
	G103-1540176	C153324		COVER, .45 cal. machine gun, assembly	1
	G127-0140100	D60094	FOM-P1241	COVER, .50 cal. anti-aircraft machine gun, assembly	1
	A045-0300045	D38618	FOM-P1242	COVER, 75 mm. howitzer breech, assembly	1
	G127-0140094	C107814	FOM-P1240	COVER, 75 mm. howitzer muzzle, assembly	1
	G214-7036165		FOM-80X1164B	COVER, scarf mount, assembly (canvas)	1
	G127-0334061	D60002	FOM-P1226	COVER, turret, assembly	1
	H002-0211915	A174958	FOM-P1369	STUD, attaching, turret cover	34
				2203—IDENTIFICATION AND CAUTION PLATES	
	G214-7036166		FOM-2X1761B	PLATE, identification, vehicle (Located on cab bulkhead) (Mk I; LVT (A) (1) only) . . .	1
			FOM-P541	RIVET, br., rd-hd., 1/8 x 1/4	2
	G214-7036167		FOM-2X2931B	PLATE, identification, vehicle (Located on cab bulkhead) (MK IV; LVT (A) (4) only) . .	1
			FOM-P541	RIVET, br., rd-hd., 1/8 x 1/4	2
	G214-7036710		CU-21804	PLATE, name and instruction, automatic oil filter	1
	G214-7036169		FOM-7X1060B	PLATE, name, circuit breaker	1
06-26			FOM-P850	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/16	2
	H001-7025561	BECC1C-1	FOM-P853	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138)	2
06-26	G214-7036170		FOM-70X1051E-3	PLATE, name, control panel cover (booster, blower, magneto, and lights)	1
06-26	G214-7036171		FOM-70X1051E-5	PLATE, name, control panel cover (danger plate)	1
06-26	G214-7036172		FOM-70X1051E-2	PLATE, name, control panel cover (starter, battery, dash, and fan)	1
06-26			FOM-P850	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/16	16
06-27	G214-7036173		FOM-8X1033B	PLATE, name, engine (instrument panel)	2
06-27			FOM-P255	SCREW, drive, br., No. 00 x 1/8	4
	G214-7036174		FOM-70X1023E-5	PLATE, name, generator regulator and relay panel	1
			FOM-P850	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/16	2
	7260-X581		PG-X581	PLATE, name, governor	1
	7260-X455		PG-X455	PIN, escutcheon, governor name plate	2
06-16	G104-0101543		SCI-2-782Z	PLATE, name, magneto	2
06-16	G038-0167695		SCI-2-783	SCREW, drive, magneto	4
06-27	G214-7036175		FOM-8X1034B	PLATE, name, transmission (instrument panel)	1
			FOM-P255	SCREW, drive, br., No. 00 x 1/8	2
06-52	G214-7036176		CHB-AT1068	PLATE, name, turret master switch box	1
06-52		BMCX1-14	GM-140133	RIVET, steel, fl-hd., tinned, 1/8 x 3/16 (14 oz.)	2
06-52	G214-7036177		CHB-AT1069	PLATE, name, turret master switch box circuit breaker	1
06-52		BMCX1-14	GM-140133	RIVET, steel, fl-hd., tinned, 1/8 x 3/16 (14 Oz.)	2
	G104-2982798	A345670	OG-216876	PLATE, name, turret traversing mechanism, assembly	1
	G104-2982791	A345688	OG-217083	PLATE, number, turret traversing mechanism variable displacement pump	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-20,31	G103-2340205	B197531	OG-38930	PLATE, serial number, turret traversing mechanism variable displacement pump and hydraulic motor.	2
19-31	H001-1043505	B197562K	GM-145371	SCREW, sheet metal, No. 2 (0.086) x 1/4.	4
	G104-0101562	A245903	BS-P390078	PLATE, specification, engine carburetor (For main BODY, BS-P17226).	1
	G104-0102163		BS-P16630	SCREW, drive, engine carburetor specification plate.	2
				2205—TACHOMETER AND RELATED PARTS	
	G167-0139890		FOM-P347	CABLE, tachometer (25 ft. long) (SW-65600).	1
	G167-0168011		FOM-P348	ELBOW, tachometer cable at engine.	1
	G214-7036179		FOM-P649	SHAFT, tachometer cable to engine.	1
	G167-7007018		FOM-P844	SHAFT, tachometer cable, w/SLEEVE, assembly.	1
	G214-7036180		FOM-P648	SLEEVE, tachometer cable shaft.	1
06-27,28	G167-0396046		FOM-P254	TACHOMETER, assembly (SW-770-F).	1
				2208C—BILGE PUMP	
22-1	H012-1313020	CADX1AE	PP-V191	BEARING, ball, No. 7204 (type B, angular contact, light series, 0.7874 bore, 1.8504 O.D., 0.5512 width) (bilge pump shaft) (ND-7504).	2
22-1	G167-0131552		PP-V157A	CAP, bilge pump bearing.	1
22-1	G214-7036709		PP-V160D	CASE, bilge pump.	1

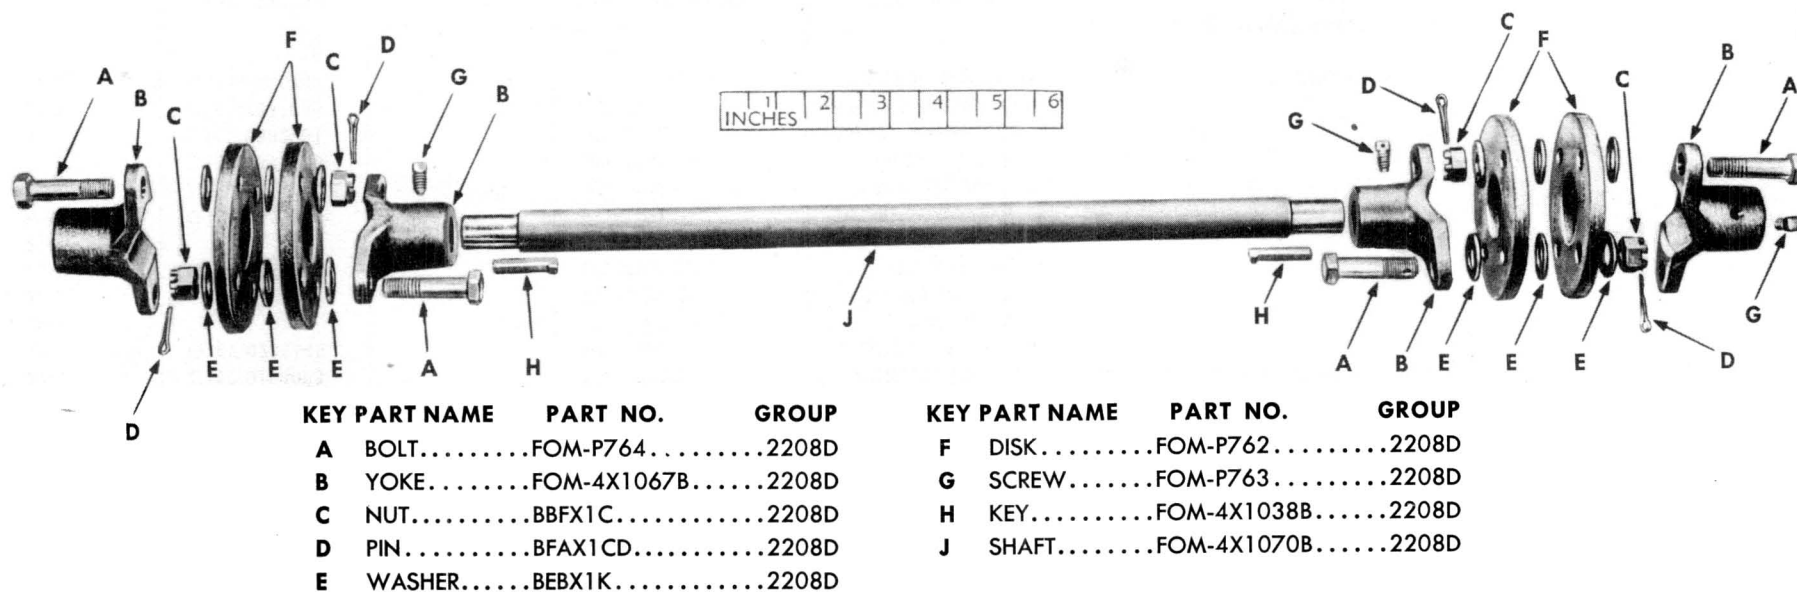


FIGURE 22-2—BILGE PUMP DRIVE SHAFT ASSEMBLY—EXPLODED VIEW

RA PD 341167

2203-2208C

GROUP 22—MISCELLANEOUS HULL AND ACCESSORIES


FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2208C—BILGE PUMP (Contd)	
22-1	G167-0139850	CLDX5G	PP-V158A	COLLAR, thrust, bilge pump bearing.....	2
22-1	H002-0222019		FOM-P198	FITTING, lubricating, hydraulic type, elbow, 1/8-27NPT, 30° male, short (bilge pump).	1
22-1	G167-0194023		PP-V170A	GASKET, bilge pump suction plate (vellumoid, 1/16 in. thk.).....	1
22-1	G167-0232145		PP-V162B	IMPELLER, bilge pump.....	1
22-1			FOM-P1133	SCREW, cap, bz., 5/16-18NC-3 x 3/4.....	1
22-1			FOM-P1134	WASHER, lock, bz., 5/16 in.....	1
22-1	G214-7036708	BBAX1CG	PP-V161C	PLATE, suction, bilge pump.....	1
22-1			PP-V192	SCREW, cap, hex-hd., br., 3/8-16NC-2 x 5/8.....	8
F,M	G167-0347876		FOM-P151	PUMP, bilge, assembly (PP-V156D).....	1
22-1	H001-4024600		PP-V193	NUT, regular, hex., s-fin., br., 3/8-16NC-2.....	4
22-1	G167-0392296		PP-V189	STUD, 3/8-16NC-2 x 1 1/4 in. long.....	4
22-1	G167-0382901		PP-V190	SEAL, grease, bilge pump shaft bearing.....	3
22-1	G168-7037045		PP-V159B	SHAFT, bilge pump.....	1
22-1	G214-7036707		PP-V275-A	SPACER, button, bilge pump impeller (3/8-16NC-2 x 5/8).....	1
				2208D—BILGE PUMP DRIVE SHAFT	
	G167-0140063		FOM-41X1068B	COUPLING, flexible, bilge pump drive shaft, assembly (Includes: yokes, disks, set screws, and attaching hardware).....	2
22-2	G214-7036181		FOM-P762	DISK, bilge pump drive shaft flexible coupling.....	4
22-2	G167-0258750		FOM-4X1038B	KEY, gib, bilge pump drive shaft.....	4
22-2			FOM-P763	SCREW, set, drilled, sq-hd., cup-pt., S., 1/4-20NC-3 x 3/8 (bilge pump drive shaft).....	4
22-2	G167-0384604		FOM-4X1070B	SHAFT, drive, bilge pump.....	1
F,M	G167-0384627		FOM-41X1069B	SHAFT, drive, bilge pump, assembly (Includes: flexible couplings and gib keys).....	1
22-2	G214-7036182		FOM-4X1067B	YOKE, bilge pump drive shaft flexible coupling.....	4
22-2			FOM-P764	BOLT, hex-hd., S., cd-pltd., dld. f/c-pin, 3/8-24NF-3 x 1 3/8.....	8
22-2	H001-0713024	BBFX1C	FOM-P765	NUT, castle, S., 3/8-24NF-2.....	8
22-2	H001-0811038	BFAX1CD	FOM-P129	PIN, cotter, split, S., (type B), 3/32 x 5/8.....	8
22-2	H001-1530009	BEEX1K	FOM-P62	WASHER, plain, S., SAE std., 3/8 in.....	24
				2208E—BILGE PUMP DISCHARGE TUBING	
			FOM-P349	CLAMP, bilge pump discharge tubing, assembly (Includes: bolt and nut).....	5
	G167-0136801		FOM-P218	CLAMP, bilge pump diagonal discharge tube, assembly (Includes: screw and nut).....	1
			FOM-2X1259B	CLAMP, bilge pump diagonal discharge tube elbow.....	2
	H001-0718002	BBAX1B	FOM-P55	NUT, regular, hex., s-fin., S., 5/16-18NC-2.....	2
			FOM-P350	SCREW, cap, hex-hd., S., cd-pltd., 5/16-18NC-3 x 1 3/4.....	2
			FOM-2X1256A	COUPLING, bilge pump to discharge pipe (rubber, 3 in. I.D. x 3 1/2 in. O.D. x 6 in. long).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
F,M			FOM-2X1258B	ELBOW, bilge pump diagonal discharge tube (rubber, 43°).....	1
			FOM-2X1257B	ELBOW, bilge pump diagonal discharge tube (rubber, 90°).....	1
			FOM-2X1254A	TUBE, discharge, bilge pump, diagonal.....	1
			FOM-2X1253A	TUBE, discharge, bilge pump.....	1
			FOM-2X1255A	TUBE, discharge, bilge pump.....	1
			FOM-2X1830B	TUBE, discharge, bilge pump.....	1
				2208F—HAND OPERATED BILGE PUMP	
			KAS-KPSA4	ARM, rocker, hand operated bilge pump, assembly (Includes: brace and sleeve).....	1
			KAS-V38A	BAR, valve hold down, hand operated bilge pump valve box.....	2
				NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	4
F,M	H001-0718001	BBAX1A	KAS-P40	SCREW, machine, rd-hd., br., 1/4-20NC-2 x 3/4.....	4
	H001-1028122	BCNX4CG	FOM-20X3030	BOX, valve, hand operated bilge pump.....	2
	G167-0314846		FOM-P818	NUT, regular, hex., s-fin., br., 3/8-16NC-2.....	1
			FOM-P1594	SCREW, cap, hex-hd., br., 3/8-16NC-3 x 3/4.....	2
	H001-7025741	BE CX1K-1	FOM-P941	WASHER, lock, reg., S., cd-pltd., 3/8 in.....	2
			KAS-P12	BRACKET, hand operated bilge pump diaphragm plate.....	2
			KAS-KPSA6	DIAPHRAGM, hand operated bilge pump, assembly (Includes: plates, bracket, screws, and plug).....	1
			KAS-P9	DIAPHRAGM, hand operated bilge pump (rubber).....	1
			FOM-20X3031C-1	HANDLE, hand operated bilge pump.....	1
				PIN, cotter, split, S., cd-pltd., 3/16 x 1 3/4.....	1
F,M	H001-0811078	BFAX2AA-1		NUT, regular, hex., s-fin., S., 1/4-20NC-2 (hand operated bilge pump body screw).....	8
	H001-0718001	BBAX1A	KAS-P17	PIN, cotter, split, S., cd-pltd., 1/8 x 1 (hand operated bilge pump rocker arm lift pin and pivot pin).....	4
	H001-4417731	BFAX1DG-1		PIN, lift, hand operated bilge pump rocker arm.....	1
			KAS-P15	PIN, pivot, hand operated bilge pump rocker arm.....	1
			KAS-P16	PLATE, hand operated bilge pump diaphragm, lower.....	1
			KAS-P11	PLATE, hand operated bilge pump diaphragm, upper.....	1
			KAS-P10	SCREW, machine, fl-hd., S., 3/8-24NF-2 x 3/4.....	4
		BCLX1.1EH	KAS-P14	PLUG, pipe, sq-hd., black, 1/8 in. (hand operated bilge pump lower diaphragm plate)...	1
	H006-0283800		KAS-P20	PUMP, bilge, hand operated.....	1
	G214-7036184		FOM-P1603	PUMP, bilge, hand operated, w/o valve BOX, assembly (Includes: handle, clips, bracket, and cotter pin).....	1
F,M	G214-7036185		FOM-20X3031C	NUT, regular, hex., s-fin., br., 3/8-16NC-2.....	3
	G167-0314846		FOM-P818	SCREW, cap, hex-hd., br., 3/8-16NC-3 x 3/4.....	3
			FOM-P1594	WASHER, lock, reg., S., cd-pltd., 3/8 in.....	3
	H001-7025741	BE CX1K-1	FOM-P941	PUMP, bilge, hand operated, w/valve BOX, assembly (Includes: brackets, clips, handle, and cotter pin).....	1
			KAS-KB2966-1	SCREW, machine, fl-hd., S., 1/4-20NC-2 x 1 (hand operated bilge pump body).....	8
				VALVE, flapper, hand operated bilge pump valve box, assembly (Includes: hold down bar, weights, and screws).....	2
	H001-1023137	BCKX2CK	KAS-P13	VALVE, hand operated bilge pump valve box (rubber).....	2
			KAS-KVSA5	WASHER, plain, S., cd-pltd., 1/2 in. (hand operated bilge pump rocker arm lift pin and pivot pin).....	4
			KAS-V37		
	H001-7043801	BE BX1M-1	KAS-P18		

GROUP 22—MISCELLANEOUS HULL AND ACCESSORIES

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	H001-1028120	BCNX4CE	KAS-V39 KAS-V38 KAS-V41	2208F—HAND OPERATED BILGE PUMP (Contd) WEIGHT, hand operated bilge pump valve, bottom..... WEIGHT, hand operated bilge pump valve, top..... SCREW, machine, rd-hd., br., 1/4-20NC-2 x 1/2.....	2 2 2
			FOM-P349	2208H—HAND OPERATED BILGE PUMP TUBING CLAMP, hand operated bilge pump intake and discharge tubing and elbows, assembly (Includes: bolt and nut).....	12
			FOM-2X1256A	COUPLING, hand operated bilge pump valve box.....	2
			FOM-2X1258B	ELBOW, hand operated bilge pump discharge tube (rubber, 43°).....	2
			FOM-2X1257B	ELBOW, hand operated bilge pump discharge tube (rubber, 90°).....	2
			FOM-2X3025B	TUBE, discharge, hand operated bilge pump.....	1
			FOM-2X3029B	TUBE, discharge, hand operated bilge pump to elbow.....	1
			FOM-2X3028B	TUBE, discharge, hand operated bilge pump, vertical.....	1
			FOM-2X3027B	TUBE, hand operated bilge pump elbow to valve box coupling.....	1
			FOM-20X3026B	TUBE, intake, hand operated bilge pump.....	1
			FOM-P818	NUT, regular, hex., s-fin., br., 3/8-16NC-2.....	1
			FOM-P1594	SCREW, cap, hex-hd., br., 3/8-16NC-3 x 3/4.....	1
			FOM-P941	WASHER, lock, reg., S., cd-pltd., 3/8 in.....	1
	H001-7025741	BE CX1K-1		2209—TURRET POSITION INDICATOR (Mk IV; LVT (A) (4) only) PLATE, turret index indicator.....	2
	G103-2340209	C114468	FOM-P1237	SCALE, turret traversing index, left.....	1
	G103-1781451	D75984	FOM-P1239	SCREW, machine, rd-hd., S., cd-pltd., No. 10-32NF-2 x 5/8.....	4
	H001-5148861	BCOX1.1AG-1	GM-132911	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 10 (0.190).....	4
	H001-7021681	BEAX1F-1	GM-121801	WASHER, plain, S., 7/32 x 1 x 1/16 in.....	4
	G103-1842700	A266479	CAD-1427866	SCALE, turret traversing index, right.....	1
	G103-0116275	D75983	FOM-P1238	SCREW, machine, rd-hd., S., cd-pltd., No. 10-32NF-2 x 5/8.....	2
	H001-5148861	BCOX1.1AG-1	GM-132911	SCREW, cap, hex-hd., alloy-S., cd-pltd., 1/4-28NF-2 x 3/4.....	1
		BAOX1EA-1		SCREW, cap, hex-hd., alloy-S., cd-pltd., 3/8-24NF x 5/8.....	1
	H001-3020131	BAOX4CB-1		WASHER, plain, S., 7/32 x 1/16 in.....	1
	G103-1842700	A266479	CAD-1427866	WASHER, lock, internal teeth, reg., S., cd-pltd., No. 10 (0.190).....	2
	H001-7021681	BEAX1F-1	GM-121801	WASHER, lock, internal teeth, reg., S., cd-pltd., 1/2 in.....	1
	H001-7021861	BEAX2B-1	GM-138549	WASHER, lock, internal teeth, reg., S., cd-pltd., 3/8 in.....	2
	H001-7021801	BEAX1L-1	GM-138542	WASHER, plain, SAE std., S., cd-pltd., 1/2 in.....	1
	H001-7043801	BE BX1M-1	GM-120396	WASHER, plain, SAE std., S., cd-pltd., 7/16 in.....	1
	H001-7045591	BE BX2D-1	GM-120388		

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
19-2,3	G214-7036186	BCVX2EN-1 BECX1K B243760 BCOX1.1CF-1 BECX4G-1	FOM-8X1165D	2210—COMPASS	
	H001-5420601		FOM-P30	BRACKET, mounting, compass.....	1
	H001-1518009		FOM-P365	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1 1/4.....	3
	G102-0400490		FOM-P1461	WASHER, lock, reg., S., SAE std., 3/8 in.....	3
	H001-1030673			COMPASS, turret, assembly.....	1
	H001-7126701			SCREW, machine, rd-hd., S., cd-pltd., 1/4-28NF-2 x 1/2.....	1
				WASHER, lock, reg., S., cd-pltd., 1/4 in.....	1
19-2,3,22-3	G214-7036187	A311932	CHB-AT1048	2218—TURRET GUN LOCK (Mk I; LVT (A) (1) only)	
22-3	G214-7036188		CHB-AT1063	BAR, traveling, turret gun lock.....	1
22-3	G168-5311932			CHAIN, turret gun lock (10 links).....	1
			CHB-XAT515	HOOK, turret gun lock chain.....	2
22-3		BFAX1DG-1	CHB-AT1020	PIN, cotter, split, S., cd-pltd., 1/4 x 1 1/4 (gun lock chain to gun lock bar).....	1
	H001-4417731		GM-137185	PIN, hinge, turret gun lock traveling bar.....	1
22-3			CHB-AAT1019	PIN, cotter, split, S., cd-pltd., 1/8 x 1.....	2
				PIN, latch, turret gun lock, assembly.....	1

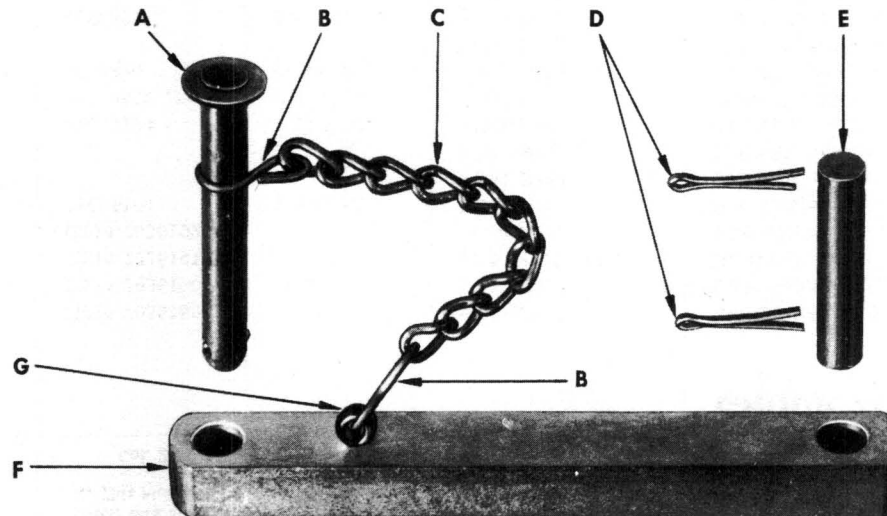

KEY	PART NAME	PART No.	GROUP
A	PIN.....	CHB-AAT1019.....	2218
B	HOOK.....	A311932.....	2218
C	CHAIN.....	CHB-AT1063.....	2218
D	PIN.....	BFAX1DG-1.....	2218
E	PIN.....	CHB-AT1020.....	2218
F	BAR.....	CHB-AT1048.....	2218
G	PIN.....	CHB-XAT515.....	2218

RA PD 341168

FIGURE 22-3—GUN TRAVELING LOCK ASSEMBLY—EXPLODED VIEW (MK I; LVT (A) (1) ONLY)

GROUP 23—GENERAL USE STANDARDIZED PARTS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				GROUP 23—GENERAL USE STANDARDIZED PARTS	
				2301—TOOLS	
P	G214-7036189		FOM-P456	ADAPTER, socket wrench, 1/2 in. sq. female, 3/8 in. male.....	1
P	G214-7036190		FOM-P488	BAR, jimmy, 5/8 x 18 in. long.....	2
	G214-7036191		FOM-80X1388C	BINDER, track chain.....	1
P	G214-7036192		FOM-P502	BLADE, hacksaw, hand, flex., 12 in. 24 teeth (type B) (set of 3).....	1
P	41C-1104	TBAX1A	FOM-P481	CHISEL, machs., hand, cold, 3/8 in.....	1
P			FOM-P484	CHISEL, machs., hand, cold, 7/8 in., 12 in. long (rivet cutter).....	1
P			FOM-P482	CHISEL, machs., hand, cold, 1/2 in. (Use TBAX1B).....	1
P	41C-1124	TBAX1C	FOM-P483	CHISEL, machs., hand, cold, 3/4 in.....	1
P	41C-2559-27	B108072	FOM-P526	COMPRESSOR, valve spring (CO-3092).....	1
P	8C-8320	D78278	FOM-80X1271B	CRANK, hand, engine starting.....	1
			FOM-P509	ELBOW, reducing, galv., S., 1/4 x 3/4.....	1
P	41B-307	TKEX7C	FOM-P455	EXTENSION, socket wrench, plain, S., 1/2 in., sq., dr., 5 in. long.....	2
			FOM-70X1057B	EXTRACTOR, fuse.....	1
P			FOM-P493	FILE, A. S., mill, bast., 14 in.....	1
P	41F-1155	TEAX1DG	FOM-P492	FILE, A. S., mill, bast., 8 in.....	1
P	41F-1304	TEAX2DH	FOM-P491	FILE, A. S., rd., bast., 8 in.....	1
P			FOM-P506	FLASHLIGHT, plastic, w/two BATTERIES.....	1
P	G214-7036193		FOM-P501	FRAME, hacksaw, piston-grip-hdl., adj. (for 8 to 10 and 12 in. blades-type B).....	1
	G214-7036194		FOM-80X1378C	FUNNEL, engine oil reservoir (Mk IV; LVT (A) (4) only).....	1
P	G214-7036195		FOM-P513	GAGE, feeler, thickness 0.124 and 0.010 in.....	1
P	G167-0205700		FOM-P476	GREASE GUN, hand type 16-oz. cap. (AD-6577E).....	1
P	G167-0209150		FOM-P499	HAMMER, machs., ball peen, 12 oz.....	1
P	G167-0209156	MC19A	FOM-P500	HAMMER, machs., ball peen, 24-oz. (Use TAAX1C HAMMER, machs., ball peen, 20 oz.).....	1
P	G214-7036196		FOM-P527	HANDLE, cross, extension, socket wrench, 1/2 in. sq-drive., 3/8 in.....	1
P	41H-1502		FOM-P454	HANDLE, hinged, socket wrench, alloy-S., 1/2 in. sq-drive., 18 in.....	1
			FOM-P508	NIPPLE, close, galv., S., 1/4 in.....	1
			FOM-P510	NIPPLE, galv., S., 3/4 x 1 3/8.....	1
P	G214-7036197		FOM-P507	OILER, plunger type, 5 oz.....	1
	M003-0105980	B156647		OIL GUN.....	1
P			FOM-P516	PLIERS, comb., slip-jt., 6 in.....	1
P	41P-1992	THBX1A	FOM-P485	PLIERS, side-cutting, long-needle-nose, 6 in.....	1
P			FOM-P486	PLIERS, water pump, adj., 9 1/2 in. long.....	1
P			FOM-P512	PLUG, bogie wheel axle, 5/8 in. sq., 1 1/2 in. long.....	1
P			FOM-8X1272B	PLUG, 1 in. sq., 3 in. long.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
			FOM-8X2017B	PLUG, bullet hole (Mk IV; LVT (A) (4) only).....	50
			FOM-8X2018B	PLUG, bullet hole (Mk IV; LVT (A) (4) only).....	30
			FOM-8X2019B	PLUG, bullet hole (Mk IV; LVT (A) (4) only).....	20
			FOM-8X2020B	PLUG, bullet hole (Mk IV; LVT (A) (4) only).....	20
			FOM-8X2021B	PLUG, (Mk IV; LVT (A) (4) only).....	10
			FOM-8X2022B	PLUG, (Mk IV; LVT (A) (4) only).....	5
P			FOM-P479	PUNCH, center, std., alloy-S., 4 7/8 in. long.....	1
P			FOM-P487	PUNCH, drive pin, solid, alloy-S., 3/8 in. pt., 10 in. long.....	1
P			FOM-P477	PUNCH, drive pin, solid, alloy-S., 1/4 in. pt., 6 1/2 in. long.....	1
P			FOM-P478	PUNCH, drive pin, alloy-S., 3/16 in. pt., 6 1/8 in. long.....	1
P		TKEX9B	FOM-P453	RATCHET, rvrs., socket wrench, alloy-S., 1/2 in. sq-drive., 9 13/16 long.....	1
	G103-2369899		CO-22094	RING, extractor, rear crankshaft.....	1
P			FOM-P514	ROLL, tool, fabric (w/o tools).....	1
P			FOM-P470	SCREWDRIVER, close quarter, 1 in. blade (SLY-1012).....	1
P			FOM-P471	SCREWDRIVER, comm., lgt-duty., 4 in. blade (SLY-245).....	1
P	41S-1106	TGAX1C	FOM-P472	SCREWDRIVER, comm., normal-duty, 8 in. blade (BF-08).....	1
P			FOM-P515	SCREWDRIVER, comm., normal-duty, 10 1/2 in. over-all.....	1
P	41S-1638	TGAX3A	FOM-P473	SCREWDRIVER, cross-recess-head, No. 2, 4 in. blade.....	1
P	41S-1640	TGAX3C	FOM-P474	SCREWDRIVER, cross-recess-head, No. 3, 6 in. blade.....	1
P	41S-1642	TGAX3D	FOM-P475	SCREWDRIVER, cross-recess-head, No. 4, 8 in. blade.....	1
P			FOM-P670	SCREWDRIVER, double offset, 1/2 x 4 1/4 x 3/8 in.....	1
P			FOM-P511	SCREWDRIVER, straddle split, 5/16 in. blade, 0.040 thick (notch 3/16 in. dp., 11/16 in. wd., approx.).....	1
P			FOM-P521	SOCKET, 1 x 13/16 in., extra long.....	1
	G167-0396385		FOM-8X1159B	SPREADER, track chain link.....	1
P			FOM-P505	TAPE, friction, 3/4 in. wide, 30 ft. roll.....	1
P	41W-486	TKAX3A	FOM-P503	WRENCH, adj., sgle-end., 8 in. (15/16 in. cap.).....	1
P	44W-488	TKAX3C	FOM-P504	WRENCH, adj., sgle-end., 12 in. (1 5/16 in. cap.).....	1
P			FOM-P457	WRENCH, box, 150 angle, dble-hd., dble-hex., long, 3/8 and 7/16.....	1
P			FOM-P458	WRENCH, box, 150 angle, dble-hd., dble-hex., long, 1/2 and 9/16.....	1
P	41W-602		FOM-P459	WRENCH, box, 150 angle, dble-hd., dble-hex., long, 5/8 and 11/16.....	1
P	A035-0719030	A265513D	FOM-P460	WRENCH, box, 150 angle, dble-hd., dble-hex., long, 3/4 and 7/8.....	1
P	41W-608		FOM-P461	WRENCH, box, 150 angle, dble-hd., dble-hex., long, 15/16 and 1.....	1
P			FOM-P462	WRENCH, box, 150 angle, dble-hd., dble-hex., long, 1 1/16 and 1 1/4.....	1
P	41W-621-120		FOM-P520	WRENCH, box, dble-offset., dble-hd., dble-hex., short, 7/16 and 1/2.....	1
P	41W-562	A163172	FOM-P525	WRENCH, box, offset, sgle-hd., dble-hex., 1/2 in., 19 1/8 in. long.....	1
P	41W-3812-530	A163168	FOM-P517	WRENCH, box, split, sgle-hd., dble-hex., 1 1/8 in., 5 3/6 in. long.....	1
P	41W-1986-100	A163170	FOM-P518	WRENCH, box, split, sgle-hd., dble-hex., 1 1/4 in. long, 5 11/16 in. long.....	1
			FOM-P519	WRENCH, box, stght., sgle-hd., dble-hex., 7/8 in. long.....	1
P	41W-1481-50	B248225	FOM-P522	WRENCH, box, stght., sgle-hd., hex., 2 5/8 in.....	1
P	41W-991	TKKK1D	FOM-P463	WRENCH, engrs., dble-hd., alloy-S., 3/8 and 7/16.....	1
P	41W-1002-40	TKKK2B	FOM-P464	WRENCH, engrs., dble-hd., alloy-S., 1/2 and 9/16.....	1
P	41W-1007-20	TKKK13H	FOM-P465	WRENCH, engrs., dble-hd., alloy-S., 19/32 and 25/32.....	1
P	41W-1008	TKKK2F	FOM-P466	WRENCH, engrs., dble-hd., alloy-S., 5/8 and 3/4.....	1
P	41W-1011-40	TKKK14C	FOM-P467	WRENCH, engrs., dble-hd., alloy-S., 11/16 and 7/8.....	1


GROUP 23—GENERAL USE STANDARDIZED PARTS

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2301—TOOLS (Contd)	
P	41W-1021	TKKX4C	FOM-P468	WRENCH, engrs., dble-hd., alloy-S., 15/16 and 1.....	1
P	41W-1024-5	TKKX5B	FOM-P469	WRENCH, engrs., dble-hd., alloy-S., 1 1/16 and 1 1/4.....	1
P	41W-1663	TKCX1H	FOM-P490	WRENCH, pipe, adj., 14 in. (cap. 1/2-1 1/2 IPS).....	1
N			FOM-8X1018C	WRENCH, rear idler adjusting.....	1
P	41W-448	TKAX2B	FOM-P489	WRENCH, screw, adj., auto., 11 in. (2 3/4 in. cap.).....	1
P	41W-2449	BCTX1G	FOM-P494	WRENCH, socket head set screw, 3/32 in. hex.....	1
P	41W-2450	BCTX1H	FOM-P495	WRENCH, socket head set screw, 1/8 in. hex.....	1
P	41W-2451	BCTX1K	FOM-P496	WRENCH, socket head set screw, 5/32 in. hex.....	1
P	41W-2452	BCTX1L	FOM-P497	WRENCH, socket head set screw, 3/16 in. hex.....	1
P	41W-2454	BCTX1N	FOM-P498	WRENCH, socket head set screw, 1/4 in. hex.....	1
P	41W-3005	TKEX3B	FOM-P442	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 7/16 in.....	1
P	41W-3007	TKEX3C	FOM-P443	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 1/2 in.....	1
P	41W-3009	TKEX3D	FOM-P444	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 9/16 in.....	1
P	41W-3011	TKEX3E	FOM-P445	WRENCH, socket, 1/2 in. sq-drive., dble hex., S., 19/32 in.....	1
P	41W-3013	TKEX3F	FOM-P446	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 5/8 in.....	1
P	41W-3015	TKEX3G	FOM-P447	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 11/16 in.....	1
P	41W-3017	TKEX3H	FOM-P448	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 3/4 in.....	2
P	41W-3023	TKEX3M	FOM-P449	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 7/8 in.....	1
	41W-3025	TKEX3N	FOM-P915	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 15/16.....	1
P	41W-3027	TKEX3Q	FOM-P450	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 1 in.....	1
P	41W-3029	TKEX3R	FOM-P451	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 1 1/16 in.....	1
P	41W-3029-10	TKEX3T	FOM-P452	WRENCH, socket, 1/2 in. sq-drive., dble-hex., S., 1 1/4 in.....	1
	41W-3329	A191315	FOM-P917	WRENCH, socket, 1/2 in. sq-drive., dble-hex., ext-deep., alloy-S., 1 1/8 in.....	1
P			FOM-P523	WRENCH, socket, prong type 9/16 in. (for slotted nut).....	1
			FOM-50X1095C	WRENCH, spanner, bogie wheel.....	1
P	41W-1536-500	B108078	FOM-P524	WRENCH, spanner, 2 3/8 in. O.D., 1/2 rd.....	1
				2301A—PIONEER EQUIPMENT	
N			FOM-P529	AX, chopping, 4 in.....	1
			FOM-2X1891B	BAR, clamp, pioneer equipment bracket.....	1
	H001-4052620	BBPX1H	FOM-P320	NUT, wing, br., 1/4-20NC-2.....	2
			FOM-P240	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 2 1/2.....	2
	H001-1531002	BEBX2B	FOM-P160	WASHER, plain, S., U.S. std., 1/4 in.....	2
			FOM-P535	BREAKER, water, 5 gal.....	1
N	G167-0131100		FOM-80X1031D	CABLE, sling, vehicle lifting (Mk I; LVT (A) (1) only).....	1
			FOM-80X1382D	CABLE, sling, vehicle lifting (Mk IV; LVT (A) (4) only).....	1
			FOM-80X2015C	CABLE, tow, chain shackle, 1 1/4 in.....	1
			FOM-80X2016C	CABLE, tow, hook.....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
N	G167-0216800		FOM-P532	HOOK, boat, 8 ft.	2
N	G167-0131100		FOM-80X1027B	LINE, tow, 1 in. galv. wire rope, fitted with shackles at each end, 15 ft.	1
N			FOM-P530	MATTOCK, pick, No. 5 (Includes: 36 in. handle)	1
N	G167-0333600		FOM-P533	PAINTER, bow line, 3 in. rope, 5 fathoms long, sisal.	1
	G214-7036198		FOM-80X1376C	SHACKLE, tow cable, 1 1/4 in.	1
N			FOM-P528	SHOVEL, round pt. blade, 9 x 11 3/4 in.	1
N	G167-0391892		FOM-P534	STERNFAST, stern line, 3 in. rope, 5 fathoms long, sisal.	1
				2302A—FUELS AND LUBRICANTS	
	M003-0102630	B101420	CHB-AT1097	GREASE, chain pin (1 lb. container)	1
				OIL, (in container)	1
				2302B—MISCELLANEOUS SUPPLIES	
	G214-7036199		FOM-80X1164B	BAG, tarpaulin, scarf mount.	2
			FOM-P622	BELT, safety.	2
			FOM-P1307	BUCKET, bailing (canvas) (Mk I; LVT (A) (1) only)	1
			FOM-P788	BULB, hand lantern (GE No. G8-2.4V) (80 amp.)	1
	C044-5601039		FOM-P1473	BOX, battery and bulk stowage (Mk IV; LVT (A) (4) only)	1
	G168-7037067		FOM-21X1991D	BOX, ration, assembly (Mk IV; LVT (A) (4) only)	1
			CHB-XAT541	CEMENT, rubber (1 pt. can) (Mk I; LVT (A) (1) only)	1
			FOM-P536	CHART, lubrication (army type chek-chart No. 141) (Mk I; LVT (A) (1) only)	1
			FOM-P1526	CHART, lubrication (army type chek-chart No. 159) (Mk IV; LVT (A) (4) only)	1
			FOM-P1318	COMPOUND, insulation, ignition (U.S. Army Spec. No. 2-182 or equal) (1 qt. can) (Mk I; LVT (A) (1) only)	2
			FOM-P4719	COMPOUND, sealing (U.S. Army Spec. No. 3-182) (1 qt. can) (Mk IV; LVT (A) (4) only)	2
	G167-0170338		FOM-P759	LANTERN, land battery (Navy Spec. 17B7)	2
			FOM-P1149	MANUAL, instruction (TM-9-775)	2
			FOM-P1150	MANUAL, instruction (for Continental Engine No. W-670-9A)	1
			FOM-P4704	VARNISH, insulating (U. S. Navy Spec. 52V13D) (Grade CA) (1 qt. can)	1
				2304M—WIRE (ROLLS)	
	H009-0101430	ACNX3		WIRE, br., grade A, annealed, soft, 0.040 diam., ft.	as req.
				2304P—TUBING (BULK)	
			FOM-P4600	HOSE, fire resistant, 3/16 in. I.D.	as req.
			FOM-P4601	HOSE, fire resistant, 1/4 in. I.D.	as req.
			FOM-P4602	HOSE, fire resistant, 3/8 in. I.D.	as req.
			FOM-P4603	HOSE, fire resistant, 1/2 in. I.D.	as req.
			FOM-P4604	HOSE, fire resistant, 3/4 in. I.D.	as req.
	H007-0218121		FOM-P4400	TUBING, cop., seamless, type K, soft anld., 1/8 in. (0.250 O.D. x 0.032 wall thickness) ..	as req.
			FOM-P4401	TUBING, cop., seamless, type K, soft anld., 3/16 in. (0.250 O.D. x 0.035 wall thickness) ..	as req.
	H007-0218140		FOM-P4409	TUBING, cop., seamless, type K, soft anld., 7/8 in. (1.125 O.D. x 0.065 wall thickness) ..	as req.
	H007-0218122		FOM-P4402	TUBING, cop., seamless, type K, soft anld., 1/4 in. (0.375 O.D. x 0.032 wall thickness) ..	as req.
	H007-0218163		FOM-P4405	TUBING, cop., seamless, type L, hard drawn, 1/2 in. (0.625 O.D. x 0.040 wall thickness) ..	as req.
	H007-0218120		FOM-P4407	TUBING, cop., seamless, type K, soft anld., 1/2 in. (0.625 O.D. x 0.049 wall thickness) ..	as req.

GROUP 24—FIRE EXTINGUISHER SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
GROUP 24—FIRE EXTINGUISHER SYSTEM					
2401—STATIONARY SYSTEM AND PARTS					
24-1	G104-0300864	BCVX2EF BEAX1L	FOM-P728	BRACKET, fixed fire extinguisher dual cylinder (WK-92258).....	1
24-2	G214-7036200		FOM-3X1193BL	BRACKET, shielded nozzle, left.	1
24-2	G214-7036401		FOM-3X1193BR	BRACKET, shielded, nozzle, right.	1
	H001-5420480		FOM-P669	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 5/8.....	4
	H001-1519011		FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	4
	G167-0137992		FOM-8X1020B	CLIP, cable, closed, 1/4 in. (fire extinguisher tube).....	2
	G167-0137987		FOM-8X1012B	CLIP, cable, closed, 1/2 in. (fire extinguisher tube).....	4
24-2	G167-0137988		FOM-8X1013B	CLIP, cable, closed, 3/4 in. (fire extinguisher tube).....	5
	G167-0137991		FOM-8X1017B	CLIP, cable, closed, 1 3/8 in. (dual pull mechanism).....	1
	H001-0718001		FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	12
	H001-5417640	BBAX1A BCVX2AH BEAX1H	FOM-P44	SCREW, cap, hex-hd., S., 1/4-20NC-3 x 3/4.....	12
	H001-1519009		FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	12
24-1			FOM-P750	CONNECTOR, 1/8 in. male end, 1/4 in. female end (fire extinguisher dual pull mechanism to cylinder tube) (WK-1789-0440).....	1
24-3	H006-0213530	CNAX2AC	FOM-P749	CONNECTOR, flared tube, 1/4 in. x 1/8 in., male pipe end (fire extinguisher coupling) (WK-26243).....	1
24-3	H006-0213550	CNAX2AG	FOM-P716	CONNECTOR, flared tube, 1/2 in. x 3/8 in., male pipe end (fire extinguisher) (WK-24397).....	4
24-3	G167-7002994		FOM-P751	COUPLING, 1/8 in. x 1 in. long (fire extinguisher) (WK-29518).....	2
	G167-7002995		FOM-P752	COUPLING, 3/8 in. x 1 1/4 in. long (fire extinguisher) (WK-29517).....	1
24-1	G167-7002785		FOM-P721	CYLINDER, fixed fire extinguisher, assembly (WK-80576).....	2
24-1,3	G167-7002996		FOM-P715	ELBOW, flared tube, 1/2 in. x 3/8 in., male pipe end (fire extinguisher tee to shielded nozzle tube) (WK-26336).....	6
24-2			FOM-P717	ELBOW, flared tube, 1/2 in. x 3/4 in., male pipe end (fire extinguisher tee to shielded nozzle) (WK-29519).....	1
24-2			FOM-P718	ELBOW, flared tube, 3/4 in., male pipe end (fire extinguisher) (WK-28807).....	1
24-1	G214-7036402		FOM-3X1209B	GUARD, fixed fire extinguisher front bulkhead to rear bulkhead pull cable pipe (Welded to hull).....	1
24-1	G167-7002993		FOM-P724	HANDLE, pull, fixed fire extinguisher front bulkhead (WK-29388).....	1
24-1	G167-7002799		FOM-P723	HANDLE, pull, fixed fire extinguisher rear bulkhead (WK-26851).....	1
	G214-7036403		FOM-P731	HEAD, pressure, fixed fire extinguisher front cylinder (WK-64535).....	1
24-1	G214-7036404		FOM-P729	HEAD, pressure, fixed fire extinguisher rear cylinder (WK-24447).....	1
24-1	G104-2139986		FOM-P730	HEAD, release, fixed fire extinguisher (WK-64310).....	1
24-1	G104-0303938		FOM-P722	MECHANISM, dual pull, fixed fire extinguisher, assembly (WK-64544).....	1
24-1	G168-7037043		FOM-P720	NOZZLE, shielded, fixed fire extinguisher (WK-64541).....	6

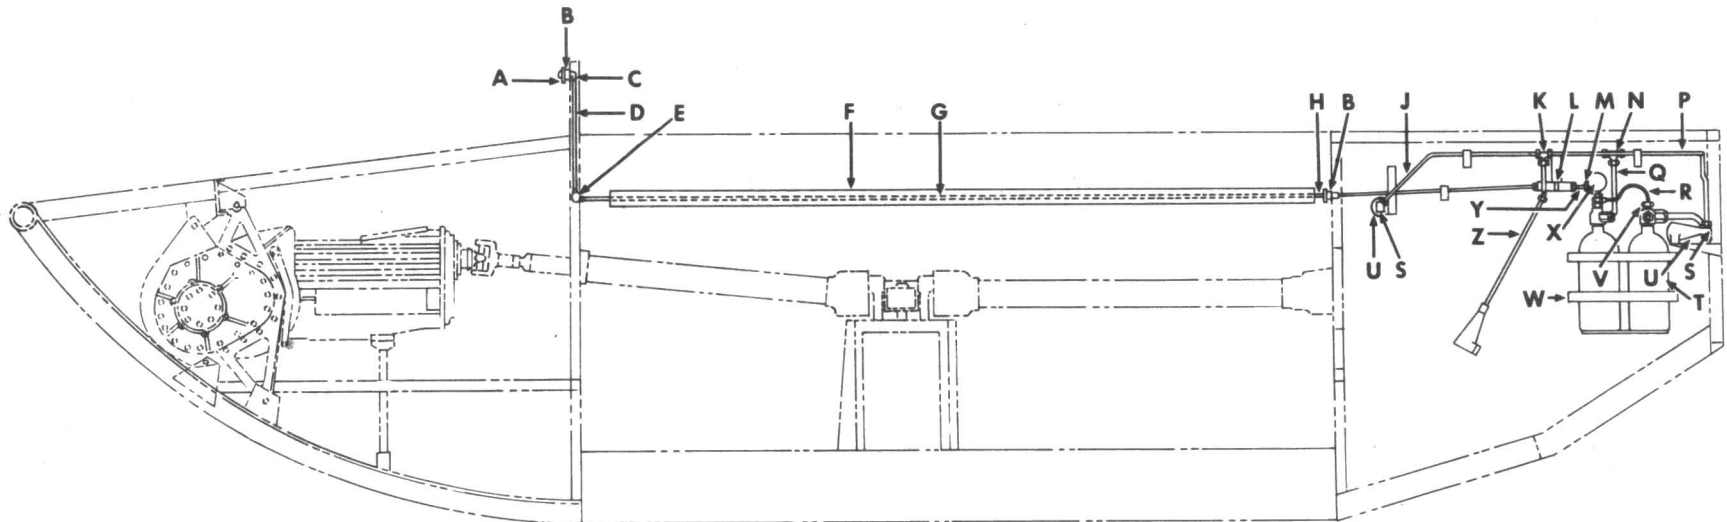


Key	Part Name	Part Number	Group Number	Key	Part Name	Part Number	Group Number
A	HANDLE.....	FOM-P724.....	2401	N	TEE.....	FOM-P713.....	2401
B	SOCKET.....	FOM-P725.....	2401	P	TUBE.....	FOM-P742.....	2401
C	PULLEY.....	FOM-P726.....	2401	Q	TUBE.....	FOM-P738.....	2401
D	TUBE.....	FOM-P744.....	2401	R	TUBE.....	FOM-P748.....	2401
E	PULLEY.....	FOM-P727.....	2401	S	ELBOW.....	FOM-P715.....	2401
F	GUARD.....	FOM-3X1209B....	2401	T	CYLINDER.....	FOM-P721.....	2401
G	PIPE.....	FOM-P753.....	2401	U	NOZZLE.....	FOM-P720.....	2401
H	HANDLE.....	FOM-P723.....	2401	V	HEAD.....	FOM-P729.....	2401
J	TUBE.....	FOM-P741.....	2401	W	BRACKET.....	FOM-P728.....	2401
K	TEE.....	FOM-P714.....	2401	X	HEAD.....	FOM-P730.....	2401
L	MECHANISM.....	FOM-P722.....	2401	Y	TUBE.....	FOM-P746.....	2401
M	CONNECTOR.....	FOM-P750.....	2401	Z	TUBE.....	FOM-P737.....	2401

FIGURE 24-1—FIXED FIRE EXTINGUISHER SYSTEM—SIDE VIEW

RA PD 76326

GROUP 24—FIRE EXTINGUISHER SYSTEM

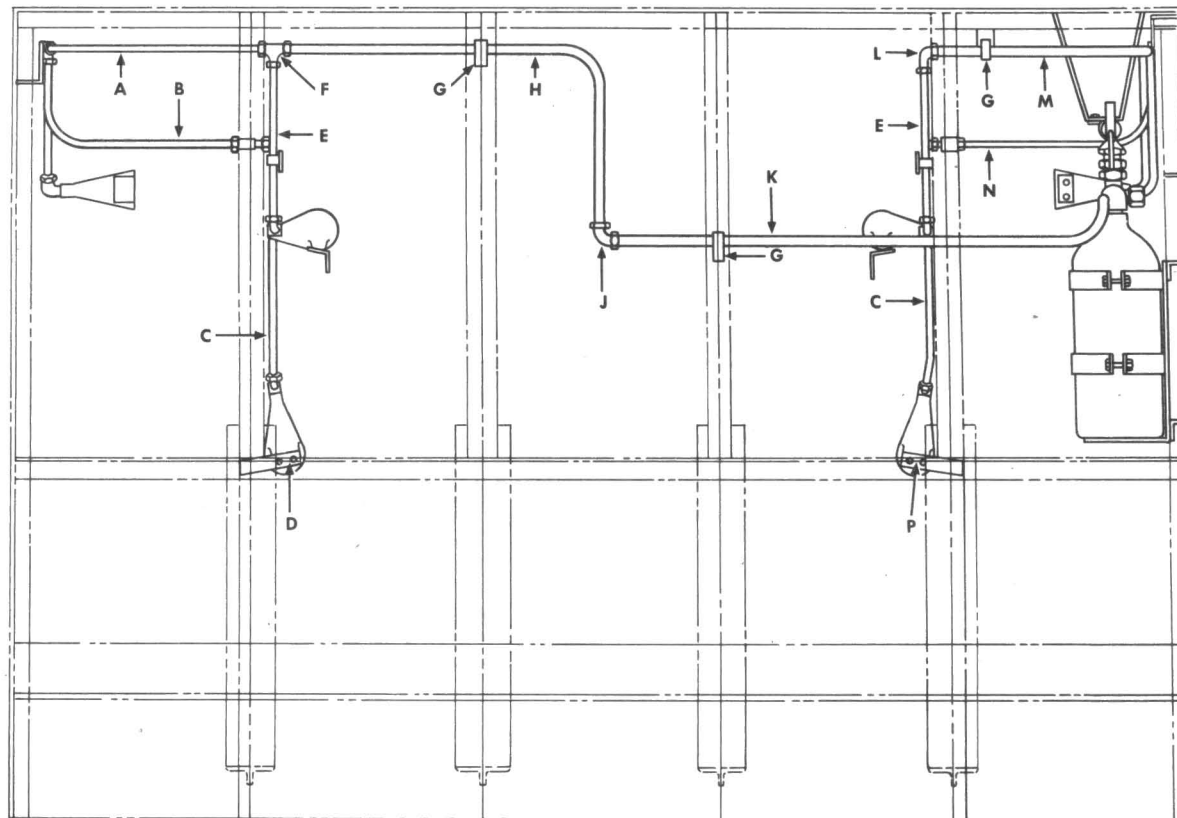


RA PD 76338

KEY	PART NAME	PART NO.	GROUP	KEY	PART NAME	PART NO.	GROUP	KEY	PART NAME	PART NO.	GROUP
A	TUBE	FOM-P742	2401	F	TEE	FOM-P719	2401	L	ELBOW	FOM-P717	2401
B	TUBE	FOM-P736	2401	G	CLIP	FOM-8X1013B	2401	M	TUBE	FOM-P735	2401
C	TUBE	FOM-P737	2401	H	TUBE	FOM-P733	2401	N	TUBE	FOM-P734	2401
D	BRACKET	FOM-3X1193BL	2401	J	ELBOW	FOM-P718	2401	P	BRACKET	FOM-3X1193BR	2401
E	TUBE	FOM-P732	2401	K	TUBE	FOM-P747	2401				

RA PD 76338

FIGURE 24-2—FIXED FIRE EXTINGUISHER SYSTEM—REAR VIEW

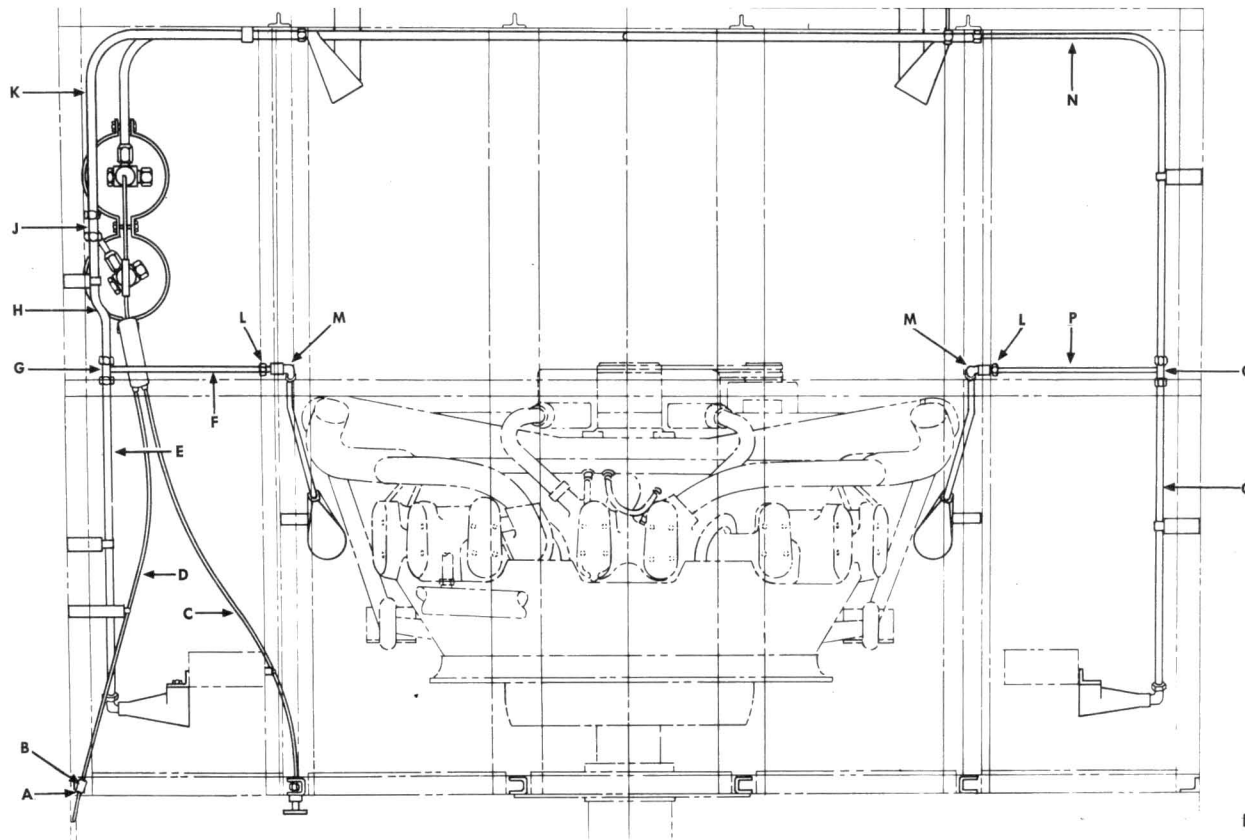

RA PD 76327

KEY	PART NAME	PART No.	GROUP
A	COUPLING	FOM-P751	2401
B	UNION	FOM-P749	2401
C	TUBE	FOM-P743	2401
D	TUBE	FOM-P745	2401
E	TUBE	FOM-P740	2401

KEY	PART NAME	PART NO.	GROUP
F	TUBE	FOM-P734	2401
G	TEE	FOM-P714	2401
H	TUBE	FOM-P739	2401
J	TEE	FOM-P713	2401
K	TUBE	FOM-P735	2401

KEY	PART NAME	PART NO.	GROUP
L	UNION	FOM-P716	2401
M	ELBOW	FOM-P715	2401
N	TUBE	FOM-P742	2401
P	TUBE	FOM-P736	2401
Q	TUBE	FOM-P741	2401

RA PD 76327

FIGURE 24-3—FIXED FIRE EXTINGUISHER SYSTEM—TOP VIEW


GROUP 24—FIRE EXTINGUISHER SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2401—STATIONARY SYSTEM AND PARTS (Contd)	
	F036-0582012	BCVX2EF	FOM-P669	SCREW, cap, hex-hd., S., 3/8-16NC-3 x 5/8.....	12
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	12
	H006-0104090	CNAX5AC	FOM-P771	NUT, flared tube fitting, long, 1/4 in. (WK-1789-0461).....	10
	H006-0104146	CNAX5AG	FOM-P773	NUT, flared tube fitting, long, 1/2 in. (WK-26412).....	16
	H006-0104110	CNAX5AK	FOM-P774	NUT, flared tube fitting, long, 3/4 in. (WK-24399).....	12
24-1			FOM-P753	PIPE, fixed fire extinguisher front bulkhead to rear bulkhead pull cable (WK-65803)....	1
			FOM-P776	PLUG, fixed fire extinguisher cylinder pressure head.....	2
24-1	G168-7037040		FOM-P727	PULLEY, fixed fire extinguisher dual pull mechanism, lower (WK-29389).....	1
24-1	G104-0305267		FOM-P726	PULLEY, fixed fire extinguisher dual pull mechanism, upper (WK-25325).....	1
24-1	G167-7002794		FOM-P725	SOCKET, fixed fire extinguisher pull handle (WK-25899).....	2
24-1,3	G103-0304376		FOM-P714	TEE, flared tube, 3/4 in. x 1/2 in. x 1/2 in., male pipe end (fire extinguisher tubes) (WK-24394).....	2
24-2			FOM-P719	TEE, flared tube, 3/4 in. x 3/4 in. x 1/2 in., male pipe end (fire extinguisher tubes) (WK-26841).....	1
24-1,3	G104-0307295		FOM-P713	TEE, flared tube, 3/4 in., male pipe end (fire extinguisher tubes) (WK-24393).....	1
24-3			FOM-P745	TUBE, fixed fire extinguisher coupling to dual pull mechanism (cop., 1/4 in. O.D. x 35 9/16 in. long) (WK-29003).....	1
24-1			FOM-P746	TUBE, fixed fire extinguisher dual pull mechanism to cylinder (cop., 1/4 in. O.D. x 3 7/16 in. long) (WK-29002).....	1
24-1,2			FOM-P737	TUBE, fixed fire extinguisher elbow to shielded nozzle (cop., 1/2 in. O.D. x 20 5/8 in. long) (WK-29004).....	2
24-2			FOM-P733	TUBE, fixed fire extinguisher elbow to tee (cop., 3/4 in. O.D. x 34 5/8 in. long) (WK-65819).....	1
24-1			FOM-P748	TUBE, fixed fire extinguisher front cylinder to rear cylinder (cop., 1/4 in. O.D. x 10 in. long) (WK-29007).....	1
24-3			FOM-P743	TUBE, fixed fire extinguisher pull handle to dual pull mechanism (cop., 1/4 in. O.D. x 37 1/16 in. long) (WK-29001).....	1
24-1			FOM-P744	TUBE, fixed fire extinguisher pulley to pulley (cop., 1/4 in. O.D. x 22 1/16 in. long) (WK-29006).....	1
24-2			FOM-P747	TUBE, fixed fire extinguisher rear cylinder to elbow (cop., 3/4 in. O.D. x 48 25/64 in. long) (WK-65813).....	1
24-2,3			FOM-P735	TUBE, fixed fire extinguisher tee to elbow (cop., 3/4 in. O.D. x 28 5/8 in. long) (WK-65821).....	1
24-2			FOM-P732	TUBE, fixed fire extinguisher tee to shielded nozzle (cop., 1/2 in. O.D. x 12 1/2 in. long) (WK-29005).....	2
24-1,3			FOM-P741	TUBE, fixed fire extinguisher tee to shielded nozzle (cop., 1/2 in. O.D. x 28 1/8 in. long) (WK-65816).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
24-3			FOM-P740	TUBE, fixed fire extinguisher tee to shielded nozzle (cop., 1/2 in. O.D. x 31 1/2 in. long) (WK-65814).....	1
24-3			FOM-P739	TUBE, fixed fire extinguisher tee to tee (cop., 3/4 in. O.D. x 12 1/16 in. long) (WK-29008).....	1
24-1,2,3			FOM-P742	TUBE, fixed fire extinguisher tee to tee (cop., 3/4 in. O.D. x 41 5/16 in. long) (WK-65820).....	1
24-2,3			FOM-P736	TUBE, fixed fire extinguisher tee to union (cop., 1/2 in. O.D. x 17 1/4 in. long) (WK-65815).....	1
24-2,3			FOM-P734	TUBE, fixed fire extinguisher tee to union (cop., 1/2 in. O.D. x 20 11/16 in. long) (WK-65817).....	1
24-1			FOM-P738	TUBE, fixed fire extinguisher union to front cylinder pressure head (cop., 3/4 in. O.D. x 14 3/8 in. long) (WK-65818).....	1
				2402—PORTABLE SYSTEM AND PARTS	
			FOM-P755	BRACKET, hand fire extinguisher (WK-79117E).....	1
				NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	4
				SCREW, machine, fl-hd., S., 3/8-16NC-2 x 1.....	4
				WASHER, lock, reg., S., 3/8 in.....	4
			FOM-808	EXTINGUISHER, fire, portable, assembly (CO-2 4#).....	1
			FOM-P531	EXTINGUISHER, fire, portable, assembly (Includes: bracket and nozzle).....	1
			FOM-P921	NOZZLE, portable fire extinguisher, w/ADAPTER, assembly.....	1
	H001-0718003 H001-1023165 H001-1518009 G167-0176638	BBAX1C BCKX2EK BECX1K			
				GROUP 26—RADIO AND INTERNAL COMMUNICATION SYSTEM	
				2601—RADIO AND SUPPORTS	
N				ANTENNA, radio.....	1
26-1			NVS-COL-47205	COIL, loading, antenna, assembly (CRA-190Z-1).....	1
N				COVER, radio antenna.....	1
26-1			NVS-COL-21881 NVS-MODEL-TCS	DYNAMOTOR, radio, assembly (CRA-416T-4).....	1
				RADIO SET (Includes: transmitter, receiver, dynamotor, amplifier, loading coil, and remote control units).....	1
26-1			NVS-COL-46159	RECEIVER, radio, assembly (CRA-51Q-1).....	1
			FOM-2X1713C	SHELF, dynamotor and amplifier.....	1
			FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	5
			FOM-P39	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4.....	5
			FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	5
26-1			FOM-20X1714D	SHELF, radio.....	1
			FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	6
			FOM-P152	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 1/2.....	1
			FOM-P39	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4.....	6
			FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	1
			FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	6
	G214-7036406 H001-0718003 H001-5420521 H001-1519011 G214-7036407 H001-0718003 H001-5417561 H001-5420521 H001-1519009 H001-1519011	BBAX1C BCVX2EH-1 BEAX1L BBAX1C BCVX2AD-1 BCVX2EH-1 BEAX1H BEAX1L			

GROUP 26—RADIO AND INTERNAL COMMUNICATION SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2601—RADIO AND SUPPORTS (Contd)	
26-1	G214-7036408	BBAX1C BCVX2EH-1 BEAX1L	FOM-20X1914E	SUPPORT, radio shelf.....	1
	H001-0718003		FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	6
	H001-5420521		FOM-P39	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4.....	6
	H001-1519011		FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	6
26-1			NVS-COL-52245	TRANSMITTER, radio, assembly (CRA-56Q-1).....	1
				2602—INTERNAL COMMUNICATION SYSTEM	
				2602A—AMPLIFIER	
26-1			NVS-CMX-50128	AMPLIFIER, interphone, assembly (MN-X700052).....	1
				2602B—RADIO JUNCTION BOX	
	G214-7036409		FOM-P1588	BLOCK, terminal, radio cabinet junction box (NVS-9-S-4302-L-3) (Mk IV; LVT (A) (4) only).....	1
			FOM-P1590	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-3 x 9/16.....	2
	G214-7036409		FOM-P920	BOX, junction, radio, assembly (NVS-9-S-5161-L) (Includes: condenser, terminal base, terminal tubes, cover, and cover attaching hardware. Does not include conductor assembly nor terminal support).....	1
M	G214-7036412		FOM-70X1105C	BOX, junction, radio, assembly (Includes: terminal tubes and terminal support) (Mk IV; LVT (A) (4) only).....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	4
			FOM-P49	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	4
	H001-1519013	BEAX2B	FOM-P76	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1224).....	4
F	G168-7035228		FOM-70X1043C	BOX, junction, radio, assembly (Includes: BOX, FOM-P920, conductor assembly, and terminal support) (Mk I; LVT (A) (1) only).....	1
	H001-0718005	BBAX1E	FOM-P52	NUT, regular, hex., s-fin., S., 1/2-13NC-2.....	4
			FOM-P49	SCREW, cap, hex-hd., S., cd-pltd., 1/2-13NC-3 x 1 1/4.....	4
	H001-1519013	BEAX2B	FOM-P76	WASHER, lock, internal teeth, reg., S., 1/2 in. (SK-1224).....	4
	G214-703641		FOM-71X1106D	BOX, junction, radio cabinet, assembly (Includes: BOX, FOM-70X1108E, conductor assemblies, terminal support and terminal block) (Mk IV; LVT (A) (4) only).....	1
	H001-1030082	BEAX1E	FOM-P416	SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 1/2.....	20
	H001-1519006		FOM-P364	WASHER, lock, internal teeth, reg., S., No. 8 (0.164) (SK-1208).....	20
26-2	G167-7002636		FOM-P407	CONDENSER, radio junction box (SPR-5283, type J-X-131).....	1
26-2	G168-7035214		FOM-70X1048B	CONDUCTOR, ground, radio junction box, w/TERMINAL, assembly (3 in. long) (Mk I; LVT (A) (1) only).....	1
26-2	G168-7035215		FOM-70X1049B	CONDUCTOR, radio junction box, assembly (Includes: cannon connector and terminals) (Mk I; LVT (A) (1) only).....	1
			FOM-P360	NUT, machine screw, hex., S., No. 3 (0.099)-48NC-2.....	4
	H001-1030025		FOM-P359	SCREW, machine, rd-hd., S., cd-pltd., No. 3 (0.099)-48NC-3 x 3/8.....	4
	H001-1519002	BEAX1B	FOM-P367	WASHER, lock, internal teeth, reg., S., No. 3 (0.099) (SK-1203).....	4

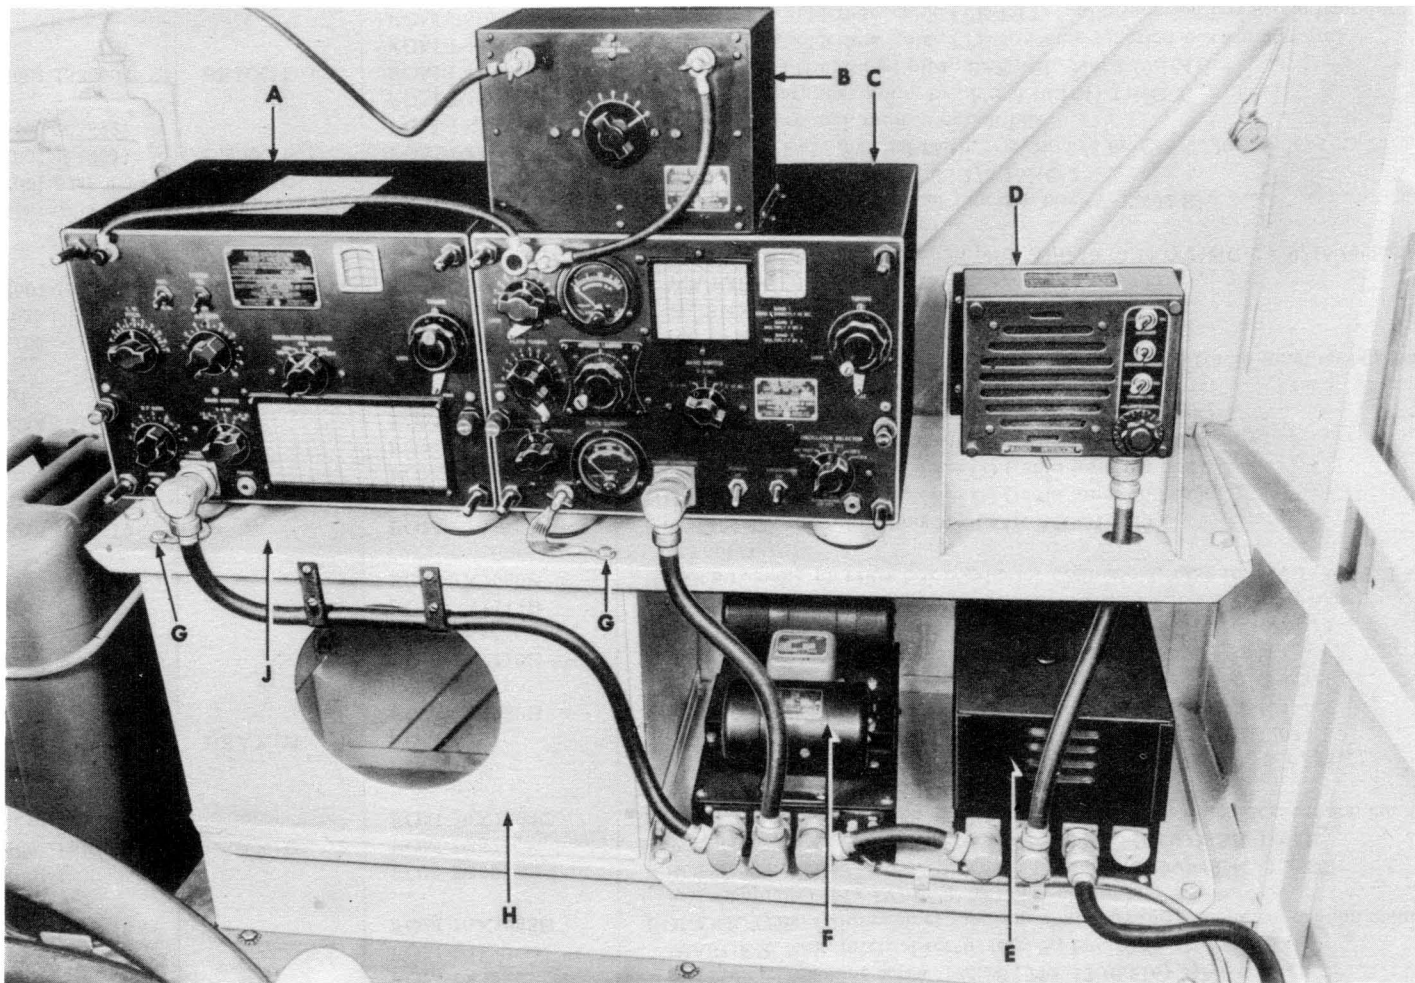

Key	Part Name	Part Number	Group Number
A	RECEIVER, assembly	NVS-COL-46159	2601
B	COIL, assembly	NVS-COL-47205	2601
C	TRANSMITTER, assembly	NVS-COL-52245	2601
D	UNIT, assembly	NVS-COL-23355	2602C
E	AMPLIFIER, assembly	NVS-CMX-50128	2602A

Key	Part Name	Part Number	Group Number
F	DYNAMOTOR, assembly	NVS-COL-21881	2601
G	SCREW	BCVX2AH-1	2603
H	SUPPORT	FOM-20X1914E	2601
J	SHELF	FOM-20X1714D	2601

FIGURE 26-1—RADIO SET—INSTALLED VIEW


RA PD 341169

2602B

GROUP 26—RADIO AND INTERNAL COMMUNICATION SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2602B—RADIO JUNCTION BOX (Contd)	
	G214-7036413		FOM-70X1111B FOM-P432 FOM-P1589	CONDUCTOR, ground, radio cabinet junction box (Mk IV; LVT (A) (4) only).....	1
				NUT, hex., machine screw, reg., S., No. 12 (0.216)-24NC-2.....	2
				WASHER, lock, internal teeth, reg., S., No. 12 (0.216) (SK-1212).....	2
	G214-7036414		FOM-70X1098B	CONDUCTOR, radio cabinet junction box, assembly (Includes: cannon connector and terminals) (Mk IV; LVT (A) (4) only).....	1
				SCREW, machine, rd-hd., S., cd-pltd., No. 3 (0.099)-48NC-3 x 3/8.....	4
				WASHER, lock, internal teeth, reg., S., No. 3 (0.099) (SK-1203).....	4
	H001-1030025 H001-1519002 G214-7036415	BEAX1B	FOM-P359 FOM-P367 FOM-70X1099C	CONDUCTOR, radio cabinet junction box, assembly (Includes: cannon connector and terminals) (Mk IV; LVT (A) (4) only).....	1
				SCREW, machine, rd-hd., S., cd-pltd., No. 3 (0.099)-48NC-3 x 3/8.....	4
				WASHER, lock, internal teeth, reg., S., No. 3 (0.099) (SK-1203).....	4
	H001-1030025 H001-1519002 G214-7036416	BEAX1B	FOM-P359 FOM-P367 FOM-7X1090B FOM-P1591	CONDUCTOR, radio cabinet junction box, assembly (Includes: cannon connector and terminals) (Mk IV; LVT (A) (4) only).....	1
				SCREW, machine, rd-hd., S., cd-pltd., No. 3 (0.099)-48NC-3 x 3/8.....	4
				WASHER, lock, internal teeth, reg., S., No. 3 (0.099) (SK-1203).....	4
	G214-7036418		FOM-7X1110C FOM-P637	COVER, radio cabinet junction box (Mk IV; LVT (A) (4) only).....	1
				SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 5/16.....	16
	G214-7036418		FOM-7X1112B	COVER, radio cabinet junction box (Mk IV; LVT (A) (4) only).....	1
	G168-7035232		FOM-7X1050B	SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 3/8.....	9
				GASKET, radio cabinet junction box cover (Mk IV; LVT (A) (4) only).....	1
				GASKET, radio junction box conductor (vellumoid, 1/32 in. thk.) (Mk I; LVT (A) (1) only).....	1
	G214-7036419		FOM-P1606	GROMMET, radio junction box (AIR-AN931-8-13).....	1
26-2			FOM-P259-1	NUT, gland, terminal tube (size C) (radio junction box).....	1
26-2			FOM-P353-1	NUT, gland, terminal tube (size G) (radio junction box).....	4
			FOM-7X1122B	PLUG, radio cabinet junction box (Mk IV; LVT (A) (4) only).....	1
26-2	G214-7036420		FOM-P259-2	RING, gland, terminal tube (size C) (radio junction box).....	1
26-2			FOM-P353-2	RING, gland, terminal tube (size G) (radio junction box).....	4
			FOM-P594	SCREW, cap, hex-hd., br., cd-pltd., 1/4-20NC-3 x 5/8 (radio junction box terminal).....	1
	G167-0314851		FOM-P34	NUT, regular, hex., s-fin., br., 1/4-20NC-2.....	1
	A055-0443005	BECX1G-1	FOM-P623	WASHER, lock, reg., S., cd-pltd., 1/4 in.....	1
	H001-1522007	BEBX1BG	FOM-P244	WASHER, plain, br., SAE std., 1/4 in.....	1
26-2		Q73XA-2		SCREW, machine, rd-hd., S., zn-pltd., No. 10 (0.190)-24NC-2 x 9/16 (attaching, radio junction box terminal base).....	2
	G167-0131114		FOM-P381	STRAP, ground, radio cabinet junction box (WT-492-S).....	1
	H001-0718002	BBAX1C	FOM-P40	NUT, regular, hex., s-fin., S., 3/8-16NC-2.....	1
	H001-1519011	BEAX1L	FOM-P28	WASHER, lock, internal teeth, reg., S., 3/8 in. (SK-1220).....	2
26-2	G168-7035227		FOM-7X1033B FOM-P363	SUPPORT, terminal, radio junction box.....	1
				NUT, regular, hex., s-fin., br., No. 8 (0.164)-32NC-2.....	4
				WASHER, plain, S., cd-pltd., SAE std., No. 8 (0.164).....	2
	H001-1530004	BEBX1D-1	FOM-P417 FOM-P538 FOM-P610	TERMINAL, solderless, cable (TB-5) (radio junction box conductors).....	8
				TERMINAL, solderless, cable (TB-B12) (radio junction box ground conductor).....	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
26-1	G214-7036421		FOM-2X1839B	2602C—REMOTE CONTROL UNIT AND MOUNTING BRACKETS	
	H001-0716540	BBKX2C	FOM-P225	BRACKET, mounting, driver's remote control unit.....	2
			FOM-P263	NUT, machine screw, hex., s-fin., S., No. 10 (0.190)-32NF-2.....	4
	H001-1519007	BEAX1F	FOM-P36	SCREW, machine, rd-hd., cross recess type, S., cd-pltd., No. 10 (0.190)-32NF-3 x 1/2 ..	4
	H001-1530005	BEBX1E	FOM-P664	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210).....	4
			NVS-COL-23355	WASHER, plain, S., SAE std., No. 10 (0.190).....	4
				UNIT, remote control, assembly (MN-X700072) (CRA-314M-2)(for the driver (1),	2
				and for the radio operator (1)).....	2
	H001-0716540	BBKX2C	FOM-P225	NUT, machine screw, hex., s-fin., S., No. 10 (0.190)-32NF-2.....	8
			FOM-P263	SCREW, machine, rd-hd., cross recess type, S., cd-pltd., No. 10 (0.190)-32NF-3 x 1/2	8
	H001-1519007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210).....	8

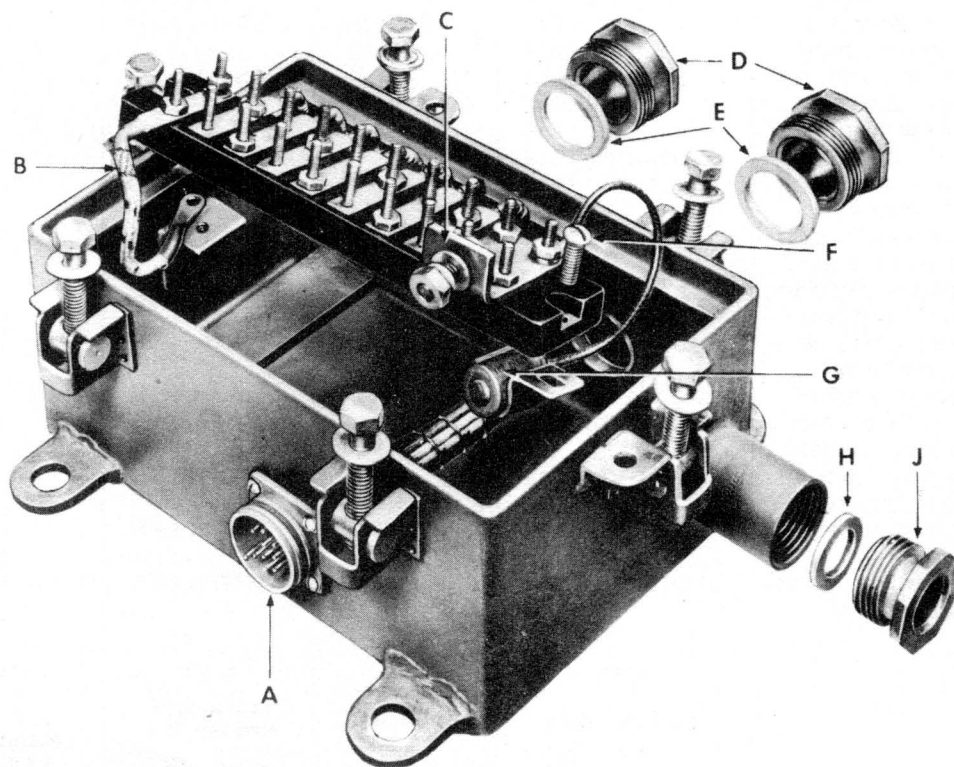

Key	Part Name	Part Number	Group Number
A	CONDUCTOR, assembly ..	FOM-70X1049B.....	2602
B	CONDUCTOR, assembly ..	FOM-70X1048B.....	2602
C	SUPPORT.....	FOM-7X1033B.....	2602
D	NUT.....	FOM-P353-1	2602
E	RING.....	FOM-P353-2	2602
F	SCREW.....	Q73XA	2602
G	CONDENSER.....	FOM-P407.....	2602
H	RING.....	FOM-P259-2	2602
J	NUT.....	FOM-P259-1	2602

FIGURE 26-2—RADIO JUNCTION BOX—COVER REMOVED


RA PD 341170

2602C

GROUP 26—RADIO AND INTERNAL COMMUNICATION SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
				2602D—INTERNAL COMMUNICATION SPEAKER JUNCTION BOX	
26-3	G168-7035233	BEBX1BD	FOM-70X1011C-2	BASE, terminal, internal communication speaker junction box	1
26-3			FOM-P363	NUT, regular, hex., s-fin., br., No. 8 (0.164)-32NC-2	4
26-3	H001-1021079		FOM-P540	SCREW, machine, fl-hd., br., cd-pltd., No. 8 (0.164)-32NC-3 x 1 1/2	2
26-3	H001-1522004		FOM-P365	WASHER, plain, br., SAE std., No. 8 (0.164)	2
	G214-7036422		FOM-70X1102B	BLOCK, terminal, internal communication speaker junction box, assembly (Mk IV; LVT (A) (4) only)	1
			FOM-P363	NUT, hex., br., No. 8 (0.164)-32NC-2	42
	H001-1021076		FOM-P361	SCREW, machine, br., cd-pltd., No. 8 (0.164)-32NC-3 x 1	14
			FOM-P929	SCREW, machine, rd-hd., S., No. 10 (0.190)-24NC-3 x 5/8	2
	H001-7043621		FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190)	2
	H001-1522004		FOM-P417	WASHER, plain, br., SAE std., No. 8 (0.164)	28
	G214-7036423	BECX1E-1 BEBX1D	FOM-70X1102B-1	BLOCK, terminal, internal communication speaker junction box (Mk IV; LVT (A) (4) only)	1
	G214-7036424		FOM-70X1100D	BODY, internal communication speaker junction box, assembly (Includes: brackets, terminal tubes, and connector) (Mk IV; LVT (A) (4) only)	1
26-3	G214-7036425	BEAX1F	FOM-70X1011C-1	BOX, junction, internal communication speaker	3
F	G168-7035229		FOM-70X1011C	BOX, junction, internal communication speaker, assembly	3
			FOM-P847	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-3 x 1/2	4
	H001-1519007		FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210)	4
M	G214-7036426		FOM-70X1103C	BOX, junction, internal communication speaker, assembly (Mk IV; LVT (A) (4) only)	3
		BEAX1F	FOM-P847	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-24NC-3 x 1/2	4
	H001-1519007		FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210)	4
26-3	G214-7036427		FOM-P537	CAP, internal communication speaker junction box connector, w/CHAIN, assembly (CED-GK60A-2)	1
26-3	G168-7035230		FOM-70X1053B	CONDUCTOR, internal communication speaker junction box, assembly (Includes: cannon connector and terminals) (Mk I; LVT (A) (1) only)	1
		BEAX1B	FOM-P360	NUT, machine screw, hex., S., No. 3 (0.099)-48NC-2	4
26-3			FOM-P359	SCREW, machine, rd-hd., S., cd-pltd., No. 3 (0.099)-48NC-3 x 3/8	4
26-3	H001-1519002		FOM-P367	WASHER, lock, internal teeth, reg., S., No. 3 (0.099) (SK-1203)	4
26-3	G214-7036428		FOM-7X1012B	COVER, internal communication speaker junction box (Mk I; LVT (A) (1) only)	1
26-3	H001-1030063		FOM-P358	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 1/4	8
	H001-1519004	BEAX1D	FOM-P539	WASHER, lock, internal teeth, reg., S., No. 6 (0.138) (SK-1206)	8
	G214-7036416		FOM-7X1090B	COVER, internal communication speaker junction box (Mk IV; LVT (A) (4) only)	1
			FOM-P885	SCREW, machine, rd-hd., S., cd-pltd., No. 6 (0.138)-32NC-3 x 3/8	16
			FOM-P853	WASHER, lock, reg., S., cd-pltd., SAE std., No. 6 (0.138)	16
26-3	G168-7035232		FOM-7X1050B	GASKET, internal communication speaker junction box connector (vellumoid, 1/32 in. thk.) (Mk I; LVT (A) (1) only)	1

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
	G214-7036429		FOM-7X1091B	GASKET, internal communication speaker junction box cover (Mk IV; LVT (A) (4) only)	1
26-3	G168-7035231		FOM-7X1013B	GASKET, internal communication speaker junction box cover (vellumoid, 1/32 in. thk.) (Mk I; LVT (A) (1) only)	1
26-3			FOM-P353-1	NUT, gland, terminal tube (size G) (internal communication speaker junction box)	1
26-3			FOM-P353-2	RING, gland, terminal tube (size G) (internal communication speaker junction box)	1
26-3	H001-1021076		FOM-P361	SCREW, machine, fl-hd., br., cd-pltd., No. 8 (0.164)-32NC-3 x 1 (internal communication speaker junction box terminal)	14
26-3			FOM-P363	NUT, regular, hex., s-fin., br., No. 8 (0.164)-32NC-2	42
26-3	H001-1519006	BEAX1E	FOM-P364	WASHER, lock, internal teeth, reg., S., No. 8 (0.164) (SK-1208)	14
26-3	H001-1522004	BEBX1BD	FOM-P365	WASHER, plain, br., SAE std., No. 8 (0.164)	28

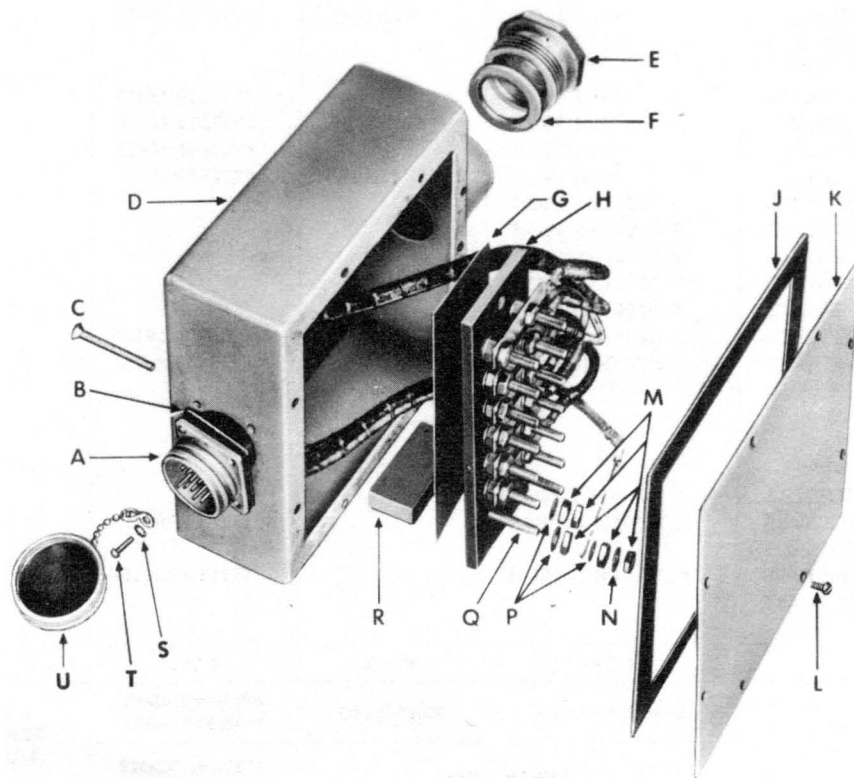

Key	Part Name	Part Number	Group Number
A	CONDUCTOR, assembly	FOM-70X1053B	2602D
B	GASKET	FOM-7X1050B	2602D
C	SCREW	FOM-P540	2602C
D	BOX	FOM-70X1011C-1	2602C
E	NUT	FOM-P353-1	2602D
F	RING	FOM-P353-2	2602D
G	SEALER	FOM-70X1011C-4	2602D
H	BASE	FOM-70X1011C-2	2602C
J	GASKET	FOM-7X1013B	2602D
K	COVER	FOM-7X1012B	2602D
L	SCREW	FOM-P358	2602D
M	NUT	FOM-P363	2602D
N	WASHER	BEAX1E	2602D
P	WASHER	BEBX1BD	2602D
Q	SCREW	FOM-P361	2602D
R	SPACER	FOM-70X1011C-3	2602D
S	WASHER	BEAX1B	2602D
T	SCREW	FOM-P359	2602D
U	CAP, w/ CHAIN, assembly	FOM-P537	2602C

FIGURE 26-3—INTERNAL COMMUNICATION SPEAKER JUNCTION BOX—EXPLODED VIEW

RA PD 341171

2602D

GROUP 26—RADIO AND INTERNAL COMMUNICATION SYSTEM

FIGURE NUMBER	OFFICIAL STOCK NUMBER	PART NUMBER		ITEM	Quantity per Req'd Unit Ass'y
	Order and Store by This Number	ORDNANCE	MANUFACTURER		
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
26-3	G168-7035235		FOM-70X1011C-4	2602D—INTERNAL COMMUNICATION SPEAKER JUNCTION BOX (Contd) SEALER, internal communication speaker junction box terminal base (phenolic, 1/64 in. thk.).....	1
26-3	G168-7035234		FOM-70X1011C-3 FOM-P538	SPACER, internal communication speaker junction box terminal base..... TERMINAL, solderless, cable (internal communication speaker junction box conductors) (TB-B5).....	2 7
				2603—RADIO SUPPRESSION SYSTEM	
	G168-7037150		FOM-P626	CABLE, radio noise filter to ammeter.....	1
	G167-7002784		FOM-70X1036B	CABLE, radio noise filter to ammeter, w/TERMINALS, assembly.....	1
			FOM-8X1152C-1	CLIP, bonding, 1/8 in. (instrument case bond jumpers) (AIR-AN755-2).....	1
			FOM-8X1152C-2	CLIP, bonding, 3/16 in. (instrument case bond jumpers) (AIR-AN755-3).....	1
			FOM-8X1152C-3	CLIP, bonding, 1/4 in. (instrument case bond jumpers) (AIR-AN755-4).....	2
			FOM-8X1152C-4	CLIP, bonding, 3/8 in. (throttle control rod bond jumpers) (AIR-AN755-6).....	3
			FOM-8X1152C-5	CLIP, bonding, 7/16 in. (instrument case bond jumpers) (AIR-AN755-7).....	1
			FOM-8X1152C-6	CLIP, bonding, 5/8 in. (clutch control rod bond jumpers) (AIR-AN755-10).....	3
	H001-0725330	BBSX1X-1	FOM-P418	NUT, safety, machine screw, S., cd-pltd., No. 8 (0.164)-32NC-2 (elastic stop nut type).....	11
	H001-1030082		FOM-P416	SCREW, machine, rd-hd., S., cd-pltd., No. 8 (0.164)-32NC-3 x 1/2.....	11
	H001-1522004	BEEX1D	FOM-P417	WASHER, plain, br., SAE std., No. 8 (0.164).....	11
18-7	G167-0183053		FOM-P264	FILTER, radio noise, assembly (SPR-5282) (located in instrument panel box (1), and control tunnel junction box (1)).....	2
			FOM-P607	SCREW, machine, rd-hd., S., cd-pltd., No. 10 (0.190)-32NF-3 x 1/2.....	2
	H001-7043621	BEEX1E-1	FOM-P608	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	2
	G168-7035217		FOM-70X1017B	JUMPER, radio bonding, w/TERMINALS, assembly (clutch front control rod (1), throttle front control rod (1), throttle intermediate control rod (1), and throttle rear control rod (1)).....	4
	G168-7035218		FOM-70X1018B	JUMPER, radio bonding, w/TERMINALS, assembly (clutch intermediate control rod (1), and clutch rear control rod (1)).....	2
01-16	G103-0500440	A160693	FOM-P423	JUMPER, radio bonding, w/TERMINALS, assembly (WT-491) (engine mount).....	1
			FOM-P422	NUT, hex. (elastic stop type), S., cd-pltd., 3/8-16NC-2.....	1
01-16	H001-5420521	BCVX2EH-1	FOM-P421	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 3/4.....	1
	H001-5420561	BCVX2EL-1	FOM-P424	SCREW, cap, hex-hd., S., cd-pltd., 3/8-16NC-3 x 1.....	1
	H001-1522009	BEEX1BK	FOM-P387	WASHER, plain, br., SAE std., 3/8 in.....	2
	G168-7035220		FOM-70X1020B	JUMPER, radio bonding, w/TERMINALS, assembly (instrument panel box).....	1
	G168-7035219		FOM-70X1019B	JUMPER, radio bonding, w/TERMINALS, assembly (oil temperature gage line).....	1
	G168-7035213		FOM-70X1016B	JUMPER, radio bonding, w/TERMINALS, assembly (tachometer line (1), fuel primer (1), ammeter line (1), and oil pressure gage line (1)).....	4
26-1	H101-0121887	BCVX2AH-1	FOM-P44	SCREW, cap, hex-hd., S., cd-pltd., 1/4-20NC-3 x 3/4 (ground, radio).....	2
	H001-0718001	BBAX1A	FOM-P45	NUT, regular, hex., s-fin., S., 1/4-20NC-2.....	2

Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6
18-7	H001-1519009	BEAX1H	FOM-P24	WASHER, lock, internal teeth, reg., S., 1/4 in. (SK-1214).....	2
	H001-1523002	BEBX2AB	FOM-P661	WASHER, plain, br., U.S. std., 1/4 in.....	4
	G168-7039443		FOM-7X1066B	STRAP, radio noise filter (Located in control tunnel junction box).....	1
			FOM-8X1041B	STRAP, radio noise filter (Located in instrument panel box).....	1
	H001-0716610	BBMX1C	FOM-P225	NUT, machine screw, hex., s-fin., S., No. 10 (0.190)-32NF-1.....	4
			FOM-P263	SCREW, machine, rd-hd., cross recess type, S., No. 10 (0.190)-32NF-3 x 1/2.....	4
	H001-1519007	BEAX1F	FOM-P36	WASHER, lock, internal teeth, reg., S., No. 10 (0.190) (SK-1210).....	4
	H004-0370132		FOM-P427	TERMINAL, solderless, cable (TB-C71) (clutch and throttle control rods bond jumpers (6), oil temperature gage bond jumper (1), and instrument panel box bond jumper (1)).....	8
	H004-506213		FOM-P426	TERMINAL, solderless, cable (TB-C77) (instrument lines bond jumpers (8), and clutch and throttle control rods bond jumpers (6)).....	14
	H004-0370131		FOM-P429	TERMINAL, solderless, cable (TB-C26) (oil temperature gage bond jumper (1), and instrument panel box bond jumper (1)).....	2
			FOM-P620	TERMINAL, solderless, cable (TB-F26) (radio noise filter to ammeter cable).....	1
			FOM-P619	TERMINAL, solderless, cable (TB-F71) (radio noise filter to ammeter cable).....	1

MAINTENANCE PARTS FOR ARMAMENT, SIGHTING AND FIRE CONTROL EQUIPMENT

Reviewed in the following SNL'S:

Mk I; LVT (A) (1)	
GUN, 37-mm, M6.....	SNL A-54
GUN, machine, cal. .30 Browning, M1919A5 (fixed).....	SNL A-6
GUN, machine, cal. .30, Browning, M1919A4 (flexible).....	SNL A-6
MOUNT, combination gun, M44.....	SNL A-55, Sec. 24
MOUNT, scarf ring, Mk 21, M41.....	SNL A-55, Sec. 27
Mk IV; LVT (A) (4)	
BINOCULAR, M13.....	SNL F-210
CARBINE, cal. .30, M1.....	SNL B-28
GUN, machine, cal. .30, Browning, M1919A4, flexible.....	SNL A-6
GUN, submachine, cal. .45, M3.....	SNL A-32
HOWITZER, 75-mm, M3.....	SNL C-51
LAUNCHER, rocket, automatic, 4.5 inch, T45.....	SNL C-67
LAUNCHER, grenade, M8.....	SNL C-39
MOUNT, ball.....	SNL A-55, Sec. 13
MOUNT, howitzer, 75-mm, M7.....	SNL C-51
PERISCOPE, M6.....	SNL F-235
QUADRANT, gunner's, M1.....	SNL F-140
STABILIZER.....	SNL C-56
TELESCOPE, panoramic, M12A5.....	SNL F-214
TELESCOPE, sight.....	SNL F-235

INDEXES

TABLE OF CONTENTS

	PAGE
ILLUSTRATION INDEX.....	400
ALPHABETICAL INDEX.....	403
NUMERICAL INDEXES	
ORDNANCE PART NUMBER.....	435
MANUFACTURER'S PART NUMBER.....	445
OFFICIAL STOCK NUMBER.....	472

Figure	Title	Page
A	Vehicle, Landing, Tracked (Armored) Mk I; LVT (A) (1)—3/4 Right Front View	11
B	Vehicle, Landing, Tracked (Armored) Mk I; LVT (A) (1)—3/4 Left Rear View	12
C	Vehicle, Landing, Tracked (Armored) Mk I; LVT (A) (1)—Front View	13
D	Vehicle, Landing, Tracked (Armored) Mk I; LVT (A) (1)—Rear View	14
E	Vehicle, Landing, Tracked (Armored) Mk I; LVT (A) (1)—Top View	15
F	Vehicle, Landing, Tracked (Armored) Mk I; LVT (A) (1)—Cross Sectional View	16
G	Vehicle, Landing, Tracked (Armored) Mk IV; LVT (A) (4)—3/4 Right Front View	17
H	Vehicle, Landing, Tracked (Armored) Mk IV; LVT (A) (4)—3/4 Left Rear View	18
J	Vehicle, Landing, Tracked (Armored) Mk IV; LVT (A) (4)—Front View	19
K	Vehicle, Landing, Tracked (Armored) Mk IV; LVT (A) (4)—Rear View	20
L	Vehicle, Landing, Tracked (Armored) Mk IV; LVT (A) (4)—Top View	21
M	Vehicle, Landing, Tracked (Armored) Mk IV; LVT (A) (4)—Cross Sectional View	22
N	Vehicular Accessories	23
P	Vehicular Tool Kit	24-25
01-1	Engine Less Clutch, Flywheel, Fan, and Shroud—Front View	29
01-2	Engine Accessories—Installed View	32-33
01-3	Crankcase and Related Parts	35
01-4	Cylinder and Related Parts	36-37
01-5	Cylinder	39
01-6	Crankshaft Assembly—Exploded View	41
01-7	Piston, Pin, and Rings	43
01-8	Master and Articulated Connecting Rods	45
01-9	Oil Pressure and Scavenger Pump Assembly—Exploded View	49
01-10	Rocker Box Oil Scavenger Pump Assembly—Exploded View	51
01-11	Automatic Oil Filter Assembly—Exploded View	57
01-12	Oil Filter Motor Assembly—Exploded View	60-61
01-13	High-Pressure Oil Screen Assembly—Exploded View	63
01-14	Engine Oil Distribution System	65
01-15	Flywheel, Fan, and Shroud	67
01-16	Engine Mount and Throttle Controls	69
01-17	Engine Steady Bar Support	71
01-18	Gear Arrangement Inside of Accessory Case—Installed View	73
01-19	Accessory Case and Related Parts—Outside View	74-75
01-20	Gear Arrangement Inside of Accessory Case—Exploded View	77
01-21	Generator Drive—Exploded View	78
01-22	Tachometer Drive—Exploded View	79
02-1	Clutch Assembly—Installed View	81
02-2	Clutch, Flywheel, and Fan	82
02-3	Clutch Release Yoke Assembly—Exploded View	83
02-4	Clutch Pressure Plate and Housing	85
03-1	Fuel Shut-off Valve and Handle Assembly—Exploded View	87
03-2	Fuel Tank Filler Pipe Assembly—Exploded View	89
03-3	Carburetor Main Body and Float Chamber Valve—Exploded View	90
03-4	Carburetor Main Body, Throttle Body, Accelerator Pump Piston Valve, and Venturi—Exploded View	91
03-5	Carburetor Main Body, Throttle Body, Idle Adjusting Lever, Accelerator Pump Lever, and Throttle Valve Shaft—Exploded View	93
03-6	Carburetor Air Horn—Exploded View	97
03-7	Left Air Cleaner Assembly—Exploded View	99
03-8	Fuel Pump Assembly—Exploded View	102-103
03-9	Fuel System	106-107
03-10	Governor Assembly—Exploded View	109
03-11	Governor and Control Rods—Exploded View	111
03-12	Fuel Filter Assembly and Related Parts	113
03-13	Fuel Filter Assembly—Exploded View	115
03-14	Primer Pump Assembly—Exploded View	117
03-15	Fuel Priming Distributor and Tubes	119
04-1	Muffler and Related Parts	121
05-1	Engine Fan Shroud—Installed View	123
05-2	Engine Cylinder Baffles—Exploded View	125
06-1	Generator—Exploded View	129
06-2	Generator Frame and Field—Exploded View	131
06-3	Generator Commutator End—Exploded View	132
06-4	Regulator and Relay Panel—Cover Removed	133
06-5	Generator Regulator Terminal Block and Related Parts	135
06-6	Generator Regulator Mounting Plate with Attached Units—Exploded View	137
06-7	Current Regulator Assembly—Exploded View	139

Figure	Title	Page
06-8	Voltage Regulator Assembly—Exploded View	141
06-9	Generator Regulator Cut-out Relay Assembly—Exploded View	142
06-10	Cranking Motor Assembly—Exploded View	143
06-11	Cranking Motor Drive Assembly and Housing—Exploded View	144
06-12	Cranking Motor Drive End Frame, Hand Cranking Parts, and Related Parts—Exploded View	145
06-13	Cranking Motor Barrel Assembly—Exploded View	147
06-14	Scintilla Magneto Assembly	149
06-15	Scintilla Magneto Assembly—Exploded View	150-151
06-16	Magneto Housing Assembly—Exploded View	153
06-17	Magneto Magnet Assembly—Exploded View	155
06-18	Magneto Drive End Plate—Exploded View	157
06-19	Magneto Breaker and End Cover—Exploded View	159
06-20	Magneto Coil and Condenser—Exploded View	160
06-21	Magneto Blocks—Exploded View	161
06-22	Magneto Coil Cover—Exploded View	163
06-23	Booster Coil Assembly	165
06-24	Ignition Harness and Spark Plug Conduits	166
06-25	Control Panel—Cover Removed	167
06-26	Control Panel Cover	169
06-27	Instrument Panel—Front View	171
06-28	Instrument Panel—Rear View	175
06-29	Left Headlight Assembly—Exploded View	177
06-30	Right Taillight Assembly—Exploded View	179
06-31	Relay Terminal Base and Related Parts	181
06-32	Regulator and Relay Panel, Distribution Box, and Battery	183
06-33	Relay Assembly—Exploded View	184
06-34	Auxiliary Generator Assembly—Installed View	185
06-35	Auxiliary Generator Assembly—Rear View	187
06-36	Auxiliary Generator Engine Crankcase and Saddle Support—Exploded View	189
06-37	Auxiliary Generator Armature w/Fan and Field Coil Ring—Exploded View	190
06-38	Auxiliary Generator Field Coils and Pole Pieces—Exploded View	191
06-39	Auxiliary Generator Engine Cylinder and Head—Exploded View	193
06-40	Auxiliary Generator Engine Crankshaft, Piston, Connecting Rod, Governor, and Breather—Exploded View	195
06-41	Auxiliary Generator Engine Camshaft and Valves—Exploded View	197
06-42	Auxiliary Generator Engine Carburetor—Exploded View	198-199
06-43	Auxiliary Generator Panel Board Assembly—Top View	203
06-44	Auxiliary Generator Panel Board Assembly—Bottom View	205
06-45	Auxiliary Generator Panel Board Assembly—Exploded View	207
06-46	Auxiliary Generator Cut-out Assembly—Exploded View	209
06-47	Auxiliary Generator Engine Ignition Housing—Exploded View	211
06-48	Blower Assembly—Exploded View	213
06-49	Dome Light Assembly—Exploded View (Mk I; LVT (A) (1) only)	215
06-50	Gyro Switch Box Assembly (Mk I; LVT (A) (1) only)	217
06-51	Gyro Switch Box Assembly—Cover Removed (Mk I; LVT (A) (1) only)	219
06-52	Master Switch Box Assembly (Mk I; LVT (A) (1) only)	221
06-53	Master Switch Box Assembly—Cover Removed (Mk I; LVT (A) (1) only)	223
06-54	Slip Ring and Electrical Conduits—Installed View (Mk I; LVT (A) (1) only)	225
06-55	Slip Ring Assembly—Hood Removed (Mk I; LVT (A) (1) only)	227
07-1	Transmission Assembly and Related Parts—Assembled View	228-229
07-2	Transmission Internal Mechanism—Assembled View	231
07-3	Transmission Input Shaft, Gears, and Bearings—Exploded View	233
07-4	Transmission Output Shaft, Gears, Bearings, and Synchronizers—Exploded View	235
07-5	Transmission Output Shaft Gears and Rollers—Exploded View	237
07-6	Transmission Gear Synchronizer Assembly—Exploded View	239
07-7	Transmission Reverse Shaft and Gear, Idler Gear, and Bearing—Exploded View	241
07-8	Transmission Gear Shift Lever Assembly—Exploded View	242
07-9	Transmission Shifter Rods, Forks, and Support—Exploded View	243
07-10	Transmission Oil Pump Assembly—Exploded View	245
07-11	Transmission Oil Strainer Assembly—Exploded View	247
07-12	Transmission Oil Pressure Valve Assembly—Exploded View	247
09-1	Propeller Shafts and Supports	251
09-2	Propeller Shaft Universal Joint Assembly—Exploded View	252
10-1	Controlled Differential—Exploded View	255
10-2	Left Interior Final Drive Assembly—Exploded View	257
10-3	Exterior Final Drive Coupling Ring, Hub, and Through Bolt	259
10-4	Exterior Final Drive Shaft—Exploded View	261

Figure	Title	Page
13-1	Bogie Wheel and Torsional Suspension Assembly	263
13-2	Bogie Wheel Assembly—Exploded View	264
13-3	Rear Idler Assembly—Exploded View	265
13-4	Track Assembly—Exploded View	267
13-5	Return Idler Wheel Assembly—Exploded View	268
13-6	Rear Idler Sprocket Assembly—Exploded View	269
15A-1	Left Steering Brake Hand Lever and Shaft	273
15A-2	Differential Steering Brake Hand Lever Assembly—Exploded View	275
15A-3	Steering Controls and Foot Pedals	277
15A-4	Hand Throttle Control Assembly	279
15A-5	Front Bulkhead Clutch and Accelerator Control Assembly—Exploded View	281
15A-6	Rear Bulkhead Clutch Control Assembly—Exploded View	282
15A-7	Clutch and Throttle Rods and Controls	283
15A-8	Foot Pedal Shaft Assembly—Exploded View	285
17-1	Deck of Vehicle—Rear View	287
18-1	Bilge Flap Valve Assembly	289
18-2	Seat Assembly—Installed View	291
18-3	Seat Back Assembly—Exploded View	293
18-4	Seat Base—Exploded View	294
18-5	Seat Bottom—Exploded View	295
18-6	Escape Hatch Lock Handle—Exploded View	297
18-7	Instrument Box and Supporting Brackets—Exploded View	299
19-1	Turret Assembly—Cross Sectional View (Mk I; LVT (A) (1) only)	303
19-2	Interior of Turret—Left Front View (Mk I; LVT (A) (1) only)	307
19-3	Interior of Turret—Right Front View (Mk I; LVT (A) (1) only)	309
19-4	Interior of Turret—Rear View (Mk I; LVT (A) (1) only)	311
19-5	Exterior of Turret with Door Open (Mk I; LVT (A) (1) only)	313
19-5A	Anti-Aircraft Machine Gun Hold-down Latch—Exploded View (Mk IV; LVT (A) (4) only)	315
19-6	Turret Base Seals—Exploded View (Mk I; LVT (A) (1) only)	317
19-6A	Anti-Aircraft Machine Gun Mounting Brake Assembly (Mk IV; LVT (A) (4) only)	318
19-7	Turret Retaining Roller—Exploded View (Mk I; LVT (A) (1) only)	318
19-7A	Turret Traversing Ball Ring Assembly—Cross Sectional View (Mk IV; LVT (A) (4) only)	319
19-8	Turret Door Latch Assembly (Mk I; LVT (A) (1) only)	321
19-9	Turret Traversing Gear Box and Hand Operating Mechanism—Exploded View (Mk I; LVT (A) (1) only)	322
19-9A	Turret Traversing Gear Box Assembly—Exploded View (Mk IV; LVT (A) (4) only)	323
19-10	Turret Traversing Lock Assembly—Exploded View (Mk I; LVT (A) (1) only)	325
19-10A	Turret Traversing Lock Assembly—Cross Sectional View (Mk IV; LVT (A) (4) only)	326
19-11	Turret Traversing Mechanism and Firing Control Handle—Exploded View (Mk I; LVT (A) (1) only)	327
19-12	Turret Traversing Mechanism Upper Control Handle Assembly—Exploded View (Mk I; LVT (A) (1) only)	328
19-13	Turret Traversing Mechanism, Firing Control Switch, and Cover—Exploded View (Mk I; LVT (A) (1) only)	329
19-14	Turret Traversing Mechanism Gear Box Body, Shifter Fork and Lever—Exploded View (Mk I; LVT (A) (1) only)	331
19-15	Turret Traversing Mechanism Gear Box—Exploded View (Mk I; LVT (A) (1) only)	332
19-16	Turret Traversing Mechanism Hydraulic Motor—Cross Sectional View (Mk I; LVT (A) (1) only)	333
19-17	Turret Traversing Mechanism Hydraulic Motor Piston Assembly—Cross Sectional View (Mk I; LVT (A) (1) only)	335
19-18	Turret Traversing Mechanism Hydraulic Motor Shaft—Exploded View (Mk I; LVT (A) (1) only)	336
19-19	Turret Traversing Mechanism Hydraulic Motor Case and Cover—Exploded View (Mk I; LVT (A) (1) only)	337
19-20	Turret Traversing Mechanism Hydraulic Motor End Head and Valve—Exploded View (Mk I; LVT (A) (1) only)	339
19-21	Turret Traversing Mechanism Variable Displacement Pump—Longitudinal Sectional View (Mk I; LVT (A) (1) only)	340
19-22	Turret Traversing Mechanism Variable Displacement Pump—Cross Sectional View (Mk I; LVT (A) (1) only)	341
19-23	Turret Traversing Mechanism Variable Displacement Pump Back-up Piston—Cross Sectional View (Mk I; LVT (A) (1) only)	343
19-24	Turret Traversing Mechanism Variable Displacement Pump Pilot Valve and Equalizer Bar—Cross Sectional View (Mk I; LVT (A) (1) only)	345
19-25	Turret Traversing Mechanism Variable Displacement Pump—Exploded View (Mk I; LVT (A) (1) only)	347
19-26	Turret Traversing Mechanism Variable Displacement Pump Case Slide Block and Ways—Exploded View (Mk I; LVT (A) (1) only)	349
19-27	Turret Traversing Mechanism Variable Displacement Pump Gear Housing—Exploded View (Mk I; LVT (A) (1) only)	350
19-28	Turret Traversing Mechanism Variable Displacement Pump Case, Control Cam, and Pistons—Exploded View (Mk I; LVT (A) (1) only)	351
19-29	Turret Traversing Mechanism Variable Displacement Pump Case, Pilot Valve, and Equalizer Bar—Exploded View (Mk I; LVT (A) (1) only)	353

Figure	Title	Page
19-30	Turret Traversing Mechanism Variable Displacement Pump Case, Control Mechanism, and Slide Block Piston—Exploded View (Mk I; LVT (A) (1) only)	355
19-31	Turret Traversing Mechanism Variable Displacement Pump End Head and Valve—Exploded View (Mk I; LVT (A) (1) only)	357
19-32	Turret Traversing Mechanism Variable Displacement Pump End Head and Check Valves—Exploded View (Mk I; LVT (A) (1) only)	359
19-33	Turret Traversing Mechanism Oil Pot, Filler, Strainer, and Fittings—Exploded View (Mk I; LVT (A) (1) only)	361
19-34	Turret Traversing Mechanism Oil Pot, Relief Valve, and Inspection Cover—Exploded View (Mk I; LVT (A) (1) only)	362
19-35	Turret Traversing Mechanism Tubes—Installed View (Mk I; LVT (A) (1) only)	363
19-36	Foot Firing Mechanism—Exploded View (Mk I; LVT (A) (1) only)	365
19-37	Periscope Housing Assembly—Exploded View (Mk I; LVT (A) (1) only)	367
19-38	Periscope Linkage Assembly—Exploded View (Mk I; LVT (A) (1) only)	369
20-1	Power Take-off Assembly—Exploded View	371
22-1	Bilge Pump Assembly—Exploded View	373
22-2	Bilge Pump Drive Shaft Assembly—Exploded View	375
22-3	Gun Traveling Lock Assembly—Exploded View (Mk I; LVT (A) (1) only)	379
24-1	Fixed Fire Extinguisher System—Side View	385
24-2	Fixed Fire Extinguisher System—Rear View	386
24-3	Fixed Fire Extinguisher System—Top View	387
26-1	Radio Set—Installed View	391
26-2	Radio Junction Box—Cover Removed	393
26-3	Internal Communication Speaker Junction Box—Exploded View	395

ALPHABETICAL INDEX

ALPHABETICAL

Attaching parts are not included in this index. They are listed in the body of the catalog indented under the listing of the part which they attach. For example, to find the attaching parts for the rear idler sprocket, look up "SPROCKET, rear idler" in this index and turn to the sub-group shown. The attaching parts will be found in that sub-group, indented under the listing of "SPROCKET, rear idler."

Item	Group	Item	Group
A			
ADAPTER, interior to exterior final drive shaft.	1008A	ARM, engine generator brush.	0601
ADAPTER, periscope housing.	1816	ARM, hand operated turret traversing mechanism rotating lever index.	1903
ADAPTER, socket wrench.	2301	ARM, mounting, return idler.	1306
ADAPTER, transmission oil pressure valve.	0709D	ARM, operating, engine room hinged hatch hinge.	1805H
ADAPTER, turret rotating periscope housing.	1905-1	ARM, release, clutch.	0202
ADAPTER, turret traversing mechanism, dual control lower handle lever to rod.	1903C	ARM, rocker, hand operated bilge pump, assembly.	2208F
ADJUSTER, eye bolt, .50 cal. anti-aircraft machine gun.	1900-1	ARM, seat carriage.	1804
ADJUSTER, turret traversing gear box housing flange.	1903D	ARM, turret slip ring contact brush, assembly.	0613A 0613B
ADJUSTER, turret traversing mechanism worm gear, assembly.	1903D	ARMATURE, auxiliary generator panel board cutout, assembly.	0611H-1
AMMETER, assembly.	0605	ARMATURE, auxiliary generator, w/FAN, assembly.	0611A
AMMETER, auxiliary generator, panel board, assembly.	0611H-1	ARMATURE, booster coil.	0604
AMPLIFIER, interphone, assembly.	2602A	ARMATURE, engine cranking motor, assembly.	0602
ANGLE, auxiliary generator engine exhaust support.	0611F	ARMATURE, engine generator, assembly.	0601
ANGLE, auxiliary generator engine fuel tube clip support.	0611C	ARMATURE, engine generator current and voltage regulators.	0601B
ANGLE, support bracket, auxiliary generator engine.	0611	ARMATURE, engine generator regulator cut-out relay.	0601B
ANTENNA, radio.	2601	ARROW, indicator, turret slip ring.	0613B
ARM, automatic oil filter motor piston, assembly.	0107E-1	AX.	2301A
ARM, automatic oil filter motor valve, assembly.	0107E-1	AXLE, magneto breaker contact lever.	0603A
ARM, engine carburetor accelerating pump.	0301	AXLE, magneto distributor gear, assembly.	0603A
		AXLE, seat, upper and lower arm.	1804
		AXLE, vertical release lever.	1804

Item	Group
B	
BACK, turret seat.....	1901A
BAFFLE, air, auxiliary generator engine carburetor choke, w/DFELECTOR, assembly.....	0611D
BAFFLE, air, front, assembly.....	0500
BAFFLE, cylinder, assembly.....	0500
BAFFLE, cylinder head.....	0500
BAFFLE, cylinder, w/SUPPORT, assembly.....	0500
BAFFLE, engine room, assembly.....	1801B
BAFFLE, fan shroud to rear spark plug.....	0500
BAFFLE, sump, side, assembly.....	0500
BAG, cleaning staff.....	1907
BAG, tarpaulin, scarf mount.....	2302B
BAG, .30 cal. machine gun empty cartridge.....	1906
BAG, 37mm. gun empty cartridge.....	1906
BAIL, turret traversing mechanism variable displacement pump control cam back-up.....	1903E
BALL, automatic oil filter motor detent.....	0107E-1
BALL, engine carburetor throttle adjusting stop screw.....	0301
BALL, engine cranking motor drive housing.....	0602
BALL, engine fuel primer pump check springs.....	0308A-1
BALL, engine high pressure oil screen by-pass valve.....	0107E-2
BALL, transmission gear shifter rod support, interlock.....	0706B
BALL, transmission gear shifter rod support, poppet.....	0706B
BALL, transmission oil strainer by-pass.....	0709C
BALL, turret roof seat stowage locking pin.....	1907
BALL, turret traversing.....	1903A
BAND, cover, engine cranking motor commutator end frame.....	0602
BAND, cover, engine generator, assembly.....	0601
BAND, differential steering brake, assembly.....	1009
BAR, bus, turret traversing mechanism control handle firing control switch.....	1903B
BAR, clamp, pioneer equipment bracket.....	2301A
BAR, cranking motor and battery relay stationary contact, w/NUT, assembly.....	0610B-2
BAR, horizontal, rear idler slide.....	1304
BAR, jimmy.....	2301
BAR, plunger, transmission oil pressure valve.....	0709D
BAR, spring, .50 cal. anti-aircraft machine gun ammunition box.....	1906
BAR, steady, engine.....	0100 0110
BAR, tie, cylinder baffles.....	0500
BAR, tie, intercylinder baffles.....	0500
BAR, traveling, turret gun lock.....	2218
BAR, valve hold down, hand operated bilge pump valve box.....	2208F
BARREL, engine cranking motor drive, w/CLUTCH, assembly.....	0602
BARREL, engine cranking motor, w/STUD, assembly.....	0602
BARREL, engine fuel primer pump, assembly.....	0308A-1
BASE, cab escape hatch hinge.....	1805H
BASE, cab window cover hinge.....	1805H
BASE, control panel fuse.....	0606C
BASE, cranking motor and battery relay terminal.....	0610B-1
BASE, engine generator terminal box.....	0601
BASE, engine governor.....	0305
BASE, mounting, engine generator.....	0601
BASE, seat.....	1804
BASE, terminal, internal communication speaker junction box.....	2602D

Item	Group
BASE, turret traversing mechanism gear box shifter lever shaft.....	1903D
BATTERY, storage.....	0610
BEAD, sealing, turret .30 cal. gun solenoid.....	0613
BEAM, support, engine.....	0100 0110
BEARING, auxiliary generator armature brush lever.....	0611A
BEARING, auxiliary generator engine crankshaft.....	0611B-3
BEARING, ball, engine cranking motor armature shaft, commutator end.....	0602
BEARING, ball, engine cranking motor armature shaft, drive end.....	0602
BEARING, ball, generator drive shaft.....	0113B-4
BEARING, bilge pump shaft.....	2208C
BEARING, bogie wheel shaft.....	1303
BEARING, clutch release yoke.....	0203
BEARING, clutch spindle.....	0205
BEARING, differential.....	1003
BEARING, engine carburetor accelerating pump lever.....	0301
BEARING, engine cranking motor hand crank shaft.....	0602
BEARING, engine cranking motor intermediate gear shaft.....	0602
BEARING, engine flywheel.....	0205
BEARING, engine generator armature shafts commutator end.....	0601
BEARING, engine generator drive end.....	0601
BEARING, engine governor drive shaft.....	0305
BEARING, engine governor rocker shaft.....	0305
BEARING, engine governor speed control rod.....	0305A
BEARING, engine master connecting rod.....	0104
BEARING, exterior final drive shaft.....	1008A
BEARING, interior final drive axle shaft.....	1008A
BEARING, magneto, drive end.....	0603A
BEARING, magneto drive shaft breaker end.....	0603A
BEARING, needle, engine cranking motor hand crank shaft.....	0602
BEARING, power take-off tranverse shaft.....	2012
BEARING, power take-off vertical shaft.....	2012
BEARING, rear idler sprocket shaft.....	1307
BEARING, return idler wheel mounting shaft.....	1306
BEARING, rod end, engine governor throttle rod.....	0305A
BEARING, roller, engine intake and exhaust valve rocker.....	0105A
BEARING, roller, turret traversing mechanism variable displacement pump piston reaction w/o outer RACE.....	1903A
BEARING, thrust, turret traversing mechanism worm.....	1903D
BEARING, transmission first speed gear.....	0704C
BEARING, transmission input shaft fifth speed gear.....	0703A
BEARING, transmission input shaft, front.....	0703A
BEARING, transmission output shaft fifth speed gear.....	0704A
BEARING, transmission output shaft second speed gear.....	0704A
BEARING, transmission reverse shaft.....	0704C
BEARING, transmission spiral bevel pinion.....	1003
BEARING, trunnion periscope holder.....	1816
BEARING, trunnion, universal joint, assembly.....	0902
BEARING, turret rotating periscope holder.....	1905-1
BEARING, turret sighting periscope holder.....	1905-2
BEARING, turret sighting periscope housing.....	1905-2

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
BEARING, turret sighting periscope linkage	1905
BEARING, turret traversing gear box lower housing	1903D
BEARING, turret traversing mechanism gear box intermediate shaft	1903A
BEARING, turret traversing mechanism gear box output shaft body	1903A
BEARING, turret traversing mechanism gear box output shaft cover	1903A
BEARING, turret traversing mechanism hydraulic piston reaction	1903A
BEARING, turret traversing mechanism shaft pinion end	1903D
BEARING, turret traversing mechanism variable displacement pump and hydraulic motor shaft	1903A
BEARING, turret traversing mechanism variable displacement pump and motor cylinder	1903A
BEARING, turret traversing support, assembly	1900B
BELLOWS, sealing, fuel shut-off valve	0300-1
BELT, driver's and radio operator's seats	1804
BELT, generator drive	0113B-4
BELT, safety	2302B
BELT, safety, turret seat	1901A
BELTING, cotton	0300
BEZEL, headlight	0607
BINDER, track chain	2301
BLADE, hacksaw, hand	2301
BLEED, idle air, engine carburetor	0301
BLEED, main air, engine carburetor	0301
BLOCK, automatic oil filter motor valve, assembly	0107E-1
BLOCK, center, fuel shut-off valve universal joint	0300-1
BLOCK, control tunnel junction box binding post	0606C
BLOCK, engine carburetor throttle adjustment stop	0301
BLOCK, extension, turret traversing lock shaft	1903B
BLOCK, guide, clutch and throttle intermediate rod, assembly	15D1
BLOCK, guide, clutch and throttle rear rod, assembly	15D1
BLOCK, guide, throttle rod	15C1-A
BLOCK, magneto distributor, assembly	0603A
BLOCK, supporting, engine oil filter outlet line	0107J
BLOCK, terminal, engine generator regulator	0601B
BLOCK, terminal, internal communication speaker junction box, assembly	2602D
BLOCK, terminal, power outlet box	0606E
BLOCK, terminal, radio cabinet junction box	2602B
BLOCK, transmission gearshift lever, fulcrum	0706A
BLOCK, transmission gearshift lever, pivot	0706A
BLOCK, transmission gearshift lever, w/PLATES and PINS, assembly	0706A
BLOWER, ventilating, cab, assembly	0612
BOARD, insulating, auxiliary generator panel board binding posts	0611H-1
BOARD, panel, auxiliary generator mounting ammeter, stop and start switches	0611H-1
BOARD, panel, auxiliary generator, w/COIL and CUTOUT, assembly	0611H-1
BODY, engine carburetor air cleaner, assembly	0301C
BODY, engine carburetor, main, assembly	0301
BODY, engine carburetor throttle, assembly	0301
BODY, engine fuel primer pump, assembly	0308A-1
BODY, engine governor	0305
BODY, engine oil pressure and scavenger pump pressure gear, w/STUDS, assembly	0107
BODY, engine valve rocker oil scavenger pump, w/STUDS, assembly	0107C

Item	Group
BODY, fuel shut-off valve	0300-1
BODY, hand operated turret traversing gear box handle lever	1903
BODY, headlight, assembly	0607
BODY, internal communication speaker junction box, assembly	2602D
BODY, seat	1804
BODY, taillight	0608
BODY, transmission case final drive housing breather	0701
BODY, transmission oil pressure valve	0709D
BODY, transmission oil pump	0709A
BODY, transmission oil pump relief valve	0709A
BODY, turret traversing mechanism gear box	1903D
BOLT, cab window cover operating handle to operating link	1805H
BOLT, clamping, engine crankshaft	0101A
BOLT, engine crankcase, long	0101
BOLT, engine crankcase, to crankcase double end	0101
BOLT, engine crankcase to crankcase, short	0101
BOLT, eye, .50 cal. anti-aircraft machine gun	1900-1
BOLT, eye, foot pedal return spring	15C1-A 15D1
BOLT, gearshift lever to fulcrum block	0706A
BOLT, lock, turret traversing lock	1903B
BOLT, through, engine generator	0601
BOLT, through, exterior final drive, w/PIN, assembly	1008A
BOOT, engine carburetor throttle lever	0301
BOOT, turret conduit connector, upper and lower	0613F
BOOT, turret gyro switch box conduit	0613D
BOOT, turret master switch	0613E
BOOT, turret traversing mechanism, control link	1903C
BOTTOM, engine room gas exhaust blower upper duct	0612
BOX, ammunition, .30 cal.	1906
BOX, ammunition, 37 mm.	1906
BOX, auxiliary generator panel board cutout, w/COVER, assembly	0611H-1
BOX, battery and bulb stowage	1907
BOX, battery and bulk stowage	2302B
BOX, binocular, assembly	1907
BOX, control panel, assembly	0606E
BOX, distribution, electrical, assembly	0606E
BOX, engine generator regulator and relay panel, assembly	0601B
BOX, .50 cal. anti-aircraft machine gun ammunition	1906
BOX, flares and projector	1906
BOX, .45 and .50 cal. spare parts	1907
BOX, .45 cal. ammunition, assembly	1906
BOX, gear, turret traversing mechanism, w/hydraulic MOTOR, assembly	1903D
BOX, gear, turret traversing w/HANDWHEEL and PINION GEAR, assembly	1903D
BOX, grenade, fragmentation	1906
BOX, grenade, smoke and thermite	1906
BOX, instrument, assembly	1809
BOX, junction, control tunnel, assembly	0606E
BOX, junction, internal communication speaker, assembly	2602D
BOX, junction, main, assembly	0606E
BOX, junction, radio, assembly	2602B
BOX, junction, radio cabinet, assembly	2602B
BOX, pamphlet stowage, assembly	1907
BOX, portable spotlight	0608A
BOX, power outlet, assembly	0606E

Item	Group
BOX, ration, assembly	2302B
BOX, ration, turret, assembly	1906
BOX, receptacle, cab ventilating fan, assembly	0606E
BOX, receptacle, right headlight, assembly	0606E
BOX, receptacle, spotlight, assembly	0606E
BOX, recoil oil	1907
BOX, 75mm. ammunition	1906
BOX, 75mm. howitzer spare parts	1907
BOX, terminal, engine generator	0601
BOX, tool	1817
BOX, turret gyro switch, assembly	0613D
BOX, turret master switch, assembly	0613E
BOX, turret periscope	1907
BOX, valve, hand operated bilge pump	2208F
BRACE, engine room hatch	1805H
BRACKET, automatic oil filter, w/CLAMP, assembly	0107E-1
BRACKET, auxiliary generator ammeter support	0611H-1
BRACKET, auxiliary generator engine fuel tube support	0611C
BRACKET, auxiliary generator engine governor outer operating lever spring	0611E
BRACKET, baffle to cylinder	0500
BRACKET, clutch release yoke	0203
BRACKET, contact, engine generator current and voltage regulators, w/POINT, assembly	0601B
BRACKET, contact, engine generator regulator cut-out relay, w/POINTS, assembly	0601B
BRACKET, control panel to instrument panel shielded cable clip	0606C
BRACKET, engine generator regulator cut-out relay, w/STOP, assembly	0601B
BRACKET, engine governor auxiliary spring adjusting screw, assembly	0305
BRACKET, .50 cal. anti-aircraft machine gun ammunition box, assembly	1906
BRACKET, fixed fire extinguisher dual cylinder	2401
BRACKET, foot pedal shaft, w/BUSHING, assembly	15C1-A 15D1
BRACKET, .45 cal. ammunition box handle	1906
BRACKET, front bulkhead clutch and accelerator control	15C1-A 15D1
BRACKET, front bulkhead, propeller shaft	0901A
BRACKET, front propeller shaft	0901A
BRACKET, hand fire extinguisher	2402
BRACKET, hand operated bilge pump diaphragm plate	2208F
BRACKET, hand throttle cable, assembly	15C1-B
BRACKET, holder, turret gunner's and loader's seat	1901A
BRACKET, instrument box, assembly	1809
BRACKET, interior final drive	1008A
BRACKET, latch, .45 cal. ammunition box cover, assembly	1906
BRACKET, mounting, auxiliary generator panel board, assembly	0611H-1
BRACKET, mounting, auxiliary generator panel board starting switch, w/BOLT, assembly	0611H-1
BRACKET, mounting, compass	2210
BRACKET, mounting, driver's remote control unit	2602C
BRACKET, mounting engine generator	0100 0601A
BRACKET, mounting, engine generator current and voltage regulator contact bracket	0601B
BRACKET, mounting, hand throttle	15C1-B

Item	Group
BRACKET, mounting, oil cooler	0107B 0709
BRACKET, mounting, turret basket slip ring	0613B
BRACKET, mounting turret traversing mechanism control handle	1903C
BRACKET, mounting, turret traversing mechanism variable displacement pump disengaging switch	1903E
BRACKET, pipe support, auxiliary generator engine exhaust	0611F
BRACKET, rear bulkhead clutch control rocker	15D1
BRACKET, rear idler, w/slide, BAR, assembly	1304
BRACKET, resilient, engine mount	0110
BRACKET, retaining, turret, w/ROLLERS, assembly	1900B
BRACKET, shielded nozzle	2401
BRACKET, steering brake hand lever quadrant, assembly	15A1
BRACKET, steering brake hand lever shaft, assembly	15A1
BRACKET, support, magneto breaker contact screw	0603A
BRACKET, supporting, flexible conduit, assembly	0606C
BRACKET, throttle operating rod control lever	15C1-A
BRACKET, transmission oil pressure valve and strainer, assembly	0709D
BRACKET, turret gun mount disengaging switch	0613C
BRACKET, turret traversing lock	1903B
BRAKE, .50 cal. anti-aircraft machine gun mounting assembly	1900-2
BREAKER, circuit, assembly	0606D
BREAKER, circuit, turret master switch	0613E
BREAKER, magneto, assembly	0603A
BREAKER, water	2301A
BREATHHER, auxiliary generator engine, assembly	0611E
BREATHHER, transmission case, assembly	0701
BREATHHER, transmission case final drive housing assembly	0701
BRIDGE, automatic oil filter motor cover, assembly	0107E-1
BRIDGE, magneto coil primary to ground terminal, assembly	0603A
BRUSH, auxiliary generator armature assembly	0611A
BRUSH, contact, turret slip ring	0613B
BRUSH, engine cranking motor	0602
BRUSH, magneto distributor cylinder, high tension contact, assembly	0603A
BRUSH, engine generator, assembly	0601
BRUSH, turret slip ring radio ring	0613B
BUCKET, boiling	2302B
BUCKLE, sighting light chest strap, horizontal and vertical water can straps and tarpaulin straps	1907
BULB, hand lantern	2302B
BULB, turret dome light	0613A
BULB, turret gyro switch box pilot light	0613D
BUMPER, rubber, bogie wheel, w/BOLT, assembly	1303
BUS, branch, control panel fuse base	0606C
BUS, branch, control tunnel junction box	0606C
BUS, cranking motor relay terminal post	0610B-1
BUS, elbow, battery relay terminal post	0610B-1
BUS, grounding, control panel	0606C
BUS, main, control panel fuse base	0606C
BUSHING, accelerator foot pedal shaft bracket	15C1-A 15D1
BUSHING, automatic oil filter hydraulic motor clutch	0107E-1
BUSHING, automatic oil filter hydraulic motor valve	0107E-1

Item	Group
BUSHING, automatic oil filter manual turning shaft.....	0107E-1
BUSHING, automatic oil filter manual turning shaft cover.....	0107E-1
BUSHING, automatic oil filter motor bridge.....	0107E-1
BUSHING, automatic oil filter rocking shaft pin and motor head.....	0107E-1
BUSHING, auxiliary generator ammeter shunt terminal.....	0611H-1
BUSHING, auxiliary generator engine cam follower lock plate.....	0611B-6
BUSHING, auxiliary generator engine connecting rod.....	0611B-5
BUSHING, auxiliary generator engine connecting rod piston pin.....	0611B-5
BUSHING, auxiliary generator fuel line.....	0611C
BUSHING, auxiliary generator panel board cutout head.....	0611H-1
BUSHING, auxiliary generator panel board starting switch mounting screw and cutout coil terminal screw.....	0611H-1
BUSHING, cab escape hatch latch handle.....	1805H
BUSHING, cam drive intermediate gear.....	0113B-2
BUSHING, clutch foot pedal shaft bracket.....	15C1-A 15D1
BUSHING, conduit, turret traversing mechanism handle firing control trigger.....	1903C
BUSHING, differential compensating gear case cover.....	1003
BUSHING, differential internal pinion.....	1003
BUSHING, differential steering brake flange.....	1009
BUSHING, differential steering brake shaft.....	1009
BUSHING, engine accessory drive gear.....	0113B-3
BUSHING, engine articulated connecting rod to knuckle pin.....	0104
BUSHING, engine carburetor accelerator pump.....	0301
BUSHING, engine carburetor air bleeder.....	0301
BUSHING, engine carburetor air horn stud.....	0301
BUSHING, engine carburetor economizer valve.....	0301
BUSHING, engine carburetor float mechanism.....	0301
BUSHING, engine carburetor needle valve seat.....	0301
BUSHING, engine carburetor strainer screen.....	0301
BUSHING, engine carburetor throttle shaft.....	0301
BUSHING, engine carburetor throttle stop.....	0301
BUSHING, engine connecting rod to piston pin.....	0104
BUSHING, engine cranking motor drive clutch.....	0602
BUSHING, engine cranking motor drive gear.....	0113B-3
BUSHING, engine cranking motor drive sun gear.....	0602
BUSHING, engine cranking motor rear crankshaft gear.....	0113B-3
BUSHING, engine governor drive shaft.....	0305
BUSHING, engine governor speed adjusting lever.....	0305
BUSHING, engine governor speed control rod tube.....	0305A
BUSHING, engine governor throttle control lever.....	0305
BUSHING, engine governor thrust sleeve yoke.....	0305
BUSHING, engine governor variable speed control lever.....	0305
BUSHING, engine oil pressure and scavenger pump drive gear.....	0113B-6
BUSHING, engine oil reservoir vent tee.....	0107J
BUSHING, engine oil scavenger pump hose to filter.....	0107J
BUSHING, engine valve rocker oil scavenger pump drive gear.....	0113B-7
BUSHING, engine valve rocker roller.....	0105B
BUSHING, fuel pump rear housing.....	0302

Item	Group
BUSHING, generator drive gear.....	0113B-4
BUSHING, governor speed adjusting lever.....	0305
BUSHING, guide, fuel shut-off valve stem.....	0300-1
BUSHING, hand operated turret traversing mechanism gear box crank shaft.....	1903
BUSHING, insulating, auxiliary generator field ring leads.....	0611A
BUSHING, insulating, auxiliary generator panel board binding post bolts.....	0611H-1
BUSHING, insulating, auxiliary generator panel board terminal post bolt marked "BATT".....	0611H-1
BUSHING, insulating, cranking motor and battery relay contact disk.....	0610B-2
BUSHING, insulating, engine cranking motor terminal.....	0602
BUSHING, insulating, engine generator regulator terminal connector.....	0601B
BUSHING, insulating, magneto breaker contact screw bracket.....	0603A
BUSHING, interior final drive shaft inner bearing.....	1008A
BUSHING, magneto breaker contact lever.....	0603A
BUSHING, magneto coil cover ground terminal.....	0603A
BUSHING, magneto drive gear.....	0113B-5
BUSHING, oilite, clutch release yoke.....	0203
BUSHING, rear bulkhead clutch control rocker.....	15D1
BUSHING, rear idler sprocket shaft lubricating fitting.....	1307
BUSHING, right fuel tank filler pipe hose to tee at carburetor.....	0304
BUSHING, spacing, auxiliary generator engine crankshaft bearing.....	0611B-3
BUSHING, speedometer driven gear shaft.....	0705
BUSHING, steering brake hand lever quadrant bracket and shaft bracket.....	15A1
BUSHING, throttle rear extension rod.....	15C1-A
BUSHING, track chain link.....	1305
BUSHING, turret dome light and firing switch conduit.....	0613F
BUSHING, turret door female hinge.....	1902A
BUSHING, turret door latch.....	1902A
BUSHING, turret door male hinge.....	1902A
BUSHING, turret gyro switch box.....	0613D
BUSHING, turret horizontal retaining roller.....	1900B
BUSHING, turret master switch box.....	0613E
BUSHING, turret slip ring.....	0613B
BUSHING, turret slip ring terminal tube.....	0613B
BUSHING, turret traversing mechanism gear pump relief valve plunger.....	1903E
BUSHING, turret traversing mechanism variable displacement pump gear.....	1903E
BUSHING, turret traversing mechanism variable displacement pump pilot valve.....	1903E
BUSHING, turret vertical retaining roller.....	1900B
BUTTERFLY, choke, auxiliary generator engine carburetor.....	0611D
BUTTERFLY, throttle, auxiliary generator engine carburetor.....	0611D
BUTTON, contact, engine governor adjustment bracket.....	0305
BUTTON, contact, engine governor throttle lever.....	0305
BUTTON, magneto ground terminal contact screw.....	0603A
BUTTON, start switch, auxiliary generator engine panel board, assembly.....	0611H-1
BUTTON, stop switch, auxiliary generator engine panel board, assembly.....	0611H-1
BUTTON, thrust, automatic oil filter motor cover.....	0107E-1

Item	Group
BUTTON, transmission gear shifter rod support ball.....	0706B
BUTTON, transmission gearshift lever latch control rod.....	0706A
C	
CABLE, auxiliary generator to cooling blower.....	0611H-3
CABLE, battery to ground.....	0610
CABLE, cab ventilating fan receptacle box to fan..	0606C
CABLE, cab ventilating fan receptacle box to headlight receptacle box.....	0606C
CABLE, connector, power outlet boxes.....	0606C
CABLE, control junction box to power outlet box..	0606C
CABLE, control panel to cab ventilating fan receptacle box.....	0606C
CABLE, control panel to distribution box.....	0606C
CABLE, control panel to instrument panel.....	0606C
CABLE, control panel to radio junction box.....	0606C
CABLE, control panel to regulator and relay panel..	0606C
CABLE, control panel to spotlight receptacle box..	0606C
CABLE, control tunnel junction box to auxiliary generator.....	0606C 0611H-3
CABLE, control tunnel junction box to battery....	0606C
CABLE, control tunnel junction box to power outlet..	0606C
CABLE, control tunnel junction box to solenoid plug..	0606C
CABLE, distribution box to left engine room blower	0606C
CABLE, distribution box to left taillight.....	0606C
CABLE, distribution box to regulator and relay panel.....	0606C
CABLE, distribution box to right engine room blower.....	0606C
CABLE, engine generator to blower.....	0606C
CABLE, left taillight to right taillight.....	0606C
CABLE, motor to slip ring and slip ring to hull....	0613F
CABLE, radio junction box to platform speaker junction box, assembly.....	0606C
CABLE, radio junction box to radio cabinet junction box, assembly.....	0606C
CABLE, radio junction box to remote control junction box, assembly.....	0606C
CABLE, radio junction box to slip ring.....	0613F
CABLE, radio junction box to speaker junction box, assembly.....	0606C
CABLE, radio noise filter to ammeter, assembly...	2603
CABLE, sling, vehicle landing.....	2301A
CABLE, slip ring to control tunnel junction box..	0613F
CABLE, slip ring to intercommunication speaker junction box.....	0613F
CABLE, tachometer.....	2205
CABLE, tow, hook.....	2301A
CABLE, turret foot firing mechanism.....	1903H
CAGE, engine crankcase front thrust bearing.....	0101
CAM, engine valve, assembly.....	0106
CAM, magneto contact breaker.....	0603A
CAM, operating, turret traversing lock, w/HANDLE.....	1903B
CAM, turret traversing mechanism variable displacement pump slide block control.....	1903E
CAMSHAFT, auxiliary generator engine, w/GEAR, and BUSHINGS, assembly.....	0611B-8
CAP, auxiliary generator oil filler and drain.....	0611B-9
CAP, bilge pump bearing.....	2208C
CAP, blower motor housing.....	0612
CAP, bogie wheel torsional suspension arm.....	1303
CAP, differential hub bearing.....	1003
CAP, end, power take-off transverse shaft.....	2012

Item	Group
CAP, engine carburetor accelerator pump.....	0301
CAP, engine cranking motor terminal shield.....	0602
CAP, engine fuel primer pump barrel.....	0308A-1
CAP, engine fuel primer pump diaphragm.....	0308A-1
CAP, engine steady bar.....	0110
CAP, engine steady bar clamp.....	0110
CAP, exterior final drive bell housing.....	1008A
CAP, filling, oil reservoir, w/BLADE, assembly....	0107D
CAP, fuel pump relief valve guide.....	0302
CAP, fuel pump relief valve, plain.....	0302
CAP, fuel shut-off valve body.....	0300-1
CAP, internal communication speaker junction box connector, w/CHAIN, assembly.....	2602D
CAP, power take-off vertical shaft.....	2012
CAP, rear idler slide head.....	1304
CAP, rear idler sprocket bearing.....	1307
CAP, retaining, rear idler sprocket.....	1304
CAP, transmission case final drive housing breather	0701
CAP, transmission case oil filler pipe.....	0709D
CAP, transmission shaft bearing.....	0701A
CAP, turret traversing mechanism gear pump relief valve.....	1903F
CAP, turret traversing mechanism oil pot breather and filler.....	1903F
CAP, turret traversing mechanism variable displacement pump check valve.....	1903E
CAP, turret traversing mechanism variable displacement pump valve spring.....	1903E
CARBURETOR, auxiliary generator engine, assembly.....	0611D
CARBURETOR, engine, w/STUDS, assembly....	0100 0301
CARRIAGE, seat, assembly.....	1804
CARTRIDGE, automatic oil filter, assembly.....	0107E-1
CARTRIDGE, engine fuel filter, assembly.....	0306
CASE, bilge pump.....	2208C
CASE, differential compensating gear.....	1003
CASE, engine accessory, w/GEARS, assembly.....	0113B-1
CASE, engine accessory, w/PUMPS, assembly.....	0113B-1
CASE, gear, power take-off.....	2012
CASE, transmission, w/INSERTS, assembly.....	0701
CASE, turret traversing mechanism and firing control handle switch.....	1903C
CASE, turret traversing mechanism hydraulic motor	1903D
CASE, turret traversing mechanism variable displacement pump.....	1903E
CENTER, automatic oil filter clutch, assembly....	0107E-1
CHAIN, track, w/CHANNEL, assembly.....	1305
CHAIN, turret gun lock.....	2218
CHANNEL, control tunnel cable, assembly.....	1801B
CHANNEL, supporting, engine flexible conduit clip	0606C
CHANNEL, track chain, w/outside LINK, assembly.....	1305
CHART, lubrication.....	2302B
CHISEL.....	2301
CHOCK, w/CLEAT, assembly.....	1801A
CIRCLIP, engine articulated connecting rod knuckle pin.....	0104
CIRCLIP, engine crankshaft rear nut.....	0101A
CIRCLIP, engine exhaust valve.....	0105
CIRCLIP, engine intake valve.....	0105
CIRCLIP, engine oil pressure and scavenger pump drive gear.....	0113B-6
CIRCLIP, engine valve rocker oil scavenger pump drive gear.....	0113B-7
CIRCLIP, engine valve tappet.....	0105A

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
CIRCLIP, generator drive shaft.....	0113B-4
CIRCLIP, magneto drive gear.....	0113B-5
CLAMP, attaching, magneto coil.....	0603A
CLAMP, attaching, magneto contact inspection cover.....	0603A
CLAMP, attaching, magneto, radio shield, assembly.....	0603A
CLAMP, battery.....	0610A
CLAMP, bilge pump diagonal discharge tube, assembly.....	2208E
CLAMP, bilge pump diagonal discharge tube elbow.....	2208E
CLAMP, bilge pump discharge tubing, assembly.....	2208E
CLAMP, bullet-sealing fuel tank drip shield overflow hose.....	0304
CLAMP, engine carburetor air cleaner intake tube coupling.....	0301C
CLAMP, engine exhaust tube, assembly.....	0402
CLAMP, engine fuel filter, w/BRACKET, assembly.....	0306
CLAMP, engine fuel tank, assembly.....	0300
CLAMP, engine generator mounting bracket.....	0100 0601A
CLAMP, engine room baffle channel support.....	1801B
CLAMP, engine steady bar, assembly.....	0110
CLAMP, engine valve rocker scavenger pump hose.....	0107J
CLAMP, .50 cal. ammunition rack, assembly.....	1906
CLAMP, .50 cal. anti-aircraft gun hold down latch.....	1900-1
CLAMP, hand operated bilge pump intake and discharge tubing and elbows, assembly.....	2208H
CLAMP, magneto distributor block, assembly.....	0603A
CLAMP, mounting, ignition harness manifold, assembly.....	0604A
CLAMP, transmission oil cooler intake and return line.....	0709D
CLAMP, turret cover support.....	2201
CLEANER, air, auxiliary generator engine, assembly.....	0611D
CLEANER, air, engine carburetor, assembly.....	0301C
CLEAT, turret conduit.....	0613F
CLEVIS, dash pot, automatic oil filter motor.....	0107E-1
CLIP, accelerator foot pedal return spring.....	15C1-A
CLIP, auxiliary generator engine exhaust line support.....	0611F
CLIP, auxiliary generator engine fuel line support.....	0611C
CLIP, auxiliary generator engine valve spring.....	0611B-6
CLIP, cable, closed.....	0606C
CLIP, cable, two line support.....	0304
CLIP, carburetor by-pass to filter pipe hose.....	0304
CLIP, carburetor by-pass to right fuel tank filler pipe hose.....	0304
CLIP, clutch control rod bond jumpers.....	2603
CLIP, clutch foot pedal return spring.....	15D1
CLIP, control panel fuse.....	0606C
CLIP, engine carburetor float seat lock.....	0301
CLIP, engine carburetor throttle lever boot.....	0301
CLIP, engine oil breather line.....	0107J
CLIP, engine oil cooler to reservoir hose.....	0107J
CLIP, engine oil filter outlet line.....	0107J
CLIP, engine oil reservoir outlet line.....	0107J
CLIP, engine room hatch latch.....	1805H
CLIP, fixed fire extinguisher.....	2401
CLIP, fuel filter suction line.....	0304
CLIP, fuel tank to tee hose.....	0304
CLIP, instrument case bond jumpers.....	2603
*CLIP, mounting, engine fuel priming tubes to ignition harness.....	0308A-2
CLIP, mounting, engine fuel priming tubes to intake pipe.....	0308A-2

Item	Group
CLIP, primer distributor pressure line.....	0304
CLIP, rear idler slide lubrication tubing.....	1304
CLIP, rear pressure line to fuel primer distributor line.....	0304
CLIP, retaining auxiliary generator armature brush lever spring.....	0611A
CLIP, retaining, map, turret.....	1907
CLIP, right tank to left tank fuel overflow line.....	0304
CLIP, spring, .50 cal. ammunition box.....	1906
CLIP, supporting, periscope wiper.....	1816
CLIP, tee to fuel filter hose.....	0304
CLIP, terminal, engine generator armature.....	0601
CLIP, terminal, engine generator field.....	0601
CLIP, terminal, engine generator field lead to ground.....	0601
CLIP, throttle control rod bond jumpers.....	2603
CLIP, transmission gearshift lever latch rod.....	0706A
CLIP, transmission hose to instrument panel oil line.....	0709D
CLIP, transmission oil intake and return lines.....	0709D
CLIP, transmission oil pressure valve to instrument panel oil line hose.....	0709D
CLIP, turret door latch.....	1902A
CLIP, turret oil lines.....	1903F
CLIP, turret oil reservoir tube.....	1903F
CLIP, turret rotating periscope holder.....	1905-1
CLIP, turret sighting periscope holder.....	1905-2
CLOTH, engine carburetor float strainer screen.....	0301
CLUTCH, automatic oil filter motor, assembly.....	0107E-1
CLUTCH, master, assembly.....	0100 0200
CLUTCH, transmission output shaft fourth and fifth speed gear synchronizer.....	0704B
CLUTCH, transmission second and third speed gear synchronizer.....	0704B
COIL, auxiliary generator panel board cutout, assembly.....	0611H-1
COIL, booster, assembly.....	0604
COIL, cranking motor and battery relay, assembly.....	0610B-2
COIL, engine generator field, assembly.....	0601
COIL, field, auxiliary generator, assembly.....	0611
COIL, ignition, auxiliary generator panel board, w/NUT and WASHER, assembly.....	0611H-1
COIL, loading, antenna, assembly.....	2601
COIL, magneto, assembly.....	0603A
COIL, shunt, engine generator regulator cut-out relay, assembly.....	0601B
COIL, shunt, engine generator voltage regulator, assembly.....	0601B
COIL, thermostat, auxiliary generator engine carburetor choke.....	0611D
COLLAR, engine cranking motor hand crank shaft.....	0602
COLLAR, engine governor throttle control lever.....	0305
COLLAR, fuel pump seal ring.....	0302
COLLAR, fuel pump shaft.....	0302
COLLAR, hand throttle, assembly.....	15C1-B
COLLAR, horizontal release lever.....	1804
COLLAR, oil slinger, auxiliary generator engine crankshaft.....	0611B-3 15C1-A 15C1-B
COLLAR, retaining, accelerator shaft.....	15C1-B
COLLAR, retaining, hand throttle control lever.....	15C1-B
COLLAR, spacing, engine cranking motor drive sun gear.....	0602
COLLAR, thrust, bilge pump bearing.....	2208C
COLLAR, transmission output shaft fifth speed gear roller.....	0704B

Item	Group
COLLAR, transmission output shaft fourth speed gear roller	0704B
COLLAR, transmission output shaft second speed gear roller	0704B
COLLAR, transmission output shaft third speed gear roller	0704B
COLLAR, turret traversing mechanism and firing control handle shaft	1903C
COMPASS, turret, assembly	2218
COMPOUND, insulation, ignition	2302B
COMPRESSOR, valve spring	2301
CONDENSER, auxiliary generator engine armature brush holder	0611A
CONDENSER, auxiliary generator engine ignition housing, assembly	0611H-2
CONDENSER, booster coil	0604
CONDENSER, control panel	0606E
CONDENSER, engine generator regulator end relay panel	0601B
CONDENSER, magneto coil, assembly	0603A
CONDENSER, radio junction box	2602B
CONDENSER, turret master switch, w/WIRE, assembly	0613E
CONDUCTOR, blower switch to booster push button switch	0606C
CONDUCTOR, blower switch to fuse	0606C
CONDUCTOR, booster push button switch to starter push button switch	0606C
CONDUCTOR, circuit breaker to terminal post	0606C
CONDUCTOR, dash switch to fuse	0606C
CONDUCTOR, fan switch to fuse	0606C
CONDUCTOR, ground, radio cabinet junction box	2602B
CONDUCTOR, ground, radio junction box, w/TERMINAL, assembly	2602B
CONDUCTOR, internal communication speaker junction box, assembly	2602D
CONDUCTOR, light switch to fuse	0606C
CONDUCTOR, magneto switch to control panel grounding bus	0606C
CONDUCTOR, radio cabinet junction box, assembly	2602B
CONDUCTOR, radio junction box, assembly	2602B
CONDUIT, cranking motor regulator and relay panel, w/CABLE, assembly	0100
CONDUIT, cranking motor to regulator and relay panel, w/CABLE, assembly	0610B-1
CONDUIT, engine generator to regulator and relay panel, w/CABLE, assembly	0100
CONDUIT, ignition harness to spark plugs, assembly	0604A
CONDUIT, left magneto to right magneto, w/CABLE, assembly	0604A
CONDUIT, magneto booster to regulator and relay panel, w/CABLE, assembly	0604A
CONDUIT, magneto to ignition harness, w/ADAPTER, assembly	0604A
CONDUIT, magneto to regulator and relay panel, w/CABLE, assembly	0100
CONDUIT, turret, assembly	0613F
CONDUIT, turret dome light, assembly	0613F
CONDUIT, turret firing and traverse control switch, assembly	0613F
CONDUIT, turret motor to master switch, assembly	0613F
CONDUIT, turret slip ring to master switch, assembly	0613F

Item	Group
CONE, engine flywheel hub	0109
CONE, engine fuel priming tube	0308A-2
CONE, transmission fourth and fifth speed gear synchronizer clutch	0704B
CONE, transmission second and third speed gear synchronizer clutch	0704B
CONNECTION, elbow, engine oil pressure and scavenger pump	0107
CONNECTOR, auxiliary generator engine carburetor fuel line	0611D
CONNECTOR, auxiliary generator engine carburetor fuel tube	0611C
CONNECTOR, carburetor by-pass to right fuel tank filler pipe hose	0304
CONNECTOR, engine generator current regulator terminal	0601B
CONNECTOR, engine generator regulator cut-out relay terminal	0601B
CONNECTOR, engine generator voltage regulator terminal	0601B
CONNECTOR, engine oil breather line	0107J
CONNECTOR, engine oil cooler to reservoir hose	0107J
CONNECTOR, engine oil filter outlet line	0107J
CONNECTOR, engine oil intake hose	0107J
CONNECTOR, engine oil pressure gage hose	0605B
CONNECTOR, engine oil pressure line to hose	0605B
CONNECTOR, engine oil pump to filter hose	0107J
CONNECTOR, engine oil reservoir outlet line	0107J
CONNECTOR, engine oil reservoir vent line	0107J
CONNECTOR, engine oil scavenger pump to filter hose	0107J
CONNECTOR, fire extinguisher dual pull mechanism to cylinder tube	2401
CONNECTOR, fixed extinguisher coupling	2401
CONNECTOR, fuel filter to fuel pump hose	0304
CONNECTOR, fuel pump to carburetor hose	0304
CONNECTOR, fuel tank to fuel overflow line hose	0304
CONNECTOR, intake, engine fuel primer pump	0308A-1
CONNECTOR, left fuel tank to tee hose	0304
CONNECTOR, oil outlet hose	0709D
CONNECTOR, oil pressure line to engine hose	0605B
CONNECTOR, outlet, engine fuel primer pump	0308A-1
CONNECTOR, rear idler slide tubing	1304
CONNECTOR, rear pressure line to primer distributor line hose	0304
CONNECTOR, right fuel tank to tee hose	0304
CONNECTOR, tee to fuel filter hose	0304
CONNECTOR, transmission hose to oil strainer	0709D
CONNECTOR, transmission intermediate cooled oil lines	0709D
CONNECTOR, transmission intermediate warm oil lines	0709D
CONNECTOR, transmission oil intake hose	0709D
CONNECTOR, transmission oil pressure gage hose	0605B
CONNECTOR, transmission oil pressure valve to instrument panel oil line hose	0709D
CONNECTOR, transmission oil strainer hose	0709D
CONNECTOR, tube, ports No's 10, 12, and 13 in turret traversing mechanism oil pot	1903F
CONNECTOR, turret periscope linkage	1905
CONNECTOR, turret traversing mechanism variable displacement pump slide block back-up piston cover	1903E
CONTACT, auxiliary generator panel board cutout, assembly	0611H-1
CONTAINER, stowage, lubrication gun	1907

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
CONTROL, dual, turret traversing, assembly . . .	1903C
CONTROL, front bulkhead clutch and accelerator, assembly	15C1-A 15D1
CONTROL, rear bulkhead clutch, assembly	15D1
CONTROL, spring centering, turret traversing mechanism variable displacement pump, assembly	1903E
COOLER, oil, engine, assembly	0107B
COOLER, oil, transmission, assembly	0709
COUPLING, bilge pump to discharge pipe	2208E
COUPLING, drive, fuel pump	0302
COUPLING, drive, magneto	0603A
COUPLING, engine carburetor air cleaner intake tube	0301C
COUPLING, engine oil pressure gage	0605B
COUPLING, exterior final drive	1008A
COUPLING, fire extinguisher	2401
COUPLING, flexible, bilge pump drive shaft, assembly	2208D
COUPLING, generator drive shaft	0113B-4
COUPLING, generator drive shaft, w/oil THROWER, assembly	0113B-3
COUPLING, hand operated bilge pump valve box	2208H
COUPLING, jaw, turret traversing mechanism variable displacement pump drive	1903E
COUPLING, magneto drive	0113B-5
COUPLING, tachometer drive	0113B-8
COUPLING, rear idler slide tubing	1304
COUPLING, tee to left magneto	0604A
COUPLING, transmission oil pressure gage	0605B
COUPLING, turret traversing mechanism variable displacement pump	1903E
COVER, access, engine fuel filter	0306
COVER, automatic oil filter, assembly	0107E-1
COVER, automatic oil filter motor, w/PISTON and VALVE, assembly	0107E-1
COVER, auxiliary generator, end, w/INSULATION, assembly	0611A
COVER, auxiliary generator engine, assembly	0611
COVER, auxiliary generator engine cylinder valve, assembly	0611B-7
COVER, auxiliary generator engine ignition housing	0611H-2
COVER, bilge flap valve	1803C
COVER, blower terminal post	0612
COVER, booster coil	0604
COVER, cab, assembly	1800
COVER, cab window, w/LUG, assembly	1805H
COVER, canvas	2201
COVER, control panel, assembly	0606E
COVER, control panel fuse	0606E
COVER, control tunnel junction box	0606E
COVER, cranking motor and battery relay contact, w/name PLATE, assembly	0610B-2
COVER, differential compensating gear case, w/BUSHINGS, assembly	1003
COVER, engine carburetor accelerator pump stem	0301
COVER, engine crankcase front thrust bearing, assembly	0101
COVER, engine cranking motor gear	0113B-3
COVER, engine cranking motor hand crank movable ratchet	0602
COVER, engine exhaust valve rocker box, side outlet, assembly	0105C
COVER, engine intake valve rocker box, side outlet, assembly	0105C

Item	Group
COVER, engine generator regulator and relay panel box	0601B
COVER, engine generator terminal box	0601
COVER, engine oil pressure and scavenger pump, scavenger gear	0107
COVER, engine valve rocker oil scavenger pump	0107C
COVER, .50 cal. anti-aircraft machine gun, assembly	2201
COVER, .45 cal. machine gun, assembly	2201
COVER, fuel pump	0302
COVER, hand operated turret traversing mechanism gear box	1903D
COVER, inspection, magneto contact breaker assembly	0603A
COVER, inspection, turret traversing mechanism oil pot	1903F
COVER, internal communication speaker junction box	2602D
COVER, interior final drive shaft oil retainer	1008A
COVER, left channel support conduit, assembly	1801B
COVER, lock, engine fuel tank drip shield	0300
COVER, magneto, breaker end, assembly	0603A
COVER, magneto coil, assembly	0603A
COVER, magneto rotating magnet flyweight	0603A
COVER, manhole, ponton	1801B
COVER, oil reservoir filler	1801B
COVER, periscope	1816
COVER, power outlet box	0606E
COVER, power take-off support	2012
COVER, radio antenna	2601
COVER, radio cabinet junction box	2602B
COVER, rear idler adjusting screw	1701
COVER, scarf mount, assembly	2201
COVER, 75mm. howitzer breech, assembly	2201
COVER, 75mm. howitzer muzzle, assembly	2201
COVER, track mud shed	1701
COVER, transmission case, differential	0701A
COVER, transmission case, hand hole	0701A
COVER, transmission case, oil return	0701A
COVER, turret, assembly	2201
COVER, turret escape hatch	1902
COVER, turret gyro switch box	0613D
COVER, turret master switch box	0613E
COVER, turret rotating periscope	1905-1
COVER, turret slip ring lower terminal box, assembly	0613B
COVER, turret traversing lock plunger rod	1903B
COVER, turret traversing mechanism and firing control switch case	1903C
COVER, turret traversing mechanism control rod, welded assembly	1903C
COVER, turret traversing mechanism hydraulic motor head	1903D
COVER, turret traversing mechanism variable displacement pump control cam large piston	1903E
COVER, turret traversing mechanism variable displacement pump control cam small piston	1903E
COVER, turret traversing mechanism variable displacement pump control box	1903E
COVER, turret traversing mechanism variable displacement pump gear	1903E
CRANK, bell, turret traversing dual control assembly	1903C
CRANK, hand, engine starting	2301
CRANKCASE, auxiliary generator engine, w/needle BEARING, assembly	0611B-1

Item	Group
CRANKCASE, engine, assembly.....	0101
CRANKSHAFT, auxiliary generator engine, w/COUNTER-WEIGHT, assembly.....	0611B-3
CRANKSHAFT, engine, assembly.....	0101A
CUP, bearing, turret traversing mechanism worm thrust.....	1903D
CUP, engine carburetor air cleaner, assembly.....	0301C
CUP, engine cranking motor hand crank movable ratchet spring.....	0602
CUP, grease, universal joint slip yoke.....	0902
CUP, leather, bogie wheel lubricating spring.....	1303
CUP, leather, engine fuel primer pump plunger.....	0308A-1
CUP, oil, magneto coil covers and drive end plate, assembly.....	0603A
CUP, oil slinger, auxiliary generator engine crankshaft.....	0611B-3
CUP, transmission oil screen.....	0709B
CUP, turret traversing lock.....	1903B
CUSHION, turret seat.....	1901A
CUSHION, seat.....	1804
CUTOUT, auxiliary generator panel board, assembly.....	0611H-1
CYLINDER, auxiliary generator engine, w/VALVE GUIDE and SEAT, assembly.....	0611B-1
CYLINDER, dash pot, automatic oil filter motor.....	0107E-1
CYLINDER, engine, w/HEAD, assembly.....	0101A
CYLINDER, fixed fire extinguisher, assembly.....	2401
CYLINDER, magneto distributor.....	0603A
CYLINDER, pressure, bogie wheel lubricating spring, w/PLUG, assembly.....	1303
CYLINDER, turret traversing mechanism variable displacement pump and hydraulic motor.....	1903E

D

DEFLECTOR, splash, assembly.....	1701
DETECT, ball, automatic oil filter valve plate, assembly.....	0107E-1
DIAGRAM, wiring, control panel.....	0606C
DIAPHRAGM, circuit breaker push button.....	0606D
DIAPHRAGM, control panel push button switch.....	0606
DIAPHRAGM, engine fuel primer pump.....	0308A-1
DIAPHRAGM, hand operated bilge pump, assembly.....	2208F
DIAPHRAGM, turret master switch circuit breaker.....	0613E
DIAPHRAGM, turret .30 cal. gun solenoid.....	0613
DIAPHRAGM, turret 37 mm. gun solenoid.....	0613
DIFFERENTIAL, controlled, assembly.....	1002
DISK, bilge pump drive shaft flexible coupling.....	2208D
DISK, contact, cranking motor and battery relay.....	0610B-2
DISK, engine carburetor air cleaner.....	0301C
DISK, hand operated turret traversing handle lever.....	1903
DISK, marking, magneto distributor block.....	0603A
DISK, rotation marking, magneto drive end plate.....	0603A
DISK, turret traversing mechanism variable displacement pump check valve.....	1903E
DISTRIBUTOR, engine fuel priming system, assembly.....	0308A-2
DOOR, turret rotating periscope housing, assembly.....	1905-1
DOOR, turret sighting periscope housing, assembly.....	1905-2
DRAIN, sump, engine fuel tank.....	0300
DRIVE, engine cranking motor, assembly.....	0602
DRIVE, final, assembly.....	1008
DRIVE, tachometer, assembly.....	0113B-8
DUCT, air intake, auxiliary generator engine cooling blower, assembly.....	0611G

Item	Group
DUCT, engine room gas exhaust blower, assembly.....	0612
DYNAMOTOR, radio, assembly.....	2601
E	
ECCENTRIC, adjusting screw, engine generator current and voltage regulator and cut-out relay spring.....	0601B
ELBOW, air horn scavenger tube, flared tubing.....	0301-1
ELBOW, auxiliary engine port exhaust.....	0611F
ELBOW, auxiliary generator engine carburetor fuel tube.....	0611C
ELBOW, auxiliary generator engine carburetor to air cleaner.....	0611D
ELBOW, auxiliary generator engine carburetor to cylinder.....	0611D
ELBOW, auxiliary generator engine exhaust nipple.....	0611F
ELBOW, auxiliary generator engine fuel tube.....	0611C
ELBOW, bilge pump diagonal discharge tube.....	2208E
ELBOW, engine exhaust, w/STUDS, assembly.....	0108B
ELBOW, engine governor oil drain.....	0305A
ELBOW, engine oil breather hose to engine.....	0107J
ELBOW, engine oil breather line.....	0107J
ELBOW, engine oil cooler.....	0107J
ELBOW, engine oil filter intake.....	0107J
ELBOW, engine oil filter outlet line to cooler inlet line.....	0107J
ELBOW, engine oil intake hose.....	0107J
ELBOW, engine oil pressure gage line.....	0605B
ELBOW, engine oil pressure hose to engine.....	0605B
ELBOW, engine oil pressure line to hose.....	0605B
ELBOW, engine oil reservoir, outlet.....	0107J
ELBOW, engine oil scavenger pump hose to filter.....	0107J
ELBOW, engine oil scavenger pump outlet.....	0107J
ELBOW, engine valve rocker scavenger pump.....	0107J
ELBOW, flexible conduit to right magneto.....	0604A
ELBOW, fire extinguisher tee to shielded nozzle.....	2401
ELBOW, fire extinguisher tee to shielded nozzle tube.....	2401
ELBOW, fuel priming tubes to cylinders.....	0308A-2
ELBOW, hand operated bilge pump discharge tube.....	2208H
ELBOW, hose to fuel filter inlet.....	0304
ELBOW, instrument panel oil line hose to transmission oil pressure valve.....	0709D
ELBOW, oil cooler upper line.....	0709D
ELBOW, oil drain, engine governor.....	0107J
ELBOW, oil strainer hose to output shaft rear bearing cap.....	0709D
ELBOW, pressure line to primer distributor.....	0304
ELBOW, tachometer cable at engine.....	2205
ELBOW, transmission oil cooler line.....	0709D
ELBOW, transmission oil intake hose to rear cover.....	0709D
ELBOW, transmission oil pressure gage.....	0605B
ELBOW, transmission oil pump.....	0709D
ELBOW, tube port No. 8 in turret traversing mechanism variable displacement pump.....	1903E
ELBOW, tube port No. 3 in turret traversing mechanism hydraulic motor.....	1903D
ELBOW, tube, ports No. 1 and 2 in turret traversing mechanism hydraulic motor.....	1903E
ELBOW, turret traversing mechanism variable displacement pump.....	1903E
ELBOW, turret traversing mechanism variable displacement pump cylinder hose.....	1903E
ELECTRODE, magneto distributor block.....	0603A
END, ball joint, turret traversing mechanism dual control lower handle rod.....	1903C

Item	Group
END, engine governor speed control rod, assembly	0305A
END, engine governor speed control rod tube, assembly	0305A
END, engine governor speed control rod w/BEARING	0305A
END, engine governor throttle rod, assembly	0305A
ENGINE, assembly	0100
ENGINE, engine oil breather line to hose	0107J
EXTENSION, socket wrench	2301
EXTINGUISHER, fire, portable, assembly	2402
EXTRACTOR, fuse	2301
EYE, hoisting, vehicle	1801C
EYE, lifting, engine	0111

F

FACING, clutch driving plate, pressure plate, and flywheel	0201
FACING, fuel shut-off valve stem	0300-1
FAN, cooling, blower motor	0612
FAN, engine flywheel	0109A
FASTENER, 75 mm. ammunition rack, assembly	1906
FENDER, rear	1701
FERRULE, magneto ground wire terminal screw	0603A
FIELD and FRAME, engine generator, assembly	0601
FILTER, fuel, engine, assembly	0306
FILTER, oil, automatic, w/CARTRIDGE, assembly	0107E-1
FLOAT, auxiliary generator engine carburetor, assembly	0611D
FLOAT, engine carburetor, assembly	0301
FILE	2301
FILTER, control tunnel junction box	2603
FILTER, instrument panel box	2603
FILTER, oil, automatic, w/MOTOR, assembly	0107E-1
FILTER, radio noise, assembly	2603
FINGER, turret gun mount disengaging switch	0613C
FITTING, accelerator foot pedal shaft brackets	15C1-A
FITTING, bilge pump	2208C
FITTING, clutch foot pedal shaft bracket	15D1
FITTING, clutch release yoke	0203
FITTING, exterior final drive	1008A
FITTING, front bulkhead clutch and accelerator control levers	15C1-A 15D1
FITTING, grease, bogie wheel	1303
FITTING, left and right steering brake hand lever shafts	15A1
FITTING, rear bulkhead clutch rocker and pivot pin	15D1
FITTING, rear idler slide	1304
FITTING, rear idler slide adjusting screws	1304
FITTING, rear idler slide follower screw	1304
FITTING, rear idler sprocket shaft	1307
FITTING, return idler wheel	1306
FITTING, turret ball ring	1903A
FITTING, turret base seals	1900A
FITTING, turret traversing lock	1903B
FITTING, turret traversing support bearing	1900B
FITTING, universal joint spider	0902
FLANGE and GEAR, differential steering brake, assembly	1009
FLANGE, blind, engine fuel tank	0300
FLANGE, engine exhaust muffler packing	0401
FLANGE, engine exhaust pipe	0108B
FLANGE, engine fuel tank filler pipe packing gland	0300

Item	Group
FLANGE, engine intake pipe	0108A
FLANGE, filler neck, engine fuel tank	0300
FLANGE, front propeller shaft housing	0901
FLANGE, oil cooler, inlet and outlet	0107B 0709
FLANGE, outlet, engine fuel tank	0300
FLANGE, recirculating, engine fuel tank	0300
FLANGE, transmission oil pump intake tube to sump	0709D
FLANGE, turret traversing mechanism variable displacement pump slide block piston	1903E
FLASHLIGHT, plastic, w/two BATTERIES	2301
FLOOR, battery rack	0610A
FLOOR, cab, assembly	1803B
FLYWEIGHT, magneto magnet automatic advance	0603A
FLYWHEEL, engine, w/FAN, assembly	0100 0109
FOLLOWER, cam, auxiliary generator engine intake and exhaust valve	0611B-6
FORK, shifter, transmission output shaft first speed and reverse gear	0706C
FORK, shifter, transmission output shaft fourth and fifth speed gears	0706C
FORK, shifter, transmission output shaft second and third speed gear	0706C
FORK, turret traversing mechanism gear box shifter	1903D
FRAME and BASE, engine generator, assembly	0601
FRAME, auxiliary generator panel board cutout coil, assembly	0611H-1
FRAME, engine cranking motor, assembly	0602
FRAME, engine generator	0601
FRAME, engine generator current and voltage regulators and cut-out relay, assembly	0601B
FRAME, engine mount, assembly	2301
FRAME, seat back, assembly	1804
FUNNEL, engine oil reservoir	2301
FUSE, control panel switches	0607C

G

GAGE, bayonet, auxiliary generator engine	0611B-9
GAGE, engine oil	0605
GAGE, feeler	2301
GAGE, oil level, transmission, assembly	0709B
GAGE, oil pressure, assembly	0605
GAGE, oil temperature, w/TUBE, assembly	0605
GAGE, transmission oil	0605
GAGE, turret traversing mechanism variable displacement pump roller	1903E 0100
GASKET, air horn to engine carburetor	0301-1
GASKET, automatic oil filter drain plug	0107E-1
GASKET, automatic oil filter head	0107E-1
GASKET, automatic oil filter motor	0107E-1
GASKET, automatic oil filter motor cover	0107E-1
GASKET, automatic oil filter motor valve block	0107E-1
GASKET, auxiliary generator engine carburetor elbow	0611D
GASKET, auxiliary generator engine carburetor elbow to cylinder	0611D
GASKET, auxiliary generator engine carburetor jet	0611D
GASKET, auxiliary generator engine carburetor upper and lower housing	0611D
GASKET, auxiliary generator engine cylinder head	0611B-2
GASKET, auxiliary generator engine cylinder to crankcase	0611B-1

Item	Group	Item	Group
GASKET, auxiliary generator engine governor and breather housing	0611E	GASKET, engine intake pipe flange	0100
GASKET, auxiliary generator engine valve cover	0611B-7	GASKET, engine oil high-pressure relief valve housing	0108A
GASKET, auxiliary generator panel board cutout cover	0611H-1	GASKET, engine oil high-pressure relief valve housing	0100
GASKET, bilge pump suction plate	2208C	GASKET, engine oil low-pressure relief valve housing	0107K
GASKET, booster coil cover	0604	GASKET, engine oil low-pressure relief valve housing	0100
GASKET, cab cover	1800	GASKET, engine oil pressure and scavenger pump, pressure gear body to scavenger gear body	0107K
GASKET, cab escape hatch	1805H	GASKET, engine oil pressure and scavenger pump, pressure gear body to scavenger gear body	0100
GASKET, cab window cover	1805H	GASKET, engine oil pressure and scavenger pump to accessory case	0107
GASKET, control panel cover	0606E	GASKET, engine valve rocker box cover	0100
GASKET, control panel fuse cover	0606E	GASKET, engine valve rocker box cover hose nipple	0105C
GASKET, control tunnel junction box	0606E	GASKET, engine valve rocker box cover hose nipple	0100
GASKET, elbow connection to engine oil pressure and scavenger pump	0100	GASKET, engine valve rocker oil scavenger pump inner cover to body	0107J
GASKET, engine accessory case to crankcase	0107	GASKET, engine valve rocker oil scavenger pump inner cover to body	0100
	0100	GASKET, engine valve rocker scavenger oil strainer	0107C
	0113B-1	GASKET, engine valve rocker oil scavenger pump to accessory case	0100
GASKET, engine carburetor air horn plug	0301C	GASKET, engine valve rocker oil scavenger pump to accessory case	0107C
	0301-1	GASKET, engine valve rocker push rod housing	0100
GASKET, engine carburetor economizer valve seat	0301	GASKET, engine valve rocker push rod housing gland nut	0105A
GASKET, engine carburetor float fulcrum screw	0301	GASKET, engine valve rocker push rod housing gland nut	0100
GASKET, engine carburetor float needle valve seat	0301	GASKET, engine valve rocker push rod housing retainer	0100
GASKET, engine carburetor main discharge nozzle	0301	GASKET, engine valve rocker push rod housing retainer	0105A
GASKET, engine carburetor piston stem bushing	0301	GASKET, engine valve rocker scavenger oil strainer	0100
GASKET, engine carburetor screw plug	0301	GASKET, engine valve rocker scavenger oil strainer	0100
GASKET, engine carburetor strainer plug	0301	GASKET, engine valve rocker scavenger pump elbow	0107J
GASKET, engine carburetor throttle body	0301	GASKET, engine valve tappet guide	0105
	0100	GASKET, engine valve tappet guide to crankcase	0100
	0301	GASKET, exterior final drive coupling ring	1008A
GASKET, engine carburetor to crankcase	0100	GASKET, fuel pump housing	0302
	0301	GASKET, fuel pump or oil scavenger pump outer cover	0302
	0100	GASKET, fuel pump rear plate	0302
GASKET, engine crankcase oil sump drain plug	0107A	GASKET, fuel pump relief valve cap	0302
GASKET, engine crankcase oil sump to front crankcase	0100	GASKET, fuel pump to scavenger pump	0302
GASKET, engine crankcase oil sump to rear crankcase	0107A	GASKET, generator drive shaft bearing retainer	0100
GASKET, engine crankcase scavenger oil line	0100	GASKET, generator drive shaft pulley support to accessory case	0113B-4
	0107J	GASKET, hand operated turret traversing control unit	1903
GASKET, engine cranking motor flange	0113B-3	GASKET, ignition harness left manifold to right manifold	0604A
GASKET, engine cranking motor to accessory case	0100	GASKET, instrument panel	1809
	0602	GASKET, interior final drive bracket	1008A
GASKET, engine fuel filter sump	0306	GASKET, interior final drive shaft oil retainer cover	1008A
GASKET, engine fuel primer pump diaphragm cap	0308A-1	GASKET, internal communication speaker junction box connector	2602D
GASKET, engine fuel pump to valve rocker oil scavenger pump	0100	GASKET, internal communication speaker junction box cover	2602D
GASKET, engine fuel tank filler pipe lock nut	0300	GASKET, left channel support conduit cover, assembly	0604A
GASKET, engine fuel tank filler pipe packing gland flange	0300	GASKET, left channel support conduit cover, assembly	1801B
GASKET, engine fuel tank filler pipe strainer	0300	GASKET, magneto conduit to ignition harness	0604A
GASKET, engine fuel tank sump drain	0300	GASKET, magneto distributor cylinder base	0603A
GASKET, engine generator regulator and relay panel box cover	0601B	GASKET, magneto distributor gear axle	0603A
GASKET, engine governor body	0305	GASKET, magneto drive end plate ball bearing outer race	0603A
GASKET, engine governor to generator drive shaft pulley	0100	GASKET, magneto drive end plate ball bearing outer race	0603A
GASKET, engine governor to pulley support	0305A	GASKET, magneto housing breaker end ball bearing outer race	0603A
GASKET, engine high-pressure oil screen by-pass valve plug	0100	GASKET, magneto to accessory case	0100
GASKET, engine high-pressure oil screen housing to accessory case	0100		0603A
	0107E-2		
GASKET, engine high-pressure oil screen plug	0100		
GASKET, engine high-pressure oil screen plug and high-pressure oil screen by-pass valve plug	0107E-2		
GASKET, engine high-pressure oil screen to housing	0100		
	0107E-2		

Item	Group
GASKET, oil cooler inlet and outlet flange.....	0107B 0709
GASKET, oil, reservoir filling cap.....	0107D
GASKET, periscope cover.....	1816
GASKET, periscope housing adapter filler ring.....	1816
GASKET, periscope housing top segment.....	1816
GASKET, power outlet box cover.....	0606E
GASKET, radio cabinet junction box cover.....	2602B
GASKET, radio junction box conductor.....	2602B
GASKET, rear fender.....	1701
GASKET SET, auxiliary generator engine carburetor overhaul.....	0611D
GASKET SET, engine carburetor overhaul.....	0301
GASKET SET, engine overhaul.....	0100
GASKET, spark plug conduit barrel to ignition harness.....	0604A
GASKET, spark plug conduit to ignition harness.....	0604A
GASKET, tachometer drive cover nut.....	0100 0113B-8
GASKET, tachometer drive housing to accessory case.....	0100 0113B-8
GASKET, taillight body ring.....	0608
GASKET, taillight lens ring and lens.....	0608
GASKET, transmission case differential cover.....	0701A
GASKET, transmission case hand hole cover.....	0701A
GASKET, transmission case large oil return cover.....	0701A
GASKET, transmission case oil filler pipe to case.....	0709D
GASKET, transmission case rear cover.....	0701A
GASKET, transmission case small oil return cover.....	0701A
GASKET, transmission gear shifter rod support.....	0706B
GASKET, transmission input shaft bearing cap.....	0701A
GASKET, transmission oil level gage.....	0709B
GASKET, transmission oil pressure valve adapter.....	0709D
GASKET, transmission oil pump.....	0709A
GASKET, transmission oil pump intake tube flange.....	0709D
GASKET, transmission oil pump relief valve.....	0709A
GASKET, transmission oil strainer plug.....	0709C
GASKET, transmission oil strainer screen.....	0709C
GASKET, transmission output shaft rear bearing cap.....	0701A
GASKET, turret, assembly.....	1901
GASKET, turret dome light.....	0613A
GASKET, turret escape hatch.....	1902
GASKET, turret gun removal plate.....	1900
GASKET, turret gyro switch box circuit breaker.....	0613D
GASKET, turret gyro switch box cover.....	0613D
GASKET, turret master switch box cover.....	0613E
GASKET, turret rotating periscope cover.....	1905-1
GASKET, turret rotating periscope housing adapter filler ring.....	1905
GASKET, turret rotating periscope housing segment.....	1905-1
GASKET, turret sighting periscope housing.....	1905-2
GASKET, turret sighting periscope housing bottom segment.....	1905-2
GASKET, turret slip ring lower terminal box cover.....	0613B
GASKET, turret traversing gear box upper to lower housing.....	1903D
GASKET, turret traversing mechanism gear box shifter lever hose.....	1903D
GASKET, turret traversing mechanism gear box cover.....	1903D
GASKET, turret traversing mechanism gear pump relief valve cap.....	1903E

Item	Group
GASKET, turret traversing mechanism hydraulic motor case.....	1903D
GASKET, turret traversing mechanism hydraulic motor end head.....	1903D
GASKET, turret traversing mechanism hydraulic motor mounting flange.....	1903D
GASKET, turret traversing mechanism oil pot inspection cover.....	1903F
GASKET, turret traversing mechanism variable displacement pump case.....	1903E
GASKET, turret traversing mechanism variable displacement pump check valve cap.....	1903E
GASKET, turret traversing mechanism variable displacement pump control box cover.....	1903E
GASKET, turret traversing mechanism variable displacement pump control cam piston cover.....	1903E
GASKET, turret traversing mechanism variable displacement pump control housing.....	1903E
GASKET, turret traversing mechanism variable displacement pump end head.....	1903E
GASKET, turret traversing mechanism variable displacement pump oil seal housing.....	1904E
GASKET, turret traversing mechanism variable displacement pump pilot valve cap.....	1903E
GASKET, turret traversing mechanism variable displacement pump slide block piston flange.....	1903E
GASKET, vent screw, engine fuel filter.....	1306
GEAR and PINION, transmission, spiral bevel, assembly.....	1003
GEAR and SHAFT, driven, engine oil pressure and scavenger pump.....	0107
GEAR and SHAFT, driven, engine valve rocker oil scavenger pump.....	0107C
GEAR and SHAFT, driving, engine oil pressure and scavenger pump.....	0107
GEAR and SHAFT, driving, engine valve rocker oil scavenger pump.....	0107C
GEAR, annulus, engine cranking motor, w/PINS, assembly.....	0602
GEAR, automatic oil filter motor clutch.....	0107E-1
GEAR, cam drive, assembly.....	0113B-2
GEAR, compensating, differential.....	1003
GEAR, driven, engine oil pressure and scavenger pump.....	0107
GEAR, driven, power take-off vertical shaft.....	2012
GEAR, driven, tachometer drive.....	0113B-8
GEAR, driven, turret traversing mechanism variable displacement pump.....	1903E
GEAR, driving, engine governor.....	0305A
GEAR, driving, engine oil pressure and scavenger pump, scavenger.....	0107
GEAR, driving, power take-off transverse shaft.....	2012
GEAR, driving, tachometer drive.....	0113B-8
GEAR, engine accessory drive, assembly.....	0113B-3
GEAR, engine cranking motor armature shaft drive end.....	0602
GEAR, engine cranking motor drive, assembly.....	0113B-3
GEAR, engine cranking motor hand crank shaft.....	0602
GEAR, engine cranking motor, intermediate.....	0602
GEAR, engine oil pressure and scavenger pump drive.....	0113B-6
GEAR, engine valve rocker oil scavenger pump drive.....	0113B-7
GEAR, generator drive.....	0113B-4
GEAR, herringbone, interior final drive axle shaft.....	1008A
GEAR, herringbone, interior final drive shaft.....	1008A

Item	Group
GEAR, herringbone, interior final drive shaft and axle shaft, assembly	1008A
GEAR, intermediate, turret traversing mechanism gear box	1903D
GEAR, magneto distributor	0603A
GEAR, magneto drive, w/PLUG, assembly	0113B-5
GEAR, ring turret	1903A
GEAR, sliding, transmission output shaft, first speed and reverse	0704B
GEAR, sliding, turret traversing mechanism gear box	1903D
GEAR, speedometer driven	0705
GEAR, speedometer drive, transmission output shaft	0705
GEAR, sun engine cranking motor drive, w/BUSHING, assembly	0602
GEAR, transmission, first speed	0704B
GEAR, transmission input shaft, fifth speed	0704B
GEAR, transmission input shaft, fourth speed	0704B
GEAR, transmission output shaft, fifth speed	0704B
GEAR, transmission output shaft, fourth speed	0704B
GEAR, transmission output shaft, second speed	0704B
GEAR, transmission output shaft, third speed	0704B
GEAR, transmission output shaft second and third speed clutch	0704B
GEAR, transmission, reverse idler	0704B
GEAR, worm, turret traversing mechanism	1903D
GENERATOR, auxiliary, assembly	0611
GENERATOR, engine, assembly	0100
	0601
GLAND, packing, engine fuel filter	0306
GLASS, cab side window	1809
GOVERNOR, engine, assembly	0100
	0305
GOVERNOR, engine, w/control LINKS, assembly	0305
GREASE, chain pin	2302A
GREASE GUN	2301
GRID, engine carburetor air horn	0301-1
GRIP, differential steering brake hand lever	15A1
GRIP, turret traversing mechanism and firing control handle	1903C
GROMMET, dash light	0605C
GROMMET, fuel priming tubes	0308A-2
GROMMET, magneto ground wire terminal screw	0603A
GROMMET, radio junction box	2602B
GROMMET, spark plug elbows and right magneto conduit	0604A
GROMMET, split, turret traversing mechanism variable displacement pump oil reservoir tube	1903E
GROMMET, turret basket floor	1901
GROMMET, turret slip ring	0613B
GROMMET, turret slip ring plate	0613B
GROMMET, turret traversing mechanism, control rod	1903C
GROUSER, track	1305
GUARD, conduit, turret right seat post	0613F
GUARD, fixed fire extinguisher front bulkhead to rear bulkhead pull cable pipe	2401
GUARD, front propeller shaft, assembly	0901A
GUARD, hand operated turret traversing handle lever	1903
GUARD, headlight	2103A
GUARD, leg, turret	1900
GUARD, rear idler sprocket hub	1307
GUARD, splash, magneto, assembly	0603A

Item	Group
GUIDE, engine exhaust valve stem	0105
GUIDE, engine fuel primer pump diaphragm spring	0308A-1
GUIDE, engine intake valve stem	0105
GUIDE, engine valve tappet	0105
GUIDE, fuel pump rotor vane spring	0302
GUIDE, transmission first speed gear shaft	0704C
GUIDE, turret foot firing cable	1903H
GUIDE, turret traversing mechanism variable displacement pump, assembly	1903E
GUIDE, valve, auxiliary generator engine cylinder	0611B-6

H

HAMMER	2301
HANDLE, cab escape hatch	1805H
HANDLE, control panel snap switch	0606
HANDLE, control, turret traversing mechanism w/firing SWITCHES, assembly	19Q3C
HANDLE, engine fuel filter	0306
HANDLE, engine fuel primer pump plunger	0308A-1
HANDLE, engine fuel shut-off valve extension rod	0300-1
HANDLE, .50 cal. anti-aircraft gun hold down latch	1900-1
HANDLE, grab, cab	1801A
HANDLE, grab, catwalk	1801A
HANDLE, hand operated bilge pump	2208F
HANDLE, hand operated turret traversing mechanism wheel crank	1903
HANDLE, hinged, socket wrench	2301
HANDLE, iron, extension, socket wrench	2301
HANDLE, operating, cab window cover	1805H
HANDLE, pull, fixed fire extinguisher bulkhead	2401
HANDLE, 75 mm. howitzer gun spare parts box	1907
HANDLE, turret door latch, w/PIN, assembly	1902A
HANDLE, turret escape hatch latch, right, assembly	1902
HANDLE, turret traversing mechanism dual control handle, assembly	1903C
HANDWHEEL, turret traversing gear box, w/KNOB, assembly	1903D
HARNESS, ignition, assembly	0100
	0604A
HATCH, engine room, assembly	1805H
HATCH, escape, cab, assembly	1805H
HEAD, automatic oil filter motor, w/BUSHINGS, assembly	0107E-1
HEAD, automatic oil filter, w/SUMP, assembly	0107E-1
HEAD, auxiliary generator engine cylinder	0611B-2
HEAD, auxiliary generator panel board cut-out, w/CORE, assembly	0611H-1
HEAD, cylinder, engine	0101A
HEAD, end, turret traversing mechanism hydraulic motor, assembly	1903D
HEAD, end, turret traversing mechanism variable displacement pump, assembly	1903E
HEAD, engine fuel filter	0306
HEAD, pressure, fixed fire extinguisher cylinder	2401
HEAD, rear idler slide adjusting screw	1304
HEAD, release, fixed fire extinguisher	2401
HINGE, cab escape hatch, assembly	1805H
HINGE, cab window cover, assembly	1805H
HINGE, .45 cal. ammunition box cover, assembly	1906
HINGE, pamphlet stowage box, assembly	1907
HINGE, 75 mm. howitzer gun spare parts box, assembly	1907

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
HINGE, turret escape hatch, assembly	1902
HINGE, turret left and right door, assembly	1902A
HINGE, turret rotating and sighting periscope housing door	1905-1
HINGE, turret traversing mechanism firing control handle trigger switch	1903C
HOLDER, auxiliary generator armature brush, w/INSULATION, LEVER and SPRING, assembly	0611A
HOLDER, auxiliary generator armature brush w/STUD, assembly	0611A
HOLDER, card, turret	1907
HOLDER, circuit breaker push button diaphragm	0606D
HOLDER, clamp, .50 cal. ammunition rack	1906
HOLDER, control panel push button switch diaphragm	0606
HOLDER, engine carburetor float fulcrum	0301
HOLDER, engine cranking motor brush	0602
HOLDER, engine cranking motor hand crank	0602
HOLDER, periscope	1816
HOLDER, turret rotating periscope	1905-1
HOLDER, turret sighting periscope	1905-2
HOOD, auxiliary generator engine, assembly	0611
HOOD, turret slip ring, upper	0613B
HOOK, boat	2301A
HOOK, magneto radio shield attaching clamp	0603A
HOOK, tow hitch	1501
HOOK, turret gun lock chain	2218
HOOK, turret radio head set	1907
HORN, air, engine carburetor	0100 0301-1
HOSE, elbow to engine oil pressure and scavenger pump	0107J
HOSE, engine carburetor by-pass to engine right fuel tank filler pipe	0304
HOSE, engine carburetor by-pass to engine right tank filler pipe, assembly	0304
HOSE, engine fuel filter to engine fuel pump, assembly	0304
HOSE, engine fuel pump to engine carburetor, assembly	0304
HOSE, engine fuel tank to engine fuel overflow line, assembly	0304
HOSE, engine fuel tank to tee, assembly	0304
HOSE, engine governor oil drain nipple to rocker scavenger tee	0100 0107J
HOSE, engine governor oil feed, assembly	0305A
HOSE, engine oil cooler to reservoir, assembly	0107J
HOSE, engine oil pressure and scavenger pump to filter, assembly	0107J
HOSE, engine oil pressure gage, assembly	0605B
HOSE, engine right and left fuel tank hose connecting tee to engine fuel filter, assembly	0304
HOSE, engine right fuel tank filler pipe to auxiliary generator fuel tank, assembly	0611C
HOSE, engine valve rocker cover to line	0100 0107J
HOSE, engine valve rocker oil scavenger strainer to filter, assembly	0107J
HOSE, oil breather, bulkhead to engine, assembly	0107J
HOSE, oil feed, engine governor, assembly	0107J 0305
HOSE, oil pressure line to engine, assembly	0605B
HOSE, overflow, engine fuel tank drip shield	0304

Item	Group
HOSE, rear pressure line to engine fuel primer distributor line, assembly	0304
HOSE, transmission oil, intake, assembly	0709D
HOSE, transmission oil, outlet, assembly	0709D
HOSE, transmission oil pressure gage, assembly	0605B
HOSE, transmission oil pressure valve to instrument panel oil line, assembly	0709D
HOSE, transmission oil strainer to output shaft rear bearing cap, assembly	0709D
HOSE, tube to auxiliary generator engine carburetor, assembly	0611C
HOSE, turret gun recoil mechanism and gun mount oil, w/SPOUT, assembly	1907
HOSE, turret traversing mechanism variable displacement pump cylinder, assembly	1903E
HOUSING, auxiliary generator engine carburetor body, assembly	0611D
HOUSING, auxiliary generator engine carburetor thermostat, assembly	0611D
HOUSING, auxiliary generator engine governor and breather, w/BUSHING, assembly	0611E
HOUSING, bell, exterior final drive	1008A
HOUSING, bell, propeller shaft universal joint	0901
HOUSING, blower motor, assembly	0612
HOUSING, blower wheel, assembly	0612
HOUSING, clutch pressure plate spring	0202
HOUSING, engine cranking motor drive	0602
HOUSING, engine exhaust valve rocker push rod, w/GLAND NUT and PACKING, assembly	0105A
HOUSING, engine high-pressure oil screen	0107E-2
HOUSING, engine intake valve rocker push rod, w/GLAND NUT and PACKING, assembly	0105B
HOUSING, engine oil high-pressure relief valve	0107K
HOUSING, engine oil low-pressure relief valve	0107K
HOUSING, fuel pump, rear, w/BUSHING, assembly	0302
HOUSING, fuel pump rotor, w/SEAT, assembly	0202
HOUSING, ignition, auxiliary generator engine w/CONDENSER and LEVER, assembly	0611H-2
HOUSING, magneto, assembly	0603A
HOUSING, magneto contact breaker, assembly	0603A
HOUSING, periscope, assembly	1816
HOUSING, propeller shaft	0901
HOUSING, tachometer drive	0113B-8
HOUSING, transmission oil strainer	0709C
HOUSING, turret retaining roller	1900B
HOUSING, turret rotating periscope, assembly	1905-1
HOUSING, turret sighting periscope, assembly	1905-2
HOUSING, turret traversing gear box, w/BEARING, assembly	1903D
HOUSING, turret traversing mechanism variable displacement pump control	1903E
HOUSING, turret traversing mechanism variable displacement pump gear pump, assembly	1903E
HOUSING, turret traversing mechanism variable displacement pump gear pump oil seal	1903E
HOUSING, turret traversing support bearing	1900B
HUB, bogie wheel	1303
HUB, coupling, exterior final drive	1008A
HUB, engine flywheel	0109
HUB, final drive sprocket	1307
HUB, rear idler sprocket	1307
HUB, return idler wheel, w/TIRE, assembly	1306

Item	Group
I	
IDLER, rear, assembly.....	1304
IDLER, return, assembly.....	1306
IMPELLER, bilge pump.....	2208C
INDEX, hand operated turret traversing lever, assembly.....	1903
INSERT, elbow at right magneto.....	0604A
INSERT, engine exhaust valve seat.....	0105
INSERT, engine intake valve seat.....	0105
INSERT, spark plug.....	0604B
INSERT, transmission case, bevel pinion bearing.....	0701
INSERT, transmission case, differential bearing.....	0701
INSERT, transmission case, first speed gear.....	0701
INSERT, transmission case, input shaft front bearing.....	0701
INSERT, transmission case, output shaft center bearing.....	0701
INSULATION, auxiliary generator armature brush holder.....	0611
INSULATION, auxiliary generator field coil.....	0611A
INSULATION, auxiliary generator panel board cutout.....	0611H-1
INSULATION, auxiliary generator panel board cutout coil.....	0611H-1
INSULATION, auxiliary generator panel board cutout coil to core.....	0611H-1
INSULATION, engine generator terminal box.....	0601
INSULATION, loom, auxiliary generator panel board to hood leads.....	0611H-1
INSULATOR, engine generator current regulator and cut-out relay shunt coil.....	0601B
INSULATOR, engine steady bar clamp support, assembly.....	0110
INSULATOR, turret master switch box circuit breaker.....	0613E
INTAKE, engine fuel primer pump, assembly.....	0308A-1

J

JAW, meshing, engine cranking motor drive shaft.....	0602
JET, auxiliary generator engine carburetor.....	0611D
JET, discharge, engine carburetor pump.....	0301
JET, elbow, engine fuel primer.....	0308A-2
JET, idle discharge, engine carburetor.....	0301
JET, idle metering, engine carburetor.....	0301
JET, metering, engine carburetor economizer.....	0301
JET, metering, main, engine carburetor.....	0301
JOINT, angle, speedometer drive, assembly.....	0705
JOINT, ball and socket, turret traversing mechanism control rod, handle end.....	1903C
JOINT, ball and socket, variable displacement pump control rod, pump end.....	1903E
JOINT, universal, engine fuel shut-off valve rod assembly.....	0300-1
JOINT, universal, propeller shaft, assembly.....	0902
JUMPER, ammeter line.....	2603
JUMPER, battery.....	0610B-1
JUMPER, blower motor to ground.....	0612
JUMPER, clutch control rod.....	2603
JUMPER, engine mount.....	2603
JUMPER, fuel primer line.....	2603
JUMPER, instrument panel box.....	2603
JUMPER, oil pressure gage line.....	2603
JUMPER, oil temperature gage line.....	2603
JUMPER, radio bonding, w/TERMINALS, assembly.....	0100 2603
JUMPER, tachometer line.....	2603

Item	Group
JUMPER, throttle control rod.....	2603
KEY, auxiliary generator armature to crankshaft.....	0611A
KEY, auxiliary generator engine cranking pulley to crankshaft.....	0611
KEY, clutch release sleeve.....	0202
KEY, engine articulated connecting rod knuckle pin.....	0104
KEY, engine cranking motor armature shaft gear.....	0602
KEY, engine cranking motor hand crank shaft.....	0602
KEY, engine governor driving gear.....	0305A
KEY, engine governor weights spider.....	0305
KEY, fuel pump shaft.....	0302
KEY, generator drive shaft.....	0113B-4
KEY, gib, bilge pump drive shaft.....	2208D
KEY, magneto contact breaker cam.....	0603A
KEY, magneto distributor gear.....	0603A
KEY, power take-off driven gear.....	2012
KEY, power take-off transverse shaft driving gear.....	2012
KEY, transmission input shaft, fifth speed gear.....	0704B
KEY, transmission input shaft, fourth speed gear.....	0704B
KEY, turret traversing mechanism gear box gear shaft.....	1903D
KEY, turret traversing mechanism gear box sliding gear.....	1903D
KEY, turret traversing mechanism hydraulic motor shaft.....	1903D
KEY, turret traversing mechanism variable displacement pump shaft.....	1903E
KIT, carburetor, auxiliary generator engine service.....	0611D
KIT, repair, auxiliary generator armature brush.....	0611A
KIT, repair, carburetor.....	0301
KIT, repair, turret slip ring.....	0613B
KNOB, adjuster, periscope holder.....	1816
KNOB, adjuster, turret rotating and sighting periscope holder.....	1905-1
KNOB, adjuster, turret rotating periscope housing segment.....	1905-1
KNOB, differential steering brake hand lever.....	15A1
KNOB, periscope housing segment.....	1816
KNOB, turret gyro switch box rheostat.....	0613D

L

LAMP, hand lantern.....	0607B
LAMP, instrument panel dash light.....	0607B
LAMP, taillight.....	0607B
LAMP UNIT, headlight, sealed, assembly.....	0607A
LAMP UNIT, spotlight, sealed, assembly.....	0607A
LANTERN, hand.....	2302B
LANTERN, hand, w/mounting BRACKET.....	0608A
LATCH, engine room hatch.....	1805H
LATCH, periscope holder.....	1816
LATCH, 75 mm. ammunition rack spacer.....	1906
LATCH, 75 mm. ammunition ready shell rack, assembly.....	1906
LATCH, turret ammunition box support.....	1906
LATCH, turret door hold open, assembly.....	1902A
LATCH, turret foot firing mechanism.....	1903H
LATCH, turret sighting periscope holder.....	1905-2
LEAD, auxiliary generator ammeter, assembly.....	0611H-1
LEAD, auxiliary generator armature brush to panel board cutout, assembly.....	0611H-1
LEAD, auxiliary generator cutout to panel board, binding post bolt, assembly.....	0611H-1
LEAD, auxiliary generator panel board.....	0611H-1

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
LEAD, auxiliary generator panel board coil to binding post marked "STOP" and binding post.	0611H-1
LEAD, auxiliary generator panel board coil to cutout terminal screw, assembly.	0611H-1
LEAD, auxiliary generator panel board coil to spark plug, assembly.	0611H-1
LEAD, auxiliary generator panel board cutout terminal screw to bind post bolt.	0611H-1
LEAD, auxiliary generator panel board mounting bracket screw to cutout terminal screw, assembly.	0611H-1
LEAD, auxiliary generator panel board shunt to binding post.	0611H-1
LEAD, auxiliary generator panel board starting switch to bind post bolt.	0611H-1
LEAD, auxiliary generator panel board to ammeter, assembly.	0611H-1
LEAD, auxiliary generator panel board to "STOP" and "START" switch, assembly.	0611H-1
LEAD, auxiliary generator regulator cutout, assembly.	0611H-1
LEAD, auxiliary generator series field to armature brush, assembly.	0611A
LEAD, auxiliary generator series field to panel board starter switch, assembly.	0611A
LEAD, auxiliary generator "STOP" switch.	0611H-1
LEAD, battery to regulator and relay panel, positive.	0610B-1
LEAD, breaker auxiliary generator panel board coil to condenser, assembly.	0611H-1
LEAD, connecting, auxiliary generator brushes, assembly.	0611A
LEAD, engine generator regulator cut-out relay to mounting plate.	0601B
LEAD, engine generator regulator resistance unit.	0601B
LEAD, engine generator, voltage regulator to cut-out relay shunt.	0601B
LEAD, engine generator voltage regulator to mounting plate.	0601B
LEAD, ground, auxiliary generator armature brush to field ring, assembly.	0611A
LEAD, ground, auxiliary generator panel board.	0611H-1
LEAD, negative, auxiliary generator shunt field to armature brush, assembly.	0611A
LEAD, positive, auxiliary generator shunt field to panel board terminal marked "REG. FIELD," assembly.	0611A
LENS, taillight.	0608
LENS, turret dome light.	0613A
LEVER, auxiliary generator armature brush lever.	0611A
LEVER, auxiliary generator brush, w/SPRING, assembly.	0611A
LEVER, breaker, auxiliary generator engine ignition housing, assembly.	0611H-2
LEVER, clamping, auxiliary generator engine carburetor throttle shaft, w/SCREW and NUT, assembly.	0611D
LEVER, contact, magneto breaker, assembly.	0603A
LEVER, control, clutch foot pedal.	15D1
LEVER, control, hand throttle.	15D1
LEVER, control, steering rod.	15A1
LEVER, control, throttle operating rod, w/BACKET, assembly.	15C1-A
LEVER, differential steering brake shaft.	15A1
LEVER, engine carburetor accelerator pump, assembly.	0301

Item	Group
LEVER, engine carburetor idle adjusting, assembly.	0301
LEVER, engine carburetor throttle.	0301
LEVER, engine governor throttle control, assembly.	0305
LEVER, engine governor to carburetor.	0305A
LEVER, engine governor variable speed control, assembly.	0305
LEVER, front bulkhead accelerator control.	15C1-A
LEVER, front bulkhead clutch control.	15D1
LEVER, hand, differential steering brake, w/QUADRANT, assembly.	15A1
LEVER, hand operated turret traversing handle, assembly.	1903
LEVER, horizontal release, seat.	1804
LEVER, idle adjusting, engine carburetor.	0301
LEVER, interlock, turret traversing mechanism and firing control handle trigger.	1903C
LEVER, operating, auxiliary generator engine governor plunger, outer.	0611E
LEVER, safety interlock, turret traversing mechanism and firing control handle.	1903C
LEVER, 75 mm. ammunition ready shell rack fastener.	1906
LEVER, speed adjusting, engine governor, assembly.	0305
LEVER, transmission gearshift, assembly.	0706A
LEVER, turret traversing mechanism gear box shifter.	1903D
LEVER, turret traversing mechanism variable displacement pump control.	1903E
LEVER, turret traversing mechanism variable displacement pump control equalizer.	1903E
LIGHT, dash, instrument panel.	0605C
LIGHT, dome, turret, assembly.	0613A
LIGHT, head, assembly.	0607
LIGHT, pilot, turret gyro switch box, assembly.	0613D
LIGHT, spot, seal beam.	2302B
LIGHT, tail, assembly.	0608
LINE, elbow to engine oil cooler.	0107J
LINE, engine oil filter to elbow.	0107J
LINE, engine oil pressure gage.	0605B
LINE, engine oil pressure, instrument panel to union.	0605B
LINE, engine oil pressure, union to hose.	0605B
LINE, engine oil reservoir to elbow.	0107J
LINE, oil breather, reservoir to bulkhead.	0107J
LINE, overflow, right fuel tank to left fuel tank.	0304
LINE, pressure, engine field primer pump to union.	0304
LINE, pressure, hose to engine fuel primer distributor.	0304
LINE, pressure, union to engine fuel priming hose.	0304
LINE, suction, tee at engine fuel filter to union.	0304
LINE, suction, union to engine fuel primer pump.	0304
LINE, tow.	2301A
LINE, transmission cooled oil.	0709D
LINE, transmission oil pressure gage.	0605B
LINE, transmission warm oil, rear.	0709D
LINE, vent, engine oil reservoir.	0107J
LINER, engine crankcase bearing.	0101
LINING, differential steering brake shoe.	1009
LINK, auxiliary generator engine carburetor to governor lever.	0611D
LINK, control, turret traversing mechanism control handle to pump.	1903C
LINK, differential steering brake bottom shoe and steering shaft.	1009
LINK, engine carburetor accelerator pump piston.	0301
LINK, inside, track chain.	1305

Item	Group
LINK, operating, cab window cover, assembly	1805H
LINK, turret sighting periscope	1905-2
LINKAGE, periscope, turret, assembly	1905
LOCK, automatic oil filter manual operating shaft bushing	0107E-1
LOCK, engine cranking motor drive sun gear	0602
LOCK, engine exhaust valve spring seat	0105
LOCK, engine intake valve spring seat	0105
LOCK, transmission oil screen	0709B
LOCK, turret traversing, assembly	1903B
LOOM, engine fuel priming lines	0304
LOOM, engine oil pressure line	0605B
LOOP, cab escape hatch latch	1805H
LOUVER, air intake, rear bulkhead	1801B
LUG, tow hitch locking pin	1501
LUG, transmission second and third speed gearshift rod	0706B

M

MAGNET, rotating, magneto, assembly	0603A
MAGNET, rotating, magneto, w/SHAFT, assembly	0603A
MAGNETO, assembly	0100
MANIFOLD, engine exhaust, assembly	0603A
MANIFOLD, ignition harness, assembly	0108B
MANUAL, instruction	0604A
MANUAL, instruction	2302B
MATTOCK	2301A
MECHANISM, dual pull, fixed fire extinguisher, assembly	2401
MECHANISM, foot firing, turret, assembly	1903H
MOTOR and PUMP, turret traversing mechanism variable displacement, assembly	1903E
MOTOR, automatic oil filter, w/RODS, assembly	0107E-1
MOTOR, blower, assembly	0612
MOTOR, cranking, engine, assembly	0100
MOTOR, cranking, engine, assembly	0602
MOTOR, hydraulic, automatic oil filter, assembly	0107E-1
MOTOR, hydraulic, turret traversing mechanism gear box, assembly	1903D
MOUNT, engine, assembly	0110
MOUNT, engine fuel filter bracket, assembly	0306
MOUNT, snubber, instrument case	1809
MOUNTING, auxiliary generator, flexible	0611
MUFFLER, exhaust, engine, assembly	0401

N

NIPPLE, auxiliary generator engine exhaust	0611F
NIPPLE, auxiliary generator engine exhaust flexible tube	0611F
NIPPLE, connecting, engine governor oil feed line	0305A
NIPPLE, engine fuel filter	0304
NIPPLE, engine fuel priming distributor	0308A-2
NIPPLE, engine fuel pump hose tee to carburetor	0304
NIPPLE, engine fuel pump hose to pump	0304
NIPPLE, engine fuel shut-off valve to tank	0304
NIPPLE, engine fuel tank drip shield overflow hose to pipe	0304
NIPPLE, engine oil filter to line	0107J
NIPPLE, engine oil reservoir outlet tee	0107J
NIPPLE, engine oil reservoir hose to tee	0107J
NIPPLE, engine oil reservoir vent tee	0107J
NIPPLE, engine valve rocker box cover	0107J
NIPPLE, fuel filter outlet	0304
NIPPLE, hose, engine fuel tank drip shield	0304

Item	Group
NIPPLE, transmission case breather	0701
NIPPLE, transmission oil pressure valve to strainer	0709D
NIPPLE, transmission output shaft bearing cap	0709D
NIPPLE, turret traversing mechanism hydraulic motor	1903D
NIPPLE, turret traversing mechanism oil pot filler, strainer and breather	1903F
NIPPLE, turret traversing mechanism variable displacement pump	1903E
NOZZLE, main discharge, engine carburetor	0301
NOZZLE, portable fire extinguisher, w/ADAPTER, assembly	2402
NOZZLE, shielded, fixed fire extinguisher	2401
NUT, adjusting, engine cranking motor drive clutch	0602
NUT, adjusting, steering brake shoe	1009
NUT, ammunition box support to turret	1906
NUT, anti-aircraft gun hold down eye bolts	1900-1
NUT, auxiliary generator cutout stud	0611H-1
NUT, auxiliary generator engine carburetor air shutter stop screw	0611D
NUT, auxiliary generator engine ignition housing contact adjusting screw	0611H-2
NUT, auxiliary generator engine panel board shunt strap screw	0611H-1
NUT, auxiliary generator panel board binding post bolts	0611H-1
NUT, auxiliary generator panel board binding post screw	0611H-1
NUT, auxiliary generator panel board binding screw	0611H-1
NUT, auxiliary generator panel board coil terminal and binding post	0611H-1
NUT, auxiliary generator panel board cutout head	0611H-1
NUT, auxiliary generator panel board head bushing	0611H-1
NUT, auxiliary generator panel board starting switch	0611H-1
NUT, auxiliary generator panel board starting switch terminal	0611H-1
NUT, blower terminal post	0612
NUT, cab ventilating fan receptacle box	0606E
NUT, castle, engine carburetor throttle shaft	0301
NUT, compression tube fitting	0709D
NUT, control panel box	0606E
NUT, control panel switch handle connecting shaft gland	0606
NUT, coupling, rear throttle rod	15C1-A
NUT, cranking motor and battery relay coil terminal screw	0610B-2
NUT, cranking motor to panel conduit	0610B-1
NUT, cutout box stud	0611H-1
NUT, cylinder baffle top to fan shroud assembly	0500
NUT, differential steering brake hand lever pawl	15A1
NUT, elbow at right magneto	0604A
NUT, electrical distribution box	0606E
NUT, engaging, engine cranking motor drive shaft	0602
NUT, engine carburetor body	0301
NUT, engine carburetor throttle body	0301
NUT, engine cranking motor ball retainer	0602
NUT, engine cranking motor terminal	0602
NUT, engine crankshaft front bearing	0102A
NUT, engine fuel primer pump gland packing	0308A-1
NUT, engine fuel primer pump intake connector, w/SLEEVE, assembly	0308A-1
NUT, engine fuel primer pump outlet connector	0308A-1

Item	Group
NUT, engine fuel primer pump outlet connector, w/SLEEVE, assembly.....	0308A-1
NUT, engine fuel priming tubes.....	0308A-2
NUT, engine generator regulator resistance unit terminal.....	0601B
NUT, engine rear crankshaft, w/PLUG, assembly.....	0101A
NUT, fan shroud to rear spark plug baffle to fan shroud assembly.....	0500
NUT, flared tube fitting.....	2401
NUT, fuel filter clamp.....	0306
NUT, generator to panel conduit.....	0606C
NUT, gland, engine fuel filter.....	0306
NUT, gland, engine intake pipe.....	0108A
NUT, gland, engine interlocker box drain tube.....	0107J
NUT, gland, engine valve rocker push rod housing.....	0105B
NUT, gland, magneto ground wire terminal.....	0603A
	0601B
	0606E
NUT, gland, terminal tube.....	0608
	0612
	2602B
	2602D
NUT, gland, terminal tube instrument box.....	1809
NUT, hand operated bilge pump body screw.....	2208F
NUT, ignition harness manifold.....	0604A
NUT, interior final drive shaft.....	1008A
NUT, jam, engine fuel tank filler pipe packing gland.....	0300
NUT, lock, booster coil contact screw.....	0604
NUT, lock, engine fuel primer pump.....	0308A-1
NUT, lock, engine fuel tank filler pipe.....	0300
NUT, lock, engine valve adjusting screw.....	0105
NUT, lock, magneto breaker contact screw.....	0603A
NUT, lock, magneto breaker range adjusting screw.....	0603A
NUT, lock, magneto rotating magnet drive shaft.....	0603A
NUT, lock, rear idler slide adjusting screw.....	1304
NUT, lock, transmission output shaft center bearing.....	0704A
NUT, lock, turret gyro switch box bushing.....	0613D
NUT, lock, turret master switch box bushing.....	0613E
NUT, magneto booster to panel conduit.....	0604A
NUT, magneto rotating magnet drive shaft.....	0603A
NUT, magneto terminal screw.....	0604A
NUT, magneto to ignition harness conduits.....	0604A
NUT, retaining, engine cranking motor drive sun gear.....	0602
NUT, right headlight receptacle box.....	0606C
NUT, spark plug conduits.....	0604A
NUT, spark plug elbows.....	0604A
NUT, spotlight receptacle box.....	0606E
NUT, tachometer drive cover.....	0113B-8
NUT, taillight.....	0608
NUT, taillight terminal screw.....	0608A
NUT, terminal, booster coil.....	0604
NUT, track link.....	1305
NUT, transmission oil pump intake tube.....	0709D
NUT, transmission output shaft, rear.....	0704A
NUT, transmission reverse shaft ball bearing.....	0704C
NUT, transmission spiral bevel pinion ball bearing.....	1003
NUT, turret dome light.....	0613A
NUT, turret gun shield seal clamping strip.....	1904
NUT, turret periscope linkage.....	1905
NUT, turret periscope linkage stud.....	1905
NUT, turret periscope linkage turn buckle.....	1905
NUT, turret sighting periscope holder.....	1905-2
NUT, turret sighting periscope holder segment.....	1905-2

Item	Group
NUT, turret sighting periscope link.....	1905-2
NUT, turret slip ring ground.....	0613B
NUT, turret traversing mechanism control handle to pump connecting rod.....	1903C
NUT, turret traversing support bearing.....	1900B

O

OIL.....	2302A
OILER, plunger type.....	2301
OIL FILLER and DRAIN, auxiliary generator engine, assembly.....	0611B-9
OIL GUN.....	2301
OIL SEAL, differential steering brake shaft.....	1009
OIL SEAL, engine cranking motor drive shaft rod.....	0602
OIL SEAL, engine governor rocker shaft bearing.....	0305
OIL SEAL, fuel pump rear bearing plate.....	0302
OIL SEAL, interior final drive axle shaft, inner.....	1008A
OIL SEAL, magneto drive gear.....	0100
	0113B-5
OIL SEAL, power take-off transverse shaft bearing.....	2012
OIL SEAL, transmission input shaft bearing.....	0701A
OIL SEAL, turret traversing mechanism variable displacement pump and hydraulic motor drive shaft.....	1903E
OIL SEAL, turret traversing mechanism variable displacement pump control shaft.....	1903E
OUTLET, 75 mm. howitzer firing cable, w/CONDUITS, upper, assembly.....	0613

P

PACKING, cork, engine carburetor accelerating pin stem.....	0301
PACKING, cylinder base.....	0100
PACKING, electrical.....	0606C
PACKING, electrical, terminal tube.....	0606E
PACKING, engine carburetor idle adjusting lever pin.....	0301
PACKING, engine carburetor venturi.....	0301
PACKING, engine carburetor venturi tube.....	0301
PACKING, engine cylinder base.....	0101A
PACKING, engine exhaust muffler.....	0401
PACKING, engine fuel filter gland nut.....	0306
PACKING, engine fuel primer pump gland.....	0308A-1
PACKING, engine fuel tank filler pipe gland.....	0300
	0100
	0108A
	0100
PACKING, engine interlocker box drain tube.....	0107J
PACKING, engine valve rocker push rod housing.....	0100
	0105B
PACKING, turret traversing mechanism worm gear adjuster.....	1903D
PAD, auxiliary generator engine cooling blower air intake duct.....	0611G
PAD, auxiliary generator engine exhaust support.....	0611F
PAD, cab escape hatch latch.....	1805H
PAD, clutch release arm.....	0202
PAD, crash, turret right and left door.....	1904
PAD, friction, turret traversing lock.....	1903B
PAD, head, turret door.....	1904
PAD, seat back.....	1804
PAD, 75 mm. ammunition ready shell rack.....	1904

Item	Group
PAD, shoulder, .50 cal. anti-aircraft machine gun mount.....	1904
PAD, tee to engine fuel filter hose.....	0304
PAD, turret flashlight bracket.....	1904
PAINTER, bow line.....	2301A
PANEL, control, assembly.....	0606E
PANEL, cranking motor and battery relay stationary contact.....	0610B-2
PANEL, engine generator regulator and relay, assembly.....	0601B
PANEL, instrument, assembly.....	1809
PASTE, gasket, in tube.....	0100
PAWL, differential steering brake hand lever.....	15A1
PEDAL, foot, accelerator, assembly.....	15C1-A
PEDAL, foot, clutch.....	15D1
PEDAL, turret foot firing mechanism.....	1903H
PERISCOPE, rotating turret, assembly.....	1905-1
PERISCOPE, sighting turret, assembly.....	1905-2
PIECE, engine carburetor shield.....	0301
PILOT, tachometer drive housing.....	0113B-8
PIN, anchor, automatic oil filter toggle spring.....	0107E-1
PIN, automatic oil filter motor clutch roll spring.....	0107E-1
PIN, automatic oil filter motor piston.....	0107E-1
PIN, automatic oil filter motor piston arm.....	0107E-1
PIN, automatic oil filter motor rocking shaft.....	0107E-1
PIN, automatic oil filter motor toggle plate.....	0107E-1
PIN, automatic oil filter motor toggle spring center.....	0107E-1
PIN, automatic oil filter motor valve arm.....	0107E-1
PIN, auxiliary generator engine camshaft bearing.....	0611B-8
PIN, auxiliary generator engine carburetor float.....	0611D
PIN, auxiliary generator engine piston.....	0611B-4
PIN, auxiliary generator panel board cutout to frame.....	0611H-1
PIN, bogie wheel lubricating spring.....	1303
PIN, cab escape hatch and window cover-hinge.....	1805H
PIN, cab window cover operating link.....	1805H
PIN, cam drive intermediate gear.....	0113B-2
PIN, clevis, automatic oil filter motor toggle.....	0107E-1
PIN, clevis, .50 cal. anti-aircraft machine gun hold down latch handle, latch clamp and machine gun eyebolt.....	1900-1
PIN, clevis, turret door latch.....	1902A
PIN, clutch release arm.....	0202
PIN, cotter, auxiliary generator engine carburetor to governor link.....	0611D
PIN, cotter, engine fuel shut-off valve universal joint.....	0300-1
PIN, cranking motor and battery relay compression spring.....	0610-2
PIN, dowel, automatic oil filter motor.....	0107E-1
PIN, dowel, differential compensating gear case.....	1003
PIN, dowel, engine crankcase bearing liner.....	0101
PIN, dowel, engine crankcase scavenger oil line gasket.....	0107J
PIN, dowel, engine flywheel hub.....	0109
PIN, dowel, engine generator frame, drive end.....	0601
PIN, dowel, engine valve rocker oil scavenger pump body.....	0107C
PIN, dowel, interior final drive bracket.....	1008A
PIN, dowel, return idler wheel mounting shaft.....	1306
PIN, dowel, spark plug insert.....	0604B
PIN, dowel, transmission case rear cover.....	0701A
PIN, dowel, transmission oil pump body.....	0709A
PIN, dowel, turret traversing gear box.....	1903D
PIN, dowel, turret traversing support bearing.....	1900B
PIN, driving, automatic oil filter motor clutch.....	0107E-1

Item	Group
PIN, engine carburetor accelerating pump lever.....	0301
PIN, engine carburetor float fulcrum.....	0301
PIN, engine carburetor float mechanism.....	0301
PIN, engine cranking motor annulus gear.....	0602
PIN, engine master rod piston pin bushing.....	0104
PIN, engine room hatch hinge.....	1805H
PIN, engine valve rocker roller.....	0105B
PIN, engine valve tappet roller.....	0105A
PIN, .50 cal. anti-aircraft machine gun brake handle retaining washer.....	1900-2
PIN, front bulkhead accelerator control lever.....	15C1-A
PIN, front cylinder baffle to cylinder baffle support screw.....	0500
PIN, fuel pump shaft.....	0302
PIN, gear box shifter fork.....	1903D
PIN, guide block, automatic oil filter piston arm.....	0107E-1
PIN, gun lock chain to gun lock bar.....	2218
PIN, hand operated bilge pump rocker arm lift pin and pivot pin.....	2208F
PIN, hand operated turret traversing mechanism handle lever.....	1903
PIN, hand operated turret traversing mechanism handle lever index.....	1903
PIN, hand operated turret traversing mechanism lever guard.....	1903
PIN, hinge, engine cranking motor brush holder.....	0602
PIN, hinge, turret door.....	1902A
PIN, hinge, turret door latch.....	1902A
PIN, hinge, turret gun lock traveling bar.....	2218
PIN, hold down latch clevis pin.....	1900-1
PIN, horizontal release lever return spring.....	1804
PIN, hydraulic turret traversing mechanism gear box body.....	1903D
PIN, knuckle, engine articulated connecting rod, assembly.....	0104
PIN, latch, turret gun lock, assembly.....	2218
PIN, left, hand operated bilge pump rocker arm.....	2208F
PIN, lock, engine flywheel hub nut.....	0109
PIN, locking, differential steering brake band link.....	1009
PIN, locking, differential steering brake band link to shaft.....	1009
PIN, locking, differential steering brake bottom shoe to link.....	1009
PIN, locking, differential steering brake center shoe.....	1009
PIN, locking, differential steering brake shaft to adjusting yoke.....	1009
PIN, locking, differential steering brake top shoe and adjusting yoke.....	1009
PIN, locking, gearshift lever block latch plate.....	0706A
PIN, locking, tow hitch.....	1501
PIN, locking, track chain.....	1305
PIN, locking, transmission fourth and fifth speed gear synchronizer clutch cone.....	0704B
PIN, locking, transmission gear synchronizer clutch.....	0704B
PIN, locking, transmission second and third speed gear synchronizer clutch cone.....	0704B
PIN, oil plug, crankcase.....	0107J
PIN, piston, auxiliary generator engine.....	0611B-4
PIN, piston, engine, w/PLUGS, assembly.....	0103B
PIN, pivot, hand operated bilge pump rocker arm.....	2208F
PIN, pivot, rear bulkhead clutch control.....	15D1
PIN, retaining, control panel snap switch yoke.....	0606
PIN, retaining, tow hitch locking pin.....	1501

Item	Group
PIN, retaining, turret traversing mechanism hydraulic motor and variable displacement pump valve.....	1903E
PIN, stop, cranking motor brush holder.....	0602
PIN, stop, turret traversing mechanism control handle.....	1903C
PIN, stop, turret traversing mechanism variable displacement pump control lever.....	1903E
PIN, taper, engine carburetor throttle body.....	0301
PIN, taper, engine carburetor throttle stop and accelerator pump lever.....	0301
PIN, tow hitch hook.....	1501
PIN, track chain link.....	1305
PIN, transmission case breather.....	0701
PIN, transmission oil pump relief valve.....	0709A
PIN, turret ammunition box latch.....	1906
PIN, turret door latch.....	1902A
PIN, turret rotating and sighting periscope housing door hinge.....	1905-1
PIN, turret sighting periscope holder.....	1905-2
PIN, turret sighting periscope holder latch.....	1905-2
PIN, turret traversing lock bolt.....	1903B
PIN, turret traversing lock operating cam.....	1903B
PIN, turret traversing lock plunger.....	1903B
PIN, turret traversing mechanism dual control handle and crank.....	1903C
PIN, turret traversing mechanism dual control upper handle to turret and relay crank.....	1903C
PIN, turret traversing mechanism firing control handle switch.....	1903C
PIN, turret traversing mechanism firing control trigger.....	1903C
PIN, turret traversing mechanism firing control trigger safety interlock lever.....	1903C
PIN, turret traversing mechanism gear box and hydraulic motor assembly.....	1903D
PIN, turret traversing mechanism gear box shifter lever.....	1903D
PIN, turret traversing mechanism lower housing..	1903D
PIN, turret traversing mechanism rotating pinion..	1903D
PIN, turret traversing mechanism variable displacement pump cage roller retaining plate...	1903E
PIN, turret traversing mechanism variable displacement pump case plate and spring center control.....	1903E
PIN, turret traversing mechanism variable displacement pump control cam and equalizer lever follow-up.....	1903E
PIN, turret traversing mechanism variable displacement pump control cam piston.....	1903E
PIN, turret traversing mechanism variable displacement pump control equalizer lever guide.....	1903E
PIN, turret traversing mechanism variable displacement pump control spring.....	1903E
PIN, turret traversing mechanism variable displacement pump flat valve.....	1903E
PIN, turret traversing mechanism variable displacement pump pilot valve plunger.....	1903E
PIN, turret traversing mechanism variable displacement pump retaining plate.....	1903E
PIN, turret vertical retaining roller.....	1900B
PINION, bevel, turret traversing gear box and hydraulic motor.....	1903D
PINION, differential.....	1003

Item	Group
PINION, engine cranking motor intermediate gear shaft.....	0602
PINION, planet, engine cranking motor drive, w/BEARING, assembly.....	0602
PINION, rotating, turret traversing mechanism gear box to turret ring gear.....	1903D
PINION, spar, turret traversing mechanism hydraulic motor output shaft.....	1903D
PINION, spar, hand operated turret traversing mechanism gear box drive.....	1903
PINION, turret traversing mechanism.....	1903D
PIPE, drain, bullet sealing fuel tank drip shield...	0304
PIPE, engine exhaust.....	0108B
PIPE, filler, engine fuel tank, assembly.....	0300
PIPE, filler, fuel tank.....	0300
PIPE, fixed fire extinguisher front bulkhead to rear bulkhead pull cable.....	2401
PIPE, intake, engine.....	0108A
PIPE, oil filler and drain, auxiliary generator engine.....	0611B-9
PIPE, oil filler, auxiliary generator engine.....	0611B-9
PIPE, retaining, ammunition box.....	1801A
PIPE, transmission case oil filler.....	0709D
PISTON, automatic oil filter motor, assembly....	0107E-1
PISTON, auxiliary generator engine.....	0611B-4
PISTON, auxiliary generator engine, w/RINGS and PIN, assembly.....	0611B-4
PISTON, dash pot, automatic oil filter motor....	0107E-1
PISTON, engine carburetor accelerator pump....	0301
PISTON, engine, w/PINS, PLUGS, and RINGS, assembly.....	0103
PISTON, turret traversing mechanism variable displacement pump and hydraulic motor cylinder.....	1903E
PISTON, turret traversing mechanism variable displacement pump and hydraulic motor flat valve equalizer.....	1903E
PISTON, turret traversing mechanism variable displacement pump and hydraulic motor, back-up.....	1903E
PISTON, turret traversing mechanism variable displacement pump control, cam.....	1903E
PISTON, turret traversing mechanism variable displacement pump slide block.....	1903E
PLATE, adjusting, auxiliary generator engine carburetor choke.....	0611D
PLATE, adjusting, engine generator current and voltage regulators and cut-out relay spring....	0601B
PLATE, auxiliary generator engine governor, w/WEIGHT, assembly.....	0611E
PLATE, bearing, fuel pump, rear, assembly.....	0302
PLATE, body, turret traversing mechanism dual control, upper handle.....	1903C
PLATE, cargo compartment floor.....	1803B
PLATE, clamping, turret traversing gear box and hydraulic motor.....	1903D
PLATE, cross, track chain.....	1305
PLATE, drain, cargo compartment floor.....	1803B
PLATE, driven, clutch.....	0201B
PLATE, driving, clutch, w/FACINGS, assembly....	0201
PLATE, engine cranking motor bearing and gear, assembly.....	0602
PLATE, engine cranking motor commutator end bearing.....	0602
PLATE, engine cranking motor drive clutch, assembly.....	0602

Item	Group	Item	Group
PLATE, engine cranking motor drive housing . . .	0602	PLATE, retaining, engine cranking motor hand crank shaft ball bearing	0602
PLATE, engine generator brush	0601	PLATE, retaining, engine generator drive and ball bearing	0601
PLATE, engine generator end cover, commutator end	0601	PLATE, retaining, rear bulkhead clutch control pivot pin	15D1
PLATE, friction, auxiliary generator engine carburetor thermostat housing	0611D	PLATE, retaining, turret traversing mechanism variable displacement pump caged roller	1903E
PLATE, front propeller shaft	0901	PLATE, serial number, turret traversing mechanism variable displacement pump and hydraulic motor	2203
PLATE, engine carburetor shield	0301	PLATE, side, control tunnel	1801B
PLATE, fulcrum, gearshift lever support	0706A	PLATE, specification, engine carburetor	2203
PLATE, governor, auxiliary generator engine	0611E	PLATE, strike, cab escape hatch latch	1805H
PLATE, guide, periscope holder adjuster knob	1816	PLATE, strike, turret escape hatch	1902
PLATE, guide, turret rotating periscope holder adjuster knob	1905-1	PLATE, suction, bilge pump	2208C
PLATE, hand operated bilge pump diaphragm	2208F	PLATE, support, engine generator terminal	0601
PLATE, identification, vehicle	2203	PLATE, thrust, auxiliary engine crankshaft	0611B-3
PLATE, insulating, magneto breaker contact screw support bracket	0603A	PLATE, thrust, automatic oil filter motor	0107E-1
PLATE, insulating, magneto housing and cylinder distributor	0603A	PLATE, toggle, automatic oil filter motor cover, assembly	0107E-1
PLATE, latch, gearshift lever block	0706A	PLATE, turret index indicator	2209
PLATE, lock, auxiliary generator engine governor plate to crankshaft screw	0611E	PLATE, turret rotating periscope housing segment knob	1905-1
PLATE, lock, auxiliary generator engine intake and exhaust valve cam follower	0611B-6	PLATE, turret traversing control link boot	1903C
PLATE, lock, universal joint trunnion bearing	0902	PLATFORM, auxiliary generator, assembly	0611
PLATE, lubrication access, rear propeller shaft universal joint	0901	PLATFORM, .50 cal. ammunition rack, assembly	1906
PLATE, magneto drive end, assembly	0603A	PLIERS, combination	2301
PLATE, mounting, circuit breaker	0606D	PLIERS, side-cutting, long-needle-nose	2301
PLATE, mounting, control panel switch, assembly	0606E	PLIERS, water pump	2301
PLATE, mounting, engine generator regulator and relay panel	0601B	PLUG, automatic oil filter detent	0107E-1
PLATE, mounting, engine generator regulator units, assembly	0601B	PLUG, automatic oil filter sump	0107E-1
PLATE, mounting, turret traversing pump and motor	1903E	PLUG, automatic oil filter valve block	0107E-1
PLATE, name and instruction, automatic oil filter	2203	PLUG, auxiliary generator engine camshaft pin	0611B-8
PLATE, name, circuit breaker	2203	PLUG, auxiliary generator engine carburetor fuel sight	0611D
PLATE, name, control panel cover	2203	PLUG, bogie wheel axle	2301
PLATE, name, engine	2203	PLUG, bullet hole	2301
PLATE, name, generator regulator and relay panel	2203	PLUG, check, engine fuel primer pump	0308A-1
PLATE, name, governor	2203	PLUG, cylinder head primer hole	0308A-2
PLATE, name, transmission	2203	PLUG, drain, auxiliary generator engine carburetor	0611D
PLATE, name, turret master switch box	2203	PLUG, drain, auxiliary generator fuel tank	0611C
PLATE, name, turret master switch box circuit breaker	2203	PLUG, drain, engine carburetor float chamber	0301
PLATE, name, turret traversing mechanism, assembly	2203	PLUG, drain, engine crankcase oil sump, w/GASKET, assembly	0107A
PLATE, number, turret traversing mechanism and firing control	1903C	PLUG, drain, engine fuel filter sump	0306
PLATE, number, turret traversing mechanism gear box and motor	1903D	PLUG, drain, oil reservoir	0107D
PLATE, number, turret traversing mechanism variable displacement pump	2203	PLUG, drain, power take-off	2012
PLATE, panel, turret gyro switch box	0613D	PLUG, drain, transmission case	0701
PLATE, periscope housing segment knob	1816	PLUG, engine accessory case oil lines	0107J
PLATE, pressure, clutch, w/FACING, assembly	0202	PLUG, engine carburetor air horn	0100 0301C 0301-1
PLATE, rear bulkhead, center	1801B	PLUG, engine carburetor connection opening	0301
PLATE, rear propeller shaft	0901	PLUG, engine carburetor main body	0301
PLATE, removal, turret gun	1900	PLUG, engine carburetor main body and throttle body	0301
PLATE, retaining, engine carburetor packing	0301	PLUG, engine carburetor strainer	0301
PLATE, retaining, engine cranking motor armature shaft drive end ball bearing	0602	PLUG, engine carburetor throttle body	0301
PLATE, retaining, engine cranking motor drive end frame felt washer	0602	PLUG, engine crankcase scavenger oil line	0107J
		PLUG, engine fuel priming distributor	0308A-2
		PLUG, engine fuel tank sump drain	0300
		PLUG, engine high-pressure oil lines	0107J
		PLUG, engine high-pressure oil screen	0107E-2
		PLUG, engine high-pressure oil screen by-pass valve	0107E-2

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
PLUG, engine oil pressure gage hole.....	0107J
PLUG, engine oil reservoir outlet tee.....	0107J
PLUG, engine piston pin.....	0103B
PLUG, expansion, engine governor body.....	0305
PLUG, expansion, engine governor rocker shaft hole.....	0305
PLUG, fixed fire extinguisher cylinder pressure head.....	2401
PLUG, front propeller shaft universal joint rear bell housing.....	0901
PLUG, fuel tanks.....	1803B
PLUG, hand operated bilge pump lower diaphragm plate.....	2208F
PLUG, hull bottom drain plug.....	1803B
PLUG, hull nose drain plug.....	1803B
PLUG, left engine fuel tank filler pipe.....	0300
PLUG, magneto drive end plate mounting screw hole.....	0603A
PLUG, magneto drive end plate mounting stud hole.....	0603A
PLUG, magneto drive gear.....	0113B-5
PLUG, oil, exterior final drive coupling ring.....	1008A
PLUG, oil reservoir.....	1803B
PLUG, paper, engine carburetor.....	0301
PLUG, pipe, clutch release sleeve.....	0202
PLUG, ponton drain plug.....	1803B
PLUG, radio cabinet junction box.....	2602B
PLUG, rear of hull drain plug.....	1803B
PLUG, rear propeller shaft universal joint front bell housing.....	0901
PLUG, 75 mm. howitzer firing cable receptacle.....	0613
PLUG, spark, auxiliary generator engine.....	0611H-4
PLUG, spark, w/GASKET, assembly.....	0100 0604B
PLUG, stop, magneto breaker contact lever.....	0603A
PLUG, transmission case brake adjusting hole.....	0701
PLUG, transmission case final drive housing.....	0701
PLUG, transmission case, front.....	0701
PLUG, transmission case hand hole cover.....	0701
PLUG, transmission gear shifter rod support ball retaining spring.....	0706B
PLUG, transmission oil strainer by-pass spring.....	0709C
PLUG, turret gun mount recoil mechanism.....	0613
PLUG, turret gun mount solenoid.....	0613
PLUG, turret traversing gear housing filler.....	1903D
PLUG, turret traversing gear housing, upper.....	1903D
PLUG, turret traversing mechanism gear box body.....	1903D
PLUG, turret traversing mechanism hydraulic motor pump end head and oil pot.....	1903D
PLUG, universal joint slip yoke.....	0902
PLUG, vent, engine fuel filter relief valve.....	0306
PLUNGER, auxiliary generator engine camshaft to breaker lever.....	0611B-8
PLUNGER, cranking motor and battery relay.....	0610B-2
PLUNGER, engine carburetor idle adjusting lever.....	0301
PLUNGER, engine fuel primer pump, assembly.....	0308A-1
PLUNGER, hand operated turret traversing mechanism index.....	1903
PLUNGER, turret traversing lock.....	1903B
PLUNGER, turret traversing mechanism gear box shifter lever detent.....	1903D
PLUNGER, turret traversing mechanism gear pump relief valve.....	1903E
PLUNGER, turret traversing mechanism variable displacement pump control valve.....	1903E
POLE PIECE, auxiliary generator field.....	0611A

Item	Group
POST, support, cranking motor and battery relay contact cover.....	0610B-2
POST, terminal, auxiliary generator engine ignition housing.....	0611H-2
POST, terminal, battery relay.....	0610B-1
POST, terminal, control panel.....	0606C
POST, terminal, control tunnel junction box.....	0606C
POST, terminal, cranking motor relay.....	0610B-1
POST, turret seat, assembly.....	1901A
POT, oil, turret traversing mechanism, assembly.....	1903F
POWER TAKE-OFF, assembly.....	2012
PROTECTOR, track chain seal.....	1305
PULLEY, cranking, auxiliary generator engine.....	0611
PULLEY, driven, engine generator.....	0601
PULLEY, fixed fire extinguisher dual pull mechanism.....	2401
PULLEY, generator drive shaft.....	0113B-4
PUMP, bilge, assembly.....	2208C
PUMP, bilge, hand operated, w/valve BOX, assembly.....	2208F
PUMP, engine fuel primer, assembly.....	0308A-1
PUMP, fuel, assembly.....	0302
PUMP, fuel, engine, assembly.....	0100
PUMP, oil pressure and scavenger, engine, assembly.....	0100 0107
PUMP, oil scavenger, engine valve rocker, w/COUPLING, assembly.....	0100 0107C
PUMP, oil, transmission, assembly.....	0709A
PUMP, turret traversing mechanism variable displacement, assembly.....	1903E
PUNCH, drive pin.....	2301

Q

QUADRANT, differential steering brake hand lever	15A1
QUADRANT, engine carburetor idling adjustment	0301
QUADRANT, upper and lower front baffles.....	0500

R

RACE, engine cranking motor drive housing ball...	0602
RACE, slide block, turret traversing mechanism two-way variable displacement pump.....	1903E
RACE, slide block, turret traversing mechanism two-way variable displacement pump w/BEARING, assembly.....	1903E
RACE, turret ball, inner.....	1903A
RACE, turret ball, outer, w/RING GEAR, assembly.....	1903A
RACK, .50 cal. ammunition, assembly.....	1906
RACK, oil, turret recoil mechanism and stabilizer..	1907
RACK, 75 mm. ready shell, assembly.....	1906
RADIO SET.....	2601
RATCHET, movable, engine cranking motor hand crank shaft.....	0602
RATCHET, socket wrench.....	2301
RATCHET, stationary, engine cranking motor hand crank shaft.....	0602
RECEIVER, radio, assembly.....	2601
RECEPTACLE, cable, 75 mm. howitzer firing mechanism.....	0613
RECEPTACLE, turret gyro switch box, w/WIRES, assembly.....	0613D
REGULATOR, current, engine generator, assembly.....	0601B
REGULATOR, voltage, engine generator, assembly.....	0601B

Item	Group
RELAY, cranking motor and battery, assembly....	0610B-2
RELAY, cut-out, engine generator regulator, assembly.....	0601B
RELAY, turret gyro switch box.....	0613D
RESERVOIR, oil, engine, assembly.....	0107D
RESERVOIR, oil, turret, assembly.....	1903F
RESISTANCE, engine generator regulator, assembly.....	0601B
RESISTOR, auxiliary generator engine shunt field.....	0611H-1
RETAINER, adjusting, turret traversing mechanism worm gear.....	1903D
RETAINER, auxiliary generator engine valve spring.....	0611B-6
RETAINER, bogie wheel bearing, w/SLEEVE, assembly.....	1303
RETAINER, bogie wheel grease seal.....	1303
RETAINER, bogie wheel lubricating spring leather cup.....	1303
RETAINER, control panel fuse.....	0606C
RETAINER, engine cranking motor drive gear, assembly.....	0113B-3
RETAINER, engine cranking motor drive housing ball.....	0602
RETAINER, engine fan shroud steady bar seal.....	0500
RETAINER, engine valve rocker push rod housing.....	0105B
RETAINER, generator drive gear.....	0113B-4
RETAINER, generator drive shaft bearing.....	0113B-4
RETAINER, generator drive shaft coupling w/oil THROWER.....	0113B-4
RETAINER, magneto breaker cam oil wick.....	0603A
RETAINER, magneto breaker front end, assembly.....	0603A
RETAINER, magneto distributor gear axle.....	0603A
RETAINER, magneto drive end plate axle oiling strips.....	0603A
RETAINER, magneto rotating magnet flyweight cover.....	0603A
RETAINER, oil, clutch spindle bearing.....	0208B
RETAINER, oil, interior final drive shaft.....	1008A
RETAINER, transmission spiral bevel pinion bearing.....	1003
RETAINER, turret ball.....	1903A
RETAINER, turret ball seal.....	1900
RETAINER, turret master switch boot, assembly..	0613E
RETAINER, turret traversing mechanism gear pump relief valve bushing.....	1903E
RETAINER, universal joint slip yoke washer.....	0902
RETAINER, upper and lower front baffles.....	0500
RHEOSTAT, turret gyro switch box, assembly.....	0613D
RIM, differential steering brake drum.....	1009
RING, automatic oil filter motor clutch.....	0107E-1
RING, ball, assembly.....	1903A
RING, cab ventilating fan receptacle box.....	0606E
RING, compression, auxiliary generator engine piston.....	0611B-4
RING, control panel box.....	0606E
RING, coupling, exterior final drive.....	1008A
RING, electrical distribution box.....	0606E
RING, engine cranking motor drive clutch spring, w/STUDS, assembly.....	0602
RING, engine fan shroud.....	0500
RING, engine fuel primer pump gland packing.....	0308A-1
RING, extractor engine rear crankshaft.....	0102
RING, extractor, rear crankshaft.....	2301
RING, field, auxiliary generator, w/COILS and BRUSHES, assembly.....	0611A

Item	Group
RING, filler, periscope housing adapter.....	1816
RING, filler, turret rotating periscope mounting.....	1905-1
	0601B
	0606E
RING, gland, terminal tube.....	0608
	0612
	2602D
RING, gland, terminal tube instrument box.....	1809
RING, headlight.....	0606E
RING, holding, cartridge bag.....	1906
RING, lock, auxiliary generator engine piston pin.....	0611B-4
RING, lock, auxiliary generator engine piston pin retaining.....	0611B-4
RING, lock, magneto distributor gear axle.....	0603A
RING, locking, engine cranking motor drive clutch adjusting nut.....	0602
RING, oil, auxiliary generator engine piston.....	0611B-4
RING, periscope housing adapter.....	1816
RING, piston, auxiliary generator engine compression.....	0611B-4
RING, piston, auxiliary generator engine, oil.....	0611B-4
RING, piston, auxiliary generator engine, scraper..	0611B-4
RING, piston, engine, compression.....	0103A
RING, piston, engine, oil control.....	0103A
RING, radio junction box.....	2602B
RING, retaining, engine cranking motor drive planet pinion.....	0602
RING, retaining, turret ball.....	1903A
RING, retaining, turret traversing mechanism variable displacement pump slide block roller bearing.....	1903E
RING, seal, fuel pump.....	0302
RING, spotlight receptacle box.....	0606E
RING, taillight.....	0608
RING, taillight body.....	0608
RING, taillight lens.....	0608
RING, turret rotating periscope housing adapter...	1905-1
RING, turret traversing mechanism hydraulic motor and variable displacement pump.....	1903D
RING, turret traversing mechanism oil pot measuring stick.....	1903F
ROCKER, engine exhaust valve, w/SCREW, assembly.....	0105B
ROCKER, engine intake valve, w/SCREW, assembly.....	0105B
ROCKER, rear bulkhead clutch control, w/BUSHINGS, assembly.....	15D1
ROD, automatic oil filter cartridge support.....	0107E-1
ROD, clutch, assembly.....	15D1
ROD, clutch, rear, assembly.....	15D1
ROD, connecting, auxiliary generator engine, w/BUSHINGS, assembly.....	0611B-5
ROD, connecting, engine, articulated, w/BUSHINGS, assembly.....	0104
ROD, connecting, engine, master, w/KNUCKLE PINS, assembly.....	0104
ROD, connecting, turret traversing mechanism control handle to pump, assembly.....	1903C
ROD, connecting, turret traversing mechanism dual control handle to bell crank.....	1903C
ROD, differential steering brake hand lever pawl...	15A1
ROD, engine cranking motor drive shaft meshing jaw	0602
ROD, engine governor speed control, assembly.....	0305A
ROD, engine governor throttle, assembly.....	0305A
ROD, extension, engine fuel shut-off valve.....	0300-1
ROD, extension, throttle, rear.....	15C1-A

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
ROD, latch, transmission gearshift lever.....	0706A
ROD, operating, rear bulkhead clutch control, assembly.....	15D1
ROD, operating, throttle, assembly.....	15C1-A
ROD, push, engine valve rocker, assembly.....	0105B
ROD, push, turret traversing mechanism firing control trigger.....	1903C
ROD, retaining, engine carburetor air cleaner cup.....	0301C
ROD, retaining, turret cover.....	1900
ROD SET, connecting, engine.....	0104
ROD, shifter, transmission first speed and reverse gear.....	0706A
ROD, shifter, transmission fourth and fifth speed gear.....	0706A
ROD, shifter, transmission second and third speed gear.....	0706A
ROD, steering, assembly.....	15A1
ROD, throttle, assembly.....	15C1-A
ROD, turret traversing lock plunger.....	1903B
ROD, vehicle hoisting eye.....	1801C
ROLL, tool.....	2301
ROLLER, automatic oil filter motor clutch.....	0107E-1
ROLLER, automatic oil filter motor piston pin.....	0107E-1
ROLLER, auxiliary generator armature brush lever.....	0611A
ROLLER, cab escape hatch handle.....	1805H
ROLLER, engine valve rocker.....	0105B
ROLLER, engine valve tappet.....	0105A
ROLLER, retaining, turret, w/BUSHING, assembly.....	1900B
ROLLER, transmission output shaft fifth speed gear needle bearing.....	0704B
ROLLER, transmission output shaft second speed gear needle bearing.....	0704B
ROLLER, transmission output shaft third and fourth speed gear needle bearing.....	0704B
ROLLER, turret traversing mechanism variable displacement pump control cam backup.....	1903E
ROLLER, turret traversing mechanism variable displacement pump, w/CAGE, assembly.....	1903E
ROTOR, fuel pump.....	0302
ROTOR, transmission oil pump.....	0709A

S

SADDLE, support, auxiliary generator engine.....	0611
SCALE, turret traversing index.....	2209
SCREEN, engine carburetor strainer, assembly.....	0301
SCREEN, engine fuel primer pump diaphragm.....	0308A-1
SCREEN, oil, engine, high-pressure, assembly.....	0107E-2
SCREEN, transmission oil, assembly.....	0709B
SCREEN, transmission oil strainer.....	0709C
SCREEN, turret traversing mechanism oil pot filler strainer.....	1903F
SCREW, adjusting, engine governor spring.....	0305
SCREW, adjusting, rear idler slide, w/HEAD, assembly.....	1304
SCREW, adjusting, engine valve.....	0105
SCREW, ammunition box support to turret.....	1906
SCREW, attaching, auxiliary generator engine carburetor choke and throttle lever butterfly....	0611D
SCREW, attaching, auxiliary generator engine carburetor choke baffle.....	0611D
SCREW, attaching, auxiliary generator engine carburetor choke butterfly.....	0611D
SCREW, attaching, auxiliary generator engine carburetor lower to upper housing.....	0611D

Item	Group
SCREW, attaching, auxiliary generator engine carburetor thermostat plate.....	0611D
SCREW, attaching, auxiliary generator engine carburetor throttle lever.....	0611D
SCREW, attaching, radio junction box terminal base.....	2602B
SCREW, attaching, 75 mm. howitzer firing switch bracket.....	0613
SCREW, automatic oil filter motor head cylinder oil passage seal.....	0107E-1
SCREW, auxiliary generator engine carburetor air shutter stop.....	0611D
SCREW, auxiliary generator engine carburetor choke shaft.....	0611D
SCREW, auxiliary generator engine carburetor elbow to cylinder.....	0611D
SCREW, auxiliary generator engine carburetor throttle stop lever spring.....	0611D
SCREW, auxiliary generator engine elbow to carburetor.....	0611D
SCREW, auxiliary generator ammeter shunt.....	0611H-1
SCREW, auxiliary generator binding post.....	0611H-1
SCREW, auxiliary generator engine hood.....	0611
SCREW, auxiliary generator panel board.....	0611H-1
SCREW, auxiliary generator panel board bind post.....	0611H-1
SCREW, auxiliary generator panel board cutout lead post.....	0611H-1
SCREW, auxiliary generator panel board starting switch lead post.....	0611H-1
SCREW, auxiliary generator panel board to generator.....	0611H-1
SCREW, auxiliary generator panel board to generator cover.....	0611H-1
SCREW, bilge pump drive shaft.....	2208D
SCREW, blower terminal post.....	0612
SCREW, cab fan terminal.....	0601B
SCREW, condenser terminal.....	0601B
SCREW, contact, auxiliary generator engine ignition housing.....	0611H-2
SCREW, contact, booster coil.....	0604
SCREW, contact engine generator current and voltage regulators.....	0601B
SCREW, contact, magneto breaker.....	0603A
SCREW, cylinder baffle support to front cylinder baffle.....	0500
SCREW, drain, engine accessory case.....	0113B-1
SCREW, engine carburetor bodies.....	0301
SCREW, engine carburetor float fulcrum, assembly.....	0301
SCREW, engine carburetor throttle adjusting stop, assembly.....	0301
SCREW, engine carburetor throttle valve.....	0301
SCREW, engine cranking motor brush lead to field.....	0602
SCREW, engine fuel filter clamp.....	0306
SCREW, engine fuel filter vent.....	0306
SCREW, engine generator current and voltage regulators and cut-out relay armature adjustment.....	0601B
SCREW, engine generator current and voltage regulators contact terminal.....	0601B
SCREW, engine generator ground terminal.....	0601B
SCREW, engine generator regulator cut-out relay and voltage regulator ground leads to mounting plate.....	0601B

Item	Group
SCREW, engine governor speed control rod to speed control lever	0305A
SCREW, eye, adjusting, engine governor spring	0305
SCREW, fan shroud to top cylinder baffle	0500
SCREW, follower, rear idler slide tension spring	1304
SCREW, front cylinder baffle to right cylinder baffle	0500
SCREW, generator lead terminal	0601B
SCREW, hand operated bilge pump body	2208F
SCREW, ground, radio	2603
SCREW, internal communication speaker junction box terminal	2602D
SCREW, locating, magneto distributor cylinder	0603A
SCREW, locking, transmission gearshift lever pivot and fulcrum blocks	0706A
SCREW, locking, turret ammunition box	1906
SCREW, magneto breaker contact lever main spring	0603A
SCREW, magneto ground wire terminal	0603A
SCREW, magneto terminal	0604A
SCREW, operating, engine fuel shut-off valve	0300-1
SCREW, radio junction box terminal	2602B
SCREW, range adjusting, magneto breaker	0603A
SCREW, relay coil terminal	0610B-2
SCREW, retaining, transmission gear shifter rod support interlock ball	0706B
SCREW, set, differential steering brake shoe link pin	1009
SCREW, set, magneto breaker contact lever axle	0603A
SCREW, set, magneto radio shield harness adapter	0603A
SCREW, 75 mm. howitzer firing switch bracket mounting	0613
SCREW, side small sump baffle to inter-cylinder sump baffle	0500
SCREW, spark plug baffle bracket to cylinder head	0500
SCREW, spark plug baffle to fan shroud	0500
SCREW, taillight terminal	0608
SCREW, throttle control rod to speed control rod to throttle lever	0305A
SCREW, throttle control rod to throttle lever	0305A
SCREW, thrust turret traversing mechanism gear shaft	1903D
SCREW, top cylinder baffle to front cylinder baffle	0500
SCREW, transmission gearshift lever pivot block	0706A
SCREW, transmission oil pump body	0709A
SCREW, turret dome light	0613A
SCREW, turret sighting periscope holder	1905-2
SCREW, turret sighting periscope link	1905-2
SCREW, turret to turret ball ring	1900
SCREW, turret traversing mechanism variable displacement pump idler cage pin	1903E
SCREW, turret vertical roller	1900B
SCREW, upper and lower gun shield seals to turret	1904
SCREWDRIVER	2301
SEAL, fan shroud steady bar aperture	0500
SEAL, grease, bilge pump shaft bearing	2208C
SEAL, grease, bogie wheel bearing	1303
SEAL, grease, exterior final drive shaft bearing	1009
SEAL, grease, rear idler sprocket bearing	1307
SEAL, grease, return idler wheel mounting shaft bearing	1306
SEAL, grease, turret traversing mechanism shaft	1903D

Item	Group
SEAL, rubber strip, turret door	1904
SEAL, track chain	1305
SEAL, turret ball	1900
SEAL, turret base, assembly	1900A
SEAL, turret door	1904
SEAL, turret gun shield	1904
SEAL, worm gear, turret traversing mechanism	1903D
SEALER, internal communication speaker junction box terminal base	2602D
SEAT, driver's and radio operator's assembly	1804
SEAT, engine carburetor economizer valve	0301
SEAT, engine carburetor needle valve, w/BUSHINGS, assembly	0301
SEAT, engine exhaust valve spring	0105
SEAT, fuel pump rotor	0302
SEAT, turret gunner's and loader's w/PAN, assembly	1901A
SEAT, turret traversing mechanism gear pump relief valve plunger	1903E
SEAT, w/horizontal release LEVER, assembly	1804
SEGMENT, backing ring, turret base seal	1900A
SEGMENT, clamp, turret basket slip ring	0613B
SEGMENT, cone ring, turret base seal	1900A
SEGMENT, periscope housing	1816
SEGMENT, turret base ring shield	1900A
SEGMENT, turret rotating periscope housing	1905-1
SHACKLE, tow cable	2301A
SHAFT and GEARS, transmission input	0703A
SHAFT and GEAR, transmission, reverse	0704C
SHAFT, auxiliary generator engine carburetor choke	0611D
SHAFT, auxiliary generator engine governor housing, w/LEVER, assembly	0611E
SHAFT, axle, interior final drive	1008A
SHAFT, bilge pump	2208C
SHAFT, bogie wheel	1303
SHAFT, connecting, control panel switch handle	0606
SHAFT, clutch foot pedal	15D1
SHAFT, clutch release yoke	0203
SHAFT, differential steering brake	15A1
SHAFT, drive, bilge pump, assembly	2208D
SHAFT, drive, engine governor	0305
SHAFT, drive, generator, w/GEAR, assembly	0113B-4
SHAFT, drive, magneto	0603A
SHAFT, drive, turret traversing mechanism variable displacement pump, w/CYLINDER and PISTONS, assembly	1903E
SHAFT, engine carburetor throttle valve	0301
SHAFT, engine cranking motor drive, w/ROD, assembly	0602
SHAFT, engine cranking motor hand crank	0602
SHAFT, engine governor rocker yoke	0305
SHAFT, engine valve rocker	0105B
SHAFT, final drive, w/BEARING, assembly	1008A
SHAFT, foot pedal, assembly	15C1-A 15D1
SHAFT, fuel pump, assembly	0302
SHAFT, hand operated turret traversing mechanism gear box crank and pinion	1903
SHAFT, steering brake hand lever	15A1
SHAFT, manual turning, automatic oil filter	0107E-1
SHAFT, mounting, return idler wheel	1306
SHAFT, propeller, assembly	0901
SHAFT, rear idler sprocket	1307
SHAFT, rocking, automatic oil filter motor	0107E-
SHAFT, tachometer cable to engine	2205

Item	Group	Item	Group
SHAFT, tachometer cable, w/SLEEVE, assembly..	2205	SHIM, turret traversing mechanism.....	1903D
SHAFT, throttle, auxiliary generator engine carburetor w/STOP LEVER, assembly.....	0611D	SHIM, turret traversing mechanism gear box and hydraulic motor.....	1903D
SHAFT, transmission first speed gear.....	0704C	SHIM, turret traversing mechanism gear pump relief valve spring.....	1903E
SHAFT, transmission oil pump rotor.....	0709A	SHIM, turret traversing mechanism variable displacement pump slide block roller plate.....	1903E
SHAFT, transmission output.....	0704A	SHIM, turret traversing support bearing.....	1900B
SHAFT, transverse, power take-off.....	2012	SHOE, differential steering brake, assembly.....	1009
SHAFT, turret, horizontal retaining roller bearing..	1900B	SHOE, .50 cal. anti-aircraft machine gun brake, w/LINING, assembly.....	1900-2
SHAFT, turret traversing gear box handwheel knob	1903D	SHOE, magneto breaker contact lever.....	0603A
SHAFT, turret traversing lock cam lever.....	1903B	SHOE, pole, engine generator.....	0601
SHAFT, turret traversing mechanism and firing control handle.....	1903C	SHOVEL.....	2301A
SHAFT, turret traversing mechanism gear.....	1903D	SHROUD, engine fan, w/BRACKETS, assembly..	0500
SHAFT, turret traversing mechanism gear box intermediate pinion and gear.....	1903D	SHROUD, transmission oil screen, assembly.....	0709B
SHAFT, turret traversing mechanism gear box shifter fork lever.....	1903D	SHUNT, ammeter, auxiliary generator, assembly..	0611H-1
SHAFT, turret traversing mechanism gear box sliding gear.....	1903D	SKID, track, assembly.....	1801A
SHAFT, turret traversing mechanism hydraulic motor w/CYLINDER and PISTONS, assembly..	1903D	SLEEVE, ball, compression tube fittings.....	0709D
SHAFT, turret traversing mechanism variable displacement pump gear pump.....	1903E	SLEEVE, engine carburetor accelerator pump, assembly.....	0301
SHAFT, turret traversing mechanism variable displacement pump pilot valve.....	1903E	SLEEVE, engine fuel primer pump connector nut..	0308A-1
SHAFT, turret traversing mechanism w/WORM GEAR, assembly.....	1903D	SLEEVE, insulating, engine cranking motor terminal.....	0602
SHAFT, turret traversing support bearing.....	1900B	SLEEVE, rear idler sprocket bearing grease seal..	1307
SHAFT, vertical, power take-off.....	2012	SLEEVE, release, clutch.....	0202
SHEET, supporting, engine fuel tank.....	0300	SLEEVE, return idler wheel mounting shaft.....	1306
SHELF, dynamotor and amplifier.....	2601	SLEEVE, speedometer driven gear.....	0705
SHELF, radio.....	2601	SLEEVE, stop, engine fuel primer pump plunger handle.....	0308A-1
SHELL, automatic oil filter detent.....	0107E-1	SLEEVE, tachometer cable shaft.....	2205
SHIELD, dust, universal joint trunnion bearing..	0902	SLEEVE, thrust, engine governor drive shaft.....	0305
SHIELD, engine carburetor, assembly.....	0301	SLIDE, rear idler, assembly.....	1304
SHIELD, engine cranking motor terminal.....	0602	SLIDE, 75 mm. ammunition box strap.....	1906
SHIELD, engine generator.....	0601A	SLINGER, oil, power take-off transverse shaft...	2012
SHIELD, radio, magneto block end coil cover, assembly.....	0603A	SLINGER, oil, power take-off vertical shaft.....	2012
SHIELD, rubber, booster coil.....	0604	SLIP RING, turret basket, assembly.....	0613B
SHIELD, sight, periscope.....	1816	SNAP RING, engine cranking motor ball retainer nut.....	0602
SHIELD, sight, turret rotating periscope holder..	1905-1	SNAP RING, transmission input shaft front bearing.....	0703A
SHIELD, sight, turret sighting periscope holder..	1905-2	SNAP RING, transmission oil pump rotor shaft...	0709A
SHIELD, splash, turret basket.....	1901	SNAP RING, transmission output shaft fourth speed gear collar.....	0704B
SHIELD, turret traversing mechanism control rod to pump, assembly.....	1903C	SNAP RING, transmission reverse shaft ball bearing.....	0704C
SHIM, adjusting, clutch release arm.....	0202	SNAP RING, turret periscope linkage bearing.....	1905
SHIM, differential bearing.....	1003	SNAP RING, universal joint trunnion bearing.....	0902
SHIM, .50 cal. anti-aircraft machine gun mounting ring support.....	1900-1	SOCKET.....	2301
SHIM, .50 cal. anti-aircraft machine gun mounting ring to turret roof.....	1900-1	SOCKET, cab escape hatch handle.....	1805H
SHIM, insulating, magneto breaker contact screw support bracket.....	0603A	SOCKET, fixed fire extinguisher pull handle.....	2401
SHIM, transmission gear shifter rod support.....	0706B	SPACER, automatic oil filter valve block bridge..	0107E-1
SHIM, transmission spiral bevel pinion bearing..	1003	SPACER, auxiliary generator engine thermostat housing.....	0611D
SHIM, turret base seal segment.....	1900A	SPACER, bogie wheel lubricating spring.....	1303
SHIM, turret periscope linkage bearing.....	1905	SPACER, button, bilge pump.....	2208C
SHIM, turret retaining roller housing.....	1900B	SPACER, clutch release yoke stud.....	0203
SHIM, turret rotating periscope housing top segment.....	1905-1	SPACER, engine cranking motor commutator end bearing.....	0602
SHIM, turret sighting periscope housing.....	1905-2	SPACER, engine cranking motor drive clutch plate.....	0602
SHIM, turret traversing ball ring.....	1903A	SPACER, engine cranking motor drive clutch spring.....	0602
SHIM, turret traversing lock shaft adjusting cap screw.....	1903B	SPACER, engine cranking motor gasket.....	0113B-3
SHIM, turret traversing gear box.....	1903D	SPACER, engine crankshaft front bearing.....	0102A

Item	Group
SPACER, engine generator shield bolt.....	0601A
SPACER, engine rear crankshaft bearing.....	0102A
SPACER, fan shroud bracket to cylinder head.....	0500
SPACER, fuel line hose supporting clip.....	0304
SPACER, interior final drive shaft.....	1008A
SPACER, internal communication speaker junction box terminal base.....	2602D
SPACER, magneto radio shield spring clamp.....	0603A
SPACER, power take-off vertical shaft.....	2012
SPACER, rear idler follower screw attaching stud..	1304
SPACER, return idler wheel mounting shaft bearing.....	1306
SPACER, speed control rod.....	0305A
SPACER, throttle control rod.....	0305A
SPACER, throttle control rod to speed control rod.	0305A
SPACER, transmission input shaft fourth and fifth speed gear.....	0704B
SPACER, transmission output shaft fifth speed gear needle bearing.....	0704B
SPACER, transmission output shaft second speed gear needle bearing.....	0704B
SPACER, tube, front bulkhead clutch control lever.....	15D1
SPACER, tube, throttle operating rod control lever	15C1-A
SPACER, turret traversing support bearing.....	1900B
SPACER, vertical release lever axle.....	1804
SPIDER, engine governor weights.....	0305
SPIDER, universal joint, w/grease RETAINER assembly.....	0902
SPINDLE, clutch.....	0208B
SPOTLIGHT, w/CORD.....	0608
SPREADER, track chain link.....	2301
SPRING, automatic oil filter detent.....	0107E-1
SPRING, automatic oil filter motor clutch roll....	0107E-1
SPRING, automatic oil filter motor clutch, shaft end.....	0107E-1
SPRING, automatic oil filter relief valve.....	0107E-1
SPRING, automatic oil filter toggle.....	0107E-1
SPRING, auxiliary generator armature brush lever.....	0611A
SPRING, auxiliary generator engine carburetor stop lever.....	0611D
SPRING, auxiliary generator engine governor outer operating lever.....	0611E
SPRING, auxiliary generator engine, valve.....	0611B-6
SPRING, auxiliary generator panel board cutout armature to frame.....	0611H-1
SPRING, centering, turret traversing mechanism variable displacement pump control.....	1903E
SPRING, check, engine fuel primer pump intake ..	0308A-1
SPRING, clutch pressure plate.....	0202
SPRING, compression, cranking motor and battery relay.....	0610B-2
SPRING, compression, hand operated turret traversing mechanism index plunger.....	1903
SPRING, differential steering brake band adjusting yoke.....	1009
SPRING, differential steering brake hand lever pawl rod.....	15A1
SPRING, engine carburetor economizer valve....	0301
SPRING, engine carburetor idle adjusting lever....	0301
SPRING, engine carburetor stop screw.....	0301
SPRING, engine cranking motor brush.....	0602
SPRING, engine cranking motor drive shaft meshing jaw.....	0602

Item	Group
SPRING, engine cranking motor hand crank movable ratchet.....	0602
SPRING, engine fuel primer pump check-plug.....	0308A-1
SPRING, engine fuel primer pump diaphragm.....	0308A-1
SPRING, engine fuel shut-off valve.....	0300-1
SPRING, engine generator brush arm.....	0601
SPRING, engine generator current regulator armature.....	0601B
SPRING, engine generator regulator cut-out relay armature.....	0601B
SPRING, engine generator voltage regulator armature.....	0601B
SPRING, engine governor speed control rod.....	0305A
SPRING, engine high-pressure oil screen by-pass valve.....	0107E-2
SPRING, engine oil high-pressure relief valve....	0107K
SPRING, engine oil low-pressure relief valve....	0107K
SPRING, engine valve.....	0105
SPRING, extension, driver's and radio operator's seat.....	1804
SPRING, .50 cal. anti-aircraft machine gun mounting brake handle.....	1900-2
SPRING, flat, magneto magnet to drive shaft, automatic advance.....	0603A
SPRING, fuel pump shaft.....	0302
SPRING, fuel pump relief valve.....	0302
SPRING, fuel pump rotor vane.....	0302
SPRING, helical, engine carburetor accelerator pump piston.....	0301
SPRING, ignition plunger, auxiliary generator engine.....	0611B-8
SPRING, lifting, cranking motor and battery relay plunger.....	0610B-2
SPRING, lubricating, bogie wheel, assembly.....	1303
SPRING, magneto distributor block clamp.....	0603A
SPRING, main, magneto breaker control lever....	0603A
SPRING, reinforcing, magneto breaker contact lever main spring.....	0603A
SPRING, reinforcing, magneto distributor block clamp.....	0603A
SPRING, retaining, engine carburetor air cleaner cup disk.....	0301C
SPRING, retaining, transmission gear shifter rod support ball.....	0706B
SPRING, return, foot pedal.....	15C1-A 15D1
SPRING, return, vertical release lever.....	1804
SPRING, tension, auxiliary generator armature brush lever.....	0611A
SPRING, tension, engine cranking motor drive clutch.....	0602
SPRING, tension, engine governor.....	0305
SPRING, tension, rear idler slide.....	1304
SPRING, tension, turret door hold-open latch....	1902A
SPRING, tension, turret door latch handle.....	1902A
SPRING, torsion turret traversing lock plunger...	1903B
SPRING, tow hitch locking pin.....	1501
SPRING, transmission gearshift lever latch control rod button.....	0706A
SPRING, transmission gear synchronizer clutch locking pin.....	0704B
SPRING, transmission oil pressure valve.....	0709D
SPRING, transmission oil pump relief valve.....	0709A
SPRING, transmission oil strainer by-pass.....	0709C
SPRING, turret foot firing mechanism cable.....	1903H
SPRING, turret foot firing mechanism latch.....	1903H

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group
SPRING, turret rotating and sighting periscope housing door.....	1905-1
SPRING, turret slip ring contact brush.....	0613B
SPRING, turret slip ring radio ring brush.....	0613B
SPRING, turret traversing lock plunger.....	1903B
SPRING, turret traversing mechanism control handle trigger.....	1903C
SPRING, turret traversing mechanism gear box shifter lever detent.....	1903D
SPRING, turret traversing mechanism gear pump relief valve.....	1903E
SPRING, turret traversing mechanism variable displacement pump and hydraulic motor back-up piston.....	1903E
SPRING, turret traversing mechanism variable displacement pump check valve.....	1903E
SPRING, turret traversing mechanism variable displacement pump pilot valve.....	1903E
SPRING, turret traversing mechanism variable displacement pump slide block.....	1903E
SPROCKET, final drive.....	1307
SPROCKET, rear idler, assembly.....	1307
STEM, engine carburetor accelerator pump, w/FORK, assembly.....	0301
STEM, engine fuel shut-off valve, w/SPRING, assembly.....	0300-1
STERNFAST.....	2301A
STICK, engine fuel measuring.....	0300
STICK, measuring, turret traversing, mechanism oil pot oil level.....	1903F
STOP, engine carburetor throttle, w/BUSHING, assembly.....	0301
STOP, turret traversing lock plunger spring.....	1903B
STRAINER, engine carburetor, assembly.....	0301
STRAINER, engine valve rocker scavenger oil, assembly.....	0107C
STRAINER, fuel tank filler pipe, w/CAP, assembly.....	0300
STRAINER, oil, transmission, assembly.....	0709C
STRAP, auxiliary generator panel board battery terminal to starter switch.....	0611H-1
STRAP, auxiliary generator panel board cut-out to shunt.....	0611H-1
STRAP, auxiliary generator panel board starter switch to shunt.....	0611H-1
STRAP, booster coil.....	0604
STRAP, cab escape hatch hinge.....	1805H
STRAP, cab window cover hinge.....	1805H
STRAP, ground, auxiliary generator engine.....	0611H-3
STRAP, ground, radio cabinet junction box.....	2602B
STRAP, hold down, .50 cal. anti-aircraft machine gun, assembly.....	1900-1
STRAP, horizontal water can mount.....	1907
STRAP, pamphlet stowage box.....	1907
STRAP, pamphlet stowage box and vertical water can mount.....	1907
STRAP, radio noise filter.....	2603
STRAP, rifle stowage rack front and rear.....	1907
STRAP, 75 mm. ammunition box, w/BUCKLE, assembly.....	1906
STRAP, sighting lights chest.....	1907
STRAP, sighting light chest and horizontal water can mount.....	1907
STRAP, sponge and staff cleaning.....	1907
STRAP, telescope stowage, w/BUCKLE, assembly.....	1907
STRAP, turret master switch box.....	0613E

Item	Group
STRIP, clamping, turret gun shield seal.....	1904
STRIP, insulating, magneto drive end plate ball bearing outer race.....	0603A
STRIP, insulating, magneto housing breaker end ball bearing outer race.....	0603A
STRIP, magneto end plate to coil cover.....	0603A
STRIP, oiling, distributor gear axle, auxiliary.....	0603A
STRIP, oiling, distributor gear axle, main.....	0603A
STRIP, retaining, turret door crash pad.....	1904
STRIP, sealing, turret base.....	1900A
STUD, attaching, auxiliary generator engine carburetor to air cleaner elbow.....	0611D
STUD, attaching, turret cover.....	2201
STUD, auxiliary generator engine ignition housing breaker lever.....	0611H-2
STUD, clutch release yoke.....	0203
STUD, engine generator "A" terminal.....	0601
STUD, engine generator "F" terminal.....	0601
STUD, engine governor speed change lever.....	0305
STUD, turret periscope linkage.....	1905
SUMP, automatic oil filter.....	0107E-1
SUMP, engine fuel filter, assembly.....	0306
SUMP, oil, engine crackcase, w/PLUG, assembly.....	0107A
SUPPORT, basket, front, assembly.....	1901
SUPPORT, channel, engine room baffles, assembly.....	1801B
SUPPORT, cylinder baffle.....	0500
SUPPORT, cylinder baffle to cylinder.....	0500
SUPPORT, driver's and radio operator's seat.....	1804
SUPPORT, engine carburetor float.....	0301
SUPPORT, engine room hatch.....	1805H
SUPPORT, engine room hatch hinge operating arm.....	1805H
SUPPORT, engine steady bar, assembly.....	0110
SUPPORT, engine steady bar clamp.....	0110
SUPPORT, front and center return idler mounting arm, assembly.....	1306
SUPPORT, front propeller shaft, assembly.....	0901A
SUPPORT, generator drive shaft pulley.....	0113B-4
SUPPORT, radio shelf.....	2601
SUPPORT, rear idler slide adjusting screw.....	1304
SUPPORT, rear propeller shaft, assembly.....	0901A
SUPPORT, terminal, radio junction box.....	2602B
SUPPORT, transmission gear shifter rod.....	0706B
SUPPORT, turret ammunition box.....	1906
SUPPORT, turret basket slip ring.....	0613B
SUPPORT, turret foot firing mechanism.....	1903H
SUPPRESSOR, auxiliary generator engine spark plug.....	0611H-4
SUSPENSION, torsional, bogie wheel, assembly.....	1303
SWITCH, battery.....	0606
SWITCH, booster coil.....	0606
SWITCH, circuit breaker, turret dome light.....	0613D
SWITCH, circuit breaker, turret 30 cal. gun firing and gyro stabilizer.....	0613D
SWITCH, circuit breaker, turret 37 mm. gun firing.....	0613D
SWITCH, disengaging turret, assembly.....	0613C
SWITCH, engine magneto.....	0606
SWITCH, firing, 75 mm. howitzer.....	0613
SWITCH, headlight.....	0606
SWITCH, starting, auxiliary generator panel board, assembly.....	0611H-1
SWITCH, turret master switch box.....	0613E
SWITCH, turret traversing mechanism control handle gun firing, assembly.....	1903C

Item	Group
SYNCHRONIZER, transmission fourth and fifth speed gear, assembly.....	0704B
SYNCHRONIZER, transmission second and third speed gear, assembly.....	0704B
SYSTEM, fuel priming.....	0100
T	
TACHOMETER, assembly.....	2205
TANK, engine fuel, assembly.....	0300
TANK, fuel, auxiliary generator, assembly.....	0611C
TAPE, friction.....	2301
TARPAULIN, hull cover.....	2201
TEE, auxiliary generator engine oil filler pipe.....	0611B-9
TEE, engine fuel filter, outlet.....	0304
TEE, engine fuel pump hose to carburetor.....	0304
TEE, engine left fuel tank hose to engine right fuel tank hose.....	0304
TEE, engine oil reservoir, vent.....	0107J
TEE, engine valve rocker scavenger pump.....	0107J
TEE, fire extinguisher tubes.....	2401
TEE, flexible conduits to left magneto.....	0604A
TEE, tube, port No. 5 in turret traversing mechanism variable displacement pump.....	1903E
TEE, tube, port No. 4 in turret traversing mechanism variable displacement pump.....	1903E
TEE, tube, ports No. 1 and 2 in turret traversing mechanism variable displacement pump.....	1903E
TERMINAL, battery cable.....	0610A
TERMINAL, branch control panel fuse.....	0606C
TERMINAL, clutch and throttle control rods bond jumpers.....	2603
TERMINAL, engine cranking motor, w/lead WIRE, assembly.....	0602
TERMINAL, engine generator insulated brush.....	0601
TERMINAL, instrument lines bond jumpers.....	2603
TERMINAL, instrument panel box bond jumper.....	2603
TERMINAL, oil temperature gage bond jumper.....	2603
TERMINAL, radio junction box conductors.....	2602B
TERMINAL, radio junction box ground conductor.....	2602B
TERMINAL, radio noise filter to ammeter cable.....	2603
	0604
	0606C
TERMINAL, solderless, cable.....	0607
	2602D
	2603
THROWER, oil, engine crankshaft.....	0102
THROWER, oil, generator drive shaft.....	0113B-4
THUMB SCREW, auxiliary generator blower mount.....	0612
TIRE, bogie wheel.....	1303
TRACK, assembly.....	1305
TRANSMISSION, synchro-mesh, w/DIFFERENTIAL, assembly.....	0700
TRANSMITTER, radio, assembly.....	2601
TRIGGER, gun firing, off set, turret traversing mechanism control handle.....	1903C
TRIGGER, gun firing turret traversing mechanism control handle.....	1903C
TUBE, auxiliary generator fuel tank to auxiliary generator engine carburetor hose.....	0611C
TUBE, discharge, bilge pump.....	2208E
TUBE, discharge, hand operated bilge pump.....	2208H

Item	Group
TUBE, discharge, hand operated bilge pump to elbow.....	2208H
TUBE, drain, engine intercyylinder rocker box.....	0107J
TUBE, drain, engine interrocker box.....	0107J
TUBE, engine exhaust flexible tube to muffler.....	0402
TUBE, engine fuel priming, cylinder, assembly.....	0308A-2
TUBE, feed, automatic oil filter motor.....	0107E-1
TUBE, fixed fire extinguisher coupling to dual pull mechanism.....	2401
TUBE, fixed fire extinguisher dual pull mechanism to cylinder.....	2401
TUBE, fixed fire extinguisher elbow to shielded nozzle.....	2401
TUBE, fixed fire extinguisher elbow to tee.....	2041
TUBE, fixed fire extinguisher front cylinder to rear cylinder.....	2401
TUBE, fixed fire extinguisher pull handle to dual pull mechanism.....	2401
TUBE, fixed fire extinguisher pulley to pulley.....	2401
TUBE, fixed fire extinguisher rear cylinder to elbow.....	2401
TUBE, fixed fire extinguisher tee to elbow.....	2401
TUBE, fixed fire extinguisher tee to shielded nozzle.....	2401
TUBE, fixed fire extinguisher tee to tee.....	2401
TUBE, fixed fire extinguisher tee to union.....	2401
TUBE, fixed fire extinguisher union to front cylinder pressure head.....	2401
TUBE, flexible, auxiliary generator engine exhaust.....	0611F
TUBE, flexible, exhaust, engine.....	0402
TUBE, hand operated bilge pump elbow to valve box coupling.....	2208H
TUBE, intake, engine carburetor air cleaner.....	0301C
TUBE, intake, hand operated bilge pump.....	2208H
TUBE, intake, transmission oil pump, assembly.....	0709D
TUBE, scavenger, air horn, assembly.....	0301-1
TUBE, speed control rod spring.....	0305A
TUBE, turret stabilizer, assembly.....	1903G
TUBE, turret traversing mechanism w/LOOM, assembly.....	1903F
TUBE, universal joint, assembly.....	0902
TUBING.....	2304P
TUBING, lubrication rear idler slide.....	1304
TUBING, spark plug conduits.....	0604A
TUMBLER, hold down, turret traversing mechanism variable displacement pump and hydraulic motor end head.....	1903E
TURNBUCKLE, intermediate and rear clutch rod.....	15D1
TURNBUCKLE, intermediate and rear throttle rod.....	15C1-A
TURNBUCKLE, turret periscope linkage.....	1905
TURRET, assembly.....	1900

U

UNION, engine oil pressure lines.....	0605B
UNION, engine primer pump front and rear pressure lines.....	0304
UNION, engine primer pump front and rear suction lines.....	0304
UNIT, remote control, assembly.....	2602C

V

VALVE, automatic oil filter motor.....	0107E-1
VALVE, engine carburetor accelerator pump piston.....	0301

Item	Group
VALVE, engine carburetor economizer, assembly . . .	0301
VALVE, engine carburetor float chamber	0301
VALVE, engine, exhaust	0105
VALVE, engine, intake	0105
VALVE, exhaust, auxiliary generator engine	0611B-6
VALVE, flapper, hand operated bilge pump valve box, assembly	2208F
VALVE, hand operated bilge pump valve box	2208F
VALVE, intake, auxiliary generator engine	0611B-6
VALVE, needle auxiliary generator engine carburetor float, w/SEAT, assembly	0611D
VALVE, needle engine carburetor float, w/SEAT, assembly	0301
VALVE, oil pressure, transmission, assembly	0709D
VALVE, relief, automatic oil filter	0107E-1
VALVE, relief, engine oil, low-pressure	0107K
VALVE, relief, fuel pump	0302
VALVE, relief, transmission oil pump	0709A
VALVE, shut-off, auxiliary generator engine fuel, assembly	0611C
VALVE, shut-off, engine fuel, assembly	0300-1
VALVE, temperature control, oil cooler, assembly	0107B
VALVE, temperature control, oil cooler, assembly	0709
VALVE, throttle, engine carburetor	0301
VALVE, turret traversing mechanism variable displacement pump and hydraulic motor	1903E
VANE, fuel pump rotor	0302
VARNISH, insulating	2302B
VENTURI, auxiliary generator engine carburetor	0611D
VENTURI, engine carburetor	0301

W

WASHER, automatic oil filter toggle spring pin	0107E-1
WASHER, auxiliary generator ammeter shunt screw	0611H-1
WASHER, auxiliary generator blower mount thumb screw	0612
WASHER, auxiliary generator engine carburetor choke, adjusting plate and throttle lever butterfly screw	0611D
WASHER, auxiliary generator engine carburetor elbow to cylinder screw	0611D
WASHER, auxiliary generator engine carburetor lower housing screw	0611D
WASHER, auxiliary generator engine carburetor thermostat plate screw	0611D
WASHER, auxiliary generator engine carburetor upper to lower housing screw	0611D
WASHER, auxiliary generator engine carburetor valve seat	0611D
WASHER, auxiliary generator engine elbow to carburetor screw	0611D
WASHER, auxiliary generator engine governor outer lever to carburetor link	0611E
WASHER, auxiliary generator engine governor plate to crankshaft	0611E
WASHER, auxiliary generator engine panel board shunt strap screw	0611H-1
WASHER, auxiliary generator panel board battery binding post bolt marked "BATT"	0611H-1
WASHER, auxiliary generator panel board binding post bolts	0611H-1
WASHER, auxiliary generator panel board binding post screw	0611H-1

Item	Group
WASHER, auxiliary generator panel board coil terminal and binding post	0611H-1
WASHER, auxiliary generator panel board cutout	0611H-1
WASHER, auxiliary generator panel board cutout box stud	0611H-1
WASHER, auxiliary generator panel board mounting	0611
WASHER, auxiliary generator panel board mounting bracket insulating	0611H-1
WASHER, auxiliary generator panel board starting switch	0611H-1
WASHER, auxiliary generator panel board starting switch terminal	0611H-1
WASHER, auxiliary generator panel to generator cover screw	0611H-1
WASHER, auxiliary generator panel board to mounting bracket screws	0611H-1
WASHER, blower terminal post	0612
WASHER, carburetor float mechanism	0301
WASHER, control panel switch handle connecting shaft gland nut	0606
WASHER, cranking motor and battery relay coil terminal screw	0610B-2
WASHER, cranking motor and battery relay compression spring pin	0610B-2
WASHER, cutout cover stud	0611H-1
WASHER, cutout terminal	0611H-1
WASHER, cutout terminal lead bolt	0611H-1
WASHER, differential steering brake band adjusting yoke spring	1009
WASHER, differential steering brake hand lever knob	15A1
WASHER, differential steering brake hand lever pawl rod spring	15A1
WASHER, end play adjusting, magneto breaker end cover	0603A
WASHER, end play adjusting, magneto distributor gear axle	0603A
WASHER, engine carburetor accelerator pump lever screw	0301
WASHER, engine carburetor accelerator pump packing retainer	0301
WASHER, engine carburetor float mechanism	0301
WASHER, engine cranking motor drive end frame	0602
WASHER, engine cranking motor drive shaft rod oil seal	0602
WASHER, engine cranking motor drive sun gear	0602
WASHER, engine cranking motor terminal, outside	0602
WASHER, engine crankshaft front bearing, inner	0102A
WASHER, engine generator regulator resistance	0601B
WASHER, engine generator spacer washer	0601
WASHER, engine generator through bolt	0601
WASHER, engine valve rocker shaft	0105C
WASHER, engine valve spring	0105
WASHER, expansion, turret door retaining hinge pin	1902A
WASHER, exterior final drive through bolt	1008A
WASHER, .50 cal. anti-aircraft machine gun brake mounting handle retainer	1900-2
WASHER, fuel filter clamp	0306
WASHER, hand operated bilge pump rocker arm lift pin and pivot pin	2208F
WASHER, hand operated turret traversing mechanism index plunger	1903
WASHER, hold down bracket eyebolt adjuster	1900-1

Item	Group
WASHER, insulating, cranking motor and battery relay contact disk.....	0610B-2
WASHER, insulating, engine cranking motor terminal.....	0602
WASHER, insulating, engine generator regulator terminal connector.....	0601B
WASHER, left magneto terminal screw.....	0604A
WASHER, lock, auxiliary generator engine carburetor lower to upper housing attaching screw.....	0611D
WASHER, lock, booster coil terminal nut.....	0604
WASHER, lock, engine carburetor accelerator pump arm.....	0301
WASHER, lock, engine carburetor throttle valve screws.....	0301
WASHER, lock, engine fuel primer pump plunger handle.....	0308A-1
WASHER, lock, engine rear crankshaft nut.....	0102
WASHER, plain, booster coil terminal nut.....	0604
WASHER, return idler wheel mounting shaft.....	1306
WASHER, right magneto terminal screw.....	0604A
WASHER, rubber, telescope.....	1905-2
WASHER, 75 mm. howitzer firing switch bracket mounting screw.....	0613
WASHER, shaft end spring, automatic oil filter motor.....	0107E-1
WASHER, spacer, engine generator commutator end ball bearing.....	0601
WASHER, spacing, engine cranking motor drive planet pinion.....	0602
WASHER, spacing, transmission output shaft third and fourth speed gears.....	0704B
WASHER, spring, turret traversing dual control...	1903C
WASHER, tail light terminal screw.....	0608
WASHER, three hole tab, automatic oil filter motor.....	0107E-1
WASHER, thrust, differential bearing.....	1003
WASHER, thrust, engine cranking motor drive sun gear.....	0602
WASHER, thrust, engine governor drive gear.....	0305
WASHER, thrust, fuel pump shaft spring.....	0302
WASHER, thrust, transmission first speed gear...	0704B
WASHER, thrust, transmission output shaft fifth speed gear.....	0704B
WASHER, thrust, transmission output shaft second speed gear.....	0704B
WASHER, thrust, turret traversing lock operating cam.....	1903B
WASHER, thrust, turret traversing mechanism worm gear.....	1903D
WASHER, thrust, turret vertical retaining roller.....	1900B
WASHER, tow hitch locking spring.....	1501
WASHER, transmission bevel pinion ball bearing..	1003
WASHER, transmission oil pump relief valve spring.....	0709A
WASHER, transmission output shaft center bearing lock nut.....	0704A
WASHER, transmission output shaft, rear.....	0704A
WASHER, transmission reverse shaft ball bearing.....	0704C
WASHER, turret basket slip ring.....	0613B

Item	Group
WASHER, turret dome light.....	0613A
WASHER, turret dome light and firing switch conduit bushing.....	0613F
WASHER, turret door latch.....	1902A
WASHER, turret foot firing mechanism latch....	1903H
WASHER, turret gyro switch box bushing.....	0613D
WASHER, turret gyro switch box rheostat.....	0613D
WASHER, turret master switch box bushing.....	0613E
WASHER, turret periscope.....	1905
WASHER, turret periscope linkage ball bearing...	1905
WASHER, turret periscope linkage stud.....	1905
WASHER, turret rotating periscope.....	1905-1
WASHER, turret sighting periscope holder.....	1905-2
WASHER, turret sighting periscope mount.....	1905-2
WASHER, turret slip ring conduit and master switch box.....	0613B
WASHER, turret slip ring hood screw.....	0613B
WASHER, turret slip ring retaining collar.....	0613B
WASHER, turret slip ring terminal tube bushing..	0613B
WASHER, turret to turret ball ring screw.....	1900
WASHER, turret traversing mechanism control handle firing switch bushing.....	1903C
WASHER, turret traversing mechanism dual control upper handle to turret and relay crank...	1903C
WASHER, turret traversing mechanism oil pot air breather filter.....	1903F
WASHER, two hole tab, automatic oil filter motor.....	0107E-1
WASHER, universal joint slip yoke.....	0902
WASHER, universal joint slip yoke washer retainer.....	0902
WASHER, universal joint trunnion bearing.....	0902
WASHER, upper and lower gun shield seals to turret.....	1904
WEIGHT, auxiliary generator engine governor plate.....	0611E
WEIGHT, balance, turret gun breech.....	1904
WEIGHT, counterbalance, engine fan.....	0109A
WEIGHT, engine governor spider.....	0305
WEIGHT, hand operated bilge pump valve.....	2208F
WHEEL, blower.....	0612
WHEEL, bogie, assembly.....	1303
WHEEL, return idler, assembly.....	1306
WINDING, engine generator current regulator, assembly.....	0601B
WINDING, engine generator regulator cut-out relay, assembly.....	0601B
WIPER, periscope.....	1816
WIPER, turret rotating periscope.....	1905-1
WIPER, turret sighting periscope.....	1905-2
WIRE.....	2304M
WIRE, engine cranking motor brush to field.....	0602
WIRE, ground, booster coil.....	0604
WIRE, ground, headlight.....	0607
WIRE, jumper and ground, turret gyro switch box.....	0613D
WIRE, lead headlight.....	0607
WIRE SET, jumper, turret gyro switch box.....	0613D
WIRE, taillight, lead.....	0608
WRENCH.....	2301
WRENCH, rear idler adjusting.....	2301
WRENCH, spanner, bogie wheel.....	2301

ALPHABETICAL INDEX

ALPHABETICAL

Item	Group	Item	Group
Y			
YOKE, adjusting, differential steering brake band.....	1009	YOKE, .50 cal. anti-aircraft machine gun hold down latch handle.....	1900-1
YOKE, bilge pump drive shaft flexible coupling....	2208D	YOKE, fitting, clutch spindle.....	0208B
YOKE, cab window cover operating link.....	1805H	YOKE, mounting, transmission.....	0713
YOKE, control panel snap switch.....	0606	YOKE, power take-off transverse shaft.....	2012
YOKE, engine fuel shut-off valve universal joint...	0300-1	YOKE, release, clutch, assembly.....	0203
YOKE, engine governor rocker.....	0305	YOKE, slip, universal joint.....	0902
		YOKE, transmission input shaft.....	0703A

PART NUMBER INDEX—ORDNANCE

PART NUMBER (ORD.)

Number	Group	Number	Group	Number	Group	Number	Group
A4632.....	0202		0101	A139727.....	0105B	A139823.....	0107J
A19582.....	1903C		0109A		0113B-2	A139826.....	0113B-8
A20188.....	0107J	A136017.....	0113B-3	A139730.....	0105B	A139827.....	0113B-5
	0308A-2		0500		0100	A141802.....	1903
A20197.....	0113B-5		0602	A139738.....	0603A	A141817.....	1903
	0603A	A136029.....	0102		0100	A142001.....	1903
A20198.....	0105B	A136031.....	0113B-5	A139740.....	0113B-3	A142643.....	1903
A20199.....	0105B		0113B-3		0602	A142710.....	15D1-B
A20200.....	0105B	A136033.....	0113B-4	A139752.....	0308A-2	A143113.....	1306
A23081.....	1903B		0113B-5		0105B	A143317.....	0604A
A23091.....	0306		0113B-6		0105C	A143318.....	0604A
A23201.....	0202	A136034.....	0113B-7		0107	A143407.....	0604A
A23202.....	0202	A136035.....	0113B-2	A139759.....	0107J	A143699.....	1900B
A23209.....	0202	A136036.....	0113B-2		0113B-8	A143714.....	0705
A23238.....	0202	A136037.....	0113B-8		0500	A143725.....	0706B
A23239.....	0202	A136038.....	0113B-8		0101	A143727.....	15A1
A29371.....	1903D		0100	A139760.....	0110	A143729.....	15A1
A91962.....	1804	A136041.....	0113B-8		0305	A143730.....	15A1
A130413.....	0703A		0100	A139763.....	0101	A143733.....	1009
A130731.....	1008A	A136042.....	0107E-2		0113B-3	A143734.....	0704C
A130739.....	1008A		0113B-6	A139768.....	0603A	A143735.....	0706A
A130768.....	0208B	A136043.....	0113B-7	A139769.....	0101A	A143739.....	0706A
A130769.....	0208B		0113B-8		0101A	A143741.....	0706A
	15C1-A	A136044.....	0113B-4		0110	A143742.....	1003
A130814.....	15C1-B	A136045.....	0107	A139770.....	0305	A143743.....	1003
A130820.....	15A1	A136046.....	0107		0500	A143744.....	0704C
A135049.....	0107	A136047.....	0107	A139772.....	0113B-3	A143746.....	1003
	0107E-2	A136048.....	0100	A139776.....	0113B-8	A143748.....	0706B
A136001.....	0709C		0107	A139777.....	0301	A143749.....	0706B
A136002.....	0709C	A136050.....	0107	A139781.....	0109A	A143751.....	1003
A136008.....	0107		0107K		0100	A143752.....	1009
	0113B-3	A136053.....	0107K	A139796.....	0108A	A143754.....	1008A
A136011.....	0602	A136054.....	0107K		0105	A143755.....	1003
	0108A	A136056.....	0604A	A139800.....	0108A	A143756.....	15A1
A136015.....	0108B		0113B-3	A139803.....	0108A	A143757.....	15A1
	0107	A136071.....	0602	A139804.....	0301	A143759.....	15A1
	0107A		0604B	A139805.....	0100	A143761.....	0706B
	0107C	A139701.....	0111		0101A	A143763.....	1009
	0107E-2	A139705.....	0102		0107E-2	A143764.....	1003
	0108A	A139709.....	0102	A139812.....	0709C	A143765.....	1003
A136016.....	0108B	A139710.....	0102		0104	A143766.....	0701A
	0113B-1	A139716.....	0102	A139814.....	0104	A143767.....	0709B
	0113B-4		0100	A139815.....	0113B-4	A143768.....	1003
	0301	A139717.....	0108A		0104	A143772.....	0706C
	0301-1	A139718.....	0104	A139817.....	0100	A143773.....	1009
	0302	A139722.....	0105A	A139822.....	0107J	A143776.....	1009

Number	Group	Number	Group	Number	Group	Number	Group
A143777.....	1609	A160946.....	0107J	A164144.....	0102A	A170346.....	0706A
A143779.....	1009	A160946.....	0113B-8	A164145.....	0102A	A170347.....	0706A
A143782.....	0706B	(Con't)	0308A-2	A164146.....	0102	A170348.....	0704B
A143784.....	0701A	A160949.....	0105	A164147.....	0102A	A170349.....	0704B
A143791.....	0701	A160950.....	0105	A164148.....	0109	A170350.....	0704B
A143792.....	0701A	A160951.....	0105	A164149.....	0109	A170351.....	0704B
A143794.....	0704B	A160953.....	0107K	A164150.....	0102A	A170352.....	0704A
A143795.....	0703A	A160954.....	0107K	A164283.....	0203	A172135.....	0701A
A143797.....	1003	A160957.....	0105C	A164342A.....	1903D	A172138.....	0706B
A143798.....	1003	A160958.....	0105	A164342B.....	0701	A172139.....	0706B
A143799.....	1003	A160959.....	0105	A164342B.....	1903D	A172140.....	0701A
A143800.....	1009	A160960.....	0100	A164342F.....	0701	A172160.....	0705
A143801.....	1009	A160960.....	0105C	A164556.....	0704B	A172172C.....	0701
A143802.....	1009	A160961.....	0105A	A164557.....	0704B	A172172F.....	0701
A143803.....	1009	A160962.....	0103B	A164776.....	0500	A172174.....	0613B
A143804.....	1003	A160963.....	0103B	A164779.....	0500	A172174.....	0613E
A143813.....	0703A	A160964.....	0100	A164781.....	0500	A173910.....	0603A
A143813.....	2012	A160964.....	0105B	A164781.....	0605B	A173914.....	0603A
A143821.....	0704C	A160966.....	0105B	A164782.....	0500	A173922.....	0603A
A143852.....	1903	A160967.....	0105B	A164783.....	0500	A173925.....	0603A
A143860.....	0113B-8	A160969.....	0100	A165558.....	0301	A173926.....	0603A
A143860.....	0107A	A160971.....	0105B	A165559.....	0301	A173935.....	0603A
A143860.....	0107E-2	A160972.....	0105B	A165560.....	0301	A173967.....	0603A
A143860.....	0108A	A160972.....	0100	A165596.....	0109	A173973.....	0603A
A143866.....	0113B-1	A160973.....	0105A	A165851.....	0100	A173978.....	0603A
A143866.....	0113B-4	A160973.....	0107J	A166224.....	0301-1	A174958.....	2201C
A143866.....	0301-1	A160975.....	0100	A166224.....	0101A	A175069.....	0603A
A143866.....	0302	A160975.....	0107J	A166229.....	0100	A175630.....	0110
A143866.....	0305A	A160976.....	0107J	A166229.....	0305A	A183361A.....	0304
A143867.....	0113B-4	A160977.....	0107J	A166230.....	0107	A183361C.....	0605B
A143872.....	0113B-4	A160978.....	0107J	A166231.....	0100	A183361C.....	0611C
A143878.....	0105	A160979.....	0107J	A166231.....	0107	A188188.....	0704A
A143881.....	0105	A160982.....	0107J	A166231.....	0100	A188188.....	1008A
A143884.....	0105	A160984.....	0100	A166235.....	0107	A188473.....	1307
A143885.....	0105	A160984.....	0107	A166235.....	0101	A189065.....	0113B-3
A143886.....	0105	A160986.....	0105A	A166236.....	0305	A189065.....	0107J
A143889.....	0709C	A160988.....	0105A	A166238.....	0113B-4	A189101.....	0107C
A143891.....	0113B-4	A160991.....	0107C	A166242.....	0500	A189103.....	0107C
A144527.....	1003	A160992.....	0107C	A166243.....	0500	A189104.....	0107J
A144984.....	1009	A160993.....	0302	A166249.....	0500	A189104.....	0308A-2
A145619.....	0302	A160994.....	0107C	A166250.....	0500	A189106.....	0100
A145822.....	1304	A160995.....	0100	A166301.....	0202	A189106.....	0107A
A145825.....	0107J	A160995.....	0302	A166457.....	0113B-3	A189107.....	0100
A145825.....	0611C	A160996.....	0100	A166457.....	0110	A189107.....	0107A
A155920.....	0709D	A160996.....	0107C	A166458.....	0305	A189113.....	0113B-4
A156127.....	0604A	A161001.....	0107J	A166458.....	0500	A189114.....	0100
A156484.....	0304	A161002.....	0100	A166459.....	0500	A189114.....	0113B-4
A156484.....	0105B	A161002.....	0107J	A169148.....	0302	A189115.....	0308A-2
A156484.....	0105C	A161005.....	0109	A169163.....	0601B	A189117.....	0113B-4
A156959.....	0107J	A161014.....	0105B	A169324.....	0113B-4	A189118.....	0107J
A156959.....	0113B-8	A161019.....	0105B	A169659.....	0201A	A189118.....	0105B
A156959.....	0308A-2	A161026.....	0105B	A169767E.....	0201A	A189118.....	0105C
A158377.....	0705	A161028.....	0100	A169767K.....	0201A	A189120.....	0108B
A159461.....	0107J	A161028.....	0107C	A169767N.....	0201A	A189120.....	0107E-2
A159462.....	0107J	A161590.....	0205	A169767Z.....	0201A	A189121.....	0108A
A159830.....	1903B	A161615.....	0604A	A169794.....	0202	A189121.....	0113B-1
A160618.....	0308A-2	A161680.....	0205	A170333.....	0704B	A189121.....	0302
A160693.....	2603	A161851.....	0301C	A170334.....	0706A	A189121.....	0107A
A160693.....	0107A	A162821.....	0308A-2	A170338.....	0704B	A189122.....	0113B-4
A160693.....	0107E-2	A163168.....	2301	A170339.....	0706A	A189122.....	0301
A160693.....	0108A	A163170.....	2301	A170340.....	0704B	A189122.....	0603A
A160945.....	0113B-4	A163172.....	2301	A170341.....	0704B	A189123.....	0107C
A160945.....	0301-1	A164140.....	0101	A170342.....	0704B	A189124.....	0500
A160945.....	0302	A164141.....	0110	A170343.....	0704B	A189127.....	0107J
A160946.....	0105B	A164143.....	0102A	A170344.....	0704B	A189127.....	0308A-2
A160946.....	0105C			A170345.....	0706A		

PART NUMBER INDEX—ORDNANCE

PART NUMBER (ORD.)

Number	Group	Number	Group	Number	Group	Number	Group
A189129	0107	A195962	1903D	A226797	1816	A232728	0301
	0108A	A195964	1903C		1905-1	A232747	0301
	0113B-2	A195965	1903C	A226798	1816	A232748	0301
A189130	0113B-8	A195966	1903C		1905-1	A232749	0301
A189131	0101A	A195969	1903C	A226815	1816	A232751	0301
A189138	0113B-4	A195970	1903E		1905-1	A232754	0301
A189139	0107	A195971	1903E		1816	A232755	0301
A189140	0113B-4	A195972	1903E	A227831	1905-1	A232758	0301
A189141	0107A	A195973	1903E		1905-2	A232765	0301
A189142	0105	A195974	1903E	A228028	1905-1	A232767	0301
A189144	0100	A195975	1903D	A228029	1905-1	A232768	0301
	0113B-5	A195976	1903D	A230651	0305A	A232769	0301
	0100		1903C	A230652	0305A	A232771	0301
A190516-10	0107E-2	A195977	1903F	A230655	0305A	A232772	0301
	0100	A195978	1903C	A230657	0305A	A232775	0301
A190516-12	0107J	A195979	1903E	A230662	0305A	A232776	0301
	0100	A195980	1903E	A230678	0709D	A232783	0301
A190516-14	0107K	A195984	1903C	A230679	0709B	A232784	0301
	0100	A195985	1903C	A230680	0709D	A232785	0301
	0105B	A195986	1903C	A231047	1903D	A232786	0301
A190516-16	0107A	A195987	1903C	A231049	1903D	A232790	0301
	0107C	A195988	1903C	A231446	0709A	A232791	0301
	0107K	A195989	1903C	A231447	0709D	A232798	0301
	0100	A195990	1903C	A231448	0709A	A232801	0301
A190516-24	0107E-2	A195995	1903F	A231449	0709A	A232803	0301
A190518	0305A	A195996	1903F	A231450	0709A	A232804	0301
A190519	0305A	A196079	0902	A231451	0709A	A232810	0301
	0107J	A203460	1903D	A231452	0709A	A232811	0301
A190520	0305	A206632	1905	A231453	0709A	A232820	0301
A190529	0305A	A212907	1903A	A231454	0709A	A232821	0301
A190530	0107J	A213104	1905	A231455	0709A	A232826	0301
A190531	0305A	A213106	1905	A231456	0709A	A232836	0301
A190535	0107A		0613D	A231457	0709A	A232839	0301
A190536	0107A	A213567A	0613F	A231458	0709A	A232840	0301
A190539	0103A		0613B	A231593	0603A	A232849	0301
A190540	0103A	A213567D	0613E		0100	A232850	0301
A190721A	0304	A213578A	0604A	A231712	0113B-8	A232859	0301
A190722A	0304		0606C		0100	A232866	0301
A190770	0101	A213578D	0610B-1	A231713	0301	A232870	0301
	0100		0613A	A231714	0107K	A232881	0301
A191022	0601A	A213667B	0613D	A231969	0709B	A232884	0301
A191243E	1903F	A213777	0300-1	A232046	1900B	A232889	0301
	0107J	A213823D	0604	A232047	1900B	A232893	0301
A191243L	0709D	A214677	0601B	A232055	1903B	A232901	0301
A191315	2301	A214701	0601	A232056	1903B	A232907	0301
A192964	0308A-2	A223129	1904	A232057	1903B	A232908	0301
A193137	0704B	A223894	1804	A232058	1903B	A232914	0301
A193137-3	0704B	A225443	0601B	A232252	0709B	A232916	0301
A193375	0604A	A225800	0601B	A232253	0709D	A232917	0301
A193510	0308A-2	A225802	0601B	A232254	0709B	A232920	0301
A193511	0308A-2	A225804	0601B	A232255	0709D	A232921	0301
A193512	0308A-2	A225806	0601B	A232374	0709A	A232924	0301
A193513	0308A-2	A225814	0601B	A232678	0301	A232928	0301
A193514	0308A-2	A225824	0601B	A232679	0301	A233880	1804
A193515	0308A-2	A225828	0601B	A232680	0301	A233881	1804
A193554	0308A-2	A225829	0601B	A232681	0301	A233892	1804
A193555	0308A-2	A225831	0601B	A232682	0301	A233897	1804
A193556	0308A-2	A225833	0601B	A232689	0301	A233898	1804
	0100	A225834	0601B	A232691	0301	A233908	1804
A193557	0604B	A225835	0601B	A232692	0301	A233909	1804
	0105C	A225837	0601B	A232695	0301	A235506	1903C
A194142	1900B	A225839	0601B	A232696	0301	A235531	1903E
A194622	0604B	A225840	0601B	A232704	0301	A235532	1903E
A195958	1903E	A225842	0601B	A232705	0301	A235533	1903E
A195959	1903D	A226713	1903E	A232708	0301	A235534	1903E
A195960	1903D			A232709	0301	A235535	1903E

Number	Group	Number	Group	Number	Group	Number	Group
A235536	1903E	A245571	1903E	A261172	0706A	A291141	0602
A235537	1903E	A245572	1903E	A261215	0701	A291142	0602
A235538	1903E	A245573	1903E	A261216	0701	A291153	0602
A235539	1903D	A245574	1903E	A261217	0701	A291564	0902
A235540	1903E	A245575	1903E	A262038	1900B	A291566	0902
A235542	1903F	A245576	1903E	A262053	0613	A291575	0902
A235543	1903E	A245577	1903E	A262191	1903C	A291576	0902
A235544	1903E	A245578	1903E	A263023	1905	A291577	0902
A235545	1903E	A245579	1903E	A265215	1816	A291578	0902
A235546	1903E	A245580	1903E	A265215	1905-2	A291732	0902
A235547	1903E	A245581	1903E	A265215	1816	A291733	0902
A235548	1903E	A245582	1903F	A265216	1905-2	A292945	1905-2
A235549	1903F	A245583	1903E	A265217	1816	A292947	1905-2
A235550	1903E	A245584	1903E	A265217	1905-2	A292990	0613E
A235552	1903F	A245585	1903F	A265218	1816	A293015	1903C
A235553	1903E	A245587	1903E	A265218	1905-1	A293095	1902A
A235554	1903E	A245614	1903E	A265218	1816	A293147	1903E
A235555	1903E	A245624	1903E	A265219	1905-1	A293155	1900-2
A235556	1903E	A245625	1903E	A265321	1906	A293155	1903C
A235557	1903E	A245744	0301	A265350	1906	A293155	1905-1
A235558	1903E	A245745	0301	A265422	0613B	A293184	1905
A235559	1903E	A245755	0301	A265478	0613B	A293200	1905-1
A235560	1903E	A245760	0301	A265482	0613B	A293224	1900
A235561	1903E	A245761	0301	A265484	0613B	A293225A	1900-1
A235562	1903E	A245762	0301	A265485	0613B	A293225B	1900-1
A235563	1903F	A245764	0301	A265513D	2301	A293225C	1900-1
A235564	1903E	A245766	0301	A265712	0613F	A293226	1900
A235565	1903E	A245767	0301	A265715	0613F	A293251	1900-1
A235566	1903E	A245773	0301	A265718	0613F	A293254	1900-1
A235567	1903E	A245784	0301	A265719	0613F	A293259	1900-1
A235568	1903E	A245788	0301	A265806	0613B	A293278	1900-1
A235569	1903F	A245790	0301	A265892	0613F	A293279	1900-1
A235657	1903A	A245794	0301	A265892	0613B	A293294	1900-1
A235660	1903C	A245799	0301	A266058	1903E	A293299	0613A
A235661	1903A	A245802	0301	A266058	1903F	A293304	1901
A240907	0613D	A245806	1903E	A266108	1902A	A293342	1904
A240908	0613D	A245813	0301	A266137D	1903G	A293353	1902A
A244935	1903E	A245816	0301	A266137G	1903G	A293405	1900B
A244949	1903E	A245819	0301	A266137H	1903G	A293419	0611H-1
A244950	1903E	A245865	0301	A266137K	1903G	A293449	1906
A244951	1903E	A245866	0301	A266137L	1903G	A293461	1903D
A244952	1903E	A245888	0301	A266157	1903G	A293462	1903D
A244953	1903E	A245903	0301	A266165	0613F	A293463	1903D
A244954	1903F	A245903	2203	A266212	1906	A293464	1903D
A244956	1903E	A246223	1804	A266212	1907	A293570A	1900-1
A244957	1903E	A246224	1804	A266244	1902A	A293596	1905
A244958	1903F	A246240	1804	A266244	1906	A293645	1906
A244959	1903F	A246247	1804	A266251B	1907	A293657	1903C
A244960	1903F	A246248	1804	A266251C	1907	A293658	1903C
A244967	1903E	A246248	1816	A266251D	1907	A293661	1903C
A244976	1903E	A246608H	1905-1	A266251E	1907	A293697	1903D
A244976	1903F	A246608H	1905-2	A266307	1907	A293726A	1903E
A244977	1903E	A246608H	1816	A266308	1906	A293726B	1903E
A244980	1903E	A248086A	1905-1	A266323	0613D	A293727A	1903G
A244981	1903E	A248086A	1905-2	A266323	0613F	A293727B	1903G
A244982	1903E	A248086B	1816	A266393	1907	A293731	1903E
A244989	1903D	A248086B	1905-1	A266393	2201C	A293744	1903D
A244989	1903E	A248086B	1905-2	A266406	1816	A293745	1903D
A244990	1903D	A248087	1816	A266406	1905-1	A293746	1903D
A244991	1903E	A248087	1905-1	A266412	1905-2	A293749	1903D
A244992	1903E	A248087	1905-2	A266412	1903	A293750	1903D
A245256	1816	A252837	0301	A266456	1903D	A293751	1903D
A245256	1905-1	A260907	1902A	A266460	1903F	A293752	1903D
A245559	0107E-1	A260908	1902A	A266479	2209	A293753	1903D
A245560	0107E-1	A260994	0611D	A266502	1901A	A293754	1903D
A245570	1903E	A261168	0706A	A291139	0602	A293756	0613

PART NUMBER INDEX—ORDNANCE

PART NUMBER (ORD.)

Number	Group	Number	Group	Number	Group	Number	Group
A293761	0613E	A309230	0611B-4	A318391	1903E	B108072	2301
A293803A	1907	A309231	0611B-4	A334762	0613D	B108077	0104
A293803B	1907	A309232	0611B-4	A345669	1903C	B108078	2301
A293803D	1907	A309235	0611B-4	A345670	2203	B108079	0107
A293803F	1907	A309236	0611B-4	A345671	1903D	B108080	0107
A293803G	1907	A309237	0611B-4	A345672	1903C	B110622	1903H
A293856	1900	A309238	0611H-1	A345673	1903C	B132704X	0208B
A294699	0100	A309241	0611A	A345674	1903F	B132705AD	1008A
A303952	0301	A309242	0611B-1	A345675	1903C	B132935	1008A
A303959	0301	A309243	0611A	A345676	1903C	B132938	1008A
A306167	0611H-2	A309244	0611A	A345688	2203	B132993	15D1
A308212	1905-1	A309245	0611H-1	A348044B	1905-1	B140601	1903
A309127	0611B-6	A309246	0611D		1905-2	B140602	1903
A309168	0611H-2	A309247	0611E	A348045	1905-2	B140623	1903
A309169	0611A	A309248	0611H-1	A390272	0611H-1	B140800	0709D
A309170	0611H-2	A309249A	0611H-1	A410143	1907	B141505	0705
A309171	0611H-2	A309250	0611H-1	A410244	0611D	B141506	0705
A309172	0611H-2	A309251	0611B-8	A410245	0611D	B141508	1003
A309173	0611A	A309252	0611H-1	A1300413	2012	B141509	1003
A309175	0611	A309253	0611A	A1912436	0304	B141510	0704B
A309176	0611A	A309254	0611D	A7002651	1903D	B141512	0709A
A309177	0611A	A309255	0611E	A7002652	1903D	B141514	15A1
A309180B	0611H-1	A309256	0611E	A7002653	1903D	B141517	0701A
A309180C	0611H-1	A309257	0611E	A7002654	1903D	B141518	0701A
A309180F	0611H-1	A309258	0611E	A7002655	1903	B141519	1008A
A309181	0611B-6	A309259	0611E	A7002656	1903D	B141520	1008A
A309182	0611B-6	A309260	0611E	A7002658	1903D	B141523	15A1
A309183	0611B-6	A309261	0611E	A7002659	1903D	B141524	0701
A309184	0611D	A309262	0611E	A7002660	1903D	B141525	0704C
A309186	0611H-2	A309263	0611E	A7002661	1903F	B141526	0701
A309187	0611D	A309267	0611D	A7002665	1903E	B141530	1009
A309188	0611D	A309268	0611B-9	A7051589	1903D	B141531A	1003
A309189	0611D	A309270	0611B-9	B75A	0107J	B141531B	1003
		A309271	0611B-9	B75B	0107J	B141531C	1003
A309192	0611B-2	A309274	0611H-1	B6498CA	0701	B141534	0701A
	0611B-3	A309275	0611A		0709D	B141535	0701A
A309193	0611B-8		0611A-2	B7269B	0709D	B141536	15A1
A309194	0611B-8	A309276	0611B-4	B7269BA	0107J	B141538B	1003
A309195	0611B-8			B7269C	0304	B141538C	1003
A309196	0611B-2	A309279A	0611D	B7269N	0304	B141600	0709C
	0611B-3	A309280	0611B-6	B7269Z	0304	B141602	0105
A309197	0611E	A309284	0611B-1			B141605	0100
A309198	0611B-2	A309358	0611B-2	B7270A	0605B		0113B-4
	0611B-3	A309413	1009		0611C	B141616	0105
A309199	0611B-7	A309569	0611D	B7270B	0709D	B141619	0105
A309201	0611B-6	A309570	0611D		1903F	B141620	0105
A309204	0611D	A309571	0611D	B7270C	0304	B141840	1903
A309205	0611A	A309572	0611H-1		0611C	B142064	0701A
A309206	0611D	A311711	1903D	B7270E	0107J	B143534	0604A
A309208	0611H-2	A311721	0611H-2		0709D	B143882	0105
A309209A	0611H-1	A311875	1903C	B7270GA	0304	B143957	0701
A309210A	0611H-1	A311919	1905-2	B7270M	1903E	B144054	0100
A309211A	0611E	A311932	2218	B7270RA	0300		0301-1
A309213A	0611	A311977A	1903D	B7270TA	0300	B145161	0709B
A309214	0611H-2	A311977B	1903D	B7570UA	0107J	B145583	15A1
A309215A	0611B-8	A311989	1903D	B18358A	0605B	B146100	0107E-2
	0611H-1	A312109	1905	B18358B	0611C	B150882	0107
A309216A	0611E	A312122	1900-2	B19444BA	1903C	B152097	0107C
		A312125	1900-2	B34373	0110	B152098	0105B
A309217	0611B-2	A312126	1900-2	B101420	2302A	B152100	0105B
	0611B-3	A312183	2304P	B105674	0113B-8	B152102	0105A
A309218	0611H-2	A312184B	1903G	B105685	0113B-8	B154723	1901A
A309220	0611B-7	A312184C	1903G	B105689	0113B-2	B155360	0101
A309223	0611B-2	A312184D	1903G	B105690	0113B-2	B155361	0101
A309224	0611H-1	A312333	1903E	B105701	0100	B155362	0101
A309225	0611H-1	A312503	1900B		0113B-1	B155427	0202
A309226	0611B-6	A312504	1900B	B105703	0107		
A309227	0611B-6						

Number	Group	Number	Group	Number	Group	Number	Group
B155667	0100	B192252	0308A-2	B258838	0611D	C62973	15A1
	0302	B192253	0308A-2	B258943	1906	C63229	1008A
B155703	0704B	B192255	0308A-2	B267931A	0611H-1	C63234	1008A
B156647	2301	B194460	1907	B267934B	0611B-9	C63290	15D1
B157536	0201B	B194783	0709B	B267936	0611D	C65238	0107B
B157702	0704B	B195624	1903B	B267937	0611D	C65239	0108A
B157704	0706B	B195626	1903B	B267938	0611A	C65240	0107
B157705	0704B	B195820	0709B	B267939	0611B-2	C65241	0100
B157706	0706A	B197012	0301		0611B-4		0107
B157707	0704B	B197015	0301	B267940	0611A	C66376	0202
B157708	0704B	B197531	2203	B267942	0611D	C67075	0110
B157711	0704B	B197562K	2203	B267943	0611H-1	C67075B	0110
B157719	0110	B200167E	1903E	B267944	0611	C67079	0500
B157817	1903D	B200225	1906	B267945A	0611H-1	C67082	0500
B157939	0704B	B201146	1905-2	B267945B	0611H-1	C67801	0500
B158343	0201	B201152	0613C	B267945F	0611H-1	C67972	0113B-4
B166336	0603A	B201190	1905-2	B267945G	0611H-1	C68400	0706B
B166338	0603A	B208915	1903E	B267945H	0611H-1	C68499	0704B
B166339	0603A	B208916	1903E	B267945K	0611H-1	C68501	0704B
B166340	0603A	B208917	1903C	B267945L	0611H-1	C68502	0706B
B166406	0603A	B220976	1903C	B267946	0611	C68503	0704B
B166410	0603A	B220977	1903C	B267947	0611B-9	C68506	0704B
B166415	0603A	B220978	1903C	B267948	0611D	C68508	0701A
B166456C	0601A	B220981	1903F	B293610	1906	C68510	0706A
B166502	0603A	B220982	1903D	B293611	1906	C68511	0704B
B166505	0603A	B220983	1903D	B327393	1907	C69221	0700
B166518	0602	B220984	1903E	B7002693	1903D	C73099	0704B
	0603A	B220985	1903D	B7002694	1903E	C73100	0704B
B168986	15C1-A	B220995	1903E	B7002695	1903D	C73123	0603A
	15D1	B220996	1903E	B7002696	1903D	C73337	0706C
B169293	0113B-3	B221403	1804	B7002697	1903E	C73338	0706C
B169306	0113B-3	B225811	1901A	B7002698	1903E	C74408	0113B-3
B169323	0105	B225812	1901A	B7002699	1903E	C74409	0113B-5
B169325	0113B-4	B226579	0613C	B7002700	1903D	C74411	0100
B169327	0113B-6	B226650	0611D	B7002701	1903D		0603A
	0113B-7	B226739	1907	B7068149	1903D	C74535	0709C
B169328	0113B-2	B226771	1903C	B7068150	1903	C74536	0709C
B170061	0113B-4	B226820	1903D	C6092D	1003	C75689	0105C
B170172	0108A	B226872	0613E	C7453	0107	C75690	0105C
B170183	0108A		1903C	C9920	0202	C75691	0105C
B170184	0108A	B229520	1905-2	C60344	1903	C75692	0105C
B170323	0113B-2	B229944	1906	C60345	1903	C76074	0100
B183358B	0304	B229962	1903C	C60485	15C1-A		0601A
B183358C	0605B	B229988	1906	C60917	1003	C84803	1903A
	0304	B230023	1903D	C60918	1009	C84804	1903A
B183358E	0709D	B230024	1903D	C60919	0706C	C90147	0706A
	1903F	B230025	1903D	C60923	1003	C91053	0709B
	0107G	B230027	1903D	C60924	1009	C91054	0709D
B183358G	0107J	B230182	1904	C60929	0701A	C91535	0709A
	0304	B230243	2201C	C60931	0701A	C91536	0709A
B183359L	0107J	B230319A	1905-2	C60934	0706B	C91537	0709A
B183360A	0304	B230319B	1905-2	C60938	0701A	C91887	1804
B183360B	0304	B230399	1900-2	C60944	0704B	C91893	1804
B183360C	0605B	B230543	1900-1	C60945	0701A	C91896	1804
B183361E	0611C	B230544	1900-1	C60946	0701	C91897	1804
	1903E	B230760	1903D	C60948	15A1	C91899	1804
B183361G	0107J	B243750	0613B	C60949	0701A	C91932	1804
B183361L	0107J	B243757	0613B	C60950	0701A	C91964	1804
	0709D	B243760	2210	C60952	1003	C92033	0301
B183616A	1906	B245668	1903D	C60953	1003	C92034	0301
B184438	0601B	B245669	1903D	C60954	0704B	C92036	0301
B192183	0308A-2	B246193	0902	C60955	0704C	C92265	1903E
B192218	0308A-2	B248225	2301	C60958	0704B	C92266	1903E
B192236	0308A-2	B257848	1905-1	C60960	0706B	C95134	0107E-1
B192250	0308A-2		1905-2	C60997	0107E-2	C95158	0107E-1
B192251	0308A-2	B258779	0611B-8	C61410	1003	C95161	0107E-1

PART NUMBER INDEX—ORDNANCE

PART NUMBER (ORD.)

Number	Group	Number	Group	Number	Group	Number	Group
C96667A.....	1816	D27413.....	1008A	E1686.....	0500	BBAX1AG.....	0612
	1905-1	D28618.....	2201	E1756.....	0500		1801B
C96667B.....	1816	D30177.....	0701A	E1757.....	0500		0606E
	1905-1	D30180.....	0701	E1758.....	0500		0709C
C96668.....	1816	D30272.....	1009	E1760.....	0500		0709D
	1905-1	D31689.....	1008A	E2216.....	0113B-1		15C1-A
	1816		0100	E2281.....	0101A	BBAX1B.....	15D1
C96670.....	1905-1	D31767.....	0602	E2311.....	0108A		1804
	1905-2	D32190.....	0500	E2540.....	0308A-2		1805H
C97209.....	1816	D32191.....	0500	E5067.....	1907		1809
	1905-1	D32192.....	0500	E5200.....	1903A		2012
C97211.....	1816	D32386.....	0208B		1903C		2208E
	1905-1	D32707.....	0703A		1903D	BBAX1B-1.....	0601B
	1816	D32987.....	0102		1903E	BBAX1BG.....	1904
C97292.....	1905-1	D32988.....	0109	ACNX3.....	1903F		0107J
C97328.....	1904	D33156.....	0109A		2304M		0300
C97329.....	1904	D33232.....	0500		2304R		0401
C100740.....	1903C	D33233.....	0500	BANX1CD.....	0601A		0606C
C100741.....	1903C	D33519.....	0101A	BANX5AD.....	1008A		0610A
C101039.....	1907	D33522.....	0105	BANX5BD.....	1008A		0611
C105458.....	15A1	D33523.....	0500	BAOX1CF.....	0601A		0611B-2
C105644.....	1903A	D33524.....	0500	BAOX1EA-1.....	2209		0901
C105718.....	1906	D34371.....	0704A		1906	BBAX1C.....	1304
C105754.....	1906	D38287.....	0107A	BAOX1EC-1.....	1907		15D1
C105826.....	0613B	D38291.....	0113B-4	BAOX1ED.....	1903B		1701
C105859.....	1903C	D38294.....	0301		1900		1800
C105882.....	1906	D38369.....	0107J	BAOX1EH-1.....	1903A		1801B
C105887.....	1907	D38618.....	2201C		1903D		1804
C105900.....	1907	D39769.....	1903D	BAOX1EM-1.....	1903D		1805H
C106393.....	1905-2	D41627.....	0301	BAOX2BF.....	1903A		1906
	1816	D41628.....	0301	BAOX4CB-1.....	0613		2402
C107366.....	1905-1	D50897.....	1905-2		2209		2601
	1905-2	D53155.....	1903E	BAOX4EH.....	1903A		2602B
C107591.....	1900	D58208.....	0611	BAOX5BP.....	1903A		0606C
C107602.....	1906	D59738.....	1903F	BAOX5BP-1.....	1900	BBAX1CG.....	1800
C107646.....	1901A	D59764.....	1906	BAOX7CC.....	0109A		2208C
C107709.....	1903D	D59774.....	1907	BAOX7CD.....	0706B	BBAX1D.....	0607
C107711.....	1903D	D59789.....	1903C		0109A		0203
C107712.....	1903D	D59864.....	1903A	BAOX7ED.....	0202		0601B
C107713.....	1903D	D59891.....	1901A	BAOX9HB.....	0110		0606E
C107752.....	1906	D59903.....	1903D	BAOX9HC.....	0110		0713
C107756.....	0613	D59945.....	1906		0107A		0901
	2201	D59957.....	1907		0107E-1	BBAX1E.....	1008A
C107814.....	2201C	D59967.....	1903E		0107J		1304
			2201		0300		1306
C107860.....	1900-2	D60002.....	2201C		0304		15C1-A
C107997A.....	1903A	D60012.....	1906		0306		15C1-B
C107997B.....	1903A	D60056.....	1903A		0500		15D1
C107997C.....	1903A	D60068.....	1903D		0605B		2602B
C108086.....	0613	D60069.....	1903D		0611C	BBAX1E-1.....	0610B-1
C108139.....	1906	D60086.....	1904		0611F	BBAX2AF.....	0606C
C108197.....	1906	D60087.....	1904	BBAX1A.....	0612	BBAX2B.....	0706A
C108285.....	1907		2201		0709		15A1
C114258.....	1903B	D60094.....	2201C		0709D	BBAX2C.....	1008A
C114259.....	1903B				0901A	BBBX1A.....	15A1
C114468.....	2209	D60365.....	1906		15D1		0613C
C121140B.....	0613A	D60386.....	1907		1801B		0613E
C129724.....	0611B-1	D68375.....	1906		1804	BBBX1A-1.....	0613F
C129726.....	0611	D73179.....	0611H-1		1805H		1903F
C129752.....	1008A	D75932.....	1906		1809		1903H
C129753.....	1008A	D75983.....	2209		2103A	BBBX1B.....	0107E-1
C153324.....	2201C	D75984.....	2209		2208F	BBBX1B-1.....	0613E
C1145357.....	1906	D75994.....	1907		2401		1303
C7002715.....	1903E	D78250.....	1903F		2603	BBBX1C.....	15C1-A
D7020.....	0104	D78278.....	2301	BBAX1A-1.....	1905-2		15D1
D27406.....	1008A	D78407.....	1903E	BBAX1A-2.....	0601		
D27412.....	1008A	E1651.....	0101				

Number	Group	Number	Group	Number	Group	Number	Group
BBBX1C-1	0613E 1903H 1905-2	BBKX2CA-1	0604 0613D 0613E	BCAX3A	0107E-1	BCLX1.1EH	0611A 2208F
BBBX1E	0611	BBKX3AE	0613A	BCAX3A-1	0601B	BCLX1.1EH-2	0601
BBBX1E-2	0601	BBKX3AE-1	0613D	BCAX3K	0302	BCLX1.1EL	1816
BBBX2B	1304		0606C	BCAX3K-1	1903E	BCLX1.1EL	1905-1
BBBX2G	1304	BBKX3AF	0606E	BCAX3L	0601	BCNX1DB	1816
BBBX5BA-1	1903F		0601	BCAX4AC	0701A	BCNX1DB-1	1905-1
BBCX1B	0611		0611H-1	BCAX4AD	0701A	BCNX1DB-1	1905-2
BBCX1C	15C1-A 15D1	BBMX1C-2	0611H-2	BCAX4S	0701A	BCNX1ED	0601 0611D
BBCX2B	15D1		0613B	BCBX1AA	2012	BCNX1EG	0602
BBDX1A-1	1905-2	BBPX1B	2603	BCBX1AA-1	0613C	BCNX1FC-1	0604
BBDX1A-2	0601B	BBPX1H	0301C	BCBX1AH-1	1904	BCNX1FD	0601
BBDX1B	0305 15C1-A	BBRX1AE	2301A	BCBX1BA-1	0613B	BCNX1FG-1	0601B
BBDX1C	0611H-1 15C1-A	BBRX1AK	1905	BCBX1CA	1903C	BCNX1FH	0607
BBDX1D	15C1-B	BBRX1AP	0704C		1905-1	BCNX1FK-1	0601B
BBDX1E	1902	BBRX1AX	0704A		0613F	BCNX1FM-1	0604A
BBDX2B	15A1 15C1-B	BBRX1BB	1003	BCBX1CA-1	1901	BCNX2AC-1	0601B
BBDX2C	15D1	BBSC2AA-1	1008A		1901A	BCNX2AE-1	0500
BBDX2E	1905	BBSX1X-1	0606C		1903B	BCNX2BC-1	0610B-1
BBDX3A	1801C	BBSX2AA	2603		1903C	BCNX2BK	1303
BBFX1A	0709D	BBSX4AB	0613B	BCBX1CC-1	0613E	BCNX2CC	0612
BBFX1AA-1	0107 0305A	BBSX4AE	0301		1901A	BCNX2CC-1	0612
	0107	BBSX4AE-1	1905	BCBX1CE-1	1903E	BCNX3EK	0613A
BBFX1BA-1	0107A 0107C	BBSX4AH	0202	BCBX3AB-1	1903H	BCNX3FC	0613B
	0113B-2	BBSX4AH-1	1805H	BCBX5BA-1	1906B	BCNX3FK-3	0610B-2
BBFX1C	0603A	BBSX4AH	1008A	BCBX5BB-1	0305	BCNX4CE	0612 2208F
BBFX1CA	2208D		1307	BCFX1EE-3	0613F	BCNX4CG	2208F
BBFX1CA-1	0101 0110 0113B-3	BBSX4AH-1	1900B	BCFX2AF-1	0613E	BCNX4DG	1904
	0500	BBTX1B-1	1906	BCFX2AG	0300-1	BCOX1.1AB-9	0602
BBFX1DA-1	0602	BBTX1FB	1903D	BCFX2CG	0302	BCOX1.1AF-1	0613D 0613E 1906
BBFX1E	0101 0110	BBTX1LB-1	1903D	BCFX2DC	0306	BCOX1.1AF-2	0601B
BBFX2B	0706A	BBWX1AA-1	1903H	BCFX2DG	0611A	BCOX1.1AG-1	2209
BBFX2D	1003		1904	BCFX2DG-1	0611B-7	BCOX1.1AH	0107E-1
BBHX1B	0110		0613B	BCFX2DH	0611A	BCOX1.1AK-2	0601B
BBHX1E	0713	BBWX1CA-1	1901	BCFX2EL	0611B-2	BCOX1.1AN	0602
BBHX2D	1008A		1903C	BCGX1.1AC-2	0611E	BCOX1.1AP-1	0604
BBHX3QA	0709B		1903E	BCGX1.1AC-3	0611D	BCOX1.1CF-1	2210
BBJX1A	0611H-1		1903F	BCGX1.1BC	0611	BCOX1.1DG-1	0610B-1
BBKX2A	0613B	BBWX1GA	1906	BCGX1.1BD-1	0601B	BCOX1DB	0610B-1
BBKX2B	0611D	BBXX1FB-1	1903A	BCGX1.1BE	0611H-1	BCOX1EB	1903B
BBKX2BA-1	0611H-2	BBXX1LB	1900-1	BCGX1.1BF-2	0113B-4	BCRX1FG	0611
	0613B	BCAX1A	1903D	BCGX1.1BG-2	0308A-2	BCSX1AC-1	1903H
BBKX2C	0610B-2	BCAX1AA	1907	BCGX1.1BL	0603A	BCSX1AF-1	1905-2
	0613E	BCAX1AA-1	0107B	BCGX1.1DE	0611A	BCTX1G	2301
BBKX2CA	0203	BCAX1AC	0709	BCGX1.1DH	0601	BCTX1H	2301
	2602C	BCAX1AD	0613B	BCGX1.1DF-1	0602	BCTX1K	2301
	0107E-1	BCAX1AE	0701A	BCGX1.1DG	0601	BCTX1L	2301
	0605	BCAX1AF	0611	BCGX1.1DH	0603A	BCTX1N	2301
		BCAX1AG	0611D	BCGX1.1DI	1816	BCVX1Z-1	1805H
		BCAX1AH	0705	BCGX1.1DJ	1905-1	BCVX2AB	0606E
		BCAX1AI	0709	BCGX1.1DK	0611B-8	BCVX2AB-1	0304
		BCAX1AJ	0613B	BCGX1.1DL	0306		0304
		BCAX1AK	0701A	BCGX1.1DM	0602		0306
		BCAX1AL	0611D	BCGX1.1DN	0613E		0605B
		BCAX1AM	0705	BCGX1.1DO	0107E	BCVX2AD-1	0608 0612 0709D 2601
		BCAX1AN	0611D	BCGX1.1DP	0107E-1		0611F
		BCAX1AO	0705	BCGX1.1DQ	1903	BCVX2AF	0608
		BCAX1AP	0611D	BCGX1.1DR	2208F	BCVX2AF-1	0300
		BCAX1AQ	0701A	BCGX1.1DS	2402	BCVX2AH	2401
		BCAX1AR	0611D	BCGX1.1DT	1900A		
		BCAX1AS	0701A	BCGX1.1DU	1904		
		BCAX1AT	0611D	BCGX1.1DV	0601		
		BCAX1AU	0701A				
		BCAX1AV	0611D				
		BCAX1AW	0701A				
		BCAX1AX	0611D				
		BCAX1AY	0701A				
		BCAX1AZ	0611D				
		BCAX1BA	0701A				
		BCAX1BB	0611D				
		BCAX1BC	0705				
		BCAX1BD	0611D				
		BCAX1BE	0701A				
		BCAX1BF	0611D				
		BCAX1BG	0701A				
		BCAX1BH	0611D				
		BCAX1BI	0701A				
		BCAX1BJ	0611D				
		BCAX1BK	0701A				
		BCAX1BL	0611D				
		BCAX1BM	0701A				
		BCAX1BN	0611D				
		BCAX1BO	0701A				
		BCAX1BP	0611D				
		BCAX1BQ	0701A				
		BCAX1BR	0611D				
		BCAX1BS	0701A				
		BCAX1BT	0611D				
		BCAX1BU	0701A				
		BCAX1BV	0611D				
		BCAX1BW	0701A				
		BCAX1BX	0611D				
		BCAX1BY	0701A				
		BCAX1BZ	0611D				
		BCAX1CA	0701A				
		BCAX1CB	0611D				
		BCAX1CC	0701A				
		BCAX1CD	0611D				
		BCAX1CE	0701A				
		BCAX1CF	0611D				
		BCAX1CG	0701A				
		BCAX1CH	0611D				
		BCAX1CI	0701A				
		BCAX1CJ	0611D				
		BCAX1CK	0701A				
		BCAX1CL	0611D				
		BCAX1CM	0701A				
		BCAX1CN	0611D				
		BCAX1CO	0701A				
		BCAX1CP	0611D				
		BCAX1CQ	0701A				
		BCAX1CR	0611D				
		BCAX1CS	0701A				
		BCAX1CT	0611D				
		BCAX1CU	0701A				
		BCAX1CV	0611D				
		BCAX1CW	0701A				
		BCAX1CX	0611D				
		BCAX1CY	0701A				
		BCAX1CZ	0611D				
		BCAX1DA	0701A				
		BCAX1DB	0611D				
		BCAX1DC	0701A				
		BCAX1DD	0611D				
		BCAX1DE	0701A				
		BCAX1DF	0611D				
		BCAX1DG	0701A				
		BCAX1DH	0611D				
		BCAX1DI	0701A				
		BCAX1DJ	0611D				
		BCAX1DK	0701A				
		BCAX1DL	0611D				
		BCAX1DM	0701A				
		BCAX1DN	0611D				
		BCAX1DO	0701A				
		BCAX1DP	0611D				
		BCAX1DQ	0701A				
		BCAX1DR	0611D				
		BCAX1DS	0701A				
		BCAX1DT	0611D				
		BCAX1DU	0701A				
		BCAX1DV	0611D				
		BCAX1DW	0701A				
		BCAX1DX	0611D				
		BCAX1DY	0701A				
		BCAX1DZ	0611D				
		BCAX1EA	0701A				
		BCAX1EB	0611D				
		BCAX1EC	0701A				
		BCAX1ED	0611D				
		BCAX1EE	0701A				
		BCAX1EF	0611D				
		BCAX1EG	0701A				
		BCAX1EH	0611D				
		BCAX1EI	0701A				
		BCAX1EJ	0611D				
		BCAX1EK	0701A				
		BCAX1EL	0611D				
		BCAX1EM	0701A				
		BCAX1EN	0611D				
		BCAX1EO	0701A				
		BCAX1EP	0611D				
		BCAX1EQ	0701A				
		BCAX1ER	0611D				
		BCAX1ES	0701A				
		BCAX1ET	0611D				
		BCAX1EU	0701A				
		BCAX1EV	0611D				
		BCAX1EW	0701A				
		BCAX1EX	0611D				
		BCAX1EY	0701A				
		BCAX1EZ	0611D				
		BCAX1FA	0701A				
		BCAX1FB	0611D				
		BCAX1FC	0701A				
		BCAX1FD	0611D				
		BCAX1FE	0701A				
		BCAX1FF	0611D				
		BCAX1FG	0701A				
		BCAX1FH	0611D				
		BCAX1FI	0701A				
		BCAX1FJ	0611D				
		BCAX1FK	0701A				
		BCAX1FL	0611D				
		BCAX1FM	0701A				
		BCAX1FN	0611D				
		BCAX1FO	0701A				
		BCAX1FP	0611D				
		BCAX1FQ	0701A				
		BCAX1FR	0611D				
		BCAX1FS	0701A				
		BCAX1FT	0611D				
		BCAX1FU	0701A				
		BCAX1FV	0611D				
		BCAX1FW	0701A				
		BCAX1FX	0611D				
		BCAX1FY	0701A				
		BCAX1FZ	0611D				
		BCAX1GA	0701A				
		BCAX1GB	0611D				
		BCAX1GC	0701A				
		BCAX1GD	0611D				
		BCAX1GE	0701A				
		BCAX1GF	0611D				
		BCAX1GG	0701A				
		BCAX1GH	0611D				
		BCAX1GI	0701A				
		BCAX1GJ	0611D				
		BCAX1GK	0701A				

PART NUMBER INDEX—ORDNANCE

PART NUMBER (ORD.)

Number	Group	Number	Group	Number	Group	Number	Group
	0304	BCVX4KW-1	1304		0107B		0901
	0500	BCVX4LN-1	1903A		0107E-1		1008A
	0603A	BCVX4QT	1903A		0107J	BEAX2B	15A1
	0606C	BCVXZAD	0107J		0300	(Con't)	2602B
BCVX2AH-1	0611C	BCVXZAH-1	0107J		0302	BEAX2B-1	2209
	0611F	BCWX1BA	1903C		0304	BEAX2D	15A1
	0612	BCWX1BB	1903D		0306		0203
	1804	BCWX1SD	1903C		0603A		15A1
	1805H	BCWX3AB	1903D		0605B	BEAX3E	15C1-A
	2603	BCWX3AD	1903E		0608		15C1-B
BCVX2AL	0304	BCWX3AG	1903E		0611C		15D1
	0709D	BCWX4BK-1	1903D		0611F		2012
BCVX2AL-1	0709D	BCX1BC	0611	BEAX1H	0612	BEAX3E-1	1906
BCVX2AN	0612	BCXX3CC	0611D		0613B		1907
BCVX2AN-1	1809	BCXX3HE	1304		0709	BEAX4C-1	0601
BCVX2BF-1	2012	BCXX4DK	1904		0709D	BEAX4F-1	1900A
BCVX2BK-1	2012	BCYX1CD-1	0613D		0901A	BEAX4G	1816
BCVX2BL-1	1903H	BCYX2BE-1	1900		1801B		1905-1
BCVX2CF	1809		0613A		1805H	BEAX7H-1	0602
BCVX2CF-1	2012	BCYX3ED-1	0613D		1809	BEAX7R	1008A
	0606E		1907		2012	BEAX7S	1903D
	0709C	BCYX4BD-1	0613C		2103A	BEBX1BC	0613A
BCVX2CH-1	0709D	BCYX4BE-1	0613E		2401	BEBX1BD	2602D
	1803B		1903F		2601		0605B
	1805H		0613D		2603	BEBX1BE	0613B
	1809	BCYX6GG-1	0613F		0612		2602C
	1701		1906		0613C		0300
BCVX2DH	1801B		1907	BEAX1H-1	0613F		0606C
	1804	BEAX1A	0107J		1903E	BEBX1BG	0613B
	1805H	BEAX1B	2602B		1903F		1816
	0606C		2602D		1903H		2602B
	1701		0611D		0606E		0610
BCVX2DH-1	1902		1816	BEAX1K	0709C	BEBX1BK	2603
	1906	BEAX1D	1903B		15C1-A	BEBX1C	0611A
	2601		1903C		1803B	BEBX1D	2602D
	2603		1905-1		1805H		2603
BCVX2EF	2401		2602D		1809		0601B
BCVX2EL	0401	BEAX1D-1	1905-1		2012	BEBX1D-1	0604A
	0610		1905-2	BEAX1K-1	0601B		0608
BCVX2EL-1	1701		0605C		0107D		2602B
	1800	BEAX1E	0613B		0300	BEBX1E	0300
	2603		2602B		0401		0601
BCVX2EN	15D1		2602D		0606C		0601B
BCVX2EN-1	2210		0604A		0611	BEBX1E-1	0610B-2
BCVX2FH-1	1907	BEAX1E-1	0608		0613B		0613D
BCVX2FZ-1	15D1		0610B-2		0901	BEBX1E-2	0601
	1008A		1907		1304		0601B
BCVX2GL-1	1307	BEAX1E-2	0601B	BEAX1L	15D1		0300
	1304		0107E-1		1701		0709C
BCVX2KM-1	1307		0306		1800	BEBX1G	15D1
	2012		0308A-2		1801B		1801B
BCVX2LL	15C1-A		0605		1804		1804
BCVX2LL-1	15D1	BEAX1F	0605B		1805H		0613E
	0203		0613B		1902	BEBX1G-1	1900
BCVX2LN-1	1008A		1903E		2401		1902A
BCVX2LW-1	0713		2602C		2601		1906
BCVX2QX-1	1303		2602D		2602B	BEBX1G-2	0601
BCVX4AD-1	1801B		2603	BEAX1L-1	1905-2		0107E-1
	1801B		0606E		2209	BEBX1H	1804
BCVX4AH	2103A		0613D	BEAX1M	0401		0601B
BCVX4EK	1903D		0613E		0607	BEBX1H-1	1904
BCVX4EL	1801B	BEAX1F-1	1905-1	BEAX2A	1008A	BEBX1H-2	0601B
	1800		1905-2		15C1-B		0603A
BCVX4EL-1	1805H		1907		0601B	BEBX1K	0611B-2
BCVX4ER	1903D		2209	BEAX2B	0606E		0611H-1
BCVX4FAH-1	15C1-A	BEAX1G-2	0601B		0713		1803C

Number	Group	Number	Group	Number	Group	Number	Group
BEBX1K.....	1903F	BECX1E-1.....	2602D	BECX1P.....	1900	BFAX1DA.....	0709A
(Con't)	2208D	(Con't)	2603	(Con't)	1903A	BFAX1DC.....	0202
	0613D	BECX1E-2.....	0601B	BECX1R.....	1304	BFAX1DG.....	15A1
	1900-1	BECX1F-1.....	0610B-1		15C1-B		15D1
	1901		0301	BECX1S.....	0203		1903B
BEBX1K-1.....	1901A		0500		0611A	BFAX1DG-1....	1903H
	1903C		0611A	BECX2C.....	0611D		2208F
	1903E		0611B-3		0611H-1		2218
	1906		0611B-7		0611H-2		0706A
	1907		0611D	BECX2D.....	0611H-1	BFAX1DH.....	0713
BEBX1L.....	0701A	BECX1G.....	0611E	BECX2DG.....	0611B-3		1008A
	0110		0611H-2	BECX2G-1.....	0107E-1		1903D
	0301C		0612	BECX2K-1.....	0601	BFAX1DK.....	0110
BEBX1M.....	1805H		1805H	BECX3K.....	0611B-2		1009
	1902		1816	BECX3P.....	0713	BFAX1DL.....	0701
	1905		1903C	BECX3T.....	0713		0713
	1903B		1905-1	BECX4G-1.....	2210	BFAX1DP-1.....	0102
BEBX1M-1.....	2208F		0107B		1900	BFAX1DT.....	2012
	2209		0601B		1903A	BFAX1DX.....	0703A
BEBX1M-2.....	0601	BECX1G-1.....	0606E	BECX4M-1.....	1903B	BFAX1GH-1.....	0113B-4
BEBX1P.....	1304		0610B-1		1903D	BFAX2AA.....	1003
BEBX2AB.....	2603		0709		1907	BFAX2AA-1.....	2208F
BEBX2B.....	2301A		2602B		2210	BFAX2AD.....	0208B
BEBX2B-1.....	0610B-1		0611	BEDX1AT.....	1903D	BFAX2AK.....	1003
BEBX2B-2.....	0601B	BECX1H.....	0611D	BEDX1CB.....	0305		1009
BEBX2C.....	0611		0701A	BEDX1EN.....	0305	BFAX2BD.....	1003
BEBX2C-1.....	1900A		0705	BEFX1AE.....	1905	BFAX2CP.....	1008A
BEBX2D.....	0610A		0601	BEFX1AK.....	0704C	BFBX1NG.....	1903B
BEBX2D-1.....	2209		0613B	BEFX1AP.....	0704A	BFCX1BC.....	15C1-B
BECFX1EE.....	0611D	BECX1H-1.....	0613E	BEFX1AX.....	1003	BFCX1CC.....	0305
	0601		1900A	BEFX1BB.....	1008A	BFCX1FG.....	1903D
BECX1C.....	0602		1906	BEKX4AF.....	1903B	BFDX1CG.....	1903B
	0606		0110	BFAX1BB.....	0611H-1	BFDX1CR.....	1903D
BECX1C-1.....	0606D		0601A	BFAX1BC.....	0301	BFDX1DT.....	0611E
	2201		0611H-1		1903E	BFDX2AA.....	1903D
	2203		0701A	BFAX1BC-1.....	1902A	BFDX2AC.....	0709A
BECX1D.....	0601		1303		1906	BFDX2CG.....	1903D
	0607	BECX1K.....	1304		0107	BFDX4U.....	1903B
	0601B		1800	BFAX1BD-1.....	0109	BFDX5R.....	1905-2
	0602		1805H		0113B-2	BFDX8.1AD.....	1303
	0604A		1903D	BFAX1BE.....	0602	BFFAX1D.....	1803C
BECX1D-1.....	0606		1906	BFAX1BE-1.....	15C1-A	BFFX1B.....	15C1-B
	0606C		2210		0602	BFFX1C.....	15C1-A
	0606E		2402	BFAX1CC.....	0706A		15C1-A
	0610B-2		0613E		15C1-A	BFFX1D.....	1903C
	0301		0613F		1804	BFFX1E.....	0706A
	0305	BECX1K-1.....	1901A	BFAX1CC-1.....	0610B-2	BFFX1G.....	15A1
	0306		1903C		15C1-A		15D1
BECX1E.....	0601		1903E		1805H		0107
	0602		1905-2	BFAX1CD.....	1900-1		0107A
	0603A		2208F		1900-2		0107C
	0604	BECX1L.....	1307		2208D		0108A
	0611A		0611		0110		0108B
	0611D		0701A		0603A	BFWX1A.....	0113B-3
	0611H-1		0706A		15C1-B		0113B-4
	15C1-B		0706B	BFAX1CE.....	1803C		0301
	0304	BECX1M.....	1304		1804		0602
	0601		1305		1903C		0610B-2
	0601B		1306	BFAX1CE-1.....	0101		0709D
	0602		1307		0500		1805-2
BECX1E-1.....	0604		15A1	BFAX1CF-1.....	0105B		0109A
	0606D		1903		0113B-2		0110
	0606E		1008A	BFAX1CG.....	0110	BFWX1B.....	0202
	0610B-2	BECX1P.....	1303		1009		0706B
	1906		1304	BFAX1CR.....	0706A		0706C
			15C1-B		1009		0709A

PART NUMBER INDEX—ORDNANCE

PART NUMBER (ORD.)

Number	Group	Number	Group	Number	Group	Number	Group
BFWX1B. (Con't)	7009B	CAAX3CS.....	1008A	CNAX5AK.....	2401	EEAX1D-5.....	1900-1
	0709C	CABX1AP.....	0704C	CNAX9AC.....	0709D	EEAX1H.....	15A1
	1003	CABX1AX.....	1003	CNAX9BE.....	0709D		15D1
	1008A	CABX1CZ.....	1008A	CNGX1B.....	0709D	MC19A.....	2301
BGAX3H.....	0704B	CABX3AK.....	0704C	CNGX1D.....	0304	NAAX1EB.....	1903
BGAX4C.....	1903E	CABX3AL.....	0703A	CNGX2AA.....	0107J	Q48WD.....	0110
BGAX4D.....	0305	CABX3AW.....	1008A		0605B	Q73XA-2.....	2602B
	0305A	CADX1AE.....	2208C		0709D	Q83WC-1.....	1903B
BGAX5A.....	0603A	CADX2AE.....	1903A	CNGX2AC.....	0304	TAAX1C.....	2301
	1903C	CAGX1AM.....	0603A		0709D	TBAX1A.....	2301
BGAX5B.....	0602	CAGX1AP.....	0603A	CNGX2AD.....	0107J	TBAX1B.....	2301
BGAX6A.....	0611	CBWX3AB.....	1903F		0304	TBAX1C.....	2301
BGAX6B.....	0104	CCAX1A.....	0107D	CNGX2AF.....	0107J	TEAX1DG.....	2301
	0107	CCAX1B.....	0602	CNGX3B.....	0107J	TEAX2DH.....	2301
	0302	CCAX1D.....	1903E		0605B	TECX1H.....	2301
BGAX7B.....	0611A	CCAX1F.....	0107E-2	CNGX3C.....	0304	TGAX1C.....	2301
BGAX8B.....	0113B-4		0706B		0709D	TGAX3A.....	2301
BGAX9B.....	0601		0709C	CNGX3F.....	0107J	TGAX3C.....	2301
BGAX11A.....	1903D	CCAX1M.....	0706B		0304	TGAX3D.....	2301
BGAX11B.....	1903D	CLDX3A.....	0902	CNGX3K.....	0107J	THBX1A.....	2301
BGAX21B.....	1003		1900A		0709D	TKAX2B.....	2301
BGHX1NT.....	1903D		1900B	CNHX8AK.....	1903E	TKAX3A.....	2301
BMCX1.....	0109A	CLDX3G.....	1903B	CPBX1AE.....	0611F	TKAX3C.....	2301
BMGX1-3.....	0611		15A1	CPBX5AE.....	0611F	TKEX3B.....	2301
BMCX1-14.....	2204	CLDX4A.....	1304	CPEX2AA.....	0605B	TKEX3C.....	2301
BMCX1BBE-1...	1906	CLDX5A.....	0203	CPHX1AA.....	1307	TKEX3D.....	2301
	1907		1008A	CPKX1AB.....	0611B-9	TKEX3E.....	2301
BMCX1CBW.....	1906		1306	CPMX1AA.....	0902	TKEX3F.....	2301
BQLX1KP-1.....	1306	CLDX5G.....	1307	CPMX1AB.....	0901	TKEX3G.....	2301
BQLX1KQ-1.....	15C1-B		1903B		2012	TKEX3H.....	2301
	15D1		15D1	CPMX1AD.....	0306	TKEX3M.....	2301
CAAX1AF.....	0602	CLDX5H.....	2208C	CPMX1AK.....	0701	TKEX3N.....	2301
CAAX1AG.....	0602	CLDX5M.....	15D1	CPMX1FB.....	0611C	TKEX3Q.....	2301
CAAX1AL.....	1903A		0203	CPMX2BA.....	1903D	TKEX3R.....	2301
CAAX1AM.....	1903A		1304	CPMX2BM.....	1903E	TKEX3T.....	2301
CAAX1AS.....	1303	CLDX6A.....	15D1	CPMX2CA.....	1903D	TKEX7C.....	2301
CAAX1AU.....	1307		1903A	CPNX1ET.....	0304	TKEX9B.....	2301
CAAX1GX.....	2012	CLDX9A.....	15C1-A	CPNX2BB.....	0611C	TKKX1D.....	2301
CAAX1KK.....	0602	CLDX9C.....	15D1	CPNX2CC.....	0304	TKKX2B.....	2301
CAAX3AL.....	0102A		15C1-A	CPNX2CA.....	0304	TKKX2F.....	2301
CAAX3AP.....	0703A	CLFX2A.....	1903B	CPNX2CM.....	0304	TKKX4C.....	2301
	0704A	CNAX2AC.....	2401	CRKX1AB.....	0611B-9	TKKX5B.....	2301
CAAX3AQ.....	0704	CNAX2AG.....	2401	EEAX1A.....	15C1-B	TKKX15H.....	2301
CAAX3AT.....	1003	CNAX5AC.....	2401	EEAX1C.....	15C1-A	TKKX140.....	2301
	1008A	CNAX5AG.....	2401	EEAX1D.....	15C1-A		

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

AC SPARK PLUG DIV. (GENERAL MOTORS CORP.) PART NUMBERS

AC-1500726..... 0611H-1

AC-1542710..... 0611D

AMERICAN CABINET HARDWARE CO. PART NUMBERS

ACH-1026L..... 0611

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

ALEMITE DIV. (STEWART-WARNER CORP.) PART NUMBERS

AD-1610.....	0203	AD-1610.....	1900B	AD-1636.....	15C1-A	AD-1888.....	1902A
	1008A	(Cont'd)	1903B	AD-1638.....	15D1	AD-1980.....	1903A
	1304	AD-1611.....	15A1	AD-1641.....	15C1-A	AD-6577E.....	2301
	1306	AD-1613.....	0203		15D1		
	1307		15D1	AD-1650.....	1303		
	1900A		1304	AD-1669.....	1903A		

ARROW-HART & HEGEMAN ELECTRIC COMPANY PART NUMBERS

AH-81378.....	0606	AH-811978A.....	0606
---------------	------	-----------------	------

AIR CORPS STANDARD PART NUMBERS

AIR-AN75-11.....	0113B-3	AIR-AN502-10-4...	0113B-1	AIR-AN805-2.....	0308A-2	AIR-AN900-16...	0107A
AIR-AN78-A10....	0110	AIR-AN502-10-12..	0113B-8	AIR-AN900-10...	0100		0107C
AIR-AN315-3R....	0308A-2	AIR-AN745-2A....	0107J		0107E-2	Cont'd	0107K
AIR-AN320-4.....	0305A	AIR-AN755-2.....	2603	AIR-AN900-12...	0100		0100
AIR-AN320-12....	1306	AIR-AN755-3.....	2603		0107J	AIR-AN900-24...	0107E-2
AIR-AN345-10....	0308A-2	AIR-AN755-4.....	2603	AIR-AN900-14...	0100		2602B
AIR-AN356-1032..	0308A-2	AIR-AN755-6.....	2603		0107K	AIR-AN960-10...	0308A-2
AIR-AN380-2-2...	0305A	AIR-AN755-7.....	2603	AIR-AN900-16...	0100	AIR-AN1464.....	0110
AIR-AN380-4-3...	0102	AIR-AN755-10....	2603		0105B		
AIR-AN393-17....	0109	AIR-AN780-2.....	0308A-2				

AMERICAN SEATING COMPANY PART NUMBERS

ASC-0-3711-33....	1804	ASC-0-3725-1.....	1803C	ASC-0-3725-33....	1804	ASC-0-3725-41....	1804
ASC-0-3711-36....	1803C	ASC-0-3725-5.....	1804	ASC-0-3725-35....	1803C	ASC-0-3725-44....	1803C
ASC-0-3711-38....	1804	ASC-0-3725-6.....	1803C	ASC-0-3725-37....	1804	ASC-0-3725-62....	1803C
ASC-0-3711-40....	1804	ASC-0-3725-18....	1803C	ASC-0-3725-39....	1804	ASC-D41219.....	1804
ASC-0-3711-58....	1803C						

BONNEY FORGE & TOOL WORKS PART NUMBERS

BF-08.....	2301
------------	------

BLACKSTONE MANUFACTURING CO., INC. PART NUMBERS

BKE-CR105.....	0613B	BKE-CR183.....	0613B	BKE-CR200.....	0613B
BKE-CR182.....	0613B	BKE-CR188.....	0613B	BKE-CR201.....	0613B

BANTAM BEARING CORP. PART NUMBERS

BN-0-824A.....	1903A	BN-0-825A.....	1903A
----------------	-------	----------------	-------

BENDIX-STROMBERG CARBURETOR CO. PART NUMBERS

BS-174-S-22.....	0301	BS-P3199.....	0301	BS-P6712.....	0301	BS-P10173.....	0301
BS-11640.....	0301	BS-P4235.....	0301	BS-P6869.....	0301	BS-P10248.....	0301
BS-22096.....	0301	BS-P4880.....	0301	BS-P8344.....	0301	BS-P10666.....	0301
BS-60167.....	0301	BS-P6243.....	0301	BS-P8460.....	0301	BS-P11477.....	0301
BS-383350.....	0301	BS-P6558.....	0301	BS-P8508.....	0301	BS-P11582.....	0301
BS-383352.....	0301	BS-P6564.....	0301	BS-P8576.....	0301	BS-P11611.....	0301
BS-383577.....	0301	BS-P6581.....	0301	BS-P9007.....	0301	BS-P12167.....	0301
BS-A17676D.....	0301	BS-P6592.....	0301	BS-P9008.....	0301	BS-P12507.....	0301
BS-BK-13673.....	0301	BS-P6606.....	0301	BS-P9201.....	0301	BS-P12806.....	0301
BS-NA-R6B.....	0100	BS-P6664.....	0301	BS-P9290.....	0301	BS-P12809.....	0301
		BS-P6666.....	0301	BS-P10053.....	0301	BS-P13619.....	0301
BS-P2267.....	0301	BS-P6668.....	0301	BS-P10100.....	0301	BS-P13620.....	0301
BS-P2886.....	0301	BS-P6670.....	0301	BS-P10101.....	0301	BS-P13640.....	0301

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

BENDIX-STROMBERG CARBURETOR CO. PART NUMBERS (Cont'd)

BS-P13657..... 0301	BS-P14577-1..... 0301	BS-P20344..... 0301	BS-P60879..... 0301
BS-P13676..... 0301	BS-P15585..... 0301	BS-P20345..... 0301	BS-P60880..... 0301
BS-P13677..... 0301	BS-P15586..... 0301	BS-P20346..... 0301	BS-P60881..... 0301
BS-P13678..... 0301	BS-P15663..... 0301	BS-P20396..... 0301	BS-P60885..... 0301
BS-P13681..... 0301	BS-P16299..... 0301	BS-P20397..... 0301	BS-P60895..... 0301
BS-P13682..... 0301	BS-P16546..... 0301	BS-P60117..... 0301	BS-P60896..... 0301
BS-P13688..... 0301	BS-P16597..... 0301	BS-P60117-1..... 0301	BS-P61379..... 0301
BS-P13743..... 0301	BS-P16598..... 0301	BS-P60166..... 0301	BS-P383352..... 0301
BS-P13775..... 0301	BS-P16814..... 0301	BS-P60168..... 0301	BS-P390025..... 0301
BS-P13873..... 0301	BS-P16815..... 0301	BS-P60169..... 0301	BS-P390060..... 0301
BS-P13876..... 0301	BS-P17137..... 0301	BS-P60244..... 0301	BS-P390090..... 0301
BS-P13898..... 0301	BS-P17155..... 0301	BS-P60307..... 0301	BS-P390188-37..... 0301
BS-P13931..... 0301	BS-P17222..... 0301	BS-P60308..... 0301	BS-P390188-56..... 0301
BS-P13940..... 0301	BS-P17226..... 0301	BS-P60312..... 0301	BS-P390219..... 0301
BS-P13960..... 0301	BS-P17525..... 0301	BS-P60396..... 0301	BS-P390220..... 0301
BS-P13961..... 0301	BS-P18011..... 0301	BS-P60397..... 0301	BS-P390224..... 0301
BS-P13962..... 0301	BS-P18012..... 0301	BS-P60815..... 0301	BS-P390274..... 0301
BS-P13963..... 0301	BS-P18053..... 0301	BS-P60815-1..... 0301	BS-P392522..... 0301
BS-P13964..... 0301	BS-P18054..... 0301	BS-P60815-2..... 0301	BS-P393786..... 0301
BS-P13965..... 0301	BS-P18055..... 0301	BS-P60873..... 0301	BS-ST383350..... 0301
BS-P14022..... 0301	BS-P18056..... 0301	BS-P60374..... 0301	BS-ST383352..... 0301
BS-P14141..... 0301	BS-P18602..... 0301	BS-P60875..... 0301	
BS-P14577..... 0301	BS-P19692..... 0301	BS-P60878..... 0301	

BURNDY ENGINEERING CO., INC. PART NUMBERS

BUN-KC2563T13.. 0610B-1

BUN-KC2663T13.. 0610B-1

BREEZE CORPORATION, INC. PART NUMBERS

BZ-3154-2..... 0604A	BZ-E1026-29-2..... 0604A	BZ-E1135-2-7..... 0604A	BZ-E1199-72-0902..... 0604A
BZ-3177-88P..... 0604A	BZ-E1028-51-40..... 0604A	BZ-E1135-6-1..... 0604A	BZ-E1199-76-1900..... 0604A
BZ-3177-D3..... 0604A	BZ-E1028-51-50..... 0604A	BZ-E1199-36-0800..... 0604A	BZ-E1199-88-0513..... 0604A
BZ-3585-40..... 0604A	BZ-E1112-5-4..... 0604A	BZ-E1199-66-1400..... 0604A	
BZ-E603-19P-2M..... 0604A	BZ-E1135-2-4..... 0604A	BZ-E1199-66-2107..... 0604A	
BZ-E1026-13-1..... 0604A	BZ-E1135-2-6..... 0604A	BZ-E1199-71-0902..... 0604A	

CADILLAC MOTOR CAR DIV. (GENERAL MOTORS CORP.) PART NUMBERS

CAD-103741..... 1903	CAD-1427866..... 2209	CAD-3600863..... 1906	CAD-3600968..... 1906
CAD-141240..... 1903D	CAD-3600498..... 1906	CAD-3600909..... 1906	CAD-3600985..... 1907
CAD-187123..... 1903C	CAD-3600499..... 1900-1	CAD-3600913..... 1907	
CAD-360089..... 1907	CAD-3600668..... 1906	CAD-3600967..... 1906	

CANDLER-HILL CORP. PART NUMBERS

CAN-1101..... 0302	CAN-2022..... 0302	CAN-3201..... 0302	CAN-6092..... 0302
CAN-1201..... 0302	CAN-2045..... 0302	CAN-3967..... 0302	CAN-6685..... 0302
CAN-1308..... 0302	CAN-2078..... 0302	CAN-5009..... 0302	CAN-6686..... 0302
CAN-1458..... 0302	CAN-2079..... 0302	CAN-5171..... 0302	CAN-8077..... 0302
CAN-1477..... 0302	CAN-2504..... 0302	CAN-5227..... 0302	CAN-9151..... { 0100 0302
CAN-1523..... 0302	CAN-2920..... 0302	CAN-5332..... 0302	
CAN-1524..... 0302	CAN-2922..... 0302	CAN-5455..... 0302	CAN-A1056..... 0302
CAN-1739..... 0302	CAN-3009..... 0302	CAN-5639..... 0302	
CAN-1809..... 0302	CAN-3116..... 0302	CAN-5640..... 0302	

CHRYSLER CORP. PART NUMBERS

CC-38742..... 1903D	CC-38911..... 1903C	CC-214434..... 1903E
---------------------	---------------------	----------------------

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

CANNON ELECTRIC DEVELOPMENT CO. PART NUMBERS

CED-GK60A-2.... 2602D

CLEVELAND GRAPHITE BRONZE CO. PART NUMBERS

CGB-405C..... 1905-1

CHAIN BELT CO. PART NUMBERS

CHB-AAT1019.... 2218	CHB-AT1072..... 0613E	CHB-AT3012-2.... 1900A	CHB-XAT114..... 0613B
CHB-AAT1054.... 1902A	CHB-AT1073..... 0613D	CHB-AT3013-1.... 1900A	CHB-XAT115..... 0613B
CHB-AAT1076.... 1907	CHB-AT1077..... 1903E	CHB-AT3013-2.... 1900A	CHB-XAT117..... 1903H
CHB-AAT1083.... 1906	CHB-AT1078..... 1903C	CHB-AT3013-3.... 1900A	CHB-XAT118..... 1903H
CHB-AAT2012.... 1902A	CHB-AT1079..... 0613	CHB-AT3015..... 1901A	CHB-XAT313..... 1905
CHB-AAT2013.... 1902A	CHB-AT1080..... 0613	CHB-AT3016..... 1901A	CHB-XAT503..... 1906
CHB-AAT2015.... 1902A	CHB-AT1081..... 0613	CHB-AT3019-1.... 1900A	CHB-XAT504..... 1900B
CHB-AAT2024.... 1903C	CHB-AT1082..... 0613	CHB-AT3019-2.... 1900A	0613F
CHB-AAT2025.... 1903C	CHB-AT1085..... 0613F	CHB-AT3019-3.... 1900A	1901
CHB-AAT2029.... 1901	CHB-AT1086..... 0613D	CHB-AT3024-1.... 1900A	CHB-XAT505... 1901A
CHB-AAT2044.... 1903H	CHB-AT1089..... 0613E	CHB-AT3024-2.... 1900A	1903C
CHB-AAT2046.... 1903H	CHB-AT1094..... 0613A	CHB-AT3024-3.... 1900A	1905-1
CHB-AAT2047.... 0613F	CHB-AT1095..... 0613A	CHB-AT3026..... 0613D	0613E
CHB-AAT3040.... 1903H	CHB-AT1096..... 0613A	CHB-AT3028..... 0613B	CHB-XAT506... 1901A
CHB-AAT4012.... 0613E	CHB-AT1097..... 2302A	CHB-AT3029..... 1904	1903E
CHB-AAT4503.... 1901	CHB-AT1101..... 1903	CHB-AT3030..... 1904	CHB-XAT509.... 1907
CHB-AT512..... 1900	CHB-AT1103..... 1903	CHB-AT3035..... 1901	CHB-XAT510... 0613E
CHB-AT549..... 1903E	CHB-AT1105..... 1903H	CHB-AT3038..... 1904	1903F
CHB-AT1006.... 1900B	CHB-AT1107..... 1903H	CHB-AT3038-1.... 1904	CHB-XAT511.... 1906
CHB-AT1014.... 0613D	CHB-AT1108..... 0613B	CHB-AT3038-2.... 1904	CHB-XAT514.... 1900
CHB-AT1015.... 0613B	CHB-AT1111..... 1903	CHB-AT3038-3.... 1904	CHB-XAT515.... 2218
CHB-AT1016.... 1905A	CHB-AT2002..... 1900	CHB-AT3038-4.... 1904	CHB-XAT517.... 1903B
CHB-AT1020.... 2218	CHB-AT2004-1.... 1900B	CHB-AT3038-5.... 1904	CHB-XAT518.... 0613D
CHB-AT1021.... 0613E	CHB-AT2004-2.... 1900B	CHB-AT3038-6.... 1904	CHB-XAT519.... 0613C
CHB-AT1022.... 0613E	CHB-AT2005-1.... 1900A	CHB-AT4004..... 1900B	CHB-XAT521.... 1903E
CHB-AT1023.... 0613E	CHB-AT2005-2.... 1900A	1903E	CHB-XAT522.... 1903F
CHB-AT1030.... 1903B	CHB-AT2008..... 1900	CHB-AT4005..... 1900A	CHB-XAT523.... 1903E
CHB-AT1031.... 1903B	CHB-AT2010..... 1903D	CHB-AT4008..... 0613D	CHB-XAT524.... 1905
CHB-AT1032.... 1902A	CHB-AT2020..... 1904	CHB-AT4009..... 1900	CHB-XAT525.... 1905
CHB-AT1034.... 1904	CHB-AT2026.... 1905-1	CHB-AT4011..... 1900	CHB-XAT526.... 1905
CHB-AT1036.... 1903D	CHB-AT2027.... 1900B	CHB-AT4020.... 0613F	CHB-XAT527.... 1905
CHB-AT1044.... 1903B	CHB-AT2028.... 1904	CHB-AT4504.... 1900	CHB-XAT528.... 1905
CHB-AT1048.... 2218	CHB-AT2033.... 0613F	CHB-ATT4007.... 1903C	CHB-XAT529.... 1905
CHB-AT1050.... 1903F	CHB-AT2034.... 0613F	CHB-BAT104.... 1903C	CHB-XAT530.... 1905
CHB-AT1051.... 1900B	CHB-AT2035.... 0613F	CHB-BAT2003.... 1900B	CHB-XAT531.... 0613
CHB-AT1056.... 1904	CHB-AT2036.... 0613F	CHB-BAT3039.... 0613A	CHB-XAT533... 1903E
CHB-AT1057.... 1904	CHB-AT2037.... 0613D	CHB-BAT4010-1.. 1900A	1903F
CHB-AT1059.... 0613D	CHB-AT2038.... 0613D	CHB-BAT4010-2.. 1900A	CHB-XAT534.... 1903D
CHB-AT1060.... 0613D	CHB-AT2038A.... 0613D	CHB-BAT4016.... 0613D	CHB-XAT537.... 1903
CHB-AT1061-1.... 0613D	CHB-AT2038B.... 0613D	CHB-BAT4021.... 0613E	CHB-XAT538.... 1903D
CHB-AT1061-2... 0613D	CHB-AT2038C.... 0613D	CHB-BAT4024.... 1903H	CHB-XAT539.... 1903C
0613F	CHB-AT2038D.... 0613D	CHB-CAT209.... 1905	CHB-XAT540.... 1903C
CHB-AT1061-3... 0613B	CHB-AT2038E.... 0613D	CHB-XAT101.... 1903E	CHB-XAT541.... 1907
0613E	CHB-AT2038F.... 0613D	CHB-XAT103.... 1903D	CHB-XAT542.... 1902A
CHB-AT1062.... 1903D	CHB-AT2038G.... 0613D	CHB-XAT107.... 0613E	CHB-XAT543.... 1902A
CHB-AT1063.... 2218	CHB-AT2038H.... 0613D	CHB-XAT108.... 0613E	CHB-XAT545.... 1903
CHB-AT1064.... 1903B	CHB-AT2040.... 1903	CHB-XAT109.... 0613D	CHB-XAT548.... 1905
CHB-AT1065.... 1903B	CHB-AT2041.... 1907	CHB-XAT110.... 0613D	CHB-XAT1040.... 1905
CHB-AT1068.... 2203	CHB-AT3011-1.... 1900A	CHB-XAT111.... 0613D	CHB-XAT3041.... 1905
CHB-AT1069.... 2203	CHB-AT3011-2.... 1900A	CHB-XAT112.... 0613D	
CHB-AT1071.... 0613F	CHB-AT3012-1.... 1900A	CHB-XAT113.... 1903G	

CHICAGO RAWHIDE MFG. CO. PART NUMBERS

CM-135705..... 0611

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
CONTINENTAL MOTORS CORP. PART NUMBERS							
CO-2002.....	0604B	CO-2457.....	0107	CO-2574.....	0113B-3	CO-2886.....	0107J
CO-2002-03.....	0604B		0107A	CO-2574-040.....	0113B-3		0113B-8
CO-2002-06.....	0604B		0107C	CO-2576.....	0102	Cont'd	
CO-2002-09.....	0604B		0113B-2	CO-2578.....	1113B-5	CO-2923.....	0113B-4
CO-2024.....	0107J		0603A	CO-2580.....	0113B-3	CO-3068.....	0113B-2
	0308A-2	CO-2458.....	0113B-3		0113B-4	CO-3092.....	2301
CO-2025.....	0107J		0500	CO-2581.....	0113B-5	CO-3112.....	0100
CO-2026.....	0107J	CO-2459.....	0602		0113B-6		0113B-1
CO-2027.....	0111		0101	CO-2582.....	0113B-7	CO-3113.....	0113B-2
CO-2050.....	0102	CO-2463.....	0110		0113B-2	CO-3118.....	0107
CO-2052.....	0102		0108A	CO-2583.....	0113B-2	CO-3119.....	0113B-8
CO-2079.....	0102	CO-2472.....	0108B	CO-2584.....	0113B-8	CO-3192.....	0104
CO-2096.....	0100		0105B	CO-2585.....	0113B-8	CO-3199.....	0107
	0108A	CO-2473.....	0105C	CO-2588.....	0100	CO-3200.....	0107
CO-2110.....	0104		0107		0113B-8	CO-3248.....	0107C
CO-2129.....	0105A	CO-2474.....	0107J	CO-2589.....	0100	CO-3271.....	0105
CO-2152.....	0105B		0113B-8		0107E-2	CO-3292.....	0105
	0113B-2	CO-2475.....	0500	CO-2590.....	0113B-6	CO-3299.....	0105
CO-2157.....	0105B		0107		0113B-7	CO-3348.....	0105B
CO-2204-06.....	0113B-8	CO-2480.....	0107A	CO-2591.....	0113B-8	CO-3349.....	0105B
CO-2219.....	0104		0107C	CO-2592.....	0113B-4	CO-3360.....	0105A
	0107	CO-2481.....	0107E-2	CO-2593.....	0107	CO-3425.....	0101
CO-2220.....	0113B-8		0113B-1	CO-2594.....	0107	CO-3425-40.....	0101
CO-2246.....	0113B-5	CO-2482.....	0113B-4	CO-2595.....	0100	CO-3426.....	0101
	0603A		0108A		0107	CO-3426-40.....	0101
CO-2247.....	0100	CO-2483.....	0108B	CO-2596.....	0107	CO-3427.....	0101
	0603A		0301	CO-2597.....	0100	CO-3665.....	0308A-2
CO-2249.....	0100	CO-2484.....	0301-1		0107	CO-3840.....	0105
	0602		0302	CO-2599.....	0107K	CO-3915.....	0113B-3
CO-2254.....	0113B-3	CO-2485.....	0101	CO-2600.....	0107K	CO-3941.....	0113B-4
	0105B		0109A	CO-2602.....	0113B-4	CO-3942.....	0113B-4
CO-2255.....	0105B	CO-2486.....	0113B-3	CO-2667.....	0602	CO-3943.....	0113B-4
CO-2256.....	0105B		0500		0113B-3	CO-3963.....	0201A
CO-2265.....	0107E-2	CO-2487.....	0602	CO-2716.....	0113B-8	CO-3978.....	0113B-6
CO-2304.....	0113B-3		0101	CO-2749.....	0301		0113B-7
CO-2351.....	0308A-2	CO-2488.....	0110	CO-2794.....	0109A	CO-3979.....	0113B-2
CO-2403.....	0107		0305	CO-2827.....	0100	CO-4057.....	0107
	0107	CO-2489.....	0113B-4		0108A	CO-4170.....	0107B
CO-2403-03.....	0107	CO-2502.....	0107	CO-2831.....	0105	CO-4173.....	0108A
CO-2403-06.....	0107		0109	CO-2831-03.....	0105	CO-4174.....	0107
CO-2403-09.....	0107	CO-2505.....	0113B-2	CO-2831-10.....	0105	CO-4174-A1.....	0107
CO-2418.....	0113B-3		0105B	CO-2831-20.....	0105	CO-4241.....	0110
	0602	CO-2506.....	0113B-2	CO-2831-30.....	0105	CO-4241A.....	0110
CO-2418-03.....	0113B-3		0101	CO-2833.....	0108A	CO-4241-A1.....	0110
CO-2418-06.....	0113B-3	CO-2508.....	0110	CO-2834.....	0108A	CO-4282.....	0500
CO-2418-09.....	0113B-3		0500	CO-2835.....	0101	CO-4285.....	0500
CO-2437.....	0105B	CO-2520.....	0113B-4	CO-2837.....	0301	CO-4292.....	0113B-4
	0105C	CO-2546.....	0101		0301-1	CO-4323.....	0108A
CO-2439.....	0107J	CO-2555.....	0107	CO-2845.....	0100	CO-4324.....	0108A
	0113B-8		0603A		0101A	CO-4326.....	0108B
CO-2441.....	0308A-2	CO-2557.....	0113B-3	CO-2848.....	0107E-2	CO-4327.....	0108B
	0107A		0603A	CO-2849.....	0107E-2	CO-4378.....	0113B-3
CO-2443.....	0107E-2	CO-2560.....	0101A	CO-2859.....	0104	CO-4378-A1.....	0113B-3
	0108A		0107A	CO-2860.....	0104	CO-4379.....	0113B-5
CO-2445.....	0113B-1	CO-2561.....	0107E-2		0113B-4	CO-4720.....	0105C
	0113B-4		0113B-4	CO-2867.....	0100	CO-4720A.....	0105C
CO-2447.....	0301-1		0108A		0107J	CO-4721.....	0105C
	0302	CO-2562.....	0301-1	CO-2868.....	0107J	CO-4721A.....	0105C
CO-2449.....	0305A		0302	CO-2872A1.....	0102	CO-4722.....	0105C
	0110	CO-2563.....	0101A	CO-2873.....	0113B-8	CO-4723.....	0105C
CO-2451.....	0305		0110	CO-2878.....	0113B-5	CO-4723A.....	0105C
	0500	CO-2564.....	0305	CO-2886.....	0105B	CO-4753.....	0108B
CO-2456.....	0305A		0500		0105C	CO-4754.....	0108B

Number	Group	Number	Group	Number	Group	Number	Group
CONTINENTAL MOTORS CORP. PART NUMBERS (Cont'd)							
CO-4863.....	{ 0100 0601A	CO-20271.....	{ 0100 0107J	CO-20608.....	{ 0102A 0100	CO-20988-03.....	{ 0105B 0105C
CO-4925.....	0103	CO-20272.....	0107J	CO-20620.....	{ 0107 0100	CO-20988-06.....	{ 0105B 0105C
CO-4925-A1.....	0103	CO-20273.....	0107J	CO-20621.....	{ 0107 0100	CO-20988-09.....	{ 0105C 0107J
CO-4925-A2.....	0103	CO-20275.....	{ 0100 0107J	CO-20622.....	{ 0107 0101	CO-20990.....	0108B
CO-4925-010.....	0103	CO-20276.....	0107J	CO-20624.....	{ 0305 0101	CO-20990-03.....	0108B
CO-4925-015.....	0103	CO-20287.....	0107J	CO-20624-03.....	{ 0305 0101	CO-20990-06.....	0108B
CO-4925-020.....	0103	CO-20291.....	{ 0100 0107	CO-20624-06.....	{ 0305 0101	CO-20990-09.....	0108B
CO-5071.....	0104	CO-20294.....	0105A	CO-20624-09.....	{ 0305 0101	CO-20991.....	{ 0107E-2 0108A
CO-5114.....	0100	CO-20296.....	0308A-2	CO-20641.....	0113B-4	CO-20991-03.....	0108A
CO-5130.....	0500	CO-20303.....	0500	CO-20647.....	0109A	CO-20991-06.....	0108A
CO-5131.....	0500	CO-20366.....	0105	CO-20649.....	0500	CO-20991-09.....	0108A
CO-5133.....	0110	CO-20384.....	0105	CO-20650.....	0500	CO-20992.....	{ 0301 0603A
CO-5158.....	0500	CO-20385.....	0105	CO-20654.....	0500	CO-20992-03.....	0107A
CO-5161.....	0500	CO-20399.....	0105	CO-20655.....	0500	CO-20992-06.....	0301
CO-5195.....	0107A	CO-20400.....	0105	CO-20656.....	0500	CO-20992-09.....	0107C
CO-5195-A1.....	0107A	CO-20400-03.....	0105	CO-20657.....	0500	CO-20993.....	0107C
CO-5228.....	0109	CO-20400-06.....	0105	CO-20658.....	0500	CO-20993-03.....	0107C
CO-5231.....	0113B-4	CO-20400-09.....	0105	CO-20661.....	0500	CO-20993-06.....	0107C
CO-5234A1.....	0100	CO-20401.....	0105	CO-20662.....	0500	CO-20993-09.....	0107C
CO-5245A1.....	0301	CO-20412.....	0301-1	CO-20666.....	0500	CO-20994.....	0500
CO-5250.....	0107J	CO-20418.....	0107C	CO-20668.....	0500	CO-20994-03.....	0500
CO-5841.....	0301-1	CO-20419.....	0107C	CO-20670.....	0109A	CO-20994-06.....	0500
CO-5842.....	{ 0100 0602	CO-20420.....	0302	CO-20672.....	0110	CO-20994-09.....	0500
CO-5845.....	0100	CO-20422.....	0107C	CO-20673.....	0500	CO-20997.....	0101
CO-6126.....	0109A	CO-20423.....	{ 0100 0302	CO-20674.....	0500	CO-20998.....	0109A
CO-6131.....	0500	CO-20425.....	{ 0100 0107C	CO-20676.....	0500	CO-20999.....	0109A
CO-6135.....	0500	CO-20426.....	0107C	CO-20700.....	0305A	CO-21512.....	0308A-2
CO-6137.....	0500	CO-20464.....	0107J	CO-20705.....	0100	CO-22001.....	{ 0107J 0308A-2
CO-6138.....	0500	CO-20466.....	0107J	CO-20720.....	0308A-2	CO-22001-03.....	0107J
CO-6143.....	0500	CO-20467.....	{ 0100 0107J	CO-20721.....	0308A-2	CO-22001-06.....	0107J
CO-6158.....	0113B-1	CO-20477.....	0109	CO-20811.....	0305A	CO-22001-09.....	0107J
CO-6182.....	0101A	CO-20482.....	{ 0100 0301-1	CO-20882.....	{ 0107J 0308A-2	CO-22003-03.....	{ 0107 0108A
CO-20042.....	0500	CO-20515.....	0105B	CO-20884.....	0105		
CO-20099.....	0101A	CO-20516.....	0105B	CO-20884-03.....	0105		
CO-20099-03.....	0101A	CO-20522.....	0308A-2	CO-20884-10.....	0105		
CO-20099-06.....	0101A	CO-20529.....	0105B	CO-20884-20.....	0105		
CO-20099-09.....	0101A	CO-20532.....	{ 0100 0107C	CO-20884-30.....	0105		
CO-20240.....	0105	CO-20538.....	{ 0101 0110	CO-20886.....	0108A		
CO-20241.....	0105	CO-20539.....	0110	CO-20889.....	{ 0100 0113B-5		
CO-20241-03.....	0105	CO-20559.....	0308A-2	CO-20922-06.....	0113B-4		
CO-20241-06.....	0105	CO-20589.....	0113B-4	CO-20951.....	{ 0100 0107A		
CO-20241-09.....	0105	CO-20594.....	0305A	CO-20952.....	{ 0100 0107A		
CO-20242.....	0105	CO-20595.....	{ 0100 0305A	CO-20960.....	0109		
CO-20246.....	0107K	CO-20596.....	0305A	CO-20961.....	0113B-4		
CO-20247.....	0107K	CO-20600.....	0102A	CO-20962.....	{ 0100 0113B-4		
CO-20251.....	0105C	CO-20601.....	0102A	CO-20975.....	0308A-2		
CO-20252.....	0105	CO-20602.....	0102A	CO-20979.....	0113B-4		
CO-20253.....	0105	CO-20603.....	0102A	CO-20988.....	{ 0105B 0105C		
CO-20254.....	{ 0100 0105C	CO-20604.....	0102				
CO-20255.....	0105A	CO-20605.....	0102A				
CO-20260.....	0103B	CO-20606.....	0109				
CO-20261.....	0103B	CO-20607.....	0109				
CO-20262.....	{ 0100 0105B						
CO-20266.....	{ 0100 0105B						
CO-20268.....	{ 0100 0105A						
CO-20269.....	0107J						

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

CONTINENTAL MOTORS CORP. PART NUMBERS (Cont'd)

CO-22003-03..... (Cont'd)	0113B-2	CO-22676.....	0604B	CO-500060.....	0100	CO-A6517.....	0100
	0107	CO-22707.....	0108A		0113B-4		0604A
	0108A	CO-22778.....	0113B-4		0101		0105B
CO-22003-06.....	0113B-2	CO-22780.....	0305A	CO-500332.....	0104	CO-A20263.....	0105B
	0107	CO-22781.....	0305A	CO-A3192.....	0110	CO-A20263-A1.....	0105B
	0108A	CO-22782.....	0305A	CO-A3400.....	0101	CO-A20267.....	0105B
CO-22003-09.....	0113B-2	CO-22783.....	0305A	CO-A3428.....	0308A-2	CO-A20292.....	0105A
	0107	CO-22784.....	0305A	CO-A3682.....	0308A-2	CO-A20292A.....	0105A
	0108A	CO-22785.....	0305A	CO-A3876.....	0308A-2	CO-A20292A1.....	0105A
CO-22004.....	0113B-2	CO-22786.....	0305A	CO-A3877.....	0308A-2	CO-A20645.....	0107J
	0113B-8	CO-22787.....	0305A	CO-A3878.....	0308A-2		0305
	0113B-8	CO-22788.....	0305A	CO-A3915.....	0113B-3		0305A
CO-22004-03.....	0113B-8	CO-22789.....	0305A	CO-A3930.....	0108A	CO-A20878.....	0107C
CO-22004-09.....	0113B-8	CO-22791.....	0305A	CO-A3931.....	0108A	CO-A22178.....	0107A
CO-22006.....	0101A	CO-22803.....	0100	CO-A3979.....	0113B-2	CO-A22197.....	0113B-3
CO-22006-03.....	0101A		0301	CO-A4170.....	0107C	CO-A22227.....	0604A
CO-22006-06.....	0101A	CO-22812.....	0107K	CO-A4170A.....	0100	CO-A22779.....	0305A
CO-22006-09.....	0101A		0107K		0107C	CO-A22790.....	0305A
CO-22070.....	0113B-4	CO-22819.....	0100	CO-A4170A1.....	0107C	CO-A23152.....	0104
CO-22085.....	0107		0113B-8	CO-A4174.....	0107	CO-A23152-01.....	0104
CO-22094.....	0102	CO-23159.....	0105B	CO-A4174A.....	0100	CO-A23152-05.....	0104
	2301	CO-23168.....	0107K	CO-A4174A1.....	0107	CO-A23152-005.....	0104
CO-22096.....	0305A	CO-23262.....	0100	CO-A4282.....	0500	CO-A35050.....	0108A
CO-22097.....	0113B-4		0601A	CO-A4284.....	0500	CO-A35099.....	0113B-5
CO-22098.....	0107J	CO-23268.....	0110	CO-A4285.....	0500	CO-A35102.....	0308A-2
CO-22099.....	0107J	CO-23271.....	0601A	CO-A4812.....	0109	CO-A35103.....	0308A-2
	0305A	CO-23272.....	0100	CO-A4813.....	0100	CO-A35267.....	0100
CO-22145.....	0107A	CO-23274.....	0100		0109		0604A
CO-22145-03.....	0107A		0301-1	CO-A4960.....	0100	CO-A35268.....	0100
CO-22145-06.....	0107A	CO-23287.....	0301-1		0305	CO-A35269.....	0100
CO-22145-09.....	0107A	CO-23524.....	0104	CO-A4977.....	0301-1	CO-A35270.....	0100
CO-22162.....	0308A-2	CO-23834.....	0104	CO-A5130.....	0500	CO-A50023.....	0104
CO-22178.....	0107A	CO-25105.....	0308A-2	CO-A5133.....	0110	CO-A50023-A1.....	0104
CO-22209.....	0103A	CO-32250.....	0301-1	CO-A5145.....	0102	CO-A50023-A2.....	0104
CO-22209-010.....	0103A	CO-35175.....	0107	CO-A5145A.....	0102	CO-A235268.....	0604A
CO-22209-020.....	0103A	CO-35217.....	0100	CO-A5159.....	0500	CO-B3119.....	0113B-8
CO-22210.....	0103A	CO-35250.....	0100	CO-A5160.....	0106	CO-B4284.....	0500
CO-22210-010.....	0103A	CO-35251.....	0604A	CO-A5161.....	0500	CO-B5130.....	0500
CO-22210-020.....	0103A	CO-35253.....	0100	CO-A5239A.....	0101A	CO-B5159.....	0500
CO-22324.....	0301-1		0110	CO-A5845.....	0110	CO-B5161.....	0500
CO-22324-03.....	0301-1	CO-35264.....	0601	CO-A6117.....	0101	CO-B6136.....	0500
CO-22324-06.....	0301-1	CO-35294.....	0103A	CO-A6117A1.....	0101	CO-B20263.....	0105B
CO-22324-09.....	0301-1	CO-35294-010.....	0103A	CO-A6135.....	0500	CO-B20263-A1.....	0105B
CO-22427.....	0301	CO-35294-020.....	0103A	CO-A6136.....	0500	CO-B20676.....	0500
CO-22489.....	0100	CO-40033.....	0100	CO-A6143.....	0500	CO-B3992A1.....	0105B
	0604B		0601	CO-A6158A1.....	0113B-1	CO-B3992A2.....	0105B
CO-22530.....	0100	CO-500014.....	0107E-2	CO-A6158A2.....	0113B-1	CO-B3993A1.....	0105B
CO-22539.....	0105C	CO-500015.....	0107E-2	CO-A6305.....	0113B-1	CO-B3993A2.....	0105B
CO-22539-03.....	0105C	CO-500049.....	0105	CO-A6408.....	0108A	CO-C6136.....	0500
CO-22539-06.....	0105C	CO-500056.....	0113B-4	CO-A6419.....	0100	CO-EQ5263.....	0305
CO-22539-09.....	0105C				0308A-2	CO-P332.....	0107J
						CO-W670-9A.....	0100

CHAMPION SPARK PLUG CO. PART NUMBERS

CP63S.....	0100		
	0604B		

COLLINS RADIO CO. PART NUMBERS

CRA-51Q-1.....	2601	CRA-190Z-1.....	2601	CRA-314M-2.....	2602C	CRA-416T-4.....	2601
CRA-56Q-1.....	2601						

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

CUNO ENGINEERING CORP. PART NUMBERS

CU-1167.....	0306	CU-9029.....	0107E-1	CU-20498.....	0107E-1	CU-24396.....	0306
CU-1690-41.....	0107E-1	CU-9030.....	0107E-1	CU-20559.....	0107E-1	CU-24914.....	0107E-1
CU-2019-C.....	0107E-1	CU-9031.....	0107E-1	CU-21481-U.....	0107E-1	CU-25107.....	0107E-1
CU-3765.....	0107E-1	CU-9032.....	0107E-1	CU-21495.....	0107E-1	CU-25110.....	0107E-1
CU-6104-U.....	0107E-1	CU-9033.....	0107E-1	CU-21495-R.....	0107E-1	CU-25128.....	0107E-1
CU-6489.....	0306	CU-9034.....	0107E-1	CU-21665.....	0306	CU-25156-U.....	0107E-1
CU-6490.....	0306	CU-9035.....	0107E-1	CU-21704.....	0107E-1	CU-25157-U.....	0107E-1
CU-7121.....	0107E-1	CU-9036.....	0107E-1	CU-21705.....	0107E-1	CU-25167-U.....	0107E-1
	0306	CU-9038.....	0107E-1	CU-21804.....	2203	CU-25168-U.....	0107E-1
CU-7613.....	0107E-1	CU-9039.....	0107E-1	CU-21806.....	0107E-1	CU-25170.....	0107E-1
CU-9003.....	0107E-1	CU-9053.....	0107E-1	CU-21807.....	0107E-1	CU-25171-U.....	0107E-1
CU-9004.....	0107E-1	CU-9055.....	0107E-1	CU-21808.....	0107E-1	CU-25174-U.....	0107E-1
CU-9005.....	0107E-1	CU-9059.....	0107E-1	CU-21864.....	0107E-1	CU-25175.....	0107E-1
CU-9006.....	0107E-1	CU-9060.....	0107E-1	CU-21997.....	0107E-1	CU-25180.....	0107E-1
CU-9007.....	0107E-1	CU-9063.....	0107E-1	CU-22149.....	0107E-1	CU-25208.....	0107E-1
CU-9008.....	0107E-1	CU-9065.....	0107E-1	CU-22533.....	0107E-1	CU-25209.....	0107E-1
CU-9009-R.....	0107E-1	CU-9068.....	0107E-1	CU-22534.....	0107E-1	CU-25336.....	0107E-1
CU-9010.....	0107E-1	CU-9072.....	0107E-1	CU-22535.....	0107E-1	CU-25337.....	0107E-1
CU-9011.....	0107E-1	CU-9073.....	0107E-1	CU-22612.....	0107E-1	CU-25338-U.....	0107E-1
CU-9012.....	0107E-1	CU-9077-U.....	0107E-1	CU-22806.....	0107E-1	CU-25349-U.....	0107E-1
CU-9013.....	0107E-1	CU-10636.....	0306	CU-22828.....	0107E-1	CU-25379.....	0107E-1
CU-9016.....	0107E-1	CU-11602.....	0107E-1	CU-22834.....	0107E-1	CU-25380.....	0107E-1
CU-9017.....	0107E-1	CU-11715.....	0107E-1	CU-22921.....	0107E-1	CU-25436-U.....	0107E-1
CU-9018.....	0107E-1	CU-20050-U.....	0107E-1	CU-22987.....	0107E-1	CU-25770.....	0107E-1
CU-9019.....	0107E-1	CU-20057-U.....	0107E-1	CU-23003.....	0306	CU-25821.....	0107E-1
CU-9020.....	0107E-1	CU-20059-U.....	0107E-1	CU-23004.....	0306	CU-F-136.....	0306
CU-9024.....	0107E-1	CU-20232.....	0107E-1	CU-23032.....	0107E-1	CU-F-359.....	0306
CU-9025.....	0107E-1	CU-20233.....	0107E-1	CU-23522.....	0107E-1	CU-F-609.....	0306
CU-9026.....	0107E-1	CU-20234.....	0107E-1	CU-23670.....	0107E-1	CU-F-745.....	0306
CU-9027.....	0107E-1	CU-20383.....	0107E-1	CU-23935.....	0107E-1	CU-F-1258.....	0306
CU-9028.....	0107E-1	CU-20458.....	0107E-1	CU-24123.....	0306		

CHEVROLET MOTOR DIV. (GENERAL MOTORS CORP.) PART NUMBERS

CV-3670300.....	1903A	CV-3671175.....	1903A	CV-3671339.....	1903A	CV-Q7673.....	0301C
-----------------	-------	-----------------	-------	-----------------	-------	---------------	-------

DELCO APPLIANCE CORP. PART NUMBERS

DA-501173.....	0611B-7	DA-5021932.....	0611B-1	DA-5038969.....	0611B-6	DA-5050827.....	0611A
DA-506319.....	0611A	DA-5024495.....	0611H-2	DA-5040353.....	0611A	DA-5051273.....	0611A
DA-103323.....	0611	DA-5025835.....	0611H-2	DA-5040671.....	0611D	DA-5052056.....	0611D
DA-103935.....	0611	DA-5025836.....	0611H-2	DA-5041521.....	0611D	DA-5053060.....	0611B-6
DA-106495.....	0611A	DA-5027412.....	0611H-1	DA-5043112.....	0611D	DA-5053123.....	0611A
DA-120371.....	0611	DA-5028997.....	0611H-1	DA-5043113.....	0611D	DA-5053455.....	0611D
DA-131890.....	0611A	DA-5029115.....	0611A	DA-5043114.....	0611D	DA-5053456.....	0611D
DA-131990.....	0611A	DA-5029129.....	0611A	DA-5043427.....	0611B-2	DA-5053614.....	0611D
DA-1996022.....	0611H-1	DA-5029134.....	0611A	DA-5043432.....	0611B-8	DA-5053967.....	0611D
DA-1996023.....	0611H-1	DA-5029139.....	0611	DA-5043433.....	0611B-8	DA-5054008.....	0611D
DA-5010077.....	0611H-2	DA-5029397.....	0611A	DA-5043434.....	0611B-8	DA-5054011.....	0611D
DA-5013523.....	0611H-1	DA-5029593.....	0611A	DA-5043441.....	0611B-2	DA-5054012.....	0611D
DA-5013533.....	0611H-1	DA-5031222.....	0611B-8	DA-5043451.....	0611B-4	DA-5054013.....	0611D
DA-5013543.....	0611H-1	DA-5031463.....	0611B-6	DA-5043456.....	0611B-1	DA-5054014.....	0611D
DA-5013955.....	0611H-1	DA-5033646.....	0611D	DA-5043460.....	0611B-2	DA-5054083.....	0611D
DA-5015815.....	0611H	DA-5033960.....	0611D	DA-5043461.....	0611E	DA-5054833.....	0611A
DA-5016383.....	0611H-2	DA-5035237.....	0611H-1	DA-5043485.....	0611B-2	DA-5054972.....	0611D
DA-5017183.....	0611A	DA-5035386.....	0611B-6	DA-5050412.....	0611D	DA-5055425.....	0611D
DA-5019237.....	0611A	DA-5036149.....	0611H-1	DA-5050415.....	0611D	DA-5056886.....	0611H-1
DA-5019859.....	0611H-1	DA-5036174.....	0611C	DA-5050416.....	0611D	DA-5057402.....	0611E
DA-5019969.....	0611H-2	DA-5036386.....	0611B-6	DA-5050417.....	0611D	DA-5059312.....	0611A
DA-5020141.....	0611H-2	DA-5037246.....	0611B-6	DA-5050418.....	0611D	DA-5060686.....	0611H-2
DA-5020423.....	0611H-2	DA-5038968.....	0611B-6	DA-5050826.....	0611A	DA-5061730.....	0611H-1

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
DELCO APPLIANCE CORP. PART NUMBERS (Contd)							
DA-5061871.....	0611H-1	DA-5066344.....	0611B-4	DA-5066452.....	0611	DA-5067545.....	0611A
DA-5061901.....	0611A		0611B-5	DA-5066472.....	0611H-1	DA-5067575.....	0611B-9
DA-5061999.....	0611H-1	DA-5066346.....	0611B-4	DA-5066474.....	0611H-1	DA-5067584.....	0611D
DA-5062179.....	0611H-1		0611B-5	DA-5066476.....	0611H-1	DA-5067585.....	0611D
DA-5062691.....	0611H-1	DA-5066347.....	0611H-1	DA-5066477.....	0611H-1	DA-5067596.....	0611H-1
DA-5063518.....	0611E	DA-5066348.....	0611H-1	DA-5066478.....	0611H-1	DA-5067597.....	0611H-1
DA-5063743.....	0611H-2	DA-5066349.....	0611B-4	DA-5066510.....	0611B-8	DA-5067598.....	0611H-1
DA-5064001.....	0611B-6	DA-5066350.....	0611B-4	DA-5066511.....	0611H-1	DA-5067599.....	0611
DA-5064005.....	0611B-2	DA-5066351.....	0611H-1	DA-5066514.....	0611A	DA-5067600.....	0611H-1
DA-5064016.....	0611B-2	DA-5066352.....	0611H-1	DA-5066519.....	0611	DA-5067605.....	0611D
DA-5064056.....	0611B-2	DA-5066353.....	0611B-4	DA-5066596.....	0611D		0611H-1
DA-5064385.....	0611H-1	DA-5066354.....	0611B-4	DA-5066769.....	0611H-1	DA-5067606.....	0611H-1
DA-5066008.....	0611H-2	DA-5066355.....	0611B-4	DA-5067388.....	0611E	DA-5067608.....	0611D
DA-5066265.....	0611H-3	DA-5066359.....	0611H-1	DA-5067390.....	0611E	DA-5067609.....	0611D
DA-5066306.....	0611B-1	DA-5066376.....	0611H-3	DA-5067392.....	0611E	DA-5067616.....	0611H-1
DA-5066309.....	0611C	DA-5066377.....	0611A	DA-5067393.....	0611E	DA-5067618.....	0611A
	0611D	DA-5066378.....	0611B-1	DA-5067395.....	0611E	DA-5067619.....	0611B-2
DA-5066310.....	0611D	DA-5066381.....	0611A	DA-5067397.....	0611E		0611B-4
DA-5066314.....	0611B-7	DA-5066382.....	0611A	DA-5067400.....	0611E	DA-5067641.....	0611
DA-5066315.....	0611B-1	DA-5066383.....	0611A	DA-5067401.....	0611E	DA-5067646.....	0611D
	0611B-2	DA-5066384.....	0611H-1	DA-5067403.....	0611E	DA-5067688.....	0611
DA-5066316.....	0611A	DA-5066386.....	0611	DA-5067410.....	0611E	DA-5067721.....	0611H-1
DA-5066318.....	0611H-1	DA-5066387.....	0611A	DA-5067434.....	0611H-1	DA-5067722.....	0611H-1
DA-5066320.....	0611H-1	DA-5066388.....	0611H-1	DA-5067435.....	0611H-1	DA-5067723.....	0611H-1
DA-5066321.....	0611H-1	DA-5066389.....	0611H-1	DA-5067436.....	0611H-1	DA-5067724.....	0611D
DA-5066327.....	0611H-1	DA-5066392.....	0611D	DA-5067438.....	0611D	DA-5067728.....	0611H-1
DA-5066329.....	0611H-1	DA-5066394.....	0611H-1	DA-5067439.....	0611H-1	DA-5067746.....	0611B-6
DA-5066330.....	0611B-6	DA-5066395.....	0611H-1	DA-5067440.....	0611	DA-5067754.....	0611B-1
DA-5066331.....	0611B-6	DA-5066396.....	0611H-1	DA-5067496.....	0611E	DA-5067765.....	0611B-8
DA-5066336.....	0611	DA-5066399.....	0611H-1	DA-5067497.....	0611	DA-5067770.....	0611H-1
DA-5066337.....	0611B-2	DA-5066400.....	0611H-1	DA-5067498.....	0611B-9	DA-5067778.....	0611H-1
	0611B-4	DA-5066402.....	0611D	DA-5067500.....	0611B-9	DA-5067854.....	0611H-1
DA-5066338.....	0611H-1	DA-5066406.....	0611A	DA-5067502.....	0611H-3	DA-5067855.....	0611B-1
DA-5066343.....	0611H-1	DA-5066417.....	0611H-1	DA-5067506.....	0611B-9		0611B-2
		DA-5066450.....	0611H-1	DA-5067507.....	0611B-9	DA-5067878.....	0611A

DELCO-REMY DIV. (GENERAL MOTORS CORP.) PART NUMBERS

DR-13929.....	0602	DR-106497.....	0601	DR-141541.....	0601	DR-826213.....	0604
DR-18195.....	0601B		0602	DR-188068.....	0601	DR-828448.....	0602
DR-18198.....	0601B		0604	DR-188069.....	0601	DR-831187.....	0601
DR-18201.....	0601B	DR-115607.....	0601	DR-188070.....	0601	DR-834231.....	0601
DR-18202.....	0601B	DR-115903.....	0602	DR-188310.....	0601		0601B
DR-18203.....	0601B	DR-116438.....	0604	DR-188317.....	0601	DR-834560.....	0601
DR-18204.....	0601B	DR-120217.....	0602	DR-188318.....	0601	DR-903201.....	0602
DR-18211.....	0601B	DR-120373.....	0601	DR-188720.....	0602	DR-903202.....	0602
DR-18212.....	0601B	DR-120381.....	0601	DR-188727.....	0602	DR-954143.....	0601
DR-20173.....	0601B	DR-120614.....	0604	DR-189743.....	0604	DR-954162.....	0602
DR-20987.....	0601B	DR-121841.....	0602	DR-802729.....	0601	DR-954243.....	0601
DR-22820.....	0601B	DR-122159.....	0604	DR-802730.....	0601	DR-954292.....	0602
DR-29991.....	0601B	DR-124543.....	0602	DR-802731.....	0601	DR-1106458.....	0100
DR-30986.....	0601B	DR-124548.....	0601	DR-802760.....	0601		0601
DR-37318.....	0601B	DR-132780.....	0604	DR-805790.....	0602	DR 1108682.....	0100
DR-37330.....	0601B	DR-132929.....	0602	DR-807295.....	0602		0602
DR-37335.....	0601B	DR-133418.....	0602	DR-809062.....	0601	DR-1115481.....	0604
DR-37336.....	0601B	DR-133633.....	0601	DR-810226.....	0602	DR-1118473.....	0601B
DR-37337.....	0601B	DR-134570.....	0602	DR-810794.....	0601B	DR-1118574.....	0601B
DR-37338.....	0601B	DR-135616.....	0602	DR-811450.....	0602	DR-1839041.....	0601B
DR-37339.....	0601B	DR-137141.....	0602	DR-812015.....	0602	DR-1839042.....	0601B
DR-001462.....	0611H-1	DR-137150.....	0602	DR-812016.....	0602	DR-1839044.....	0601B
DR-104916.....	0602	DR-138489.....	0602	DR-813731.....	0602	DR-1839110.....	0601B
DR-106495.....	0602	DR-138597.....	0601	DR-817363.....	0604		

Number	Group	Number	Group	Number	Group	Number	Group
DELCO-REMY DIV. (GENERAL MOTORS CORP.) PART NUMBERS (Contd)							
DR-1839111.....	0601B	DR-1886070.....	0601	DR-1887686.....	0602	DR-1887758.....	0602
	0613B	DR-1886071.....	0601	DR-1887687.....	0602	DR-1887759.....	0602
DR-1841953.....	0601B	DR-1886072.....	0601	DR-1887668.....	0602	DR-1887761.....	0602
DR-1842784.....	0601B	DR-1886073.....	0601	DR-1887689.....	0602	DR-1887762.....	0602
DR-1843160.....	0601B	DR-1886074.....	0601	DR-1887690.....	0602	DR-1887790.....	0602
DR-1850759.....	0601	DR-1886500.....	0602	DR-1887692.....	0602	DR-1888068.....	0601
DR-1850760.....	0601	DR-1886670.....	0601B	DR-1887693.....	0602	DR-1888069.....	0601
DR-1855685.....	0602	DR-1886686.....	0601	DR-1887694.....	0602	DR-1888070.....	0601
DR-1856494.....	0601	DR-1887322.....	0602	DR-1887695.....	0602	DR-1888073.....	0601
DR-1857107.....	0601	DR-1887323.....	0602	DR-1887696.....	0602	DR-1888105.....	0601B
DR-1857213.....	0601	DR-1887324.....	0602	DR-1887697.....	0602	DR-1888237.....	0601
DR-1857412.....	0601	DR-1887332.....	0602	DR-1887698.....	0602	DR-1888310.....	0601
DR-1859665.....	0601	DR-1887343.....	0602	DR-1887699.....	0602	DR-1888313.....	0601
DR-1861076.....	0602	DR-1887356.....	0602	DR-1887700.....	0602	DR-1888317.....	0601
DR-1861996.....	0601B	DR-1887416.....	0602	DR-1887701.....	0602	DR-1888319.....	0601
	0601B	DR-1887535.....	0602	DR-1887703.....	0602	DR-1888393.....	0602
DR-1861998.....	0604	DR-1887595.....	0601	DR-1887708.....	0602	DR-1888427.....	0601
DR-1864128.....	0601B	DR-1887634.....	0602	DR-1887709.....	0602	DR-1888444.....	0602
DR-1864129.....	0601B	DR-1887645.....	0602	DR-1887710.....	0602	DR-1888760.....	0601
	0601	DR-1887658.....	0602	DR-1887711.....	0602	DR-1888761.....	0601
DR-1864533.....	0602	DR-1887661.....	0602	DR-1887712.....	0602	DR-1888763.....	0601
DR-1866059.....	0601	DR-1887662.....	0602	DR-1887713.....	0602	DR-1889908.....	0601B
DR-1866970.....	0601	DR-1887663.....	0602	DR-1887714.....	0602	DR-1889909.....	0601B
DR-1869286.....	0601B	DR-1887664.....	0602	DR-1887715.....	0602	DR-1900316.....	0602
DR-1869730.....	0601	DR-1887665.....	0602	DR-1887716.....	0602	DR-1900318.....	0602
DR-1872057.....	0602	DR-1887666.....	0602	DR-1887717.....	0602	DR-1900333.....	0602
DR-1872430.....	0601B	DR-1887670.....	0602	DR-1887718.....	0602	DR-1901832.....	0601B
DR-1877700.....	0604	DR-1887672.....	0602	DR-1887719.....	0602	DR-1901834.....	0601B
DR-1879732.....	0604	DR-1887673.....	0602	DR-1887720.....	0602	DR-1901840.....	0601B
DR-1879743.....	0604	DR-1887674.....	0602	DR-1887721.....	0602	DR-1901842.....	0601B
DR-1879752.....	0604	DR-1887676.....	0602	DR-1887722.....	0602	DR-1901844.....	0601B
DR-1880423.....	0601B	DR-1887677.....	0602	DR-1887725.....	0602	DR-1901928.....	0601B
DR-1880425.....	0601B	DR-1887678.....	0602	DR-1887726.....	0602	DR-1901940.....	0602
	0601B	DR-1887679.....	0602	DR-1887727.....	0602	DR-1902086.....	0602
DR-1880426.....	0613B	DR-1887680.....	0602	DR-1887728.....	0602	DR-1902087.....	0602
DR-1880781.....	0601B	DR-1887681.....	0602	DR-1887729.....	0602	DR-1902090.....	0602
DR-1882949.....	0601	DR-1887682.....	0602	DR-1887730.....	0602	DR-5017850.....	0601
DR-1883864.....	0601	DR-1887683.....	0602	DR-1887753.....	0602		0602
DR-1886063.....	0601	DR-1887684.....	0602	DR-1887756.....	0602	DR-5024654.....	0601
DR-1886064.....	0601	DR-1887685.....	0602	DR-1887757.....	0602		

DOLE VALVE CO. PART NUMBERS

DV-BU000.....	0308A-1	DV-PR3-13.....	0308A-1	DV-PR3-24.....	0308A-1	DV-PR20-15.....	0308A-1
DV-BU010.....	0308A-1	DV-PR3-14.....	0308A-1	DV-PR3-26.....	0308A-1	DV-PR20-51.....	0308A-1
DV-BU110.....	0308A-1	DV-PR3-16.....	0308A-1	DV-PR3-50.....	0308A-1	DV-PR22-4.....	0308A-1
DV-BU200.....	0308A-1	DV-PR3-17.....	0308A-1	DV-PR3-52.....	0308A-1	DV-PR25-3.....	0308A-1
DV-BU210.....	0308A-1	DV-PR3-19.....	0308A-1	DV-PR3-55.....	0308A-1	DV-PR25-18.....	0308A-1
DV-PR3-4.....	0308A-1	DV-PR3-20.....	0308A-1	DV-PR3-56.....	0308A-1	DV-PR25-54.....	0308A-1
DV-PR3-5.....	0308A-1	DV-PR3-21.....	0308A-1	DV-PR8-27.....	0308A-1	DV-PR31.....	0308A-1
DV-PR3-10.....	0308A-1	DV-PR3-22.....	0308A-1	DV-PR16-11.....	0308A-1	DV-X4260.....	0308A-1
DV-PR3-12.....	0308A-1	DV-PR3-23.....	0308A-1	DV-PR20-13.....	0308A-1		

R. E. DIETZ CO. PART NUMBERS

DZ-A114.....	0607A	DZ-B150.....	0607	DZ-B585.....	0607	DZ-W988.....	0607
DZ-A440.....	0607	DZ-B364.....	0607	DZ-B608.....	0607	DZ-909P.....	0607
DZ-B126.....	0607	DZ-B482.....	0607	DZ-W985.....	0607		

EXIDE BATTERY (ELECTRIC STORAGE BATTERY CO.) PART NUMBERS

ES-3-DS-41-IR.... 0610

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

FOOD MACHINERY CORP. PART NUMBERS

FOM-P1.....	0203	FOM-P24.....	2601	FOM-P40.....	0107D	FOM-P49.....	0601B
	1008A	Cont'd	2603		0300		0901
	1304		0606C		0401		15C1-A
	1306		0606E		0606C		15D1
	1307		0611G		0610A		2602B
FOM-P2.....	1900A		0612	FOM-P41.....	0611	FOM-P50.....	1008A
	1900B		0709C		0901	FOM-P51.....	1008A
			0709D		1304		0203
			15C1-A		15D1		0601B
			1803B		1701		0606E
FOM-P3.....	1306	FOM-P25.....	1805H	FOM-P43.....	1800A	FOM-P52.....	0610B-1
FOM-P4.....	1306		1809		1801B		0713
FOM-P5.....	1008A		2012		1804		0901
FOM-P6.....	1008A		0606C		1805H		1008A
FOM-P7.....	1008A	FOM-P27.....	1800A		1906		1304
FOM-P8.....	1008A		0107D	FOM-P44.....	2601	FOM-P54.....	1306
FOM-P9.....	1307		0300		2602B		15C1-A
FOM-P10.....	1008A		0401		15C1-A		15C1-D
FOM-P11.....	1307		0606C		1805H		15D1
FOM-P12.....	1008A		0611		1805H		2602B
FOM-P13.....	0713		0901	FOM-P45.....	1902	FOM-P55.....	1304
FOM-P14.....	1008A		1304		0107B		0606C
FOM-P16.....	1008A		15D1		0107J		0606E
FOM-P17.....	1008A		1701		0300		0611
FOM-P18.....	15A1	FOM-P28.....	1800A		0304		0611G
FOM-P19.....	0203		1801B	FOM-P47.....	0500	FOM-P56.....	0709C
	0901		1804		0603A		0709D
	15A1		1805H		0606C		15C1-A
	15C1-A		1902		0611C		15D1
	15C1-B		1905-2		0611F		1805H
FOM-P21.....	15D1		2401	FOM-P48.....	0612	FOM-P57.....	1809
	2012		2601		0709		2012
	15A1		2602B		1801B		2208E
	1304		0401		2103A	FOM-P58.....	1303
	0606C		1800A		2401		15A1
FOM-P22.....	0606E	FOM-P29.....	1801B	FOM-P49.....	2603		1303
	0709C		1805H		0107B		15C1-A
	0709D		15D1		0107E-1		15D1
	1803B	FOM-P30.....	2210		0107J		1905-2
	1805H		1805H		0300	FOM-P59.....	1803C
FOM-P23.....	1809	FOM-P32.....	0606C	FOM-P50.....	0304		2208D
	0107B		1801B		0306		15C1-B
	0107E-1	FOM-P34.....	2602B		0500		1803C
	0107J		0107E-1		0605B		15C1-A
	0300		0306		0606C	FOM-P60.....	1803C
FOM-P24.....	0304		0605	FOM-P51.....	0611C		1805H
	0306		0605B		0611F		1303
	0401	FOM-P36.....	0606E		0612		1303
	0603A		1905-1		0709		2012
	0605B		1905-2	FOM-P52.....	0709D		1303
FOM-P25.....	0606C		2602C		0901	FOM-P61.....	1801B
	0608		2602D		15D1		0401
	0611C		2603		1801B		0300
	0611F		0606E		1804		1801B
	0612	FOM-P37.....	0107D		1805H	FOM-P62.....	15A1
FOM-P26.....	0709		0606C	FOM-P53.....	1809		15D1
	0709D		0611		1905-2		0601B
	0901A		1701		2103A		0606E
	1801B	FOM-P39.....	1801B		2401		2602B
	1805H		1804		2603		1304
FOM-P27.....	1809		1805H	FOM-P54.....	1008A	FOM-P63.....	15C1-B
	2012		2601		1008A		1304

Number	Group	Number	Group	Number	Group	Number	Group
FOOD MACHINERY CORP. PART NUMBERS (Contd)							
FOM-P79.....	0203 1304 15D1		0107E-1 0107J 0304	FOM-P203.....	0203 0709C		0606E 0608
FOM-P81.....	0605B 1304	FOM-P152.....	0306 0500 0605B 0612	FOM-P205.....	0203	FOM-P259-1.....	0612 1809
FOM-P86.....	1304		0709D 1801B 2601	FOM-P206.....	15D1		2602B 0606E 0608
FOM-P87.....	1307			FOM-P207.....	0203	FOM-P259-2.....	0612 1809
FOM-P88.....	1307			FOM-P208.....	0203		2602B 0601B
FOM-P89.....	1307				0203		0606E 0608
FOM-P90.....	1304			FOM-P209.....	1008A 1306		0612 1809
FOM-P91.....	1008A 1307	FOM-P154.....	0612	FOM-P211.....	15C1-A		2602B 0601B
FOM-P92.....	1304 1307	FOM-P157.....	0300	FOM-P212.....	0110	FOM-P260-1.....	0606E 1809
FOM-P94.....	1304	FOM-P158.....	0300	FOM-P213.....	0110		0601B 0606E
FOM-P95.....	0902	FOM-P159.....	0300	FOM-P214.....	0110		1809 0601B
FOM-P96.....	0901		0709C 15D1	FOM-P218.....	0301C 2208E	FOM-P260-2.....	0606E 1809
FOM-P97.....	0901	FOM-P160.....	1816 1905-1 2301A	FOM-P219.....	0301C	FOM-P262.....	1809
FOM-P98.....	0611C 0901	FOM-P161.....	0709D	FOM-P220.....	0301C	FOM-P263.....	2602C 2603
FOM-P101.....	2012 0110	FOM-P162.....	0107J 0304	FOM-P221.....	0300	FOM-P264.....	2603
FOM-P103.....	0110 1805H	FOM-P163.....	0107J 0304	FOM-P223.....	0300 0306 0601A 0601B	FOM-P265.....	0605
FOM-P105.....	1902	FOM-P164.....	0304	FOM-P224.....	0107E-1 0306 0107E-1	FOM-P266.....	0605
FOM-P106.....	2012 0703A	FOM-P165.....	0304 0709D		0306	FOM-P267.....	0605 0107J
FOM-P107.....	2012	FOM-P166.....	0304 0709D	FOM-P225.....	0306 0605 2602C 2603	FOM-P269.....	0605B 0709D
FOM-P108.....	2012	FOM-P167.....	0300			FOM-P271.....	0304
FOM-P109.....	2012	FOM-P168.....	030C	FOM-P226.....	15D1	FOM-P272.....	0304
FOM-P110.....	2012	FOM-P171.....	0304	FOM-P227.....	15C1-A	FOM-P275.....	0304
FOM-P111.....	2012	FOM-P172.....	0304	FOM-P228.....	15D1	FOM-P276.....	0304
FOM-P112.....	2012	FOM-P173.....	0304			FOM-P277.....	0304 0605B
FOM-P113.....	2012	FOM-P174.....	0304	FOM-P229.....	15C1-A 15D1		0304 0611C
FOM-P115.....	2012	FOM-P175.....	0304			FOM-P279.....	0304
FOM-P116.....	2012	FOM-P176.....	0304	FOM-P230.....	15D1	FOM-P280.....	0304
FOM-P117.....	1305		0304	FOM-P231.....	15C1-A	FOM-P281.....	0304
FOM-P119.....	0107D	FOM-P177.....	0611C 0709D	FOM-P232.....	15C1-A	FOM-P282.....	0306
FOM-P120.....	1803B		0304	FOM-P233.....	15C1-A	FOM-P283.....	0304
FOM-P126.....	15A1 15D1	FOM-P178.....	0304 0709D	FOM-P234.....	15C1-A	FOM-P285.....	0304
FOM-P127.....	1801C	FOM-P181.....	0304 0611C	FOM-P235.....	15C1-A	FOM-P287.....	0304
FOM-P128.....	1801C	FOM-P182.....	0304	FOM-P236.....	15C1-A	FOM-P288.....	0306 0605
	15C1-A	FOM-P184.....	0304	FOM-P237.....	15C1-B		15C1-A
FOM-P129.....	1805H 2208D	FOM-P185.....	0304	FOM-P239.....	15C1-B	FOM-P289.....	15D1 2012
FOM-P130.....	15C1-A 1805H	FOM-P186.....	0304				15C1-A
FOM-P131.....	15C1-A 1805H	FOM-P187.....	0304	FOM-P240.....	0107J 15D1 2301A	FOM-P291.....	15D1
FOM-P133.....	15A1 15D1	FOM-P189.....	0304 0709D				15C1-A
FOM-P134.....	15D1	FOM-P190.....	0713	FOM-P241.....	15D1	FOM-P292.....	0601
FOM-P135.....	15A1 15D1	FOM-P191.....	0713	FOM-P242.....	0611C	FOM-P295.....	15C1-A 15C1-B
FOM-P137.....	1800A	FOM-P192.....	0713	FOM-P243.....	0300		0604A
FOM-P138.....	0605C	FOM-P194.....	0713 1008A		0300	FOM-P296.....	0604A
FOM-P142.....	15D1	FOM-P195.....	0713	FOM-P244.....	0606C 2602B	FOM-P297.....	0604A
FOM-P147.....	1805H 1902		0300			FOM-P298.....	0604A
FOM-P149.....	0707	FOM-P196.....	0713 15D1	FOM-P251.....	1809	FOM-P299.....	0604A
FOM-P151.....	2208C		15A1	FOM-P252.....	0605C	FOM-P300.....	0604A
		FOM-P198.....	15D1	FOM-P254.....	2205	FOM-P301.....	0604A
			2208C	FOM-P255.....	2203	FOM-P302.....	0301C
		FOM-P201.....	15A1			FOM-P303.....	0110
				FOM-P256.....	0612 1809	FOM-P304.....	0601A
					0611G 1805	FOM-P305.....	0601A
				FOM-P257.....		FOM-P306.....	0601A
				FOM-P258.....	0605B	FOM-P307.....	0110

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
FOOD MACHINERY CORP. PART NUMBERS (Contd)							
FOM-P308.....	0110			FOM-P419.....	0608	FOM-P479.....	2301
FOM-P309.....	0601A				0611F	FOM-P481.....	2301
FOM-P310.....	0110	FOM-P364.....	0606C	FOM-P420.....	0606C	FOM-P482.....	2301
FOM-P311.....	0301C		2602B		1701	FOM-P483.....	2301
FOM-P312.....	0110		2602D	FOM-P421.....	1902	FOM-P484.....	2301
FOM-P313.....	0601A	FOM-P365.....	2210		1906	FOM-P485.....	2301
FOM-P314.....	0602		2602D		2603	FOM-P486.....	2301
FOM-P315.....	0601A	FOM-P367.....	2602B	FOM-P422.....	0610	FOM-P487.....	2301
FOM-P318.....	15C1-A		2602D		2603	FOM-P488.....	2301
FOM-P319.....	15C1-B	FOM-P368.....	0606E	FOM-P423.....	2603	FOM-P489.....	2301
FOM-P320.....	2301A	FOM-P368-1.....	0606E		0610	FOM-P490.....	2301
FOM-P321.....	2012	FOM-P368-2.....	0606E	FOM-P424.....	1701	FOM-P491.....	2301
FOM-P323.....	0107J	FOM-P369.....	0606C		1800A	FOM-P492.....	2301
FOM-P324.....	0107J	FOM-P370.....	0606C		1805H	FOM-P493.....	2301
FOM-P325.....	0107J	FOM-P371.....	0606C		2603	FOM-P494.....	2301
	0709D	FOM-P372.....	0606C	FOM-P426.....	2603	FOM-P495.....	2301
FOM-P326.....	0107J	FOM-P374.....	0608A	FOM-P427.....	2603	FOM-P496.....	2301
	0709D	FOM-P375.....	0607	FOM-P429.....	2603	FOM-P497.....	2301
FOM-P327.....	0107J	FOM-P376.....	0608A	FOM-P430.....	1804	FOM-P498.....	2301
FOM-P328.....	0107J	FOM-P378.....	0610	FOM-P432.....	2602B	FOM-P499.....	2301
FOM-P329.....	0107J	FOM-P381.....	0610	FOM-P435.....	0610B-2	FOM-P500.....	2301
	0709D		2602B	FOM-P436.....	0604	FOM-P501.....	2301
FOM-P330.....	0107J	FOM-P386.....	0304	FOM-P437.....	0601B	FOM-P502.....	2301
FOM-P331.....	0107J		0605B	FOM-P438.....	0110	FOM-P503.....	2301
FOM-P333.....	0107J	FOM-P387.....	0610	FOM-P440.....	15D1	FOM-P504.....	2301
FOM-P334.....	0107J		2603	FOM-P441.....	1817	FOM-P505.....	2301
FOM-P335.....	0107J	FOM-P391.....	0709D	FOM-P442.....	2301	FOM-P506.....	2301
	0709D	FOM-P392.....	0709D	FOM-P443.....	2301	FOM-P507.....	2301
FOM-P336.....	0107E-1	FOM-P393.....	0709D	FOM-P444.....	2301	FOM-P508.....	2301
FOM-P337.....	0107J		0605B	FOM-P445.....	2301	FOM-P509.....	2301
FOM-P338.....	0107J	FOM-P394.....	0611C	FOM-P446.....	2301	FOM-P510.....	2301
FOM-P339.....	0107J		0709D	FOM-P447.....	2301	FOM-P511.....	2301
	0611C	FOM-P396.....	0709D	FOM-P448.....	2301	FOM-P512.....	2301
FOM-P340.....	0107J	FOM-P398.....	0605B	FOM-P449.....	2301	FOM-P513.....	2301
FOM-P341.....	0107B		0709D	FOM-P450.....	2301	FOM-P514.....	2301
	0709	FOM-P399.....	1801B	FOM-P451.....	2301	FOM-P515.....	2301
FOM-P342.....	0107J	FOM-P402.....	0107J	FOM-P452.....	2301	FOM-P516.....	2301
FOM-P344.....	0107J		0605B	FOM-P453.....	2301	FOM-P519.....	2301
	0709D	FOM-P403.....	0607C	FOM-P454.....	2301	FOM-P520.....	2301
FOM-P345.....	0107J	FOM-P404.....	0607C	FOM-P455.....	2301	FOM-P521.....	2301
FOM-P347.....	2205	FOM-P405.....	0601B	FOM-P456.....	2301	FOM-P522.....	2301
FOM-P348.....	2205	FOM-P406.....	0606E	FOM-P457.....	2301	FOM-P523.....	2301
FOM-P349.....	2208E	FOM-P407.....	2602B	FOM-P458.....	2301	FOM-P524.....	2301
	2208H	FOM-P408.....	0901A	FOM-P459.....	2301	FOM-P525.....	2301
FOM-P350.....	2208E	FOM-P409.....	0605B	FOM-P460.....	2301	FOM-P526.....	2301
	0601B	FOM-P410.....	0304	FOM-P461.....	2301	FOM-P527.....	2301
FOM-P353-1.....	0606E		0605B	FOM-P462.....	2301	FOM-P528.....	2301A
	2602D	FOM-P411.....	0605B	FOM-P463.....	2301	FOM-P529.....	2301A
	0601B		0304	FOM-P464.....	2301	FOM-P530.....	2301A
FOM-P353-2.....	0606E	FOM-P412.....	0605B	FOM-P465.....	2301	FOM-P531.....	2402
	2602B		1805H	FOM-P466.....	2301	FOM-P532.....	2301A
	2602D	FOM-P413.....	0605B	FOM-P467.....	2301	FOM-P533.....	1905
FOM-P356.....	0610A		1304	FOM-P468.....	2301		2301A
FOM-P358.....	2602D	FOM-P414.....	0605B	FOM-P469.....	2301	FOM-P534.....	2301A
	2602B		0611C	FOM-P470.....	2301	FOM-P535.....	2301A
FOM-P359.....	2602D	FOM-P415.....	15C1-B	FOM-P471.....	2301	FOM-P536.....	2302B
	2602B	FOM-P416.....	2602B	FOM-P472.....	2301	FOM-P537.....	2602D
FOM-P360.....	2602D		2603	FOM-P473.....	2301	FOM-P538.....	0606C
FOM-P361.....	2602D		0606C	FOM-P474.....	2301		2602D
	0606C	FOM-P417.....	0606E	FOM-P475.....	2301		1816
	0606E		2602B	FOM-P476.....	2301	FOM-P539.....	1905-1
FOM-P363.....	2602B		2603	FOM-P477.....	2301		1905-2
	2602D	FOM-P418.....	2603	FOM-P478.....	2301		2602D

Number	Group	Number	Group	Number	Group	Number	Group
FOOD MACHINERY CORP. PART NUMBERS (Contd)							
FOM-P540.....	2602D	FOM-P607.....	0606C	FOM-P672.....	0606C	FOM-P784.....	0606
FOM-P541.....	2203		0606D	FOM-P675.....	15A1	FOM-P785.....	0606
FOM-P542.....	1800A		2603	FOM-P677.....	0107J	FOM-P786.....	0606
FOM-P543.....	1800A		0304	FOM-P684.....	1900	FOM-P788.....	0607B
FOM-P545.....	1902		0601B	FOM-P688.....	1903A		2302B
FOM-P548.....	1816	FOM-P608.....	0606C	FOM-P707.....	0611	FOM-P789.....	0607A
	1905-1		0606D	FOM-P713.....	2401	FOM-P790.....	0607A
FOM-P549.....	1816		0606E	FOM-P714.....	2401		2302B
	1905-1		0610B-2	FOM-P715.....	2401	FOM-P791.....	0606
FOM-P550.....	1905-1		2602D	FOM-P716.....	2401	FOM-P794.....	1804
FOM-P551.....	1816	FOM-P610.....	2603	FOM-P717.....	2401	FOM-P796.....	1803C
	1905-1		2602B	FOM-P718.....	2401	FOM-P798.....	1905-1
FOM-P552.....	1905-2	FOM-P611.....	0304	FOM-P719.....	2401		1905-2
	1816	FOM-P612.....	0304	FOM-P720.....	2401	FOM-P799.....	1816
FOM-P553-1.....	1905-1	FOM-P615.....	15A1	FOM-P721.....	2401		1905-1
	1905-2	FOM-P617.....	2301	FOM-P722.....	2401	FOM-P800.....	1816
FOM-P553-1.....	2602B	FOM-P619.....	2603	FOM-P723.....	2401		1905-1
FOM-P554.....	1805H	FOM-P620.....	2603	FOM-P724.....	2401	FOM-P801.....	1905-1
FOM-P555.....	1805H	FOM-P622.....	1803C	FOM-P725.....	2401		1905-2
FOM-P556.....	1803B		2302B	FOM-P726.....	2401	FOM-P803.....	1905-1
	1804	FOM-P623.....	0601B	FOM-P727.....	2401	FOM-P808.....	2402
FOM-P557.....	1803B		0606E	FOM-P728.....	2401	FOM-P818.....	2208F
	1804		0610B-1	FOM-P729.....	2401		2208H
FOM-P560.....	0601A	FOM-P624.....	2602B	FOM-P730.....	2401	FOM-P820.....	0107J
	0601B		1805H	FOM-P731.....	2401	FOM-P824.....	0605C
FOM-P561.....	1816	FOM-P626.....	2603	FOM-P732.....	2401	FOM-P825.....	0401
	1905-1	FOM-P628-1.....	0606E	FOM-P733.....	2401	FOM-P829.....	1905-2
FOM-P562.....	1905-2	FOM-P628-2.....	0606E	FOM-P734.....	2401	FOM-P830.....	1905-2
	1306	FOM-P630.....	0300	FOM-P735.....	2401	FOM-P834.....	1008A
FOM-P563.....	15A1	FOM-P631.....	15D1	FOM-P736.....	2401		1008A
	15C1-A	FOM-P632.....	0608	FOM-P737.....	2401	FOM-P836.....	1303
FOM-P564.....	15D1	FOM-P633.....	0608	FOM-P738.....	2401		1304
	15C1-A	FOM-P634.....	0608	FOM-P739.....	2401	FOM-P842.....	1900
FOM-P565.....	15D1	FOM-P636.....	0607B	FOM-P740.....	2401		0610A
	15C1-A	FOM-P637.....	0608	FOM-P741.....	2401	FOM-P843.....	0605B
FOM-P566.....	15D1		2602B	FOM-P742.....	2401	FOM-P844.....	2205
	15C1-A	FOM-P639.....	0608	FOM-P743.....	2401	FOM-P846.....	0601B
FOM-P567.....	0203	FOM-P641.....	0608	FOM-P744.....	2401		0606E
	0605B	FOM-P642.....	0608	FOM-P745.....	2401	FOM-P847.....	2602D
FOM-P569.....	0605B	FOM-P644.....	0608	FOM-P746.....	2401	FOM-P848.....	0606C
FOM-P570.....	0304	FOM-P645.....	0709D	FOM-P747.....	2401	FOM-P850.....	0606
FOM-P571.....	0304	FOM-P647.....	0107J	FOM-P748.....	2401		0606D
FOM-P572.....	1903A	FOM-P648.....	2205	FOM-P749.....	2401	FOM-P851.....	2203
FOM-P573.....	1900B	FOM-P649.....	2205	FOM-P750.....	2401		0606C
FOM-P576.....	1902	FOM-P651.....	15C1-B	FOM-P751.....	2401	FOM-P852.....	0606D
FOM-P577.....	1902	FOM-P652.....	0713	FOM-P752.....	2401		0606
FOM-P578.....	1900B		1304	FOM-P753.....	2401	FOM-P853.....	0606D
FOM-P580.....	1900B	FOM-P653.....	0612	FOM-P754.....	0300		0606E
FOM-P581.....	1307	FOM-P654.....	0611	FOM-P755.....	2402	FOM-P854.....	2203
	1900B	FOM-P655.....	0611C	FOM-P759.....	2302B		2602D
FOM-P584.....	1805H	FOM-P656.....	0611C	FOM-P760.....	1304	FOM-P855.....	0606
FOM-P594.....	2602B	FOM-P658.....	0611F	FOM-P762.....	2208D		0606C
FOM-P595.....	0606C	FOM-P660.....	0611F	FOM-P763.....	2208D	FOM-P858.....	0606E
	0607	FOM-P661.....	2603	FOM-P764.....	2208D		0601B
FOM-P596.....	0606C	FOM-P664.....	2602C	FOM-P765.....	2208D	FOM-P859.....	0606C
FOM-P597.....	0606C	FOM-P667.....	0611C	FOM-P770.....	0208B		0606E
FOM-P598.....	0606C	FOM-P668.....	15D1	FOM-P771.....	2401	FOM-P860.....	0606E
FOM-P599.....	0604	FOM-P669.....	2401	FOM-P773.....	2401		0606E
	0606C	FOM-P670.....	2301	FOM-P774.....	2401	FOM-P863.....	0606
FOM-P603.....	0604	FOM-P671.....	0500	FOM-P776.....	2401		0606C
	0606C		0606C	FOM-P779.....	0606D	FOM-P864.....	0606
FOM-P604.....	0605C	FOM-P671.....	1804	FOM-P781.....	0709D	FOM-P867.....	0606E
			1805H	FOM-P783.....	0606		

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

FOOD MACHINERY CORP. PART NUMBERS (Contd)

FOM-P870.....	0606	FOM-P1013-1.....	0601B	FOM-P1189.....	1816	FOM-P1473.....	1907
FOM-P871.....	0606	FOM-P1013-2.....	0601B	FOM-P1212.....	1905-1	FOM-P1480.....	2302B
FOM-P873.....	0606C	FOM-P1031.....	1906	FOM-P1213.....	1903A	FOM-P1490.....	1906
FOM-P874.....	0606C	FOM-P1038.....	1501	FOM-P1218.....	1805H	FOM-P1491.....	1907
FOM-P875.....	0606	FOM-P1084.....	1816	FOM-P1219.....	1903A	FOM-P1495.....	1906
FOM-P877.....	0606	FOM-P1085.....	1905-1	FOM-P1226.....	2201	FOM-P1495.....	1805H
FOM-P880.....	0606C	FOM-P1085.....	1905-2	FOM-P1227.....	2201C	FOM-P1502.....	1903A
FOM-P881.....	0606C	FOM-P1085.....	1816	FOM-P1228.....	1900	FOM-P1503.....	1907
FOM-P882.....	0606C	FOM-P1085.....	1905-1	FOM-P1229.....	1901A	FOM-P1504.....	1907
FOM-P883.....	0606C	FOM-P1085.....	1905-2	FOM-P1230.....	1903B	FOM-P1505.....	1906
FOM-P884.....	0606C	FOM-P1086.....	1905-2	FOM-P1231.....	1900	FOM-P1507.....	1903A
FOM-P885.....	0606	FOM-P1088.....	1816	FOM-P1236.....	1900	FOM-P1526.....	2302B
FOM-P885.....	0606E	FOM-P1088.....	1905-1	FOM-P1237.....	1900	FOM-P1541.....	2208F
FOM-P885.....	2602D	FOM-P1088.....	1905-2	FOM-P1238.....	1903A	FOM-P1575.....	1907
FOM-P886.....	0606	FOM-P1111.....	2209	FOM-P1239.....	2209	FOM-P1576.....	1805H
FOM-P887.....	0606E	FOM-P1112.....	2209	FOM-P1240.....	2201	FOM-P1588.....	2602B
FOM-P888.....	0606C	FOM-P1113.....	2201	FOM-P1241.....	2201C	FOM-P1589.....	2602B
FOM-P888.....	0606E	FOM-P1113.....	2201C	FOM-P1242.....	2201	FOM-P1590.....	2602B
FOM-P889.....	0606C	FOM-P1114.....	2201C	FOM-P1250.....	2201C	FOM-P1591.....	2602B
FOM-P890.....	0606C	FOM-P1115.....	2201	FOM-P1258.....	2201C	FOM-P1594.....	2208F
FOM-P891.....	0606C	FOM-P1116.....	2201C	FOM-P1259.....	2201C	FOM-P1594.....	2208H
FOM-P891.....	0713	FOM-P1117.....	2201C	FOM-P1260.....	2201C	FOM-P1603.....	2208F
FOM-P891.....	1008A	FOM-P1121.....	2201C	FOM-P1276.....	2201C	FOM-P1606.....	2602B
FOM-P891.....	1304	FOM-P1121.....	2201C	FOM-P1277.....	2201C	FOM-P1606.....	2602B
FOM-P891.....	1305	FOM-P1121.....	2201C	FOM-P1299.....	2201C	FOM-P3867A.....	15C1-B
FOM-P891.....	1306	FOM-P1121.....	2201C	FOM-P1307.....	2201C	FOM-P4400.....	2304P
FOM-P891.....	1307	FOM-P1121.....	2201C	FOM-P1318.....	2201C	FOM-P4401.....	2304P
FOM-P891.....	1900	FOM-P1126.....	2201C	FOM-P1320.....	2201C	FOM-P4402.....	1304
FOM-P891.....	1906	FOM-P1133.....	2201C	FOM-P1341.....	2201C	FOM-P4402.....	2304P
FOM-P900.....	0606C	FOM-P1134.....	2201C	FOM-P1343.....	2201C	FOM-P4405.....	2304P
FOM-P909.....	0308A-1	FOM-P1137.....	2201C	FOM-P1347.....	2201C	FOM-P4407.....	2304P
FOM-P910.....	1008A	FOM-P1149.....	2201C	FOM-P1348.....	2201C	FOM-P4409.....	2304P
FOM-P910.....	1304	FOM-P1150.....	2201C	FOM-P1350.....	2201C	FOM-P4600.....	2304P
FOM-P911.....	0612	FOM-P1165.....	2201C	FOM-P1353.....	2201C	FOM-P4601.....	2304P
FOM-P914.....	15C1-B	FOM-P1169.....	2201C	FOM-P1355.....	2201C	FOM-P4602.....	2304P
FOM-P915.....	2301	FOM-P1173.....	2201C	FOM-P1369.....	2201C	FOM-P4603.....	2304P
FOM-P917.....	2301	FOM-P1175.....	2201C	FOM-P1382.....	2201C	FOM-P4604.....	2304P
FOM-P920.....	2602B	FOM-P1176.....	2201C	FOM-P1384.....	2201C	FOM-P4704.....	2302B
FOM-P921.....	2402	FOM-P1177.....	2201C	FOM-P1411.....	2201C	FOM-P4719.....	2302B
FOM-P921.....	0500	FOM-P1178.....	2201C	FOM-P1412.....	2201C	FOM-P4904.....	0606C
FOM-P926.....	1805H	FOM-P1179.....	2201C	FOM-P1414.....	2201C	FOM-P4905.....	0606C
FOM-P926.....	1816	FOM-P1180.....	2201C	FOM-P1431.....	2201C	FOM-P4906.....	0606C
FOM-P926.....	1905-1	FOM-P1181.....	2201C	FOM-P1432.....	2201C	FOM-P4907.....	0606E
FOM-P928.....	1805H	FOM-P1182.....	2201C	FOM-P1434.....	2201C	FOM-P4908.....	0606E
FOM-P929.....	0606E	FOM-P1183.....	2201C	FOM-P1435.....	2201C	FOM-P4909.....	0606E
FOM-P929.....	2602D	FOM-P1185.....	2201C	FOM-P1436.....	2201C	FOM-2X1144C.....	1801B
FOM-P929.....	1307	FOM-P1186.....	2201C	FOM-P1442.....	2201C	FOM-2X1145C.....	1801B
FOM-P929.....	15C1-B	FOM-P1187.....	2201C	FOM-P1449.....	2201C	FOM-2X1166B.....	1809
FOM-P934.....	1906	FOM-P1188.....	2201C	FOM-P1460.....	2201C	FOM-2X1189A.....	1805H
FOM-P934.....	1907	FOM-P1188.....	2201C	FOM-P1461.....	2201C	FOM-2X1190B.....	1805H
FOM-P937.....	0300-1	FOM-P1188.....	2201C	FOM-P1462.....	2201C	FOM-2X1191B.....	1804
FOM-P938.....	0611F	FOM-P1188.....	2201C	FOM-P1463.....	2201C	FOM-2X1206A.....	1800A
FOM-P939.....	0611	FOM-P1188.....	2201C	FOM-P1464.....	2201C	FOM-2X1207A.....	1800A
FOM-P939.....	1303	FOM-P1188.....	2201C	FOM-P1465.....	2201C	FOM-2X1208A.....	1800A
FOM-P939.....	1304	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1253A.....	2208E
FOM-P939.....	15D1	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1254A.....	2208E
FOM-P939.....	1800A	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1255A.....	2210
FOM-P941.....	1805H	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1256A.....	2208E
FOM-P941.....	1905-2	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1257B.....	2208E
FOM-P941.....	1906	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1258B.....	2208H
FOM-P941.....	2208F	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1258B.....	2208H
FOM-P941.....	2208H	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1259B.....	2208E
FOM-P952.....	1800A	FOM-P1188.....	2201C	FOM-P1466.....	2201C	FOM-2X1259B.....	2208E

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

FOOD MACHINERY CORP. PART NUMBERS (Contd)

FOM-2X1271B...	1803C	FOM-2X1767B...	1805H	FOM-20X1642E...	1800A	FOM-21X1392B...	1902
FOM-2X1310B...	1803B	FOM-2X1771B...	1805H	FOM-20X1666D...	1801B	FOM-21X1393B...	1902
FOM-2X1311C...	1803B	FOM-2X1773B...	1805H	FOM-20X1667D...	1801B	FOM-21X1396B...	1805H
FOM-2X1312C...	1803B	FOM-2X1774B...	1805H	FOM-20X1672C...	1801B	FOM-21X1411B...	1905-1
FOM-2X1317DL...	1801B	FOM-2X1784B...	1902	FOM-20X1673C...	1801B	FOM-21X1443D...	0901A
FOM-2X1317DR...	1801B	FOM-2X1802B...	1801A	FOM-20X1693B...	1801B	FOM-21X1497B...	0612
FOM-2X1375C...	2012	FOM-2X1827B...	1801B	FOM-20X1694B...	0604A	FOM-21X1604B...	1801B
FOM-2X1377B...	1805H	FOM-2X1830B...	2208E		1801B	FOM-21X1670C...	0500
FOM-2X1378B...	1805H	FOM-2X1839B...	2602C	FOM-20X1712C...	0901A	FOM-21X1671C...	0500
FOM-2X1379B...	1805H	FOM-2X1840B...	1701	FOM-20X1714D...	2601	FOM-21X1702D...	0901A
FOM-2X1382B...	1805H	FOM-2X1841B...	1701	FOM-20X1715C...	1803B	FOM-21X1703D...	0901
FOM-2X1397B...	1805H	FOM-2X1847B...	1801B	FOM-20X1716C...	1804	FOM-21X1741D...	0901A
FOM-2X1400B...	1805H	FOM-2X1874B...	0611	FOM-20X1722C...	1803B	FOM-21X1758B...	1805H
FOM-2X1404B...	1805H	FOM-2X1875B...	0611C	FOM-20X1726C...	1803B	FOM-21X1772BR...	1805H
FOM-2X1409B...	1816	FOM-2X1876B...	0611F	FOM-20X1729D...	1803B		1902
	1905-1	FOM-2X1879B...	0611G	FOM-20X1732C...	1803B	FOM-21X1772B1...	1805H
FOM-2X1410B...	1816	FOM-2X1890B...	0401	FOM-20X1733D...	1803B	FOM-21X1778C...	1900B
	1905-1	FOM-2X1891B...	2301A	FOM-20X1740D...	0901A	FOM-21X1991D...	1906
FOM-2X1418B...	1801B	FOM-2X1916B...	0611F	FOM-20X1742CBL	0901A		2302B
FOM-2X1419C...	1801B	FOM-2X1917B...	0611F	FOM-20X1742CBR	0901A	FOM-21X2995...	0901A
FOM-2X1424B...	1805H	FOM-2X1918B...	0611F	FOM-20X1793D...	1803B	FOM-3B39B...	15C1-B
FOM-2X1425B...	1805H	FOM-2X1919B...	0611F	FOM-20X1796C...	1801B	FOM-3B41B...	15D1
FOM-2X1440B...	1805H	FOM-2X1920B...	0611F	FOM-20X1797C...	1801B	FOM-3B44C...	15C1-A
FOM-2X1500B...	0612	FOM-2X1921B...	0611F	FOM-20X1808C...	0613B		15D1
FOM-2X1503B...	0612	FOM-2X1927B...	0611F	FOM-20X1811C...	1801B	FOM-3B45C...	15D1
FOM-2X1516B...	1801C	FOM-2X1904B...	1900B	FOM-20X1811C-3	0306	FOM-3B46C...	15C1-A
FOM-2X1518B...	1801C	FOM-2X1930B...	1900B	FOM-20X1870D...	0611		15D1
FOM-2X1531BL...	1701	FOM-2X1931B...	1900B	FOM-20X1872B...	0611	FOM-3B54A...	15C1-A
FOM-2X1531BR...	1701	FOM-2X1932C...	1816	FOM-20X1873B...	0611		15D1
FOM-2X1532CL...	1701		1905-1	FOM-20X1884CL...	1801A	FOM-3B64B...	15D1
FOM-2X1532CR...	1701	FOM-2X1933C...	1816	FOM-20X1884CR...	1801A	FOM-3B67A...	15C1-A
FOM-2X1563B...	1801A		1905-1	FOM-20X1900C...	0610A	FOM-3B68A...	15C1-B
FOM-2X1570B...	1801C	FOM-2X1938B...	1902	FOM-20X1901B...	1306	FOM-3B69A...	15C1-A
FOM-2X1572B...	1801C	FOM-2X1956B...	1501	FOM-20X1912D...	0611G	FOM-3B70A...	15D1
FOM-2X1583C...	1801A	FOM-2X1958B...	1501	FOM-20X1914E...	2601	FOM-3B99A...	15D1
FOM-2X1584DL...	1701	FOM-2X1959B...	0611F	FOM-20X1922C...	1903B	FOM-3B100A...	15C1-A
FOM-2X1584DR...	1701	FOM-2X1973B...	1801B	FOM-20X1928D...	0611	FOM-3B37B...	0203
FOM-2X1596BL...	0107B	FOM-2X1975D...	1801B	FOM-20X1937B...	1902	FOM-3B38C...	0203
	0709	FOM-2X2371C...	1501	FOM-20X1940DL...	1701	FOM-3B102A...	0203
FOM-2X1596BR...	0107B	FOM-2X2404B...	1501	FOM-20X1940DR...	1701	FOM-3B131A...	0203
	0709	FOM-2X2405B...	1501	FOM-20X1965D...	1816	FOM-3B132A...	0203
FOM-2X1597BL...	0107B	FOM-2X2838B...	1816		1905-1	FOM-3B133A...	0203
	0709		1905-1	FOM-20X1971B...	0611	FOM-3B175C...	15C1-A
FOM-2X1597BR...	0107B	FOM-2X2931B...	2203	FOM-20X1985B...	0611B	FOM-3X1011A...	0107D
	0709	FOM-2X2940B...	1805	FOM-20X1987B...	0611	FOM-3X1016A...	0110
FOM-2X1640B...	1805H	FOM-2X2941B...	1805H	FOM-20X2410B...	1501	FOM-3X1026B...	15C1-A
FOM-2X1645C...	0606C	FOM-2X2946B...	1803B	FOM-20X2932E...	1800A		0100
FOM-2X1657B...	0606C	FOM-2X2996B...	1801B	FOM-20X2947B...	1803B	FOM-3X1037B...	0110
FOM-2X1658B...	1801B	FOM-2X3025B...	2208H	FOM-20X2990B...	1803B	FOM-3X1041B...	15D1
FOM-2X1668B...	0500	FOM-2X3027B...	2208H	FOM-20X3013D...	1803B	FOM-3X1042B...	15C1-A
FOM-2X1675C...	1801B	FOM-2X3028B...	2208H	FOM-20X3024CL...	1805H	FOM-3X1048B...	15D1
FOM-2X1707B...	0500	FOM-2X3029B...	2208H	FOM-20X3024CR...	1805H	FOM-3X1051A...	15D1
FOM-2X1713C...	2601	FOM-20X1007B...	1801A	FOM-20X3026B...	2208H	FOM-3X1052A...	15D1
FOM-2X1730B...	1803B	FOM-20X1064C...	15A1	FOM-20X3030...	2208F	FOM-3X1088D...	0301C
FOM-2X1731B...	1803B	FOM-20X1334B...	1801B	FOM-20X3030C...	2208C	FOM-3X1113B...	15C1-A
FOM-2X1749C...	1900B	FOM-20X1362B...	1801B	FOM-20X3031C...	2208F		15D1
FOM-2X1755B...	2103	FOM-20X1431D...	1801B	FOM-20X3031C-1...	2208F	FOM-3X1115B...	0301C
FOM-2X1761B...	2203	FOM-20X1438D...	1801B	FOM-21X1119C...	1805H	FOM-3X1121B...	15C1-A
FOM-2X1762B...	1805H	FOM-20X1593C...	0610A	FOM-21X1192D...	1805H	FOM-3X1122B...	15C1-A
FOM-2X1763B...	1805H	FOM-20X1608C...	1801B	FOM-21X1380B...	1805H	FOM-3X1123B...	15C1-A
FOM-2X1766BL...	1805H	FOM-20X1641CL...	1805H	FOM-21X1383B...	1805H	FOM-3X1129B...	15C1-A
FOM-2X1766BR...	1805H	FOM-20X1641CR...	1805H		1902	FOM-3X1149C...	0110

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
FOOD MACHINERY CORP. PART NUMBERS (Contd)							
FOM-3X1147C....	15D1	FOM-31X1022B...	15C1-A	FOM-4X1054B....	0709D	FOM-5X1039A....	1304
FOM-3X1149C....	0100	FOM-31X1024B...	15D1	FOM-4X1055B....	0709D	FOM-5X1040C....	1304
FOM-3X1151B....	15C1-A	FOM-31X1028B...	15D1	FOM-4X1056B....	0709D	FOM-5X1041C....	1304
FOM-3X1156B....	0107J	FOM-31X1032B...	0107D	FOM-4X1057B....	0709D	FOM-5X1043B....	1304
FOM-3X1158B....	0107J	FOM-31X1039D...	0107D	FOM-4X1058B....	0709D	FOM-5X1045B....	1304
FOM-3X1159B....	0107J	FOM-31X1040C...	15C1-A	FOM-4X1059B....	0709D	FOM-5X1046A....	1304
FOM-3X1160B....	0107J			FOM-4X1060B....	0709D	FOM-5X1047C....	1304
FOM-3X1161B....	0107J	FOM-31X1046D...	15D1	FOM-4X1061B....	0709D	FOM-5X1048D....	1008A
FOM-3X1166B....	15D1	FOM-31X1047C...	15D1	FOM-4X1067B....	2208D	FOM-5X1051B....	1304
FOM-3X1167B...	15C1-A	FOM-31X1060E...	0100	FOM-4X1070B....	2208D	FOM-5X1053B....	1304
	15D1	FOM-31X1060X...	0200	FOM-40X1048B...	0709D	FOM-5X1066C....	1305
FOM-3X1168B...	15C1-A	FOM-31X1103C...	15C1-A	FOM-40X1048B-1.	0709D	FOM-5X1069C....	1307
	15D1			FOM-40X1049B...	0709D	FOM-5X1070D....	1307
FOM-3X1169B....	15C1-A	FOM-31X1104D...	0203	FOM-40X1049B-1.	0709D	FOM-5X1072A....	1304
FOM-3X1173B....	0605B	FOM-31X1105E...	0110	FOM-40X1050B...	0709D	FOM-5X1074B....	1306
FOM-3X1184C....	0601A	FOM-31X1106B...	15C1-A	FOM-40X1050B-1.	0709D	FOM-5X1075B....	1306
FOM-3X1190B....	0605B	FOM-31X1140D...	0401	FOM-40X1051B...	0709D	FOM-5X1076A....	1306
FOM-3X1193BL...	2401	FOM-31X1165B...	0110	FOM-40X1051B-1.	0709D	FOM-5X1077A....	1306
FOM-3X1193BR...	2401	FOM-4A13C.....	1008A	FOM-40X1065C....	15A1	FOM-5X1080B....	1305
FOM-3X1202B....	15C1-B	FOM-4B5C.....	2012	FOM-40X1073E...	0706A	FOM-5X1081B....	1305
FOM-3X1204B...	15C1-A	FOM-4B7A.....	2012	FOM-41X1005B...	1008A	FOM-5X1082C....	1306
	15D1	FOM-4B8A.....	2012	FOM-41X1007B...	0709D	FOM-5X1083C....	1306
FOM-3X1209B....	2401	FOM-4B9A.....	2012	FOM-41X1009B...	0709D	FOM-5X1091B....	1305
FOM-3X1215B....	0402	FOM-4B10A....	2012	FOM-41X1028D...	2012	FOM-5X1099C....	1307
FOM-3X1216B....	0402	FOM-4B11A....	2012	FOM-41X1029D...	0901	FOM-5X1106B....	1008A
FOM-30X1015E...	0110	FOM-4B22A....	2012	FOM-41X1030D...	0901	FOM-5X1107B...	1305
FOM-30X1082C...	0203	FOM-4B35A....	2012	FOM-41X1033B...	0901		1501
FOM-30X1086B...	15C1-A	FOM-4B36A....	15A1	FOM-41X1062E...	0700	FOM-5X1112D....	1307
FOM-30X1111C...	15C1-B	FOM-4B37C....	15A1	FOM-41X1068E...	2208D	FOM-8X2018B...	2301
FOM-30X1112C...	15C1-A	FOM-4B38C....	15A1	FOM-41X1069B...	2208D	FOM-8X2019B...	2301
FOM-30X1116C...	0107E-1	FOM-4B39B....	15A1	FOM-5B2B.....	1305	FOM-8X2020B...	2301
FOM-30X1120B...	15C1-A	FOM-4B40B....	15A1	FOM-5B16B.....	1307	FOM-8X2021B...	2301
FOM-30X1120B-1.	15C1-A	FOM-4B41A....	15A1	FOM-5B17A.....	1307	FOM-8X2022B...	2301
FOM-30X1124B...	15D1	FOM-4B88A....	0709D	FOM-5B18C.....	1307	FOM-50X1042B...	1304
FOM-30X1125B...	15D1	FOM-4B93A....	0709D	FOM-5B38C.....	1303	FOM-50X1095C...	2301
FOM-30X1126B...	15D1	FOM-4B95A....	0709D	FOM-5B86A.....	1305	FOM-51X1001B...	1303
FOM-30X1127B...	15D1	FOM-41B42B...	15A1	FOM-5B87A.....	1305	FOM-51X1008A...	1303
FOM-30X1150B...	0606C	FOM-4X1001B...	1008A	FOM-5B108A....	1303	FOM-51X1024C...	1008A
FOM-30X1150B-1.	0606C	FOM-4X1006B...	0709D	FOM-5B138A....	1305	FOM-51X1035D...	1306
FOM-30X1162B...	0107J	FOM-4X1008B...	0709D	FOM-5B139A....	1305	FOM-51X1044C...	1304
FOM-30X1162B-1.	0107J	FOM-4X1013CL...	0713	FOM-5B151C....	1305	FOM-51X1050DR.	1304
FOM-30X1163B...	0107J	FOM-4X1013CR...	0713	FOM-5B157C....	1303	FOM-51X1054DL.	1304
FOM-30X1163B-1.	0107J	FOM-4X1014C....	0713	FOM-5B160A....	1303	FOM-51X1054DR.	1304
FOM-30X1164B...	0107J	FOM-4X1016C....	0901	FOM-5B162A....	1303	FOM-51X1071C...	1307
FOM-30X1164B-1.	0107J	FOM-4X1017C....	0901	FOM-5B163A....	1303	FOM-51X1073D...	1008
FOM-30X1174B...	0605B	FOM-4X1018C....	0901	FOM-5B164A....	1303	FOM-51X1084C...	1306
FOM-30X1174B-1.	0605B	FOM-4X1019C....	0901	FOM-5B165A....	1303	FOM-51X1085C...	1306
FOM-30X1175B...	0107J	FOM-4X1020B...	0901	FOM-5B166A....	1303	FOM-51X1089D...	1304
FOM-30X1175B-1.	0107J	FOM-4X1024B...	0901	FOM-5B1D.....	1305	FOM-51X1096D...	1305
FOM-30X1180D...	0603A	FOM-4X1025B...	0901	FOM-51B152C...	1303	FOM-51X1097C...	1305
FOM-30X1183C...	15C1-A	FOM-4X1026A...	0709D	FOM-51B156C...	1303	FOM-51X1098A...	1306
	15D1	FOM-4X1027A...	2012	FOM-51B158C...	1303	FOM-51X1101D...	1303
FOM-30X1186B...	15D1	FOM-4X1031E...	2012	FOM-51B167A...	1303	FOM-51X1111D...	1305
FOM-30X1187C...	15C1-A	FOM-4X1032B...	2012	FOM-5X110C....	1305	FOM-6X1021C....	0300
	15D1	FOM-4X1034B...	2012	FOM-5X1003A....	1303	FOM-6X1025B...	0300
FOM-30X1191C...	0306	FOM-4X1038B...	2208D	FOM-5X1023C....	1008A	FOM-6X1026B...	0300
FOM-30X1203C-1.	0601A	FOM-4X1042B...	0713	FOM-5X1025A....	1008A	FOM-6X1027B...	0300
FOM-30X1212B...	0107J	FOM-4X1043B...	0713	FOM-5X1031B...	1306	FOM-6X1030B...	0300
FOM-30X1212B-1.	0107J	FOM-4X1044B...	0713	FOM-5X1032B...	1306	FOM-6X1038B...	0300
FOM-30X1217B...	0402	FOM-4X1045B...	0713	FOM-5X1033C...	1306	FOM-6X1039B...	0300
FOM-31X1018C...	15C1-A	FOM-4X1052B...	0709D	FOM-5X1034C...	1306	FOM-6X1040B...	0300
FOM-31X1020B...	15D1	FOM-4X1053B...	0709D	FOM-5X1038A....	1304	FOM-6X1059B...	0300

Number	Group	Number	Group	Number	Group	Number	Group
FOOD MACHINERY CORP. PART NUMBERS (Contd)							
FOM-6X1060B...	0300	FOM-7X1065B...	0605C	FOM-70X1024D-3.	0608	FOM-70X1052E-19	0606
FOM-6X1064B...	0300	FOM-7X1066B...	2603	FOM-70X1024D-5.	0608	FOM-70X1053B...	2602D
FOM-6X1067B...	0304	FOM-7X1067B...	0606C	FOM-70X1024D-6.	0608	FOM-70X1057B...	2301
FOM-6X1075B...	0304	FOM-7X1069D...	0606E	FOM-70X1034E...	0606E	FOM-70X1063B...	0606C
FOM-6X1076B...	0304	FOM-7X1070B...	0610A	FOM-70X1036B...	2603	FOM-70X1064D-2.	0606E
FOM-6X1077B...	0304	FOM-7X1073B...	0604	FOM-70X1038E-1.	0606C	FOM-70X1074B...	0606C
FOM-6X1081B...	0304	FOM-7X1090B...	0606E	FOM-70X1038E-2.	0606C	FOM-70X1074B-1.	0606C
FOM-6X1082B...	0304		2602B	FOM-70X1038E-3.	0606C	FOM-70X1075B...	0606C
FOM-6X1088B...	0611C		2602D	FOM-70X1038E-4.	0606C		0611H-3
FOM-6X1098B...	0611C	FOM-7X1091B...	0606E	FOM-70X1038E-5.	0606C	FOM-70X1078B...	0606C
FOM-60X1004D...	0300		2602D	FOM-70X1038E-6.	0606C	FOM-70X1086B...	0606C
FOM-60X1046B...	0304	FOM-7X1095B...	0606E	FOM-70X1038E-7.	0606C	FOM-70X1086B-1.	0606C
FOM-60X1046B-1.	0304	FOM-7X1096B...	0606E	FOM-70X1038E-8.	0606C	FOM-70X1087B...	0606C
FOM-60X1047B-1.	0304	FOM-7X1110C...	2602B	FOM-70X1038E-9.	0606C	FOM-70X1087B-1.	0606C
FOM-60X1048B...	0304	FOM-7X1112B...	2602B	FOM-70X1038E-10	0606C	FOM-70X1092B...	0606E
FOM-60X1048B-1.	0304	FOM-7X1122B...	2602B	FOM-70X1038E-11	0606C	FOM-70X1093B...	0606C
FOM-60X1049B...	0304	FOM-70X1003C-1	0100	FOM-70X1038E-12	0606C	FOM-70X1097D...	0606E
FOM-60X1049B-1.	0304		0610B-1	FOM-70X1038E-13	0606C	FOM-70X1098B...	2602B
FOM-60X1050B...	0304	FOM-70X1003C-2	0100	FOM-70X1038E-14	0606C	FOM-70X1099C...	2602B
FOM-60X1050B-1.	0304		0604A	FOM-70X1038E-15	0606C	FOM-70X1100D...	2602D
FOM-60X1051B...	0304	FOM-70X1003C-3	0100	FOM-70X1038E-16	0606C	FOM-70X1102B...	2602D
FOM-60X1051B-1.	0304		0606C	FOM-70X1038E-17	0613F	FOM-70X1102B-1.	2602D
FOM-60X1053B...	0304	FOM-70X1003C-4	0100	FOM-70X1038E-18	0606C	FOM-70X1103C...	2602D
FOM-60X1053B-1.	0304		0604A	FOM-70X1038E-19	0613F	FOM-70X1104B...	0606C
FOM-60X1055B...	0300	FOM-70X1006C...	0606E	FOM-70X1038E-20	0613F	FOM-70X1104B-1.	0606C
FOM-60X1056B-1.	0300	FOM-70X1007B...	0606E	FOM-70X1038E-21	0606C	FOM-70X1109B...	0606C
FOM-60X1058BL...	0300	FOM-70X1008B...	0606E	FOM-	0606C	FOM-70X1111B...	2602B
FOM-60X1058BR...	0300	FOM-70X1009B...	0606E	70X1038E-22	0611H-3	FOM-70X1127B...	0606C
FOM-60X1063B...	0300	FOM-70X1011C...	2602D	FOM-70X1039B...	0610B-1	FOM-70X1127B-1.	0606C
FOM-60X1069D-1.	0304	FOM-70X1011C-1.	2602D	FOM-70X1040B...	0610B-1	FOM-70X1128B...	0606C
FOM-60X1069D-4.	0300	FOM-70X1011C-2.	2602D	FOM-70X1041C...	0607	FOM-70X1128B-1.	0606C
FOM-		FOM-70X1011C-3.	2602D	FOM-70X1041C-2.	0607	FOM-70X1129B...	0606C
60X1069DL-2...	0304	FOM-70X1011C-4.	2602D	FOM-70X1042C...	0607	FOM-70X1129B-1.	0606C
FOM-		FOM-70x1015E...	0601B	FOM-70X1042C-2.	0607	FOM-71X1035E...	0606E
60X1069DR-2...	0304	FOM-70X1015E-1.	0604	FOM-70X1043C...	2602B	FOM-71X1059D...	0606E
FOM-60X1073B...	0300-1	FOM-70X1016B...	2603	FOM-70X1048B...	2602B	FOM-71X1088C...	0606E
FOM-60X1074B...	0304	FOM-70X1017B...	2603	FOM-70X1049B...	2602B	FOM-71X1106D...	2602B
FOM-60X1074B-1.	0304	FOM-70X1018B...	2603	FOM-70X1051E...	0606E	FOM-71X1107C...	0606E
FOM-60X1085C...	0611C	FOM-70X1019B...	2603	FOM-70X1051E-2.	2203	FOM-8X1006B...	1809
FOM-60X1086B...	0611C	FOM-70X1020B...	2603	FOM-70X1051E-3.	2203	FOM-8X1012B...	0107J
FOM-60X1087B...	0611C	FOM-70X1021D...	0608	FOM-70X1051E-4.	0606E		0304
FOM-60X1097D...	0300	FOM-70X1021D-1.	0608	FOM-70X1051E-5.	2203		0606C
FOM-61X1029CL...	0300	FOM-70X1021D-2.	0608	FOM-70X1051E-7.	0606E		0611C
FOM-61X1029CR...	0300	FOM-70X1021D-3.	0608	FOM-70X1051E-8.	0606E	FOM-8X1013B...	2401
FOM-61X1032D...	0300	FOM-70X1021D-5.	0608	FOM-70X1051E-9.	0606		0605B
FOM-61X1032D-2.	0300	FOM-70X1021D-6.	0608	FOM-70X1051E-14	0606C		0606C
FOM-61X1032D-3.	0304	FOM-70X1023E...	0601B	FOM-70X1052E...	0606E		0709D
FOM-61X1032D-4.	0300	FOM-70X1023E-2.	0601B	FOM-70X1052E-1.	0606C	FOM-8X1014B...	2401
FOM-61X1032D-5.	0300	FOM-70X1023E-5.	2203	FOM-70X1052E-2.	0606C		0107B
FOM-61X1032D-6.	0300	FOM-70X1023E-8.	0601B	FOM-70X1052E-4.	0606C		0304
FOM-7X1012B...	2602D	FOM-70X1023E-10	0601B	FOM-70X1052E-5.	0606C		0611C
FOM-7X1013B...	2602D	FOM-70X1023E-11	0610B-1	FOM-70X1052E-6.	0606C	FOM-8X1016B...	0709D
FOM-7X1033B...	2602B	FOM-70X1023E-12	0610B-1	FOM-70X1052E-9.	0606C		0304
FOM-7X1050B...	2602B	FOM-70X1023E-13	0610B-1	FOM-70X1052E-10	0606C		0606C
	2602D	FOM-70X1023E-14	0604	FOM-70X1052E-11	0606C		0611F
FOM-7X1055B...	0606	FOM-70X1023E-17	0601B	FOM-70X1052E-12	0606C	FOM-8X1017B...	0107J
	0606D	FOM-70X1023E-18	0601B	FOM-70X1052E-13	0606C		0304
FOM-7X1056B...	0606	FOM-70X1023E-19	0601B	FOM-70X1052E-14	0606C		0606C
	0606D	FOM-70X1023E-20	0601B	FOM-70X1052E-15	0606C		2401
FOM-7X1060B...	2203	FOM-70X1024D...	0608	FOM-70X1052E-16	0606C	FOM-8X1018C...	2301
FOM-7X1061B...	0606D	FOM-70X1024D-1.	0608	FOM-70X1052E-17	0606C	FOM-8X1019B...	0304
FOM-7X1062B...	0606C	FOM-70X1024D-2.	0608	FOM-70X1052E-18	0606C		

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

FOOD MACHINERY CORP. PART NUMBERS (Contd)

FOM-8X1020B...	0605B 0709D 1304 2401	FOM-8X1051B...	0304 0605B 0300	FOM-8X2022B...	2301	FOM-81X1042B...	1809
FOM-8X1022B...	0304	FOM-8X1057C...	0300	FOM-80X1004C...	1809	FOM-9X1010B...	1900A
FOM-8X1023B...	0605B	FOM-8X1059B...	0107J	FOM-80X1024C...	2201	FOM-9X1011B...	1900A
FOM-8X1028B...	1809	FOM-8X1152C-1...	2603	FOM-80X1027B...	2301A	FOM-9X1012B...	1900A
FOM-8X1029B...	1809	FOM-8X1152C-2...	2603	FOM-80X1031D...	2301A	FOM-9X1013B...	1900B
FOM-8X1032B...	1809	FOM-8X1152C-3...	2603	FOM-80X1057B-1...	0300	FOM-9X1014B...	1900A
FOM-8X1033B...	2203	FOM-8X1152C-4...	2603	FOM-80X1158C...	2301	FOM-9X1015B...	1900B
FOM-8X1034B...	2203	FOM-8X1152C-5...	2603	FOM-80X1164B...	2201C 2302B	FOM-90X1007B...	1906
FOM-8X1036B...	0304	FOM-8X1152C-6...	2603	FOM-80X1271B...	2301	FOM-90X1021D...	1905-2
FOM-8X1038B...	0611C	FOM-8X1154B...	0605B	FOM-80X1373B...	0605B	FOM-90X1022D...	1906
FOM-8X1041B...	2603	FOM-8X1159B...	2301	FOM-80X1374B...	0605B	FOM-91X1001D...	1906
FOM-8X1043B...	1809	FOM-8X1160B...	0709D	FOM-80X1374B-1...	0605B	FOM-91X1019B...	1905-2
FOM-8X1048B...	0304 0606C 0611C	FOM-8X1165D...	2210	FOM-80X1376C...	2301A	FOM-91X1024B...	1906
FOM-8X1050B...	0605B	FOM-8X1272B...	2301	FOM-80X1378C...	2301	FOM-91X1026D...	1907
		FOM-8X2017B...	2301	FOM-80X1382D...	2301A	FOM-91X1028D...	1906
		FOM-8X2018B...	2301	FOM-80X2015C...	2301A	FOM-91X1057D...	1906
		FOM-8X2019B...	2301	FOM-80X2016C...	2301A	FOM-91X1070D...	1906
		FOM-8X2020B...	2301	FOM-81X1002D...	1809	FOM-91X1077D...	1907
		FOM-8X2021B...	2301	FOM-81X1035C...	1809		

GENERAL MOTORS CORP. PART NUMBERS

GM-100948.....	0613A	GM-113102.....	0613A 0613D	GM-120382.....	1903C 1903E	GM-123473.....	0613E
GM-102445.....	0611	GM-113111.....	0611	GM-120384.....	1903	GM-123520.....	1907
GM-102872.....	1903H	GM-113626.....	0611H-1	GM-120387.....	0611 1900A	GM-124058.....	1904
GM-103026.....	1903D	GM-113740.....	1904	GM-120388.....	2209	GM-124549.....	1903D
	0611A	GM-113818.....	0613A	GM-120391.....	0613D	GM-124925.....	1900-1
	0611B-2	GM-114350.....	0611A 0611B-7	GM-120392.....	0613E 1900 1902A	GM-127818.....	1903B
	0611B-3	GM-114353.....	0611E 0611A	GM-120393.....	1906 1904	GM-130614.....	0611H-1
GM-103319.....	0611B-7 0611D 0611E 0611H-1 0611H-2	GM-114354.....	0611B-2 0611B-3	GM-120394.....	0611B-1 0611B-2 0611H-1 1907	GM-131890.....	0611A
GM-103320.....	0611D	GM-114360.....	0611B-7	GM-120396.....	2209	GM-132121.....	0611H-1
GM-103321.....	0611H-1 1903D	GM-114407.....	1904	GM-120398.....	1904	GM-132135.....	0611H-1
GM-103325.....	1903A	GM-114422.....	1900A	GM-120585.....	1903	GM-132251.....	0611H-1
GM-103343.....	1903B	GM-114423.....	1904	GM-120614.....	0611H-1 0613D 1907	GM-132273.....	0611H-1
GM-103646.....	0611A	GM-114496.....	1903D	GM-120622.....	0611D 0611H-1	GM-132330.....	0611
GM-103711.....	0611E	GM-115529.....	1907	GM-120632.....	0611H-1	GM-132335.....	0611
GM-103891.....	1902A	GM-115543.....	0611D	GM-120677.....	1906	GM-132554.....	0611H-1
GM-103895.....	1903D	GM-115549.....	0611H-1	GM-120741.....	0613B	GM-132908.....	0613E 1906
GM-104227.....	1906	GM-115570.....	0611H-1	GM-120854.....	1903E	GM-132911.....	2209
GM-104952.....	1009	GM-116422.....	0613B 1900A	GM-121222.....	1903C	GM-133491.....	0613E
GM-106493.....	0611H-2	GM-117062.....	0611H-1	GM-121301.....	0613E	GM-133527.....	0611H-1
	0611A	GM-118557.....	0611H-1	GM-121797.....	0611	GM-133619.....	0611H-1
	0611D			GM-121801.....	0613D 1907 2209	GM-134512.....	1900A
GM-106495.....	0611H-1 0611H-2	GM-120214.....	0613E 1900A 1906	GM-121841.....	0611H-1	GM-134551.....	0611H-1
GM-106497.....	0611D 0611H-1	GM-120368.....	0613E 1906	GM-123435.....	0613F 1903F	GM-134561.....	0611H-1
GM-107762.....	1900-1 1900-2	GM-120371.....	1903D	GM-123450.....	0613C	GM-135705.....	0611
GM-108580.....	0611B-1 0611B-2	GM-120377.....	0611B-1 0611B-2			GM-137185.....	1903B 2218
GM-110597.....	1903B	GM-120382.....	0613F 1901 1901A			GM-138510.....	1903D
GM-110921.....	0611H-2					GM-138542.....	0613 2209
GM-110923.....	0611H-1					GM-138549.....	2209
GM-112726.....	1902A 1906					GM-138557.....	1903D
						GM-138647.....	1903E
						GM-140133.....	2203
						GM-141277.....	1903B
						GM-142555.....	0611D
						GM-144254.....	1900-1
						GM-145371.....	2203
						GM-173353.....	0611B-8

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

GENERAL MOTORS CORP. PART NUMBERS (Contd)

GM-175156.....	0611H-2	GM-179844.....	1903D	GM-190515.....	0613	GM-5276305.....	0613F
GM-177945.....	0611A	GM-181483.....	1903A	GM-190599.....	1907	GM-5276307.....	0613F
GM-178457.....	1906	GM-181698.....	1903A	GM-190599.....	2201C	GM-5276311.....	0613F
GM-178457.....	1907	GM-187130.....	1903A	GM-190927.....	1901A	GM-5276385.....	0613F
GM-178458.....	1906	GM-187130.....	1903B	GM-311907.....	1904	GM-5276386.....	0613F
GM-179838.....	1903D	GM-187130.....	1903D	GM-5276304.....	0613F	GM-5276653.....	0613F

GARLOCK PACKING CO. PART NUMBERS

GPC-182.....	0100	GPC-1945.....	1303	GPC-2154.....	1307	GPC-2873.....	1008A
GPC-182.....	0105B	GPC-1945.....	2012	GPC-2466.....	1008A	GPC-7063.....	0108A
GPC-243.....	0401						

GROOV-PIN CORP. PART NUMBERS

GRV-311.....	1501				
--------------	------	--	--	--	--

HYATT BEARINGS DIV. (GENERAL MOTORS CORP.) PART NUMBERS

HY-RA99044.....	0704C				
-----------------	-------	--	--	--	--

IMPERIAL BRASS MFG. CO. PART NUMBERS

IB-6776.....	0300-1	IB-33168.....	0300-1	IB-43690-2.....	0300-1	IB-43692-13.....	0300-1
IB-23318.....	0300-1	IB-37612.....	0300-1	IB-43692-3.....	0300-1	IB-43795-2.....	0300-1
IB-28333.....	0300-1	IB-37613.....	0300-1	IB-43692-5.....	0300-1	IB-44248-1.....	0300-1
IB-31336.....	0300-1	IB-37614.....	0300-1	IB-43692-7.....	0300-1	IB-44248-2.....	0300-1
IB-31340.....	0300-1	IB-37615.....	0300-1	IB-43692-8.....	0300-1	IB-44248-3.....	0300-1
IB-32670.....	0300-1	IB-43531-1.....	0300-1	IB-43692-9.....	0300-1		

KAUSTINE CO., INC. PART NUMBERS

KAS-KB2966-1.....	2208F	KAS-P11.....	2208F	KAS-P16.....	2208F	KAS-V37.....	2208F
KAS-KPSA4.....	2208F	KAS-P12.....	2208F	KAS-P17.....	2208F	KAS-V38.....	2208F
KAS-KPSA6.....	2208F	KAS-P13.....	2208F	KAS-P18.....	2208F	KAS-438A.....	2208F
KAS-KVSA5.....	2208F	KAS-P14.....	2208F	KAS-P20.....	2208F	KAS-V39.....	2208F
KAS-P9.....	2208F	KAS-P15.....	2208F	KAS-P40.....	2208F	KAS-V41.....	2208F
KAS-P10.....	2208F						

K-D LAMP CO. PART NUMBERS

KD-6018.....	0608				
--------------	------	--	--	--	--

LEACH RELAY CO. PART NUMBERS

LE-5038-NKE.....	0610B-2	LE-156112.....	0610B-2	LE-156117.....	0610B-2	LE-156125.....	0610B-2
LE-156108.....	0610B-2	LE-156113.....	0610B-2	LE-156120.....	0610B-2	LE-LC1901-2A-3A.....	0610B-2
LE-156109.....	0610B-2	LE-156114.....	0610B-2	LE-156121.....	0610B-2	LE-LC1901-4.....	0610B-2
LE-156110.....	0610B-2	LE-156115-N12.....	0610B-2	LE-156123.....	0610B-2	LE-LC1901-5.....	0610B-2
LE-156111.....	0610B-2	LE-156116-N12.....	0610B-2	LE-156124.....	0610B-2	LE-LC1901-6.....	0610B-2

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

MECHANICS UNIVERSAL JOINT CO. PART NUMBERS

MJ-6X45.....	0902	MJ-3542J.....	0902	MJ-6205J.....	0902	MJ-42-3805.....	0902
MJ-7X4.....	0902	MJ-3543J.....	0902	MJ-6295J.....	0208B	MJ-112-6000.....	0902
MJ-8X127.....	0902	MJ-3544J.....	0902	MJ-6504J.....	0902	MJ-113-5007.....	0902
MJ-328J.....	0902	MJ-3550J.....	0902	MJ-6506J.....	0703A	MJ-113-6001.....	0902
MJ-863J.....	0902	MJ-5785J.....	0902		2012		
MJ-2343A.....	0902						

MAGNAVOX CO. PART NUMBERS

MN-X700052.....	2602A	MN-X700072.....	2602C		
-----------------	-------	-----------------	-------	--	--

MARLIN-ROCKWELL CORP. PART NUMBERS

MRC-110R.....	1903A	MRC-206SF.....	1903A	MRC-7304.....	1903A	MRC-YZ-RQ41...	1903C
MRC-205S.....	1903A						

"MAZDA"—GENERAL ELECTRIC CO. PART NUMBERS

MZ-4531.....	0607A				
--------------	-------	--	--	--	--

NEW DEPARTURE MFG. CO. PART NUMBERS

ND-1213.....	1307	ND-3305.....	1306	ND-77603.....	2012	ND-88504.....	2012
ND-3201.....	0602	ND-7504.....	2208C	ND-77610-A.....	1900B	ND-AN-22.....	1008A
ND-3211.....	1303	ND-77512.....	2012	ND-88503.....	0601	ND-W-22.....	1008A

NAVY DEPARTMENT (BUREAU OF SHIPS) PART NUMBERS

NVS-9-S-4302-L-3..	2602B	NVS-COL-23355...	2602C	NVS-COL-47205...	2601	NVS-CMX-50128..	2602A
NVS-9-S-5161-L...	2602B	NVS-COL-46159...	2603	NVS-COL-52245...	2601	NVS-Model-TCS...	2601
NVS-COL-21881...	2601						

OILGEAR COMPANY PART NUMBERS

OG-20020.....	1903D	OG-45000.....	1903C	OG-214213.....	1903E	OG-214994.....	1903C
OG-25532.....	1903E	OG-54142.....	1903D	OG-214217...	1903E		1903E
OG-27027.....	1903E	OG-54143.....	1903D	OG-214219.....	1903E		1903F
OG-34755.....	1903E	OG-54344.....	1903E	OG-214223.....	1903E	OG-214995.....	1903E
OG-38392.....	1903D	OG-54377.....	1903F	OG-214277.....	1903E	OG-215000.....	1903D
OG-38393.....	1903D	OG-73999.....	1903D	OG-214322.....	1903E	OG-215036A.....	1903E
OG-38394.....	1903D	OG-205823.....	1903E	OG-214378.....	1903D	OG-215038.....	1903E
OG-38395.....	1903D	OG-214149.....	1903D	OG-214379.....	1903D	OG-215041.....	1903E
OG-38397.....	1903	OG-214150.....	1903D	OG-214382.....	1903D	OG-215046.....	1903E
OG-38554.....	1903F	OG-214151.....	1903D	OG-214383.....	1903D	OG-215181.....	1903D
OG-38556.....	1903D	OG-214153.....	1903E	OG-214384.....	1903D	OG-215182.....	1903D
OG-38743.....	1903E	OG-214154.....	1903E	OG-214388.....	1903	OG-215260.....	1903E
OG-38744.....	1903E	OG-214155.....	1903D	OG-214429.....	1903E	OG-215262.....	1903E
OG-38746.....	1903D	OG-214186.....	1903E	OG-214430.....	1903E	OG-215263.....	1903F
OG-38896.....	1903C	OG-214193.....	1903E	OG-214431.....	1903E	OG-215264.....	1903E
OG-38910.....	1903C	OG-214194.....	1903E	OG-214432.....	1903E	OG-215265.....	1903F
OG-38930.....	2203	OG-214196.....	1903E	OG-214433.....	1903F	OG-215267.....	1903E
OG-38948.....	1903E	OG-214201.....	1903E	OG-214435.....	1903E	OG-215268.....	1903E
OG-39077.....	1903E	OG-214208.....	1903E	OG-214436.....	1903E	OG-215269.....	1903E
OG-39112.....	1903E	OG-214209.....	1903E	OG-214602.....	1903D	OG-215270.....	1903E
OG-39162.....	1903C	OG-214210.....	1903E		1903E	OG-215272.....	1903E
OG-44966.....	1903E	OG-214211.....	1903E	OG-214992.....	1903E	OG-215273.....	1903E
OG-44999.....	1903C	OG-214212.....	1903E	OG-214993.....	1903E	OG-215274.....	1903E

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

OILGEAR COMPANY PART NUMBERS (Contd)

OG-215301.....	1903E	OG-215679.....	1903D	OG-216272.....	1903E	OG-217420.....	1903C
OG-215302.....	1903E	OG-215689.....	1903F	OG-216273.....	1903E	OG-217421.....	1903A
OG-215346.....	1903E	OG-215694.....	1903F	OG-216274.....	1903E	OG-217450.....	1903E
OG-215347.....	1903E	OG-215704.....	1903E	OG-216275.....	1903F	OG-217765.....	1903E
OG-215348.....	1903F	OG-215727.....	1903C	OG-216276.....	1903E	OG-218407.....	1903D
OG-215350.....	1903E	OG-215728.....	1903C	OG-216280.....	1903E	OG-L39152.....	1903C
OG-215351.....	1903E	OG-215733.....	1903C	OG-216306.....	1903E	OG-L39159.....	1903E
OG-215360.....	1903F	OG-215744.....	1903C	OG-216307.....	1903E	OG-L39333.....	1903E
OG-215394.....	1903C	OG-215747.....	1903E	OG-216401.....	1903C	OG-L39335.....	1903E
OG-215403.....	1903F	OG-215798.....	1903C	OG-216402.....	1903C	OG-L39337.....	1903E
OG-215408.....	1903C	OG-215799.....	1903C	OG-216416.....	1903F	OG-L39338.....	1903D
OG-215409.....	1903C	OG-215804.....	1903C	OG-216417.....	1903F	OG-L39339.....	1903D
OG-215410.....	1903C	OG-215818.....	1903E	OG-216418.....	1903F	OG-L44995.....	1903F
OG-215422.....	1903C	OG-215846.....	1903E	OG-216419.....	1903F	OG-L45003.....	1903C
OG-215424.....	1903C	OG-215989.....	1903D	OG-216458.....	1903C	OG-L45013.....	1903E
OG-215426.....	1903F	OG-216031.....	1903E	OG-216716.....	1903F	OG-L54145.....	1903D
OG-215572.....	1903E	OG-216162.....	1903E	OG-216852.....	1903C	OG-L73821.....	1903D
OG-215598.....	1903F	OG-216163.....	1903E	OG-216876.....	2203	OG-L73832.....	1903E
OG-215653.....	1903D	OG-216266.....	1903E	OG-216879.....	1903D	OG-L73836.....	1903C
OG-215656.....	1903D	OG-216267.....	1903E	OG-216882.....	1903C	OG-L73997.....	1903E
OG-215660.....	1903D	OG-216268.....	1903E	OG-217011.....	1903C	OG-L216269.....	1903E
OG-215661.....	1903D	OG-216270.....	1903E	OG-217083.....	2203	OG-L216277.....	1903E
OG-215667.....	1903D	OG-216271.....	1903E	OG-217380.....	1903E	OG-QH-406.....	1903D

PACKARD ELECTRIC DIV. (GENERAL MOTORS CORP.) PART NUMBERS

PC-5279035.....	0613	PC-X714.....	0305A		
-----------------	------	--------------	-------	--	--

PIERCE GOVERNOR CO. PART NUMBERS

PG-A1976.....	0305A	PG-G4058.....	0305	PG-G7059.....	0305A	PG-X461.....	{ 0305
PG-A1977.....	0305A	PG-G5294.....	0305	PG-G7069.....	0305A	PG-X532.....	0305A
PG-A1978.....	0305A	PG-G5295.....	0305	PG-G7070.....	0305A	PG-X532.....	0305
PG-A1979.....	0305A	PG-G5296M.....	0305	PG-G7071.....	0305A	PG-X540.....	0305
PG-A1980.....	0305A	PG-G5304.....	0305	PG-G7863.....	0305	PG-X581.....	{ 0305A
PG-A2159.....	0305	PG-G5701.....	0305A	PG-G7866.....	0305	PG-X581.....	2203
PG-A2160.....	0305	PG-G5829.....	0305	PG-G7875.....	0305	PG-X607.....	0305
PG-A2161.....	0305	PG-G5831.....	0305	PG-GC-309.....	{ 0100	PG-X689.....	0305
PG-A2181.....	0305	PG-G5833.....	0305	PG-GC-309.....	0305	PG-X713.....	0305A
PG-G157.....	0305	PG-G5834.....	0305	PG-SN142.....	0305A	PG-X824.....	0305
PG-G3098.....	0305	PG-G5835.....	0305	PG-SN189.....	0305	PG-X935.....	0305
PG-G3167.....	0305	PG-G5847M.....	0305	PG-X82.....	0305	PG-X945.....	0305A
PG-G3184.....	0305	PG-G6023.....	0305	PG-X247.....	0305	PG-X967.....	0305
PG-G3757.....	0305	PG-G6210.....	0305	PG-X317.....	0305	PG-X997.....	{ 0305
PG-G3770.....	0305	PG-G6211.....	0305	PG-X328.....	0305	PG-X997.....	0305A
PG-G3771.....	0305	PG-G6400.....	0305A	PG-X455.....	{ 0305A	PG-X1021.....	0305
PG-G3774.....	0305	PG-G6402.....	0305A	PG-X455.....	2203		
PG-G3775.....	0305	PG-G6888.....	0305				

PEERLESS PUMP DIV. (FOOD MACHINERY CORP.) PART NUMBERS

PP-V156D.....	2208C	PP-V160D.....	2208C	PP-V189.....	2208C	PP-V192.....	2208C
PP-V157A.....	2208C	PP-V161C.....	2208C	PP-V190.....	2208C	PP-V193.....	2208C
PP-V158A.....	2208C	PP-V162B.....	2208C	PP-V191.....	2208C	PP-V275-A.....	2208C
PP-V159B.....	2208C	PP-V170A.....	2208C				

ROLLWAY BEARING, INC. PART NUMBERS

RO-RA3240.....	0704C				
----------------	-------	--	--	--	--

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
SCINTILLA MAGNETO CO. PART NUMBERS							
SCI-2-65.....	0603A	SCI-2-327.....	0603A	SCI-10-2486.....	0603A	SCI-10-13332.....	0603A
SCI-2-138.....	0603A	SCI-2-339.....	0603A	SCI-10-2486Y.....	0603A	SCI-10-13373.....	0603A
SCI-2-139-1.....	0603A	SCI-2-350.....	0603A	SCI-10-2487.....	0603A	SCI-10-13374.....	0603A
SCI-2-139-2.....	0603A	SCI-2-403.....	0603A	SCI-10-2489Y.....	0603A	SCI-10-13400.....	0603A
SCI-2-139-3.....	0603A	SCI-2-440.....	0603A	SCI-10-2493.....	0603A	SCI-10-13591.....	0603A
SCI-2-139-4.....	0603A	SCI-2-462.....	0603A	SCI-10-2633.....	0603A	SCI-10-13637.....	0603A
SCI-2-139-5.....	0603A	SCI-2-463.....	0603A	SCI-10-2674.....	0603A	SCI-10-13638.....	0603A
SCI-2-139-6.....	0603A	SCI-2-514-1.....	0603A	SCI-10-2745Z.....	0603A	SCI-10-13722.....	0603A
SCI-2-140.....	0603A	SCI-2-514-2.....	0603A	SCI-10-3074.....	0603A	SCI-10-13723.....	0603A
SCI-2-141-1.....	0603A	SCI-2-514-3.....	0603A	SCI-10-3145Z.....	0603A	SCI-10-13773.....	0603A
SCI-2-141-2.....	0603A	SCI-2-514-4.....	0603A	SCI-10-3154-1.....	0603A	SCI-10-13774.....	0603A
SCI-2-141-3.....	0603A	SCI-2-514-5.....	0603A	SCI-10-3164.....	0603A	SCI-10-13775.....	0603A
SCI-2-141-4.....	0603A	SCI-2-514-6.....	0603A	SCI-10-3383.....	0603A	SCI-10-13776.....	0603A
SCI-2-141-5.....	0603A	SCI-2-514-7.....	0603A	SCI-10-3657.....	0603A	SCI-10-13777.....	0603A
SCI-2-141-6.....	0603A	SCI-2-514-8.....	0603A	SCI-10-3666.....	0603A	SCI-10-13778.....	0603A
SCI-2-145.....	0603A	SCI-2-514-9.....	0603A	SCI-10-3743.....	0603A	SCI-10-13779.....	0603A
SCI-2-146.....	0603A	SCI-2-514-10.....	0603A	SCI-10-3761Y.....	0603A	SCI-10-13780.....	0603A
SCI-2-150.....	0603A	SCI-2-514-11.....	0603A	SCI-10-4092.....	0603A	SCI-10-13897.....	0603A
SCI-2-152Z.....	0603A	SCI-2-532.....	0603A	SCI-10-4140.....	0603A	SCI-10-14119.....	0603A
SCI-2-158.....	0603A	SCI-2-545.....	0603A	SCI-10-4744.....	0603A	SCI-10-14856.....	0603A
SCI-2-164.....	0603A	SCI-2-628.....	0603A	SCI-10-4860.....	0603A	SCI-10-14857.....	0603A
SCI-2-167.....	0603A	SCI-2-782Z.....	2203	SCI-10-4861Z.....	0603A	SCI-10-16640.....	0603A
SCI-2-172.....	0603A	SCI-2-783.....	2203	SCI-10-4874.....	0603A	SCI-10-17983.....	0603A
SCI-2-176.....	0603A	SCI-2-965.....	0603A	SCI-10-5289-11.....	0603A	SCI-10-17983Y.....	0603A
SCI-2-177.....	0603A	SCI-10-528Z.....	0603A	SCI-10-5289-14.....	0603A	SCI-10-17991Y.....	0603A
SCI-2-181.....	0603A	SCI-10-600.....	0603A	SCI-10-5510Z.....	0603A	SCI-10-17992.....	0603A
SCI-2-182.....	0603A	SCI-10-1331.....	0603A	SCI-10-7308.....	0603A	SCI-10-17993.....	0603A
SCI-2-194.....	0603A	SCI-10-1338.....	0603A	SCI-10-7439.....	0603A	SCI-10-17994.....	0603A
SCI-2-205.....	0603A	SCI-10-1467.....	0603A	SCI-10-7445.....	0603A	SCI-10-17995.....	0603A
SCI-2-206.....	0603A	SCI-10-1525.....	0603A	SCI-10-7559Z.....	0603A	SCI-10-17996.....	0603A
SCI-2-220.....	0603A	SCI-10-1792-1.....	0603A	SCI-10-9373.....	0603A	SCI-10-18098.....	0603A
SCI-2-274.....	0603A	SCI-10-1792-2.....	0603A	SCI-10-9622.....	0603A	SCI-10-18099.....	0603A
SCI-2-281.....	0603A	SCI-10-1792-3.....	0603A	SCI-10-9624.....	0603A	SCI-10-20182.....	0603A
SCI-2-292Z.....	0603A	SCI-10-1792-4.....	0603A	SCI-10-9643.....	0603A	SCI-10-20223.....	0603A
SCI-2-295Z.....	0603A	SCI-10-1792-5.....	0603A	SCI-10-12647.....	0603A	SCI-10-20519.....	0100
SCI-2-318.....	0603A	SCI-10-1801.....	0603A	SCI-10-13328-1.....	0603A		0603A
SCI-2-319.....	0603A	SCI-10-1882A.....	0603A	SCI-10-13328-2.....	0603A	SCI-10-25118.....	0603A
SCI-2-321.....	0603A	SCI-10-1883A.....	0603A	SCI-10-13328-3.....	0603A	SCI-10-25725.....	0603A
SCI-2-322.....	0603A	SCI-10-1885.....	0603A	SCI-10-13328-4.....	0603A	SCI-10-27463.....	0603A
SCI-2-323.....	0603A	SCI-10-1890Z.....	0603A	SCI-10-13328-5.....	0603A	SCI-10-28908.....	0603A
SCI-2-324.....	0603A	SCI-10-2024.....	0603A	SCI-10-13329.....	0603A	SCI-10-28909.....	0603A
SCI-2-325.....	0603A	SCI-10-2148.....	0603A	SCI-10-13330.....	0603A	SCI-10-28988.....	0603A
SCI-2-326.....	0603A	SCI-10-2483Z.....	0603A	SCI-10-13331.....	0603A	SCI-10-55112.....	0603A

SHAKEPROOF LOCK WASHER CO. PART NUMBERS

SK-1203.....	SK-1214..... Cont'd	0107J	SK-1218.....	0606E	SK-1220..... Cont'd	1805H	
		0605B		0709C		2401	
SK-1206.....		0606C		0709D		2601	
		0608		15C1-A		2602B	
SK-1208.....		0612		1803B		0607	
		0709		1809		SK-1222.....	1008A
		0709D		2012		0601B	
		0901A		0107D		SK-1224.....	0606E
		1801B		0606C		2602B	
SK-1210.....		1805H		0611		SK-1228.....	15A1
		1809		0901		0709D	
		2012		1304		0901	
		2013A		15D1		15A1	
SK-1212.....		2401		1701		SK-1424.....	15C1-A
	2601	1800	15C1-B				
SK-1214.....	2603	1801B	15D1				
		1804	2012				

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

SKF INDUSTRIES, INC. PART NUMBERS

SKF-23122..... 1008A

STANLEY WORKS PART NUMBERS

SLY-245..... 2301

SLY-1012..... 2301

SPICER MFG. CORP. PART NUMBERS

SP-1-W..... 0701A	SP-89-39-12..... 0701	SP-89-102-2..... 0709D	SP-89-335-SP..... 0706A
SP-89-1-D..... 0701A	SP-89-39-16..... 0709D	SP-89-104-D..... 0701A	SP-89-336-SP..... 0704B
SP-89-1-G..... 0706A	SP-89-39-17..... 0709D	SP-89-118-1..... 0701A	SP-89-337-SP..... 0706A
SP-89-2-D..... 0705	SP-89-40-G..... { 0706A	SP-89-118-2..... 0701A	SP-89-338-SP..... 0704B
SP-89-3..... 0704B	1009	SP-89-118-3..... 0701A	SP-89-339-SP..... 0704B
SP-89-3-W..... { 0701A	SP-89-41-G..... 1008A	SP-89-155-1..... 0701A	SP-89-341-J..... 15A1
0705	SP-89-41-V..... 1003	SP-89-155-3..... 1008A	SP-89-342-J..... 0706A
SP-89-4-G..... 0706A	SP-89-43-G..... 0709A	SP-89-155-4..... 0701A	SP-89-343-J..... 0706B
SP-89-5-1..... 0704B	SP-89-47-2..... 0706A	SP-89-161-V..... 0701A	SP-89-344-J..... { 0701A
SP-89-5-2..... 1003	SP-89-60-1..... 1003	SP-89-163-J..... 0709D	0706B
SP-89-7-G..... 0701	SP-89-60-10..... 0709A	SP-89-163-V..... 0706B	SP-89-345-J..... 0704C
SP-89-8-1..... 1003	SP-89-65-1..... 15A1	SP-89-172-V..... 1008A	SP-89-346-J..... 1003
SP-89-8-5..... 0704B	SP-89-65-2..... 15A1	SP-89-180-V..... 1003	SP-89-347-J..... 1009
SP-89-8-7..... 0704B	SP-89-65-4..... 15A1	SP-89-183-V..... 0701A	SP-89-348-J..... 1003
SP-89-8-9..... 0704B	SP-89-66-1..... 0706C	SP-89-184-W..... 0703A	SP-89-348-1..... 15A1
SP-89-8-11..... 0704B	SP-89-66-3..... 0706C	SP-89-187-2..... 0704C	SP-89-348-3..... 15A1
SP-89-8-13..... 0704B	SP-89-66-5..... 0706C	SP-89-196-1..... 0704B	SP-89-348-5..... 15A1
SP-89-8-33..... 1008A	SP-89-67-1..... 0706B	SP-89-196-3..... 0704B	SP-89-349-J..... 1003
SP-89-8-34..... 1008A	SP-89-67-2..... 0706B	SP-89-203-1..... 0709D	SP-89-350-J..... 0703A
SP-89-8-48..... 1009	SP-89-67-3..... 0706B	SP-89-210-1..... 0704B	SP-89-351-J..... 0704A
SP-89-15-3..... 1003	SP-89-68-1..... 0709A	SP-89-210-2..... 1003	SP-89-352-J..... 1003
SP-89-16-G..... 1009	SP-89-69-6..... 0706A	SP-89-210-9..... 0709A	SP-89-354-J..... { 0706A
SP-89-16-3..... 0701A	SP-89-71-2..... 0709A	SP-89-215-2..... 0706A	1009
SP-89-16-6..... 1003	SP-89-72-2..... 0704B	SP-89-215-3..... 0706A	SP-89-354-1..... 0706B
SP-89-16-10..... 0701A	SP-89-72-3..... 0706B	SP-89-215-4..... 0706A	SP-89-355-J..... { 0706A
SP-89-19-1..... 0701A	SP-89-72-4..... 15A1	SP-89-223-1..... 0706B	1003
SP-89-19-3..... 0701A	SP-89-72-5..... 1009	SP-89-223-2..... 0701A	SP-89-356-J..... 1008A
SP-89-19-5..... 1003	SP-89-72-10..... 0709A	SP-89-223-3..... 0701A	SP-89-357-J..... 0704A
SP-89-19-7..... 1008A	SP-89-72-11..... 0706A	SP-89-223-4..... 0709D	SP-89-360-1..... 1003
SP-89-24-5..... 1008A	SP-89-75-1..... 0709B	SP-89-223-5..... 0709A	SP-89-362-1..... 0704A
SP-89-24-17..... 1009	SP-89-76-1..... { 0703A	SP-89-223-6..... 1008A	SP-89-364-SP..... 0709A
SP-89-24-18..... 1009	0704A	SP-89-227-R..... 1009	SP-89-370-J..... 1008A
SP-89-24-19..... 1003	SP-89-76-2..... 0704A	SP-89-228-1..... 1003	SP-89-380-J..... 0709D
SP-89-24-20..... 1003	SP-89-76-3..... { 1003	SP-89-228-2..... 1003	SP-89-381-2..... 0704C
SP-89-27-G..... { 1003	1008A	SP-89-228-3..... 1003	SP-89-381-3..... 0703A
1009	SP-89-76-4..... 0704C	SP-89-228-5..... 1003	SP-89-381-4..... 0704B
SP-89-30-G..... 0703A	SP-89-76-5..... 1003	SP-89-228-6..... 1003	SP-89-381-9..... 0709A
SP-89-30-1..... 0703A	SP-89-76-6..... 0704C	SP-89-228-15..... 0706B	SP-89-411-3..... 1008A
SP-89-31-G..... 1003	SP-89-76-7..... 0703A	SP-89-228-16..... 1003	SP-89-411-5..... 1008A
SP-89-37-1..... 0704B	SP-89-76-8..... 0704C	SP-89-236-J..... 0709B	SP-89-415-2..... 0701
SP-89-37-2..... 0704B	SP-89-76-9..... 1008A	SP-89-239-6..... 1009	SP-89-427-5..... 0701
SP-89-37-3..... 0704B	SP-89-76-10..... 1008A	SP-89-267-W..... 0709B	SP-89-439-1..... 15A1
SP-89-37-4..... 0704B	SP-89-76-11..... 1008A	SP-89-275-W..... 0704A	SP-89-452-1..... 0705
SP-89-37-5..... 0704B	SP-89-80-1..... 0706B	SP-89-282-1..... 1307	SP-89-453-1..... 0705
SP-89-37-6..... 0704B	SP-89-80-2..... 0706B	SP-89-289-W..... 0704C	SP-89-454-1..... 0705
SP-89-37-7..... 0704B	SP-89-83-W..... { 0701A	SP-89-326-SP..... 1008A	SP-89-459-D..... { 0706A
SP-89-37-8..... 1008A	0706A	SP-89-327-SP..... 1003	15A1
SP-89-37-18..... 0704B	0706B	SP-89-328-SP..... 1009	SP-89-459-1..... 0706B
SP-89-37-19..... 0704B	15A1	SP-89-329-SP..... 1009	SP-89-463-1..... 0701A
SP-89-39-5..... 0701	SP-89-96-1..... 0701A	SP-89-331-SP..... 0701A	SP-89-463-2..... 1008A
SP-89-39-6..... 0701	SP-89-96-2..... 0701A	SP-89-332-SP..... 1009	SP-89-463-3..... 1008A
SP-89-39-7..... 0701	SP-89-96-3..... 0701A	SP-89-333-SP..... 1009	SP-89-463-13..... 1009
SP-89-39-8..... 0701	SP-89-102-1..... 0701	SP-89-334-SP..... 1009	SP-89-465-1..... 0704B

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

SPICER MFG. CORP. PART NUMBERS (Contd)

SP-89-465-2.....	0704B	SP-89-527-3.....	0706A	SP-89-834-D.....	0706B	SP-89-5958-X.....	1008A
SP-89-466-1.....	0704B	SP-89-528-1.....	1009	SP-89-835-D.....	0706B	SP-89-6033-X.....	1003
SP-89-475-1.....	0705	SP-89-529-2.....	0709D	SP-89-836-D.....	0706A	SP-89-6059-X.....	0709A
SP-89-476-1.....	0706B	SP-89-530-2.....	0709B	SP-89-837-D.....	0706A	SP-89-6062-X.....	0709D
SP-89-480-1.....	0709D	SP-89-532-1.....	15A1	SP-89-838-D.....	1009	SP-89-6063-X.....	0709B
SP-89-482-1.....	0704B	SP-89-533-1.....	15A1	SP-89-839-D.....	1003	SP-89-6106-X.....	0709B
SP-89-482-2.....	0704B	SP-89-535-1.....	0705	SP-89-840-D.....	0706B	SP-89-6136-X.....	0709B
SP-89-482-3.....	0704B	SP-89-542-1.....	0709A	SP-89-842-D.....	0701A	SP-89-6190-X.....	0701
SP-89-486-1.....	1009	SP-89-543-1.....	0709A		1008A	SP-89-6234-X.....	1003
SP-89-486-3.....	1009	SP-89-583-D.....	0706C	SP-89-843-D.....	1008A	SP-89-6235-X.....	1003
SP-89-487-1.....	0704C	SP-89-586-5.....	1009	SP-89-847-D.....	15A1	SP-89-6258-X.....	0706A
SP-89-487-2.....	0701	SP-89-674-W.....	1003	SP-89-849-D.....	0701A	SP-89-6259-X.....	0706A
SP-89-487-3.....	0701	SP-89-675-W.....	0704B	SP-89-850-D.....	0701A	SP-89-6272-X.....	15A1
SP-89-487-5.....	0701	SP-89-676-W.....	1009	SP-89-898-D.....	0709A	SP-89-6288-X.....	1008A
SP-89-487-6.....	0701	SP-89-677-W.....	0704B	SP-89-899-D.....	0709A	SP-89-6290-X.....	0706A
SP-89-487-12.....	0701	SP-89-678-W.....	0704B	SP-89-900-D.....	0709D	SP-89-6341-X.....	1008
SP-89-489-1.....	15A1	SP-89-679-W.....	1003	SP-89-901-D.....	0709D	SP-89-6342-X.....	1008
SP-89-494-1.....	0704B	SP-89-680-W.....	1003	SP-89-908-D.....	0709A	SP-89-6368-X.....	15A1
SP-89-494-2.....	0704B	SP-89-681-W.....	15A1	SP-89-975-D.....	1009	SP-89-6412-X.....	1009
SP-89-496-1.....	0704C	SP-89-683-W.....	15A1	SP-89-5740-X.....	0701	SP-89-LW-1.....	0706B
SP-89-496-2.....	1008A	SP-89-704-W.....	0704A	SP-89-5758-X.....	1009		0706C
SP-89-496-4.....	1008A	SP-89-747-W.....	0709A	SP-89-5762-X.....	0704B		0709A
SP-89-501-7.....	0709A	SP-89-759-W.....	0709B	SP-89-5763-X.....	0704B		0709B
SP-89-501-8.....	0709A	SP-89-768-W.....	0709A	SP-89-5863-X.....	1003		0709C
SP-89-504-1.....	1009	SP-89-769-W.....	0709B	SP-89-5901-X.....	0701		1003
SP-89-506-1.....	1009	SP-89-831-D.....	1003	SP-89-5902-X.....	0701		1008A
SP-89-514-SP.....	1009	SP-89-833-D.....	0706A	SP-89-5903-X.....	1002	SP-89-LW-2.....	0709D
SP-89-527-1.....	0706A						

SPRAGUE SPECIALTIES CO. PART NUMBERS

SPR-5282.....	2603	SPR-5283.....	2602B	SPR-5284.....	0606E	SPR-5285.....	0601B
---------------	------	---------------	-------	---------------	-------	---------------	-------

SAGINAW STEERING GEAR DIV. (GENERAL MOTORS CORP.) PART NUMBERS

SSG-256853.....	1903D	SSG-259782.....	1903D	SSG-261882.....	1903D	SSG-262567.....	1903D
SSG-259255.....	1903D	SSG-261866.....	1903D	SSG-262566.....	1903D	SSG-268680.....	1903D
SSG-259265.....	1903D						

STEWART-WARNER CORP. PART NUMBERS

SW-770-F.....	2205	SW-65600.....	2205	SW-103305.....	0705	SW-442148.....	0605
SW-44122.....	0605	SW-65950.....	0705	SW-440097.....	0605	SW-P34671.....	0705

THOMAS & BETTS CO. PART NUMBERS

TB-B5.....	0606C 2602B 2602D	TB-B43.....	0606C	TB-B87.....	0604 0606C	TB-D73.....	0606C
TB-B12.....	2602B	TB-B71.....	0604 0606C	TB-C26.....	2603	TB-F26.....	2603
TB-B33.....	0606C 0607	TB-B86.....	0606C	TB-C71.....	2603	TB-F71.....	2603
				TB-C77.....	2603	TB-G71.....	0606C
				TB-D71.....	0606C	TB-G72.....	0606C

TORRINGTON CO. PART NUMBERS

TR-B-1012X.....	1903A						
-----------------	-------	--	--	--	--	--	--

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

TRU-STOP (AMERICAN CHAIN & CABLE CO.) PART NUMBERS

TRU-RA965-1.....	15C1-B	TRU-RA2133-10...	15C1-B	TRU-RA2251-1....	15C1-B	TRU-RA2251-11...	15C1-B
TRU-RA2133-9....	15C1-B	TRU-RA2239.....	15C1-B	TRU-RA2251-9....	15C1-B	TRU-SA2321-E-3..	15C1-B

TRADE-WIND MOTORFANS, INC. PART NUMBERS

TWF-A189.....	0612	TWF-A193.....	0612	TWF-B196.....	0612	TWF-E200.....	0612
TWF-A191.....	0612	TWF-B173-2.....	0612	TWF-B197.....	0612	TWF-E200-18....	0612
TWF-A192.....	0612	TWF-B192.....	0612				

UNIVERSAL OIL—SEAL CO. PART NUMBERS

UN-208.....	1008A				
-------------	-------	--	--	--	--

VORTOX MFG. CO. PART NUMBERS

VR-676.....	0301C	VR-6546.....	0301C	VR-6558.....	0301C	VR-6626.....	0301C
VR-3520D.....	0301C	VR-6547.....	0301C	VR-6615.....	0301C	VR-6631.....	0301C
VR-3530D.....	0301C	VR-6557.....	0301C	VR-6618.....	0301C		

WESTINGHOUSE ELECTRIC & MFG. CO. PART NUMBERS

WE-67.....	0607B				
------------	-------	--	--	--	--

WEATHERHEAD CO. PART NUMBERS

WH-8105X6.....	1903E	WH-8305X2C.....	0304	WH-8455X6.....	1903F	WH-281131.....	0107J
WH-8105X14.....	0709D	WH-8305X3C.....	0304	WH-8455X8.....	0304		0605B
WH-8155X14.....	0709D	WH-8305X4C.....	0605B	WH-8455X14.....	0709D	WH-281132.....	0304
WH-8165X6.....	1903E	WH-8305X14C.....	0709D	WH-8455X14C.....	0107J		0709D
WH-8205X2C.....	0304	WH-8355X4.....	0107J	WH-8505X14C...	0107J	WH-281133.....	0107J
	0605B	WH-8355X6.....	1903D		0709D		0304
WH-8205X3C.....	0304	WH-8355X8.....	0304	WH-8605X6.....	1903E	WH-281135.....	0107J
	0611C	WH-8405X2C.....	0304	WH-8655X6.....	1903E	WH-281140.....	0304
WH-8205X4.....	1304	WH-8405X4.....	0605B	WH-64544.....	2401	WH-281143.....	0304
WH-8205X4C.....	0605B		0611C	WH-281120.....	0304	WH-281146C.....	0709D
WH-8205X6.....	0709D	WH-8405X6.....	0611C	WH-281122.....	0304	WH-281147.....	0605B
	1903F		1903E		0709D	WH-281147C.....	0709D
WH-8205X6C.....	0709D	WH-8405X8.....	0107J	WH-281123.....	0107J	WH-281149.....	0107J
WH-8205X8.....	0304	WH-8405X8C.....	0107J		0304		0107J
WH-8205X8C.....	0107J	WH-8405X14.....	0107J	WH-281125.....	0107J	WH-281166.....	0605B
WH-8205X14C.....	0107J		0107J		0709D		0709D
WH-8255X3.....	0611C	WH-8405X14C...	0709D			WH-27228X16...	0304
WH-8255X14C.....	0107J						

WILCOX-RICH DIV. (EATON MFG. CO.) PART NUMBERS

WIL-ER-1219.....	0709A	WIL-ER-4206.....	0709A	WIL-ER-9316.....	0709A	WIL-ER-9385.....	0709A
WIL-ER-3139.....	0709A	WIL-ER-4207.....	0709A	WIL-ER-9361.....	0709A	WIL-ER-9387.....	0709A
WIL-ER-3140.....	0709A	WIL-ER-6118.....	0709A	WIL-ER-9384.....	0709A		

WISCONSIN AXLE DIV. (TIMKEN-DETROIT AXLE CO.) PART NUMBERS

WIS-1846-B-2.....	0706B	WIS-A3ES18658...	0709A	WIS-1ES12621....	0703A	WIS-1ES12650....	1003
WIS-A3ES12743...	1009	WIS-1ES1279.....	1009	WIS-1ES12634....	0701A	WIS-1ES12664....	0704C
WIS-A3ES12744...	1009	WIS-1ES1279D....	1003	WIS-1ES12635....	0703A	WIS-1ES12675....	0709A
WIS-A3ES12745...	1009	WIS-1ES12620....	0704B	WIS-1ES12649....	1003	WIS-1ES12692....	1003

PART NUMBER INDEX—MANUFACTURERS'

PART NUMBER (MFG.)

Number	Group	Number	Group	Number	Group	Number	Group
--------	-------	--------	-------	--------	-------	--------	-------

WISCONSIN AXLE DIV. (TIMKEN-DETROIT AXLE CO.) PART NUMBERS (Contd)

WIS-1ES12694.... 1003	WIS-1ES12889.... 1003	WIS-2ES12605.... 0701	WIS-3ES12663.... 0704B
WIS-1ES12695.... 1003	WIS-1ES12890.... 1003	WIS-2ES12606.... 0704C	WIS-3ES12684.... 15A1
WIS-1ES12696.... 1003	WIS-1ES12891.... 1003	WIS-2ES12617.... 0701A	WIS-3ES12685.... 15A1
WIS-1ES12699.... 1008A	WIS-1ES13688.... 0704B	WIS-2ES12642.... 15A1	WIS-3ES12700.... 0701A
WIS-1ES12707.... 0706A	WIS-1ES13726.... 0704B	WIS-2ES12643.... 15A1	WIS-3ES12702.... 0701A
WIS-1ES12708.... 0706A	WIS-1ES14216.... 0704B	WIS-2ES12654.... 0701A	WIS-3ES12703.... 0701A
WIS-1ES12709.... 0706A	WIS-1ES14221.... 0704A	WIS-2ES12658.... 0704C	WIS-3ES12704.... 0701A
WIS-1ES12726.... 0706B	WIS-1ES14224.... 0704B	WIS-2ES12689.... 1008A	WIS-3ES12721.... 0706C
WIS-1ES12727.... 0706B	WIS-1ES14227.... 0704B	WIS-2ES12717.... 0701A	WIS-3ES12723.... 0706B
WIS-1ES12731.... 0706B	WIS-1ES14229.... 0704B	WIS-2ES12718.... 0701A	WIS-3ES12730.... 0706B
WIS-1ES12732.... 0706B	WIS-1ES14234.... 0704B	WIS-2ES12719.... 0701A	WIS-3ES12756.... 1003
WIS-1ES12737.... 0706C	WIS-1ES14236.... 0704B	WIS-2ES12720.... 0701A	WIS-3ES12757.... 1009
WIS-1ES12746.... 1009	WIS-1ES14298.... 0704B	WIS-2ES12758.... 1003	WIS-3ES12761.... 1003
WIS-1ES12747.... 1009	WIS-1ES14339.... 0706A	WIS-2ES12759.... 1003	WIS-3ES12776.... 1009
WIS-1ES12748.... 1009	WIS-1ES14340.... 0706A	WIS-2ES12773.... 1003	WIS-3ES12789.... 1003
WIS-1ES12749.... 1009	WIS-1ES14341.... 0706A	WIS-2ES12877.... 0709D	WIS-3ES14226.... 0706B
WIS-1ES12750.... 1009	WIS-1ES14348.... 0706A	WIS-2ES14217.... 0704B	WIS-3ES14336.... 0706A
WIS-1ES12751.... 1009	WIS-1ES14349.... 0706A	WIS-2ES14228.... 0704B	WIS-3ES14585.... 0704B
WIS-1ES12752.... 1009	WIS-1ES14579.... 0704B	WIS-2ES14230.... 0704B	WIS-3ES14586.... 0704B
WIS-1ES12753.... 1009	WIS-1ES14580.... 0704B	WIS-2ES14581.... 0704B	WIS-3ES14589.... 0704B
WIS-1ES12754.... 1009	WIS-1ES14766.... 0706B	WIS-2ES14582.... 0704B	WIS-3ES14590.... 0701A
WIS-1ES12763.... 1003	WIS-1ES14767.... 0701A	WIS-2ES14583.... 0704B	WIS-3ES14592.... 0704B
WIS-1ES12764.... 1003	WIS-1ES14768.... 0701A	WIS-2ES14584.... 0704B	WIS-3ES14594.... 0706B
WIS-1ES12765.... 1003	WIS-1ES14769.... 0706B	WIS-2ES14591.... 0706A	WIS-3ES14595.... 0704B
WIS-1ES12766.... 1003	WIS-1ES14840.... 0705	WIS-2ES14593.... 0706B	WIS-3ES16060.... 0706C
WIS-1ES12767.... 1003	WIS-1ES14841.... 0705	WIS-2ES14821.... 0704B	WIS-3ES16061.... 0706C
WIS-1ES12768.... 1009	WIS-1ES16278.... 0703A	WIS-3ES12601.... 0701	WIS-3ES16062.... 0704B
WIS-1ES12769.... 1009	WIS-1ES18616.... 0704B	WIS-3ES12603.... 0701	WIS-3ES16063.... 0704B
WIS-1ES12770.... 1003	WIS-1ES18625.... 0706B	WIS-3ES12605.... 0701	WIS-3ES18658.... 0709A
WIS-1ES12771.... 1003	WIS-1ES18635.... 0709D	WIS-3ES12608.... 0701A	WIS-3ES18659.... 0709A
WIS-1ES12772.... 1003	WIS-1ES18636.... 0709D	WIS-3ES12613.... 0701A	WIS-4ES12602.... 0701
WIS-1ES12778.... 1009	WIS-1ES18640.... 0709D	WIS-3ES12618.... 0704B	WIS-4ES12607.... 0701A
WIS-1ES12783.... 0701A	WIS-1ES18649.... 0709D	WIS-3ES12640.... 0704B	WIS-4ES14208.... 0704A
WIS-1ES12878.... 0709D	WIS-2ES12589.... 1008A	WIS-3ES12657.... 0704C	WIS-4ES15087.... 0703A
WIS-1ES12880.... 0709D	WIS-2ES12604.... 0701	WIS-3ES12659.... 0704B	WIS-4ES16002.... 1307

WALTER KIDDE & CO., INC. PART NUMBERS

WK-24393..... 2401	WK-28807..... 2401	WK-29517..... 2401	WK-65816..... 2401
WK-24394..... 2401	WK-29001..... 2401	WK-29518..... 2401	WK-65817..... 2401
WK-24397..... 2401	WK-29002..... 2401	WK-29519..... 2401	WK-65818..... 2401
WK-24399..... 2401	WK-29003..... 2401	WK-64310..... 2401	WK-65819..... 2401
WK-24447..... 2401	WK-29004..... 2401	WK-64535..... 2401	WK-65820..... 2401
WK-25325..... 2401	WK-29005..... 2401	WK-64541..... 2401	WK-65821..... 2401
WK-25899..... 2401	WK-29006..... 2401	WK-64544..... 2401	WK-79117E..... 2402
WK-26243..... 2401	WK-29007..... 2401	WK-65803..... 2401	WK-80576..... 2401
WK-26336..... 2401	WK-29008..... 2401	WK-65813..... 2401	WK-92258..... 2401
WK-26412..... 2401	WK-29388..... 2401	WK-65814..... 2401	WK-1789-0440.... 2401
WK-26841..... 2401	WK-29389..... 2401	WK-65815..... 2401	WK-1789-0461.... 2401
WK-26851..... 2401			

WHITAKER BATTERY SUPPLY CO. PART NUMBERS

WT-491..... 2603	WT-492S..... { 0610 2602B		
------------------	------------------------------	--	--

YOUNG RADIATOR CO. PART NUMBERS

YR-37332..... { 0107B 0709	YR-37422..... { 0107B 0709	YR-37822-5..... { 0107B 0709	YR-39630..... { 0107B 0709
-------------------------------	-------------------------------	---------------------------------	-------------------------------

Number	Group	Number	Group	Number	Group	Number	Group
8-C-8320.....	2301	41W-3029.....	2301	3267-30X1191C....	0306	G038-0111827.....	0305
	0107	41W-3329.....	2301	3267-51B1D.....	1305	G038-0111930.....	1008A
	0107A	41W-3812-530....	2301	3267-51X1022B....	1008A	G038-0112130.....	1003
	0107C	44W-488.....	2301	3267-P911.....	0612	G038-0114780.....	1003
	0108B	0840-390188-37..	0301	3267-P937.....	0300-1	G038-0114970.....	0301C
	0113B-3	0840-P-4880.....	0301	3500-5066346.....	0611B-4	G038-0114980.....	0301C
22W-1642100.....	0113B-4	0840-P-6606.....	0301	3500-5067878.....	0611A	G038-0115030.....	0701A
	0602	0840-P-6712.....	0301	4450-P1031.....	1906	G038-0116580.....	0613F
	0603A	0840-P-10101.....	0301	5900-X5271.....	0202	G038-0117765.....	0603A
	0610B-2	0840-P-12806.....	0301	6900-217765.....	1903E	G038-0117870.....	0301C
	0706C	0840-P-12809.....	0301	7260-X455.....	2203	G038-0118780.....	0604A
	0709D	0840-P-13640.....	0301	7260-X581.....	2203	G038-0120260.....	1003
	1905-2	0840-P-13676.....	0301	7260-X824.....	0305	G038-0120270.....	1003
	0109A	0840-P-13678.....	0301	7260-X967.....	0305	G038-0120490.....	0701A
	0110	0840-P-13681.....	0301	7260-G6023.....	0305	G038-0120658.....	0603A
	0202	0840-P-13682.....	0301	8080-89-638-X....	15A1	G038-0120661.....	0603A
22W-1642125.....	0602	0840-P-13743.....	0301	8080-89-39-17....	0709D	G038-0120665.....	0603A
	0706C	0840-P-15585.....	0301	8080-89-5902-X....	0701	G038-0120670.....	0701A
	0709A	0840-P-15586.....	0301	8080-89-6258-X....	0706A	G038-0120680.....	0701A
	0709B	0840-P-16814.....	0301	8080-89-6288-X....	1008A	G038-0120870.....	0701A
	1008A	0840-P-18054.....	0301	8080-89-6341-X....	1008	G038-0120890.....	0107
0040-1500726.....	0611H-1	0840-P-18055.....	0301	8080-89-6342-X....	1008	G038-0122770.....	1008A
41B-307.....	2301	0840-P-20345.....	0301	9160-6577.....	0301C	G038-0122840.....	0109
41C-1104.....	2301	0840-P-23044.....	0301	A001-0814025.....	1903E	G038-0123760.....	0110
41C-1124.....	2301	0840-P-60117.....	0301	A032-0300055.....	1906	G038-0124995.....	0110
41C-2559-27.....	2301	0840-P-60396.....	0301	A035-0719030.....	2301	G038-0125471.....	0709B
41F-1155.....	2301	0840-P-60397.....	0301	A037-0300001.....	1906	G038-0125580.....	0709B
41F-1304.....	2301	0840-P-60815.....	0301	A045-0300045.....	2201C	G038-0125710.....	0100
41H-1502.....	2301	0840-P-60875.....	0301	A050-0210180.....	1804		0107E-2
41P-1992.....	2301	0840-P-60885.....	0301	A054-0338945.....	0305A	G038-0125730.....	0100
41S-1106.....	2301	1465-1101.....	0302	A055-0115990.....	1906		0107E
41S-1638.....	2301	2220-2002-03.....	0604A	A055-0138147.....	1906	G038-0125816.....	0301
41S-1640.....	2301	2220-2002-09.....	0604A	A055-0443005....	0610B-1	G038-0125890.....	0709C
41S-1642.....	2301	2220-4925.....	0103		2602B	G038-0126514.....	0603A
41W-448.....	2301	2220-5841.....	0301-1	A055-5605718.....	1906	G038-0128840.....	1903
41W-486.....	2301	2220-23524.....	0104	C025-0202610.....	2012	G038-0129230.....	0704C
41W-562.....	2301	2220-23834.....	0104		1907	G038-0130472.....	0603A
41W-602.....	2301	2220-35294.....	0103A	C044-5601039....	2302B	G038-0130473.....	0603A
41W-608.....	2301	2220-A4174-A1....	0107	C056-0263923.....	0613D	G038-0130940.....	0302
41W-621-120....	2301	2220-A50023.....	0104	C056-0367630.....	1903F	G038-0131390.....	0105B
41W-991.....	2301	2220-A50023-A2..	0104	C056-0393784.....	0613C	G038-0131420.....	0105B
41W-1002-40....	2301	2220-B3992-A1....	0105B	C103-0100822.....	0113B-6	G038-0131630.....	0701
41W-1007-20....	2301	2220-B3993-A1....	0105B	C167-0392294.....	0115B-8	G038-0131680.....	0701
41W-1008.....	2301	2300-CAT-209.....	1904	F005-0108277.....	0305	G038-0131690.....	0701
41W-1011-40....	2301	2300-XAT503.....	1906	F036-0582012.....	2401	G038-0131710.....	0701
41W-1021.....	2301	2300-XAT511.....	1906	G001-0109372.....	0604B	G038-0131740.....	0701
41W-1204-5.....	2301	2300-XAT542.....	1902A	G004-0345600.....	0604A	G038-0134114.....	1003
41W-1481-50....	2301	2300-XAT543.....	1902A	G023-8800176.....	0613	G038-0134671.....	0305
41W-1536-500....	2301	2400-10636.....	0306	G038-0104410.....	0301	G038-0134695.....	0305
41W-1663.....	2301	2400-21864.....	0107E-1	G038-0104635.....	0603A	G038-0134920.....	15A1
41W-1986-100....	2301	2400-23004.....	0306	G038-0104760.....	0500	G038-0135260.....	0101
41W-2449.....	2301	2520-5013955.....	0611H-1	G038-0104770.....	0500	G038-0135280.....	0101
41W-2450.....	2301	2520-5036149.....	0611H-1	G038-0104780.....	0500	G038-0135665.....	0301
41W-2451.....	2301	2520-5043451.....	0611B-5	G038-0104820.....	0500	G038-0138030.....	0101
41W-2452.....	2301	2520-5059312.....	0611A	G038-0104970.....	0500	G038-0138391.....	0603A
41W-2454.....	2301	2520-5066329.....	0611H-1	G038-0105130.....	0500	G038-0139930.....	0202
41W-3005.....	2301	2520-5067608.....	0611D	G038-0105140.....	0500	G038-0140380.....	1903B
41W-3007.....	2301	2520-5070989.....	0611A	G038-0106330.....	0301C	G038-0150490.....	0301
41W-3009.....	2301	2580-37335.....	0601B	G038-0106480.....	0301	G038-0150680.....	1009
41W-3011.....	2301	2580-37336.....	0601B	G038-0107126.....	0301	G038-0150690.....	1009
41W-3013.....	2301	2580-37338.....	0601B	G038-0107840.....	0107	G038-0150960.....	0101
41W-3015.....	2301	2580-187943.....	0604	G038-0109810.....	0500	G038-0151070.....	1003
41W-3017.....	2301	2580-1879752.....	0604	G038-0109910.....	0110	G038-0151080.....	0701A
41W-3023.....	2301	3267-5X1091B....	1305	G038-0111685.....	0603A	G038-0151190.....	0302
41W-3025.....	2301	3267-5X1107B....	1305	G038-0111688.....	0603A	G038-0151610.....	1009
41W-3027.....	2301		1501	G038-0111826.....	0305	G038-0151620.....	1009

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
G038-0151640.....	0107J	G038-0179660.....	0301	G103-0100346.....	0102A	G103-0101825.....	0101A
G038-0151670.....	0107J	G038-0179711.....	0603A	G103-0100420.....	0113B-4	G103-0101845.....	0101
G038-0151790.....	1903	G038-0179720.....	0603A	G103-0100460.....	0603A	G103-0101850.....	0709B
G038-0151840.....	1903	G038-0180590.....	1003	G103-0100510.....	0709A	G103-0101860.....	0603A
G038-0152540.....	0301	G038-0181160.....	0302	G103-0100525.....	0107	G103-0101861.....	0603A
G038-0152915.....	0603A	G038-0181290.....	15A1	G103-0100528.....	0107C	G103-0101880.....	0107J
G038-0157028.....	0603A	G038-0181310.....	15A1	G103-0100530.....	0107C	G103-0101885.....	0107C
G038-0162010.....	0103B	G038-0402780.....	1003	G103-0100533.....	0709A	G103-0101890.....	0107J
G038-0162122.....	0301	G038-0502084.....	0603A	G103-0100535.....	0709B	G103-0101890.....	0305A
G038-0162123.....	0301	G038-8800140.....	0603A	G103-0100537.....	0101	G103-0101900.....	0108A
G038-0162124.....	0301	G038-8800190.....	0500	G103-0100538.....	0603A	G103-0101920.....	0108A
G038-0162125.....	0301	G038-8800210.....	0500	G103-0100561.....	0101	G103-0101940.....	0108B
G038-0162870.....	0301	G038-8800220.....	0500	G103-0100580.....	0101	G103-0101980.....	0107J
G038-0163430.....	0104	G038-8800230.....	0500	G103-0100600.....	0102	G103-0102020.....	0603A
G038-0163663.....	0603A	G038-8802360.....	0302	G103-0100740.....	0603A	G103-0102060.....	0109A
G038-0163990.....	1003	G038-8803390.....	0603A	G103-0100790.....	0113B-2	G103-0102080.....	0603A
G038-0164140.....	0106	G038-8803880.....	0603A	G103-0100802.....	0301	G103-0102100.....	0306
G038-0164497.....	0603A	G038-8806660.....	0603A	G103-0100820.....	0113B-3	G103-0102160.....	0108A
G038-0165230.....	0105B	G038-8807260.....	0105B	G103-0100825.....	0113B-4	G103-0102180.....	0301
G038-0165790.....	0706B	G038-8809530.....	0701A	G103-0100845.....	0104	G103-0102200.....	0603A
G038-0165880.....	15A1	G038-8809540.....	0706B	G103-0100882.....	0113B-7	G103-0102220.....	0109
G038-0166010.....	0704B	G038-8810720.....	0109A	G103-0100885.....	0104	G103-0102221.....	0109
G038-0166020.....	0704B	G038-8810790.....	0301	G103-0100905.....	0113B-3	G103-0102230.....	0709D
G038-0166035.....	0704B	G057-0314856.....	0604	G103-0100905.....	0113B-4	G103-0102231.....	0709A
G038-0166270.....	0302	G081-0113920.....	0603A	G103-0100905.....	0113B-5	G103-0102232.....	0100
G038-0166830.....	0706C	G081-0116980.....	0603A	G103-0100920.....	0105B	G103-0102232.....	0301
G038-0166861.....	0301	G081-0119000.....	1903	G103-0100935.....	0101	G103-0102232.....	0100
G038-0167189.....	0603A	G081-0136781.....	1903	G103-0100940.....	0603A	G103-0102320.....	0113B-1
G038-0167376.....	0603A	G081-0142250.....	0604A	G103-0100960.....	0100	G103-0102320.....	0100
G038-0167645.....	0603A	G081-0152500.....	1903	G103-0100960.....	0301	G103-0102320.....	0105B
G038-0167695.....	2203	G081-0154101.....	1903A	G103-0100965.....	0301	G103-0102340.....	0107A
G038-0168030.....	1009	G081-0160760.....	0603A	G103-0100989.....	0110	G103-0102340.....	0107C
G038-0168494.....	0301	G085-3002120.....	0301	G103-0100990.....	0113B-1	G103-0102340.....	0107K
G038-0169089.....	0305	G085-3108540.....	1903D	G103-0100990.....	0104	G103-0102340.....	0100
G038-0169320.....	0302	G085-3303340.....	0611H-1	G103-0101020.....	0113B-4	G103-0102360.....	0107E-2
G038-0169330.....	0302	G098-0600090.....	0113B-4	G103-0101060.....	0113B-5	G103-0102380.....	0301
G038-0170080.....	0301	G102-0106576.....	0301	G103-0101080.....	0105	G103-0102381.....	0301
G038-0170530.....	1003	G102-0400490.....	2210	G103-0101100.....	0113B-6	G103-0102382.....	0301
G038-0170571.....	1003	G102-0400835.....	0602	G103-0101100.....	0113B-7	G103-0102385.....	0301
G038-0170685.....	0603A	G102-0400908.....	0601B	G103-0101120.....	0102	G103-0102386.....	0301
G038-0170720.....	1009	G102-0400999.....	0601B	G103-0101140.....	0105A	G103-0102400.....	0100
G038-0170730.....	1009	G102-0401116.....	0601B	G103-0101165.....	0100	G103-0102400.....	0301-1
G038-0170740.....	1009	G102-0401477.....	0604	G103-0101165.....	0601A	G103-0102400.....	0100
G038-0171070.....	0202	G102-0401503.....	0601B	G103-0101180.....	0603A	G103-0102420.....	0301-1
G038-0172561.....	0305	G102-0401504.....	0601B	G103-0101205.....	0110	G103-0102420.....	0301C
G038-0172610.....	1009	G102-1588200.....	0601B	G103-0101220.....	0603A	G103-0102440.....	0301
G038-0172642.....	0301	G103-0100028.....	0100	G103-0101370.....	0301C	G103-0102460.....	0301
G038-0172821.....	0305	G103-0100028.....	0108A	G103-0101380.....	0109	G103-0102485.....	0301
G038-0172930.....	0302	G103-0100040.....	0603A	G103-0101400.....	0109	G103-0102500.....	0301
G038-0174591.....	0603A	G103-0100097.....	0500	G103-0101415.....	0107	G103-0102501.....	0301
G038-0174594.....	0603A	G103-0100098.....	0500	G103-0101440.....	0107	G103-0102520.....	0301
G038-0174837.....	0603A	G103-0100099.....	0500	G103-0101470.....	0105B	G103-0102521.....	0301
G038-0174839.....	0603A	G103-0100100.....	0500	G103-0101475.....	0113B-4	G103-0102522.....	0301
G038-0174841.....	0603A	G103-0100110.....	0500	G103-0101500.....	0301C	G103-0102523.....	0301
G038-0175572.....	0108B	G103-0100120.....	0500	G103-0101520.....	0113B-5	G103-0102540.....	0100
G038-0175990.....	0500	G103-0100140.....	0500	G103-0101540.....	0113B-8	G103-0102540.....	0107
G038-0176010.....	0500	G103-0100160.....	0500	G103-0101550.....	0107C	G103-0102560.....	0100
G038-0176165.....	0603A	G103-0100200.....	0500	G103-0101560.....	0603A	G103-0102560.....	0107
G038-0176670.....	0105A	G103-0100220.....	0500	G103-0101665.....	0107C	G103-0102580.....	0100
G038-0176780.....	0604A	G103-0100240.....	0500	G103-0101685.....	0100	G103-0102580.....	0107
G038-0178599.....	0301	G103-0100260.....	0500	G103-0101724.....	0105C	G103-0102600.....	0100
G038-0178731.....	0301	G103-0100280.....	0500	G103-0101725.....	0105C	G103-0102600.....	0107
G038-0178733.....	0301	G103-0100290.....	0107E-2	G103-0101726.....	0105C	G103-0102620.....	0100
G038-0178840.....	0302	G103-0100300.....	0500	G103-0101727.....	0105C	G103-0102620.....	0107
G038-0179080.....	0709B	G103-0100320.....	0500	G103-0101800.....	0102	G103-0102625.....	0100
G038-0179490.....	0703A	G103-0100343.....	0205	G103-0101805.....	0101	G103-0102625.....	0107

Number	Group	Number	Group	Number	Group	Number	Group
G103-0102690	0107A	G103-0103429	0603A	G103-0104100	0110	G103-0104765	0113B-3
G103-0102740	0100	G103-0103434	0302	G103-0104100	0305	G103-0104766	0500
G103-0102760	0302	G103-0103435	0302	G103-0104100	0500	G103-0104780	0105B
G103-0102780	0100	G103-0103438	0107K	G103-0104126	0113B-8	G103-0104800	0603A
G103-0102780	0113B-4	G103-0103439	0107K	G103-0104140	0105	G103-0104810	0113B-4
G103-0102800	0100	G103-0103441	0113B-8	G103-0104160	0301	G103-0104840	0500
G103-0102800	0113B-4	G103-0103442	0105B	G103-0104200	0100	G103-0104925	0103A
G103-0102820	0100	G103-0103450	0105	G103-0104200	0101A	G103-0104927	0103A
G103-0102820	0305A	G103-0103451	0105	G103-0104220	0100	G103-0104985	0104
G103-0102860	0100	G103-0103452	0604B	G103-0104240	0108A	G103-0104990	0305A
G103-0102860	0603A	G103-0103481	0603A	G103-0104240	0100	G103-0104991	0305A
G103-0102880	0603A	G103-0103550	0113B-4	G103-0104240	0107J	G103-0105025	0104
G103-0102900	0603A	G103-0103551	0104	G103-0104260	0100	G103-0105040	0105B
G103-0102920	0100	G103-0103555	0305A	G103-0104260	0105B	G103-0105050	0113B-8
G103-0102960	0100	G103-0103556	0301	G103-0104260	0101A	G103-0105051	0305A
G103-0102970	0100	G103-0103557	0301	G103-0104265	0110	G103-0105060	0105B
G103-0102970	0107J	G103-0103560	0603A	G103-0104265	0305	G103-0105080	0105A
G103-0102980	0100	G103-0103573	0709B	G103-0104265	0500	G103-0105086	0709A
G103-0102980	0107J	G103-0103575	0301	G103-0104266	0105B	G103-0105089	0709B
G103-0103000	0100	G103-0103580	0105	G103-0104266	0113B-8	G103-0105100	0107E-2
G103-0103020	0107C	G103-0103580	0105	G103-0104267	0107A	G103-0105100	0709C
G103-0103020	0100	G103-0103600	0105	G103-0104267	0108A	G103-0105108	0107C
G103-0103040	0107C	G103-0103620	0603A	G103-0104267	0301-1	G103-0105134	0110
G103-0103040	0100	G103-0103640	0100	G103-0104270	0113B-8	G103-0105135	0709A
G103-0103040	0107J	G103-0103640	0603A	G103-0104278	0604B	G103-0105136	0709A
G103-0103045	0100	G103-0103650	0108B	G103-0104280	0113B-2	G103-0105137	0709A
G103-0103045	0100	G103-0103665	0105C	G103-0104290	0301	G103-0105138	0709D
G103-0103100	0100	G103-0103665	0107J	G103-0104294	0107	G103-0105140	0301
G103-0103100	0113B-3	G103-0103666	0305A	G103-0104300	0109	G103-0105161	0301
G103-0103120	0602	G103-0103675	0301	G103-0104305	0305A	G103-0105162	0301
G103-0103120	0100	G103-0103680	0301-1	G103-0104320	0104	G103-0105180	0603A
G103-0103120	0113B-8	G103-0103700	0105B	G103-0104340	0103B	G103-0105195	0603A
G103-0103130	0100	G103-0103700	0113B-2	G103-0104360	0105B	G103-0105200	0603A
G103-0103140	0100	G103-0103740	0603A	G103-0104380	0105A	G103-0105207	0500
G103-0103140	0105B	G103-0103760	0602	G103-0104396	0108B	G103-0105220	0107
G103-0103200	0105C	G103-0103780	0101	G103-0104397	0108B	G103-0105230	0301
G103-0103200	0100	G103-0103780	0110	G103-0104398	0108B	G103-0105240	0603A
G103-0103200	0105A	G103-0103800	0108B	G103-0104399	0108B	G103-0105245	0301
G103-0103210	0100	G103-0103820	0102A	G103-0104400	0108A	G103-0105260	0603A
G103-0103210	0105C	G103-0103825	0101A	G103-0104410	0108B	G103-0105280	0603A
G103-0103242	0113B-3	G103-0103840	0109	G103-0104411	0108B	G103-0105286	0113B-3
G103-0103242	0305A	G103-0103870	0113B-4	G103-0104437	0603A	G103-0105287	0113B-4
G103-0103244	0113B-2	G103-0103880	0107J	G103-0104482	0603A	G103-0105287	0604A
G103-0103245	0113B-2	G103-0103900	0105B	G103-0104483	0603A	G103-0105300	0603A
G103-0103246	0113B-6	G103-0103920	0108A	G103-0104485	0706A	G103-0105320	0603A
G103-0103246	0113B-7	G103-0103940	0603A	G103-0104505	0301	G103-0105325	0113B-8
G103-0103247	0113B-5	G103-0103960	0603A	G103-0104540	0100	G103-0105326	0113B-1
G103-0103248	0107C	G103-0103965	0500	G103-0104545	0301-1	G103-0105340	0603A
G103-0103249	0107C	G103-0103965	0605B	G103-0104545	0301	G103-0105360	0603A
G103-0103250	0107	G103-0103980	0603A	G103-0104560	0107E-2	G103-0105420	0105
G103-0103251	0107	G103-0104000	0603A	G103-0104560	0709C	G103-0105440	0110
G103-0103252	0107	G103-0104020	0603A	G103-0104565	0301	G103-0105440	0113B-5
G103-0103253	0107	G103-0104040	0104	G103-0104608	0107A	G103-0105445	0500
G103-0103260	0113B-3	G103-0104040	0105B	G103-0104610	0308A-2	G103-0105450	0301
G103-0103261	0113B-3	G103-0104060	0105C	G103-0104611	0107J	G103-0105451	0302
G103-0103264	0113B-8	G103-0104060	0107J	G103-0104611	0308A-2	G103-0105460	0105
G103-0103265	0113B-8	G103-0104060	0115B-8	G103-0104613	0301	G103-0105480	0105
G103-0103320	0105	G103-0104060	0308A-2	G103-0104614	0308A-2	G103-0105490	0709A
G103-0103340	0105A	G103-0104060	0107A	G103-0104665	0100	G103-0105510	0709A
G103-0103360	0105	G103-0104060	0107E-2	G103-0104665	0107	G103-0105520	0113B-4
G103-0103424	0100	G103-0104060	0108A	G103-0104680	0100	G103-0105540	0105B
G103-0103424	0107J	G103-0104080	0113B-1	G103-0104705	0302	G103-0105580	0603A
G103-0103425	0100	G103-0104080	0113B-4	G103-0104705	0100	G103-0105635	0709B
G103-0103426	0107J	G103-0104080	0301-1	G103-0104706	0107C	G103-0105645	0500
G103-0103426	0302	G103-0104080	0302	G103-0104750	0113B-4	G103-0105660	0603A
G103-0103428	0107E-2	G103-0104080	0305A				

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
G103-0105663.....	0102	G103-0106482.....	0107J	G103-0303071.....	0602	G103-0401680.....	0706B
G103-0105683.....	0113B-3	G103-0106483.....	0107J	G103-0303117.....	0301	G103-0401700.....	0709D
	0602	G103-0106565.....	0301	G103-0303246.....	1900	G103-0401720.....	1009
G103-0105684.....	0500	G103-0106580.....	0105	G103-0303280.....	0704B	G103-0401760.....	1003
G103-0105685.....	0102	G103-0106600.....	0105	G103-0303575.....	1900	G103-0401780.....	1003
G103-0105703.....	0107K	G103-0106620.....	0301	G103-0303580.....	1008A	G103-0401800.....	0703A
G103-0105704.....	0706A	G103-0106640.....	0107K	G103-0303591.....	1901A		2012
G103-0105705.....	0107E-2	G103-0106660.....	0107K	G103-0303620.....	1008A	G103-0401820.....	0704A
	0709C	G103-0106663.....	0709A	G103-0303621.....	1900B	G103-0401840.....	0704A
G103-0105770.....	0709A	G103-0106680.....	0102	G103-0303920.....	1008A	G103-0401900.....	1003
G103-0105780.....	0603A	G103-0106700.....	0102	G103-0303977.....	1903	G103-0401920.....	15A1
G103-0105800.....	0603A	G103-0106701.....	0301	G103-0304160.....	1008A	G103-0401940.....	1009
G103-0105820.....	0603A	G103-0106710.....	0113B-4	G103-0304376.....	2401	G103-0401960.....	0704B
G103-0105839.....	0302	G103-0106780.....	0102	G103-0304905.....	0113B-8	G103-0401980.....	0704B
G103-0105860.....	0105	G103-0106785.....	0500	G103-0314892.....	0102	G103-0402000.....	0704B
G103-0105880.....	0105	G103-0106800.....	0603A	G103-0400040.....	1009	G103-0402080.....	1003
G103-0105900.....	0105	G103-0106840.....	0113B-3	G103-0400080.....	0706A	G103-0402120.....	0709D
G103-0105920.....	0100		0603A	G103-0400081.....	0706A	G103-0402140.....	0202
	0602		0105B	G103-0400120.....	1003	G103-0402160.....	0201
G103-0105930.....	0110		0105C	G103-0400140.....	0706A	G103-0402180.....	0201
G103-0105940.....	0301	G103-0106900.....	0107	G103-0400240.....	1008A	G103-0402200.....	0706B
G103-0106011.....	0500		0107J	G103-0400260.....	1008A	G103-0402219.....	0709A
G103-0106012.....	0105C		0113B-6	G103-0400280.....	1003	G103-0402240.....	15A1
G103-0106015.....	0603A		0107	G103-0400320.....	1009	G103-0402250.....	1008A
G103-0106045.....	0105B		0107A	G103-0400340.....	0706A	G103-0402255.....	0208B
	0105C		0107C	G103-0400360.....	0706B	G103-0402260.....	1009
	0107J		0107E-2	G103-0400380.....	0701A	G103-0402275.....	0709A
	0107A	G103-0106920.....	0108B	G103-0400420.....	0704B	G103-0402280.....	0703A
G103-0106105.....	0113B-4		0113B-1	G103-0400460.....	0704B	G103-0402300.....	0704C
	0301		0113B-4	G103-0400480.....	0704B	G103-0402360.....	0706B
G103-0106110.....	0107A		0301	G103-0400500.....	0704B	G103-0402420.....	1003
G103-0106122.....	0107C		0301-1	G103-0400520.....	0704B	G103-0402425.....	0701A
G103-0106140.....	0107		0302	G103-0400540.....	0704B	G103-0402460.....	0706A
G103-0106165.....	0101A		0109A	G103-0400560.....	0704B	G103-0402480.....	0706A
G103-0106180.....	0101A	G103-0106940.....	0113B-3	G103-0400600.....	0701A	G103-0402500.....	0706B
G103-0106183.....	0113B-3		0500	G103-0400740.....	0201	G103-0402520.....	0701A
G103-0106185.....	0101		0602	G103-0400800.....	1009	G103-0402540.....	0704C
	0305	G103-0106942.....	0113B-2	G103-0400820.....	0706C	G103-0402560.....	1008A
G103-0106200.....	0113B-3		0101	G103-0400840.....	0706C	G103-0402580.....	0703A
	0602	G103-0106960.....	0110	G103-0400860.....	0706C	G103-0402640.....	0704A
G103-0106205.....	0202		0305	G103-0400880.....	0701A	G103-0402660.....	15A1
G103-0106221.....	0500	G103-0106980.....	0105B	G103-0400900.....	1008A	G103-0402680.....	15A1
G103-0106222.....	0107J	G103-0106985.....	0105	G103-0400920.....	1008A	G103-0402720.....	1003
	0308A-2	G103-0107000.....	0105B	G103-0400940.....	0706B	G103-0402820.....	0704B
	0107	G103-0107001.....	0709B	G103-0400960.....	0701A	G103-0402840.....	0704B
G103-0106225.....	0108B	G103-0107935.....	0705	G103-0400980.....	0701A	G103-0402860.....	0704B
	0113B-2	G103-0111670.....	0701	G103-0401000.....	0709D	G103-0402900.....	0208B
	0107E-2	G103-0116275.....	2209	G103-0401040.....	0701A	G103-0402940.....	0202
G103-0106226.....	0108A	G103-0130210.....	1307	G103-0401060.....	0709A	G103-0402960.....	0704B
	0113B-1	G103-0131590.....	1903	G103-0401100.....	0701A	G103-0403000.....	0706B
	0302	G103-0140495.....	0301	G103-0401140.....	0701A	G103-0403020.....	15A1
G103-0106240.....	0107A	G103-0146614.....	0107J	G103-0401160.....	0704B	G103-0403040.....	0709C
G103-0106245.....	0107A	G103-0169185.....	0301	G103-0401180.....	0704B	G103-0403060.....	0701A
G103-0106260.....	0113B-4	G103-0169290.....	0302	G103-0401200.....	0704B	G103-0403061.....	0706B
G103-0106261.....	0604A	G103-0169560.....	0704C	G103-0401240.....	0704B	G103-0403080.....	1003
G103-0106315.....	0113B-8	G103-0182055.....	0301	G103-0401260.....	0704B	G103-0403100.....	1003
G103-0106320.....	0105A	G103-0191520.....	0603A	G103-0401280.....	0704B	G103-0403120.....	0706B
G103-0106325.....	0105A	G103-0300140.....	0202	G103-0401300.....	0704B	G103-0403140.....	0700
G103-0106340.....	0107J	G103-0300720.....	0613E	G103-0401320.....	0704B	G103-0403300.....	0208B
G103-0106350.....	0113B-4	G103-0301040.....	1008A	G103-0401400.....	0704B	G103-0403340.....	0704B
G103-0106360.....	0102	G103-0301433.....	0709C	G103-0401460.....	15A1	G103-0403360.....	0704B
G103-0106367.....	0709D	G103-0302040.....	0202	G103-0401501.....	0709A	G103-0403380.....	0704B
G103-0106385.....	0301	G103-0302540.....	1008A	G103-0401520.....	15A1	G103-0403420.....	0704A
	0107J	G103-0302800.....	0202	G103-0401600.....	15A1	G103-0403440.....	1003
G103-0106480.....	0305	G103-0303013.....	0706A	G103-0401620.....	1009	G103-0403460.....	1003
	0305A	G103-0303014.....	0706A	G103-0401640.....	1009	G103-0403500.....	1009

Number	Group	Number	Group	Number	Group	Number	Group
G103-0438609.....	0706A	G103-0501183.....	0603A	G103-0501790.....	0602	G103-0502337.....	0603A
G103-0496017.....	1003	G103-0501195.....	0601B	G103-0501791.....	0602	G103-0502340.....	0603A
G103-0500030.....	0601B	G103-0501196.....	0602	G103-0501792.....	0602	G103-0502450.....	0601B
G103-0500031.....	0601B	G103-0501308.....	0602	G103-0501832.....	0601	G103-0502451.....	0601B
G103-0500032.....	0601	G103-0501371.....	0602	G103-0501834.....	0601	G103-0502452.....	0601B
G103-0500033.....	0602	G103-0501440.....	0604A	G103-0501843.....	0603A	G103-0502453.....	0601B
G103-0500071.....	0308A-1	G103-0501464.....	0602	G103-0501844.....	0602	G103-0502797.....	0602
G103-0500105.....	0601	G103-0501470.....	0603A	G103-0501847.....	0603A	G103-0505083.....	0709A
G103-0500116.....	0602	G103-0501490.....	0601B	G103-0501848.....	0603A	G103-0600260.....	0202
G103-0500117.....	0602	G103-0501491.....	0601B	G103-0501851.....	0603A	G103-0700120.....	0705
G103-0500121.....	0602	G103-0501493.....	0601B	G103-0501852.....	0603A	G103-0700200.....	0705
G103-0500122.....	0602	G103-0501506.....	0601	G103-0501853.....	0603A	G103-0784698.....	1903D
G103-0500123.....	0602	G103-0501507.....	0602	G103-0501854.....	0603A	G103-0802130.....	1905
G103-0500126.....	0602	G103-0501508.....	0602	G103-0501855.....	0603A	G103-0806685.....	1903H
G103-0500129.....	0601	G103-0501509.....	0602	G103-0501856.....	0603A	G103-1000480.....	0603A
G103-0500134.....	0602	G103-0501512.....	0602	G103-0501857.....	0603A	G103-1042738.....	1905-2
G103-0500138.....	0602	G103-0501522.....	0601	G103-0501858.....	0603A	G103-1214461.....	0308A-2
G103-0500192.....	0602	G103-0501524.....	0602	G103-0501859.....	0603A	G103-1281822.....	0107E-1
G103-0500193.....	0602	G103-0501525.....	0602	G103-0501861.....	0601B	G103-1327776.....	1902A
G103-0500194.....	0602	G103-0501526.....	0602	G103-0501868.....	0601	G103-1501812.....	1816
G103-0500195.....	0601B	G103-0501562.....	0602	G103-0501869.....	0602		1903-1
G103-0500197.....	0602	G103-0501563.....	0602	G103-0501871.....	0602	G103-1501820.....	1903B
G103-0500235.....	0601	G103-0501564.....	0602	G103-0501941.....	0602	G103-1510022.....	1905-2
G103-0500242.....	0601	G103-0501571.....	0601	G103-0501942.....	0602	G103-1510655.....	0611
G103-0500243.....	0602	G103-0501574.....	0602	G103-0501943.....	0602	G103-15141425.....	0611B-3
G103-0500250.....	0601B	G103-0501575.....	0602	G103-0501944.....	0602	G103-1515770.....	0611D
G103-0500251.....	0601B	G103-0501576.....	0602	G103-0501959.....	0602	G103-1515801.....	1907
G103-0500252.....	0601B	G103-0501577.....	0602	G103-0501966.....	0603A	G103-1516002.....	0601
G103-0500301.....	0602	G103-0501600.....	0603A	G103-0501968.....	0601B	G103-1516104.....	1903B
G103-0500302.....	0601B	G103-0501603.....	0603A	G103-0501970.....	0601	G103-1516201.....	0601
G103-0500312.....	0603A	G103-0501604.....	0601	G103-0501972.....	0602	G103-1516202.....	1903C
G103-0500440.....	0100	G103-0501606.....	0601	G103-0501976.....	0603A	G103-1517050.....	0704C
	2603	G103-0501608.....	0601	G103-0501982.....	0602	G103-1518022.....	1816
G103-0500446.....	0602	G103-0501609.....	0601	G103-0501983.....	0602		1905-1
G103-0500455.....	0603A	G103-0501611.....	0602	G103-0501984.....	0602	G103-1518042.....	0611B-3
G103-0500488.....	0601	G103-0501612.....	0602	G103-0501985.....	0602	G103-1518052.....	0305
G103-0500489.....	0601	G103-0501613.....	0602	G103-0501986.....	0602	G103-1518055.....	1900B
G103-0500490.....	0601	G103-0501615.....	0601B	G103-0502083.....	0603A	G103-1518056.....	1900B
G103-0500491.....	0601	G103-0501667.....	0603A	G103-0502085.....	0603A	G103-1518094.....	0113B-4
G103-0500493.....	0602	G103-0501680.....	0701	G103-0502086.....	0603A	G103-1518095.....	1903A
G103-0500563.....	0602	G104-0501700.....	0113B-4	G103-0502087.....	0603A	G103-1518302.....	1901A
G103-0500680.....	0603A	G103-0501719.....	0601	G103-0502088.....	0603A	G103-1522411.....	0706A
G103-0500711.....	0601	G103-0501723.....	0602	G103-0502093.....	0601	G103-1523975.....	0611H-1
G103-0500712.....	0602	G103-0501724.....	0602	G103-0502094.....	0601	G103-1524081.....	0301
G103-0500732.....	0601	G103-0501726.....	0602	G103-0502097.....	0601B	G103-1524100.....	0709A
G103-0500761.....	0602	G103-0501727.....	0602	G103-0502101.....	0602	G103-1524211.....	0613B
G103-0500770.....	0603A	G103-0501728.....	0602	G103-0502263.....	0601B		1903E
G103-0500780.....	0604A	G103-0501730.....	0601B	G103-0502264.....	0601B		1903F
G103-0500815.....	0603A	G103-0501733.....	0601B	G103-0502265.....	0602	G103-1524238.....	0601
G103-0500923.....	0602	G103-0501742.....	0602	G103-0502268.....	0602	G103-1524305.....	0611H-1
G103-0500929.....	0602	G103-0501744.....	0603A	G103-0502269.....	0602	G103-1524350.....	0613E
G103-0500939.....	0602	G103-0501745.....	0601B	G103-0502271.....	0601		1903C
G103-0500950.....	0603A	G103-0501746.....	0602	G103-0502273.....	0601B	G103-1524403.....	1906
G103-0500952.....	0602	G103-0501747.....	0602	G103-0502274.....	0601	G103-1524407.....	1906
G103-0500953.....	0602	G103-0501748.....	0601B		0601B	G103-1524434.....	1907
G103-0500954.....	0602	G103-0501750.....	0603A	G103-0502279.....	0601	G103-1524442.....	1906
G103-0500955.....	0602	G103-0501772.....	0601B	G103-0502284.....	0601	G103-1524461.....	0611H-1
G103-0500965.....	0603A		0604	G103-0502295.....	0601	G103-1525821.....	1906
G103-0501042.....	0602	G103-0501778.....	0601B	G103-0502298.....	0602	G103-1525873.....	0613C
G103-0501061.....	0603A	G103-0501782.....	0602	G103-0502301.....	0602		1903E
G103-0501080.....	0604A	G103-0501783.....	0602	G103-0502302.....	0602	G103-1525904.....	0611E
G103-0501089.....	0601	G103-0501787.....	0601	G103-0502303.....	0602	G103-1525920.....	1900-2
G103-0501168.....	0602		0602	G103-0502306.....	0603A	G103-1525950.....	0611E
G103-0501178.....	0602	G103-0501788.....	0601	G103-0502307.....	0601	G103-1526301.....	0611
G103-0501179.....	0602		0602	G103-0502308.....	0601B	G103-1526302.....	0611A
G103-0501182.....	0603A	G103-0501789.....	0602	G103-0502336.....	0603A		

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
G103-1526303	0611	G103-1543506	1901A	G103-1602020	0706A	G103-1674055	1903E
G103-1526304	0611A	G103-1543508	1901A	G103-1603614	1901	G103-1674056	1903D
G103-1526350	0611H-1	G103-1543550	0611H-1	G103-1603616	0308A-2	G103-1674057	1903C
G103-1527754	1903E	G103-1545653	1903F	G103-1605551	1903E	G103-1674058	0301
G103-1527755	1903E	G103-1545676	0611B-1	G103-1609309	1903C	G103-1674061	15A1
G103-1527756	0611H-1	G103-1551855	1903F	G103-1611406	0107E-1	G103-1674069	1903E
G103-1527757	0611H-1	G103-1552101	0308A-2	G103-1611411	1903D	G103-1674150	0611H-2
G103-1527758	0611	G103-1557006	0601	G103-1611475	0107E-1	G103-1674151	0611E
G103-1527759	0611H-1	G103-1569100	0709D	G103-1614004	1906	G103-1674152	0611D
G103-1527760	0611H-1	G103-1569120	0611D	G103-1614011	1907	G103-1674153	0706A
G103-1527772	0602	G103-1569121	0611D	G103-1614012	1903C	G103-1676403	1905-2
G103-1527773	1900B	G103-1569136	1903E	G103-1614013	1903C	G103-1676412	1903C
G103-1527774	1900B	G103-1576454	1907	G103-1614017	1905-1	G103-1679858	0604
G103-1527775	1902A	G103-1582907	0611B-9	G103-1617701	1816	G103-1679900	1903B
G103-1527779	1903C	G103-1583050	0107E-1	G103-1617701	1905-1	G103-1695705	1903D
G103-1527781	1903E	G103-1584614	1009	G103-1617701	1905-2	G103-1695725	0107E-1
G103-1527782	0301	G103-1585203	0100	G103-1617730	0611	G103-1695726	0611
G103-1527783	0301	G103-1585400	0109	G103-1617916	1903E	G103-1707411	0308A-2
G103-1527784	0301	G103-1588211	1903D	G103-1617918	1903E	G103-1714464	0301
G103-1531401	1903E	G103-1588252	0601	G103-1618024	1905-2	G103-1714475	1003
G103-1531504	0611B-6	G103-1588252	0602	G103-1618025	1903E	G103-1714651	0308A-2
G103-1531535	0611B-8	G103-1593641	1905-2	G103-1618151	0611E	G103-1714776	0107E-1
G103-1531611	1903F	G103-1593654	0611D	G103-1618156	0611H-2	G103-1714778	0107E-1
G103-1531612	1903F	G103-1593655	0611D	G103-1632675	0611H-1	G103-1714780	0611H-1
G103-1531613	1903E	G103-1593656	0611D	G103-1632680	0611A	G103-1714786	0611H-2
G103-1531619	1903E	G103-1593657	0611D	G103-1632681	0611H-1	G103-1714787	0611H-1
G103-1531640	0611D	G103-1593658	0611H-1	G103-1632800	0110	G103-1714788	0611H-1
G103-1531704	1903	G103-1593662	1903D	G103-1643005	0308A-2	G103-1714797	0611H-1
G103-1531710	1903D	G103-1593666	0100	G103-1643006	0308A-2	G103-1724800	0611A
G103-1537954	0611D	G103-1593670	0107A	G103-1643007	0301	G103-1733602	0306
G103-1538108	0613F	G103-1593691	0701A	G103-1643008	0301	G103-1733603	1903E
G103-1538110	0613F	G103-1593691	0302	G103-1643070	0301	G103-1733604	1903E
G103-1538111	0613F	G103-1539880	0308A-2	G103-1643071	0301	G103-1733606	0301
G103-1538112	0613F	G103-1593991	0107E-1	G103-1648626	1903E	G103-1733607	0301
G103-1538115	0613F	G103-1593992	0306	G103-1663904	1816	G103-1733675	1904
G103-1538125	0613F	G103-1593992	0107E-1	G103-1663904	1905-1	G103-1733676	1904
G103-1538351	1907	G103-1593994	0107E-1	G103-1671609	0613A	G103-1733679	1904
G103-1538357	0308A-2	G103-1593995	1903E	G103-1671704	1816	G103-1733840	0611H-1
G103-1538552	0611	G103-1593996	1903E	G103-1671704	1905-2	G103-1736582	0611B-8
G103-1538553	0611H-2	G103-1593997	1903D	G103-1673803	0611H-1	G103-1737453	1816
G103-1538554	0611B-6	G103-1593998	1903D	G103-1673805	0611H-1	G103-1738347	1905-1
G103-1538558	0308A-2	G103-1593999	1903D	G103-1673806	0611H-1	G103-1738347	1905-2
G103-1538559	0308A-2	G103-1594000	1903E	G103-1673807	0611H-1	G103-1738452	1816
G103-1538560	1903F	G103-1594001	1903E	G103-1673807	0611H-1	G103-1738452	1905-1
G103-1539652	0611	G103-1594004	1903D	G103-1673808	0611	G103-1738513	1905-1
G103-1539653	0611	G103-1594007	1903E	G103-1673809	0611H-1	G103-1738545	1903E
G103-1539672	0601	G103-1594008	1903E	G103-1673810	0611H-1	G103-1738547	1816
G103-1539673	0601	G103-1594010	1903E	G103-1673811	0611H-1	G103-1738561	1902A
G103-1539730	0611H-2	G103-1594011	1903D	G103-1673813	0611A	G103-1738561	1906
G103-1539732	0613E	G103-1594015	1903F	G103-1673814	0611H-1	G103-1738565	1903
G103-1539977	1905	G103-1594016	0611D	G103-1673816	0611H-1	G103-1738568	1903D
G103-1539988	0611D	G103-1594017	0611E	G103-1673817	0611H-1	G103-1738573	1903
G103-1540058	1903E	G103-1594018	0611B-7	G103-1673825	0611A	G103-1738579	1903E
G105-1540059	0613D	G103-1594018	0611B-2	G103-1673826	0611A	G103-1738581	0611D
G103-1540062	0613F	G103-1594019	0611B-1	G103-1673828	0611H-1	G103-1738581	0611D
G103-1540085	1903E	G103-1594020	0611D	G103-1673829	0611H-1	G103-1738583	0611B-4
G103-1540085	0613B	G103-1594058	0611D	G103-1673830	0611H-1	G103-1738584	0611D
G103-1540113	0611H-2	G103-1594110	0709B	G103-1673833	0611H-1	G103-1738589	1903C
G103-1540133	1903D	G103-1594110	0611B-9	G103-1673834	0611A	G103-1738595	1903E
G103-1540141	0301	G103-1596015	1903A	G103-1673835	0611A	G103-1738596	1903E
G103-1540155	0611B-7	G103-1596018	1903D	G103-1673836	0611H-1	G103-1738601	1903E
G103-1540156	0611A	G103-1596019	1903E	G103-1673838	0611A	G103-1738607	0301
G103-1540176	2201C	G103-1596020	1903E	G103-1673838	0611A	G103-1738608	0301
G103-1541366	0611B-1	G103-1596030	1903D	G103-1673982	0613A	G103-1738613	1902A
G103-1543000	0611D	G103-1596036	1903D	G103-1674051	1903C	G103-1738616	1903E
		G103-1596320	0113B-4	G103-1674053	1903C	G103-1738630	1903B
		G103-1596360	0611	G103-1674053	1903F		

Number	Group	Number	Group	Number	Group	Number	Group
G103-1738678.....	1903D	G103-1781724.....	0613	G103-1789771.....	1903D	G103-1849925.....	1903D
G103-1738682.....	1903	G103-1781729.....	1903F	G103-1789772.....	1903E	G103-1881795.....	0301
G103-1738683.....	1903D	G103-1781753.....	1907	G103-1789773.....	1903E	G103-2110476.....	1903
G103-1738747.....	1903G		2201C	G103-1789774.....	1903E	G103-2110477.....	0105B
G103-1738751.....	1903G	G103-1781795.....	0301	G103-1789802.....	0611B-6	G103-2110478.....	0105B
G103-1738775.....	0611B-9	G103-1781831.....	0611H-2	G103-1791900.....	0301	G103-2111403.....	0611B-2
G103-1738882.....	1903E	G103-1781865.....	0611D	G103-1791938.....	0301	G103-2118001.....	1903A
G103-1738886.....	0301	G103-1780866.....	0611D	G103-1791951.....	0611H-1	G103-2121338.....	1903E
G103-1738927.....	0611B-4	G103-1781868.....	0611D	G103-1791952.....	0611H-1	G103-2124069.....	1903C
G103-1738930.....	0611B-4	G003-1781872.....	1903E	G103-1791954.....	0611H-3	G103-2124070.....	1903
G103-1738931.....	1903E	G103-1781873.....	1903E	G103-1791959.....	1907	G103-2124269.....	0308A-2
G103-1738932.....	1903E	G103-1781874.....	1903C	G103-1791998.....	1907	G103-2124538.....	1906
G103-1738933.....	1903E		1903E	G103-1792013.....	1907	G103-2128016.....	0611B-9
G103-1738934.....	1903E	G103-1781875.....	1903E	G103-1792046.....	0107E-1	G103-2131616.....	1903E
G103-1740000.....	0611H-2	G103-1781876.....	1903E	G103-1792049.....	0611B-1	G103-2131617.....	0701
G103-1740246.....	0611B-6	G103-1781877.....	1903D	G103-1792051.....	0611B-2	G103-2137983.....	1905-2
G103-1740247.....	0611E	G103-1781878.....	1903E	G103-1792053.....	0611B-1	G103-2140084.....	1903D
G103-1740253.....	0611E	G103-1781879.....	1903D	G103-1792080.....	1905	G103-2140087.....	1903C
G103-1740254.....	0611B-3	G103-1781880.....	1903D	G103-1792092.....	0301	G103-2140088.....	1903E
G103-1740259.....	0201B	G103-1781895.....	0611E	G103-1792093.....	0301	G103-2140089.....	1903E
G103-1740440.....	1903E	G103-1781914.....	1903A	G103-1792102.....	0611D	G103-2140090.....	1903E
G103-1740533.....	0701	G103-1783131.....	1903E	G103-1792360.....	0611H-1	G103-2170269.....	1903C
G103-1740561.....	0107E-1	G103-1783260.....	1816	G103-1792475.....	0107E-1	G103-2184600.....	1903E
G103-1740566.....	0611H-4		1905-1	G103-1793650.....	0611H-1	G103-2188266.....	0602
G103-1740567.....	0611D	G103-1783270.....	1816	G103-1793659.....	0611H-1	G103-2194021.....	1903E
G103-1740572.....	0301		1905-1	G103-1793670.....	0611H-1	G103-2194022.....	1903E
G103-1740573.....	0301	G103-1783276.....	1905-1	G103-1793726.....	0613	G103-2194023.....	1903E
G103-1740589.....	0701	G103-1784666.....	1903D	G103-1796150.....	0611A	G103-2194024.....	1903E
G103-1740725.....	0611B-8	G103-1784699.....	1903D	G103-1796441.....	0611B-9	G103-2194031.....	0302
G103-1740850.....	1903E	G103-1784702.....	1903D	G103-1806150.....	1903C	G103-2196000.....	1903D
G103-1740851.....	0611B-8	G103-1784704.....	1903D	G103-1807804.....	0308A-2	G103-2196001.....	1008A
G103-1740854.....	1903E	G103-1784705.....	1903E	G103-1807859.....	0308A-2	G103-2196002.....	1008A
G103-1740855.....	1903D	G103-1784709.....	1903E	G103-1807861.....	0308A-2	G103-2211402.....	1903E
G103-1742810.....	0601	G103-1784721.....	1903E	G103-1807862.....	0308A-2	G103-2211424.....	1903D
G103-1742850.....	1903F	G103-1784781.....	0611E	G103-1807863.....	0308A-2	G103-2217863.....	1903E
G103-1746030.....	0611	G103-1784812.....	1903D	G103-1807879.....	1903G	G103-2217884.....	1903E
G103-1746153.....	1903E	G103-1784842.....	0602	G103-1807881.....	1903G	G103-2276499.....	0611D
G103-1751630.....	1009	G103-1784850.....	1903C	G103-1807897.....	1903G	G103-2311423.....	1903E
	1903A	G103-1784946.....	1903E	G103-1807898.....	1903G	G103-2314841.....	0308A-2
G103-1764803.....	1907	G103-1784963.....	1905-2	G103-1807899.....	0308A-2	G103-2338701.....	1903C
G103-1767562.....	0611H-4	G103-1784964.....	1905-2	G103-1807951.....	1903G	G103-2338702.....	1903C
G103-1767563.....	0611H-1	G103-1785145.....	0611H-1	G103-1808270.....	1903E	G103-2338703.....	1903C
G103-1767661.....	1816	G103-1786867.....	0611D	G103-1808271.....	1903E	G103-2338705.....	1903E
	1905-1	G103-1787053.....	0602	G103-1808300.....	1905	G103-2338707.....	1903E
G103-1767686.....	0611B-6	G103-1787057.....	0301	G103-1819302.....	0107E-1	G103-2338708.....	1903E
G103-1767692.....	0613E	G103-1787175.....	0611B-3	G103-1827082.....	0611B-6	G103-2338709.....	1903E
G103-1767701.....	1903E	G103-1787176.....	0611B-3	G103-1827201.....	0611B-6	G103-2338750.....	0103B
G103-1769674.....	1816	G103-1789451.....	1903D	G103-1827202.....	0611B-6	G103-2338820.....	1903E
	1905-1	G103-1789465.....	1900B	G103-1842700.....	2209	G103-2338821.....	1903E
G103-1769675.....	1903F	G103-1789591.....	1804	G103-1842704.....	0602	G103-2340204.....	1903E
G103-1769677.....	0603A	G103-1789594.....	0602	G103-1842736.....	1903	G103-2340205.....	2203
G103-1769679.....	0611B-4	G103-1789601.....	1903E	G103-1842738.....	1816	G103-2340209.....	2209
G103-1769852.....	1903E	G103-1789602.....	1903E	G103-1842741.....	0613B	G103-2364847.....	1903E
G103-1769875.....	0611B-4	G103-1789603.....	1903E	G103-1842766.....	0611	G103-2364848.....	1903E
G103-1769974.....	1906	G103-1789607.....	0611A	G103-1842794.....	1903F	G103-2369899.....	0102
G103-1773232.....	0706A	G103-1789608.....	0611B-4	G103-1842799.....	0611H-2		2301
G103-1773247.....	1903C	G103-1789609.....	0611E	G103-1842851.....	0611H-1	G103-2373454.....	1903E
G103-1773248.....	1903C	G103-1789634.....	0107E-1	G103-1842853.....	0611H-1	G103-2373474.....	1903E
G103-1773302.....	1903C	G103-1789649.....	1902A	G103-1842855.....	0611H-1	G103-2381997.....	1905-2
G103-1773303.....	1903C		1904	G103-1842856.....	0611E	G103-2384600.....	1903
G103-1773315.....	0611B-5	G103-1789652.....	0301	G103-1842950.....	0611H-1	G103-2384604.....	1903E
G103-1773321.....	0611E	G103-1789667.....	0611B-8	G103-1842951.....	0611E	G103-2384804.....	1903E
G103-1773381.....	1903E	G103-1789763.....	0611D	G103-1842961.....	0611B-8	G103-2389798.....	1903E
G103-1780450.....	0301	G103-1789767.....	1903C	G103-1845030.....	1907	G103-2392405.....	0602
G103-1781451.....	2209	G103-1789768.....	1903E	G103-1846852.....	0611	G103-2393784.....	1903C
G103-1781721.....	1905-1	G103-1789769.....	1903E	G103-1847620.....	1902A	G103-2407839.....	1903G

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
G103-2407840.....	1903G	G104-0102794.....	0603A	G104-1585002.....	0301	G104-1789606.....	0613B
G103-2407841.....	1903G	G104-0102795.....	0603A	G104-1592997.....	0301	G104-1789608.....	0611B-4
G103-2427253.....	1903E	G104-0103356.....	0308A-1	G104-1593665.....	0301	G104-1792344.....	0103
G103-2443014.....	1903C	G104-0103381.....	0301	G104-1593819.....	0107A	G104-1792345.....	0103
G103-2443016.....	0611H-1	G104-0103412.....	0308A-1	G104-1593820.....	0107A	G104-1792345.....	0103A
G103-2443069.....	0602	G104-0103442.....	0603A	G104-1593822.....	0107A	G104-1793699.....	0613
G103-5230678.....	0709D	G104-0103443.....	0603A	G104-1593823.....	0107A	G104-1800375.....	0502
G103-5261216.....	0701	G104-0103444.....	0603A	G104-1593824.....	0107A	G104-1827113.....	0301
G103-5261217.....	0701	G104-0103473.....	0603A	G104-1593840.....	0107A	G104-1827114.....	0301
G103-5303952.....	0301	G104-0103474.....	0603A	G104-1593848.....	0107A	G104-1827121.....	0302
G103-5309412.....	1009	G104-0103481.....	0603A	G104-1593916.....	0100	G104-1842743.....	0301
G103-5309413.....	1009	G104-0103536.....	0305	G104-1593917.....	0100	G104-1842755.....	0301
G103-6258838.....	0611D	G104-0103580.....	0305	G104-1593955.....	0301	G104-1842846.....	0113B
G103-6327393.....	1906	G104-0194011.....	0100	G104-1593994.....	0100	G104-1851200.....	0106B
	1907	G104-0194024.....	0100	G104-1593996.....	0301		1816
G103-6541627.....	0301	G104-0300079.....	1903A	G104-1593997.....	0301	G104-2137982.....	1905-1
G103-7006752.....	0604A	G104-0300370.....	1905	G104-1593998.....	0301		1905-2
G103-7006753.....	0604A	G104-0300426.....	0301	G104-1593999.....	0301		1816
G104-0100152.....	0308A-1	G104-0300864.....	2401	G104-1594000.....	0301	G104-2137983.....	1905-1
G104-0100282.....	0305	G104-0302421.....	1903E	G104-1594002.....	0301		1905-2
G104-0100368.....	0603A	G104-0302520.....	0301	G104-1594003.....	0301	G104-2139982.....	1903E
G104-0100488.....	0308A-1	G104-0303373.....	1816	G104-1596180.....	0603B	G104-2139986.....	2401
G104-0100534.....	0603A		1905-1	G104-1596190.....	0603B	G104-2209202.....	0308A-1
G104-0100537.....	0603A	G104-0303938.....	2401	G104-1596260.....	0106B	G104-2274299.....	1804
G104-0100539.....	0603A	G104-0305267.....	2401	G104-1602020.....	0603B	G104-2314850.....	0603B
G104-0100543.....	0603A	G104-0305496.....	0613D	G104-1617527.....	0100	G104-2338815.....	0103
G104-0100544.....	0603A	G104-0305530.....	1905	G104-1617581.....	0100	G104-2338656.....	1905-2
G104-0100545.....	0603A	G104-0400310.....	0705	G104-1617710.....	1816	G104-2338691.....	1804
G104-0100546.....	0603A	G104-0401883.....	0705		1905-1	G104-2338816.....	0103
G104-0100642.....	0604A	G104-0401945.....	0705B	G104-1617714.....	0709C	G104-2382197.....	0611A
G104-0100649.....	0305	G104-0402025.....	1009	G104-1642901.....	0301	G104-2389830.....	1804
G104-0101003.....	0305	G104-0403461.....	0704B	G104-1674191.....	1906	G104-2398791.....	0606C
	0305A	G104-0500471.....	0613B	G104-1687400.....	0100	G104-2398802.....	0606C
G104-0101115.....	0301	G104-0500791.....	0603A	G104-1687401.....	0100		1816
G104-0101138.....	0301	G104-0500910.....	0604A	G104-1714653.....	0301	G104-2447740.....	1905-1
G104-0101144.....	0603A	G104-0501075.....	0308A-1	G104-1733752.....	0301		1905-2
G104-0101148.....	0301	G104-0501282.....	0308A-1	G104-1733753.....	0301	G104-2551752.....	1903C
G104-0101173.....	0301		0613D	G104-1733754.....	0301	G104-2564003.....	1903C
G104-0101200.....	0107E-1	G104-0502190.....	0613F	G104-1733801.....	1904	G104-2576553.....	0601
G104-0101223.....	0308A-1		0613B	G104-1733802.....	1904	G104-2577000.....	1903C
G104-0101363.....	0301	G104-0502216.....	0613E	G104-1733802.....	1904	G104-2580241.....	1903F
G104-0101372.....	0603A	G104-0502876.....	0603A	G104-1738482.....	1903E	G104-2598700.....	0603A
G104-0101379.....	0308A-1	G104-0503267.....	0611A	G104-1738548.....	0103	G104-2598700.....	0603A
G104-0101398.....	0301	G104-0503267.....	0611A	G104-1738568.....	0301	G104-2666827.....	1903E
G104-0101399.....	0603A	G104-0504061.....	0308A-1	G104-1738825.....	0301	G104-2666827.....	1903E
G104-0101492.....	0301	G104-0504075.....	0308A-1	G104-1738826.....	0301	G104-2709025.....	1903C
G104-0101543.....	2203	G104-0504492.....	0606C	G104-1745830.....	0100	G104-2719990.....	0606C
G104-0101556.....	0301	G104-0504679.....	0606C	G104-1767621.....	0103	G104-2737001.....	1903E
G104-0101562.....	2203	G104-0601231.....	0902	G104-1767649.....	0113B	G104-2798770.....	1903C
G104-0101665.....	0301	G104-0601651.....	0902	G104-1768678.....	0611B-4	G104-2917493.....	1903F
G104-0101713.....	0305	G104-1292344.....	0103A	G104-1769782.....	0113B	G104-2979807.....	0305
G104-0101715.....	0301	G104-1510360.....	0604	G104-1769974.....	1907	G104-2982791.....	2203
G104-0101719.....	0308A-1	G104-1515725.....	0301	G104-1781702.....	0607	G104-2982794.....	1903C
G104-0101867.....	0308A-1	G104-1526216.....	0613	G104-1781703.....	0301	G104-2982795.....	1903D
G104-0102062.....	0604A		0613B	G104-1781743.....	1816	G104-2982798.....	2203
G104-0102142.....	0603A	G104-1526217.....	0613		1905-1	G104-2983701.....	1903F
G104-0102145.....	0603A		0613B	G104-1781797.....	1903E	G104-3066790.....	1903F
G104-0102147.....	0603A	G104-1527712.....	1903E	G104-1781798.....	1903E	G104-3068625.....	1804
G104-0102163.....	2203	G104-1531591.....	0305	G104-1781839.....	1903E	G104-3072016.....	1903C
G104-0102166.....	0301	G104-1538168.....	0301	G104-1783000.....	0107A	G104-3188845.....	0601
G104-0102226.....	0603A	G104-1539703.....	0604	G104-1784685.....	0100	G104-5210382.....	0709
G104-0102232.....	0301	G104-1539850.....	0604		1816	G104-5233709.....	1804
G104-0102526.....	0305	G104-1555302.....	1905-1	G104-1784846.....	1905-1	G104-5233897.....	1803C
G104-0102635.....	0305		1905-2		1905-2	G104-5245502.....	0606C
G104-0102792.....	0603A	G104-1569298.....	0709D	G104-1787143.....	0607	G104-5246223.....	1803C
G104-0102793.....	0603A	G104-1578102.....	0503A	G104-1789604.....	0613	G104-5277610.....	15C1-3
		G104-1582930.....	0100		0613B	G104-5277611.....	15C1-3

Number	Group	Number	Group	Number	Group	Number	Group
G104-5277875.....	0304	G107-0124255.....	0110	G127-0443019.....	1903D	G167-0114099.....	1805
G104-5296426.....	2304M	G118-0314834.....	0611C	G127-6229988.....	1906	G167-0115990.....	0100
G104-5296601.....	2304M	G124-6169328.....	0113B-2	G128-0381992.....	0603A	G167-0117038.....	0610
G104-5303306.....	0301	G124-6902216.....	0113B-1	G130-0443032.....	0601B	G167-0118000.....	0100
G104-5303958.....	0301	G126-0314848.....	0301C	G133-0140003.....	1903B	G167-0118020.....	0105B
G104-5329976.....	0606	G127-0102008.....	1903D	G133-0314601.....	1903D	G167-0118022.....	1306
G104-5347188.....	1902	G127-0102010.....	1900-1	G133-0340671.....	1903B	G167-0118023.....	1008A
G104-5347199.....	1902	G127-0102207.....	1903D	G133-0369707.....	1903B	G167-0118028.....	0305A
G104-5347200.....	1902B	G127-0118007.....	1903D	G133-0373251.....	1903B	G167-0124252.....	1008A
G104-5381347.....	1902	G127-0124254.....	1903D	G133-0389709.....	1903B	G167-0124253.....	0305A
G104-5381452.....	1902	G127-0124255.....	1903D	G133-0392001.....	1903B	G167-0124254.....	0305A
G104-5383092.....	0304	G127-0124256.....	1903D	G134-0124155.....	1903B	G167-0125800.....	1805H
G104-5383147.....	0304	G127-0124257.....	1903D	G134-0333660.....	1904	G167-0125825.....	0100
G104-5383613.....	0606C	G127-0124262.....	1900-1	G137-0110475.....	1804	G167-0125825.....	0601A
G104-5384603.....	0608	G127-0124263.....	1900-1	G137-0113895.....	1804	G167-0125826.....	0203
G104-5384679.....	0606	G127-0124264.....	1900-1	G137-0118001.....	0902	G167-0125827.....	15D1
G104-5384680.....	0606	G127-0124534.....	1907	G137-0131600.....	1803C	G167-0125829.....	0110
G104-5384681.....	0606	G127-0124535.....	1906	G137-0340255.....	0902	G167-0125892.....	0701
G104-5384683.....	0606C	G127-0125808.....	1901A	G137-0367453.....	1804	G167-0126850.....	1304
G104-5384698.....	0606C	G127-0125810.....	1906	G137-0367640.....	0902	G167-0127876.....	1303
G104-5384713.....	0606C	G127-0137802.....	2201C	G137-0382000.....	0902	G167-0128013.....	15D1
G104-5388114.....	0501C	G127-0137804.....	1900-1	G137-0384784.....	0902	G167-0128014.....	0107J
G104-5412533.....	1905A	G127-0140094.....	2201C	G137-0442610.....	0902	G167-0128015.....	0611C
G104-5414692.....	0107E	G127-0140100.....	2201C	G137-0442612.....	0902	G167-0128016.....	15D1
G104-5416569.....	0605	G127-0143546.....	1903D	G137-0442613.....	0902	G167-0131100.....	2301A
G104-5591964.....	1804	G127-0194018.....	1903D	G137-0442650.....	1804	G167-0131103.....	0606C
G104-5601076.....	0300	G127-0196004.....	1903D	G140-0100131.....	0305	G167-0131104.....	0606C
G104-5624346.....	0100	G127-0196007.....	1903D	G145-0131553.....	0613B	G167-0131105.....	0606C
G104-5636150.....	0606C	G127-0209250.....	1900-1	G147-0273800.....	0601B	G167-0131106.....	0606C
G104-5636173.....	0606C	G127-0209299.....	1903D	G147-0273801.....	0601B	G167-0131107.....	0606C
G104-5636174.....	0606C	G127-0209300.....	1903D	G147-0369903.....	0902	G167-0131108.....	0606C
G104-5636175.....	0606C	G127-0217861.....	1903D	G147-0389807.....	0302	G167-0131109.....	0606C
G104-5636197.....	0606C	G127-0217862.....	1903D	G147-0443063.....	0601B	G167-0131110.....	0606C
G104-6201443.....	0301C	G127-0263922.....	1903D	G147-0443088.....	0601B	G167-0131111.....	0606C
G104-6210374.....	2401	G127-0330440.....	0613	G148-0110500.....	0613B	G167-0131114.....	0610
G104-6210399.....	0304	G127-0333669.....	1904	G148-0110592.....	0613B	G167-0131114.....	2602B
G104-6264007.....	1902	G127-0334061.....	2201C	G148-0131553.....	0613B	G167-0131114.....	0100
G104-6296294.....	0611B-1	G127-0338706.....	1900-1	G148-0151600.....	0302	G167-0131250.....	0610B-1
G104-6298238.....	0606C	G127-0338731.....	1903D	G148-0209299.....	0301	G167-0131251.....	0100
G104-6298252.....	0613	G127-0364855.....	1903A	G160-0427267.....	0302	G167-0131251.....	0604A
G104-6298254.....	0613	G127-0364865.....	1903A	G162-1187082.....	0902	G167-0131252.....	0100
G104-6300620.....	1905A	G127-0364889.....	1906	G162-1305868.....	0305	G167-0131252.....	0606C
G104-6582183.....	1905A	G127-0369901.....	1903A	G162-1583726.....	0305	G167-0131253.....	0100
G104-7001483.....	0902	G127-0381997.....	1903A	G162-1667106.....	0601B	G167-0131253.....	0604A
G104-7002479.....	0306	G127-0382015.....	1903D	G162-1681969.....	0902	G167-0131484.....	0110
G104-7005503.....	0501C	G127-0382016.....	0613	G162-1789677.....	0601B	G167-0131485.....	0107D
G104-7005504.....	0113B	G127-0382035.....	0613B	G163-0125837.....	1900-2	G167-0131545.....	1307
G104-7005505.....	0113B	G127-0382035.....	1900A	G163-0128021.....	0301	G167-0131546.....	2012
G104-7005530.....	0709	G127-0382040.....	1900	G163-0209301.....	1900-2	G167-0131547.....	2012
G104-7005550.....	2401	G127-0382835.....	1903D	G163-0209307.....	0304	G167-0131548.....	1303
G104-7005582.....	0606C	G127-0384602.....	1903D	G163-0384975.....	1900-2	G167-0131549.....	1008A
G104-7008965.....	0609	G127-0384605.....	1903D	G163-0389821.....	1900-2	G167-0131550.....	1304
G104-7008991.....	0606C	G127-0384625.....	1903D	G163-0393788.....	0606	G167-0131551.....	1304
G104-7008992.....	0300	G127-0384778.....	1900-1	G163-0443067.....	1905-1	G167-0131552.....	2208C
G104-7008993.....	0300	G127-0384787.....	1900-1	G163-0443069.....	1900-2	G167-0131552.....	0113B-1
G104-7008994.....	0300	G127-0384794.....	1900-1	G163-0443069.....	1903C	G167-0131614.....	0107E-1
G104-7008995.....	0300	G127-0384795.....	1900-1	G163-7005618.....	1903C	G167-0136800.....	0301C
G104-7009153.....	0606C	G127-0384800.....	1903D	G163-7008423.....	1811E	G167-0136801.....	2208E
G104-7009182.....	0606C	G127-0384801.....	1903D	G163-7050009.....	0610	G167-0136802.....	0304
G104-7034749.....	0304	G127-0392188.....	1900-1	G167-0101800.....	1008A	G167-0137400.....	0301C
G104-7034942.....	0304	G127-0392191.....	1907	G167-0101801.....	0709D	G167-0137401.....	0301C
G104-7034980.....	0606C	G127-0392192.....	1907	G167-0107476.....	0605	G167-0137984.....	1805H
G104-7034982.....	2304M	G127-0392193.....	1907	G167-0110470.....	1306	G167-0137985.....	15C1-A
G104-7067182.....	1805B	G127-0392196.....	1907	G167-0110471.....	1306	G167-0137986.....	15D1
G105-0103552.....	0202	G127-0392220.....	1907	G167-0110472.....	1306		
G106-1738615.....	1903D	G127-0392261.....	1903D	G167-0110473.....	1306		

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
	0107J		15A1	G167-0217862.....	0901	G167-0364801.....	0610B-2
	0304	G167-0176892.....	15D1	G167-0217863.....	0901	G167-0367637.....	1303
G167-0137987.....	0606C	G167-0178259.....	0612	G167-0217864.....	1008A	G167-0369899.....	1008A
	0611C	G167-0180698.....	1701	G167-0221023.....	1008A	G167-0373269.....	0305A
	2401	G167-0180699.....	1701	G167-0232145.....	2208C	G167-0373270.....	0305A
	0605B	G167-0183053.....	2603	G167-0248784.....	0902	G167-0373271.....	0305A
G167-0137988.....	0606C	G167-0183237.....	1303	G167-0258750.....	2208D	G167-0373272.....	15A1
	0709D	G167-0184601.....	0901	G167-0271600.....	0608A	G167-0373273.....	15C1-A
	2401	G167-0184602.....	0901	G167-0271837.....	1805H	G167-0373274.....	15C1-A
	0107J	G167-0184603.....	0108B	G167-0274000.....	15C1-B	G167-0373275.....	15C1-A
G167-0137989.....	0304	G167-0186001.....	2012	G167-0274001.....	15D1	G167-0373276.....	15C1-A
	0611C	G167-0186802.....	0304	G167-0274002.....	15A1	G167-0373277.....	15D1
	0709D	G167-0190576.....	0607C	G167-0276315.....	0605C	G167-0373278.....	15D1
	0304	G167-0190577.....	0607C	G167-0276499.....	1305	G167-0373375.....	15C1-A
G167-0137990.....	0606C		0100	G167-0276520.....	1305	G167-0373376.....	15D1
	0611F	G167-0194015.....	0113B-8	G167-0280260.....	1801B	G167-0373377.....	15D1
	0107J	G167-0194019.....	1800	G167-0280261.....	1801B	G167-0381991.....	1304
G167-0137991.....	0304	G167-0194020.....	1800	G167-0294800.....	1809	G167-0381993.....	0305A
	0606C	G167-0194021.....	1800	G167-0294850.....	0110	G167-0381994.....	0301
	2401	G167-0194023.....	2208C	G167-0296800.....	0203	G167-0381995.....	0901
	0605B	G167-0194024.....	0709D		0401	G167-0381997.....	0110
G167-0137992.....	0709D	G167-0194025.....	0300	G167-0307457.....	0304	G167-0381999.....	1809
	1304	G167-0194026.....	0300	G167-0307550.....	0304	G167-0382090.....	1304
	2401	G167-0194027.....	1809	G167-0307552.....	0107J	G167-0382900.....	1305
G167-0137999.....	0606C	G167-0194028.....	1809	G167-0307553.....	0107J	G167-0382901.....	2208C
G167-0138000.....	0606C	G167-0194061.....	0605	G167-0307556.....	0304	G167-0382902.....	1306
G167-0138001.....	0606C	G167-0194062.....	0605	G167-0307557.....	0107J	G167-0382904.....	1008A
G167-0138002.....	0606C	G167-0196000.....	2012	G167-0314839.....	1304	G167-0382905.....	1303
G167-0139850.....	2208C	G167-0196002.....	0113B-4	G167-0314840.....	1305		2012
G167-0139851.....	15C1-A	G167-0196030.....	1003	G167-0314841.....	1305	G167-0382906.....	1307
	15C1-B	G167-0196031.....	1003	G167-0314843.....	0305A	G167-0383010.....	1804
G167-0139870.....	0601B	G167-0196032.....	0113-5	G167-0314846.....	2208F	G167-0384600.....	2012
G167-0139871.....	0606E	G167-0196320.....	0100	G167-0314848.....	1801B	G167-0384601.....	1307
G167-0139890.....	2205		0601	G167-0314850.....	0605C	G167-0384602.....	1303
G167-0139904.....	0107J	G167-0200002.....	1809	G167-0314851.....	2602B	G167-0384603.....	2012
G167-0139924.....	15D1	G167-0202284.....	0100	G167-0314853.....	0203	G167-0384604.....	2208D
G167-0139925.....	15C1-A		0305	G167-0314854.....	1804	G167-0384605.....	1306
	15D1	G167-0203784.....	0301-1	G167-0314876.....	2208F	G167-0384609.....	15D1
G167-0139945.....	0107B	G167-0203922.....	1305	G167-0333000.....	0300	G167-0384610.....	15A1
	0709	G167-0205700.....	2301	G167-0333600.....	1905	G167-0384611.....	15A1
G167-0140064.....	0301C	G167-0209150.....	2301		2301A	G167-0384627.....	2208D
G167-0140065.....	0107J	G167-0209156.....	2301	G167-0333675.....	1804	G167-0384628.....	1008A
	2208D	G167-0209390.....	0100	G167-0333951.....	1809	G167-0384824.....	1003
G167-0140180.....	1003		0604A	G167-0336092.....	15D1	G167-0385608.....	0203
G167-0140181.....	1003	G167-0209436.....	1805H	G167-0336145.....	15C1-A	G167-0387092.....	1307
G167-0143625.....	1803C	G167-0211400.....	0607	G167-0338701.....	1305	G167-0387093.....	1306
G167-0149315.....	1701	G167-0214098.....	1805H	G167-0338703.....	1805H	G167-0387094.....	1306
G167-0149316.....	1701	G167-0216800.....	2301A	G167-0338704.....	1304	G167-0387184.....	1304
G167-0151715.....	1002	G167-0217790.....	0100	G167-0338706.....	1306	G167-0387204.....	2012
G167-0155706.....	1306	G167-0217810.....	0107J	G167-0338707.....	1008A	G167-0387205.....	2012
G167-0157000.....	0300	G167-0217811.....	0107J	G167-0338708.....	1305	G167-0389400.....	2012
G167-0166012.....	0611C	G167-0217812.....	0107J	G167-0338709.....	15C1-A	G167-0389401.....	2012
G167-0168000.....	0709D	G167-0217813.....	0107J	G167-0338710.....	15D1	G167-0389402.....	2012
G167-0168010.....	0107J	G167-0217814.....	0709D	G167-0338711.....	15D1	G167-0389403.....	1306
G167-0168011.....	2205	G167-0217815.....	0709D	G167-0338714.....	0203	G167-0389404.....	1304
	0605B	G167-0217816.....	0709D	G167-0338811.....	0300	G167-0389450.....	0608A
G167-0168012.....	0709D	G167-0217817.....	0709D	G167-0338854.....	0103	G167-0389491.....	1304
G167-0168015.....	0107J	G167-0217818.....	0304	G167-0340200.....	1803B	G167-0389494.....	15C1-A
G167-0168016.....	0107J	G167-0217819.....	0304	G167-0340201.....	1803B		15D1
	0107J	G167-0217820.....	0304	G167-0340202.....	1305	G167-0389496.....	0709D
G167-0168017.....	0709D	G167-0217821.....	0304	G167-0340204.....	0901	G167-0389520.....	1303
	0100	G167-0217822.....	0304	G167-0340206.....	0901	G167-0389792.....	1307
G167-0170338.....	2302B	G167-0217823.....	0304	G167-0340206.....	0901	G167-0389793.....	1307
	0100	G167-0217824.....	0304	G167-0340662.....	0301	G167-0389817.....	1307
G167-0170348.....	0100	G167-0217860.....	0901	G167-0344122.....	1305	G167-0391892.....	2301A
G167-0176638.....	2402	G167-0217861.....	0901	G167-0347876.....	2208C	G167-0392085.....	0300

Number	Group	Number	Group	Number	Group	Number	Group
G167-0392286.....	1304	G167-0443016.....	0305A	G168-7035285.....	1903B	G168-7037067.....	1906
G167-0392287.....	0101	G167-0443017.....	1008A	G168-7035286.....	1903B	G168-7037067.....	2302B
	0305	G167-0443018.....	1306	G168-7035287.....	1903	G168-7037068.....	1906
G167-0392288.....	0113B-3	G167-0443021.....	0308A-2	G168-7035288.....	1903C	G168-7037070.....	0302
G167-0392289.....	0101A	G167-0443023.....	0305A	G168-7035300.....	1903D	G168-7037071.....	0302
	0105B	G167-0443029.....	0704B	G168-7035302.....	1900B	G168-7037104.....	0402
G167-0392290.....	0105C	G167-0443031.....	1809	G168-7035304.....	1900A	G168-7037105.....	0402
	0107J	G167-0443033.....	0110	G168-7035305.....	1900A	G168-7037106.....	1907
	0108A	G167-0446892.....	1303	G168-7035306.....	1900A	G168-7037107.....	0113B-3
G167-0392291.....	0113B-1	G167-0446893.....	1306	G168-7035307.....	1900A	G168-7037119.....	0606E
	0302	G167-0482430.....	0713	G168-7035308.....	1900A	G168-7037120.....	0606
G167-0392292.....	0107C	G167-0482431.....	0713	G168-7035309.....	1900A	G168-7037121.....	0606
	0107	G167-0482432.....	0703A	G168-7035310.....	1900A	G168-7037122.....	0606
G167-0392293.....	0108B		2012	G168-7035311.....	1900A	G168-7037123.....	0606
	0113B-2	G167-0482433.....	0203	G168-7035312.....	1903B	G168-7037126.....	0606D
G167-0392295.....	0107	G167-0718002.....	0709D	G168-7035314.....	0613	G168-7037128.....	0610B
G167-0392296.....	2208C	G167-2110460.....	1804	G168-7035315.....	0613	G168-7037129.....	0610B
G167-0392297.....	1307	G167-7002556.....	0300	G168-7035316.....	1904	G168-7037135.....	0606C
	0107A	G167-7002636.....	2602B	G168-7035318.....	0613F		0611H-3
	0113B-4	G167-7002784.....	2603	G168-7035319.....	0613D	G168-7037136.....	0606C
G167-0392298.....	0301	G167-7002785.....	2401	G168-7035320.....	0613E	G168-7037139.....	0606C
	0603A	G167-7002794.....	2401	G168-7035321.....	0613F	G168-7037141.....	0613
G167-0392300.....	0901	G167-7002799.....	2401	G168-7035322.....	0613F	G168-7037150.....	2603
G167-0392301.....	0203	G167-7002993.....	2401	G168-7035323.....	0613F	G168-7037151.....	1008
G167-0392746.....	1304	G167-7002994.....	2401	G168-7035324.....	0613F	G168-7037152.....	1008
G167-0395099.....	0704B	G167-7002995.....	2401	G168-7035326.....	0613F	G168-7037162.....	1305
G167-0395100.....	0704B	G167-7002996.....	2401	G168-7035327.....	0613E	G168-7037167.....	0203
G167-0396046.....	2205	G167-7007016.....	0605B	G168-7035328.....	0613D	G168-7037172.....	15C1-A
G167-0396230.....	2012	G167-7007017.....	1303	G168-7035329.....	0613D	G168-7037176.....	15C1-B
G167-0396350.....	0107D	G167-7007018.....	2205	G168-7035330.....	0613D	G168-7037181.....	1805H
G167-0396385.....	2301	G167-7007019.....	1008A	G168-7035332.....	0613F	G168-7037182.....	1805H
G167-0398492.....	0304	G167-7007020.....	0401	G168-7035333.....	0613B	G168-7037183.....	1805H
G167-0398494.....	0107J	G167-7007021.....	0605B	G168-7035334.....	0613A	G168-1037184.....	1805H
G167-0400050.....	15C1-B	G167-7035303.....	1900A	G168-7035335.....	0613E	G168-7037185.....	1805H
G167-0400992.....	1303	G167-7039739.....	1008A	G168-7035336.....	0613D	G168-7037186.....	1805H
G167-0401020.....	1306	G168-2039411.....	0606C	G168-7035337.....	0613D	G168-7037187.....	1805H
G103-0402060.....	1003	G168-5293015.....	1903C	G168-7035338.....	0613B	G168-7037189.....	1902
G167-0406000.....	1305	G168-5309589.....	0611D	G168-7035339.....	0613E	G168-7037190.....	1805H
G167-0407822.....	0301-1	G168-5311932.....	2218	G168-7035340.....	0613D	G168-7037191.....	1805H
G167-0407824.....	0301C		0100	G168-7035341.....	0613E	G168-7037192.....	1805H
G167-0407825.....	0107J	G168-6902540.....	0308A-2	G168-7035342.....	0613E		1902
G167-0407827.....	0107J	G168-7032782.....	1304	G168-7035343.....	0613D	G168-7037194.....	0603B
G167-0407828.....	0107J	G168-7032783.....	1304	G168-7035344.....	0613D	G168-7039407.....	0606C
G167-0407829.....	0107J	G168-7035213.....	2603	G168-7035345.....	0613D	G168-7039408.....	0606C
G167-0407830.....	0605B	G168-7035214.....	2602B	G168-7035346.....	1904	G168-7039409.....	0606C
G167-0407832.....	0709D	G168-7035215.....	2602B	G168-7035349.....	1902A	G168-7039410.....	0606C
G167-0407833.....	0709D	G168-7035217.....	2603	G168-7035350.....	1902A		0613F
G167-0407834.....	0709D	G168-7035218.....	2603	G168-7035351.....	1902A	G168-7039412.....	0613F
G167-0407835.....	0709D	G168-7035219.....	2603	G168-7035354.....	1904	G168-7039413.....	0613F
G167-0407836.....	0709D	G168-7035220.....	2603	G168-7035357.....	1900	G168-7039416.....	0607
G167-0407837.....	0709D	G168-7035227.....	2602B	G168-7035359.....	1901	G168-7039417.....	0607
G167-0407838.....	0709D	G168-7035228.....	2602B	G168-7035360.....	1901	G168-7039423.....	0608
G167-0407839.....	0709D	G168-7035229.....	2602D	G168-7035361.....	1901	G168-7039424.....	0608
G167-0407840.....	0709D	G168-7035230.....	2602D	G168-7036425.....	2602D	G168-7039425.....	0608
G167-0407841.....	0709D	G168-7035231.....	2602D	G168-7037040.....	2401	G168-7039435.....	0901
G167-0407842.....	0304	G168-7035232.....	2602B	G168-7037041.....	0304	G168-7039439.....	1701
G167-0407843.....	0304		2602D	G168-7037043.....	2401	G168-7039440.....	1701
G167-0407844.....	0304	G168-7035233.....	2602D	G168-7037045.....	2208C	G168-7039442.....	0606C
G167-0407845.....	0304	G168-7035234.....	2602D	G168-7037047.....	0901	G168-7039443.....	2603
G167-0407846.....	0605B	G168-7035235.....	2602D		0304	G168-7039450.....	1900A
G167-0407847.....	0304	G168-7035278.....	1903H	G168-7037049.....	0605B	G168-7039451.....	1902
G167-0408192.....	15D1	G168-7035279.....	1903H	G168-7037051.....	0208B	G168-7039452.....	1902
G167-0408193.....	15C1-A	G168-7035280.....	1903H	G168-7037060.....	0301	G168-7039453.....	1900B
G167-0427253.....	0709D	G168-7035281.....	1903H	G168-7037061.....	0308A-1	G168-7039454.....	1900B
G167-0427254.....	0300-1	G168-7035282.....	1903H	G168-7037064.....	0304	G168-7039455.....	1902
G167-0443015.....	0110	G168-7035284.....	1903C	G168-7037065.....	0304	G168-7039456.....	1902

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
G168-7039469....	1816	G212-5410276....	0601	G214-7033388....	0105	G214-7035465....	0601B
	1905-1	G212-5410279....	0601	G214-7033389....	0105	G214-7035466....	0601B
G168-7039470....	1816	G212-5615042....	0601	G214-7033390....	0105	G214-7035467....	0601B
	1905-1	G212-5636140....	0606C	G214-7033391....	0105	G214-7035468....	0601B
G168-7039471....	1816	G212-6284649....	0606	G214-7033392....	0105	G214-7035469....	0603A
	1905-1	G212-6294317....	0304	G214-7033393....	0105	G214-7035470....	0604
G168-7039472....	1816	G212-6298268....	1902C	G214-7033394....	0107B	G214-7035471....	0604A
	1905-1	G212-6327288....	0601	G214-7033395....	0107B	G214-7035472....	0604A
G168-7039474....	0611C	G212-7008869....	0601	G214-7033397....	0107D	G214-7035473....	0604A
G168-7039475....	0611G	G212-7008870....	0601	G214-7033398....	0107E-1	G214-7035474....	0604A
G168-7039477....	0611G	G212-7008877....	0601	G214-7033399....	0107E-1	G214-7035475....	0604A
G168-7039499....	1501	G212-7008932....	1817B	G214-7033647....	0308A-1	G214-7035476....	0604A
G168-7039500....	1501	G212-7008934....	1818	G214-7033648....	0308A-1	G214-7035478....	0604A
G170-0176892....	0100	G212-7067074....	0613	G214-7033652....	0308A-1	G214-7035479....	0604A
G170-0194016....	0100	G214-2035596....	0613B	G214-7033653....	0308A-1	G214-7035480....	0604A
G170-0194024....	0107A	G214-2036683....	0611D	G214-7033654....	0308A-1	G214-7035481....	0604A
G170-0276526....	0102A	G214-5166459....	0500	G214-7033655....	0308A-1	G214-7035482....	0604A
G170-0276592....	0102A	G214-5173901....	0603A	G214-7033656....	0308A-1	G214-7035483....	0606B
G170-0311277....	0304	G214-5232696....	0301	G214-7033657....	0105C	G214-7035484....	0605C
G170-0369899....	0103	G214-5232840....	0301	G214-7033658....	0105C	G214-7035485....	0605C
	0103A	G214-5266307....	1907	G214-7033660....	0107	G214-7035486....	0606
G170-0369901....	0103	G214-5266308....	1906	G214-7033661....	0107	G214-7035487....	0606
	0103A	G214-5293464....	1903D	G214-7033662....	0107A	G214-7035488....	0606
G170-0369902....	0103	G214-5293645....	1906	G214-7033664....	0107A	G214-7035489....	0606
	0103A	G214-5293657....	1903C	G214-7033665....	0101	G214-7035490....	0606
G170-0369903....	0103	G214-5308212....	1905-1		0101A	G214-7035491....	0606
	0103A	G214-5309188....	0611D	G214-7033667....	0101A	G214-7035492....	0606C
G170-0392183....	0100	G214-5410143....	1907	G214-7033668....	0101A	G214-7035493....	0606C
	1816	G214-5410245....	0611D	G214-7033669....	0101A	G214-7035494....	0606C
G170-0443048....	1905-1	G214-5605887....	1907	G214-7033670....	0104	G214-7035495....	0606C
	1905-2	G214-5608285....	1907	G214-7033671....	0104	G214-7035496....	0606C
G170-5307550....	0113B	G214-5614258....	1903B	G214-7033672....	0104	G214-7035497....	0606C
G170-5307552....	0113B	G214-5614357....	1906	G214-7033673....	0104	G214-7035498....	0606C
G183-5643012....	0604A	G214-6293611....	1906	G214-7033674....	0105B	G214-7035499....	0606C
G183-7001247....	0610	G214-6575932....	1906		0107J	G214-7035500....	0606C
G197-6301118....	1905A	G214-6575994....	1907	G214-7033675....	0105B	G214-7035501....	0606C
G197-6582236....	1905A	G214-6902281....	0101A		0107J	G214-7035502....	0606C
G197-7008462....	1905-1	G214-7032796....	1906	G214-7033676....	0107C	G214-7035503....	0606C
	1905-2	G214-7032799....	1902	G214-7033677....	0107C	G214-7035504....	0606C
G200-5384631....	0613	G214-7032800....	0611C	G214-7033678....	0107E-1	G214-7035505....	0606D
G200-6258943....	1906	G214-7033059....	0105C	G214-7033679....	0107E-1	G214-7035506....	0606D
G200-6478456....	0601	G214-7033326....	0611H-1	G214-7033680....	0107E-1	G214-7035507....	0606D
G204-5926996....	0607	G214-7033364....	0100	G214-7033685....	0107E-1	G214-7035508....	0606E
G204-6208797....	0605		0200	G214-7033686....	0107E-1	G214-7035509....	0606E
G204-6298266....	0606C		0101	G214-7033687....	0107E-1	G214-7035510....	0606E
G204-7033753....	0606C	G214-7033366....	0101A	G214-7033688....	0107E-1	G214-7035511....	0606E
G204-7035203....	0304	G214-7033367....	0100	G214-7033689....	0107E-1	G214-7035512....	0606E
G204-7067281....	1008	G214-7033369....	0101A	G214-7033690....	0107E-1	G214-7035513....	0606E
G204-7067282....	1008		0103	G214-7033691....	0107E-1	G214-7035514....	0606E
G210-5303972....	0301	G214-7033370....	0103	G214-7033692....	0107E-1	G214-7035515....	0606E
G210-6281950....	0113B	G214-7033371....	0103	G214-7033693....	0107E-1	G214-7035516....	0606E
G210-7000256....	1903C	G214-7033372....	0103	G214-7033694....	0107E-1	G214-7035517....	0606E
G210-7000371....	1903C	G214-7033373....	0103A	G214-7033695....	0300-1	G214-7035518....	0606E
G210-7000372....	1903C	G214-7033374....	0103A	G214-7033696....	0305	G214-7035519....	0606E
G210-7005721....	0113B	G214-7033376....	0103A	G214-7033697....	0305	G214-7035520....	0606E
G210-7008838....	0606C	G214-7033377....	0103A	G214-7033698....	0305A	G214-7035521....	0606E
G210-7008843....	2304M	G214-7033378....	0103A	G214-7035455....	0401	G214-7035523....	0606E
G210-7008854....	0606C	G214-7033379....	0103A	G214-7035456....	0500	G214-7035524....	0606E
G212-5281344....	1902	G214-7033380....	0105	G214-7035457....	0500	G214-7035525....	0606E
G212-5311620....	0606C	G214-7033381....	0105	G214-7035458....	0500	G214-7035526....	0606E
G212-5348912....	1817B	G214-7033382....	0105	G214-7035459....	0601	G214-7035527....	0606E
G212-5349695....	1903A	G214-7033383....	0105	G214-7035460....	0601	G214-7035528....	0606E
G212-5354652....	0606C	G214-7033384....	0105	G214-7035461....	0601A	G214-7035529....	0606E
G212-5381312....	1902C	G214-7033385....	0105	G214-7035462....	0601B	G214-7035530....	0606E
G212-5384602....	0608	G214-7033386....	0105	G214-7035463....	0601B	G214-7035531....	0606E
G212-5384604....	0608	G214-7033387....	0105	G214-7035464....	0601B	G214-7035532....	0606E

Number	Group	Number	Group	Number	Group	Number	Group
G214-7035533	0606E	G214-7036102	1805H	G214-7036176	2203	G214-7036282	1305
G214-7035534	0606E	G214-7036103	1805H	G214-7036177	2203	G214-7036283	1303
G214-7035535	0606E	G214-7036104	1805H	G214-7036178	2201	G214-7036284	1305
G214-7035536	0606E	G214-7036105	1805H	G214-7036179	2203	G214-7036286	1306
G214-7035537	0607	G214-7036106	1805H	G214-7036180	2205	G214-7036287	1306
G214-7035538	0607	G214-7036107	1805H	G214-7036181	2208D	G214-7036288	1306
G214-7035539	0608	G214-7036108	1805H	G214-7036182	2208D	G214-7036289	1306
G214-7035540	0608	G214-7036111	1805H	G214-7036183	2208F	G214-7036290	1307
G214-7035541	0608	G214-7036113	1805H	G214-7036184	2208F	G214-7036291	1501
G214-7035542	0608	G214-7036114	1805H	G214-7036185	2208F	G214-7036292	15A1
G214-7035543	0608	G214-7036115	1805H	G214-7036186	2210	G214-7036293	15A1
G214-7035544	0608	G214-7036116	1904	G214-7036187	2218	G214-7036294	15A1
G214-7035545	0608	G214-7036117	1805H	G214-7036188	2218	G214-7036295	15A1
G214-7035546	0608	G214-7036118	1809	G214-7036189	2301	G214-7036296	15A1
G214-7035547	0608	G214-7036119	1809	G214-7036190	2301	G214-7036297	15A1
G214-7035548	0608	G214-7036120	1809	G214-7036191	2301	G214-7036298	15C1-A
G214-7035549	0608	G214-7036121	1809	G214-7036192	2301	G214-7036299	15C1-A
G214-7035550	0610	G214-7036122	1809	G214-7036193	2301	G214-7036300	15C1-A
G214-7035551	0610A	G214-7036123	1809	G214-7036194	2301	G214-7036301	15C1-A
G214-7035552	0610B	G214-7036124	1809	G214-7036195	2301	G214-7036302	15C1-A
G214-7035553	0610B	G214-7036125	1817	G214-7036196	2301	G214-7036303	15C1-A
G214-7035554	0610B	G214-7036126	1900	G214-7036197	2301	G214-7036304	15C1-A
G214-7035555	0610B	G214-7036127	1900	G214-7036198	2301A	G214-7036305	15C1-A
G214-7035556	0610B	G214-7036128	1900	G214-7036199	2302B	G214-7036306	15C1-A
G214-7035557	0610B-2	G214-7036129	1900	G214-7036200	2302B	G214-7036307	15C1-A
G214-7035558	0610B-2	G214-7036130	1900	G214-7036201	0613D	G214-7036308	15C1-A
G214-7035559	0610B-2	G214-7036131	1900A	G214-7036202	0613D	G214-7036309	15C1-A
G214-7035560	0610B-2	G214-7036132	1900A	G214-7036203	0613D	G214-7036310	15C1-A
G214-7035561	0610B-2	G214-7036133	1900A	G214-7036204	0613E	G214-7036311	15C1-A
G214-7035562	0610B-2	G214-7036134	1900A	G214-7036205	0613E	G214-7036312	15C1-A
G214-7035563	0610B-2	G214-7036135	1900B	G214-7036206	0613E	G214-7036313	15C1-A
G214-7035564	0610B-2	G214-7036136	1900B	G214-7036207	0613F	G214-7036314	15C1-A
G214-7035565	0610B-2	G214-7036137	1900B	G214-7036208	0107B	G214-7036315	15C1-B
G214-7035566	0611	G214-7036138	1901	G214-7036209	0709	G214-7036316	15C1-B
G214-7035567	0611	G214-7036139	1901	G214-7036210	0107B	G214-7036317	15C1-B
G214-7035568	0611	G214-7036141	1805H	G214-7036211	0709	G214-7036318	15D1
G214-7035569	0611	G214-7036143	1902A	G214-7036212	0107B	G214-7036319	15D1
G214-7035570	0611	G214-7036144	1903	G214-7036213	0709	G214-7036320	15D1
G214-7035571	0611	G214-7036146	1903C	G214-7036214	0107B	G214-7036321	15D1
G214-7035572	0611	G214-7036147	1903C	G214-7036215	0709	G214-7036322	15D1
G214-7035573	0611	G214-7036148	1903D	G214-7036216	0709D	G214-7036323	15D1
G214-7035574	0611C	G214-7036149	1903E	G214-7036217	0709D	G214-7036324	15D1
G214-7035575	0611C	G214-7036150	1903E	G214-7036218	0709D	G214-7036325	15D1
G214-7035577	0611F	G214-7036152	1903H	G214-7036219	0709D	G214-7036326	15D1
G214-7035578	0611F	G214-7036153	1903H	G214-7036220	0709D	G214-7036327	1701
G214-7035579	0611F	G214-7036154	1904	G214-7036221	0709D	G214-7036328	1701
G214-7035580	0612	G214-7036155	1904	G214-7036222	0709D	G214-7036329	1701
G214-7035581	0612	G214-7036156	1805H	G214-7036223	0709D	G214-7036330	1701
G214-7035582	0612	G214-7036157	1904	G214-7036224	0709D	G214-7036331	1800
G214-7035583	0612	G214-7036158	1905-1	G214-7036225	0901A	G214-7036332	1800
G214-7035584	0612	G214-7036159	1906	G214-7036226	0901A	G214-7036333	1801A
G214-7035585	0612	G214-7036161	1907	G214-7036227	0901A	G214-7036334	1801A
G214-7035587	0612	G214-7036162	1907	G214-7036228	0901A	G214-7036335	1801A
G214-7035588	0612	G214-7036163	2012	G214-7036229	0901A	G214-7036336	1801A
G214-7035589	0612	G214-7036164	2103A	G214-7036230	0901A	G214-7036337	1801A
G214-7035590	0612	G214-7036165	2201C	G214-7036231	0901A	G214-7036338	1801A
G214-7035591	0612	G214-7036166	2203	G214-7036232	0902	G214-7036339	1801B
G214-7035592	0613	G214-7036167	2203	G214-7036233	0902	G214-7036340	1801B
G214-7035593	0613B	G214-7036168	2201	G214-7036234	1008	G214-7036341	1801B
G214-7035594	0613B	G214-7036169	2203	G214-7036235	1303	G214-7036342	1801B
G214-7035595	0613B	G214-7036170	2203	G214-7036236	1303	G214-7036343	1801B
G214-7035597	0613B	G214-7036171	2203	G214-7036237	1303	G214-7036344	0402
G214-7035598	0613B	G214-7036172	2203	G214-7036238	1303	G214-7036345	0601B
G214-7035599	0613C	G214-7036173	2203	G214-7036239	1303	G214-7036346	0606C
G214-7035600	0613D	G214-7036174	2203	G214-7036240	1303	G214-7036347	0606C
G214-7036101	1805H	G214-7036175	2203	G214-7036241	1304	G214-7036348	0606C

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
G214-7036349.....	0606C	G214-7036415.....	2602B	G214-7036485.....	0108B	G214-7036558.....	0305A
G214-7036350.....	0606C	G214-7036416.....	2602B	G214-7036486.....	0108B	G214-7036562.....	0305A
G214-7036351.....	0606C	G214-7036417.....	2602D	G214-7036487.....	0108B	G214-7036563.....	0306
G214-7036352.....	0606C	G214-7036418.....	2602B	G214-7036488.....	0110	G214-7036564.....	0306
G214-7036353.....	0606C	G214-7036419.....	2602B	G214-7036489.....	0113B-3	G214-7036566.....	0306
G214-7036354.....	0606C	G214-7036420.....	2602B	G214-7036490.....	0113B-3	G214-7036589.....	0306
G214-7036355.....	1801B	G214-7036421.....	2602B	G214-7036491.....	0113B-3	G214-7036590.....	0306
G214-7036356.....	1801B	G214-7036422.....	2602C	G214-7036492.....	0107A	G214-7036669.....	0603A
G214-7036357.....	1801B	G214-7036423.....	2602D	G214-7036493.....	0113B-4	G214-7036670.....	0603A
G214-7036358.....	1801B	G214-7036424.....	2602D	G214-7036494.....	0301	G214-7036671.....	0611A
G214-7036359.....	1801B	G214-7036425.....	2602D	G214-7036495.....	0107A	G214-7036672.....	0611A
G214-7036360.....	1801B	G214-7036426.....	2602D	G214-7036496.....	0113B-4	G214-7036673.....	0611A
G214-7036361.....	1801B	G214-7036427.....	2602D	G214-7036497.....	0113B-8	G214-7036674.....	0611B-6
G214-7036362.....	1801B	G214-7036428.....	2602D	G214-7036498.....	0113B-8	G214-7036675.....	0611D
G214-7036363.....	1801B	G214-7036429.....	2602D	G214-7036499.....	0203	G214-7036676.....	0611D
G214-7036364.....	1801B	G214-7036430.....	0700	G214-7036500.....	0300	G214-7036677.....	0611D
G214-7036365.....	1801B	G214-7036431.....	0107E-1	G214-7036501.....	0300	G214-7036678.....	0611D
G214-7036366.....	1801B	G214-7036432.....	0107E-1	G214-7036502.....	0300	G214-7036679.....	0611D
G214-7036367.....	1801B	G214-7036433.....	0107E-1	G214-7036503.....	0300	G214-7036680.....	0611B-6
G214-7036368.....	1801B	G214-7036434.....	0107E-1	G214-7036504.....	0300	G214-7036681.....	0611D
G214-7036369.....	0604A	G214-7036435.....	0107E-1	G214-7036505.....	0300	G214-7036682.....	0611D
G214-7036370.....	1801B	G214-7036436.....	0107E-1	G214-7036506.....	0300	G214-7036683.....	0611D
G214-7036371.....	1801B	G214-7036437.....	0107E-1	G214-7036507.....	0300	G214-7036684.....	0611D
G214-7036372.....	1801B	G214-7036438.....	0107E-1	G214-7036508.....	0300	G214-7036685.....	0611D
G214-7036373.....	1801B	G214-7036439.....	0107E-1	G214-7036509.....	0300	G214-7036686.....	0611D
G214-7036374.....	1801B	G214-7036440.....	0107E-1	G214-7036510.....	0300-1	G214-7036687.....	0611H-1
G214-7036375.....	1801B	G214-7036441.....	0107E-1	G214-7036511.....	0300-1	G214-7036688.....	0611H-1
G214-7036376.....	1801B	G214-7036442.....	0107E-1	G214-7036512.....	0300-1	G214-7036689.....	0611H-2
G214-7036377.....	1801B	G214-7036443.....	0107E-1	G214-7036513.....	0300-1	G214-7036690.....	0611H-1
G214-7036378.....	1801C	G214-7036444.....	0107E-1	G214-7036514.....	0300-1	G214-7036691.....	0611B-3
G214-7036379.....	1801C	G214-7036445.....	0107E-1	G214-7036515.....	0300-1	G214-7036692.....	0611D
G214-7036380.....	1801C	G214-7036446.....	0107E-1	G214-7036516.....	0300-1	G214-7036693.....	0611D
G214-7036381.....	1801C	G214-7036447.....	0107E-1	G214-7036517.....	0301-1	G214-7036694.....	0611D
G214-7036382.....	1803B	G214-7036448.....	0107E-1	G214-7036518.....	0301-1	G214-7036695.....	0611D
G214-7036383.....	1803B	G214-7036449.....	0107E-1	G214-7036519.....	0301-1	G214-7036696.....	0611H-1
G214-7036384.....	1803B	G214-7036450.....	0107E-1	G214-7036520.....	0301-1	G214-7036697.....	0611H-1
G214-7036385.....	1803B	G214-7036451.....	0107E-1	G214-7036521.....	0301C	G214-7036698.....	0611H-1
G214-7036386.....	1803B	G214-7036452.....	0107E-1	G214-7036522.....	0301C	G214-7036699.....	0611H-1
G214-7036387.....	1803B	G214-7036453.....	0107E-1	G214-7036523.....	0301C	G214-7036700.....	0611H-1
G214-7036388.....	1803B	G214-7036454.....	0107E-1	G214-7036524.....	0302	G214-7036701.....	0611H-1
G214-7036389.....	1803B	G214-7036455.....	0107E-1	G214-7036525.....	0304	G214-7036702.....	0611H-1
G214-7036390.....	1803B	G214-7036456.....	0107E-1	G214-7036526.....	0304	G214-7036703.....	0611H-1
G214-7036391.....	1803B	G214-7036457.....	0107E-1	G214-7036527.....	0304	G214-7036704.....	0709
G214-7036392.....	1803B	G214-7036458.....	0107E-1	G214-7036528.....	0304	G214-7036705.....	0709
G214-7036393.....	1803B	G214-7036459.....	0107E-1	G214-7036529.....	0304	G214-7036706.....	0709
G214-7036394.....	1803B	G214-7036460.....	0107E-1	G214-7036530.....	0304	G214-7036707.....	2208C
G214-7036395.....	1803B	G214-7036461.....	0107J	G214-7036531.....	0304	G214-7036708.....	2203C
G214-7036396.....	1803B	G214-7036462.....	0107J	G214-7036532.....	0304	G214-7036709.....	2208C
G214-7036397.....	1803C	G214-7036463.....	0107J	G214-7036533.....	0304	G214-7036710.....	2203
G214-7036398.....	1804	G214-7036464.....	0107J	G214-7036534.....	0304	G214-7036711.....	1903C
G214-7036399.....	1804	G214-7036465.....	0107J	G214-7036535.....	0304	G225-6197348.....	1803B
G214-7036400.....	1804	G214-7036466.....	0107J	G214-7036536.....	0304	G402-5250908.....	0613D
G214-7036401.....	2302B	G214-7036467.....	0107J	G214-7036537.....	0305	G509-0129218.....	0305
G214-7036402.....	2401	G214-7036468.....	0107J	G214-7036538.....	0305	H001-0113002.....	1901A
G214-7036403.....	2401	G214-7036469.....	0107J	G214-7036539.....	0305	H001-0116027.....	0601A
G214-7036404.....	2401	G214-7036470.....	0107K	G214-7036540.....	0305	H001-0116053.....	0110
G214-7036405.....	2401	G214-7036471.....	0107E-2	G214-7036541.....	0305	H001-0116055.....	1002
G214-7036406.....	2601	G214-7036472.....	0302	G214-7036542.....	0305	H001-0116223.....	0601A
G214-7036407.....	2601	G214-7036473.....	0107E-2	G214-7036543.....	0305	H001-0116277.....	1906
G214-7036408.....	2602B	G214-7036474.....	0302	G214-7036544.....	0305	H001-0116278.....	1907
G214-7036409.....	2602B	G214-7036475.....	0108B	G214-7036545.....	0305	H001-0116280.....	1903B
G214-7036410.....	2602B	G214-7036476.....	0113B-2	G214-7036546.....	0305	H001-0116281.....	1900
G214-7036411.....	2602B	G214-7036477.....	0301	G214-7036547.....	0305	H001-0116282.....	1903A
G214-7036412.....	2602B	G214-7036478.....	0108A	G214-7036548.....	0305	H001-0116283.....	1900
G214-7036413.....	2602B	G214-7036479.....	0108B	G214-7036549.....	0305	H001-0116284.....	1903D
G214-7036414.....	2602B	G214-7036480.....	0113B-2	G214-7036550.....	0305A	H001-0116285.....	1903D
				G214-7036551.....	0305	H001-0116342.....	1903A
				G214-7036552.....	0305	H001-0116386.....	2304B
				G214-7036553.....	0305A		
				G214-7036554.....	0305A		

Number	Group	Number	Group	Number	Group	Number	Group
H001-0116699....	1900	H001-0716610....	0611H-2	H001-0718007....	0706A	H001-0811041....	1009
	1903A	Cont'd	0613B		15A1		0202
H001-0117051....	0110		2603	H001-0718008....	1008A	H001-0811052....	15A1
H001-0117060....	0110	H001-0717001....	1903C		0107J		15D1
H001-0118025....	0109A		0107B	H001-0718021....	15A1		0706A
H001-0118026....	0706B		0107E-1		1904	H001-0811053....	0713
	0109A		0300	H001-0718022....	0107E-1		1008A
H001-0118052....	0202		0304		1303		1903D
H001-0118282....	1008A		0306	H001-0718023....	15C1-A	H001-0811054....	0110
H001-0118321....	1008A		0500		1805H		1009
	0500		0605B		1905-2	H001-0811055....	0701
H001-0121887....	0611C		0606C	H001-0718027....	1304		0713
H001-0125480....	0613B		0611C	H001-0718028....	1304	H001-0811058....	0703A
H001-0216540....	0203		0611F	H001-0718236....	0611		2305
H001-0218003....	0107D		0612	H001-0718804....	0607	H001-0811077....	1003
H001-0218021....	0107J	H001-0718001....	0709	H001-0719011....	0300		1009
H001-0323004....	1803C		0709D		0611H-1	H001-0811078....	1003
H001-0420560....	0401		0901A	H001-0720001....	0613B		2208F
H001-0518005....	1903E		15D1	H001-0720002....	0611	H001-0811081....	0208B
	0603A		1801B		0713	H001-0811092....	1003
H001-0518009....	1903C		1805	H001-0722025....	1008A	H001-0811108....	1008A
	0602		1805H	H001-0722030....	0709B	H001-0811281....	0113B-2
H001-0518010....	0611		1809	H001-0724002....	0301C	H001-0811335....	0709A
H001-0518011....	1903D		2103A	H001-0725330....	2603	H001-0811719....	0602
H001-0518012....	0107		2208F		0606C	H001-0823002....	15C1-B
	0611A		2401	H001-0725480....	0613B	H001-0823003....	15C1-A
H001-0518013....	2012		2603		0301		15C1-A
H001-0518018....	0601		0606C	H001-0725650....	0706B	H001-0823004....	1805H
H001-0518021....	1903D		0606E		0701A		1903C
H001-0518022....	1903D		0709	H001-0725660....	0706B		15A1
H001-0518066....	0704B		15A1	H001-0725670....	1905	H001-0823007....	15D1
H001-0519596....	2012		15C1-A		1008A		15C1-B
H001-0519625....	1903D	H001-0718002....	15D1	H001-0725710....	1307	H001-0824026....	0305
	0706A		1805H		1900B	H001-0824030....	1903D
H001-0713001....	1009		1809		0613B	H001-0824059....	1903B
	0706A		2012	H001-0725853....	1903E	H001-0829578....	1903D
H001-0713003....	1003		2208E		1903F	H001-0829600....	1903B
H001-0713004....	0601		2602B		1905-2	H001-0829612....	1903B
	0110		0300	H001-0725856....	1903A	H001-0829752....	0611E
H001-0713005....	1003		0401		0107J	H001-0830073....	1905-2
H001-0713024....	2208D		0606C	H001-0726005....	0308A-2	H001-0830074....	1903D
H001-0716003....	15C1-A		0610A		0107E-2	H001-0830080....	0709A
	15D1		0611	H001-0726010....	0302	H001-0830333....	1903D
H001-0716007....	15D1		0901		0611H-1	H001-0924108....	0109A
	0305	H001-0718003....	1304	H001-0811024....	0301		2304J
H001-0716022....	15C1-A		15D1	H001-0811025....	0109	H001-0926040....	1906
	0611H-1		1701	H001-0811026....	0113B-2	H001-0929009....	1009
H001-0716023....	15C1-A		1800		15C1-A	H001-0930015....	0611
H001-0716024....	15C1-B		1801B	H001-0811027....	15C1-A	H001-0935401....	0201
H001-0716025....	1902		1805H	H001-0811033....	0706A		0107E-1
	15A1		1905	H001-0811037....	15C1-A	H001-1013001....	0500
H001-0716027....	15C1-B		2402		1805H		0302
	15D1		2601		1900-1	H001-1013002....	0107B
	15C1-B		0203	H001-0811038....	1900-2		0709
H001-0716028....	1801C		0601B		2208D	H001-1013003....	0613B
H001-0716030....	1801C		0606E		0101	H001-1013005....	0301C
H001-0716031....	0611D		0610B-1		0110		0701A
	0611H-2		0713		0500	H001-1013017....	0709D
H001-0716530....	0611H-1		0901		0603A		1803B
H001-0716535....	0613B	H001-0718005....	1008A	H001-0811039....	15C1-B		1805H
	0107E-1		1304		1803C		1809
	0304		1306		1804	H001-1013018....	0611
H001-0716540....	2602C		15C1-A		1903C		0611D
	0306		15C1-B		0110	H001-1013029....	0601
H001-0716610....	0611H-1		15D1	H001-0811040....	1009	H001-1013030....	0107D
			2602B		0706A	H001-1013031....	0500
				H001-0811041....		H001-1013032....	0701A

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER

Number	Group	Number	Group	Number	Group	Number	Group
H001-1013053....	1008A	H001-1029030....	0601B	H001-1518005....	0611D		0107E-1
	1307	H001-1030025....	2602B	Cont'd	0611H-1		0306
H001-1013071....	0601B	H001-1030046....	1816		15C1-B		0308A-2
	1008A	H001-1030063....	2602D		0301	H001-1519007....	0613B
H001-1013072....	15A1	H001-1030064....	0601		0500		1903E
	15C1-B		0611D		0605		2602C
H001-1013074....	0713	H001-1030079....	0601		0605B		2602D
	1304		2602B		0611A		2603
H001-1013075....	15A1	H001-1030082....	2603		0611B-3	H001-1519008....	0709
H001-1013229....	0613B	H001-1030083....	0607		0611B-7		0107B
H001-1013243....	0613B	H001-1030098....	0500	H001-1518007....	0611D		0107E-1
	1903C	H001-1030121....	1303		0611E		0107J
H001-1013258....	15C1-A	H001-1030132....	0612		0611H-1		0611C
H001-1013702....	0706A	H001-1030188....	1903B		0611H-2		0611F
H001-1019520....	1903C	H001-1030521....	1903C		0612		0613B
H001-1019521....	1903C	H001-1030589....	0107E-1		1805H		0613C
H001-1019523....	1903C	H001-1030594....	0602		1816		0709D
	1903D	H001-1030673....	2218		1903C		0901A
H001-1019751....	1903F	H001-1031017....	0701A		0611	H001-1519009....	1801B
H001-1019753....	1903E	H001-1031019....	0701A	H001-1518008....	0611D		1805H
H001-1019756....	1903E	H001-1031027....	0300		0701A		1809
H001-1021076....	2602D	H001-1040003....	1903H		0601A		1903E
H001-1021079....	2602D	H001-1043505....	2203		0611H-1		1904
H001-1021088....	1903B	H001-1049060....	0611		0701A		2012
H001-1021138....	1900A	H001-1075215....	1304		1303		2103A
H001-1021139....	1904	H001-1076075....	0611D		1304		2401
H001-1023058....	0613A		0300	H001-1518009....	1800		2601
H001-1023091....	0611H-1		0302		1805H		2603
H001-1023137....	2208F		0304		1903D		0606C
H001-1023165....	2402		0306		1906		0611G
H001-1023622....	0611H-1	H001-1500011....	0603A		2210		0612
H001-1023792....	0611A		0605		2402		0709C
	1816		0606C		0107E-1	H001-1519010....	15C1-A
H001-1023794....	1905-1		0608		1307		1803B
	1905-2		0612	H001-1518010....	1906		1805H
H001-1023797....	0300	H001-1516009....	0611B-2		1907		1809
H001-1024119....	0300	H001-1516013....	0713		0611		2012
H001-1024123....	0611H-1	H001-1516017....	0713		0701A		0107D
H001-1024128....	0611H-1		0611		0706B		0300
H001-1024213....	0306		0611D		1304		0606C
H001-1024523....	0611H-1	H001-1517003....	0611H-1		1305		0611
H001-1025044....	0601B		0611H-2	H001-1518011....	1306		0611H-1
	0611	H001-1517004....	0611H-1		1307		0613B
H001-1026055....	0611D	H001-1517007....	0603A		15A1		0901
H001-1026073....	0302	H001-1517010....	0709D		1900		1304
H001-1026108....	0306		0601		1906		15D1
H001-1026121....	0611A		0602		1008A	H001-1519011....	1701
	0611B-7	H001-1518003....	0606D		1303		1800
	0611A		0611B-2		1304		1801B
H001-1026125....	0611B-3		0601	H001-1518013....	15C1-B		1804
	0611H-1		0601B		1900		1805H
H001-1026126....	0611D		0604A		1903A		1902
H001-1026128....	0611H-1		0606		1304		1905-2
H001-1026142....	0611	H001-1518004....	0606C	H001-1518015....	15C1-B		2401
H001-1026177....	1816		0606E		0203		2601
H001-1026326....	0603A		0607	H001-1518016....	2602B		2602B
H001-1026462....	0611H-1		0610B-2	H001-1519002....	2602D		0607
	0603A		0611H-1		0611D	H001-1519012....	1008A
H001-1026464....	0611A		0301		1816		15C1-B
H001-1026466....	0611H-1		0305		1903B		0601B
H001-1026535....	0611B-8		0306	H001-1519004....	1903C		0606E
H001-1026537....	1905-1		0601		1905-1		0713
H001-1028067....	0613B	H001-1518005....	0602		2602D	H001-1519013....	0901
	0612		0603A		0613B		1008A
H001-1028120....	2208F		0604	H001-1519006....	2602B		2602B
H001-1028122....	2208F		0611A		2602D		15A1
H001-1028136....	1904						


Number	Group	Number	Group	Number	Group	Number	Group
H001-1519019.....	1903D	H001-1913220.....	1816	H001-4417121.....	1902A	H001-5417640.....	0300
H001-1519807.....	0107E-1		1905-2		1906		2401
	0203	H001-1921550.....	1900		1903B	H001-5417680.....	0304
	15A1	H001-2012400.....	1903	H001-4417731.....	1903H		0709D
H001-1520005.....	15C1-A		0613		2208F	H001-5417720.....	0612
	15C1-B	H001-3020131.....	2209		2218	H001-5418300.....	2012
	15D1		1903A	H001-4440581.....	1805H	H001-5418301.....	0613F
	2012	H001-4013501.....	0305A	H001-4525220.....	1900B	H001-5418361.....	2012
H001-1521007.....	1816		0709D	H001-4568562.....	0305	H001-5418381.....	1903H
	1905-1		0107		0305A	H001-5419101.....	1809
H001-1522003.....	0613A	H001-4013521.....	0107A	H001-5025511.....	1903E		2012
	0606C		0113B-2		0107B	H001-5419141.....	0606C
	0606E	H001-4013541.....	0113B-3	H001-5025521.....	0709		0606E
H001-1522004.....	2602D		0500	H001-5025821.....	0613C		0709C
	2603	H001-4013545.....	0110	H001-5026131.....	0705	H001-5419781.....	0613E
	0605B	H001-4015621.....	0601	H001-5026791.....	1304	H001-5419821.....	1906
H001-1522005.....	0613B	H001-4019501.....	1905-2		0613F		1701
	0300	H001-4019621.....	1905		1901	H001-5420520.....	1801B
	0606C		0606C	H001-5027111.....	1901A		1805H
H001-1522007.....	0613B	H001-4024520.....	0612		1903B		0606C
	1816		1801B		1903C		1902
	1905-1	H001-4024560.....	1904		1905-1	H001-5420521.....	1906
	2602B		1800		0613E		2601
H001-1522009.....	0610	H001-4024600.....	2208C	H001-5027131.....	1901A		2603
H001-1523002.....	2603		0709D		1903E		0610
H001-1530003.....	0611	H001-4026501.....	1905-2		1906	H001-5420561.....	1701
H001-1530004.....	0601B	H001-4026521.....	0601B	H001-5027151.....	0613E		1800
	2602B		0613C		15A1		2603
	0300		0613E	H001-5028141.....	0613E		15D1
	0601	H001-4027501.....	0613F	H001-5087951.....	0613E	H001-5420601.....	2210
H001-1530005.....	0605C		1903F	H001-5087991.....	0107E-1		1907
	2602C		1903H	H001-5089321.....	0302	H001-5421221.....	0203
	0300		0613E		0601B	H001-5424561.....	1303
	0709C	H001-4027541.....	1903H	H001-5090641.....	0611A	H001-5427901.....	1801B
H001-1530007.....	15D1		1903H		1903	H001-5451561.....	1801B
	1801B	H001-4031501.....	1903H	H001-5125851.....	0300-1		1801B
H001-1530008.....	0107E-1	H00-4036540.....	0601A		0113B-4	H001-5451640.....	2103A
	0305A	H001-4038501.....	2304G	H001-5127331.....	0308A-2		1801B
	0603A		1901		0601	H001-5454520.....	1804
	0611B-2	H001-4039541.....	1901A	H001-5127351.....	0611E		1801B
	0611H-1		1903C	H001-5128641.....	0602	H001-5454560.....	1805H
H001-1530009.....	1803C		1906	H001-5146469.....	0604		1800
	1903E	H001-4040581.....	0202	H001-5147511.....	0601B	H001-5454561.....	1801B
	1903F	H001-4044541.....	0713	H001-5147551.....	0601B	H001-5454781.....	1801B
	2208D	H001-4052620.....	2301A	H001-5148231.....	0500	H001-5457561.....	1906
H001-1530010.....	0701A		0613A	H001-5148251.....	0602	H001-5467561.....	0611H-2
	0110	H001-4133580.....	0613D	H001-5148819.....	0606E	H001-5488501.....	0601
	0301C		0606C	H001-5148831.....	0601B	H001-7016561.....	0207
H001-1530011.....	1805H	H001-4133620.....	0606E		0613D	H001-7017620.....	0602
	1902	H001-4133820.....	0602	H001-5148851.....	0613E	H001-7017681.....	1903D
	1903B	H001-4135621.....	0610B-2		1906	H001-7017860.....	0608
			0613E	H001-5148861.....	2209		1905-1
H001-1530013.....	1304		0107E-1		0612	H001-7021621.....	1905-2
H001-1531002.....	2301A	H001-4135680.....	0306	H001-5150111.....	0606C		0601B
	0601		0605		0606E		0604A
H001-1531003.....	0611		0604	H001-5417520.....	0304	H001-7021651.....	0608
		H001-4135681.....	0613D		0611		0610B-2
H001-1531004.....	0610A		0613E	H001-5417521.....	0107J		0613D
H001-1619009.....	0401		1907		0304		0613D
H001-1810010.....	15C1-B	H001-4165540.....	1904		0306		0613E
H001-1810030.....	15C1-A	H001-4167561.....	0613E	H001-5417561.....	0608	H001-7021681.....	1905-1
	15C1-A	H001-4167600.....	1903D		0612		1905-2
H001-1810040.....	1805H	H001-4167681.....	1903D		0709D		1907
	1900	H001-4171580.....	0611H-1		2601		2209
	15A1	H001-4185601.....	1900-1	H001-5417600.....	0611F		0609
H001-1810080.....	15D1	H001-4185680.....	1903D	H001-5417601.....	0608	H001-7021741.....	0612
H001-1819011.....	0401	H001-4215760.....	1008A				0613F

OFFICIAL STOCK NUMBER INDEX

STOCK NUMBER


Number	Group	Number	Group	Number	Group	Number	Group
H001-7021741....	1903F	H001-7045561....	1900A	H006-0214010....	1304	H006-0318145....	0107J
Cont'd	2304L	H001-7045591....	2209	H006-0222308....	0304	H006-0318165....	0107J
H001-7021771....	0601B	H001-7126701....	2218	H006-0255420....	0611B-9	H006-0318530....	0605B
	0613	H001-7126741....	1907	H006-0256010....	1903E	H006-0329009....	0304
H001-7021801....	1905-2		1903A	H006-0256500....	0605B	H006-0329070....	1903F
	2209	H001-7126781....	1903B	H006-0260265....	0107J	H006-0329140....	0709D
H001-7021861....	2209		1903D	H006-0264002....	0605B		0605B
H001-7023681....	0107E-1		0107D	H006-0264042....	0709D	H006-0331060....	0611C
H001-7023741....	0601	H002-0100090....	1907	H006-0264258....	0611F		0611C
H001-7025561....	2203		0602	H006-0265015....	0107J	H006-0331090....	1903E
	0601B	H002-0100110....	1903E	H006-0265105....	1903F	H006-0331125....	0107J
H001-7025591....	0602	H002-0100130....	0107E-2	H006-0265110....	0611C	H006-0331170....	0709D
	0606C		0706B		0107J	H006-0378090....	1903E
	0304	H002-0100160....	0709C	H006-0265120....	0709D	H006-0379590....	1903E
	0601		0706B	H006-0265620....	0611F	H006-0383900....	1903D
	0601B	H002-0100220....	1903B	H006-0270010....	0611C	H006-0392600....	0304
	0602	H002-0101880....	2201C	H006-0270015....	0304	H006-0392610....	0304
H001-7025621....	0604	H002-0211915....	1902A	H006-0270150....	1903E	H006-0392620....	0605B
	0606C	H002-0221015....	15D1	H006-0270195....	0304	H006-0392630....	0709D
	0606E		15A1	H006-0270205....	0304	H007-0218120....	2304P
	1906	H002-0222019....	15D1	H006-0272100....	0304	H007-0218121....	2304P
H001-7025651....	0610B-1		2208C	H006-0273020....	0701	H007-0218122....	2304P
	0107B		0203	H006-0282430....	1902A	H007-0218140....	2304P
H001-7025681....	0601B	H002-0222055....	1304	H006-0282480....	1903D	H007-0218163....	2304P
	0709		15D1	H006-0283005....	1903D	H007-0219120....	2304P
	0601	H002-0223010....	0203	H006-0283010....	1903D		1903C
	0613B	H002-0223020....	0902	H006-0283030....	0701		1903D
H001-7025711....	0613E		0113B	H006-0283205....	0300	H009-0101430....	1903E
	0705	H002-0504203....	15C1-A	H006-0283215....	0300		2304M
	1900A		15D1	H006-0283400....	0107J		0706B
	1906	H002-0504205....	15C1-A	H006-0283404....	0107J	H009-0102230....	1003
	0613D		0902	H006-0283672....	1903D		1903A
	0613E		1008A		0902	H012-707735....	1903A
	0613F		1304	H006-0283800....	2208F	H012-709422....	1903A
	1901		1306	H006-0283803....	2012	H012-709430....	1903D
H001-7025741....	1901A	H002-0504208....	1307		0611C	H012-709500....	1903D
	1903C		1900A	H006-0283805....	0901	H012-0305020....	1903A
	1903E		1900B		0306	H012-0700234....	1900B
	2208F		1903A	H006-0283815....	0701	H012-0710051....	1905-2
	2208H		1903B	H006-0283840....	0304	H012-1303012....	0602
H001-7025808....	0706A	H002-0726010....	0113B-4	H006-0287015....	0304	H012-1303015....	0602
H001-7027541....	1903C	H003-0501274....	2304A	H006-0313100....	0304	H012-1303025....	1903A
H001-7043591....	0601B	H004-506213....	2603		0605B	H012-1303030....	1903A
	0601B		0606C	H006-0313120....	0709	H012-1303055....	1303
	0606D	H004-0345660....	0610B-1		0304	H012-1303065....	1307
	0606E		0606C	H006-0313150....	0709D	H012-1304045....	0102A
H001-7043621....	0610B-2	H004-0370020....	0604	H006-0313180....	0107J	H012-1313020....	2208C
	2602D		0606C		0605B	H012-1323060....	2012
	2603	H004-0370120....	0604	H006-0313610....	0107J	H012-1323085....	0205
	0606C		2603		0304	H012-1333015....	0602
	0606E	H004-0370131....	0107J	H006-0313650....	0709D	H012-1376020....	2012
	0613E	H006-0100350....	0100		0107J	H012-1377020....	0601
H001-7043681....	1900	H006-0100540....	1903D	H006-0313660....	0304	H012-1377025....	0601
	1902A	H006-0102421....	0709D		0709D		0703A
	1906	H006-0104054....	2401	H006-0313680....	0605B		0704A
	0601B	H006-0104090....	2401	H006-0314620....	0304	H012-1400060....	0704A
H001-7043711....	1904	H006-0104110....	2401		0709D	H012-1400065....	0704A
	1900-1	H006-0104146....	0709D	H006-0314625....	0107J	H012-1400080....	1003
	1901	H006-0104148....	0709D		0304	H012-1400090....	1008A
	1901A	H006-0105105....	0709D	H006-0314665....	0107J	H012-1400800....	1008A
H001-7043741....	1903C	H006-0105261....	1903E		0304	H012-1402020....	1905
	1906	H006-0210010....	0107J	H006-0314685....	0107J	H012-1600060....	0704C
	1907	H006-0210040....	1307		0107J	H012-1600090....	1003
	2208F		0302	H006-0314820....	0304	H012-1700040....	0704C
H001-7043801....	2209	H005-0210060....	0304	H006-0316000....	0605B	H012-1700045....	0703A
H001-7045531....	0610B-1		0611C	H006-0318100....	0611C	H012-2400015....	0603A
		H006-0213530....	2401	H006-0318105....	0709D	H012-2400017....	0603A
		H006-0213550....	2401	H006-0318125....	1903F	H012-4100100....	1008A

Number	Group	Number	Group	Number	Group	Number	Group
H012-5100075.....	1008A	H101-0122921.....	0102A	H101-0214420.....	2304K	M005-0101440.....	1905
H101-177923.....	0101A	H101-0124058.....	1904	H101-0217238.....	2304B	M005-0101471.....	1008A
H101-189136.....	0601B	H101-0124180.....	1805H	H101-0218356.....	0601B	M005-0101480.....	0704C
H101-189898.....	1903E	H101-0130998.....	2304L		0611A	M005-0226010.....	0203
H101-0102445.....	0611	H101-0132768.....	2304K	H101-04502244.....	0308A-2	M005-0259020.....	1905
H101-0103736.....	0304	H101-0132776.....	0604A	H102-1324017.....	2012	M005-0259060.....	0704C
H101-0110633.....	0304	H101-0132982.....	0610B-1	H102-1376017.....	0601	M005-0259100.....	0704A
	0107J	H101-0147505.....	0308A-2	H104-142450.....	0607B	M005-0259140.....	1003
	0304		0613A	M001-0107264.....	0607B	M005-0259156.....	1008A
	0603A	H101-0178469.....	0613D	M001-0109372.....	0100	M008-0100007.....	1906
	0606C		1907		0613A	M008-0100008.....	1906
H101-0121887.....	0611F	H101-0180447.....	1906	M001-0213263.....	0613D	M008-0100044.....	1907
	0612		1907	M001-7000061.....	0611A	M009-0102890.....	0306
	1805	H101-0189120.....	2304K	M003-0102630.....	2302A		
	1805H	H101-0190927.....	1901A	M003-0105980.....	2301		
	2603	H101-0193224.....	2304K	M003-6209888.....	0605		

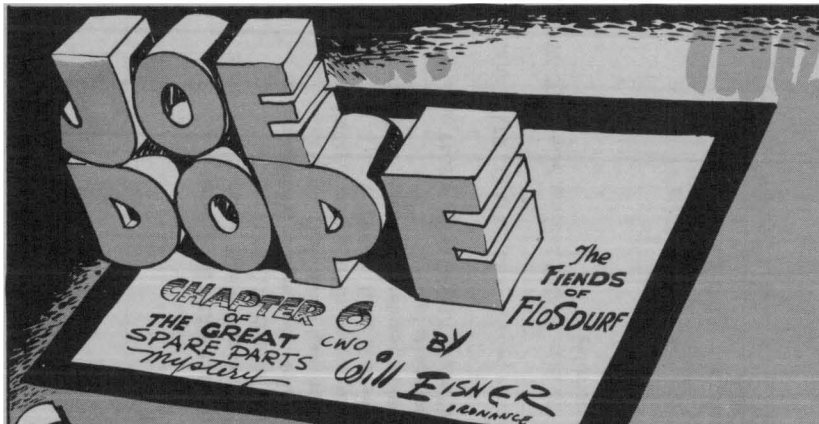

SOMEWHERE EAST OF SUEZ, BURIED IN AN OPAQUE FOG THAT SCREENS IT FROM THE OCCASIONAL SEA TRAFFIC LIES THE ISLE OF FLOSDURF BONG!

ALTHOUGH NEVER MENTIONED BY EITHER RAND OR MCNALLY, THIS LATRINE OF THE EARTH IS INFAMOUS AMONG SEAMENIN FACT, THE MERE MENTION OF FLOSDURF ISLE BRINGS THE FOLLOWING REPLY.....

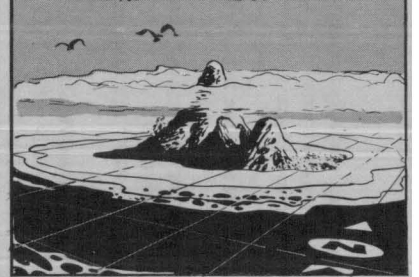

HERE, IN THIS TROPICAL HELL HOLE, OUTCASTS OF THE EARTH SEEK REFUGE AND OBLIVION.... ONCE ON THE ISLAND, MEN SEEM TO EITHER SHRIVEL-UP GROW INSANE OR DIE FROM DREAD FLOSDURF FEVER !!



ONE MORNING, THOSE STILL ALIVE ON FLOSDURF ARE STARTLED BY THE ARRIVAL OF A NEWCOMER — ONE, WARD B. ATE



WELL, WHAT DROVE YOU OUT HERE ? NOW DON'T GIVE US THE OL'... WE WUZ FRAMED " WHEEZE !



IT MUSTA BEEN SUMPIN' DAT DROVE YOU TO DIS PLACE..... SPILL IT CHUM OH, - SOB - LET ME BE !! I WANT TO FORGET - YES FORGET, DO YOU HEAR ?!








I OWE IT ALL TO A CHARACTER I NEVER MET ... NAMED JOE DOPE



IT STARTED WHILE IWUZ AN EDITOR IN A SUPPLY DEPOT....IT WAS A CRUCIAL YEAR....THE FIELD TROOPS WUZ MAKIN' A BIG PUSH AND THEY WERE SCREAMIN' FOR SPARE PARTS ON EVERY FRONT...



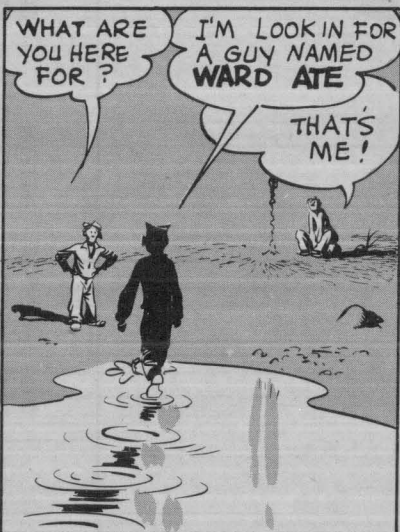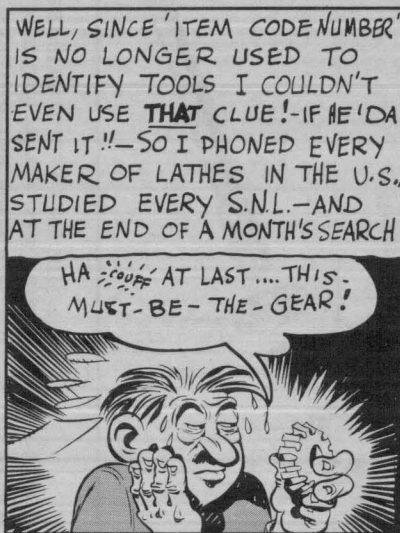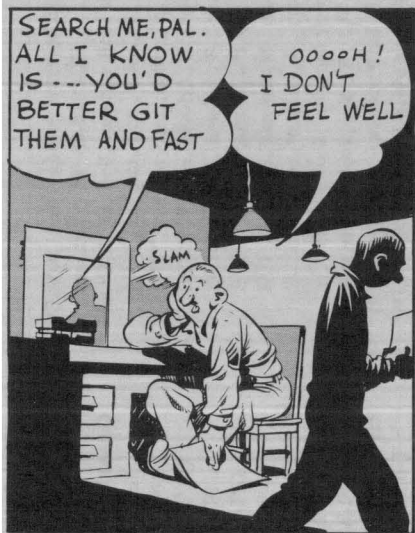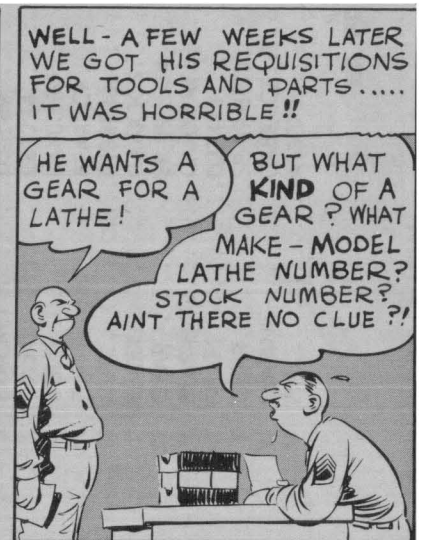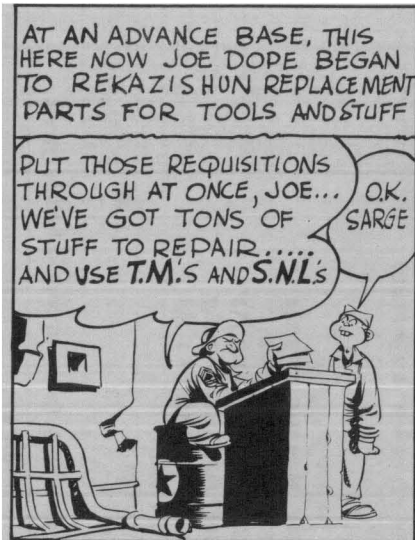

- A propos de l'indexation

Ce manuel utilise l'indexation OCR Adobe pour l'ensemble de son texte, c'est à dire que vous pouvez utiliser la fonction 'Rechercher' pour localiser un mot, une référence ou autres dans ce document.

Etant donné l'âge des manuels, de la qualité du papier ainsi que du système d'impression de l'époque, cette fonction n'est malheureusement pas fiable à 100% mais permet quand même de rendre de grands services. Ainsi, nous vous conseillons de réduire au maximum la chaine de caractère recherchée.

Si par exemple vous recherchez la référence F209-0122402 dans le manuel contenant le texte suivant:

	7586236	BEARING, straight, self-lubricating bz, 0.3762 ID x 0.5017 OD x $1\frac{1}{4}$ long, chamfered ends (for gear, assy, 7641443; gear, assy, 7641444) (M5A3)	ea	2	111
F209-0122200	B178867	BLADE, rate motor governor (for governor, assy, C78433; governor, assy, 7674434).	ea	4	95
F209-0122402	A182555	BLOCK, br, $\frac{5}{16}$ ID x 1 wide x $1\frac{1}{8}$ long x $\frac{1}{2}$ thk, 2 holes	ea	1	247

Utilisez simplement "122402" ou "22402" et votre recherche en sera d'autant plus pertinente.

- About indexing

This manual uses the Adobe OCR indexing for all of his text, that is to say that you can use the 'Find' function to locate a word, or other reference in this document.

Since the age of textbooks, paper quality and printing system at the time, this feature is unfortunately not 100% reliable but still allows to be of great service. Thus, you should minimize the search string.

For example, if you are looking for the reference F209-0122402 in the manual containing the following:

	7586236	BEARING, straight, self-lubricating bz, 0.3762 ID x 0.5017 OD x $1\frac{1}{4}$ long, chamfered ends (for gear, assy, 7641443; gear, assy, 7641444) (M5A3)	ea	2	111
F209-0122200	B178867	BLADE, rate motor governor (for governor, assy, C78433; governor, assy, 7674434).	ea	4	95
F209-0122402	A182555	BLOCK, br, $\frac{5}{16}$ ID x 1 wide x $1\frac{1}{8}$ long x $\frac{1}{2}$ thk, 2 holes	ea	1	247

Just use "122402" or "22402" and your search will be more relevant.

- INFORMATIONS IMPORTANTES -

Cette documentation est libre de droits car elle a été 'déclassifiée' par l'armée Américaine ainsi que par l'armée Française. Par contre le fastidieux travail de numérisation, de traitement et d'assemblage appartient à TM-WW2, vous ne pouvez donc pas diffuser, sans notre autorisation écrite, cette documentation même à titre gracieux. Veuillez nous contacter pour toutes informations à ce sujet.

Ce document a été numérisé à partir d'un manuel original nous appartenant.

Ce manuel ne peut **UNIQUEMENT** être distribué que sur la boutique Internet WWW.TM-WW2.COM ou sur le site de vente aux enchères EBAY® avec comme vendeur "TM-WW2". Toutes autres sources de distribution sont obligatoirement illégales et relèvent du piratage.

La recherche de documentations, la numérisation, le traitement des images, le montage et la création des index demande un travail colossal, merci de ne pas copier ou de diffuser ce manuel.

Pour toutes questions techniques vous pouvez envoyer un mail à support@tm-ww2.com

L'équipe de TM-WW2



- IMPORTANT INFORMATIONS -

This documentation is free of rights because it was 'declassified' by the American army as well as by the French army. On the other hand the boring work of digitalization, treatment and assembly belongs to TM-WW2, you cannot thus diffuse, without our authorization, this document even for free. Please contact us for any information on this subject.

This document was digitized from an original manual belonging to us.

This manual can be distributed **ONLY** from the Internet shop WWW.TM-WW2.COM or on the web site of auction EBAY® with as salesman "TM-WW2". Quite other sources of sale are necessarily illegal and recover from piracy.

The research for documentations, the digitalization, the treatment of the images, the editing and the creation of index ask for a colossal work, thank you thus not to copy or to diffuse this ebook.

For any technical questions, you can send an e-mail at support@tm-ww2.com

TMWW2 team